VYATTA, INC.

Vyatta System

Firewall

REFERENCE GUIDE

IPv4 Firewall IPv6 Firewall Zone-Based Firewall



Vyatta
Suite 200
1301 Shoreway Road
Belmont, CA 94002
vyatta.com
650 413 7200
1 888 VYATTA 1 (US and Canada)

COPYRIGHT

Copyright © 2005–2012 Vyatta, Inc. All rights reserved.

Vyatta reserves the right to make changes to software, hardware, and documentation without notice. For the most recent version of documentation, visit the Vyatta web site at vyatta.com.

PROPRIETARY NOTICES

Vyatta is a registered trademark of Vyatta, Inc.

VMware, VMware ESX, and VMware server are trademarks of VMware, Inc.

XenServer, and XenCenter are trademarks of Citrix Systems, Inc.

All other trademarks are the property of their respective owners.

RELEASE DATE: March 2012 DOCUMENT REVISION. R6.4 v01

RELEASED WITH: R6.4.0 PART NO. A0-0231-10-0012

Contents

Quick List of Commands	⁄ii
List of Examples	X
Preface	Ιij
Intended Audience x	iii
Organization of This Guide	iii
Document Conventions x	iν
	ĸ٧
Chapter 1 Firewall Overview	1
Vyatta System Firewall Functionality	2
Defining Firewall Instances	2
Firewall Rules	3
Implicit Drop	3
Exclusion Rules	3
Stateful Firewall and Connection Tracking	3
Applying Firewall Instances to Interfaces	4
Interaction Between Firewall, NAT, and Routing	4
Zone-Based Firewall	7
IPv6 Firewall	9
Chapter 2 Configuration Examples	.0
Packet-Filtering	1
Filtering on Source IP	13
Filtering on Source and Destination IP	13
Filtering on Source IP and Destination Protocol	L4
Defining a Network-to-Network Filter	15
Filtering on Source MAC Address	15
Excluding an Address	16
Activating during Specific Time Periods	18
Limiting Traffic Rates	
Matching TCP Flags	21
Matching ICMP Type Names	22
Matching Groups	23
Matching Recently-Seen Sources	<u>2</u> 4
Stateful Behavior	25

Configuring Stateful Behavior Per Rule Set	26
Configuring Global State Policies	27
Zone-Based Firewall	28
Filtering Traffic Between the Transit Zones	29
Filtering Traffic To and From the Local Zone	36
Considerations for Remote Access VPN	41
Using Per-Interface Rule Sets with Zone-Based Firewall	43
Using Firewall with VRRP Interfaces	47
Applying a Rule Set to a VRRP Interface	47
Using VRRP with a Zone-Based Firewall	49
Viewing Firewall Information	50
Showing Firewall Instance Information	51
Showing Firewall Configuration on Interfaces	51
Showing Firewall Configuration	52
Chapter 3 Global Firewall Commands	54
Global Firewall Commands	55
clear firewall	56
firewall	57
firewall state-policy	58
show firewall	61
show firewall group	64
Chapter 4 IPv4 Firewall Commands	66
IPv4 Firewall Commands	
firewall all-ping <state></state>	
firewall broadcast-ping <state></state>	
firewall group	
firewall group address-group <group-name></group-name>	
firewall group network-group <group-name></group-name>	
firewall group port-group <group-name></group-name>	
firewall ip-src-route <state></state>	
firewall log-martians <state></state>	
firewall name <name></name>	
firewall name <name> default-action <action></action></name>	
firewall name <name> description <desc></desc></name>	
firewall name <name> enable-default-log</name>	
firewall name <name> rule <rule-num></rule-num></name>	
firewall name <name> rule <rule-num> action <action></action></rule-num></name>	
firewall name <name> rule <rule-num> description <desc></desc></rule-num></name>	
firewall name <name> rule <rule-num> destination</rule-num></name>	

	firewall name < name > rule < rule - num > destination group	. 99
	firewall name <name> rule <rule-num> disable</rule-num></name>	101
	firewall name <name> rule <rule-num> fragment</rule-num></name>	103
	firewall name <name> rule <rule-num> icmp</rule-num></name>	105
	firewall name <name> rule <rule-num> ipsec</rule-num></name>	107
	firewall name <name> rule <rule-num> limit</rule-num></name>	109
	firewall name <name> rule <rule-num> log <state></state></rule-num></name>	112
	firewall name <name> rule <rule-num> p2p <app_name></app_name></rule-num></name>	114
	firewall name <name> rule <rule-num> protocol <protocol></protocol></rule-num></name>	116
	firewall name <name> rule <rule-num> recent</rule-num></name>	118
	firewall name <name> rule <rule-num> source</rule-num></name>	120
	firewall name <name> rule <rule-num> source group</rule-num></name>	123
	firewall name <name> rule <rule-num> state</rule-num></name>	125
	firewall name <name> rule <rule-num> tcp flags</rule-num></name>	127
	firewall name <name> rule <rule-num> time</rule-num></name>	129
	firewall receive-redirects <state></state>	132
	firewall send-redirects <state></state>	133
	firewall source-validation <state></state>	135
	firewall syn-cookies <state></state>	137
	interfaces <interface> firewall <direction> name <fw-name></fw-name></direction></interface>	139
	pter 5 IPv6 Firewall Commands	
	Firewall Commands	145
	Firewall Commands	145 147
	Firewall Commands firewall ipv6-name <name> firewall ipv6-name <name> default-action <action></action></name></name>	145 147 149
	Firewall Commands	145 147 149
	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc> firewall ipv6-name <name> enable-default-log</name></desc></name></action></name></name>	145 147 149 151 152
	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc></desc></name></action></name></name>	145 147 149 151 152
IPv6	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc> firewall ipv6-name <name> enable-default-log firewall ipv6-name <name> rule <rule-num> firewall ipv6-name <name> rule <rule-num> action <action>.</action></rule-num></name></rule-num></name></name></desc></name></action></name></name>	145 147 149 151 152 153 155
IPv6	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc> firewall ipv6-name <name> enable-default-log firewall ipv6-name <name> rule <rule-num> firewall ipv6-name <name> rule <rule-num> action <action> firewall ipv6-name <name> rule <rule-num> description <desc></desc></rule-num></name></action></rule-num></name></rule-num></name></name></desc></name></action></name></name>	145 147 149 151 152 153 155 157
IPv6	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc> firewall ipv6-name <name> enable-default-log firewall ipv6-name <name> rule <rule-num> firewall ipv6-name <name> rule <rule-num> action <action>.</action></rule-num></name></rule-num></name></name></desc></name></action></name></name>	145 147 149 151 152 153 155 157
IPv6	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc> firewall ipv6-name <name> enable-default-log firewall ipv6-name <name> rule <rule-num> firewall ipv6-name <name> rule <rule-num> action <action> firewall ipv6-name <name> rule <rule-num> description <desc></desc></rule-num></name></action></rule-num></name></rule-num></name></name></desc></name></action></name></name>	145 147 149 151 152 153 155 157
IPv6	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc> firewall ipv6-name <name> enable-default-log firewall ipv6-name <name> rule <rule-num> firewall ipv6-name <name> rule <rule-num> action <action> firewall ipv6-name <name> rule <rule-num> description <desc> firewall ipv6-name <name> rule <rule-num> description <desc> firewall ipv6-name <name> rule <rule-num> destination</rule-num></name></desc></rule-num></name></desc></rule-num></name></action></rule-num></name></rule-num></name></name></desc></name></action></name></name>	145 147 149 151 152 153 155 157 159 161
IPv6	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc> firewall ipv6-name <name> enable-default-log firewall ipv6-name <name> rule <rule-num> firewall ipv6-name <name> rule <rule-num> action <action> firewall ipv6-name <name> rule <rule-num> description <desc> firewall ipv6-name <name> rule <rule-num> description <desc> firewall ipv6-name <name> rule <rule-num> destination firewall ipv6-name <name> rule <rule-num> disable</rule-num></name></rule-num></name></desc></rule-num></name></desc></rule-num></name></action></rule-num></name></rule-num></name></name></desc></name></action></name></name>	145 147 149 151 152 153 155 157 159 161 162
IPv6	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc> firewall ipv6-name <name> enable-default-log firewall ipv6-name <name> rule <rule-num> firewall ipv6-name <name> rule <rule-num> action <action> firewall ipv6-name <name> rule <rule-num> description <desc> firewall ipv6-name <name> rule <rule-num> description <desc> firewall ipv6-name <name> rule <rule-num> destination firewall ipv6-name <name> rule <rule-num> disable firewall ipv6-name <name> rule <rule-num> disable firewall ipv6-name <name> rule <rule-num> icmpv6 type</rule-num></name></rule-num></name></rule-num></name></rule-num></name></desc></rule-num></name></desc></rule-num></name></action></rule-num></name></rule-num></name></name></desc></name></action></name></name>	145 147 149 151 152 153 155 157 159 161 162 164
IPv6	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc> firewall ipv6-name <name> enable-default-log firewall ipv6-name <name> rule <rule-num> firewall ipv6-name <name> rule <rule-num> action <action> firewall ipv6-name <name> rule <rule-num> description <desc> firewall ipv6-name <name> rule <rule-num> destination firewall ipv6-name <name> rule <rule-num> destination firewall ipv6-name <name> rule <rule-num> disable firewall ipv6-name <name> rule <rule-num> icmpv6 type firewall ipv6-name <name> rule <rule-num> icmpv6 type</rule-num></name></rule-num></name></rule-num></name></rule-num></name></rule-num></name></desc></rule-num></name></action></rule-num></name></rule-num></name></name></desc></name></action></name></name>	145 147 149 151 152 153 155 157 159 161 162 164
IPvé	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc> firewall ipv6-name <name> enable-default-log firewall ipv6-name <name> rule <rule-num> firewall ipv6-name <name> rule <rule-num> action <action> firewall ipv6-name <name> rule <rule-num> description <desc> firewall ipv6-name <name> rule <rule-num> destination firewall ipv6-name <name> rule <rule-num> disable firewall ipv6-name <name> rule <rule-num> disable firewall ipv6-name <name> rule <rule-num> icmpv6 type firewall ipv6-name <name> rule <rule-num> ipsec firewall ipv6-name <name> rule <rule-num> ipsec firewall ipv6-name <name> rule <rule-num> ipsec</rule-num></name></rule-num></name></rule-num></name></rule-num></name></rule-num></name></rule-num></name></rule-num></name></desc></rule-num></name></action></rule-num></name></rule-num></name></name></desc></name></action></name></name>	145 147 149 151 152 153 155 157 161 162 164 166 169
IPvé	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc> firewall ipv6-name <name> enable-default-log firewall ipv6-name <name> rule <rule-num> firewall ipv6-name <name> rule <rule-num> action <action> firewall ipv6-name <name> rule <rule-num> description <desc> firewall ipv6-name <name> rule <rule-num> description <desc> firewall ipv6-name <name> rule <rule-num> destination firewall ipv6-name <name> rule <rule-num> disable firewall ipv6-name <name> rule <rule-num> icmpv6 type firewall ipv6-name <name> rule <rule-num> icmpv6 type firewall ipv6-name <name> rule <rule-num> ipsec firewall ipv6-name <name> rule <rule-num> limit firewall ipv6-name <name> rule <rule-num> limit firewall ipv6-name <name> rule <rule-num> log <state></state></rule-num></name></rule-num></name></rule-num></name></rule-num></name></rule-num></name></rule-num></name></rule-num></name></rule-num></name></desc></rule-num></name></desc></rule-num></name></action></rule-num></name></rule-num></name></name></desc></name></action></name></name>	145 147 149 151 152 153 155 157 159 161 162 164 166 169
IIPv6	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc> firewall ipv6-name <name> enable-default-log firewall ipv6-name <name> rule <rule-num> firewall ipv6-name <name> rule <rule-num> action <action> firewall ipv6-name <name> rule <rule-num> description <desc> firewall ipv6-name <name> rule <rule-num> description <desc> firewall ipv6-name <name> rule <rule-num> destination firewall ipv6-name <name> rule <rule-num> disable. firewall ipv6-name <name> rule <rule-num> icmpv6 type firewall ipv6-name <name> rule <rule-num> ipsec firewall ipv6-name <name> rule <rule-num> limit firewall ipv6-name <name> rule <rule-num> limit firewall ipv6-name <name> rule <rule-num> log <state> firewall ipv6-name <name> rule <rule-num> p2p <app_name></app_name></rule-num></name></state></rule-num></name></rule-num></name></rule-num></name></rule-num></name></rule-num></name></rule-num></name></rule-num></name></desc></rule-num></name></desc></rule-num></name></action></rule-num></name></rule-num></name></name></desc></name></action></name></name>	145 147 149 151 152 153 155 157 161 162 164 166 169 171
IIPv6	Firewall Commands. firewall ipv6-name <name> firewall ipv6-name <name> default-action <action> firewall ipv6-name <name> description <desc> firewall ipv6-name <name> enable-default-log firewall ipv6-name <name> rule <rule-num> firewall ipv6-name <name> rule <rule-num> action <action> firewall ipv6-name <name> rule <rule-num> description <desc> firewall ipv6-name <name> rule <rule-num> destination firewall ipv6-name <name> rule <rule-num> disable firewall ipv6-name <name> rule <rule-num> icmpv6 type firewall ipv6-name <name> rule <rule-num> ipsec firewall ipv6-name <name> rule <rule-num> limit firewall ipv6-name <name> rule <rule-num> log <state> firewall ipv6-name <name> rule <rule-num> log <state> firewall ipv6-name <name> rule <rule-num> p2p <app_name> firewall ipv6-name <name> rule <rule-num> p2p <app_name> firewall ipv6-name <name> rule <rule-num> p2p <app_name> firewall ipv6-name <name> rule <rule-num> p2p <app_name></app_name></rule-num></name></app_name></rule-num></name></app_name></rule-num></name></app_name></rule-num></name></state></rule-num></name></state></rule-num></name></rule-num></name></rule-num></name></rule-num></name></rule-num></name></rule-num></name></desc></rule-num></name></action></rule-num></name></rule-num></name></name></desc></name></action></name></name>	145 147 149 151 152 153 155 157 161 162 164 166 169 171 173

firewall ipv6-name <name> rule <rule-num> tcp flags</rule-num></name>	.82
firewall ipv6-name <name> rule <rule-num> time</rule-num></name>	.84
firewall ipv6-receive-redirects <state></state>	.87
firewall ipv6-src-route <state></state>	.88
interfaces <interface> firewall <direction> ipv6-name <fw-name></fw-name></direction></interface>	.90
Chapter 6 Zone-Based Firewall Commands	95
Zone-Based Firewall Commands	.96
zone-policy zone <to-zone></to-zone>	.97
zone-policy zone <to-zone> default-action <action></action></to-zone>	.99
zone-policy zone <to-zone> description <desc></desc></to-zone>	01
zone-policy zone <to-zone> from <from-zone></from-zone></to-zone>	:02
zone-policy zone <to-zone> from <from-zone> firewall ipv6-name <name></name></from-zone></to-zone>	03
zone-policy zone <to-zone> from <from-zone> firewall name <name></name></from-zone></to-zone>	.05
zone-policy zone <to-zone> interface <if-name></if-name></to-zone>	.07
zone-policy zone <to-zone> local-zone</to-zone>	.08
Appendix A ICMP Types	10
Appendix B ICMPv6 Types	15
Glossary of Acronyms	21

Quick List of Commands

Use this list to help you quickly locate commands.

clear firewall56
firewall all-ping <state></state>
firewall broadcast-ping <state></state>
firewall group address-group <group-name>75</group-name>
firewall group network-group <group-name></group-name>
firewall group port-group <group-name>79</group-name>
firewall group74
firewall ip-src-route <state></state>
firewall ipv6-name <name> default-action <action></action></name>
firewall ipv6-name <name> description <desc></desc></name>
firewall ipv6-name <name> enable-default-log</name>
firewall ipv6-name <name> rule <rule-num> action <action></action></rule-num></name>
firewall ipv6-name <name> rule <rule-num> description <desc></desc></rule-num></name>
firewall ipv6-name <name> rule <rule-num> destination</rule-num></name>
firewall ipv6-name <name> rule <rule-num> disable</rule-num></name>
firewall ipv6-name <name> rule <rule-num> icmpv6 type</rule-num></name>
firewall ipv6-name <name> rule <rule-num> ipsec</rule-num></name>
firewall ipv6-name <name> rule <rule-num> limit</rule-num></name>
firewall ipv6-name <name> rule <rule-num> log <state></state></rule-num></name>
firewall ipv6-name <name> rule <rule-num> p2p <app_name></app_name></rule-num></name>
firewall ipv6-name <name> rule <rule-num> protocol <protocol></protocol></rule-num></name>
firewall ipv6-name <name> rule <rule-num> recent</rule-num></name>
firewall ipv6-name <name> rule <rule-num> source</rule-num></name>
firewall ipv6-name <name> rule <rule-num> state</rule-num></name>
firewall ipv6-name <name> rule <rule-num> tcp flags</rule-num></name>
firewall ipv6-name <name> rule <rule-num> time</rule-num></name>
firewall ipv6-name <name> rule <rule-num></rule-num></name>
firewall ipv6-name <name></name>
firewall ipv6-receive-redirects <state></state>
firewall ipv6-src-route <state></state>
firewall log-martians <state></state>
firewall name <name> default-action <action></action></name>

firewall name < name > description < desc>	. 89
firewall name <name> enable-default-log</name>	. 90
firewall name <name> rule <rule-num> action <action></action></rule-num></name>	. 93
firewall name <name> rule <rule-num> description <desc></desc></rule-num></name>	95
firewall name <name> rule <rule-num> destination group</rule-num></name>	. 99
firewall name <name> rule <rule-num> destination</rule-num></name>	. 97
firewall name <name> rule <rule-num> disable</rule-num></name>	101
firewall name <name> rule <rule-num> fragment</rule-num></name>	103
firewall name <name> rule <rule-num> icmp</rule-num></name>	105
firewall name <name> rule <rule-num> ipsec</rule-num></name>	107
firewall name <name> rule <rule-num> limit</rule-num></name>	109
firewall name <name> rule <rule-num> log <state></state></rule-num></name>	112
firewall name <name> rule <rule-num> p2p <app_name></app_name></rule-num></name>	114
firewall name <name> rule <rule-num> protocol <protocol></protocol></rule-num></name>	116
firewall name <name> rule <rule-num> recent</rule-num></name>	118
firewall name <name> rule <rule-num> source group</rule-num></name>	123
firewall name <name> rule <rule-num> source</rule-num></name>	120
firewall name <name> rule <rule-num> state</rule-num></name>	125
firewall name <name> rule <rule-num> tcp flags</rule-num></name>	127
firewall name <name> rule <rule-num> time</rule-num></name>	129
firewall name <name> rule <rule-num></rule-num></name>	. 91
firewall name <name></name>	. 85
firewall receive-redirects <state></state>	132
firewall send-redirects <state></state>	133
firewall source-validation <state></state>	135
firewall state-policy	. 58
firewall syn-cookies <state></state>	137
firewall	. 57
interfaces <interface> firewall <direction> ipv6-name <fw-name></fw-name></direction></interface>	190
interfaces <interface> firewall <direction> name <fw-name></fw-name></direction></interface>	139
show firewall group	64
show firewall	61
zone-policy zone <to-zone> default-action <action></action></to-zone>	199
zone-policy zone <to-zone> description <desc></desc></to-zone>	201
zone-policy zone <to-zone> from <from-zone> firewall ipv6-name <name></name></from-zone></to-zone>	203
zone-policy zone <to-zone> from <from-zone> firewall name <name></name></from-zone></to-zone>	205

zone-policy zone <to-zone> from <from-zone></from-zone></to-zone>	202
zone-policy zone <to-zone> interface <if-name></if-name></to-zone>	207
zone-policy zone <to-zone> local-zone</to-zone>	208
zone-policy zone <to-zone></to-zone>	197

List of Examples

Use this list to help you locate examples you'd like to look at or try.

Example 2-1 Filtering on source IP	13
Example 2-2 Filtering on source and destination IP	13
Example 2-3 Filtering on source IP and destination protocol	14
Example 2-4 Defining a network-to-network filter	15
Example 2-5 Filtering on source MAC address	16
Example 2-6 Excluding an address	17
Example 2-7 Activate during specified time periods	18
Example 2-8 Limit the rate of specific incoming packets	20
Example 2-9 Accept packets with specific TCP flags set	21
Example 2-10 Accept ICMP packets with specific type names	22
Example 2-11 Reject traffic based on groups of addresses, networks, and ports	23
Example 2-12 Drop connection attempts from the same source over a specified threshold in a given period	24
Example 2-13 Creating a per–rule set state rule	26
Example 2-14 Setting a global state policy	28
Example 2-15 Creating the zone policies	29
Example 2-16 Creating the rule set for traffic to the Public Zone	31
Example 2-17 Creating the rule set for traffic to the DMZ zone	31
Example 2-18 Creating the rule set for traffic to the Private zone	33
Example 2-19 Applying a rule sets to the DMZ zone	34
Example 2-20 Applying a rule set to the Private zone	35
Example 2-21 Applying a rule set to the Public zone	36
Example 2-22 Restricting Vyatta system access to hosts located in the Private Zone	37
Example 2-23 Filtering traffic from the Public Zone to the Vyatta system	38
Example 2-24 Allow traffic from the Vyatta system to the Private Zone	40
Example 2-25 Zone policy with VPN zone added	41
Example 2-26 Zone policy for topology with three zones (DMZ, Public, and local-zone).	45
Example 2-27 Reject traffic from zones and allow only ICMP between LANs	46

Example 2-28 Applying a firewall rule set to a VRRP interface	48
Example 2-29 Adding VRRP interfaces to the Private zone	50
Example 2-30 Showing firewall instances	. 51
Example 2-31 Showing firewall configuration on an interface	. 52
Example 2-32 Displaying the "firewall" configuration node	. 52
Example 3-1 Viewing firewall configuration information	. 61
Example 3-2 Displaying detailed firewall rule information	. 62
Example 3-3 "show firewall statistics": Displaying rule statistics	. 63
Example 3-4 "show firewall group": Displaying information on all defined firewall groups	. 64

Preface

This document describes the various deployment, installation, and upgrade options for Vyatta software.

This preface provides information about using this guide. The following topics are presented:

- Intended Audience
- Organization of This Guide
- Document Conventions
- Vyatta Publications

Intended Audience

This guide is intended for experienced system and network administrators. Depending on the functionality to be used, readers should have specific knowledge in the following areas:

- Networking and data communications
- TCP/IP protocols
- General router configuration
- Routing protocols
- Network administration
- Network security
- IP services

Organization of This Guide

This guide has the following aid to help you find the information you are looking for:

Quick List of Commands

Use this list to help you quickly locate commands.

List of Examples

Use this list to help you locate examples you'd like to try or look at.

This guide has the following chapters:

Chapter	Description	Page
Chapter 1: Firewall Overview	This chapter provides an overview of firewall protection features on the Vyatta system.	1
Chapter 2: Configuration Examples	This chapter provides configuration examples and examples of how to display firewall information.	10
Chapter 3: Global Firewall Commands	This chapter describes Vyatta system firewall commands. These commands apply to both IPv4 and IPv6 firewalls.	54
Chapter 4: IPv4 Firewall Commands	This chapter describes commands for defining IPv4 firewall packet filters on the Vyatta system.	66
Chapter 5: IPv6 Firewall Commands	This chapter describes commands for defining IPv6 firewall packet filters on the Vyatta system.	144

Chapter 6: Zone-Based Firewall Commands	This chapter describes commands for implementing zone-based firewall on the Vyatta system.	195
Appendix A: ICMP Types	This appendix lists the ICMP types defined by the Internet Assigned Numbers Authority (IANA).	210
Appendix B: ICMPv6 Types	This appendix lists the ICMPv6 types defined by the Internet Assigned Numbers Authority (IANA).	215
Glossary of Acronyms		221

Document Conventions

This guide uses the following advisory paragraphs, as follows.



WARNING Warnings alert you to situations that may pose a threat to personal safety.



CAUTION Cautions alert you to situations that might cause harm to your system or damage to equipment, or that may affect service.

NOTE Notes provide information you might need to avoid problems or configuration errors.

This document uses the following typographic conventions.

Monospace	Examples, command-line output, and representations of configuration nodes.
bold Monospace	Your input: something you type at a command line.
bold	Commands, keywords, and file names, when mentioned inline.
	Objects in the user interface, such as tabs, buttons, screens, and panes.
italics	An argument or variable where you supply a value.
<key></key>	A key on your keyboard, such as <enter>. Combinations of keys are joined by plus signs ("+"), as in <ctrl>+c.</ctrl></enter>
[key1 key2]	Enumerated options for completing a syntax. An example is [enable disable].
num1–numN	A inclusive range of numbers. An example is 1–65535, which means 1 through 65535, inclusive.

arg1argN	A range of enumerated values. An example is eth0eth3, which means eth0, eth1, eth2, or eth3.
arg[arg] arg[,arg]	A value that can optionally represent a list of elements (a space-separated list and a comma-separated list, respectively).

Vyatta Publications

Full product documentation is provided in the Vyatta technical library. To see what documentation is available for your release, see the *Guide to Vyatta Documentation*. This guide is posted with every release of Vyatta software and provides a great starting point for finding the information you need.

Additional information is available on www.vyatta.com and www.vyatta.org.

Chapter 1: Firewall Overview

This chapter provides an overview of firewall protection features on the Vyatta system.

This section presents the following topics:

- Vyatta System Firewall Functionality
- Defining Firewall Instances
- Stateful Firewall and Connection Tracking
- Applying Firewall Instances to Interfaces
- Interaction Between Firewall, NAT, and Routing
- Zone-Based Firewall
- IPv6 Firewall

Vyatta System Firewall Functionality

Firewall functionality analyzes and filters IP packets between network interfaces. The most common application of this is to protect traffic between an internal network and the Internet. It allows you to filter packets based on their characteristics and perform actions on packets that match the rule. Vyatta system firewall functionality provides the following:

- Packet filtering for traffic traversing the router, using the in and out keywords on an interface
- Packet filtering for traffic destined for the router itself, using the local keyword
- Definable criteria for packet-matching rules, including source IP address, destination IP address, source port, destination port, IP protocol, and ICMP type
- General detection on IP options such as source routing and broadcast packets
- Ability to set the firewall globally for stateful or stateless operation

The Vyatta firewall features both IPv4 and IPv6 stateful packet inspection to intercept and inspect network activity and allow or deny the attempt. Vyatta's advanced firewall capabilities include stateful failover, zone-based firewalling, time-based firewalling, and more.

Defining Firewall Instances

This section presents the following topics:

- Firewall Rules
- Implicit Drop
- **Exclusion Rules**

Firewalls filter packets on interfaces. There are two steps for using the firewall feature:

- You define a firewall instance and save it under a name. A firewall instance is also called a firewall rule set, where a rule set is just a series of firewall rules. You define the firewall instance and configure the rules in its rule set in the firewall configuration node.
- After defining the instance and specifying the rules in the rule set, you apply the instance to an interface or a zone. You do this by configuring the interface configuration node for the interface or zone.

Once the instance is applied to the interface or zone, the rules in the instance begin filtering packets on that location.

Firewall Rules

Firewall rules specify the match conditions for traffic and the action to be taken if the match conditions are satisfied. Traffic can be matched on a number of characteristics, including source IP address, destination IP address, source port, destination port, IP protocol, and ICMP type.

Rules are executed in sequence, according to the rule number. If the traffic matches the characteristics specified by the rule, the rule's action is executed; if not, the system "falls through" to the next rule.

The action can be one of the following:

- **Accept.** Traffic is allowed and forwarded.
- **Drop.** Traffic is silently discarded.
- Reject. Traffic is discarded with an ICMP "Port Unreachable" message.
- **Inspect.** Traffic is processed by the intrusion protection system (IPS).

Implicit Drop

All firewall rule sets on the Vyatta system have, by default, an implicit final action of drop all; that is, traffic not matching any rule in the rule set is silently discarded. This default action can be changed using the firewall name <name> default-action <action> command.

Exclusion Rules

Note that you should take care in using more than one "exclusion" rule (that is, a rule using the negation operation ("!") to exclude a rule from treatment). Rules are evaluated sequentially, and a sequence of exclusion rules could result in unexpected behavior.

Stateful Firewall and Connection Tracking

The Vyatta system CLI interacts with Netfilter's Connection Tracking System, which is a module providing connection tracking for various system functions, such as firewall, NAT, and WAN load balancing. On the firewall, connection tracking allows for stateful packet inspection.

Stateless firewalls filter packets in isolation, based on static source and destination information. In contrast, stateful firewalls track the state of network connections and traffic flows and allow or restrict traffic based on whether its connection state is known and authorized. For example, when an initiation flow is allowed in one

direction, the responder flow is automatically and implicitly allowed in the return direction. While typically slower under heavy load than stateless firewalls, stateful firewalls are better at blocking unauthorized communications.

By default, the Vyatta firewall is stateless. If you want the firewall to operate stateless in general, you can still configure state rules within a specific rule set. Alternatively, you can configure the firewall globally to operate statefully. In this case, you configure state policies for each of established, related, and invalid traffic, using the firewall state-policy command.

Global state policies configured apply to all IPv4 and IPv6 traffic destined for the router, originating from the router, or traversing the router. Also, once global state policies are configured, they override any state rules configured within the rule set.

Applying Firewall Instances to Interfaces

Once a firewall instance is defined it can be applied to an interface, where the instance acts as a packet filter. The firewall instance filters packets in one of the following ways, depending on what you specify when you apply the firewall instance:

- in. If you apply the instance as in, the firewall will filter packets entering the interface and traversing the Vyatta system. You can apply one in packet filter.
- out. If you apply the instance as out, the firewall will filter packets leaving the interface. These can be packets traversing the Vyatta system or packets originated on the system. You can apply one out packet filter.
- local. If you apply the instance as local, the firewall will filter packets destined for the Vyatta system. One firewall instance can be applied as a local packet filter.

A total of three firewall instances can be applied to an interface: one instance as an in filter, one instance as an out filter, and one instance as a local filter.

Interaction Between Firewall, NAT, and Routing

One of the most important things to understand when working with firewall is the processing order of the various services that might be configured within the Vyatta system. If processing order is not considered, the results achieved may not be as intended. Figure 1-1shows how traffic flows through the firewall, NAT, and routing services within the Vyatta system.


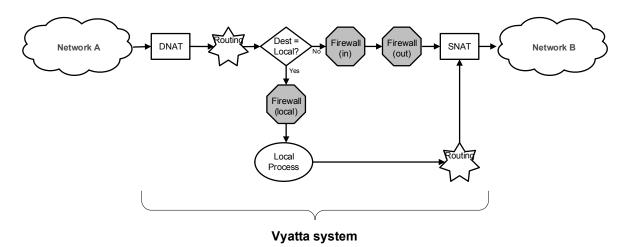


Figure 1-1 Traffic flow through firewall, NAT, and routing components

Scenario 1: Firewall instances applied to inbound traffic

The following diagram shows the traffic flow relationships between firewall, NAT, and routing, within the Vyatta system for traffic flowing through the system and firewall instances applied to in-bound traffic on an interface.

Figure 1-2 Inbound traffic flows through the Vyatta system

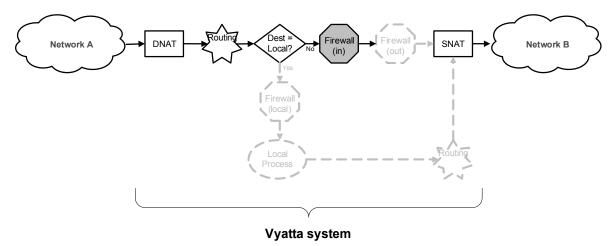

Notice that firewall instances are evaluated after DNAT and routing decisions, but prior to SNAT.

Scenario 2: Firewall instances applied to outbound traffic

The following diagram shows the traffic flow relationships between firewall, NAT, and routing, within the Vyatta system for traffic flowing through the system and firewall instances applied to out-bound traffic on an interface.

Network A Network B Vyatta system


Figure 1-3 Outbound traffic flows through the Vyatta system

Notice that firewall instances are evaluated after DNAT and routing decisions, but prior to SNAT.

Scenario 3: Firewall instances applied to locally bound traffic

The following diagram shows the traffic flow relationships between firewall, NAT, and routing, within the Vyatta system for traffic flowing to the Vyatta system itself (firewall instances applied to local traffic on an interface).

Figure 1-4 Traffic flows destined for the Vyatta system

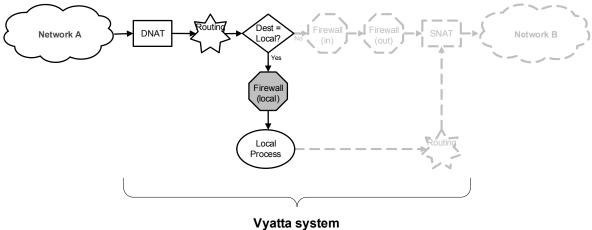


Notice that the firewall instance is evaluated after DNAT and routing. In this scenario, SNAT is not performed.

Scenario 4: Firewall instances applied to locally originated traffic

The following diagram shows the traffic flow relationships between firewall, NAT, and routing, within the Vyatta system for traffic flowing from the Vyatta system itself.

Figure 1-5 Traffic flows originating from the Vyatta system itself

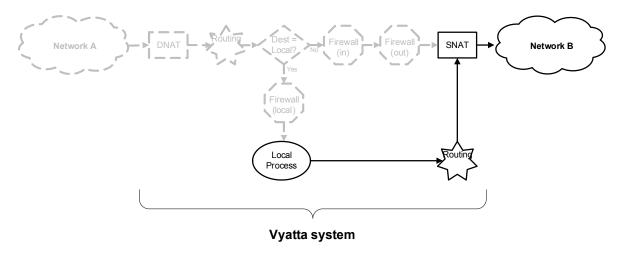

Notice that no firewall instances are evaluated in this case. In this scenario, DNAT is not performed.

Zone-Based Firewall

Ordinary firewall rule sets are applied on a per-interface basis to act as a packet filter for the interface. In zone-based firewall, interfaces are grouped into security "zones," where each interface in the zone has the same security level.

Packet-filtering policies are applied to traffic flowing between zones. Traffic flowing flowing between interfaces lying in the same zone is not filtered and flows freely, as the interfaces share the same security level.

Figure 1-6 shows an example of a zone-based firewall implementation. In this example:

- There are three transit zones (that is, points where traffic transits the router): the Private Zone, the DMZ Zone, and the Public Zone.
- The eth3 interface lies in the Public Zone; eth0 and eth1 lie in the Private Zone; and eth2 lies in the DMZ zone.
- The arrows from one zone to another represent traffic filtering policies applied to traffic flowing between zones.
- Traffic flowing between LAN 1 and LAN 2 remains within a single security zone. Thus, traffic from LAN1 to LAN2, and vice-versa, flows unfiltered.

LAN2 Internet DMZ Private Zone Public Zone DMZ Zone

Figure 1-6 Zone-based firewall overview

In addition to the three transit zones in Figure 1-6, there is a fourth zone: the "Local Zone." The Local Zone is the router itself. By default, all traffic coming into the router and originating from the router is allowed.

You can, however, configure traffic filtering policies that allow traffic to the Local Zone from specific zones, and likewise from the Local Zone to only specific zones. As soon as you apply a filtering policy explicitly allowing traffic destined to Local Zone from another zone, traffic from all other zones to the Local Zone is dropped unless explicitly allowed by a filtering policy. Similarly, as soon as you apply a filtering policy to allow traffic originating from the Local Zone to another zone, traffic to all other zones is dropped unless explicitly allowed by a filtering policy.

Note the following additional points about zone-based firewalls:

- An interface can be associated with only one zone.
- An interface belonging to a zone cannot have a per-interface firewall rule set applied and vice versa.
- Traffic between interfaces not belonging to any zone flows unfiltered and per-interface firewall rule sets can be applied to those interfaces.
- By default, all traffic to a zone is dropped unless explicitly allowed by a filtering policy for a from_zone.
- Filtering policies are unidirectional: they are defined as a "zone pair" defining the zone from which traffic is sourced (the from_zone) and the zone to which traffic is destined (the to zone). In Figure 1-6, these unidirectional policies can be seen as follows:
 - From Private to DMZ

- From Public to DMZ
- From Private to Public
- From DMZ to Public
- From Public to Private
- From DMZ to Private

IPv6 Firewall

The protection offered by a firewall is even more important to sites using IPv6 because IPv6 does not offer NAT functionality. Therefore, a firewall is the only way to protect an IPv6 network.

Note that IPv4 firewall rules and IPv6 firewall rules are completely independent. IPv4 packets are not inspected by rules in IPv6 rule sets, and IPv6 rules are not inspected by rules in IPv4 rule sets, and IPv6 packets are not inspected by rules in the other IP version's table; IPv6 packets are ONLY inspected by the rules in the IPv6 filter table, while IPv4 packets are ONLY inspected by the rules in the IPv4 filter table.

In general, IPv6 support for firewall parallels that for IPv4 firewall. Some IPv4-specific parameters do not apply to IPv6 firewalls, and vice versa, for example:

- The ICMP protocol has an IPv6-specific version: "ICMP for IPv6." The IPv6 firewall has the icmpv6 keyword available for the protocol filtering option, but the icmp keyword is not supported.
- The fragment parameter is not supported for IPv6 firewall, since fragmentation does not apply to IPv6.

Chapter 2: Configuration Examples

This chapter provides configuration examples and examples of how to display firewall information.

This chapter presents the following topics:

- Packet-Filtering
- Stateful Behavior
- Zone-Based Firewall
- Using Firewall with VRRP Interfaces
- Viewing Firewall Information


Packet-Filtering

This section presents the following topics:

- Filtering on Source IP
- Filtering on Source and Destination IP
- Filtering on Source IP and Destination Protocol
- Defining a Network-to-Network Filter
- Filtering on Source MAC Address
- **Excluding an Address**
- Activating during Specific Time Periods
- Limiting Traffic Rates
- Matching TCP Flags
- Matching ICMP Type Names
- Matching Groups
- Matching Recently-Seen Sources
- Stateful Behavior

This section describes a sample configuration for firewall. When you have finished, the firewall will be configured on router R1 as shown in Figure 2-1.

Figure 2-1 Firewall

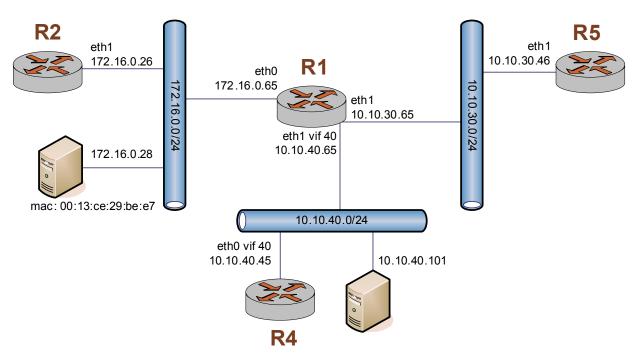

This section includes the following examples:

- Example 2-1 Filtering on source IP
- Example 2-2 Filtering on source and destination IP
- Example 2-3 Filtering on source IP and destination protocol
- Example 2-4 Defining a network-to-network filter
- Example 2-5 Filtering on source MAC address
- Example 2-6 Excluding an address
- Example 2-7 Activate during specified time periods
- Example 2-8 Limit the rate of specific incoming packets
- Example 2-9 Accept packets with specific TCP flags set.
- Example 2-10 Accept ICMP packets with specific type names.
- Example 2-11 Reject traffic based on groups of addresses, networks, and ports.
- Example 2-12 Drop connection attempts from the same source over a specified threshold in a given period.
- Example 2-13 Creating a per–rule set state rule

Filtering on Source IP

Example 2-1 defines a firewall instance containing one rule, which filters on source IP address only. This rule will deny packets coming from router R2. It then applies the firewall instance to packets inbound on interface eth0.

To create an instance that filters on source IP, perform the following steps in configuration mode:

Example 2-1 Filtering on source IP

Step	Command
Create the configuration node for FWTEST-1 and its rule Rule 1. This rule rejects traffic matching the specified criteria.	vyatta@R1# set firewall name FWTEST-1 rule 1 action reject
This rule applies to traffic that has 176.16.0.26 as the source.	vyatta@R1# set firewall name FWTEST-1 rule 1 source address 172.16.0.26
Apply FWTEST-1 to inbound packets on eth0.	vyatta@R1# set interfaces ethernet eth0 firewall in name FWTEST-1
Commit the configuration.	vyatta@R1# commit

Filtering on Source and Destination IP

Example 2-2 defines another firewall instance. It contains one rule, which filters on both source and destination IP address. This rule accepts packets leaving R5 through eth1 using 10.10.30.46, and destined for 10.10.40.101. It then applies the firewall instance to packets outbound from vif 1 on interface eth1.

To create an instance that filters on source and destination IP, perform the following steps in configuration mode:

Example 2-2 Filtering on source and destination IP

Step	Command
Create the configuration node for FWTEST-2 and its rule Rule 1. This rule accepts traffic matching the specified criteria.	vyatta@R1# set firewall name FWTEST-2 rule 1 action accept
This rule applies to traffic that has 10.10.30.46 as the source.	vyatta@R1# set firewall name FWTEST-2 rule 1 source address 10.10.30.46

Example 2-2 Filtering on source and destination IP

This rule applies to traffic that has 10.10.40.101 as the destination.	vyatta@R1# set firewall name FWTEST-2 rule 1 destination address 10.10.40.101
Apply FWTEST-2 to outbound packets on eth1 vif 40.	vyatta@R1# set interfaces ethernet eth1 vif 40 firewall out name FWTEST-2
Commit the configuration.	vyatta@R1# commit

Filtering on Source IP and Destination Protocol

Example 2-3 defines a firewall rule that filters on source IP address and destination protocol. This rule allows TCP packets originating from address 10.10.30.46 (that is, R5), and destined for the Telnet port of R1. The instance is applied to local packets (that is, packets destined for this router, R1) through eth1.

To create a instance that filters on source IP and destination protocol, perform the following steps in configuration mode:

Example 2-3 Filtering on source IP and destination protocol

Step	Command
Create the configuration node for FWTEST-3 and its rule Rule 1. This rule accepts traffic matching the specified criteria.	vyatta@R1# set firewall name FWTEST-3 rule 1 action accept
This rule applies to traffic that has 10.10.30.46 as the source.	vyatta@R1# set firewall name FWTEST-3 rule 1 source address 10.10.30.46
This rule applies to TCP traffic.	vyatta@R1# set firewall name FWTEST-3 rule 1 protocol tcp
This rule applies to traffic that is destined for the Telnet service.	vyatta@R1# set firewall name FWTEST-3 rule 1 destination port telnet
Apply FWTEST-3 to packets bound for this router arriving on eth1.	vyatta@R1# set interfaces ethernet eth1 firewall local name FWTEST-3
Commit the configuration.	vyatta@R1# commit

Defining a Network-to-Network Filter

Example 2-4 creates a network-to-network packet filter, allowing packets originating from 10.10.40.0/24 and destined for 172.16.0.0/24. It then applies the firewall instance to packets inbound through vif 40 on interface eth1.

To create a network-to-network filter, perform the following steps in configuration mode:

Example 2-4 Defining a network-to-network filter

Step	Command
Create the configuration node for FWTEST-4 and its rule Rule 1. This rule accepts traffic matching the specified criteria.	vyatta@R1# set firewall name FWTEST-4 rule 1 action accept
This rule applies to traffic coming from the network 10.10.40.0/24.	vyatta@R1# set firewall name FWTEST-4 rule 1 source address 10.10.40.0/24
This rule applies to traffic destined for the network 172.16.0.0/24.	vyatta@R1# set firewall name FWTEST-4 rule 1 destination address 172.16.0.0/24
Apply FWTEST-4 to packets bound for this router arriving through vif 40 on eth1.	vyatta@R1# set interfaces ethernet eth1 vif 40 firewall in name FWTEST-4
Commit the configuration.	vyatta@R1# commit

Filtering on Source MAC Address

Example 2-5 defines a firewall instance containing one rule, which filters on source MAC address only. This rule will allow packets coming from a specific computer, identified by its MAC address rather than its IP address. The instance is applied to packets inbound on interface eth0.

To create a instance that filters on source MAC address, perform the following steps in configuration mode:


Example 2-5 Filtering on source MAC address

Step	Command
Create the configuration node for FWTEST-5 and its rule Rule 1. This rule accepts traffic matching the specified criteria.	vyatta@R1# set firewall name FWTEST-5 rule 1 action accept
This rule applies to traffic that has 00:13:ce:29:be:e7 as the source MAC address.	<pre>vyatta@R1# set firewall name FWTEST-5 rule 1 source mac-address 00:13:ce:29:be:e7</pre>
Apply FWTEST-5 to inbound packets on eth0.	vyatta@R1# set interfaces ethernet eth0 firewall in name FWTEST-5
Commit the configuration.	vyatta@R1# commit

Excluding an Address

The firewall rule shown in Example 2-6 allows all traffic from the 172.16.1.0/24 network except to server 192.168.1.100.

Figure 2-2 Excluding an address

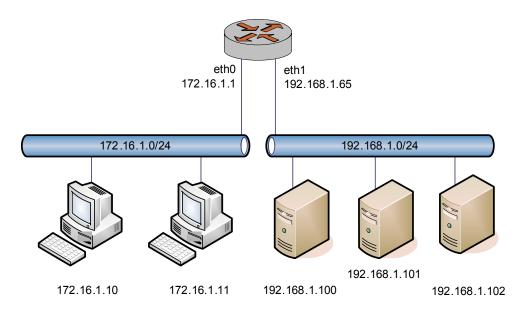

To create a instance that excludes an address, perform the following steps in configuration mode:

Example 2-6 Excluding an address

Step	Command
Create the configuration node for FWTEST-5 and its rule 10. Give a description for the rule.	vyatta@R1# set firewall name NEGATED-EXAMPLE rule 10 description "Allow all traffic from LAN except to server 192.168.1.100"
All traffic that matches the rule will be accepted.	vyatta@R1# set firewall name NEGATED-EXAMPLE rule 10 action accept
Any traffic from network 172.16.1.0/24 matches the rule.	vyatta@R1# set firewall name NEGATED-EXAMPLE rule 10 source address 172.16.1.0/24
Traffic destined anywhere EXCEPT 192.168.1.100 matches the rule. That traffic does not match the rule, and invokes the implicit "reject all" rule.	vyatta@R1# set firewall name NEGATED-EXAMPLE rule 10 destination address !192.168.1.100
Apply the instance NEGATED-EXAMPLE to inbound packets on eth0.	vyatta@R1# set interfaces ethernet eth0 firewall in name NEGATED-EXAMPLE
Commit the configuration.	vyatta@R1# commit
Show the configuration.	<pre>vyatta@R1# show firewall name NEGATED-EXAMPLE { rule 10 { action accept description "Allow all traffic from LAN except to server 192.168.1.100" destination { address !192.168.1.100 } source { address 172.16.1.0/24 } } } vyatta@R1# show interfaces ethernet eth0 address 172.16.1.1/24 firewall { in { name NEGATED-EXAMPLE } } hw-id 00:0c:29:99:d7:74</pre>

Activating during Specific Time Periods

The Vyatta system supportes time-based firewall rules, which limit the operation of a rule to specific periods of time.

The firewall rule shown in Example 2-7 limits the rule configured in Example 2-6 to being active only on weekdays from 9:00 AM until 5:00 PM. To add this limitation to the rule, perform the following steps in configuration mode:

Example 2-7 Activate during specified time periods

Step	Command
Set a start time of 9:00am.	<pre>vyatta@R1# set firewall name NEGATED-EXAMPLE rule 10 time starttime 09:00:00</pre>
Set a stop time of 5:00pm.	<pre>vyatta@R1# set firewall name NEGATED-EXAMPLE rule 10 time stoptime 17:00:00</pre>
Set the days of the week.	<pre>vyatta@R1# set firewall name NEGATED-EXAMPLE rule 10 time weekdays Mon,Tue,Wed,Thu,Fri</pre>
Commit the configuration.	vyatta@R1# commit

Example 2-7 Activate during specified time periods

Show the configuration.

```
vyatta@R1# show firewall
name NEGATED-EXAMPLE {
   rule 10 {
       action accept
       description "Allow all traffic from LAN except to
server 192.168.1.100"
       destination {
          address !192.168.1.100
       }
       source {
          address 172.16.1.0/24
       time {
          starttime 09:00:00
          stoptime 17:00:00
          weekdays Mon, Tue, Wed, Thu, Fri
       }
   }
}
vyatta@R1# show interfaces ethernet eth0
   address 172.16.1.1/24
   firewall {
       in {
          name NEGATED-EXAMPLE
       }
   }
   hw-id 00:0c:29:99:d7:74
```

Limiting Traffic Rates

The Token Bucket Filter (TBF) queuing mechanism can be activated by a firewall rule to limit the rate of incoming packets. Packets are limited to an administatively set rate, but may have short bursts in excess of this rate. Two rules are required to achieve this; one to accept traffic within the limit, and one to drop traffic in excess of the limit.

For example, to create a rule that accepts a limited rate of two ICMP Echo Request packets (pings) per second, but provides for short bursts without dropping packets, and a rule that will drop packets that do not get matched by the first rule, perform the following steps in configuration mode:

Example 2-8 Limit the rate of specific incoming packets

Step	Command
Set the protocol to match to ICMP.	vyatta@R1# set firewall name RATE-LIMIT rule 20 protocol icmp
Set ICMP type of 8 (echo-request).	vyatta@R1# set firewall name RATE-LIMIT rule 20 icmp type 8
Set ICMP code of 0 for type 8	vyatta@R1# set firewall name RATE-LIMIT rule 20 icmp code 0
Set the desired rate of 2 packets per second.	vyatta@R1# set firewall name RATE-LIMIT rule 20 limit rate 2/second
Set the burst size of 5 packets.	vyatta@R1# set firewall name RATE-LIMIT rule 20 limit burst 5
Set the action to accept.	vyatta@R1# set firewall name RATE-LIMIT rule 20 action accept
Set the description.	vyatta@R1# set firewall name RATE-LIMIT rule 20 description "Rate-limit incoming icmp echo-request packets to 2/second allowing short bursts of 5 packets"
Set the protocol to match to ICMP.	vyatta@R1# set firewall name RATE-LIMIT rule 30 protocol icmp
Set ICMP type of 8 (echo-request).	vyatta@R1# set firewall name RATE-LIMIT rule 30 icmp type 8
Set ICMP code of 0 for type 8	vyatta@R1# set firewall name RATE-LIMIT rule 30 icmp code 0
Set the action to drop.	vyatta@R1# set firewall name RATE-LIMIT rule 30 action drop
Set the description.	<pre>vyatta@R1# set firewall name RATE-LIMIT rule 30 description "Drop remaining echo requests in excess of the rate in rule 20"</pre>
Commit the configuration.	vyatta@R1# commit

Example 2-8 Limit the rate of specific incoming packets

```
vyatta@R1# show firewall name RATE-LIMIT
Show the configuration.
                             rule 20 {
                                action accept
                                description "Rate-limit incoming icmp echo-request packets
                             to 2/second allowing short bursts of 5 packets"
                                icmp {
                                    code 0
                                    type 8
                                }
                                limit {
                                    burst 5
                                    rate 2/second
                                }
                                protocol icmp
                             }
                             rule 30 {
                                action drop
                                description "Drop remaining echo requests in excess of the
                             rate in rule 20"
                                icmp {
                                    code 0
                                    type 8
                                }
                                protocol icmp
                             }
                             vyatta@R1#
```

Matching TCP Flags

The Vyatta system supports filtering on the TCP flags within TCP packets. For example, to create a rule to accept packets with the SYN flag set, and the ACK, FIN, and RST flags unset, perform the following steps in configuration mode:

Example 2-9 Accept packets with specific TCP flags set.

Step	Command
Set the protocol to match to tcp.	vyatta@R1# set firewall name TCP-FLAGS rule 30 protocol tcp
Set the TCP flags to match.	<pre>vyatta@R1# set firewall name TCP-FLAGS rule 30 tcp flags SYN,!ACK,!FIN,!RST</pre>
Set the action to accept.	vyatta@R1# set firewall name TCP-FLAGS rule 30 action accept
Commit the configuration.	vyatta@R1# commit

Example 2-9 Accept packets with specific TCP flags set.

```
Show the configuration.
                             vyatta@R1# show firewall name TCP-FLAGS
                             rule 30 {
                                 action accept
                                 protocol tcp
                                 tcp {
                                    flags SYN,!ACK,!FIN,!RST
                                 }
                             }
                             vyatta@R1#
```

Matching ICMP Type Names

Packets can be filtered for ICMP type names. For example, to create a rule that allows only ICMP Echo Request packets through, perform the following steps in configuration mode:

Example 2-10 Accept ICMP packets with specific type names.

Step	Command
Set the protocol to match to icmp.	vyatta@R1# set firewall name ICMP-NAME rule 40 protocol icmp
Set the ICMP packet type to match.	<pre>vyatta@R1# set firewall name ICMP-NAME rule 40 icmp type-name echo-request</pre>
Set the action to accept.	vyatta@R1# set firewall name ICMP-NAME rule 40 action accept
Commit the configuration.	vyatta@R1# commit
Show the configuration.	<pre>vyatta@R1# show firewall name ICMP-NAME rule 40 { action accept protocol icmp icmp { type-name echo-request } } vyatta@R1#</pre>

Matching Groups

Groups of addresses, ports, and networks can be defined for similar filtering. For example, to create a rule that rejects traffic to a group of addresses and ports and from a group of networks, perform the following steps in configuration mode:

Example 2-11 Reject traffic based on groups of addresses, networks, and ports.

Step	Command
Add a range of addresses to an address group.	<pre>vyatta@R1# set firewall group address-group SERVERS address 1.1.1.1.1.5</pre>
Add another address to an address group.	<pre>vyatta@R1# set firewall group address-group SERVERS address 1.1.1.7</pre>
Add a network to a network group.	vyatta@R1# set firewall group network-group NETWORKS network 10.0.10.0/24
Add a port to a port group.	vyatta@R1# set firewall group port-group PORTS port 22
Add a port name to a port group.	vyatta@R1# set firewall group port-group PORTS port ftp
Add a range of ports to a port group.	vyatta@R1# set firewall group port-group PORTS port 1000-2000
Commit the configuration.	vyatta@R1# commit
Show the configuration.	<pre>vyatta@R1# show firewall group group { address-group SERVERS { address 1.1.1.1-1.1.1.5 address 1.1.1.7 } network-group NETWORKS { network 10.0.10.0/24 } port-group PORTS { port 22 port ftp port 1000-2000 } } vyatta@R1#</pre>
Specify a reject action within a firewall instance.	vyatta@R1# set firewall name REJECT-GROUPS rule 10 action reject
Specify an address group to match as a destination.	vyatta@R1# set firewall name REJECT-GROUPS rule 10 destination group address-group SERVERS

Example 2-11 Reject traffic based on groups of addresses, networks, and ports.

Specify an port group to match as a destination.	<pre>vyatta@R1# set firewall name REJECT-GROUPS rule 10 destination group port-group PORTS</pre>
Specify an network group to match as a source.	vyatta@R1# set firewall name REJECT-GROUPS rule 10 source group network-group NETWORKS
Commit the configuration.	vyatta@R1# commit
Show the configuration.	<pre>vyatta@R1# show firewall name REJECT-GROUPS rule 10{ action reject destination { group { address-group SERVERS port-group PORTS } } source { group { network-group NETWORKS } } } vyatta@R1#</pre>

Matching Recently-Seen Sources

The recent command can be used to help prevent "brute force" attacks where an external device opens a continuous flow of connections (for example, to the SSH port) in an attempt to break into the system. In these cases, the external source address may be unknown; however, this command enables matching based on the external host's behavior without initially knowing its IP address.

For example, to create a rule that limits incoming SSH connection attempts from the same host to three within 30 seconds, perform the following steps in configuration mode:

Example 2-12 Drop connection attempts from the same source over a specified threshold in a given period.

Step	Command
Match TCP packets.	vyatta@R1# set firewall name STOP-BRUTE rule 10 protocol tcp

Example 2-12 Drop connection attempts from the same source over a specified threshold in a given period.

Match a destination port of 22 (i.e. ssh).	<pre>vyatta@R1# set firewall name STOP-BRUTE rule 10 destination port 22</pre>
Match connection attempts.	vyatta@R1# set firewall name STOP-BRUTE rule 10 state new enable
Match the same source address 3 times in	vyatta@R1# set firewall name STOP-BRUTE rule 10 recent count 3
30 seconds.	vyatta@R1# set firewall name STOP-BRUTE rule 10 recent time 30
Drop packets that match these criteria.	vyatta@R1# set firewall name STOP-BRUTE rule 10 action drop
Commit the configuration.	vyatta@R1# commit
Show the configuration.	<pre>vyatta@R1# show firewall name STOP-BRUTE rule 10{ action drop destination { port 22 } protocol tcp recent { count 3 time 30 } state { new enable } } vyatta@R1#</pre>

Stateful Behavior

This section presents the following topics:

- Configuring Stateful Behavior Per Rule Set
- Configuring Global State Policies

Stateless firewalls filter packets in isolation, based on static source and destination information. In contrast, stateful firewalls track the state of network connections and traffic flows and allow or restrict traffic based on whether its connection state is

known and authorized. For example, when an initiation flow is allowed in one direction, the responder flow is automatically and implicitly allowed in the return direction.

For stateful behavior, you configure the action to take for established, related, and invalid traffic:

- Established traffic is return traffic belonging to a connection that has already had packets travel in both directions; for example, a reply packet, or an outgoing packet on a connection that has been replied to.
- Related traffic is traffic related to an existing connection; for example, an FTP data transfer connection or an ICMP error.
- Invalid traffic is packets that cannot be identified for some reason; for example, ICMP errors that do not correspond to any known connection, or packets not identified because the system has run out of resources.

By default, the Vyatta firewall is stateless. If you want the firewall to operate statefully, you have two choices:

- You can leave the firewall operating statelessly in general, and specify statefule behavior per rule set by configuring state rules within the rule set. This configuration is described in "Configuring Stateful Behavior Per Rule Set" on page 26.
- You can enable stateful behavior global, by configuring global state policies. This configuration is described in "Configuring Global State Policies" on page 27.

Configuring Stateful Behavior Per Rule Set

Even if you want the firewall to operate statelessly in general, you can still configure state rules within a specific rule set. Example 2-13 configures the first two rules in the firewall rule set TEST1.

- Rule 1 accepts established flows and flows related to existing connections, for all protocols.
- Rule 2 drops invalid traffic and logs the drop action.

To configure per–rule set state rules, perform the following steps in configuration mode.

Example 2-13 Creating a per-rule set state rule

Step	Command
Create the configuration node for the TEST1 rule set and give a description for the rule set.	vyatta@R1# set firewall name TEST1 description "Filter traffic statefully"

Example 2-13 Creating a per-rule set state rule

```
vyatta@R1# set firewall name TEST1 rule 1 action accept
Create a state rule allowing only
established and related traffic.
                               vyatta@R1# set firewall name TEST1 rule 1 state established
This means that only traffic
                               enable
initiated in on the system or
                               vyatta@R1# set firewall name TEST1 rule 1 state related enable
traffic related to established
connections (such as FTP data
connections or ICMP messages
associated with a flow) are
allowed.
Create a state rule dropping
                               vyatta@R1# set firewall name TEST1 rule 2 action drop
invalid traffic.
                               vyatta@R1# set firewall name TEST1 rule 2 state invalid enable
                               vyatta@R1# set firewall name TEST1 rule 2 log enable
Commit the configuration.
                               vyatta@R1# commit
Show the firewall configuration.
                               vyatta@R1# show firewall name TEST1
                                description "Filter traffic statefully"
                                rule 1 {
                                   action accept
                                   state {
                                      established enable
                                       related enable
                                   }
                                }
                                rule 2 {
                                   action drop
                                   log enable
                                   state {
                                       invalid enable
                                   }
                                }
```

Configuring Global State Policies

You can change the behavior to be globally stateful by setting a global state policy, using the firewall state-policy command. Within the state policy, you can configure the behavior for established, related, and invalid traffic. When state policies are defined, state rules for return traffic of that type need not be explicitly mentioned within the rule sets.

The global state policy configured applies to all IPv4 and IPv6 traffic destined for the router, originating from the router, or traversing the router. Note that once the firewall is configured to be globally stateful, this setting overrides any state rules configured within the rule set.

Example 2-14 configures the firewall globally to allow all return traffic. In addition, the firewall will allow any traffic (such as FTP data) related to allowed traffic in the original direction. The firewall will drop invalid traffic. This behavior is the same as that configured in the TEST1 rule set in Example 2-13, except that it will be applied globally instead of being restricted to the one rule set.

To configure this global stateful behavior, perform the following steps in configuration mode.

Example 2-14 Setting a global state policy

Step	Command
Allow return traffic and traffic related to existing connections. Drop invalid traffic and log the drop.	<pre>vyatta@R1# set firewall state-policy established action accept vyatta@R1# set firewall state-policy related action accept vyatta@R1# set firewall state-policy invalid action drop vyatta@R1# set firewall state-policy invalid log enable</pre>
Commit the configuration.	vyatta@R1# commit
Show the state policy configuration.	<pre>vyatta@R1# show firewall state-policy established { action accept } related { action accept } invalid { action drop log enable } [edit]</pre>

Zone-Based Firewall

The Vyatta system also supports a zone-based model. Figure 2-3 shows a Zone-based configuration with three user-defined zones. The examples that follow show the configuration for this diagram.

LAN2 Internet Private Zone DMZ Zone Public Zone

Figure 2-3 Zone-based firewall configuration

This section presents the following topics:

- Filtering Traffic Between the Transit Zones
- Filtering Traffic To and From the Local Zone
- Considerations for Remote Access VPN
- Using Per-Interface Rule Sets with Zone-Based Firewall

Filtering Traffic Between the Transit Zones

The first step in setting up zone-based traffic filtering is to create zone policies, as shown in Example 2-15. To create the zone policies, perform the following steps in configuration mode.

Example 2-15 Creating the zone policies

Step	Command
Create the configuration node for the DMZ zone and give a description for the zone.	vyatta@R1# set zone-policy zone dmz description "DMZ ZONE"
Add the interface contained in the DMZ zone.	vyatta@R1# set zone-policy zone dmz interface eth2
Create the configuration node for the Private zone and give a description for the zone.	vyatta@R1# set zone-policy zone private description "PRIVATE ZONE"

Example 2-15 Creating the zone policies

```
Add one of the interfaces
                              vyatta@R1# set zone-policy zone private interface eth0
contained in the Private zone.
Add the other interface
                              vyatta@R1# set zone-policy zone private interface eth1
contained in the Private zone.
Create the configuration node for
                              vyatta@R1# set zone-policy zone public description "PUBLIC
                              ZONE"
the Public zone and give a
description for the zone.
Add the interface contained in
                              vyatta@R1# set zone-policy zone public interface eth3
the Public zone.
Commit the configuration.
                              vyatta@R1# commit
Show the configuration.
                              vyatta@R1# show zone-policy
                                zone dmz {
                                  description "DMZ ZONE"
                                  interface eth2
                                }
                                zone private {
                                  description "PRIVATE ZONE"
                                  interface eth0
                                  interface eth1
                                }
                                zone public {
                                  description "PUBLIC ZONE"
                                  interface eth3
                                }
```

At this point, while traffic can flow freely within a zone, no traffic flows between zones. All traffic flowing from one zone to another will be dropped. For example, because eth0 and eth1 lie in the same zone (Private), traffic between these interfaces flows freely. However, traffic from eth1 to eth2 (which lies in the DMZ zone) is dropped.

The next step, shown in Example 2-16, is to create firewall rule sets to allow traffic between zones. The first rule set allows all traffic to the Public zone. To configure this rule set, perform the following steps in configuration mode.

Example 2-16 Creating the rule set for traffic to the Public Zone

Step	Command
Create the configuration node for the to_public rule set and give a description for the rule set.	<pre>vyatta@R1# set firewall name to_public description "allow all traffic to PUBLIC zone"</pre>
Create a rule to accept all traffic sent to the Public Zone.	vyatta@R1# set firewall name to_public rule 1 action accept
Commit the configuration.	vyatta@R1# commit
Show the firewall configuration.	<pre>vyatta@R1# show firewall name to_public description "allow all traffic to PUBLIC zone" rule 1 { action accept }</pre>

The next step, shown in Example 2-17, creates two rule sets: one from the Private zone to the DMZ zone and one from the Public zone to the DMZ zone.

- The rule set from Public to DMZ accepts all traffic for HTTP, HTTPS, FTP, SSH, and Telnet, as well as all ICMP traffic.
- The rule set from Private to DMZ accepts HTTP, HTTPS and ICMP traffic only.

To configure these rule sets, perform the following steps in configuration mode.

Example 2-17 Creating the rule set for traffic to the DMZ zone

Step	Command
Create the configuration node for the private_to_dmz rule set and give a description for the rule set.	<pre>vyatta@R1# set firewall name private_to_dmz description "filter traffic from PRIVATE zone to DMZ zone"</pre>
Create a rule to allow traffic sent from the Private zone to HTTP, HTTPS, FTP, SSH, and Telnet ports in the DMZ zone.	<pre>vyatta@R1# set firewall name private_to_dmz rule 1 action accept vyatta@R1# set firewall name private_to_dmz rule 1 destination port http,https,ftp,ssh,telnet vyatta@R1# set firewall name private_to_dmz rule 1 protocol tcp</pre>

Example 2-17 Creating the rule set for traffic to the DMZ zone

Create a rule to allow all ICMP traffic sent from the Private zone to the DMZ zone.	<pre>vyatta@R1# set firewall name private_to_dmz rule 2 action accept vyatta@R1# set firewall name private_to_dmz rule 2 icmp type-name any vyatta@R1# set firewall name private_to_dmz rule 2 protocol icmp</pre>
Commit the configuration.	vyatta@R1# commit
Show the firewall configuration.	<pre>vyatta@R1# show firewall name private_to_dmz description "filter traffic from PRIVATE zone to DMZ zone" rule 1 { action accept destination { port http,https,ftp,ssh,telnet } protocol tcp } rule 2 { action accept icmp { type-name any } protocol icmp }</pre>
Create the configuration node for the public_to_dmz rule set and give a description for the rule set.	<pre>vyatta@R1# set firewall name public_to_dmz description "filter traffic from PUBLIC zone to DMZ zone"</pre>
Create a rule to allow traffic sent from the Public zone only to HTTP and HTTPS ports in the DMZ zone.	<pre>vyatta@R1# set firewall name public_to_dmz rule 1 action accept vyatta@R1# set firewall name public_to_dmz rule 1 destination port http,https vyatta@R1# set firewall name public_to_dmz rule 1 protocol tcp</pre>
Create a rule to allow all ICMP traffic sent from the Public zone to the DMZ zone.	<pre>vyatta@R1# set firewall name public_to_dmz rule 2 action accept vyatta@R1# set firewall name public_to_dmz rule 2 icmp type-name any vyatta@R1# set firewall name public_to_dmz rule 2 protocol icmp</pre>
Commit the configuration.	vyatta@R1# commit
-	

Example 2-17 Creating the rule set for traffic to the DMZ zone

```
Show the firewall configuration.
                             vyatta@R1# show firewall name public_to_dmz
                              description "filter traffic from PUBLIC zone to DMZ zone"
                              rule 1 {
                                 action accept
                                 destination {
                                    port http,https
                                 }
                                 protocol tcp
                              }
                              rule 2 {
                                 action accept
                                 icmp {
                                    type-name any
                                 }
                                 protocol icmp
                              }
```

The next step, shown in Example 2-18, creates a rule set for traffic to the Private zone.

Note that this rule set includes state rules specifically allowing traffic from existing and related connections. This rule is required because, in this scenario

- The rule set from Public to DMZ accepts all traffic for HTTP, HTTPS, FTP, SSH, and Telnet, as well as all ICMP traffic.
- The rule set from Private to DMZ accepts HTTP, HTTPS and ICMP traffic only.

To configure this rule set, perform the following steps in configuration mode.

Example 2-18 Creating the rule set for traffic to the Private zone

Step	Command
Create the configuration node for the to_private rule set and give a description for the rule set.	vyatta@R1# set firewall name to_private description "filter traffic to PRIVATE zone"

Example 2-18 Creating the rule set for traffic to the Private zone

```
vyatta@R1# set firewall name to_private rule 1 action accept
Create a rule to allow only
established and related traffic to
                               vyatta@R1# set firewall name to_private rule 1 state
the Private zone. This means that
                               established enable
only traffic initiated in the Private
                               vyatta@R1# set firewall name to_private rule 1 state related
                               enable
zone or traffic related to
established connections (such as
                               vyatta@R1# set firewall name to_private rule 1 protocol all
FTP data connections or ICMP
messages associated with a flow)
are allowed.
Commit the configuration.
                               vyatta@R1# commit
Show the firewall configuration.
                               vyatta@R1# show firewall name to_private
                                description "filter traffic to PRIVATE zone"
                                rule 1 {
                                   action accept
                                   protocol all
                                   state {
                                      established enable
                                      related enable
                                   }
                                }
```

Example 2-19 applies the rule set to the DMZ zone.

Example 2-19 Applying a rule sets to the DMZ zone.

Step	Command
Apply the private_to_dmz rule set to traffic from the Private Zone to the DMZ Zone.	<pre>vyatta@R1# set zone-policy zone dmz from private firewall name private_to_dmz</pre>
Apply the public_to_dmz rule set to traffic from the Public Zone to the DMZZone.	<pre>vyatta@R1# set zone-policy zone dmz from public firewall name public_to_dmz</pre>
Commit the configuration.	vyatta@R1# commit

Example 2-19 Applying a rule sets to the DMZ zone.

```
vyatta@R1# show zone-policy zone dmz
Show the DMZ Zone policy
configuration.
                              description "DMZ ZONE"
                              from private {
                                 firewall {
                                    name private_to_dmz
                                 }
                              }
                              from public {
                                firewall {
                                    name public_to_dmz
                                 }
                              }
                              interface eth2
```

Example 2-20 applies the rule set to the Private zone.

Example 2-20 Applying a rule set to the Private zone.

Step	Command
Apply the to_private rule set to traffic from the DMZ Zone to the Private Zone.	<pre>vyatta@R1# set zone-policy zone private from dmz firewall name to_private</pre>
Apply the to_private rule set to traffic from the Public Zone to the Private Zone.	<pre>vyatta@R1# set zone-policy zone private from public firewall name to_private</pre>
Commit the configuration.	vyatta@R1# commit
Show the Private Zone policy configuration.	<pre>vyatta@R1# show zone-policy zone private description "PRIVATE ZONE" from dmz { firewall { name to_private } } from public { firewall { name to_private } } interface eth0 interface eth1</pre>

Example 2-21 applies the rule set to the Public zone.

Example 2-21 Applying a rule set to the Public zone.

Step	Command
Apply the to_public rule set to traffic from the DMZ Zone to the Public Zone.	<pre>vyatta@R1# set zone-policy zone public from dmz firewall name to_public</pre>
Apply the to_pubic rule set to traffic from the Private Zone to the Public Zone.	<pre>vyatta@R1# set zone-policy zone public from private firewall name to_public</pre>
Commit the configuration.	vyatta@R1# commit
Show the public zone policy configuration.	<pre>vyatta@R1# show zone-policy zone public description "PUBLIC ZONE" from dmz { firewall { name to_public } } from private { firewall { name to_public } } interface eth3</pre>

Filtering Traffic To and From the Local Zone

The Local Zone is a special zone which refers to the Vyatta system itself. By default, all traffic destined for the system and originating from the system is allowed. In Figure 2-4 we see arrows depicting traffic flows to and from the transit zones (Private, DMZ, and Public) as well as to and from the Local Zone.

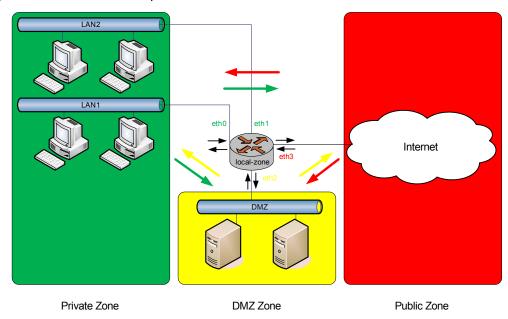


Figure 2-4 Default traffic to/from the Local Zone

To create a configuration that restricts access to the Vyatta system to hosts located within the Private Zone, perform the following steps in configuration mode:

Example 2-22 Restricting Vyatta system access to hosts located in the Private Zone.

Step	Command
Create the configuration node for the private_to_vyatta rule set and give a description for the rule set.	<pre>vyatta@R1# set firewall name private_to_vyatta description "filter traffic from PRIVATE zone to local-zone"</pre>
Allow all traffic.	<pre>vyatta@R1# set firewall name private_to_vyatta rule 1 action accept</pre>
Commit the configuration.	vyatta@R1# commit
Show the private_to_vyatta firewall configuration.	<pre>vyatta@R1# show firewall name private_to_vyatta description "filter traffic from PRIVATE zone to local-zone" rule 1{ action accept }</pre>
Apply the private_to_vyatta rule set to traffic from the Private Zone to the Local Zone.	<pre>vyatta@R1# set zone-policy zone vyatta from private firewall name private_to_vyatta</pre>
Set the Local Zone.	vyatta@R1# set zone-policy zone vyatta local-zone
Commit the configuration.	vyatta@R1# commit

Example 2-22 Restricting Vyatta system access to hosts located in the Private Zone.

```
Show the Local Zone policy
                              vyatta@R1# show zone-policy zone vyatta
configuration.
                               from private {
                                  firewall {
                                      name private_to_vyatta
                                  }
                               }
                               local-zone
```

At this point, only traffic from the Private Zone destined for the Vyatta system is allowed. Traffic from all other zones is dropped. However, all traffic originating from the Vyatta system is still allowed to all zones.

NOTE Care should be taken when defining the local-zone. If you are configuring the system via a remote connection (e.g. via ssh) and restrict access from the zone you are in your session will be dropped. You must make sure that traffic from the zone you are in to to the Vyatta system is allowed.

Be aware that there are services (e.g. DNS forwarding and Web Proxy) that terminate connections to them within the Vyatta system and then initiate connections to another host. In the case of DNS forwarding, packets destined to the router for lookup of a non-cached DNS entry result in the DNS forwarder initiating a connection to the external name-server to retrieve the DNS entry and then pass it back to the originating client. In the example configuration above where packets to the router are allowed only from the PRIVATE zone, DNS lookups coming back to the router from an external name-server in the PUBLIC zone would be dropped. Thus, to allow packets destined for the router from the PUBLIC zone, we define a rule set and apply it in the local-zone as follows:

Example 2-23 Filtering traffic from the Public Zone to the Vyatta system.

Step	Command
Create the configuration node for the public_to_vyatta rule set and give a description for the rule set.	vyatta@R1# set firewall name public_to_vyatta description "filter traffic from PUBLIC zone to local-zone"
Allow the specified traffic.	<pre>vyatta@R1# set firewall name public_to_vyatta rule 1 action accept</pre>
	<pre>vyatta@R1# set firewall name public_to_vyatta rule 1 protocol all</pre>
	<pre>vyatta@R1# set firewall name public_to_vyatta rule 1 state established enable</pre>
	vyatta@R1# set firewall name public_to_vyatta rule 1 state related enable
Commit the configuration.	vyatta@R1# commit

Example 2-23 Filtering traffic from the Public Zone to the Vyatta system.

```
vyatta@R1# show firewall name public_to_vyatta
Show the public to vyatta
firewall configuration.
                               description "filter traffic from PUBLIC zone to local-zone"
                               rule 1{
                                  action accept
                                  protocol all
                                  state {
                                      established enable
                                      related enable
                                  }
                               }
Apply the public_to_vyatta rule
                              vyatta@R1# set zone-policy zone vyatta from public firewall
set to traffic from the Public Zone
                              name public_to_vyatta
to the Local Zone.
Commit the configuration.
                              vyatta@R1# commit
Show the new Local Zone policy
                              vyatta@R1# show zone-policy zone vyatta
configuration.
                               from private {
                                  firewall {
                                      name private to vyatta
                                  }
                               }
                               from public {
                                  firewall {
                                      name public_to_vyatta
                                  }
                               }
                               local-zone
```

By default all traffic originating from the Local Zone is permitted. If you wish to restrict this you must define the local-zone as a "from zone" within the definition of a transit zone. Once the local-zone is used as a "from zone" all traffic from the Vyatta system to all other zones is blocked unless explicitly allowed through the use of a rule set that allows traffic into a specific zone.

For example, to allow traffic from the Vyatta system only to the Private Zone we would do the following:

Example 2-24 Allow traffic from the Vyatta system to the Private Zone.

Step	Command
Create the configuration node for the from_vyatta rule set and give a description for the rule set.	<pre>vyatta@R1# set firewall name from_vyatta description "allow all traffic from local-zone"</pre>
Allow the specified traffic.	<pre>vyatta@R1# set firewall name from_vyatta rule 1 action accept vyatta@R1# set firewall name from_vyatta rule 1 protocol all</pre>
Commit the configuration.	vyatta@R1# commit
Show the from_vyatta firewall configuration.	<pre>vyatta@R1# show firewall name from_vyatta description "allow all traffic from local-zone" rule 1{ action accept protocol all }</pre>
Apply the from_vyatta rule set to traffic from the Local Zone to the Private Zone.	<pre>vyatta@R1# set zone-policy zone private from vyatta firewall name from_vyatta</pre>
Commit the configuration.	vyatta@R1# commit
Show the new Private Zone policy configuration.	<pre>vyatta@R1# show zone-policy zone private description "PRIVATE ZONE" from dmz { firewall { name to_private } } from public { firewall { name to_private } } from vyatta { firewall { name from_vyatta } } interface eth0 interface eth1</pre>

Remember that the services that require traffic to originate from the Vyatta system require appropriate filtering to those zones from the local-zone. For example, for DNS forwarding to work traffic would have to be permitted from the Vyatta system to the Public Zone.

Considerations for Remote Access VPN

We extend our example by adding a separate zone to handle Remote Access VPN users. We treat these users like users in the Private zone (though it is not necessary to do so). To this end, a separate "vpn" zone is created and policies are applied just like for Private zone users. One difference is that all Remote Access VPN users that access the Vyatta system present as separate L2TP or PPTP interfaces so the interface is defined as "l2tp+" or "pptp+", meaning any L2TP or PPTP interface. In this example we also assume that no interaction is required between the VPN zone and the Private zone. The following configuration shows each of the zones now that the VPN zone is aded.

Example 2-25 Zone policy with VPN zone added.

Step

Command

Show the VPN Zone policy configuration. The "interface I2tp+" means any L2TP connection. The "interface pptp+" means any PPTP connection.

```
vyatta@R1# show zone-policy zone vpn
default-action drop
description "REMOTE ACCESS VPN ZONE"
from dmz {
   firewall {
       name to_private
   }
}
from public {
   firewall {
       name to_private
   }
from vyatta {
   firewall {
       name from_vyatta
 }
interface 12tp+
interface pptp+
```

Example 2-25 Zone policy with VPN zone added.

Show the DMZ Zone policy configuration (the "from vpn" section has been added).

```
vyatta@R1# show zone-policy zone dmz
 description "DMZ ZONE"
 from private {
   firewall {
       name private_to_dmz
   }
 }
 from public {
   firewall {
       name public_to_dmz
   }
 }
 from vpn {
   firewall {
       name private_to_dmz
   }
 }
 interface eth2
```

Show the Private Zone policy configuration (no changes to the Private zone as there is no traffic between Private and VPN zones).

```
vyatta@R1# show zone-policy zone private
 description "PRIVATE ZONE"
 from dmz {
   firewall {
       name to_private
   }
 }
 from public {
   firewall {
       name to_private
 }
 from vyatta {
   firewall {
       name from_vyatta
   }
 }
 interface eth0
```

interface eth1

Example 2-25 Zone policy with VPN zone added.

Show the Public zone policy configuration (the "from vpn" section has been added).

```
vyatta@R1# show zone-policy zone public
 description "PUBLIC ZONE"
 from dmz {
   firewall {
       name to_public
   }
 }
 from private {
   firewall {
       name to_public
   }
 }
 from vpn {
   firewall {
       name to_public
   }
 }
 interface eth3
```

Show the Local Zone policy configuration (the "from vpn" section has been added).


```
vyatta@R1# show zone-policy zone vyatta
 from private {
   firewall {
       name private_to_vyatta
   }
 }
 from public {
   firewall {
       name public_to_vyatta
   }
 from vpn {
   firewall {
       name private_to_vyatta
 }
 local-zone
```

Using Per-Interface Rule Sets with Zone-Based Firewall

On the creation of a zone (transit or local), traffic to that zone is only allowed from another zone by using firewall rule sets to filter traffic from that zone. Thus, interfaces that are not included as part of any zone will not be able to send traffic to

any zone. However, traffic between interfaces that are not part of any zone flows freely and can be filtered using per interface firewall rule sets. Consider the example below:

Figure 2-5 Default traffic to/from the Local Zone

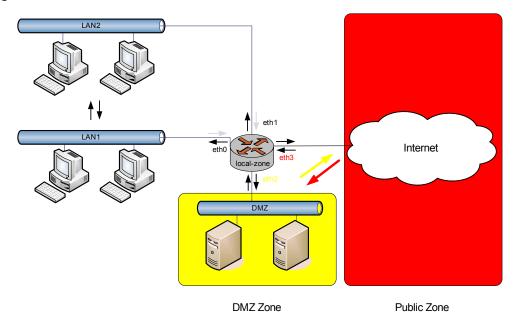

There are three zones defined in this topology - DMZ, Public, local-zone. A sample zone-policy configuration for this topology may look something like this:

Example 2-26 Zone policy for topology with three zones (DMZ, Public, and local-zone).

Step

Command

Show the zone policy configuration.

```
vyatta@R1# show zone-policy
 zone dmz {
     default-action drop
     description "DMZ ZONE"
     from public {
         firewall {
             name public_to_dmz
         }
     interface eth2
 zone public {
     default-action drop
     description "PUBLIC ZONE"
     from dmz {
         firewall {
             name to_public
         }
     }
     interface eth3
 }
 zone vyatta {
     default-action drop
     from dmz {
         firewall {
             name dmz_to_vyatta
         }
     }
     from public {
         firewall {
             name public_to_vyatta
         }
     }
     local-zone
 }
```

eth0 and eth1 are not part of any zone. Thus, traffic to any of the three zones from these interfaces will be dropped. Traffic flowing between LAN1 and LAN2 will flow freely and unfiltered. Also, traffic going out eth0 and eth1 from any of the zones (DMZ, Public, and local-zone) will flow unfiltered. Now, suppose that we want to

reject all traffic from any of the zones going out eth0 and eth1 and also, want to allow just ICMP packets between LAN1 and LAN2. We would configure the system as follows:

Example 2-27 Reject traffic from zones and allow only ICMP between LANs.

Step Command Show the allow ping only vyatta@R1# show firewall name allow_ping_only firewall configuration. description "allow nothing from zones. allow icmp packets between LANs" NOTE: "not allowed nets" is a rule 1 { network group containing subnets of the DMZ and Public action reject zones. protocol all source { group { network-group not_allowed_nets } } } rule 2 { action accept icmp { type-name any } protocol icmp } Show the firewall configuration vyatta@R1# show interfaces ethernet eth0 firewall of eth0 and eth1. name allow_ping_only vyatta@R1# show interfaces ethernet eth1 firewall out { name allow_ping_only }

This does not filter traffic originating from the Vyatta system going out interfaces eth0 and eth1. There are no commands to filter traffic originating from the system on a per interface basis. If the zone-policy configuration in this example had the local-zone (zone vyatta) being used as a from zone under DMZ and/or Public then traffic originating from the system would only go out those zones and nothing else.

Using Firewall with VRRP Interfaces

This section presents the following topics:

- Applying a Rule Set to a VRRP Interface
- Using VRRP with a Zone-Based Firewall

A VRRP interface is a logical abstraction that allows the system to implement RFC 3768-compliant MAC address behavior. VRRP can be configured with or without VRRP interfaces. To achieve the expected results when filtering traffic, it is important to understand how traffic flows on systems using VRRP.

- If no VRRP interface is designed, traffic flows in and out through physical interface or vif.
- If a VRRP interface is designed, traffic flows in through the VRRP interface and out through the physical interface or vif.

This traffic flow affects how you design and attach firewall rule sets.

Applying a Rule Set to a VRRP Interface

When a host sends a packet to the router, the packet ingresses through the VRRP interface. But when the router sends traffic to the host, traffic egresses through the parent interface or vif.

The firewall rule sets for the VRRP interface and the physical interface are independent. Specifically, packet filtering rules applied to incoming traffic on the parent interface are NOT applied to traffic arriving on the VRRP interface. When designing firewall rule sets for incoming traffic, make sure you apply an appropriate rule set for your VRRP interface; otherwise, all incoming traffic will be unfiltered.

Example 2-1 defined a simple firewall rule set, FWTEST-1, which filters on source IP address. Example 2-28 applies the same rule set to inbound traffic on the VRRP interface. In this example, eth2 is already configured. Specifically:

- It is a member of VRRP group 15.
- It has rule set FWTEST-1 applied for inbound traffic.

To apply the rule set to the VRRP interface, perform the following steps in configuration mode.

Example 2-28 Applying a firewall rule set to a VRRP interface

Step Command View initial configuration for vyatta@R1# show interfaces ethernet eth2 eth2. Note the firewall rule set address 172.16.1.20/24 attached to the physical duplex auto interface. firewall { in { name FWTEST-1 } } hw-id 00:0c:29:c6:a2:59 smp_affinity auto speed auto vrrp { vrrp-group 15 { advertise-interval 1 interface { preempt true sync-group test virtual-address 172.16.1.25 } } Attach the same FW-TEST1 rule set interfaces ethernet eth2 vrrp vrrp-group 15 firewall in name FWTEST-1 set for inbound traffic on the

VRRP interface.

Commit the configuration.

vyatta@R1# commit

Example 2-28 Applying a firewall rule set to a VRRP interface

Show the configuration. vyatta@R1# show interfaces ethernet eth2 address 172.16.1.20/24 duplex auto firewall { in { name FWTEST-1 } }

> speed auto vrrp {

```
in {
           name FWTEST-1
       }
   }
}
preempt true
sync-group test
virtual-address 172.16.1.25
```

advertise-interval 1

hw-id 00:0c:29:c6:a2:59

vrrp-group 15 {

interface { firewall {

smp affinity auto

Using VRRP with a Zone-Based Firewall

}

}

When a physical interface or vif has a VRRP interface defined, all incoming traffic arrives through the VRRP interface. Zone-based firewalls drop all traffic in and out unless explicitly allowed. Therefore, if you are using VRRP interfaces with zone-based firewall, you must make sure you include the VRRP interfaces in your zone. Otherwise, no incoming traffic will be allowed into the zone; it will all be dropped.

In Example 2-20, the Private zone was defined to include interfaces eth0 and eth1. Example 2-29 adds VRRP interfaces for both eth0 and eth1. In this example:

- Interface eth0 is a member of VRRP group 99.
- Interface eth1 is a member of VRRP group 101.

When you add configuration to a VRRP interface, you do not specify the interface identifier. The system internally constructs the identifier from the name of the parent interface together with the VRRP group ID.

Example 2-29 Adding VRRP interfaces to the Private zone

Step	Command
Add one of the interfaces contained in the Private zone.	<pre>vyatta@R1# set zone-policy zone private interface eth0 vrrp vrrp-group 99 interface</pre>
Add the other interface contained in the Private zone.	<pre>vyatta@R1# set zone-policy zone private interface eth1 vrrp vrrp-group 101 interface</pre>
Commit the configuration.	vyatta@R1# commit
Show the configuration.	<pre>vyatta@R1# show zone-policy zone private description "PRIVATE ZONE" from dmz { firewall { name to_private } } from public { firewall { name to_private } } from vyatta { firewall { name from_vyatta } } interface eth0 interface eth1 interface eth1v101</pre>

Viewing Firewall Information

This section presents the following topics:

- **Showing Firewall Instance Information**
- Showing Firewall Configuration on Interfaces
- **Showing Firewall Configuration**

This section includes the following examples:

Example 2-30 Showing firewall instances

- Example 2-31 Showing firewall configuration on an interface
- Example 2-32 Displaying the "firewall" configuration node

Showing Firewall Instance Information

You can see how firewall instances are set up by using the show firewall command in operational mode and specifying the name of the instance. If no instance is specified then all defined instances are displayed.

Example 2-30 shows the information you configured for firewall instance FWTEST-1 and FWTEST-3.

Example 2-30 Showing firewall instances

```
vyatta@R1:~$ show firewall FWTEST-1
Active on (eth0, IN)
State Codes: E - Established, I - Invalid, N - New, R - Related
rule action source
                                 destination
                                                     proto state
                                 -----
                                                     ----
      REJECT 172.16.0.26
                                  0.0.0.0/0
                                                      all
                                                             any
1025 DROP
             0.0.0.0/0
                                  0.0.0.0/0
                                                      all
                                                            any
vyatta@R1:~$ show firewall FWTEST-3
Active on (eth1, LOCAL)
State Codes: E - Established, I - Invalid, N - New, R - Related
rule action source
                                 destination
                                                     proto state
                                 -----
     ACCEPT 10.10.30.46
                                 0.0.0.0/0
                                                     tcp
                                                            any
                                 dst ports: telnet
             0.0.0.0/0
                                 0.0.0.0/0
1025 DROP
                                                     all
                                                            any
vyatta@R1:~$
```

Showing Firewall Configuration on Interfaces

Example 2-31 shows how firewall instance FWTEST-1 is applied to interface eth0.

Example 2-31 Showing firewall configuration on an interface

```
vyatta@R1# show interfaces ethernet eth0 firewall
   in {
       name FWTEST-1
   }
vyatta@R1#
```

Showing Firewall Configuration

You can always view the information in configuration nodes by using the show command in configuration mode. In this case you can view firewall configuration by using the show firewall command in configuration mode, as shown in Example 2-32.

Example 2-32 Displaying the "firewall" configuration node

```
vyatta@R1# show firewall
   name FWTEST-1 {
       rule 1 {
          action reject
          source {
              address 172.16.0.26
          }
       }
   }
   name FWTEST-2 {
       rule 1 {
          action accept
          destination {
              address 10.10.40.101
          }
          source {
              address 10.10.30.46
          }
       }
   }
   name FWTEST-3 {
       rule 1 {
          action accept
          destination {
              port telnet
          protocol tcp
          source {
```

```
address 10.10.30.46
          }
       }
   }
   name FWTEST-4 {
       rule 1 {
          action accept
          destination {
              address 172.16.0.0/24
          }
          source {
              address 10.10.40.0/24
          }
       }
   }
   name FWTEST-5 {
       rule 1 {
          action accept
          source {
              mac-addr 00:13:ce:29:be:e7
          }
       }
   }
vyatta@R1#
```

Chapter 3: Global Firewall Commands

This chapter describes Vyatta system firewall commands. These commands apply to both IPv4 and IPv6 firewalls.

Global Firewall Commands

This chapter contains the following commands.

Configuration Commands	
Global Configuration Commands	
firewall	Enables or disables firewall on the Vyatta system.
firewall state-policy	Allows you to configure global statefulness policy for traffic that is established, related to an existing connection, or invalid.
Operational Commands	
Global Operational Commands	
clear firewall	Clears statistics associated with a firewall rule set.
show firewall	Displays firewall group information.
show firewall group	Displays firewall group information.

clear firewall

Clears statistics associated with a firewall rule set.

Syntax

clear firewall {name name | ipv6-name name} [rule rule-num] counters

Command Mode

Operational mode.

Parameters

name name	Clears counters for the specified IPv4 firewall rule set.
ipv6-name name	Clears counters for the specified IPv6 rule set.
rule rule-num	Clears counters for a specific rule within a rule set.

Default

When no rule is specified, statistics are cleared for all rules in the rule set.

Usage Guidelines

Use this command to clear the statistics associated with a firewall rule set or, optionally, a rule within a firewall rule set.

firewall

Enables or disables firewall on the Vyatta system.

Syntax

set firewall delete firewall show firewall

Command Mode

Configuration mode.

Configuration Statement

firewall {}

Parameters

None.

Default

None.

Usage Guidelines

Use this command to define firewall configuration settings and rule sets, using other firewall commands.

Once the firewall rule sets have been defined, they must be applied to interfaces as packet filters using firewall-related interface commands. Until a firewall rule set has been applied to an interface, it has no effect on traffic destined for or traversing the system.

Note that after the final user-defined rule in a rule set is executed, an implicit rule of reject all takes effect.

Use the set form of this command to create firewall configuration.

Use the delete form of this command to remove firewall configuration.

Use the **show** form of this command to view firewall configuration.

firewall state-policy

Allows you to configure global statefulness policy for traffic that is established, related to an existing connection, or invalid.

Syntax

set firewall state-policy {established | related | invalid } action action [log enable] delete firewall state-policy [log] show firewall state-policy

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   state-policy {
       established {
           action {accept|drop|reject}
          log enable
       related {
          action {accept|drop|reject}
          log enable
       invalid {
          action {accept|drop|reject}
          log enable
       }
   }
}
```

Parameters

established

Sets the global statefulness policy for established traffic. Established traffic is traffic belonging to a connection that has already had packets travel in both directions; for example, a reply packet, or an outgoing packet on a connection that has been replied to.

related	Sets the global statefulness policy for related traffic. Related traffic is traffic related to an existing connection; for example, an FTP data transfer connection or an ICMP error.
invalid	Sets the global statefulness policy for invalid traffic. Invalid traffic is packets that cannot be identified for some reason. Examples are ICMP errors that do not correspond to any known connection, or a TCP packet that is not part of an existing TCP connection—for example, a TCP ACK RST or FIN packet that does not correspond to a valid connection in the connection tracking table.
action	The action to be taken when a packet satisfies the criteria specified in the policy. Supported values are as follows:
	accept: Accepts and forwards matched packets.
	drop: Silently drops matched packets.
	reject: Drops matched packets with an ICMP "Port unreachable" message.
log enable	Logs the packets processed by this policy. To disable logging, delete the log enable configuration node.

Default

If this statement is not configured, the firewall is stateless. In this case, specific rules governing statefulness can be configured within the rule set.

Usage Guidelines

Use this command to configure a global state policy for traffic associated with established connections, traffic related to established connections, and invalid traffic.

Setting this configuration node makes the firewall globally stateful. You then define policies for established traffic, related traffic, and invalid traffic.

When configured to be stateful, the firewall tracks the state of network connections and traffic flows and allows or restricts traffic based on whether its connection state is known and authorized. For example, when an initiation flow is allowed in one direction, the stateful firewall automatically allows responder flows in the return direction.

The state policy configured applies to all IPv4 and IPv6 traffic destined for the router, originating from the router, or traversing the router. Once the firewall is configured to be globally stateful, this setting overrides any state rules configured within rule sets.

Use the set form of this command to configure global state policies for the firewall.

Use the delete form of this command to remove state policy configuration and return the firewall to stateless operation. Use the delete command also to delete the log enable option and disable logging for the specified policy.

Use the **show** form of this command to view state-policy configuration.

show firewall

Displays statistics for firewall rule sets.

Syntax

show firewall [name name | ipv6-name name] [rule rule-num | statistics]]

Command Mode

Operational mode.

Parameters

name name Displays information for the specified IPv4 firewall rule set.	
ipv6-name name	Displays information for the specified IPv6 rule set.
rule rule-num	Displays information for a specific rule within a rule set.
statistics	Optional. Displays summary statistics information about the specified IPv6 firewall instance.

Default

When used with no option, shows information for all configured firewall rule sets.

Usage Guidelines

Use this command to display statistics information about configured firewall rule sets.

Examples

Example 3-1 shows firewall configuration. The output includes configured global state information plus information about configured firewall rule sets.

Example 3-1 Viewing firewall configuration information

vyatta@R1:~\$# show firewall _____ Firewall Global Settings

```
Firewall state-policy for all IPv4 and IPv6 traffic
state
               action
                         log
                -----
invalid
               drop
                        enabled
established
               accept
                        disabled
related
               accept
                        disabled
Firewall Rulesets Information
IPv4 Firewall "allow all":
Active on (eth1,IN)
Active on traffic to -
  zone [private] from zones [dmz, public]
(State Codes: E - Established, I - Invalid, N - New, R - Related)
rule action source
                                  destination
                                                      proto state
                                  -----
     ACCEPT 0.0.0.0/0
                                  0.0.0.0/0
                                                      all
                                                             any
1025 DROP
             0.0.0.0/0
                                  0.0.0.0/0
                                                      all
                                                             any
```

Example 3-2 shows detail for all firewall rule s on R1. In this example, only one rule set (TEST) has been defined.

Example 3-2 Displaying detailed firewall rule information

```
vyatta@R1:~$ show firewall detail
______
IPv4 Firewall "TEST": Active on (eth0,IN)
rule action
            proto packets bytes
                 0
    accept
           all
 condition - saddr 192.168.0.0/24
20
    drop
            icmp
                 0
 condition - saddr 192.168.74.0/24
30
                        0
    accept
           tcp
```

```
condition - state NEW, ESTABLISHED
                                0
1025 drop
               all
vyatta@R1:~$
```

Example 3-3 shows statistics for all firewall rules on R1.

Example 3-3 "show firewall statistics": Displaying rule statistics

vyatta@R1:~\$ show firewall statistics ______ IPv4 Firewall "TEST": Active on (eth0,IN) bytes rule packets destination action source ----------10 0 0 0.0.0.0/0 ACCEPT 192.168.0.0/24 20 0 DROP 192.168.74.0/24 0.0.0.0/0 0 ACCEPT 0.0.0.0/0 30 0 0.0.0.0/00 1025 0 DROP 0.0.0.0/00.0.0.0/0 vyatta@R1:~\$

show firewall group

Displays firewall group information.

Syntax

show firewall group [group-name]

Command Mode

Operational mode.

Parameters

group-name The name of a specific firewall group.

Default

All groups are displayed.

Usage Guidelines

Use this command to display firewall group information. Supported group types include address groups, network groups, and port groups.

Examples

Example 3-4 shows all firewall groups on R1.

Example 3-4 "show firewall group": Displaying information on all defined firewall groups.

```
vyatta@R1:~$ show firewall group
```

Name : SERVERS Type : address

Description: My set of blocked servers

References: FW1-25-destination

Members

1.1.1.1 1.1.1.2 1.1.1.3 1.1.1.5 1.1.1.7 3.3.3.3 Name : BAD-NETS Type : network Description: my bad nets

References : none

Members

2.2.0.0/16 8.8.8.0/24 9.0.0.0/24

vyatta@R1:~\$

Chapter 4: IPv4 Firewall Commands

This chapter describes commands for defining IPv4 firewall packet filters on the Vyatta system.

This chapter presents the following topics:

• IPv4 Firewall Commands

IPv4 Firewall Commands

This chapter contains the following commands.

Configuration Commands	
Interface Commands	
interfaces <interface> firewall <direction> name <fw-name></fw-name></direction></interface>	Applies an IPv4 firewall instance to the defined interface.
General Detection	
firewall all-ping <state></state>	Enables or disables response to all IPv4 ICMP Echo Request (ping) messages.
firewall broadcast-ping <state></state>	Enables or disables response to broadcast IPv4 ICMP Echo Request and Timestamp Request messages.
firewall ip-src-route <state></state>	Specifies whether to process packets with the Loose Source Route or Strict Source Route IP options.
firewall log-martians <state></state>	Specifies whether to log packets with invalid addresses.
firewall receive-redirects <state></state>	Specifies whether to process IPv4 ICMP redirect messages.
firewall send-redirects <state></state>	Specifies whether to allow sending of IPv4 ICMP redirect messages.
firewall source-validation <state></state>	Specifies whether to allow sending of IPv4 ICMP redirect messages.
firewall syn-cookies <state></state>	Specifies a policy for source validation by reversed path, as defined in RFC 3704.
Firewall Groups	
firewall group	Defines a group of objects for referencing in firewall rules.
firewall group address-group <group-name></group-name>	Defines a group of IP addresses for referencing in firewall rules.
firewall group network-group <group-name></group-name>	Defines a group of networks for referencing in firewall rules.
firewall group port-group <group-name></group-name>	Defines a a group of ports for referencing in firewall rules.

Rules and Rule Sets	
firewall name <name></name>	Defines an IPv4 firewall rule set.
firewall name <name> default-action <action></action></name>	Sets the default action for an IPv4 rule set.
firewall name <name> description <desc></desc></name>	Specifies a brief description for an IPv4 firewall rule set.
firewall name <name> enable-default-log</name>	Logs packets that reach the default action.
firewall name <name> rule <rule-num></rule-num></name>	Defines a rule within an IPv4 firewall rule set.
firewall name <name> rule <rule-num> action <action></action></rule-num></name>	Specifies the action to perform on matched packets.
firewall name <name> rule <rule-num> description <desc></desc></rule-num></name>	Specifies a brief description for an IPv4 firewall rule.
firewall name <name> rule <rule-num> destination</rule-num></name>	Specifies the destination address and, optionally, port to match in an IPv4 firewall rule.
firewall name <name> rule <rule-num> destination group</rule-num></name>	Specifies a group or addresses, ports, or networks for packet destination address matching in an IPv4 firewall rule.
firewall name <name> rule <rule-num> disable</rule-num></name>	Disables a firewall rule.
firewall name <name> rule <rule-num> fragment</rule-num></name>	Specifies matching for fragmented packets.
firewall name <name> rule <rule-num> icmp</rule-num></name>	Specifies ICMP code and type settings for a firewall rule.
firewall name <name> rule <rule-num> ipsec</rule-num></name>	Specifies IPSEC packet matching.
firewall name <name> rule <rule-num> limit</rule-num></name>	Specifies traffic rate limiting parameters for a firewall rule.
firewall name <name> rule <rule-num> log <state></state></rule-num></name>	Enables or disables logging of firewall rule actions.
firewall name <name> rule <rule-num> p2p <app_name></app_name></rule-num></name>	Specifies a P2P application to which a firewall rule applies.
firewall name <name> rule <rule-num> protocol <protocol></protocol></rule-num></name>	Specifies the protocol to which a firewall rule applies.
firewall name <name> rule <rule-num> recent</rule-num></name>	Specifies the parameters to match recently seen sources.
firewall name <name> rule <rule-num> source</rule-num></name>	Specifies the source address and port to match in a firewall rule.
firewall name <name> rule <rule-num> source group</rule-num></name>	Specifies a group or addresses, ports, or networks for packet source address matching in an IPv4 firewall rule.

firewall name <name> rule <rule-num> state</rule-num></name>	Specifies the kinds of packets to which this rule is applied.
firewall name <name> rule <rule-num> tcp flags</rule-num></name>	Specifies the TCP flags to match in a firewall rule.
firewall name <name> rule <rule-num> time</rule-num></name>	Specifies the times at which this rule is applied.

firewall all-ping <state>

Enables or disables response to all IPv4 ICMP Echo Request (ping) messages.

Syntax

```
set firewall all-ping {enable | disable}
delete firewall all-ping
show firewall all-ping
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   all-ping state
}
```

Parameters

enable	The system responds to IPv4 ICMP Echo Request messages.
disable	The system does not respond to IPv4 ICMP Echo Request messages.

Default

The system responds to IPv4 ICMP Echo Request messages.

Usage Guidelines

Use this command to specify whether the system responds to IPv4 ICMP Echo Request messages (pings). This includes all ping messages: unicast, broadcast, or multicast.

Pings are a network tool used to establish the reachability of a device from the local system. Pings are often disallowed as a potential means of Denial of Service (DoS) attacks.

Use the set form of this command to enable or disable responses to pings.

Use the delete form of this command to restore the default behavior for responses to pings.

Use the **show** form of this command to view ping processing configuration.

firewall broadcast-ping <state>

Enables or disables response to broadcast IPv4 ICMP Echo Request and Timestamp Request messages.

Syntax

```
set firewall broadcast-ping {enable | disable}
delete firewall broadcast-ping
show firewall broadcast-ping
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   broadcast-ping state
```

Parameters

enable	The system responds to broadcast IPv4 ICMP Echo and Timestamp Request messages.
disable	The system does not respond to broadcast IPv4 ICMP Echo and Timestamp Request messages.

Default

IPv4 ICMP Echo and Timestamp Request messages are not processed.

Usage Guidelines

Use this command to specify whether the system processes broadcast IPv4 ICMP Echo Request and broadcast IPv4 ICMP Timestamp Request messages.

Pings are a network tool used to establish the reachability of a device from the local system. Pings, and particularly broadcast pings are often disallowed because of the potential of a Denial of Service (DoS) attack. Timestamp requests are used by to

query another device for the current date and time. Broadcast timestamp requests are also often disallowed, both because of the potential for a DoS attack and because the query allows an attacker to learn the date set on the queried machine.

Use the set form of this command to specify whether the system responds to broadcast ICMP IPv4 ICMP Echo and Timestamp Request messages.

Use the delete form of this command to restore the default behavior for responding to these messages.

Use the show form of this command to view configured behavior for responding to these messages.

firewall group

Defines a group of objects for referencing in firewall rules.

Syntax

```
set firewall group
delete firewall group
show firewall group
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   group {}
}
```

Parameters

None.

Default

None.

Usage Guidelines

Use this command to define a group of objects that can be firewall group configuration. A firewall group is a mechanism for grouping various network objects and matching any of the elements in the group rather than having to specify them individually. You can create groups of addresses, networks, or interfaces.

The firewall group configuration node is a multi-node: you can define multiple groups by creating multiple firewall group configuration nodes.

Use the set form of this command to create the firewall group configuration.

Use the **delete** form of this command to remove a firewall group.

Use the **show** form of this command to view firewall group configuration.

firewall group address-group <group-name>

Defines a group of IP addresses for referencing in firewall rules.

Syntax

set firewall group address-group *group-name* {address | description *desc*} delete firewall group address-group group-name {address | description} show firewall group address-group group-name {address | description}

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   group {
       address-group group-name {
           address address
           description desc
       }
   }
}
```

Parameters

group-name	Mandatory. The name of the firewall address group.
address address	Mandatory. Adds the specified IPv4 address or range of IPv4 addresses to the specified address group. IPv4 address ranges are specified by separating two contiguous IPv4 addresses with a hyphen; for example, 10.0.0.1-10.0.0.50.
description desc	Allows you to specify a brief description for the address group.

Default

None.

Usage Guidelines

Use this command to specify an address group. An address group is a collection of host IP addresses and address ranges which, once defined, can be collectively referenced within a firewall command.

An address group is considered matched if the packet address matches any address or address range within the group.

Use the set form of this command to specify the address group.

Use the delete form of this command to remove the address group or its members.

Use the **show** form of this command to view the address group configuration.

firewall group network-group <group-name>

Defines a group of networks for referencing in firewall rules.

Syntax

set firewall group network-group *group-name* {network *ipv4net* | description *desc*} delete firewall group network-group group-name {network ipv4net | description *desc*}

show firewall group network-group *group-name* {network *ipv4net* | description}

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   group {
       network-group group-name {
          description desc
          network ipv4net
   }
}
```

Parameters

group-name	Mandatory. The name of the firewall network group.
network ipv4net	Mandatory. Adds an IPv4 network to the specified network group. The format is <i>ip-address/prefix</i> .
description desc	Allows you to specify a brief description for the network group.

Default

None.

Usage Guidelines

Use this command to define a network group. A network group is a collection of network addresses which, once defined, can be collectively referenced within a firewall command.

A network group is considered matched if the packet address matches any network address or address range within the group.

Use the set form of this command to define a network group.

Use the **delete** form of this command to remove the network group or its members.

Use the **show** form of this command to view network group configuration.

firewall group port-group <group-name>

Defines a a group of ports for referencing in firewall rules.

Syntax

set firewall group port-group *group-name* {port port | description desc} delete firewall group port-group group-name {port port | description} show firewall group port-group group-name {port port | description}

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   group {
       port-group group-name {
          description desc
           port port
       }
   }
}
```

Parameters

group-name	Mandatory. The name of the firewall port group.
port port	Mandatory. Adds a port number to the specified port group. Supported formats include a port name (any name in /etc/services), a port number, or a hyphen-separated range of port numbers; for example, 1001-1050.
description desc	Allows you to specify a brief description for the port group.

Default

None.

Usage Guidelines

Use this command to specify a port group. A port group is a collection of port names, port numbers, and port number ranges which, once defined, can be collectively referenced within a firewall command.

A port group is considered matched if the packet port matches any port name or number within the group.

Use the set form of this command to specify a port group.

Use the delete form of this command to remove the port group or its members.

Use the **show** form of this command to view port group configuration.

firewall ip-src-route <state>

Specifies whether to process packets with the Loose Source Route or Strict Source Route IP options.

Syntax

```
set firewall ip-src-route {enable | disable}
delete firewall ip-src-route
show firewall ip-src-route
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ip-src-route state
```

Parameters

enable	Processes packets with source routing IP options set.
disable	Does not process packets with source routing IP options set.

Default

The default is disable.

Usage Guidelines

Use this command to specify whether to permit or deny packets with the Loose Source Route or Strict Source Route IP options.

Source routing allows applications to override the routing tables and specify one or more intermediate destinations for outgoing datagrams. This capability is sometimes used for troubleshooting, but renders the network vulnerable to attacks where network traffic is transparently directed to a centralized collection point for packet capture.

Use the set form of this command to specify whether or not to process source route IP options.

Use the delete form of this command to restore the default behavior for source route IP options.

Use the **show** form of this command to view source route IP option configuration.

firewall log-martians <state>

Specifies whether to log packets with invalid addresses.

Syntax

```
set firewall log-martians state
delete firewall log-martians
show firewall log-martians
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   log-martians state
}
```

Parameters

state

Specifies whether or not to record packets with invalid addresses in the log. Supported values are as follows:

enable: Logs packets with invalid addresses.

disable: Does not log packets with invalid addresses.

Default

Packets with invalid addresses are logged.

Usage Guidelines

Use this command to specify whether to log packets with invalid addresses.

Use the set form of this command to set the logging behavior for packets with invalid addresses.

Use the delete form of this command to restore the default behavior for packets with invalid addresses.

Use the **show** form of this command to view configuration information for packets with invalid addresses.

firewall name < name>

Defines an IPv4 firewall rule set.

Syntax

```
set firewall name name
delete firewall name [name]
show firewall name [name]
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {}
}
```

Parameters

name

Multinode. The name of the firewall rule set. The name must not contain a space or any other of the following special characters: "|", ";", "&", "\$", "<", or ">". The name can be up to 28 characters long.

You can define multiple IPv4 firewall rule sets by creating more than one name configuration node.

Default

None.

Usage Guidelines

Use this command to define an IPv4 firewall rule set.

A firewall rule set is a named collection of up to 9999 packet-filtering rules. Following the configurable rules is an implicit rule, rule 10000, which denies all traffic.

NOTE The "deny all" rule stays in effect until every reference to the rule set is removed; that is, until every packet filter referencing the rule set has been removed from all interfaces.

Use the set form of this command to create or modify an IPv4 firewall rule set.

Use the delete form of this command to remove an IPv4 firewall rule set.

Use the **show** form of this command to view firewall rule set configuration.

firewall name < name > default-action < action >

Sets the default action for an IPv4 rule set.

Syntax

set firewall name name default-action action delete firewall name name default-action show firewall name name default-action

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       default-action action
}
```

Parameters

name	The name of the firewall rule set.
action	The default action to take if no matches are found within a rule set. Supported values are as follows:
	accept: Accepts the packet.
	drop: Drops the packet silently.
	reject: Drops the packet with an ICMP "Destination Unreachable" message.

Default

If an action is not specified, packets not matching any rules in the rule set are silently dropped."

Usage Guidelines

Use this command to specify a default action to take for packets not matching any rule in an IPv4 rule set.

Packets not matching any rules within a rule set "fall through" to the default policy. By default, the action taken is to silently drop unmatched packets.

Use the set form of this command to set the default action for an IPv4 rule set rule set.

Use the delete form of this command to restore the default behavior for unmatched packets.

Use the **show** form of this command to view default policy configuration.

firewall name < name > description < desc>

Specifies a brief description for an IPv4 firewall rule set.

Syntax

set firewall name name description desc delete firewall name name description show firewall name name description

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       description desc
}
```

Parameters

name	The name of the firewall rule set.
desc	A description for the rule set. If the description contains spaces, it must be enclosed in double quotes.

Default

None.

Usage Guidelines

Use this command to specify a description for an IPv4 firewall rule set.

Use the set form of this command to add or modify the description.

Use the delete form of this command to remove the description.

Use the **show** form of this command to view description configuration.

firewall name < name > enable-default-log

Logs packets that reach the default action.

Syntax

set firewall name name enable-default-log delete firewall name name enable-default-log show firewall name name

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       enable-default-log
}
```

Parameters

The name of the firewall rule set. name

Default

Packets reaching the default action are not logged.

Usage Guidelines

Use this command to log packets that reach the default action.

Use the set form of this command to log packets that reach the default action.

Use the delete form of this command to restore the default behavior for packets that reach the default action.

Use the **show** form of this command to view the configuration.

firewall name <name> rule <rule-num>

Defines a rule within an IPv4 firewall rule set.

Syntax

```
set firewall name name rule rule-num
delete firewall name name rule [rule-num]
show firewall name name rule [rule-num]
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {}
}
```

Parameters

name	The name of the firewall rule set.
rule-num	Multinode. The numeric identifier of the rule. Rule numbers determine the order in which rules are executed. Each rule must have a unique rule number. The range is 1 to 9999.
	You can define multiple rules by creating more than one rule configuration node.

Default

None.

Usage Guidelines

Use this command to define a rule within an IPv4 firewall rule set.

A firewall rule set consists of up to 9999 configurable rules. Following the last configured rule, a system rule (rule 10000) with an action of "deny all" is applied. Firewall rules are executed in numeric sequence, from lowest to highest. You cannot directly change a rule number, because it is the identifier of a configuration node; however, you can renumber rules using the rename command.

To avoid having to renumber firewall rules, a good practice is to number rules in increments of 10. This allows room for the insertion of new rules within the rule set.

Use the set form of this command to create or modify a firewall rule within an IPv4 firewall rule set.

Use the delete form of this command to remove a rule from an IPv4 firewall rule set. Use the **show** form of this command to view firewall rule configuration.

firewall name <name> rule <rule-num> action <action>

Specifies the action to perform on matched packets.

Syntax

set firewall name name rule rule-num action action delete firewall name name rule rule-num action show firewall name name rule rule-num action

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
          action action
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
action	The action to be taken when a packet satisfies the criteria specified in the rule. Supported values are as follows:
	accept: Accepts and forwards matched packets.
	drop: Silently drops matched packets.
	inspect: Forwards matched packets to the intrusion protection system (IPS). Packets forwarded to the IPS are processed by the content-inspection traffic-filter command.
	reject: Drops matched packets with an ICMP "Destination Unreachable" message.

Packets are silently dropped.

Usage Guidelines

Use this command to specify the action to perform on packets matching the criteria specified in this firewall rule. Only one action can be defined per rule.

Use the set form of this command to specify the action to perform on matched packets.

Use the delete form of this command to restore the default action for matched packets.

Use the show form of this command to view firewall rule action configuration.

firewall name <name> rule <rule-num> description <desc>

Specifies a brief description for an IPv4 firewall rule.

Syntax

set firewall name name rule rule-num description desc delete firewall name name rule rule-num description show firewall name name rule rule-num description

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
           description desc
       }
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
desc	A brief description for this rule. If the description contains spaces, it must be enclosed in double quotes.

Default

None.

Usage Guidelines

Use this command to specify a brief description for a firewall rule.

Use the set form of this command to set the description.

Use the delete form of this command to remove the description.

Use the **show** form of this command to view description configuration.

firewall name < name > rule < rule - num > destination

Specifies the destination address and, optionally, port to match in an IPv4 firewall rule.

Syntax

set firewall name name rule rule-num destination [address address | port port] delete firewall name name rule rule-num destination [address | port] show firewall name name rule rule-num destination [address | port]

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
           destination {
              address address
              port port
           }
       }
   }
}
```

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.

The destination address to match. Supported formats are as follows:
ip-address: An IPv4 address.
<i>ip-address/prefix</i> : A network address, where 0.0.0.0/0 matches any network.
<i>ip-address–ip-address</i> : A range of contiguous IP addresses; for example, 192.168.1.1–192.168.1.150.
!ip-address: Matches all IP addresses except the one specified.
!ip-address/prefix: Matches all network addresses except the one specified.
!ip-address-ip-address: Matches all IP addresses except those in the specified range.
Applicable only when the protocol is TCP or UDP. The destination port to match. Supported formats are as follows:
port-name: Matches the name of an IP service; for example, http. You can specify any service name in the file /etc/services.
port-num: Matches a port number. The range is 1 to 65535.
start–end: Matches the specified range of ports; for example, 1001–1005.
You can use a combination of these formats in a comma-separated list. You can also negate the entire list by prepending it with an exclamation mark ("!"); for example,!22,telnet,http,123,1001-1005.

None.

Usage Guidelines

Use this command to specify the destination in an IPv4 firewall rule.

If both address and port are specified, the packet is considered a match only if both the address and the port match.

Use the set form of this command to specify or modify a firewall destination.

Use the delete form of this command to remove a firewall destination.

Use the show form of this command to view firewall destination configuration.

firewall name <name> rule <rule-num> destination group

Specifies a group or addresses, ports, or networks for packet destination address matching in an IPv4 firewall rule.

Syntax

set firewall name name rule rule-num destination group [address-group] addr-group-name | network-group net-group-name | port-group port-group-name]

delete firewall name name rule rule-num destination group [address-group addr-group-name | network-group net-group-name | port-group port-group-name]

show firewall name name rule rule-num destination group [address-group | network-group | port-group]

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
           destination {
              group {
                  address-group addr-group-name
                  network-group net-group-name
                  port-group port-group-name
              }
           }
       }
   }
}
```

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.

address-group addr-group-name	Matches the destination host IP address in packets against the specified address group. The packet is considered a match if it matches any address specified in the group. Only one address group may be specified. The address group must already be defined.
network group net-group-name	Matches the destination network address in packets against the specified network group. The packet is considered a match if it matches any address specified in the group. Only one network group may be specified. The network group must already be defined.
port-group port-group-name	Matches the destination port packets against the specified port group. The packet is considered a match if it matches any port name or number specified in the group. Only one port group may be specified. The port group must already be defined.

None.

Usage Guidelines

Use this command to use a defined firewall group as a destination.

A packet is considered a match for an address, a network, or a port group if it matches any host IP address, network address, or port name or number, respectively, in the group. However, if more than one group is specified, the packet must be a match for both groups in order to be considered a match. For example, if an address group and a port group are both specified, the packet's destination must match at least one item in the address group and at least one item in the port group.

An address group may be specified together with a port group, and a network group may be specified together with a port group. You cannot specify both an address and a network group

Use the set form of this command to specify a firewall destination group to match.

Use the **delete** form of this command to remove a firewall destination group.

Use the **show** form of this command to view firewall destination group configuration.

firewall name <name> rule <rule-num> disable

Disables a firewall rule.

Syntax

set firewall name name rule rule-num disable delete firewall name name rule rule-num disable show firewall name name rule rule-num

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
          disable
   }
}
```

Parameters

пате	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
disable	Disables the specified firewall rule.

Default

The rule is enabled.

Usage Guidelines

Use this command to disable a firewall rule. This is a useful way to test how the firewall performs without a specific rule without having to delete and then re-enter the rule.

Use the set form of this command to disable a firewall rule.

Use the delete form of this command to remove the configuration. Use the **show** form of this command to view the configuration.

firewall name <name> rule <rule-num> fragment

Specifies matching for fragmented packets.

Syntax

set firewall name name rule rule-num fragment {match-frag|match-non-frag} delete firewall name name rule rule-num fragment [match-frag|match-non-frag] show firewall name name rule rule-num fragment

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
           fragment {
              match-frag
              match-non-frag
           }
       }
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
match-frag	Match the second and later fragments of a fragmented packet.
match-non-frag	Match only the first fragment of a fragmented packet or unfragmented packets.

Default

None.

Usage Guidelines

Use this command to specify how to match fragmented packets.

Use the set form of this command to specify how to match fragmented packets.

Use the delete form of this command to remove the configuration.

Use the **show** form of this command to view the configuration.

firewall name <name> rule <rule-num> icmp

Specifies ICMP code and type settings for a firewall rule.

Syntax

set firewall name name rule rule-num icmp {type type | code code | type-name type-name}

delete firewall name name rule rule-num icmp [type | code | type-name] show firewall name *name* rule *rule-num* icmp [type | code | type-name]

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
           icmp {
              type type
              code code
              type-name type-name
           }
       }
   }
}
```

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
type	A valid ICMP type code from 0 to 255; for example, 8 (Echo Request), or 0 (Echo Reply).
	For a list of ICMP codes and types, see "Appendix A: ICMP Types."

code	The ICMP type code associated with this ICMP type. The range is 0 to 255.
	For a list of ICMP codes and types, see "Appendix A: ICMP Types."
type-name	An ICMP type name. The default is any.
	For a list of ICMP codes and types, see "Appendix A: ICMP Types."

None.

Usage Guidelines

Use this command to define the ICMP types this rule applies to—for example Echo Request or Echo Reply. Packets having this ICMP type will "match" the rule.

Use the set form of this command to specify the ICMP code and type for the specified rule

Use the delete form of this command to remove the ICMP code or type value for the specified rule.

Use the show form of this command to view the ICMP code or type value for the specified rule.

firewall name <name> rule <rule-num> ipsec

Specifies IPSEC packet matching.

Syntax

set firewall name *name* rule *rule-num* ipsec {match-ipsec|match-none} delete firewall name name rule rule-num ipsec [match-ipsec|match-none] show firewall name name rule rule-num ipsec

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
           ipsec {
              match-ipsec
              match-none
       }
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
match-ipsec	Match inbound IPsec packets.
match-none	Match inbound non-IPsec packets.

Default

None.

Usage Guidelines

Use this command to specify whether to match IPsec or non-IPsec packets.

Use the set form of this command to specify which type of packets to match.

Use the delete form of this command to remove the configuration.

Use the **show** form of this command to view the configuration.

firewall name <name> rule <rule-num> limit

Specifies traffic rate limiting parameters for a firewall rule.

Syntax

set firewall name name rule rule-num limit {burst size | rate rate} delete firewall name name rule rule-num limit [burst | rate] show firewall name name rule rule-num limit [burst | rate]

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
           limit {
              burst size
              rate rate
           }
       }
   }
}
```

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
size	The size of the burst buffer. This is the maximum number of packets that can be sent as a burst in excess of the specified token rate given available tokens in the buffer. The default is 1, which provides no bursting above the specified rate.
rate	The maximum average rate of data traffic for packets matching the rule. Supported time units are: second, minute, hour, and day. The rate is specified in the format "X/ <time unit="">". For example "2/second" limits the packets matching the rule to two per second.</time>

No imposed limit.

Usage Guidelines

Use this command to limit the traffic rate of packets matching the rule. The limit option employs the Token Bucket Filter (TBF) queuing mechanism within firewall to limit the rate of incoming packets to an administatively set rate but with the possibility of allowing short bursts in excess of this rate.

The TBF implementation consists of a buffer (bucket), constantly filled by some virtual pieces of information called tokens, at a specific rate (token rate). The most important parameter of the bucket is its size, that is the number of tokens it can store. Each arriving token collects one incoming data packet from the data queue and is then deleted from the bucket. Associating this algorithm with the two flows -- token and data, gives us three possible scenarios:

- 1) The data arrives in the TBF at a rate that's equal to the rate of incoming tokens. In this case each incoming packet has its matching token and passes the queue without delay.
- 2) The data arrives in the TBF at a lower rate than the token rate. Only a part of the tokens are deleted at output of each data packet that's sent out the queue, so the tokens accumulate, up to the bucket size. The unused tokens can then be used to send data at a speed that's exceeding the standard token rate, in case short data bursts occur.
- 3) The data arrives in the TBF at a greater rate than the token rate. This means that the bucket will soon be devoid of tokens, which causes the TBF to throttle itself for a while. This is called an 'overlimit situation'. If packets keep coming in, packets will start to get dropped.

The limit option "rate" relates to the "token rate" as described in the above algorithm while the limit option "burst" relates to the "bucket size". The implementation of these values is explained below:

rate - If set, this rule will match packets at the specified maximum average rate. Any of the following time units can be used to specify rate: second, minute, hour, day.

For example, a value of 1/second implies that the rule be matched at an average of once per second.

burst - If set, this rule will match packets specified by this value in excess of rate. By default, this value is set to 1. so if you don't want to bother with short bursts of packets and want to simply rate limit at the specified rate then you do not have to worry about this option.

Use the set form of this command to specify the traffic limit for the specified rule Use the delete form of this command to remove the traffic limit for the specified rule. Use the **show** form of this command to view the traffic limit for the specified rule.

firewall name <name> rule <rule-num> log <state>

Enables or disables logging of firewall rule actions.

Syntax

set firewall name name rule rule-num log state delete firewall name name rule rule-num log show firewall name name rule rule-num log

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
           log state
   }
}
```

Parameters

The name of the firewall rule set.
The numeric identifier of the rule. The range is 1 to 9999.
Enables or disables logging of firewall actions. Supported values are as follows:
enable: Log when action is taken.
disable: Do not log when action is taken.

Default

Actions are not logged.

Usage Guidelines

Use this command to enable or disable logging for the specified rule. When enabled, any actions taken will be logged.

Use the set form of this command to specify logging for the specified rule

Use the delete form of this command to remove the logging value for the specified rule.

Use the **show** form of this command to view the logging value for the specified rule.

firewall name <name> rule <rule-num> p2p <app_name>

Specifies a P2P application to which a firewall rule applies.

Syntax

set firewall name name rule rule-num p2p app_name delete firewall name name rule rule-num p2p app_name show firewall name name rule rule-num p2p

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
          p2p appname
   }
}
```

The name of the firewall rule set.
The numeric identifier of the rule. The range is 1 to 9999.
Mandatory. Match P2P application packets. Supported values are as follows:
all: Match packets sent by any of the applications listed below.
applejuice: Match packets sent by AppleJuice applications.
bittorrent: Match packets sent by BitTorrent applications.
directconnect: Match packets sent by Direct Connect applications.
edonkey: Match packets sent by eDonkey/eMule applications.
gnutella: Match packets sent by Gnutella applications.
kazaa: Match packets sent by KaZaA applications.

None.

Usage Guidelines

Use this command to define to which P2P application a firewall rule applies. Packets to or from this application will "match" the rule. Multiple P2P options can be specified in a rule to match multiple P2P applications.

Use the set form of this command to specify the P2P application to match for the specified rule

Use the delete form of this command to remove the P2P application value for the specified rule.

Use the show form of this command to view the P2P application value for the specified rule.

firewall name <name> rule <rule-num> protocol col>

Specifies the protocol to which a firewall rule applies.

Syntax

set firewall name name rule rule-num protocol protocol delete firewall name name rule rule-num protocol show firewall name name rule rule-num protocol

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
          protocol protocol
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
protocol	Mandatory. Any protocol literals or numbers listed in the file /etc/protocols can be used. The keywords tcp_udp (for both TCP and UDP) and all (for all protocols) are also supported.
	Prefixing the protocol name with the exclamation mark character ("!") matches every protocol except the specified protocol. For example, !tcp matches all protocols except TCP.

Default

The default is all.

Usage Guidelines

Use this command to define to which protocol a firewall rule applies. Packets using this protocol will "match" the rule.

Note that you should take care in using more than one "exclusion" rule (that is, a rule using the negation operation ("!") in combination. Firewall rules are evaluated sequentially, and a sequence of exclusion rules could result in unexpected behavior.

Use the set form of this command to specify the protocol to match for the specified

Use the delete form of this command to remove the protocol value for the specified rule.

Use the **show** form of this command to view the protocol value for the specified rule.

firewall name <name> rule <rule-num> recent

Specifies the parameters to match recently seen sources.

Syntax

set firewall name name rule rule-num recent [count count | time seconds] delete firewall name name rule rule-num recent [count | time] show firewall name name rule rule-num recent [count | time]

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
           recent {
              count count
              time seconds
           }
       }
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
count	Mandatory. The number of times the same source IP address is seen within the specified time period. The range is 0 to 255.
seconds	Mandatory. The amount of time, in seconds, to look for "count" connection attempts from the same source.

Default

None.

Usage Guidelines

Use this command to match recently seen sources. The most common use for this is to help prevent "brute force" attacks where an external device is opening a continuous flow of connections (e.g. to SSH) in an attempt to break into the system. Because the external host will be an unknown source, the "recent" list allows the firewall to match packets based on the external host's behavior without initially knowing it's address.

Use the set form of this command to specify the "recent" configuration.

Use the delete form of this command to remove the "recent" configuration.

Use the show form of this command to view firewall "recent" configuration.

firewall name <name> rule <rule-num> source

Specifies the source address and port to match in a firewall rule.

Syntax

```
set firewall name name rule rule-num source [address address |
mac-address mac-addr | port port ]
delete firewall name name rule rule-num source [address | mac-address | port]
show firewall name name rule rule-num source [address | mac-address | port]
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
           source {
              address address
              mac-address mac-addr
              port port
           }
       }
   }
}
```

пате	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.

address	The source address to match. The following formats are valid:
	ip-address: Matches the specified IP address.
	<i>ip-address/prefix</i> : A network address, where 0.0.0.0/0 matches any network.
	<i>ip-address–ip-address</i> : Matches a range of contiguous IP addresses; for example, 192.168.1.1–192.168.1.150.
	!ip-address: Matches all IP addresses except the one specified.
	!ip-address/prefix: Matches all network addresses except the one specified.
	!ip-address-ip-address: Matches all IP addresses except those in the specified range.
mac-addr	The media access control (MAC) address to match. The format is 6 colon-separated 8-bit numbers in hexadecimal; for example, 00:0a:59:9a:f2:ba.
port	The source port to match. The following formats are valid:
	port-name: Matches the name of an IP service; for example, http. You can specify any service name in the file etc/services.
	port-num: Matches a port number. The range is 1 to 65535.
	start–end: Matches the specified range of ports; for example, 1001–1005.
	You can use a combination of these formats in a comma-separated list. You can also negate the entire list by prepending it with an exclamation mark ("!"); for example, !22,telnet,http,123,1001-1005.

None.

Usage Guidelines

Use this command to specify the source to match in a firewall rule.

Note that you should take care in using more than one "exclusion" rule (that is, a rule using the negation operation ("!") in combination. NAT rules are evaluated sequentially, and a sequence of exclusion rules could result in unexpected behavior.

Use the set form of this command to create a firewall source.

Use the delete form of this command to remove a firewall source.

Use the **show** form of this command to view firewall source configuration.

firewall name <name> rule <rule-num> source group

Specifies a group or addresses, ports, or networks for packet source address matching in an IPv4 firewall rule.

Syntax

set firewall name name rule rule-num source group [address-group addr-group-name | network-group net-group-name | port-group port-group-name |

delete firewall name name rule rule-num source group [address-group addr-group-name | network-group net-group-name | port-group port-group-name]

show firewall name name rule rule-num source group [address-group | network-group | port-group]

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
           source {
              group {
                  address-group addr-group-name
                  network-group net-group-name
                  port-group port-group-name
              }
           }
       }
   }
}
```

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.

address-group addr-group-name	Multinode. Matches the source IP address in packets against the specified address group.
	Only one address group may be specified. The address group must already be defined.
network group net-group-name	Multinode. Matches the source network address in packets against the specified network group.
	Only one network group may be specified. The network group must already be defined.
port-group port-group-name	Matches the source port packets against the specified port group.
	Only one port group may be specified. The port group must already be defined.

None.

Usage Guidelines

Use this command to specify the source group to match in a firewall rule.

Note that you should take care in using more than one "exclusion" rule (that is, a rule using the negation operation ("!") in combination. Firewall rules are evaluated sequentially, and a sequence of exclusion rules could result in unexpected behavior.

Use the set form of this command to specify a firewall source group to match.

Use the delete form of this command to remove a firewall source group.

Use the **show** form of this command to view firewall source group configuration.

firewall name <name> rule <rule-num> state

Specifies the kinds of packets to which this rule is applied.

Syntax

set firewall name name rule rule-num state {established state | invalid state | new state | related *state*}

delete firewall name name rule rule-num state

show firewall name name rule rule-num state

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
           state {
                  established state
                  invalid state
                  new state
                  related state
           }
       }
   }
}
```

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
established state	Specifies whether or not the rule will be applied to established packets. Supported values are as follows:
	enable: Applies the rule to established packets.
	disable: Does not apply the rule to established packets.

invalid state	Specifies whether or not the rule will be applied to invalid packets. Supported values are as follows:
	enable: Applies the rule to invalid packets.
	disable: Does not apply the rule to invalid packets.
new state	Specifies whether or not the rule will be applied to new packets. Supported values are as follows:
	enable: Applies the rule to new packets.
	disable: Does not apply the rule to new packets.
related state	Specifies whether or not the rule will be applied to related packets. Supported values are as follows:
	enable: Applies the rule to related packets.
	disable: Does not apply the rule to related packets.

The rule is applied to all packets, regardless of state.

Usage Guidelines

Use this command to specify the kind of packets this rule will be applied to.

- Established packets are packets that are part of a connection that has seen packets in both directions; for example, a reply packet, or an outgoing packet on a connection that has been replied to.
- *Invalid* packets are packets that could not be identified for some reason. These might include the system running out of resource, or ICMP errors that do not correspond to any known connection. Generally these packets should be dropped.
- *New* packets are packets creating new connections. For TCP, this will be packets with the SYN flag set.
- Related packets are packets related to existing connections.

Use the set form of this command to specify the kind of packets a firewall rule will be applied to.

Use the delete form of this command to restore the default behavior.

Use the **show** form of this command to view state configuration for a firewall rule.

firewall name <name> rule <rule-num> tcp flags

Specifies the TCP flags to match in a firewall rule.

Syntax

set firewall name name rule rule-num tcp flags flags delete firewall name name rule rule-num tcp flags show firewall name name rule rule-num tcp flags

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
          tcp {
              flags flags
           }
       }
   }
}
```

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
flags	Specifies which TCP flags to match. Supported values are SYN,
	ACK, FIN, RST, URG, PSH, and ALL. When specifying more than one flag, they should be comma-separated. For example, "SYN, !ACK, !FIN, !RST" will only match packets with the SYN flag set and the ACK, FIN, and RST flags unset. ALL can be used to check if all flags are set and !ALL can be used to check for no flags set. Prefixing the flag name with "!" matches an unset value of the flag.

None.

Usage Guidelines

Use this command to match TCP flags in a firewall rule.

Use the set form of this command to specify the TCP flags to match.

Use the delete form of this command to restore the default behavior.

Use the **show** form of this command to view the TCP flags configuration for a firewall rule.

firewall name <name> rule <rule-num> time

Specifies the times at which this rule is applied.

Syntax

set firewall name name rule rule-num time {monthdays days-of-month | startdate date | starttime time | stopdate date | stoptime time | utc | weekdays days-of-week}

delete firewall name name rule rule-num time

show firewall name name rule rule-num time

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   name name {
       rule rule-num {
          time {
              monthdays days-of-month
              startdate date
              starttime time
              stopdate date
              stoptime time
              utc
              weekdays days-of-week
          }
       }
   }
}
```

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.

monthdays days-of-month	Specifies which days in the month the rule will be applied. Supported values are days of the month (1 to 31) within a comma-separated list (e.g. 2,12,21). The "!" character can be used to negate a list of values (e.g. !2,12,21). This indicates that the firewall rule is to be applied on all but the specified days.
startdate date	Specifies the start of a period of time in which the firewall rule will be applied. Set the date, and optionally the time, using one of the following formats:
	yyyy-mm-dd (e.g. 2009-03-12)
	yyyy-mm-ddThh:mm:ss (e.g. 2009-03-12T17:30:00)
	The default is 1970-01-01. Note that if the time is specified that it is 24 hour format (valid values are from 00:00:00 to 23:59:59). If the time is not specified the default is the start of the day on the specified date (i.e. 00:00:00).
	Use stopdate to end the activation period.
starttime time	Specifies the start of a period of time in the day to which the firewall rule will be applied. Set the start time using the following format:
	hh:mm:ss (e.g. 17:30:00)
	Note that the time is specified in 24 hour format (valid values are from 00:00:00 to 23:59:59).
	Use stoptime to end the activation period.
stopdate date	Specifies the end of a period of time in which the firewall rule will be applied. Set the date, and optionally the time, using one of the following formats:
	yyyy-mm-dd (e.g. 2009-03-12)
	yyyy-mm-ddThh:mm:ss (e.g. 2009-03-12T17:30:00)
	The default is 2038-01-19. Note that if the time is specified that it is 24 hour format (valid values are from 00:00:00 to 23:59:59). If the time is not specified the default is the start of the day on the specified date (i.e. 00:00:00).
	Use startdate to begin the activation period.

stoptime time	Specifies the end of a period of time in the day to which the firewall rule will be applied. Set the stop time using the following format:	
	hh:mm:ss (e.g. 17:30:00)	
	Note that the time is specified in 24 hour format (valid values are from 00:00:00 to 23:59:59).	
	Use starttime to begin the activation period.	
utc	Specifies that times given using startdate , stopdate , starttime , and stoptime , should be interpreted as UTC time rather than local time.	
weekdays days-of-week	Specifies which days in the week the rule will be applied. Supported values are days of the week (Mon, Tue, Wed, Thu, Fri, Sat, and Sun) within a comma-separated list (e.g. Mon, Wed, Fri). The "!" character can be used to negate a list of values (e.g. !Mon, Wed, Fri). This indicates that the firewall rule is to be applied on all but the specified days of the week.	

Default

The rule is applied at all times.

Usage Guidelines

Use this command to restrict the times during which the rule will be applied. All values are optional and are ANDed when specified.

Use the set form of this command to specify the times at which a firewall rule will be applied.

Use the delete form of this command to restore the default behavior.

Use the **show** form of this command to view time configuration for a firewall rule.

firewall receive-redirects <state>

Specifies whether to process IPv4 ICMP redirect messages.

Syntax

```
set firewall receive-redirects {enable | disable}
delete firewall receive-redirects
show firewall receive-redirects
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   receive-redirects state
}
```

Parameters

state

Permits or denies receiving IPv4 ICMP redirect messages.

Supported values are as follows:

enable: Permits IPv4 ICMP redirects to be received.

disable: Denies IPv4 ICMP redirects from being received.

Default

The default is disable.

Usage Guidelines

Use this command to specify whether to accept IPv4 ICMP redirects. ICMP redirects can allow an arbitrary sender to forge packets and alter the system's routing table. This can leave the system open to a man-in-the-middle attack.

Use the set form of this command to specify whether to accept IPv4 ICMP redirects.

Use the **delete** form of this command to remove the specified value.

Use the **show** form of this command to view the specified value.

firewall send-redirects <state>

Specifies whether to allow sending of IPv4 ICMP redirect messages.

Syntax

```
set firewall send-redirects {enable | disable}
delete firewall send-redirects
show firewall send-redirects
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   send-redirects state
}
```

Parameters

state

Permits or denies transmitting packets IPv4 ICMP redirect

messages. Supported values are as follows:

enable: Permits IPv4 ICMP redirects to be sent.

disable: Denies IPv4 ICMP redirects from being sent.

Default

The default is enable.

Usage Guidelines

Use this command to specify whether to allow sending of IPv4 ICMP redirect messages. Sending a redirect will potentially alter the routing table of the host or router to which the redirect is sent.

Use the set form of this command to specify whether to permit or deny the sending IPv4 ICMP redirects.

Use the delete form of this command to remove the specified value.

Use the **show** form of this command to view the specified value.

firewall source-validation <state>

Specifies a policy for source validation by reversed path, as defined in RFC 3704.

Syntax

```
set firewall source-validation {disable | loose | strict}
delete firewall source-validation
show firewall source-validation
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   source-validation state
}
```

Parameters

state

Specifies policy for source validation by reversed path, as specified in RFC3704. Supported values are as follows:

disable: No source validation is performed.

loose: Enable Loose Reverse Path Forwarding as defined in RFC3704.

strict: Enable Strict Reverse Path Forwarding as defined in RFC3704.

Default

The default is disable.

Usage Guidelines

Use this command to specify policy for source validation by reversed path, as specified in RFC3704.

Use the set form of this command to specify policy for source validation by reversed path, as specified in RFC3704.

Use the delete form of this command to remove the specified value. Use the **show** form of this command to view the specified value.

firewall syn-cookies <state>

Specifies policy for using TCP SYN cookies with IPv4.

Syntax

```
set firewall syn-cookies {enable | disable}
delete firewall syn-cookies
show firewall syn-cookies
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   syn-cookies state
```

Parameters

state

Enables or disables TCP SYN cookies option. Supported values are as follows:

enable: Enables TCP SYN cookies with IPv4.

disable: Disables TCP SYN cookies with IPv4.

Default

The default is enable.

Usage Guidelines

Use this command to specify whether to use TCP SYN cookies with IPv4. Enabling this option can help protect the system from a TCP SYN Flood Denial of Service (DoS) attack. To start a TCP connection, a source sends a SYN (synchronize/start) packet. The destination sends back a SYN ACK (synchronize acknowledge). Then the source sends an ACK (acknowledge), and the connection is established. This is referred to as the "TCP three-way handshake."

After a destination server sends a SYN ACK, it uses a connection queue to keep track of the connections waiting to be completed. An attacker can fill up the connection queue by generating phony TCP SYN packets from random IP addresses at a rapid rate. When the connection queue is full, all subsequent TCP services are denied.

When this option is enabled, the system creates a hash entry when it receives a SYN packet, and returns a SYN ACK cookie only, without retaining all the SYN information. When it receives the ACK from the client, it validates it against the hash and, if it is valid, rebuilds the SYN packet information and accepts the packet.

Use the set form of this command to specify whether to enable or disable the TCP SYN cookies option.

Use the **delete** form of this command to restore the default behavior.

Use the **show** form of this command to view TCP SYN cookies option configuration.

interfaces <interface> firewall <direction> name <fw-name>

Applies an IPv4 firewall instance to the defined interface.

Syntax

set interfaces interface firewall {in name fw-name | local name fw-name | out name *fw-name*}

delete interfaces interface firewall [in name | local name | out name] show interfaces *interface* firewall [in name | local name | out name]

Command Mode

Configuration mode.

Configuration Statement

```
interfaces interface {
   firewall {
       in {
           name fw-name
       local {
           name fw-name
       }
       out {
           name fw-name
   }
}
```

Parameters

interface	Mandatory. The type of interface. For detailed keywords and arguments that can be specified as interface types, see the table in the Usage Guidelines below.
in name fw-name	Applies the specified IPv4 firewall instance to inbound traffic on the specified interface.

local name fw-name	Applies the specified IPv4 firewall instance to traffic arriving on the specified interface and bound for the local system.
out name fw-name	Applies the specified IPv4 firewall instance to outbound traffic on the specified interface.

Default

None.

Usage Guidelines

Use this command to apply an IPv4 firewall instance, or rule set, to an interface.

A firewall has no effect on traffic traversing the system or destined to the system until a firewall rule set has been applied to an interface or a vif using this command.

To use the firewall feature, you define a firewall rule set as a named firewall instance, using firewall command. You then apply the firewall instance to interfaces and/or vifs using a statement like this one. Once applied, the instance acts as a packet filter.

The firewall instance will filter packets in one of the following ways, depending on what you specify when you apply it:

- in. If you apply the rule set as in, the firewall will filter packets entering the interface.
- out. If you apply the rule set as out, the firewall will filter packets leaving the interface.
- local. If you apply the rule set as local, the firewall will filter packets destined for the system itself.

For each interface, you can apply up to three firewall instances: one firewall in instance, one firewall out instance, and one firewall local instance.

Make sure the firewall instance you apply to an interface is already defined, or you may experience unintended results. If you apply a firewall instance that does not exist to an interface, the implicit firewall rule of allow all will be applied.

The following table shows the syntax and parameters for supported interface types.

Interface Type	Syntax	Parameters
ADSL Bridged Ethernet	adsl <i>adslx</i> pvc <i>pvc-id</i> bridged-ethernet	adslx The name of a Bridged Ethernet- encapsulated DSL interface.
		pvc-id The identifier for the PVC. It can either be the vpi/vci pair or the keyword auto, where vpi is a Virtual Path Index from 0 to 255, vci is a Virtual Circuit Index from from 0 to 65535, and auto directs the system to detect the Virtual Path Index and Virtual Circuit Index automatically.
ADSL Classical	adsl <i>adslx</i> pvc <i>pvc-id</i> classical-ipoa	adslx The name of a Classical IPoA- encapsulated DSL interface.
	·	pvc-id The identifier for the PVC. It can either be the vpi/vci pair or the keyword auto , where vpi is a Virtual Path Index from 0 to 255, vci is a Virtual Circuit Index from from 0 to 65535, and auto directs the system to detect the Virtual Path Index and Virtual Circuit Index automatically.
ADSL PPPoA	adsl <i>adslx</i> pvc <i>pvc-id</i> pppoa num	adslx The name of a Classical IPoA- encapsulated DSL interface.
		pvc-id The identifier for the PVC. It can either be the vpi/vci pair or the keyword auto, where vpi is a Virtual Path Index from 0 to 255, vci is a Virtual Circuit Index from from 0 to 65535, and auto directs the system to detect the Virtual Path Index and Virtual Circuit Index automatically.
		num The PPPoA unit number. This number must be unique across all PPPoA interfaces. In addition, only one PPPoA instance can be configured on a PVC. PPPoA units range from 0 to 15 and the resulting interfaces are named pppoa0 to pppoa15.
ADSL PPPoE	adsl <i>adslx</i> pvc <i>pvc-id</i> pppoe num	adslx The name of a Classical IPoA- encapsulated DSL interface.
		pvc-id The identifier for the PVC. It can either be the vpi/vci pair or the keyword auto , where vpi is a Virtual Path Index from 0 to 255, vci is a Virtual Circuit Index from from 0 to 65535, and auto directs the system to detect the Virtual Path Index and Virtual Circuit Index automatically.
		<i>num</i> The name of a defined PPPoE unit. The range is 0 to 15.
Bonding	bonding <i>bondx</i>	bondx The identifier for the bonding interface. Supported values are bond0 through bond99 .
Bonding Vif	bonding bondx vif vlan-id	bondx The identifier for the bonding interface. Supported values are bond0 through bond99 .
		vlan-id The VLAN ID for the vif. The range is 0 to 4094.

Interface Type	Syntax	Parameters
Bridge	bridge <i>brx</i>	brx The name of a Bridge group. The range is br0 through br999 .
Ethernet	ethernet <i>ethx</i>	ethx The name of an Ethernet interface. The range is eth0 through eth23 , depending on the physical interfaces available on your system.
Ethernet PPPoE	ethernet <i>ethx</i> pppoe <i>num</i>	ethx The name of an Ethernet interface. The range is eth0 through eth23, depending on the physical interfaces available on your system.
		<i>num</i> The name of a defined PPPoE unit. The range is 0 to 15.
Ethernet Vif	ethernet ethx vif vlan-id	ethx The name of an Ethernet interface. The range is eth0 through eth23, depending on the physical interfaces available on your system.
		vlan-id The VLAN ID for the vif. The range is 0 to 4094.
Ethernet Vif PPPoE	ethernet <i>ethx</i> vif <i>vlan-id</i> pppoe <i>num</i>	ethx The name of an Ethernet interface. The range is eth0 through eth23, depending on the physical interfaces available on your system.
		vlan-id The VLAN ID for the vif. The range is 0 to 4094.
		<i>num</i> The name of a defined PPPoE unit. The range is 0 to 15.
Loopback	loopback <i>lo</i>	lo The name of the loopback interface.
Multilink	multilink <i>mlx</i> vif 1	mlx The identifier of the multilink bundle. You can create up to two multilink bundles. Supported values are ml0 ("em ell zero") through ml23 ("em ell twenty-three").
		1 The identifier of the virtual interface. Currently, only one vif is supported for multilink interfaces, and the identifier must be 1. The vif must already have been defined.
OpenVPN	openvpn <i>vtunx</i>	vtunx The identifier for the OpenVPN interface. This may be vtun0 to vtunx, where x is a non-negative integer.
Pseudo-Ethernet	pseudo-ethernet <i>pethx</i>	pethx The name of a pseudo-Ethernet interface. The range is peth0 through peth999 .
Serial Cisco HDLC	serial wanx cisco-hdlc vif 1	wanx The serial interface you are configuring: one of wan0 through wan23. The interface must already have been defined.
		1 The identifier of the virtual interface. Currently, only one vif is supported for Cisco HDLC interfaces, and the identifier must be 1. The vif must already have been defined.

Interface Type	Syntax	Parameters
Serial Frame Relay	serial wanx frame-relay vif dlci	wanx The serial interface you are configuring: one of wan0 through wan23. The interface must already have been defined.
		dlci The identifier of the virtual interface. For Frame Relay interfaces, this is the DLCI number for the interface. the range is 16 to 991. The vif must already have been defined
Serial PPP	serial wanx ppp vif 1	wanx The serial interface you are configuring: one of wan0 through wan23. The interface must already have been defined.
		1 The identifier of the virtual interface. Currently, only one vif is supported for point-to-point interfaces, and the identifier must be 1. The vif must already have been defined.
Tunnel	tunnel <i>tunx</i>	tunx An identifier for the tunnel interface you are defining. The range is tun0 to tun23 .
VRRP	interface <i>parent-if</i> vrrp vrrp-group <i>group</i> interface	parent-if The type and identifier of the parent interface; for example, ethernet eth0 or bonding bond0.
		group The VRRP group identifier.
		The name of the VRRP interface is not specified. The system internally constructs the interface name from the parent interface identifier plus the VRRP group number—for example, eth0v99, eth0.15v99, bond0v99, ot bond0.15v99. Note that VRRP interfaces support the same feature set as the parent interface does.
Wireless	wireless <i>wlanx</i>	wlanx The identifier for the wireless interface you are using. This may be wlan0 to wlan999.
Wireless Modem	wirelessmodem wlmx	wlmx The identifier for the wireless modem interface you are using. This may be wlm0 to wlm999.

Use the set form of this command to apply an IPv4 firewall instance to an interface.

Use the delete form of this command to remove an IPv4 firewall instance from an interface.

Use the show form of this command to view an IPv4 firewall configuration for an interface.

Chapter 5: IPv6 Firewall Commands

This chapter describes commands for defining IPv6 firewall packet filters on the Vyatta system.

This chapter presents the following topics:

• IPv6 Firewall Commands

IPv6 Firewall Commands

This chapter contains the following commands.

Configuration Commands	
Interface Commands	
interfaces <interface> firewall <direction> ipv6-name <fw-name></fw-name></direction></interface>	Applies an IPv6 firewall instance to the defined interface.
General Detection	
firewall ipv6-receive-redirects <state></state>	Specifies whether to process received ICMPv6 redirect messages.
firewall ipv6-src-route <state></state>	Specifies whether to process IPv6 packets with routing extension header.
Rules and Rule Sets	
firewall ipv6-name <name></name>	Defines an IPv6 firewall rule set.
firewall ipv6-name <name> default-action <action></action></name>	Sets the default action for an IPv6 rule set.
firewall ipv6-name <name> description <desc></desc></name>	Specifies a brief description for an IPv6 firewall rule set.
firewall ipv6-name <name> enable-default-log</name>	Logs packets that reach the default action.
firewall ipv6-name <name> rule <rule-num></rule-num></name>	Defines a rule within an IPv6 firewall rule set.
firewall ipv6-name <name> rule <rule-num> action <action></action></rule-num></name>	Specifies the action to perform on matched packets.
firewall ipv6-name <name> rule <rule-num> description <desc></desc></rule-num></name>	Specifies a brief description for an IPv6 firewall rule.
firewall ipv6-name <name> rule <rule-num> destination</rule-num></name>	Specifies the destination address and port to match in an IPv6 firewall rule.
firewall ipv6-name <name> rule <rule-num> disable</rule-num></name>	Disables the IPv6 firewall rule
firewall ipv6-name <name> rule <rule-num> icmpv6 type</rule-num></name>	Specifies ICMPv6 code and type settings for an IPv6 firewall rule.
firewall ipv6-name <name> rule <rule-num> ipsec</rule-num></name>	Specifies IPSEC packet matching.
firewall ipv6-name <name> rule <rule-num> limit</rule-num></name>	Specifies traffic rate limiting parameters for an IPv6 firewall rule.
firewall ipv6-name <name> rule <rule-num> log <state></state></rule-num></name>	Enables or disables logging of IPv6 firewall rule actions.

firewall ipv6-name <name> rule <rule-num> p2p <app_name></app_name></rule-num></name>	Specifies a P2P application to which an IPv6 firewall rule applies.
firewall ipv6-name <name> rule <rule-num> protocol <protocol></protocol></rule-num></name>	Specifies the protocol to which an IPv6 firewall rule applies.
firewall ipv6-name <name> rule <rule-num> recent</rule-num></name>	Specifies the parameters to match recently seen sources.
firewall ipv6-name <name> rule <rule-num> source</rule-num></name>	Specifies the source address and port to match in an IPv6 firewall rule.
firewall ipv6-name <name> rule <rule-num> state</rule-num></name>	Specifies the kinds of packets to which this rule is applied.
firewall ipv6-name <name> rule <rule-num> tcp flags</rule-num></name>	Specifies the TCP flags to match in an IPv6 firewall rule.
firewall ipv6-name <name> rule <rule-num> time</rule-num></name>	Specifies the times at which this rule is applied.
Operational Commands	
See operational commands in "Chapter 3: Global Firewall	Commands."

firewall ipv6-name < name >

Defines an IPv6 firewall rule set.

Syntax

```
set firewall ipv6-name name
delete firewall ipv6-name [name]
show firewall ipv6-name [name]
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {}
```

Parameters

name

Multinode. The name of the firewall rule set. The name must not contain a space or any other of the following special characters: "|", ";", "&", "\$", "<", or ">". The name can be up to 28 characters long.

You can define multiple IPv6 firewall rule sets by creating more than one name configuration node.

Default

None.

Usage Guidelines

Use this command to define an IPv6 firewall rule set.

A firewall rule set is a named collection of up to 9999 packet-filtering rules. Following the configurable rules is an implicit rule, rule 10000, which denies all traffic.

NOTE The "deny all" rule stays in effect until every reference to the rule set is removed; that is, until every packet filter referencing the rule set has been removed from all interfaces.

Use the set form of this command to create or modify an IPv6 firewall rule set.

Use the delete form of this command to remove an IPv6 firewall rule set.

Use the **show** form of this command to view firewall rule set configuration.

firewall ipv6-name < name > default-action < action >

Sets the default action for an IPv6 rule set.

Syntax

set firewall ipv6-name name default-action action delete firewall ipv6-name name default-action show firewall ipv6-name name default-action

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       default-action action
}
```

Parameters

name	The name of the firewall rule set.
action	The default action to take if no matches are found within a rule set. Supported values are as follows:
	accept: Accepts the packet.
	drop: Drops the packet silently.
	reject: Drops the packet with an ICMP "Destination Unreachable" message.

Default

If an action is not specified, packets not matching any rules in the rule set are silently dropped.

Usage Guidelines

Use this command to specify a default action to take for packets not matching any rule in an IPv6 rule set.

Packets not matching any rules within a rule set "fall through" to the default policy. By default, the action taken is to silently drop unmatched packets.

Use the set form of this command to set the default action for an IPv6 rule set rule set.

Use the delete form of this command to restore the default behavior for unmatched packets.

Use the **show** form of this command to view default policy configuration.

firewall ipv6-name < name > description < desc>

Specifies a brief description for an IPv6 firewall rule set.

Syntax

set firewall ipv6-name name description desc delete firewall ipv6-name name description show firewall ipv6-name name description

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       description desc
}
```

Parameters

name	The name of the firewall rule set.
desc	A description of the rule set. If the description contains spaces, it must be enclosed in double quotes.

Default

None.

Usage Guidelines

Use this command to specify a description for an IPv6 firewall rule set.

Use the set form of this command to add or modify the description.

Use the delete form of this command to remove the description.

Use the **show** form of this command to view description configuration.

firewall ipv6-name < name > enable-default-log

Logs packets that reach the default action.

Syntax

set firewall ipv6-name name enable-default-log delete firewall ipv6-name name enable-default-log show firewall ipv6-name name

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       enable-default-log
}
```

Parameters

The name of the IPv6 firewall rule set. name

Default

Packets reaching the default action are not logged.

Usage Guidelines

Use this command to log packets that reach the default action.

Use the set form of this command to log packets that reach the default action.

Use the delete form of this command to restore the default behavior for packets that reach the default action.

Use the **show** form of this command to view the configuration.

firewall ipv6-name < name > rule < rule-num >

Defines a rule within an IPv6 firewall rule set.

Syntax

```
set firewall ipv6-name name rule rule-num
delete firewall ipv6-name name rule [rule-num]
show firewall ipv6-name name rule [rule-num]
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {}
}
```

Parameters

name	The name of the firewall rule set.
rule-num	Multinode. The numeric identifier of the rule. Rule numbers determine the order in which rules are executed. Each rule must have a unique rule number. The range is 1 to 9999.
	You can define multiple rules by creating more than one rule configuration node.

Default

None.

Usage Guidelines

Use this command to define a rule within an IPv6 firewall rule set.

A firewall rule set consists of up to 9999 configurable rules. Following the last configured rule, a system rule (rule 10000) with an action of "deny all" is applied. Firewall rules are executed in numeric sequence, from lowest to highest. You cannot directly change a rule number, because it is the identifier of a configuration node; however, you can renumber rules using the rename command.

To avoid having to renumber firewall rules, a good practice is to number rules in increments of 10. This allows room for the insertion of new rules within the rule set.

Use the set form of this command to create or modify a firewall rule within an IPv6 firewall rule set.

Use the delete form of this command to remove a rule from an IPv6 firewall rule set. Use the **show** form of this command to view firewall rule configuration.

firewall ipv6-name < name > rule < rule-num > action <action>

Specifies the action to perform on matched packets.

Syntax

set firewall ipv6-name name rule rule-num action action delete firewall ipv6-name name rule rule-num action show firewall ipv6-name name rule rule-num action

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
          action action
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
action	The action to be taken when a packet satisfies the criteria specified in the rule. Supported values are as follows:
	accept: Accepts and forwards matched packets.
	drop: Silently drops matched packets.
	inspect : Forwards matched packets to the intrusion protection system (IPS). Packets forwarded to the IPS are processed by the content-inspection traffic-filter command.
	reject: Drops matched packets with an ICMP "Destination Unreachable" message.

Default

Packets are silently dropped.

Usage Guidelines

Use this command to specify the action to perform on packets matching the criteria specified in this firewall rule. Only one action can be defined per rule.

Use the set form of this command to specify the action to perform on matched packets.

Use the delete form of this command to restore the default action for matched packets.

Use the show form of this command to view firewall rule action configuration.

firewall ipv6-name < name > rule < rule-num > description <desc>

Specifies a brief description for an IPv6 firewall rule.

Syntax

set firewall ipv6-name name rule rule-num description desc delete firewall ipv6-name name rule rule-num description show firewall ipv6-name name rule rule-num description

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
           description desc
       }
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
desc	A brief description for this rule. If the description contains spaces, it must be enclosed in double quotes.

Default

None.

Usage Guidelines

Use this command to specify a brief description for an IPv6 firewall rule.

Use the set form of this command to set the description.

Use the delete form of this command to remove the description.

Use the **show** form of this command to view description configuration.

firewall ipv6-name < name > rule < rule-num > destination

Specifies the destination address and port to match in an IPv6 firewall rule.

Syntax

set firewall ipv6-name name rule rule-num destination [address | port port] delete firewall ipv6-name name rule rule-num destination [address | port] show firewall ipv6-name name rule rule-num destination [address | port]

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
           destination {
              address address
              port port
           }
       }
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.

address	The destination address to match. The following formats are valid:
	<i>ipv6-address</i> : Matches the specified IPv6 address; for example, fe80::20c:29fe:fe47:f89.
	<i>ipv6-address/prefix</i> : A network address, where ::/0 matches any network; for example, fe80::20c:29fe:fe47:f88/64
	<i>ipv6-address-ipv6-address</i> : Matches a range of contiguous IP addresses; for example, fe80::20c:29fe:fe47:f00–fe80::20c:29fe:fe47:f89.
	!ipv6-address: Matches all IP addresses except the one specified.
	!ipv6-address/prefix: Matches all network addresses except the one specified.
	!ipv6-address-ipv6-address: Matches all IP addresses except those in the specified range.
port	Applicable only when the protocol is TCP or UDP. The destination port to match. Supported formats are as follows:
	<i>port-name</i> : Matches the name of an IP service; for example, http. You can specify any service name in the file /etc/services.
	port-num: Matches a port number. The range is 1 to 65535.
	start–end: Matches the specified range of ports; for example, 1001–1005.
	You can use a combination of these formats in a comma-separated list. You can also negate the entire list by prepending it with an exclamation mark ("!"); for example,!22,telnet,http,123,1001-1005.

Default

None.

Usage Guidelines

Use this command to specify the destination in an IPv6 firewall rule.

If both address and port are specified, the packet is considered a match only if both the address and the port match.

Use the set form of this command to specify or modify a firewall destination.

Use the delete form of this command to remove a firewall destination.

Use the **show** form of this command to view firewall destination configuration.

firewall ipv6-name < name > rule < rule-num > disable

Disables the IPv6 firewall rule..

Syntax

set firewall ipv6-name name rule rule-num disable delete firewall ipv6-name name rule rule-num disable show firewall ipv6-name name rule rule-num

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
           disable
   }
}
```

Parameters

пате	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.

Default

The firewall rule is enabled.

Usage Guidelines

Use this command to disable an IPv6 firewall rule.

Use the set form of this command to disable the specified rule

Use the delete form of this command to enable the specified rule.

Use the **show** form of this command to view the configuration for the specified rule.

firewall ipv6-name < name > rule < rule-num > icmpv6 type

Specifies ICMPv6 code and type settings for an IPv6 firewall rule.

Syntax

set firewall ipv6-name name rule rule-num icmpv6 type type delete firewall ipv6-name name rule rule-num icmpv6 type show firewall ipv6-name name rule rule-num icmpv6 type

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
           icmpv6 {
              type type
       }
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
type	A valid ICMPv6 type code from 0 to 255; for example, 128 (Echo Request), or a type/code pair (each from 0 to 255); for example, 1/4 (Port unreachable). Alternatively, you can specify an ICMPv6 type code literal; for example, echo-request (Echo Request).
	For a list of ICMPv6 codes and types, see "Appendix B: ICMPv6 Types."

Default

None.

Usage Guidelines

Use this command to define the ICMPv6 types this rule applies to—for example Echo Request or Echo Reply. Packets having this ICMPv6 type will "match" the rule. Note that this command requres that "protocol" be set to "icmpv6".

Use the set form of this command to specify the ICMPv6 code and type for the specified rule

Use the delete form of this command to remove the ICMPv6 code or type value for the specified rule.

Use the show form of this command to view the ICMPv6 code or type value for the specified rule.

firewall ipv6-name <name> rule <rule-num> ipsec

Specifies IPSEC packet matching.

Syntax

set firewall ipv6-name name rule rule-num ipsec {match-ipsec|match-none} delete firewall ipv6-name name rule rule-num ipsec [match-ipsec|match-none] show firewall ipv6-name name rule rule-num ipsec

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
           ipsec {
              match-ipsec
              match-none
       }
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
match-ipsec	Match inbound IPsec packets.
match-none	Match inbound non-IPsec packets.

Default

None.

Usage Guidelines

Use this command to specify whether to match IPsec or non-IPsec packets.

Use the set form of this command to specify which type of packets to match.

Use the delete form of this command to remove the configuration.

Use the **show** form of this command to view the configuration.

firewall ipv6-name < name > rule < rule-num > limit

Specifies traffic rate limiting parameters for an IPv6 firewall rule.

Syntax

set firewall ipv6-name name rule rule-num limit {burst size | rate rate} delete firewall ipv6-name name rule rule-num limit [burst | rate] show firewall ipv6-name name rule rule-num limit [burst | rate]

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
           limit {
              burst size
              rate rate
           }
       }
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
size	The size of the burst buffer. This is the maximum number of packets that can be sent as a burst in excess of the specified token rate given available tokens in the buffer. The default is 1, which provides no bursting above the specified rate.
rate	The maximum average rate of data traffic for packets matching the rule. Supported time units are: second, minute, hour, and day. The rate is specified in the format "X/ <time unit="">". For example "2/second" limits the packets matching the rule to two per second.</time>

Default

No imposed limit.

Usage Guidelines

Use this command to limit the traffic rate of packets matching the rule. The limit option employs the Token Bucket Filter (TBF) queuing mechanism within firewall to limit the rate of incoming packets to an administatively set rate but with the possibility of allowing short bursts in excess of this rate.

The TBF implementation consists of a buffer (bucket), constantly filled by some virtual pieces of information called tokens, at a specific rate (token rate). The most important parameter of the bucket is its size, that is the number of tokens it can store. Each arriving token collects one incoming data packet from the data queue and is then deleted from the bucket. Associating this algorithm with the two flows -- token and data, gives us three possible scenarios:

- 1) The data arrives in the TBF at a rate that's equal to the rate of incoming tokens. In this case each incoming packet has its matching token and passes the queue without delay.
- 2) The data arrives in the TBF at a lower rate than the token rate. Only a part of the tokens are deleted at output of each data packet that's sent out the queue, so the tokens accumulate, up to the bucket size. The unused tokens can then be used to send data at a speed that's exceeding the standard token rate, in case short data bursts occur.
- 3) The data arrives in the TBF at a greater rate than the token rate. This means that the bucket will soon be devoid of tokens, which causes the TBF to throttle itself for a while. This is called an 'overlimit situation'. If packets keep coming in, packets will start to get dropped.

The limit option "rate" relates to the "token rate" as described in the above algorithm while the limit option "burst" relates to the "bucket size". The implementation of these values is explained below:

rate - If set, this rule will match packets at the specified maximum average rate. Any of the following time units can be used to specify rate: second, minute, hour, day.

For example, a value of 1/second implies that the rule be matched at an average of once per second.

burst - If set, this rule will match packets specified by this value in excess of rate. By default, this value is set to 1. so if you don't want to bother with short bursts of packets and want to simply rate limit at the specified rate then you do not have to worry about this option.

Use the set form of this command to specify the traffic limit for the specified rule Use the delete form of this command to remove the traffic limit for the specified rule. Use the **show** form of this command to view the traffic limit for the specified rule.

firewall ipv6-name < name > rule < rule-num > log < state >

Enables or disables logging of IPv6 firewall rule actions.

Syntax

set firewall ipv6-name name rule rule-num log state delete firewall ipv6-name name rule rule-num log show firewall ipv6-name name rule rule-num log

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
           log state
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
state	Enables or disables logging of firewall actions. Supported values are as follows:
	enable: Log when action is taken.
	disable: Do not log when action is taken.

Default

Actions are not logged.

Usage Guidelines

Use this command to enable or disable logging for the specified rule. When enabled, any actions taken will be logged.

Use the set form of this command to specify logging for the specified rule

Use the delete form of this command to remove the logging value for the specified rule.

Use the **show** form of this command to view the logging value for the specified rule.

firewall ipv6-name < name > rule < rule-num > p2p <app_name>

Specifies a P2P application to which an IPv6 firewall rule applies.

Syntax

set firewall ipv6-name name rule rule-num p2p app_name delete firewall ipv6-name name rule rule-num p2p app_name show firewall ipv6-name name rule rule-num p2p

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
          p2p app_name
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.

app_name

Mandatory. Match P2P application packets. Supported values are as follows:

all: Match packets sent by any of the applications listed below.

applejuice: Match packets sent by AppleJuice applications.

bittorrent: Match packets sent by BitTorrent applications.

directconnect: Match packets sent by Direct Connect applications.

edonkey: Match packets sent by eDonkey/eMule applications.

gnutella: Match packets sent by Gnutella applications.

kazaa: Match packets sent by KaZaA applications.

Default

None.

Usage Guidelines

Use this command to define to which P2P application a firewall rule applies. Packets to or from this application will "match" the rule. Multiple P2P options can be specified in a rule to match multiple P2P applications.

Use the set form of this command to specify the P2P application to match for the specified rule

Use the delete form of this command to remove the P2P application value for the specified rule.

Use the **show** form of this command to view the P2P application value for the specified rule.

firewall ipv6-name < name > rule < rule-num > protocol col>

Specifies the protocol to which an IPv6 firewall rule applies.

Syntax

set firewall ipv6-name name rule rule-num protocol protocol delete firewall ipv6-name name rule rule-num protocol show firewall ipv6-name name rule rule-num protocol

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
          protocol protocol
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
protocol	Mandatory. Any protocol literals or numbers listed in the file /etc/protocols can be used. The keywords icmpv6 and all are also supported.
	Prefixing the protocol name with the exclamation mark character ("!") matches every protocol except the specified protocol. For example, !tcp matches all protocols except TCP.

Default

The default is all.

Usage Guidelines

Use this command to define to which protocol an IPv6 firewall rule applies. Packets using this protocol will "match" the rule.

Note that you should take care in using more than one "exclusion" rule (that is, a rule using the negation operation ("!") in combination.

Also note that this parameter works slightly different than its IPv4 counterpart. In IPv4, this field strictly matches the "protocol ID" field in the IPv4 header. In IPv6, this parameter matches the "last" next-header field in the IPv6 header chain. This means that if the IPv6 packet has no extension headers, it will match the next-header field in the main IPv6 header. If the packet does have extension headers, the parameter will match the next-header field of the last extension header in the chain. In other words, the parameter will always match the ID of the transport-layer packet that is being carried.

Use the set form of this command to specify the protocol to match for the specified rule

Use the delete form of this command to remove the protocol value for the specified rule.

Use the **show** form of this command to view the protocol value for the specified rule.

firewall ipv6-name < name > rule < rule-num > recent

Specifies the parameters to match recently seen sources.

Syntax

set firewall ipv6-name name rule rule-num recent [count count | time seconds] delete firewall ipv6-name name rule rule-num recent [count | time] show firewall ipv6-name name rule rule-num recent [count | time]

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
           recent {
              count count
              time seconds
       }
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
count	Mandatory. The number of times the same source IP address is seen within the specified time period. The range is 0 to 255.
seconds	Mandatory. The amount of time, in seconds, to look for "count" connection attempts from the same source.

Default

None.

Usage Guidelines

Use this command to match recently seen sources. The most common use for this is to help prevent "brute force" attacks where an external device is opening a continuous flow of connections (e.g. to SSH) in an attempt to break into the system. Because the external host will be an unknown source, the "recent" list allows the firewall to match packets based on the external host's behavior without initially knowing it's address.

Use the set form of this command to specify the "recent" configuration.

Use the delete form of this command to remove the "recent" configuration.

Use the show form of this command to view firewall "recent" configuration.

firewall ipv6-name < name > rule < rule-num > source

Specifies the source address and port to match in an IPv6 firewall rule.

Syntax

```
set firewall ipv6-name name rule rule-num source [address address |
mac-address mac-addr | port port ]
```

delete firewall ipv6-name name rule rule-num source [address | mac-address | port] show firewall ipv6-name name rule rule-num source [address | mac-address | port]

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
           source {
              address address
              mac-address mac-addr
              port port
           }
       }
   }
}
```

Parameters

пате	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.

The source address to match. The following formats are valid:
<i>ipv6-address</i> : Matches the specified IPv6 address; for example, fe80::20c:29fe:fe47:f89.
<i>ipv6-address/prefix</i> : A network address, where ::/0 matches any network; for example, fe80::20c:29fe:fe47:f88/64
<i>ipv6-address–ipv6-address</i> : Matches a range of contiguous IP addresses; for example, fe80::20c:29fe:fe47:f00–fe80::20c:29fe:fe47:f89.
!ipv6-address: Matches all IP addresses except the one specified.
!ipv6-address/prefix: Matches all network addresses except the one specified.
!ipv6-address-ipv6-address: Matches all IP addresses except those in the specified range.
The media access control (MAC) address to match. The format is 6 colon-separated 8-bit numbers in hexadecimal; for example, 00:0a:59:9a:f2:ba.
The source port to match. The following formats are valid:
port-name: Matches the name of an IP service; for example, http. You can specify any service name in the file etc/services.
port-num: Matches a port number. The range is 1 to 65535.
start–end: Matches the specified range of ports; for example, 1001–1005.
You can use a combination of these formats in a comma-separated list. You can also negate the entire list by prepending it with an exclamation mark ("!"); for example, !22,telnet,http,123,1001-1005.

Default

None.

Usage Guidelines

Use this command to specify the source to match in an IPv6 firewall rule.

Note that you should take care in using more than one "exclusion" rule (that is, a rule using the negation operation ("!") in combination.

Use the set form of this command to create a firewall source.

Use the delete form of this command to remove a firewall source.

Use the **show** form of this command to view firewall source configuration.

firewall ipv6-name < name > rule < rule-num > state

Specifies the kinds of packets to which this rule is applied.

Syntax

set firewall ipv6-name name rule rule-num state {established state | invalid state | new state | related state}

delete firewall ipv6-name name rule rule-num state show firewall ipv6-name name rule rule-num state

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
           state {
              established state
              invalid state
              new state
              related state
           }
       }
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.
established state	Specifies whether or not the rule will be applied to established packets. Supported values are as follows:
	enable: Applies the rule to established packets.
	disable: Does not apply the rule to established packets.

invalid state	Specifies whether or not the rule will be applied to invalid packets. Supported values are as follows:
	enable: Applies the rule to invalid packets.
	disable: Does not apply the rule to invalid packets.
new state	Specifies whether or not the rule will be applied to new packets. Supported values are as follows:
	enable: Applies the rule to new packets.
	disable: Does not apply the rule to new packets.
related state	Specifies whether or not the rule will be applied to related packets. Supported values are as follows:
	enable: Applies the rule to related packets.
	disable: Does not apply the rule to related packets.
·	

Default

The rule is applied to all packets, regardless of state.

Usage Guidelines

Use this command to specify the kind of packets this rule will be applied to.

- Established packets are packets that are part of a connection that has seen packets in both directions; for example, a reply packet, or an outgoing packet on a connection that has been replied to.
- *Invalid* packets are packets that could not be identified for some reason. These might include the system running out of resource, or ICMP errors that do not correspond to any known connection. Generally these packets should be dropped.
- *New* packets are packets creating new connections. For TCP, this will be packets with the SYN flag set.
- Related packets are packets related to existing connections.

Use the set form of this command to specify the kind of packets an IPv6 firewall rule will be applied to.

Use the delete form of this command to restore the default behavior.

Use the **show** form of this command to view state configuration for a firewall rule.

firewall ipv6-name < name > rule < rule-num > tcp flags

Specifies the TCP flags to match in an IPv6 firewall rule.

Syntax

set firewall ipv6-name name rule rule-num tcp flags flags delete firewall ipv6-name name rule rule-num tcp flags show firewall ipv6-name name rule rule-num tcp flags

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
           tcp {
                  flags flags
           }
       }
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.

Default

None.

Usage Guidelines

Use this command to match TCP flags in an IPv6 firewall rule.

Use the set form of this command to specify the TCP flags to match.

Use the delete form of this command to restore the default behavior.

Use the show form of this command to view the TCP flags configuration for a firewall rule.

firewall ipv6-name < name > rule < rule-num > time

Specifies the times at which this rule is applied.

Syntax

set firewall ipv6-name name rule rule-num time {monthdays days-of-month | startdate date | starttime time | stopdate date | stoptime time | utc | weekdays *days-of-week*}

delete firewall ipv6-name name rule rule-num time show firewall ipv6-name name rule rule-num time

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-name name {
       rule rule-num {
          time {
              monthdays days-of-month
              startdate date
              starttime time
              stopdate date
              stoptime time
              utc
              weekdays days-of-week
          }
       }
   }
}
```

Parameters

name	The name of the firewall rule set.
rule-num	The numeric identifier of the rule. The range is 1 to 9999.

monthdays days-of-month	Specifies which days in the month the rule will be applied. Supported values are days of the month (1 to 31) within a comma-separated list (e.g. 2,12,21). The "!" character can be used to negate a list of values (e.g. !2,12,21). This indicates that the firewall rule is to be applied on all but the specified days.
startdate date	Specifies the start of a period of time in which the firewall rule will be applied. Set the date, and optionally the time, using one of the following formats:
	yyyy-mm-dd (e.g. 2009-03-12)
	yyyy-mm-ddThh:mm:ss (e.g. 2009-03-12T17:30:00)
	The default is 1970-01-01. Note that if the time is specified that it is 24 hour format (valid values are from 00:00:00 to 23:59:59). If the time is not specified the default is the start of the day on the specified date (i.e. 00:00:00).
	Use stopdate to end the activation period.
starttime time	Specifies the start of a period of time in the day to which the firewall rule will be applied. Set the start time using the following format:
	hh:mm:ss (e.g. 17:30:00)
	Note that the time is specified in 24 hour format (valid values are from 00:00:00 to 23:59:59).
	Use stoptime to end the activation period.
stopdate date	Specifies the end of a period of time in which the firewall rule will be applied. Set the date, and optionally the time, using one of the following formats:
	yyyy-mm-dd (e.g. 2009-03-12)
	yyyy-mm-ddThh:mm:ss (e.g. 2009-03-12T17:30:00)
	The default is 2038-01-19. Note that if the time is specified that it is 24 hour format (valid values are from 00:00:00 to 23:59:59). If the time is not specified the default is the start of the day on the specified date (i.e. 00:00:00).
	Use startdate to begin the activation period.

stoptime time	Specifies the end of a period of time in the day to which the firewall rule will be applied. Set the stop time using the following format:	
	hh:mm:ss (e.g. 17:30:00)	
	Note that the time is specified in 24 hour format (valid values are from 00:00:00 to 23:59:59).	
	Use starttime to begin the activation period.	
utc	Specifies that times given using startdate , stopdate , starttime , and stoptime , should be interpreted as UTC time rather than local time.	
weekdays days-of-week	Specifies which days in the week the rule will be applied. Supported values are days of the week (Mon, Tue, Wed, Thu, Fri, Sat, and Sun) within a comma-separated list (e.g. Mon, Wed, Fri). The "!" character can be used to negate a list of values (e.g. !Mon, Wed, Fri). This indicates that the firewall rule is to be applied on all but the specified days of the week.	

Default

The rule is applied at all times.

Usage Guidelines

Use this command to restrict the times during which the rule will be applied. All values are optional and are ANDed when specified.

Use the set form of this command to specify the times at which an IPv6 firewall rule will be applied.

Use the delete form of this command to restore the default behavior.

Use the **show** form of this command to view time configuration for a firewall rule.

firewall ipv6-receive-redirects <state>

Specifies whether to process received ICMPv6 redirect messages.

Syntax

```
set firewall ipv6-receive-redirects {enable | disable}
delete firewall ipv6-receive-redirects
show firewall ipv6-receive-redirects
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-receive-redirects state
```

Parameters

enable	Process received ICMPv6 redirect messages.
disable	Does not process received ICMPv6 redirect messages.

Default

The default is disable.

Usage Guidelines

Use this command to specify whether to process received ICMPv6 redirect messages.

Use the set form of this command to specify whether to process received ICMPv6 redirect messages.

Use the delete form of this command to remove the specified value.

Use the **show** form of this command to view the specified value.

firewall ipv6-src-route <state>

Specifies whether to process IPv6 packets with routing extension header.

Syntax

```
set firewall ipv6-src-route {enable | disable}
delete firewall ipv6-src-route
show firewall ipv6-src-route
```

Command Mode

Configuration mode.

Configuration Statement

```
firewall {
   ipv6-src-route state
```

Parameters

enable	Process IPv6 packets with routing header type 2.
disable	Does not process IPv6 packets with routing header.

Default

The default is disable.

Usage Guidelines

Source routing allows applications to override the routing tables and specify one or more intermediate destinations for outgoing datagrams. This capability is sometimes used for troubleshooting, but renders the network vulnerable to attacks where network traffic is transparently directed to a centralized collection point for packet capture.

Use this command to specify whether to process IPv6 packets with routing extension header.

Use the set form of this command to specify whether to process IPv6 packets with routing extension header.

Use the delete form of this command to remove the specified value. Use the **show** form of this command to view the specified value.

interfaces <interface> firewall <direction> ipv6-name <fw-name>

Applies an IPv6 firewall instance to the defined interface.

Syntax

set interfaces interface firewall {in ipv6-name | local ipv6-name | w-name | out ipv6-name fw-name}

delete interfaces interface firewall [in ipv6-name | local ipv6-name | out ipv6-name] show interfaces *interface* firewall [in ipv6-name | local ipv6-name | out ipv6-name]

Command Mode

Configuration mode.

Configuration Statement

```
interfaces interface {
   firewall {
       in {
           ipv6-name fw-name
       local {
           ipv6-name fw-name
       }
       out {
           ipv6-name fw-name
   }
}
```

Parameters

interface	Mandatory. The type of interface. For detailed keywords and arguments that can be specified as interface types, see the table in the Usage Guidelines below.
in ipv6-name fw-name	Applies the specified IPv6 firewall instance to inbound traffic on the specified interface.

local ipv6-name fw-name	Applies the specified IPv6 firewall instance to traffic arriving on the specified interface and bound for the local system.
out ipv6-name fw-name	Applies the specified IPv6 firewall instance to outbound traffic on the specified interface.

Default

None.

Usage Guidelines

Use this command to apply an IPv6 firewall instance, or rule set, to an interface.

A firewall has no effect on traffic traversing the system or destined to the system until a firewall rule set has been applied to an interface or a vif using this command.

To use the firewall feature, you define a firewall rule set as a named firewall instance, using firewall command. You then apply the firewall instance to interfaces and/or vifs using a statement like this one. Once applied, the instance acts as a packet filter.

The firewall instance will filter packets in one of the following ways, depending on what you specify when you apply it:

- in. If you apply the rule set as in, the firewall will filter packets entering the interface.
- out. If you apply the rule set as out, the firewall will filter packets leaving the interface.
- local. If you apply the rule set as local, the firewall will filter packets destined for the system itself.

For each interface, you can apply up to three firewall instances: one firewall in instance, one firewall out instance, and one firewall local instance.

Make sure the firewall instance you apply to an interface is already defined, or you may experience unintended results. If you apply a firewall instance that does not exist to an interface, the implicit firewall rule of allow all will be applied.

The following table shows the syntax and parameters for supported interface types.

Interface Type	Syntax	Parameters
ADSL Bridged Ethernet	adsl <i>adslx</i> pvc <i>pvc-id</i> bridged-ethernet	adslx The name of a Bridged Ethernet- encapsulated DSL interface.
		pvc-id The identifier for the PVC. It can either be the vpi/vci pair or the keyword auto, where vpi is a Virtual Path Index from 0 to 255, vci is a Virtual Circuit Index from from 0 to 65535, and auto directs the system to detect the Virtual Path Index and Virtual Circuit Index automatically.
ADSL Classical	adsl <i>adslx</i> pvc <i>pvc-id</i> classical-ipoa	adslx The name of a Classical IPoA- encapsulated DSL interface.
		pvc-id The identifier for the PVC. It can either be the vpi/vci pair or the keyword auto , where vpi is a Virtual Path Index from 0 to 255, vci is a Virtual Circuit Index from from 0 to 65535, and auto directs the system to detect the Virtual Path Index and Virtual Circuit Index automatically.
ADSL PPPoA	adsl <i>adslx</i> pvc <i>pvc-id</i> pppoa num	adslx The name of a Classical IPoA- encapsulated DSL interface.
		pvc-id The identifier for the PVC. It can either be the vpi/vci pair or the keyword auto , where vpi is a Virtual Path Index from 0 to 255, vci is a Virtual Circuit Index from from 0 to 65535, and auto directs the system to detect the Virtual Path Index and Virtual Circuit Index automatically.
		num The PPPoA unit number. This number must be unique across all PPPoA interfaces. In addition, only one PPPoA instance can be configured on a PVC. PPPoA units range from 0 to 15 and the resulting interfaces are named pppoa0 to pppoa15.
ADSL PPPoE	adsl <i>adslx</i> pvc <i>pvc-id</i> pppoe num	adslx The name of a Classical IPoA- encapsulated DSL interface.
		pvc-id The identifier for the PVC. It can either be the vpi/vci pair or the keyword auto , where vpi is a Virtual Path Index from 0 to 255, vci is a Virtual Circuit Index from from 0 to 65535, and auto directs the system to detect the Virtual Path Index and Virtual Circuit Index automatically.
		<i>num</i> The name of a defined PPPoE unit. The range is 0 to 15.
Bonding	bonding <i>bondx</i>	bondx The identifier for the bonding interface. Supported values are bond0 through bond99 .
Bonding Vif	bonding bondx vif vlan-id	bondx The identifier for the bonding interface. Supported values are bond0 through bond99 .
		vlan-id The VLAN ID for the vif. The range is 0 to 4094.

Interface Type	Syntax	Parameters
Bridge	bridge <i>brx</i>	brx The name of a Bridge group. The range is br0 through br999 .
Ethernet	ethernet <i>ethx</i>	ethx The name of an Ethernet interface. The range is eth0 through eth23 , depending on the physical interfaces available on your system.
Ethernet PPPoE	ethernet <i>ethx</i> pppoe <i>num</i>	ethx The name of an Ethernet interface. The range is eth0 through eth23, depending on the physical interfaces available on your system.
		<i>num</i> The name of a defined PPPoE unit. The range is 0 to 15.
Ethernet Vif	ethernet ethx vif vlan-id	ethx The name of an Ethernet interface. The range is eth0 through eth23, depending on the physical interfaces available on your system.
		vlan-id The VLAN ID for the vif. The range is 0 to 4094.
Ethernet Vif PPPoE	ethernet <i>ethx</i> vif <i>vlan-id</i> pppoe <i>num</i>	ethx The name of an Ethernet interface. The range is eth0 through eth23, depending on the physical interfaces available on your system.
		vlan-id The VLAN ID for the vif. The range is 0 to 4094.
		<i>num</i> The name of a defined PPPoE unit. The range is 0 to 15.
Loopback	loopback <i>lo</i>	lo The name of the loopback interface.
Multilink	multilink <i>mlx</i> vif 1	mlx The identifier of the multilink bundle. You can create up to two multilink bundles. Supported values are ml0 ("em ell zero") through ml23 ("em ell twenty-three").
		1 The identifier of the virtual interface. Currently, only one vif is supported for multilink interfaces, and the identifier must be 1. The vif must already have been defined.
OpenVPN	openvpn <i>vtunx</i>	vtunx The identifier for the OpenVPN interface. This may be vtun0 to vtunx, where x is a non-negative integer.
Pseudo-Ethernet	pseudo-ethernet <i>pethx</i>	pethx The name of a pseudo-Ethernet interface. The range is peth0 through peth999 .
Serial Cisco HDLC	serial wanx cisco-hdlc vif 1	wanx The serial interface you are configuring: one of wan0 through wan23. The interface must already have been defined.
		1 The identifier of the virtual interface. Currently, only one vif is supported for Cisco HDLC interfaces, and the identifier must be 1. The vif must already have been defined.

Interface Type	Syntax	Parameters
Serial Frame Relay	serial wanx frame-relay vif dlci	wanx The serial interface you are configuring: one of wan0 through wan23. The interface must already have been defined.
		dlci The identifier of the virtual interface. For Frame Relay interfaces, this is the DLCI number for the interface. the range is 16 to 991. The vif must already have been defined.
Serial PPP	serial <i>wanx</i> ppp vif 1	wanx The serial interface you are configuring: one of wan0 through wan23. The interface must already have been defined.
		1 The identifier of the virtual interface. Currently, only one vif is supported for point-to-point interfaces, and the identifier must be 1. The vif must already have been defined.
Tunnel	tunnel <i>tunx</i>	tunx An identifier for the tunnel interface you are defining. The range is tun0 to tun23 .
VRRP	interface <i>parent-if</i> vrrp vrrp-group <i>group</i> interface	parent-if The type and identifier of the parent interface; for example, ethernet eth0 or bonding bond0.
		group The VRRP group identifier.
		The name of the VRRP interface is not specified. The system internally constructs the interface name from the parent interface identifier plus the VRRP group number—for example, eth0v99, eth0.15v99, bond0v99, ot bond0.15v99. Note that VRRP interfaces support the same feature set as the parent interface does.
Wireless	wireless wlanx	wlanx The identifier for the wireless interface you are using. This may be wlan0 to wlan999.
Wireless Modem	wirelessmodem wlmx	wlmx The identifier for the wireless modem interface you are using. This may be wlm0 to wlm999.

Use the set form of this command to apply an IPv6 firewall instance to an interface.

Use the delete form of this command to remove an IPv6 firewall instance from an interface.

Use the show form of this command to view an IPv6 firewall configuration for an interface.

Chapter 6: Zone-Based Firewall Commands

This chapter describes commands for implementing zone-based firewall on the Vyatta system.

Zone-Based Firewall Commands

zone-policy zone <to-zone></to-zone>	Defines a security zone.
zone-policy zone <to-zone> default-action <action></action></to-zone>	Defines the default action for traffic arriving at a security zone.
zone-policy zone <to-zone> description <desc></desc></to-zone>	Specifies a description for a security zone.
zone-policy zone <to-zone> from <from-zone></from-zone></to-zone>	Names the traffic source zone to which this policy applies.
zone-policy zone <to-zone> from <from-zone> firewall ipv6-name <name></name></from-zone></to-zone>	Applies packet filtering as defined in an IPv6 firewal rule set to traffic arriving from the specified "from" zone.
zone-policy zone <to-zone> from <from-zone> firewall name <name></name></from-zone></to-zone>	Applies packet filtering as defined in an IPv4 firewal rule set to traffic arriving from the specified "from" zone.
zone-policy zone <to-zone> interface <if-name></if-name></to-zone>	Adds an interface to a security zone.
zone-policy zone <to-zone> local-zone</to-zone>	Designates this zone as the "local" zone.
Operational Commands	

zone-policy zone <to-zone>

Defines a security zone.

Syntax

set zone-policy zone zone delete zone-policy zone zone show zone-policy zone

Command Mode

Configuration mode.

Configuration Statement

zone-policy zone zone {}

Parameters

Multimode. The name of the security zone. The name can be up zone to 18 characters long. You can define multiple security zones by creating more than one zone-policy zone configuration node.

Default

None.

Usage Guidelines

Use this command to define a security zone.

In the Vyatta system, a zone is defined as a group of interfaces with the same security level. Once the zone is defined, a filtering policy can be applied to traffic flowing between zones.

By default, traffic to a zone is dropped unless a policy has been defined for the zone sending the traffic. Traffic flowing within a zone is not filtered.

When defining zones, keep the following in mind:

An interface can be a member of only one zone.

- An interface that is a member of a zone cannot have a firewall rule set directly applied to it.
- For interfaces not assigned to a zone, traffic is unfiltered by default. These interfaces can have rule sets directly applied to them.

Use the set form of this command to define a security zone.

Use the **delete** form of this command to remove a security zone.

Use the **show** form of this command to view security zone configuration.

zone-policy zone <to-zone> default-action <action>

Defines the default action for traffic arriving at a security zone.

Syntax

set zone-policy zone to-zone default-action action delete zone-policy zone to-zone default-action show zone-policy zone to-zone default-action

Command Mode

Configuration mode.

Configuration Statement

```
zone-policy zone to-zone {
   default-action action
```

Parameters

to-zone	The name of the security zone that traffic is destined for.
action	The action to be taken for traffic arriving at a security zone. Supported values are as follows:
	drop: Traffic is silently dropped.
	reject: Traffic is dropped with an ICMP "Destination Unreachable" message.

Default

Traffic is silently dropped.

Usage Guidelines

Use this command to specify the default action to take for traffic arriving at a security

This is the action that will be taken for all traffic arriving from zones for which a policy has not been defined. That is, in order for traffic from a given zone to be allowed, a policy must be explicitly defined allowing traffic from that zone.

Use the set form of this command to set the default action.

Use the delete form of this command to restore the default behavior.

Use the **show** form of this command to view default action configuration.

zone-policy zone <to-zone> description <desc>

Specifies a description for a security zone.

Syntax

set zone-policy zone to-zone description desc delete zone-policy zone to-zone description show zone-policy zone to-zone description

Command Mode

Configuration mode.

Configuration Statement

```
zone-policy zone to-zone {
   description desc
}
```

Parameters

to-zone	The name of the security zone that traffic is destined for.
descr	A string providing a brief description for the security zone. If the string contains spaces, it must be enclosed in double quotes.

Default

None.

Usage Guidelines

Use this command to record a brief description for security zone.

Use the set form of this command to specify the description.

Use the delete form of this command to remove the description.

Use the **show** form of this command to view description configuration.

zone-policy zone <to-zone> from <from-zone>

Names the traffic source zone to which this policy applies.

Syntax

set zone-policy zone to-zone from from-zone delete zone-policy zone to-zone from from-zone show zone-policy zone to-zone from from-zone

Command Mode

Configuration mode.

Configuration Statement

```
zone-policy zone to-zone {
   from from-zone
```

Parameters

to-zone	The name of the security zone that traffic is destined for.
from-zone	The name of the security zone from which traffic is originating.

Default

None.

Usage Guidelines

Use this command to specify a zone from which traffic will be arriving (the "from" zone). The packet filtering policy for this "from" zone is applied to all traffic arriving from this zone.

Use the set form of this command to specify the description.

Use the **delete** form of this command to remove the description.

Use the **show** form of this command to view description configuration.

zone-policy zone <to-zone> from <from-zone> firewall ipv6-name < name >

Applies packet filtering as defined in an IPv6 firewall rule set to traffic arriving from the specified "from" zone.

Syntax

set zone-policy zone to-zone from from-zone firewall ipv6-name name delete zone-policy zone to-zone from from-zone firewall ipv6-name show zone-policy zone to-zone from from-zone firewall ipv6-name

Command Mode

Configuration mode.

Configuration Statement

```
zone-policy zone to-zone {
   from from-zone
       firewall {
           ipv6-name name
   }
}
```

Parameters

to-zone	The name of the security zone that traffic is destined for.
from-zone	The name of the security zone from which traffic is originating.
пате	The name of an IPv6 firewall rule set.

Default

None.

Usage Guidelines

Use this command to apply an IP version 6 (IPv6) rule set as a packet filter to traffic arriving from a "from" zone.

You can apply one IPv6 rule set and one IP version 4 (IPv4) rule set as packet filters for a "from" zone.

Use the set form of this command to specify an IPv6 rule set as a packet filter for a "from" zone.

Use the delete form of this command to remove IPv6 rule set from the packet filters defined for a "from" zone.

Use the show form of this command to see what packet filter, if any, has been applied to a "from" zone.

zone-policy zone <to-zone> from <from-zone> firewall name < name >

Applies packet filtering as defined in an IPv4 firewall rule set to traffic arriving from the specified "from" zone.

Syntax

set zone-policy zone to-zone from from-zone firewall name name delete zone-policy zone to-zone from from-zone firewall name show zone-policy zone to-zone from from-zone firewall name

Command Mode

Configuration mode.

Configuration Statement

```
zone-policy zone to-zone {
   from from-zone
      firewall {
          name name
   }
```

Parameters

to-zone	The name of the security zone that traffic is destined for.
from-zone	The name of the security zone from which traffic is originating.
пате	The name of an IPv4 firewall rule set.

Default

None.

Usage Guidelines

Use this command to apply an IP version 4 (IPv4) rule set as a packet filter to traffic arriving from a "from" zone.

You can apply one IPv4 rule set and one IP version 6 (IPv6) rule set as packet filters for a "from" zone.

Use the set form of this command to specify an IPv4 rule set as a packet filter for a "from" zone.

Use the delete form of this command to remove an IPv4 rule set from the packet filters defined for a "from" zone.

Use the show form of this command to see what IPv4 packet filter, if any, has been applied to a "from" zone.

zone-policy zone <to-zone> interface <if-name>

Adds an interface to a security zone.

Syntax

set zone-policy zone to-zone interface if-name delete zone-policy zone to-zone interface if-name show zone-policy zone to-zone interface if-name

Command Mode

Configuration mode.

Configuration Statement

```
zone-policy zone to-zone {
   interface if-name {}
}
```

Parameters

to-zone	The name of the security zone that traffic is destined for.
if-name	Multinode. The name of an interface; for example, eth0, wan1, or ppp1.

Default

None.

Usage Guidelines

Use this command to add an interface to a security zone.

All interfaces in the zone have the same security level; traffic arriving to those interfaces from other zones is all treated in the same way. Traffic flowing between interfaces in the same security zone is not filtered.

Use the set form of this command to add an interface to the zone.

Use the **delete** form of this command to remove an interface from the zone.

Use the **show** form of this command to see what interfaces are members of this zone.

zone-policy zone <to-zone> local-zone

Designates this zone as the "local" zone.

Syntax

set zone-policy zone to-zone local-zone delete zone-policy zone to-zone local-zone show zone-policy zone to-zone

Command Mode

Configuration mode.

Configuration Statement

```
zone-policy zone to-zone {
   local-zone
}
```

Parameters

to-zone

The name of the security zone that traffic is destined for.

Default

None.

Usage Guidelines

Use this command to designate security zone as the "local" zone.

The local zone is a special zone which refers to the local Vyatta device itself. If you specify a security zone as local, the firewall policies specified for the zone filter packets destined for the Vyatta system.

By default, all traffic destined for the router and originating from the router is allowed.

Only one zone may be designated as the local zone.

Use the set form of this command to designate a security zone as the local zone.

Use the delete form of this command to stop a security zone from being the local

Use the **show** form of this command to see security zone configuration.

Appendix A: ICMP Types

This appendix lists the ICMP types defined by the Internet Assigned Numbers Authority (IANA).

The Internet Assigned Numbers Authority (IANA) has developed a standard that maps a set of integers onto ICMP types. Table A-1 lists the ICMP types and codes defined by the IANA and maps them to the strings literal strings available in the Vyatta system.

Table A-1 ICMP types

ICMP Type	Code	Literal	Description
0 - Echo reply	0	echo-reply	Echo reply (pong)
3 - Destination unreachable		destination- unreachable	
	0	network-unreachable	Destination network unreachable
	1	host-unreachable	Destination host unreachable
	2	protocol-unreachable	Destination protocol unreachable
	3	port-unreachable	Destination port unreachable
	4	fragmentation-needed	Fragmentation required
	5	source-route-failed	Source route failed
	6	network-unknown	Destination network unknown
	7	host-unknown	Destination host unknown
	9	network-prohibited	Network administratively prohibited
	10	host-prohibited	Host administratively prohibited
	11	TOS-network-unreachable	Network unreachable for TOS
	12	TOS-host-unreachable	Host unreachable for TOS
	13	communication-prohibited	Communication administratively prohibited
	14	host-precedence-violation	Requested precedence is not permitted.

Appendix A: ICMP Types 212

Table A-1 ICMP types

ICMP Type	Code	Literal	Description
	15	precedence-cutoff	Datagram sent with precedence lower than required minimum.
4 - Source quench	0	source-quench	Source quench (congestion control)
5 - Redirect message		redirect	
	0	network-redirect	Redirect datagrams for the network
	1	host-redirect	Redirect datagrams for the host
	2	TOS-network-redirect	Redirect datagrams for the TOS and network
	3	TOS-host-redirect	Redirect datagrams for the TOS and host
8 - Echo request	0	echo-request	Echo request (ping)
9 - Router advertisement	0	router-advertisement	Router advertisement
10 - Router solicitation	0	router-solicitation	Router solicitation
11 - Time exceeded		time-exceeded	
	0	ttl-zero-during-transit	TTL expired in transit
	1	ttl-zero-during-reassembly	Fragment reassembly time exceeded
12 - Parameter problem: Bad IP header		parameter-problem	
	0	ip-header-bad	Pointer indicates the error
	1	required-option-missing	Missing required option
13 - Timestamp	0	timestamp-request	Timestamp
14 - Timestamp reply	0	timestamp-reply	Timestamp reply
15 - Information request	0		Information request

Appendix A: ICMP Types 213

Table A-1 ICMP types

ICMP Type	Code	Literal	Description
16 - Information reply	0		Information reply
17 - Address mask request	0	address-mask-request	Address mask request
18 - Address mask reply	0	address-mask-reply	Address mask reply

Appendix B: ICMPv6 Types

This appendix lists the ICMPv6 types defined by the Internet Assigned Numbers Authority (IANA).

The Internet Assigned Numbers Authority (IANA) has developed a standard that maps a set of integers onto ICMPv6 types. Table B-2 lists the ICMPv6 types and codes defined by the IANA and maps them to the strings literal strings available in the Vyatta system.

Table B-1 ICMPv6 types

ICMPv6 Type	Code	Literal	Description
1 - Destination unreachable		destination- unreachable	
	0	no-route	No route to destination
	1	communication-prohibited	Communication with destination administratively prohibited
	2		Beyond scope of source address
	3	address-unreachable	Address unreachable
	4	port-unreachable	Port unreachable
	5		Source address failed ingress/egress policy
	6		Reject route to destination
2 - Packet too big	0	packet-too-big	
3 - Time exceeded		time-exceeded	
	0	ttl-zero-during-transit	Hop limit exceeded in transit
	1	ttl-zero-during-reassembly	Fragment reassembly time exceeded
4 - Parameter problem		parameter-problem	
	0	bad-header	Erroneous header field encountered
	1	unknown-header-type	Unrecognized Next Header type encountered
	2	unknown-option	Unrecognized IPv6 option encountered

Table B-1 ICMPv6 types

ICMPv6 Type	Code	Literal	Description
128 - Echo request	0	echo-request (ping)	Echo request
129 - Echo reply	0	echo-reply (pong)	Echo reply
133 - Router solicitation	0	router-solicitation	Router solicitation
134 - Router advertisement	0	router-advertisement	Router advertisement
135 - Neighbor solicitation	0	neighbor-solicitation (neighbour-solicitation)	Neighbor solicitation
136 - Neighbor advertisement	0	neighbor-advertisement (neighbour-advertisement)	Neighbor advertisement

The Internet Assigned Numbers Authority (IANA) has developed a standard that maps a set of integers onto ICMP types. Table B-2 lists the ICMP types and codes defined by the IANA and maps them to the strings literal strings available in the Vyatta system.

Table B-2 ICMP types

ICMP Type	Code	Literal	Description
0 - Echo reply	0	echo-reply	Echo reply (pong)
3 - Destination unreachable		destination- unreachable	
	0	network-unreachable	Destination network unreachable
	1	host-unreachable	Destination host unreachable
	2	protocol-unreachable	Destination protocol unreachable
	3	port-unreachable	Destination port unreachable
	4	fragmentation-needed	Fragmentation required
	5	source-route-failed	Source route failed

Table B-2 ICMP types

ICMP Type	Code	Literal	Description
	6	network-unknown	Destination network unknown
	7	host-unknown	Destination host unknown
	9	network-prohibited	Network administratively prohibited
	10	host-prohibited	Host administratively prohibited
	11	TOS-network-unreachable	Network unreachable for TOS
	12	TOS-host-unreachable	Host unreachable for TOS
	13	communication-prohibited	Communication administratively prohibited
	14	host-precedence-violation	Requested precedence is not permitted.
	15	precedence-cutoff	Datagram sent with precedence lower than required minimum.
4 - Source quench	0	source-quench	Source quench (congestion control)
5 - Redirect message		redirect	
	0	network-redirect	Redirect datagrams for the network
	1	host-redirect	Redirect datagrams for the host
	2	TOS-network-redirect	Redirect datagrams for the TOS and network
	3	TOS-host-redirect	Redirect datagrams for the TOS and host
8 - Echo request	0	echo-request	Echo request (ping)
9 - Router advertisement	0	router-advertisement	Router advertisement

Table B-2 ICMP types

ICMP Type	Code	Literal	Description
10 - Router solicitation	0	router-solicitation	Router solicitation
11 - Time exceeded		time-exceeded	
	0	ttl-zero-during-transit	TTL expired in transit
	1	ttl-zero-during-reassembly	Fragment reassembly time exceeded
12 - Parameter problem: Bad IP header		parameter-problem	
	0	ip-header-bad	Pointer indicates the error
	1	required-option-missing	Missing required option
13 - Timestamp	0	timestamp-request	Timestamp
14 - Timestamp reply	0	timestamp-reply	Timestamp reply
15 - Information request	0		Information request
16 - Information reply	0		Information reply
17 - Address mask request	0	address-mask-request	Address mask request
18 - Address mask reply	0	address-mask-reply	Address mask reply

Glossary of Acronyms

ACL	access control list
ADSL	Asymmetric Digital Subscriber Line
AMI	Amazon Machine Image
API	Application Programming Interface
AS	autonomous system
ARP	Address Resolution Protocol
AWS	Amazon Web Services
BGP	Border Gateway Protocol
BIOS	Basic Input Output System
BPDU	Bridge Protocol Data Unit
CA	certificate authority
CCMP	AES in counter mode with CBC-MAC
CHAP	Challenge Handshake Authentication Protocol
CLI	command-line interface
DDNS	dynamic DNS
DHCP	Dynamic Host Configuration Protocol
DHCPv6	Dynamic Host Configuration Protocol version 6

DLCI	data-link connection identifier
DMI	desktop management interface
DMZ	demilitarized zone
DN	distinguished name
DNS	Domain Name System
DSCP	Differentiated Services Code Point
DSL	Digital Subscriber Line
eBGP	external BGP
EBS	Amazon Elastic Block Storage
EC2	Amazon Elastic Compute Cloud
EGP	Exterior Gateway Protocol
ECMP	equal-cost multipath
ESP	Encapsulating Security Payload
FIB	Forwarding Information Base
FTP	File Transfer Protocol
GRE	Generic Routing Encapsulation
HDLC	High-Level Data Link Control
I/O	Input/Ouput
ICMP	Internet Control Message Protocol
IDS	Intrusion Detection System
IEEE	Institute of Electrical and Electronics Engineers
IGP	Interior Gateway Protocol
IPS	Intrusion Protection System
IKE	Internet Key Exchange
IP	Internet Protocol
IPOA	IP over ATM

IPv4 IP Version 4 IPv6 IP Version 6 ISP Internet Service Provider KVM Kernel-Based Virtual Machine L2TP Layer 2 Tunneling Protocol LACP Link Aggregation Control Protocol LAN local area network LDAP Lightweight Directory Access Protocol LI.DP Link Layer Discovery Protocol MAC medium access control MIB Management Information Base MLPPP multilink PPP MRRU maximum received reconstructed unit MTU maximum transmission unit NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol PAT Port Address Translation	IPsec	IP security
ISP Internet Service Provider KVM Kernel-Based Virtual Machine L2TP Layer 2 Tunneling Protocol LACP Link Aggregation Control Protocol LAN local area network LDAP Lightweight Directory Access Protocol LLDP Link Layer Discovery Protocol MAC medium access control MIB Management Information Base MLPPP multilink PPP MRRU maximum received reconstructed unit MTU maximum transmission unit NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	IPv4	IP Version 4
KVM Kernel-Based Virtual Machine L2TP Layer 2 Tunneling Protocol LACP Link Aggregation Control Protocol LAN local area network LDAP Lightweight Directory Access Protocol LLDP Link Layer Discovery Protocol MAC medium access control MIB Management Information Base MLPPP multilink PPP MRRU maximum received reconstructed unit MTU maximum transmission unit NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	IPv6	IP Version 6
L2TP Layer 2 Tunneling Protocol LACP Link Aggregation Control Protocol LAN local area network LDAP Lightweight Directory Access Protocol LLDP Link Layer Discovery Protocol MAC medium access control MIB Management Information Base MLPPP multilink PPP MRRU maximum received reconstructed unit MTU maximum transmission unit NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	ISP	Internet Service Provider
LACP Link Aggregation Control Protocol LAN local area network LDAP Lightweight Directory Access Protocol LLDP Link Layer Discovery Protocol MAC medium access control MIB Management Information Base MLPPP multilink PPP MRRU maximum received reconstructed unit MTU maximum transmission unit NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	KVM	Kernel-Based Virtual Machine
LAN local area network LDAP Lightweight Directory Access Protocol LLDP Link Layer Discovery Protocol MAC medium access control MIB Management Information Base MLPPP multilink PPP MRRU maximum received reconstructed unit MTU maximum transmission unit NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	L2TP	Layer 2 Tunneling Protocol
LDAP Lightweight Directory Access Protocol LLDP Link Layer Discovery Protocol MAC medium access control MIB Management Information Base MLPPP multilink PPP MRRU maximum received reconstructed unit MTU maximum transmission unit NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	LACP	Link Aggregation Control Protocol
LLDP Link Layer Discovery Protocol MAC medium access control MIB Management Information Base MLPPP multilink PPP MRRU maximum received reconstructed unit MTU maximum transmission unit NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	LAN	local area network
MAC medium access control MIB Management Information Base MLPPP multilink PPP MRRU maximum received reconstructed unit MTU maximum transmission unit NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	LDAP	Lightweight Directory Access Protocol
MIB Management Information Base MLPPP multilink PPP MRRU maximum received reconstructed unit MTU maximum transmission unit NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	LLDP	Link Layer Discovery Protocol
MLPPP multilink PPP MRRU maximum received reconstructed unit MTU maximum transmission unit NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	MAC	medium access control
MRRU maximum received reconstructed unit MTU maximum transmission unit NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	MIB	Management Information Base
MTU maximum transmission unit NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	MLPPP	multilink PPP
NAT Network Address Translation ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	MRRU	maximum received reconstructed unit
ND Neighbor Discovery NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	MTU	maximum transmission unit
NIC network interface card NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	NAT	Network Address Translation
NTP Network Time Protocol OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	ND	Neighbor Discovery
OSPF Open Shortest Path First OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	NIC	network interface card
OSPFv2 OSPF Version 2 OSPFv3 OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	NTP	Network Time Protocol
OSPF Version 3 P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	OSPF	Open Shortest Path First
P2P peer-to-peer PAM Pluggable Authentication Module PAP Password Authentication Protocol	OSPFv2	OSPF Version 2
PAM Pluggable Authentication Module PAP Password Authentication Protocol	OSPFv3	OSPF Version 3
PAP Password Authentication Protocol	P2P	peer-to-peer
	PAM	Pluggable Authentication Module
PAT Port Address Translation	PAP	Password Authentication Protocol
	PAT	Port Address Translation

PCI	peripheral component interconnect
PKI	Public Key Infrastructure
PPP	Point-to-Point Protocol
PPPoA	PPP over ATM
PPPoE	PPP over Ethernet
PPTP	Point-to-Point Tunneling Protocol
PVC	permanent virtual circuit
QoS	quality of service
RADIUS	Remote Authentication Dial-In User Service
RHEL	Red Hat Enterprise Linux
RIB	Routing Information Base
RIP	Routing Information Protocol
RIPng	RIP next generation
Rx	receive
S3	Amazon Simple Storage Service
SLAAC	Stateless Address Auto-Configuration
SNMP	Simple Network Management Protocol
SMTP	Simple Mail Transfer Protocol
SONET	Synchronous Optical Network
SSH	Secure Shell
SSID	Service Set Identifier
STP	Spanning Tree Protocol
TACACS+	Terminal Access Controller Access Control System Plus
TCP	Transmission Control Protocol
TKIP	Temporal Key Integrity Protocol
ToS	Type of Service

Tx	transmit
UDP	User Datagram Protocol
vif	virtual interface
VLAN	virtual LAN
VPC	Amazon virtual private cloud
VPN	Virtual Private Network
VRRP	Virtual Router Redundancy Protocol
WAN	wide area network
WAP	wireless access point
WPA	Wired Protected Access