


LEAD SCREW ASSEMBLY

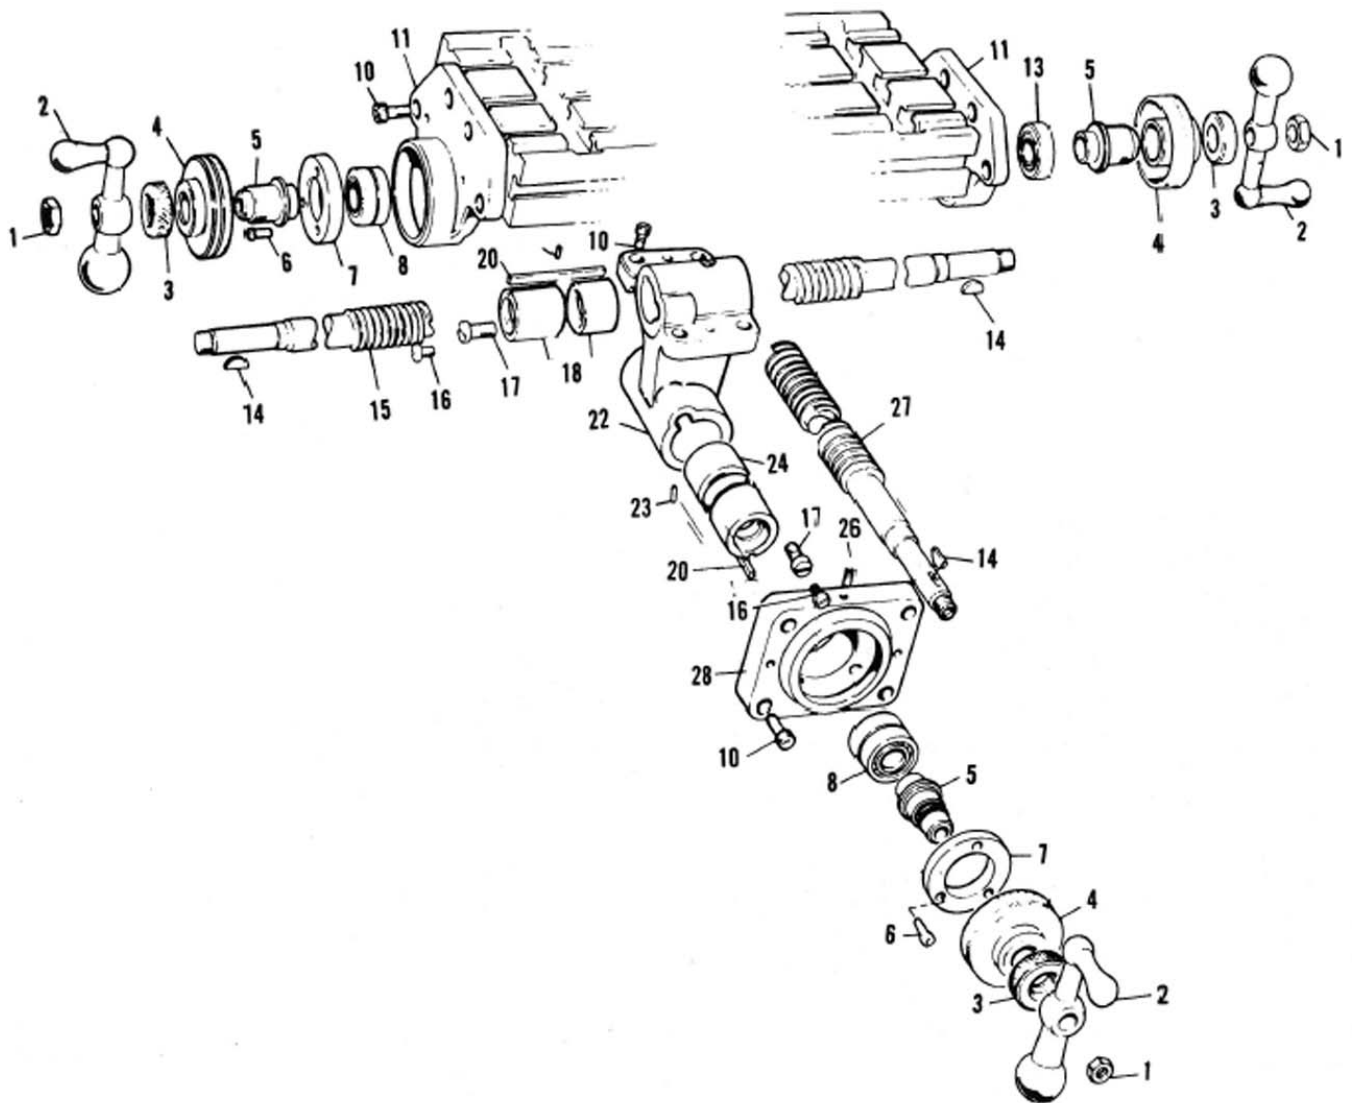

TP5345

Figure 4.7 - Lead Screw Assembly

LEAD SCREW ASSEMBLY

ITEM	CODE NO.	DESCRIPTION	QTY
1	11011755	Nut, Hex Jam, .500"-20	3
2	12060271	Handle, Ball Crank	3
	12150780	Assembly, Ball Crank, Quick Release	1
3	12060078	Nut, Dial Lock, Knurled	3
4	12060214	Dial, 200-Graduation	1
		Chrome, X- and Y-Axis Inch	3
5	12060084	Holder, Dial, Standard Handle Size	3
	12630301	Holder, Dial, Quick Release Handle Size	1
6	11011030	Screw, Socket Hd Cap, .250"-20 x .500"	6
7	11060075	Ring, Bearing Retainer	2
8	11060203	Bearing, #RM 204KT4-DB	2
10	11011074	Screw, Socket Hd Cap, .375"-16 x 1.00"	16
11	12060115	Bracket, Table End	2
13	11060204	Bearing, #H204KTT	1
14	11013078	Key, Woodruff #7	3
15*	12061222	Screw, Table Feed, 42" without Chrome	1
	12060458	Screw, Table Feed, 42" with Chrome	1
	12061223	Screw, Table Feed, 48" without Chrome	1
	12060459	Screw, Table Feed, 48" with Chrome	1
16	11011592	Screw, Washer Hd, #8-32 x .375"	3
17	11060100	Screw, Cross Feed Nut Retaining	2
18	12060630	Nut, Table Feed, Matched Set	1
20	12060099	Key, .187" x .187" x 2.500"	2
22*	12060628	Assembly, Feed Nut Bracket (see 12060632)	1
23	12060096	Pin, Nut Key	2
24	12060631	Nut, Cross Feed, Matched Set	1
26	12190188	Pin, Stop	1
27*	12061233	Screw, Cross Feed, without Chrome Inch	1
	12060485	Screw, Cross Feed, with Chrome Inch	1
28	11060082	Bracket, Cross Feed Bearing	1

*Complete Feed Nut Bracket Assembly (Including X- and Y-Axis Nut) can be purchased by #12060627.

Table Feed Screws are purchased with keys.