Full Moon Theatre


Assembly Instructions Top Part

Parts needed


Quantity	Part
1	Pillow Block Bearing
1	Plywood Base Board
2	Long timber posts
2	Short timber posts
4	Plywood Hooks
2	M5x15 wood screws
30	M5x45 countersunk wood screws
4	M5x150 countersunk wood screws
	Wood glue

Assembly Steps


1. Screw the pillow block bearing to the base board using 2x M5x15 wood screws.

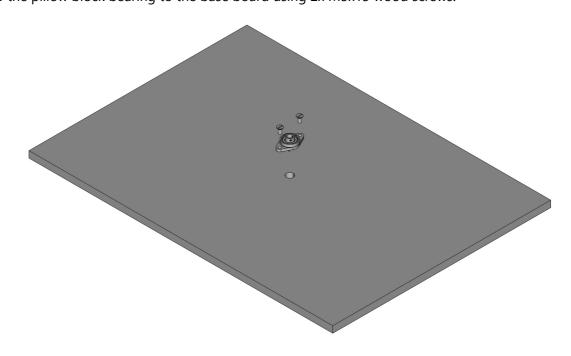


2. Glue the 2 long timber posts to the base board and fix it with 8x M5x45mm countersunk wood screws.

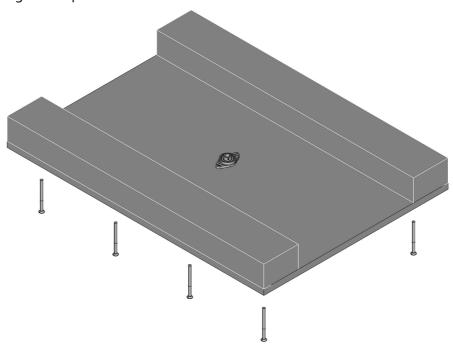


3. Glue the 4 plywood hooks to the long posts, aligning the corners as shown in the picture below. Fix it with 16x M5x45 countersunk wood screws.

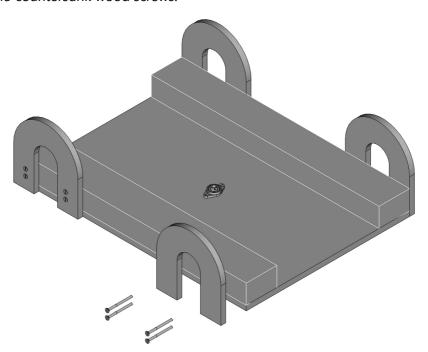


4. Glue the 2 short timber posts to the base board centring them on the hooks. Fix them with 6x M5x45mm wood screws to the bottom base.

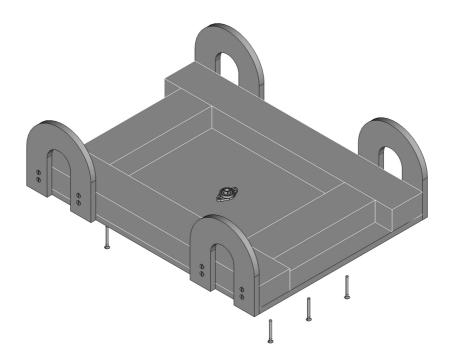

5. Bottom view of the screws fixing the posts to the base board.

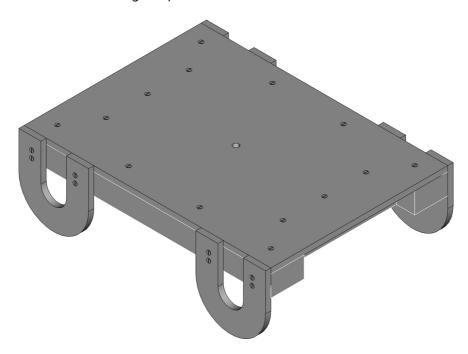

6. Fix the short posts to the long posts with 4x M5x150 countersunk wood screws.

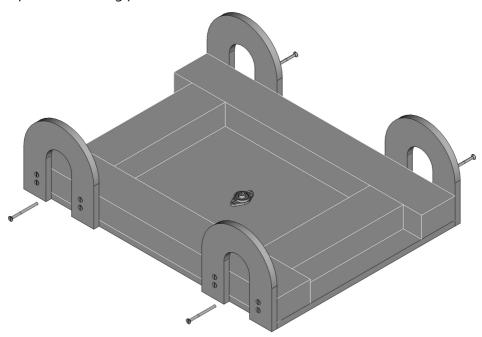

7. The finished piece

