KMQRDZI

INSTALLATION GUIDE

CONTENTS

DRIVER'S DOOR - OLDER DOOR TRIM

Compatibility, preparation and tools 2

Trim removal: speaker and switch panel 3-5

Door-handle covers and armrest fasteners 6-8

Remove armrest and lower door trim 9-10

Loosen the outside door handle 11

Insert and align protective plates 11-12

Reassembly and final checks 13

REAR DOOR - WITH LOCK CYLINDER

Compatibility and preparation 14

Remove rear-door trim and loosen handle 14

Fit and align protective plates 14-15

Reassembly and final checks 16

Sealing & Paint Protection Notice

Additional sealing is generally not required. Keep door drainage holes clear. If desired, use a thin paint-compatible protective layer, such as paint protection film, closed-cell foam or automotive sealant. Avoid water-absorbent materials and ensure the handle moves freely.

INSTALLATION GUIDE

Driver's door - older door trim

Compatibility

Fiat Ducato from 2006 with the older door trim; this is the usual version through model year 2020. From model year 2021, check the actual trim.

Peugeot Boxer and Citroën Jumper from 2006 with the older door trim; this interior was used until the model update for 2024.

Stellantis-based Opel Movano from 2021, if the older door trim shown is fitted.

The original cab door with a lock cylinder is required. The actual door trim determines the correct guide, not the registration date alone.



Left: newer door trim. Right: older door trim.

The two-part outer plate is pushed from the outside between the handle shell and the door sheet metal. In order to be able to loosen the handle from the inside, first remove the door trim. The removal up to the opened door membrane corresponds to the internal assembly.

Before installation

Read the entire guide before starting and have the tools and materials ready. If you also plan to replace the speakers or insulate the door with Alubutyl, you can do so while the trim is off. Neither task is required to fit the protective plate.

Tools and materials

- Phillips screwdriver and Torx bits T15-T30
- 10 mm socket, ratchet and extension
- Plastic trim lever or clip-removal tool
- Pliers for stubborn clips and connectors
- If necessary, a small slot screwdriver for unlocking plugs
- A cloth for collecting nuts and a tray for screws
- cord or strap for securing the detached armrest
- Cutter knife and suitable adhesive tape for resealing the door membrane

> **Recommended trim-removal tool:** A Door-trim and clip-removal tool makes it easier to release covers and clips without scratches or broken tabs. Place the tool close to each fastener. If a part resists, check where to lever and look for any remaining screws.

Open the driver's door and secure it against slamming. **Lower the pane about 5 cm while the power-window switch is still connected.** The window gap will help secure the detached armrest later. Keep the removed screws with their corresponding parts.

> **Paint protection and sealing:** No additional seal is required under the outer plate. If you want a protective layer, use paint-protection film, thin closed-cell foam or a paint-compatible automotive sealant such as DEKASEAL 8936. Do not use absorbent material. The layer must allow the plate to sit flush and the handle to move freely. Keep the door drains clear. Clear sealant is less visible if a little squeezes out.

Remove the trim components


Start with the speaker. After that, work your way through the switch console and the covers to the armrest. Only remove the lower door panel when these parts are detached.

1. Remove the speaker grille and speaker

The speaker grille clips in at three points. Carefully lift it at the edge with a plastic trim tool and pull it forwards. **Only when the grid is removed, release the three fastening screws behind it.**



Carefully remove the clipped-in grille first.

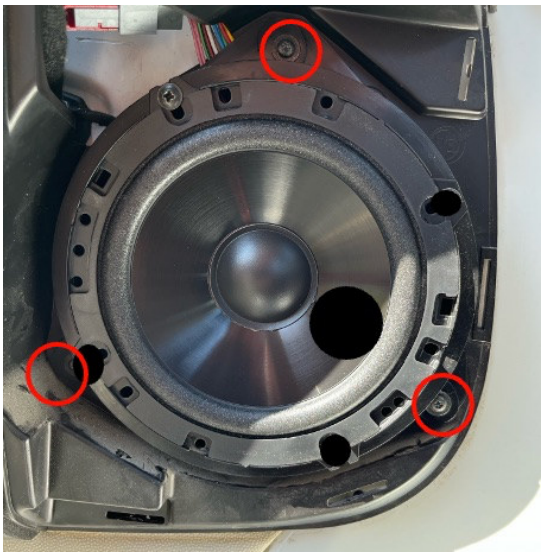

Then turn out the three screws marked red on the outside.

Hold the speaker when the screws are loosened and then carefully pull it out. Press the lock on the plug and unplug the plug on the housing. Don't pull on the cables. Set the speaker aside. **Remove the speaker and disconnect its cable before taking off the door trim.**

2. Remove the power-window switch panel

The switch panel often fits tightly. Insert the plastic trim lever at its **rear short end** - shown by the red arrow on the left in the following photo - and carefully lift the panel there.



Start here: at the rear end of the console, on the left in the photo.

Once a gap appears, hold it open with a thin plastic card. Continue releasing the switch panel step by step. When its rear end is free, unhook the front retaining tab and lift out the panel.



Raise the rear, then unhook the front retaining tab.



Unlock plug connections and unplug them on the housing.

Release the connectors underneath and pull them out by their housings. The opening reveals **an armrest fastening screw**. Remove this screw.



This screw under the switch console must also be removed.

3. Remove the door-handle covers and remaining screws

Cover behind the inside door handle

Carefully lever out the small cover behind the inside door handle. Beneath it are **two screws**. Remove both screws.



Carefully remove the small cover.



Remove both screws circled in red.

Rear cap on the armrest

The next cover is at the rear top of the armrest. **Slide this cap upwards and remove it.** Remove the screw underneath it too.

> **If a REMIS blind is fitted, create space first:** Carefully remove the REMIS-marked cover at the upper left of the frame. Loosen the screw beneath it and lift the frame slightly. You can then slide the armrest cap up far enough to remove it. If there is still too little clearance, loosen other fasteners as required for your REMIS version.



The upper fastening screw is seated under this REMIS cover.




Slide the rear cap upwards and remove it.



After removing the cap, the screw becomes visible underneath.

Screws beneath the small side compartment

Beneath the armrest's small side compartment are **two more Phillips-head screws**. Remove these too.

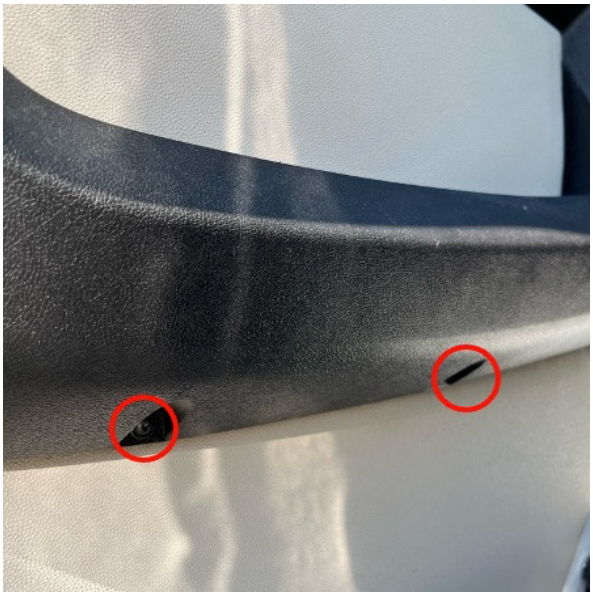

Remove both screws on the underside.

4. Remove and secure armrest

Now the fastening screws of the upper armrest and handle unit are removed: one under the switch console, two behind the inside door handle, one under the rear cap and two at the bottom. Carefully detach the unit from its clips and hold it in place.

The armrest still hangs on the release cable of the inside door handle. **Leave it attached.** Secure the detached unit with a string or strap on the previously lowered window so that the underlying door panel is freely accessible. The cable and cables shall not bear their weight.



Secure the detached armrest before you continue working on the lower door panel.

5. Remove the storage compartment and door trim; open the membrane

First unscrew the large storage compartment at the bottom of the door. It is secured with **four Torx screws** . Support the compartment while removing the last screw, then take it off.



The storage compartment is fastened at the top left and right and at the bottom with two further screws. Remove all four screws and remove the compartment.

Carefully release the lower door trim from its clips around the edge. Place the trim-removal tool close to each clip. Remove the trim and set it aside. If any clips remain in the door sheet metal, remove them with the clip tool. Refit intact clips to their mounting points in the trim before reassembly; replace damaged clips.

The door membrane lies behind the trim panel. **Cut the membrane cross-shaped in the area of the outside door handle with a utility knife.** Raise the membrane a little from the substrate and guide the blade only through the membrane so that you do not damage cables and components behind it. Fold the resulting flaps to the side. The opening only needs to be so large that you can reach the attachments of the outside door handle and loosen the grip.

Alternatively, you can carefully detach the membrane at the edges. After installation, close the cut membrane with adhesive tape; glue the loosened edges again with a suitable adhesive.



Here, storage compartment and lower door trim have already been removed. The small picture shows a trim panel clip.

Fit the outer protective plate

6. Loosen the outside door handle

Stuff a cloth under the work area into the cavity. It catches falling parts. **Remove all three nuts on the door handle** by about 3 mm using the 10 mm socket: two nuts are below, and the third is above them on the left. Remove the rubber plug from the service opening to reach the upper nut with the socket. Refit the plug afterwards. **The three nuts remain on the threaded bolts.** The outside door handle is only loosened, not completely removed.



Overview: Remove the plug on the door edge for access to the upper grip nut.



The third grip nut sits on the left above the two lower nuts.

Clean the paint around the handle and the contact surfaces of the plate so that there are no dirt particles in between.

7. Insert the lower section

Carefully lift the loosened handle a little and push the lower part of the protective plate from the outside between the handle shell and the door sheet metal. Push it into position without force and temporarily fix it with tape.



Installation example using the example of the rear door: pushing and aligning the lower part between the handle shell and the door sheet metal.

8. Insert the upper section and align both pieces

Place the upper part between the handle shell and the door sheet metal. The lugs of the upper part engage in the recesses of the lower part. At first, only slightly tighten the nuts so that the two plate sections can still be aligned. Align the upper and lower parts evenly to the handle and to each other.



Installation example on the example of the rear door: The upper part is in place, the lower part is still held in place with adhesive tape.

If both parts fit neatly and the handle is freely movable, tighten the loosened nuts without overtwisting the attachment. Remove the fixation tape and check the fit again.



Installation example on the example of the rear door: The outer panel is fully assembled.

Remove the cloth and all loose parts completely from the door cavity.

Reassemble the door

9. Refit the trim and check operation

Once you have cut the door membrane, close the cuts carefully with adhesive tape. Once you have detached the membrane at the edges, glue these areas tightly again with a suitable adhesive. Then attach the trim panel parts in reverse order:

1. **Lower door trim:** Put all the intact, matching clips in their mounting recesses. Align the panel and press it close to the clips. Screw the separate storage compartment again.
2. **Armrest and handle unit:** Run the cables to their openings and insert the upper unit. Make sure that neither cable nor release cable is clamped or tensioned. Insert all previously loosened screws again.
3. **Covers and REMIS:** Insert the panel behind the inside door handle. The rear armrest cap is inserted from top to bottom. Then attach the previously detached REMIS frame again.
4. **Switch panel and speaker:** Reconnect the switch panel until its connectors click into place. Hook in the front end, then press the rear end into its recess. Reconnect the speaker until its plug clicks into place. Fit the speaker without trapping its cable and secure it with the three screws removed earlier. Finally, refit the speaker grille. Degrease the area beside the door handle and apply the KMQRDZi sticker.

Final checks

Keep the key at your fingertips when checking so you don’t accidentally lock yourself out.

- The inside and outside door handles, key and central locking all work.
- The power window, any fitted mirror controls and the speaker work.
- The door opens and closes normally; all trim parts are fixed and flush.
- All screws, nuts, clips and covers are reassembled; the REMIS frame is fixed.
- The door membrane is closed, the trapping cloth is removed and no cable is clamped.

INSTALLATION GUIDE

KMQRDZi Anti-Prick Pro

Rear door with lock cylinder

Compatibility

Fiat Ducato from 2006; Peugeot Boxer and Citroën Jumper from 2006; Stellantis-based Opel Movano from 2021; Toyota Proace Max from 2024.

Only for original twin rear doors on a panel van with a lock cylinder in the rear door. The version of the cab door trim does not matter.

At the rear door, slide the two-piece outer plate from outside between the handle surround and the door sheet metal. Access the fasteners from inside after removing the lower rear-door trim.

Before installation

This guide applies to the rear door with original lock cylinder. Open the door and secure it against slamming. Provide a screwdriver matching the screw head, a 10 mm socket with ratchet and extension, a cloth and suitable adhesive tape.

> **Paint protection and sealing:** No additional seal is required under the outer plate. If you want a protective layer, use paint-protection film, thin closed-cell foam or a paint-compatible automotive sealant such as DEKASEAL 8936. Do not use absorbent material. The layer must allow the plate to sit flush and the handle to move freely. Keep the door drains clear. Clear sealant is less visible if a little squeezes out.

1. Remove lower rear door panel

At the rear door with lock cylinder, remove the lower inner paneling at the level of the door handle. It is usually screwed; The type and number of attachments may vary depending on the vehicle manufacturer and the installation. Remove all existing attachments and remove the trim panel carefully.

If the working area is additionally covered with membrane, open it only as far as necessary. After assembly, it must be completely closed again.

Fit the outer protective plate

2. Loosen the outside door handle

Stuff a cloth under the work area into the cavity. It catches falling parts. Remove the fastenings of the rear door handle from the inside only so far that the handle can be lifted off the door sheet metal a little. The nuts remain on the threaded bolts; the handle is not completely removed.

Clean the paint around the handle and the contact surfaces of the plate so that there are no dirt particles in between.

3. Insert the lower section

Carefully lift the loosened handle a little and push the lower part of the protective plate from the outside between the handle shell and the door sheet metal. Push it into position without force and temporarily fix it with tape.



The lower part is pushed from the outside between the handle shell and the door sheet metal.

4. Insert the upper section and align both pieces

Place the upper part between the handle shell and the door sheet metal. The lugs of the upper part engage in the recesses of the lower part. At first, only slightly tighten the nuts so that the two plate sections can still be aligned. Align the upper and lower parts evenly to the handle and to each other.



upper part in place; the lower part is still held in place with adhesive tape.

If both parts fit neatly and the handle is freely movable, tighten the loosened nuts without overtwisting the attachment. Remove the fixation tape and check the fit again.



The two-part outer sheet after tightening the nuts and removing the adhesive tape.

5. Reassemble the rear door

Take the cloth, tools and loose parts completely out of the door cavity. Close an opened membrane tight again. Mount the trim panel with all previously detached fastenings.

With the key at your fingertips, check the door handle, the lock and the central locking. The door shall open and close normally; the protective plate shall be fixed and shall not touch moving parts.