


FORMAT ARCHI E


NON DU FICHIER : 26-0094-02_E.DWG

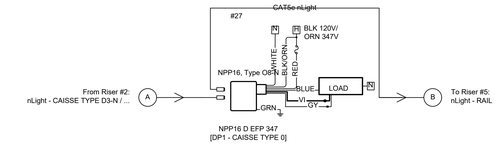

1 nLight - CAISSE TYPE 0
Design 2

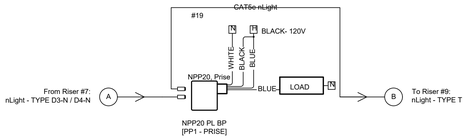

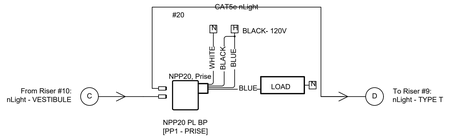

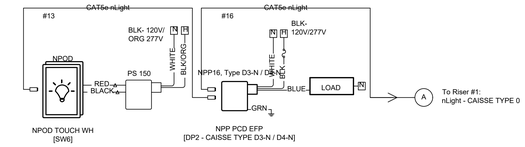

2 nLight - CAISSE TYPE D3-N / D4-N
Design 2


RELEVE E103 - MATERIEL


23 reperes / 2 familles / calques activables

0 non identifies - 0 identifications a revalider (*)


	NL	BOITIER DE CONTROLE NLIGHT (DP1 NPP16 D EFP 347 / DP2 NPP PCD EFP / PP1 NPP2...	20
	NS	INTERRUPTEUR MURAL NLIGHT (SW1 NPODMA WH / SW6 NPOD TOUCH WH)	3


PL : rectangles aux dimensions graphiques du plan.
W et circuits affiches uniquement si verifies.
*: identification heritee a revalider ; NI : materiel non identifie.
Les quantites concernent cette feuille.
Modeles, prescriptions et sources : bordereau page 2.

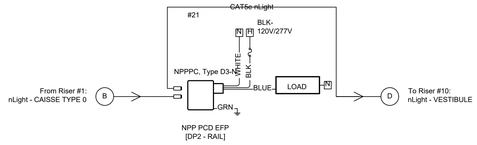

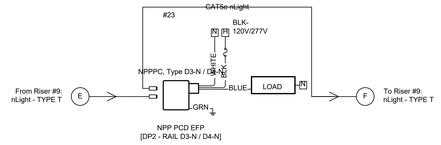

3 nLight - ENTREPOT
Design 2

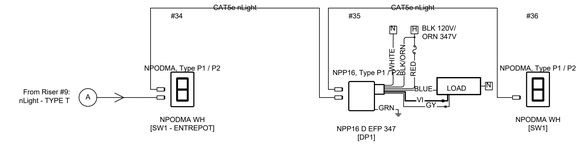

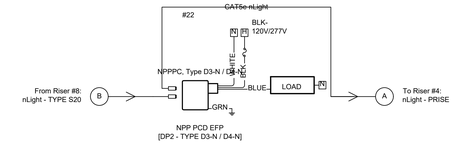


4 nLight - PRISE
Design 2


5 nLight - RAIL
Design 2


6 nLight - RAIL D3-N / D4-N
Design 2


7 nLight - TYPE D3-N / D4-N
Design 2

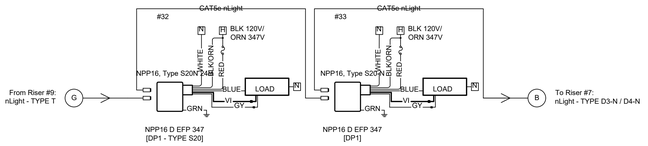


8 nLight - TYPE S20
Design 2

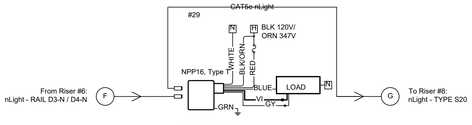

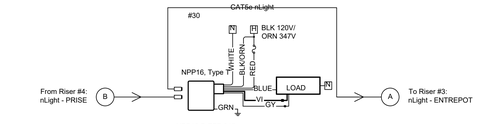

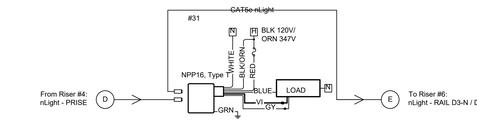


9 nLight - TYPE T
Design 2

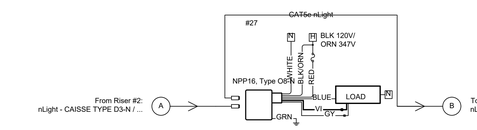

10 nLight - VESTIBULE
Design 2





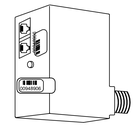

NOTES:


EVERY NLIGHT ENABLED DEVICE (INCLUDING NLIGHT EANABLED FIXTURES) IS FURNISHED WITH (1) PERMANENTLY ADHERED ID TAG AND (1) MATCHING, PARTIALLY ADHERED ID TAG TO BE PLACED ON THE RISER DIAGRAM OR BARCODE TEMPLATE SHEET PROVIDED AS PART OF AN NLIGHT SUBMITTAL DURING INSTALLATION AND PRIOR TO FACTORY STARTUP, CONTRACTOR SHALL PLACE EACH ID TAG BELOW EACH CORRESPONDING DEVICE SHOWN ON RISER DIAGRAM TO FACILITATE FACTORY STARTUP. FAILURE TO COMPLY MAY RESULT IN STARTUP DELAYS AND ADDITIONAL COSTS AT THE CONTRACTOR'S EXPENSE. DO NOT PLACE DEVICE ID STICKERS ON FLOOR PLAN UNLESS REQUIRED TO EXECUTE NFLOORPLAN SERVICES. REFERENCE NFLOORPLAN SERVICE NOTES ON THIS SHEET FOR SPECIFIC REQUIREMENTS.

THE SMALL BARCODE LABELS INCLUDED WITH ALL NLIGHT DEVICES AND NLIGHT ENABLED FIXTURES MUST BE PLACED ON A PRINTED PLAN SHEET BY THE INSTALLER PRIOR TO ONSITE SYSTEM STARTUP.

THE BARCODE INDICATES THE UNIQUE ID OF EACH NLIGHT DEVICE. THIS ID IS USED DURING SYSTEM STARTUP TO PROGRAM DEVICES WITH THE CORRECT GROUPINGS AND SETTINGS. WITHOUT THIS, SYSTEM STARTUP WILL REQUIRE ADDITIONAL DAYS ON THE JOB TO LOCATE DEVICE IDS.

BARCODE INSTRUCTIONS:

1. * PRINT A PLAN SHEET OF THE INSTALLATION AREA TO A MINIMUM D SIZE (24 X 36). THE PLAN MAY BE A RISER SHEET OR BARCODE TEMPLATE (EITHER ARE PREFERRED). FLECTED CEILING PLAN, LIGHTING PLAN, AND ELECTRICAL PLAN, SO LONG AS ALL DEVICES CAN BE LOCATED BY THE FIELD SUPPORT ENGINEER.
2. PLACE THE SMALL BARCODE LABEL (0.875 LONG) FROM EACH LUMINAIRE AND DEVICE ON THE FLOORPLAN. THE LARGE BARCODE LABEL (1.25 LONG) CAN BE USED ON THE OUTSIDE OF ANY HOUSING OR JUNCTION BOX THAT OBSCURES THE ID NUMBER SHOWN ON THE DEVICE ITSELF.
3. SAVE THE PLAN AT THE JOB SITE, AND HAND OVER TO ACUITY FIELD SUPPORT ENGINEER OR OTHER PERSONNEL RESPONSIBLE FOR ONSITE SYSTEM STARTUP. IT IS ALSO ACCEPTABLE TO PROVIDE THE BARCODE PLAN AS SCANNED PDF FILES, EMAILED TO CONTROLS.STARTUPS@ACUITYBRANDS.COM, WITH PROJECT NAME AND PROJECT ADDRESS IN SUBJECT LINE AND A COPY OF THE ONSITE STARTUP REQUEST FORM.
4. DRAW ON PLAN ANY LOCATION CHANGES FOR A FIXTURE OR DEVICES, IF DIFFERENT THAN SHOWN ON PLAN.

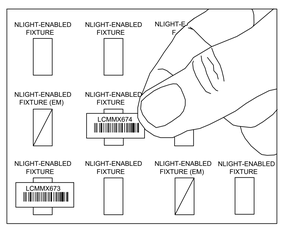

NLIGHT BARCODE INSTRUCTIONS

N.T.S.

TIA / EIA-568-B CABLING STANDARD TERMINATION


Function	PAIR #	PIN OUT (T568B)	Wire Color
(T1) (R1)	1	5 4	WHITE w/ BLUE BLUE
Tx + (T2) Tx - (R2)	2	1 2	WHITE w/ ORANGE ORANGE
Rx + (T3) Rx - (R3)	3	3 6	WHITE w/ GREEN GREEN
(T4) (R4)	4	7 8	WHITE w/ BROWN BROWN

TERMINATION & TESTING OF CAT5 CABLES MUST BE DONE BY A QUALIFIED NETWORK INSTALLER

Cable termination requirements:

1. Strip off outer jacket - approximately 1-1/2" (37.6 mm)
2. Terminate approximately 1/2" (12.2 mm) from end of conductors on type 110 punch down block or connector per schedule (t568b) - maximum untwist of conductors to terminations is 1/2" (12.2 mm) - trim excess leads.


SEE SYSTEM SPECIFIC NOTES ON SHEET LC0.1 FOR MAXIMUM CABLE LENGTHS.

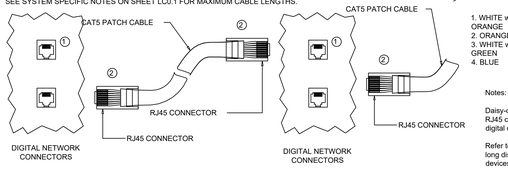


1. RJ45 FEMALE CONNECTOR
2. RJ45 MALE CONNECTORS. ALL CABLES SUPPLIED BY CONTRACTOR.

CAT5E/6 CABLE TERMINATION

N.T.S.

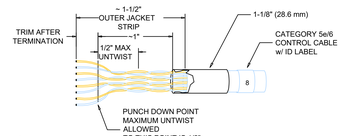



Notes:

Daisy-chain CAT5 patch cable with RJ45 connectors from digital device to digital device.

Refer to manufacturers instructions for long distance runs between digital devices.

Crimp and test each cable with a LAN circuit tester prior to installation.

NE PAS UTILISER
POUR CONSTRUCTION

NO	DATE (AAAA-MM-JJ)	REVISION	PAR
0	2026-08-26	POUR SOUMISSIONS	J.B.

SCEAUX

2026-08-26

TITRE DU PROJET

SAQ VARENNES
VARENNES, QC, J3X 1P7

TITRE DU DESSIN

DÉTAILS
CONTRÔLE D'ÉCLAIRAGE

DISCIPLINE

ÉLECTRIQUE

DESSINÉ PAR	DATE (AAAA-MM-JJ)
H. HATTAB, CPI	2026-07-13
DESSINÉ PAR	ÉCHELLE
F. BÉLAND, tech.	AUCUNE
VÉRIFIÉ PAR	NO DE PROJET
J. BACHKONGI, ING.	26-0094-02
APPROUVÉ PAR	PLAN NO
J. BACHKONGI, ing.	E103

DIREKTION 360

CLIENT
SAQ
Aménagement et design
Réseau des succursales
7920, RUE TELLIER, MONTRÉAL (QUÉBEC) H1N 3W5

ARCHITECTE
artesa
ARCHITECTES CONCEPTEURS

NOTES

WWW.DIREKTION.COM - (514)-508-8325

BORDEREAU MATERIEL - E103

23 reperes sur cette feuille - prescriptions recopiees du devis et du releve verifie.

Les modeles non renseignes restent a preciser. Les circuits divergents exigent une clarification.

ID	Qte	Famille	Modele / type	Prescription du devis	Source / reserve
NL	20	BOITIER DE CONTROLE NLIGHT (DP1 NPP16 D EFP 347 / DP2 NPP PCD EFP / PP1 NPP20 PL BP / SO3-SO4 WSXA MWO PDT)	WH; T D; D; PP1 PL BP; P1 D P2; D T; D WH MODELE NON PRECISE	BOITIER DE CONTROLE NLIGHT (DP1 NPP16 D EFP 347 / DP2 NPP PCD EFP / PP1 NPP20 PL BP / SO3-SO4 WSXA MWO PDT)	E-001 légende ; bloc S004
NS	3	INTERRUPTEUR MURAL NLIGHT (SW1 NPODMA WH / SW6 NPOD TOUCH WH)	P1 WH P2; WH MODELE NON PRECISE	INTERRUPTEUR MURAL NLIGHT (SW1 NPODMA WH / SW6 NPOD TOUCH WH)	E-001 légende ; bloc S059