
BioMicroLab Scan

How to export the correct 96-well CSV file for SciSure
(SPT Labtech Scan v2.13)

1 Open the Scan screen


- **Run > Scan**
- Select the 96-well rack profile.

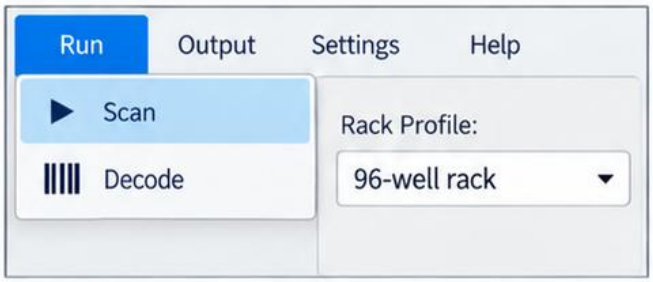

2 Load the rack correctly

- Place the rack on the SBS adapter.
- Align the A1 corner with the scanner's A1 mark.



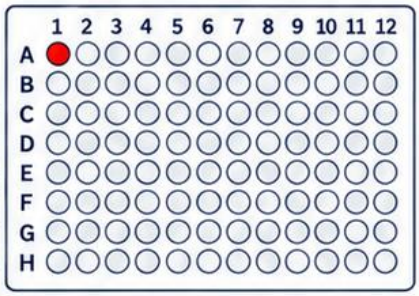

3 Decode the tubes


- Click **Decode.**
- Confirm all wells are read (96/96).





4 Configure Export

Output > Configure Export > Sheet Formatting

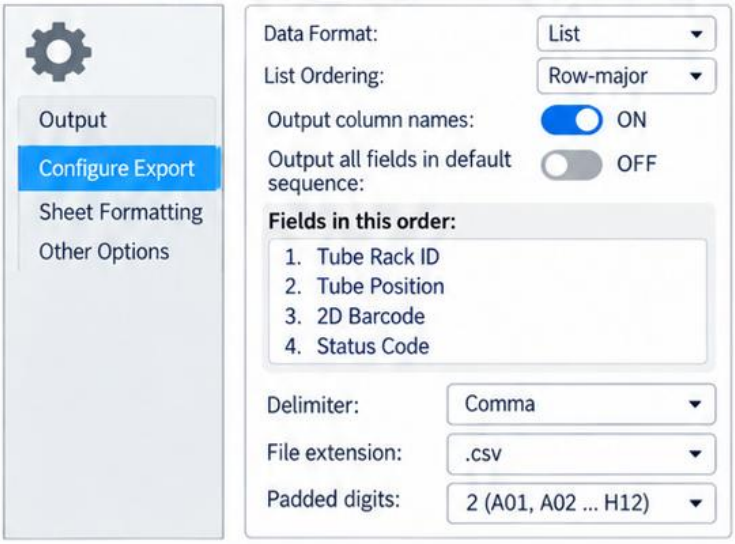

5 Export and verify the CSV

- Click **Output / Export** and save the file.




```
Tube Rack ID, Tube Position, 2D Barcode, Status Code
TS05060884, A01, K2307711, 0
```

6 Camera focus tip

1. If no image is visible, click the Camera On/Off button until the camera shows a green check.
2. Open the Camera tab or camera settings.
3. In Advanced Settings, use the Focus control. In the Zoom/Scale View, hover over the target area and left-click to auto-focus on that area.
4. Confirm the wells and 2D barcodes look sharp before decoding.

Best image quality is achieved after warmup.





Quick Check

- 96 wells present (A01–H12)
- No blank barcodes
- Status Code = 0
- Save as .csv