




Control Lab Assembly


Fall 2026

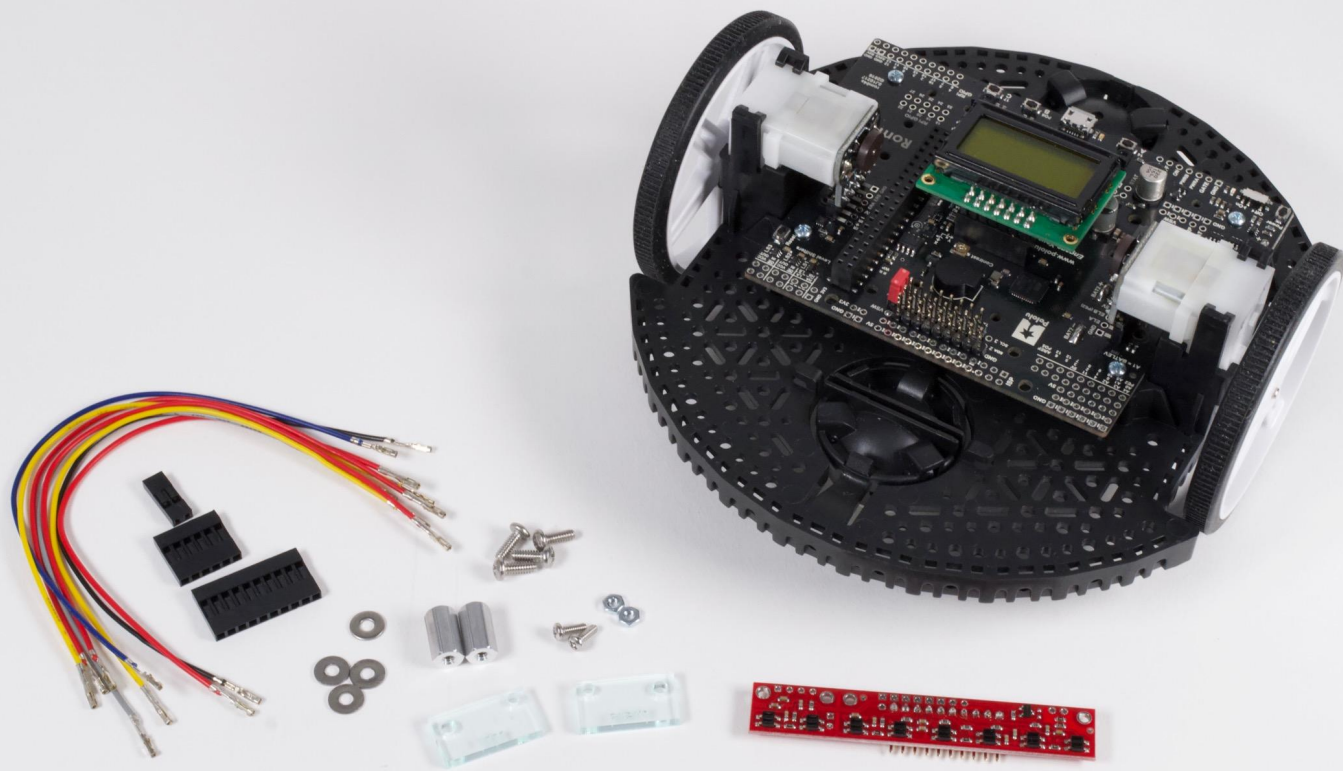


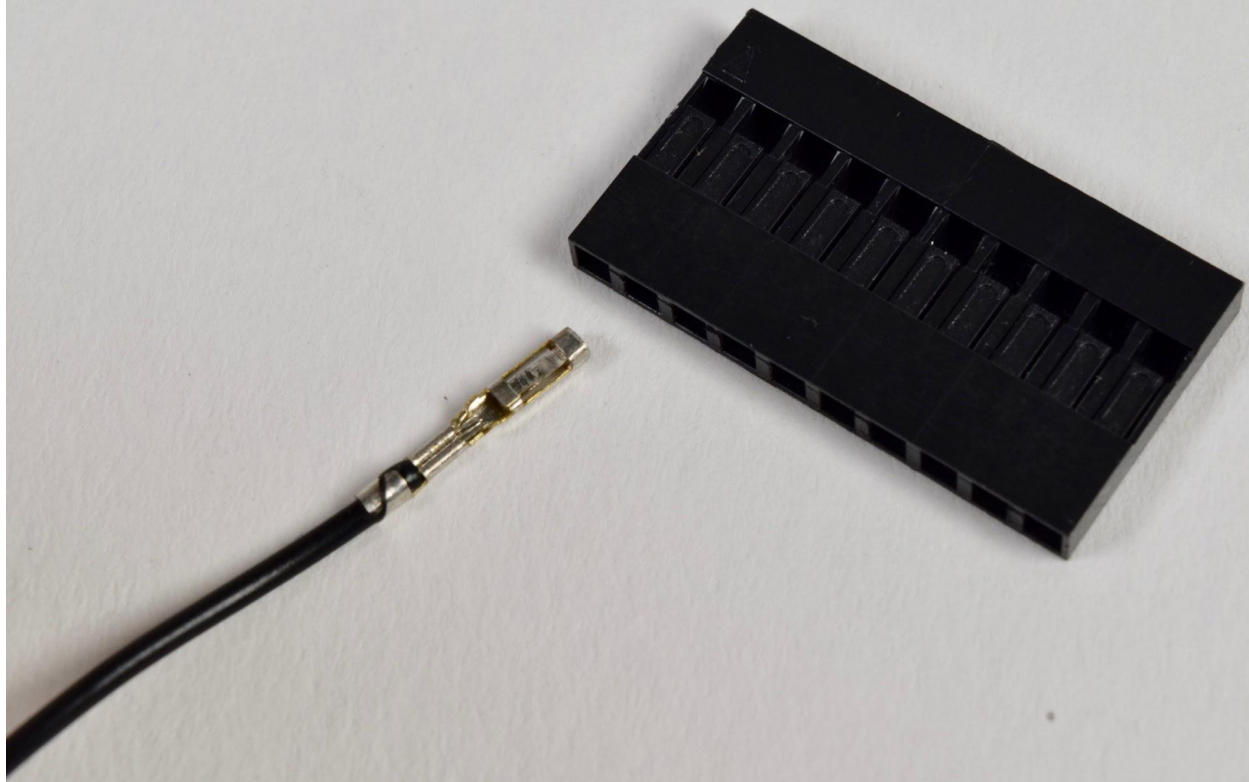




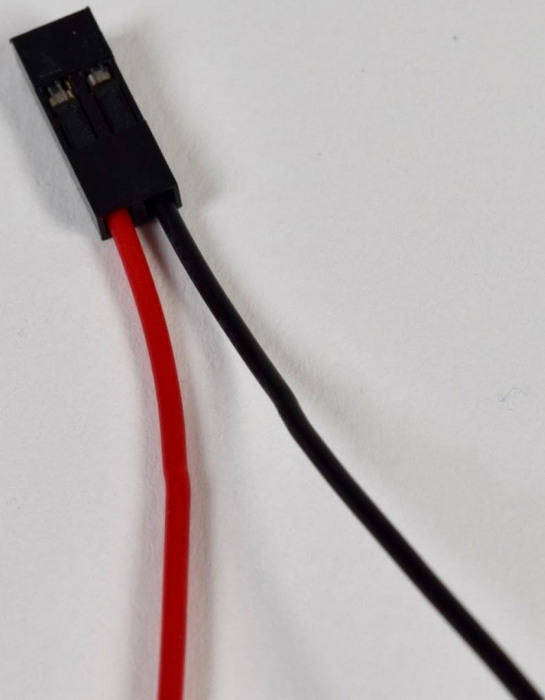


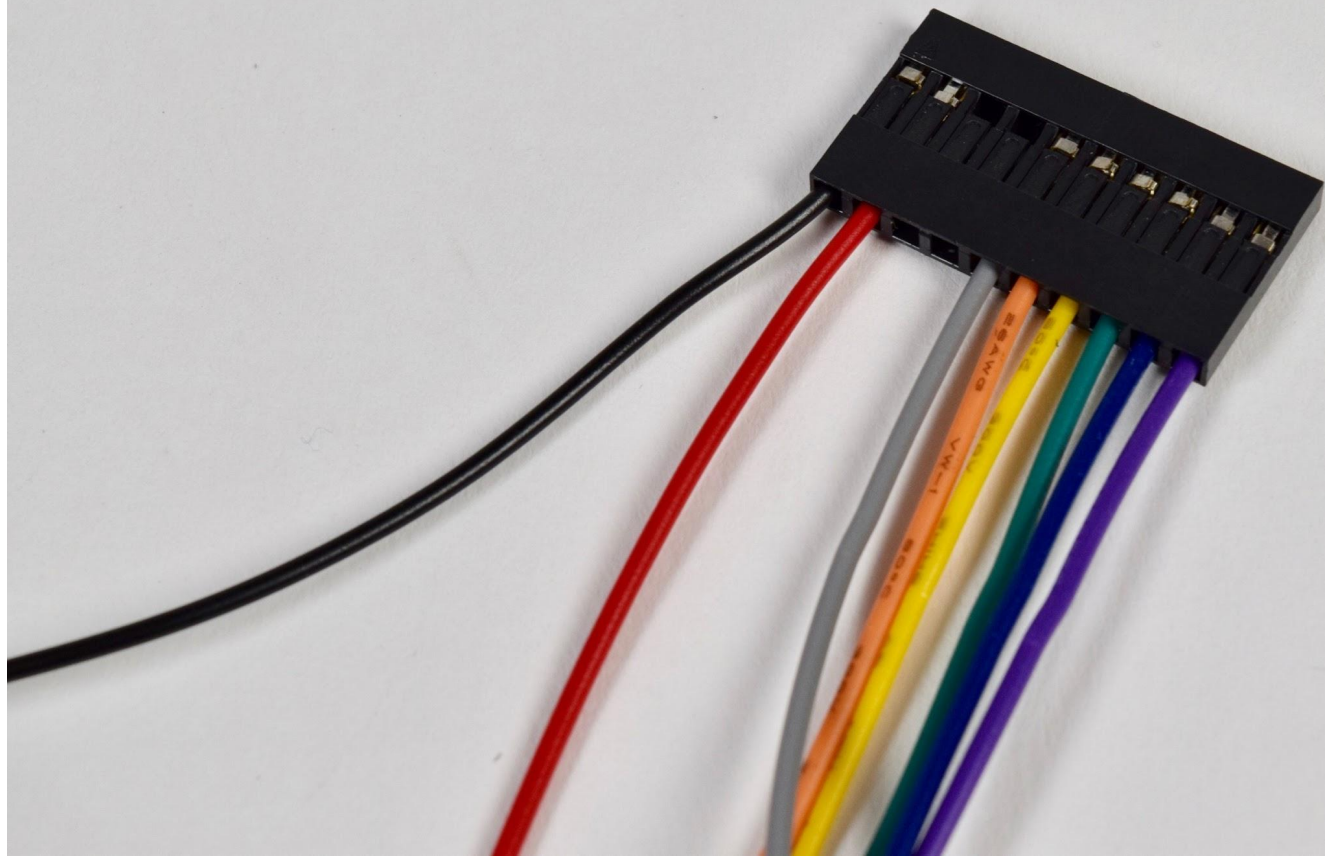


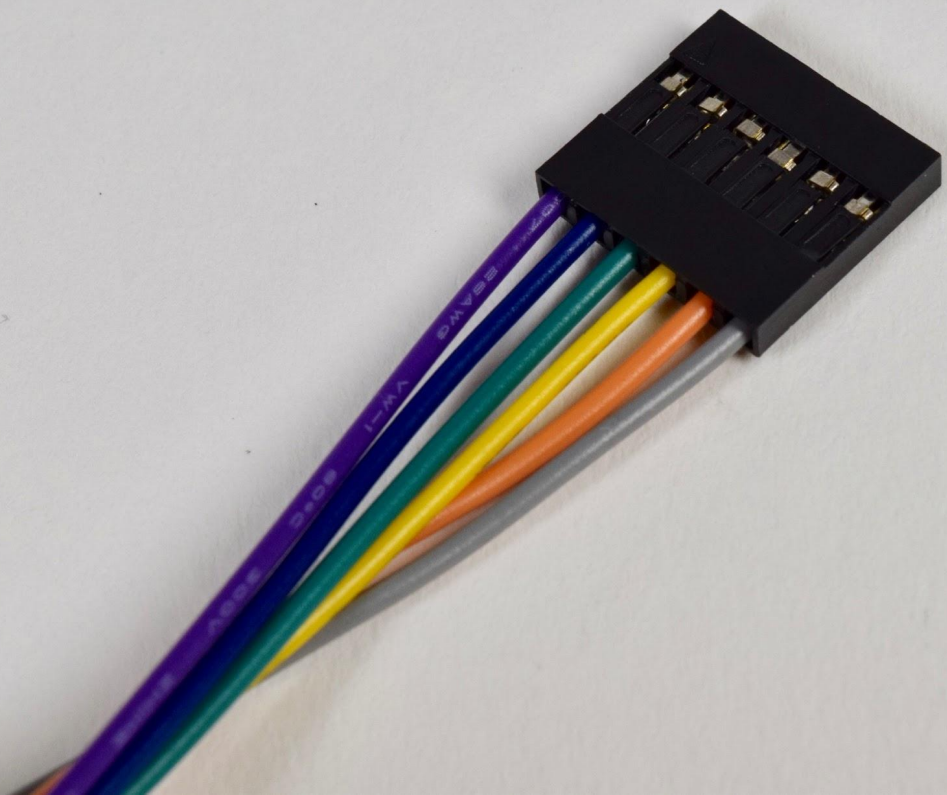

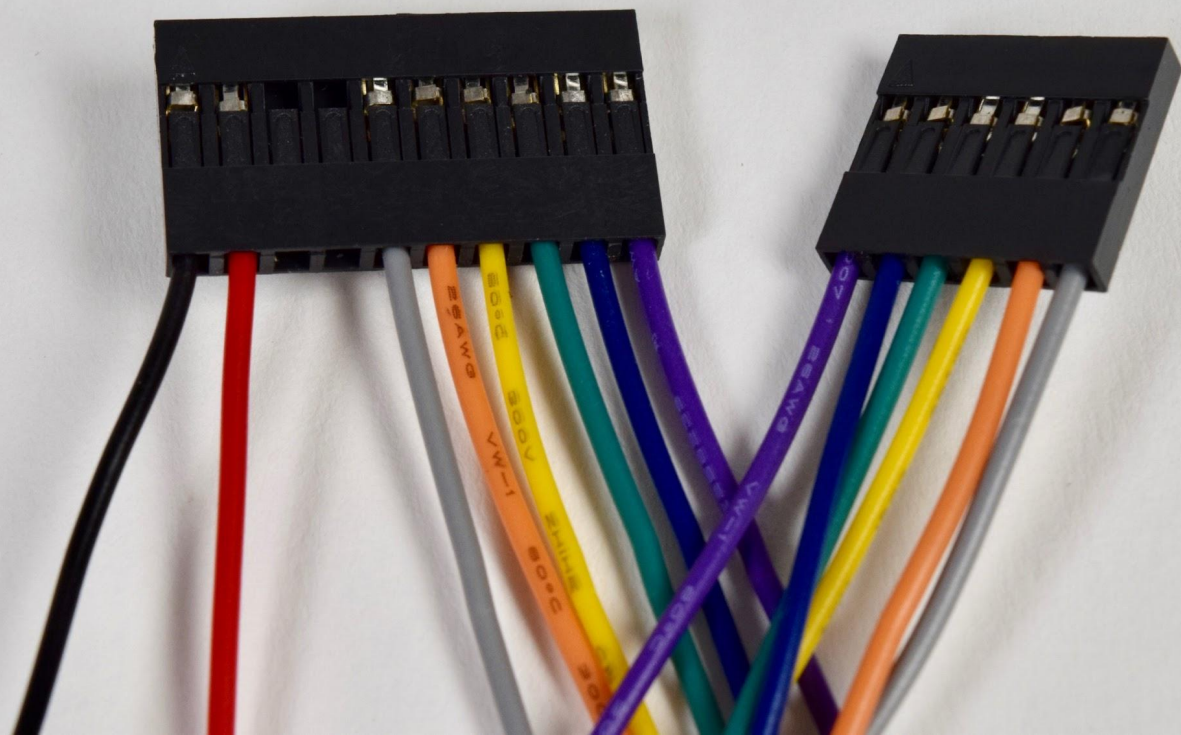





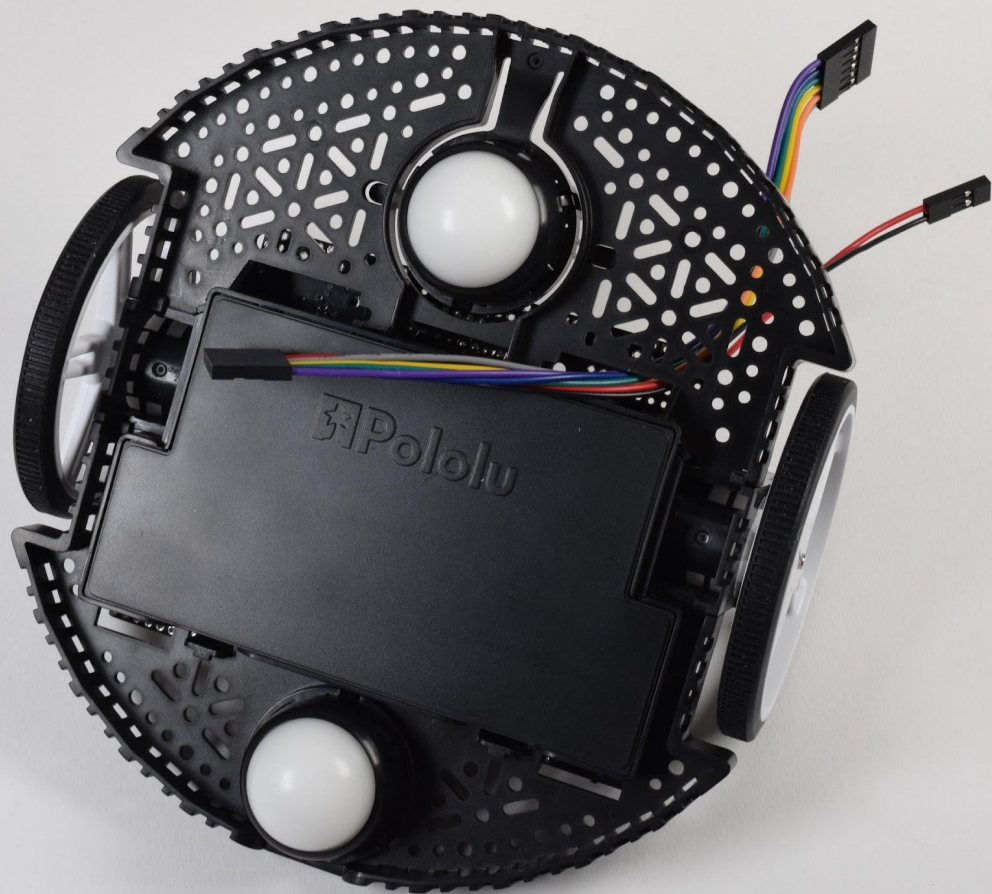


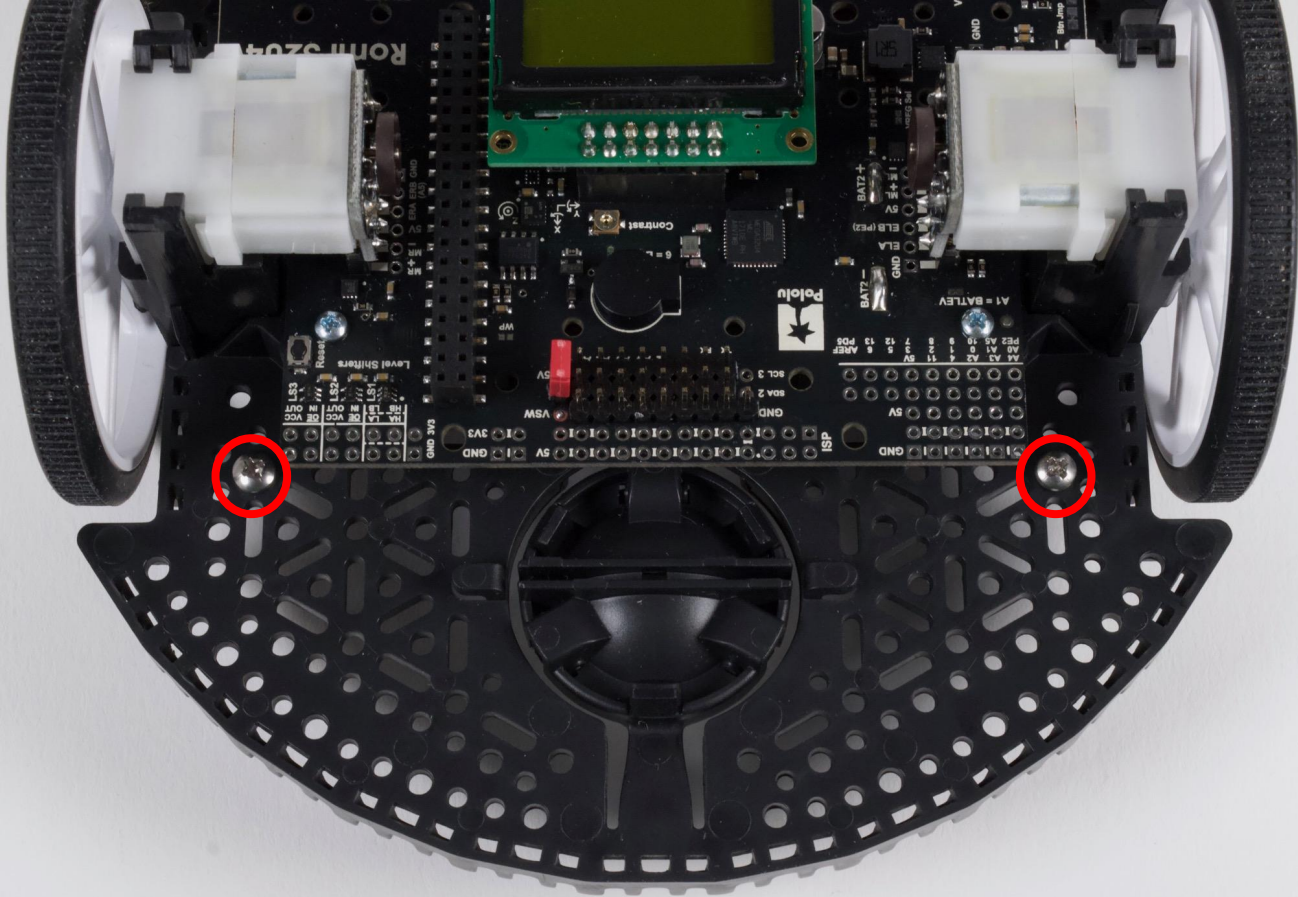



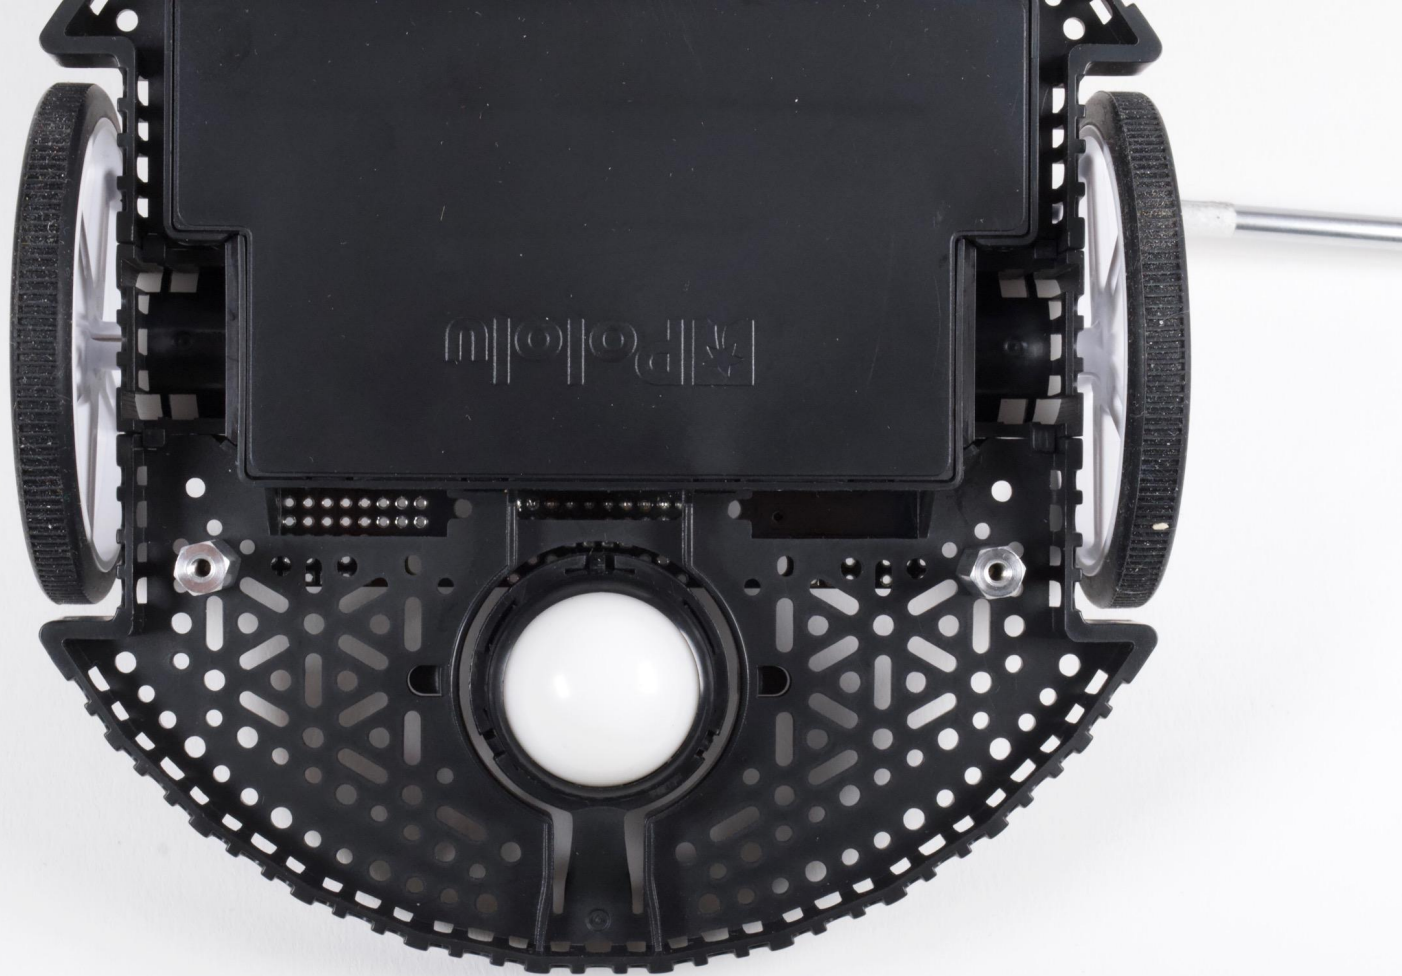

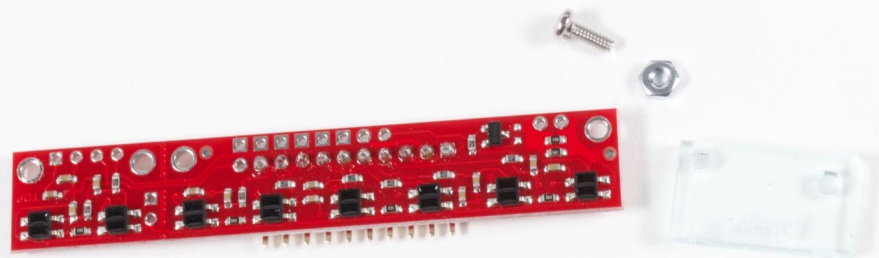

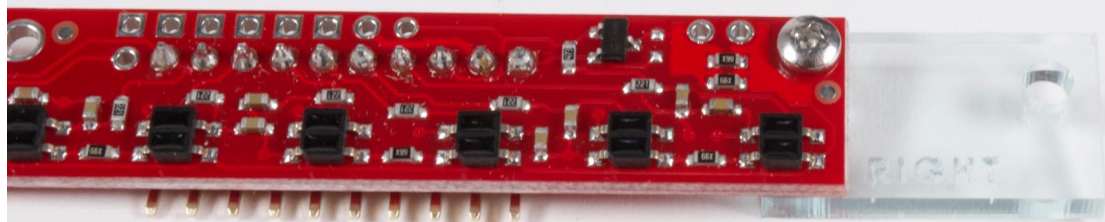



Place 1-2 washers on screw before attaching the sensor assembly to the robot



