



Romi Robot Assembly


Fall 2026


We will hand
this out later


Might already
be installed
on robot

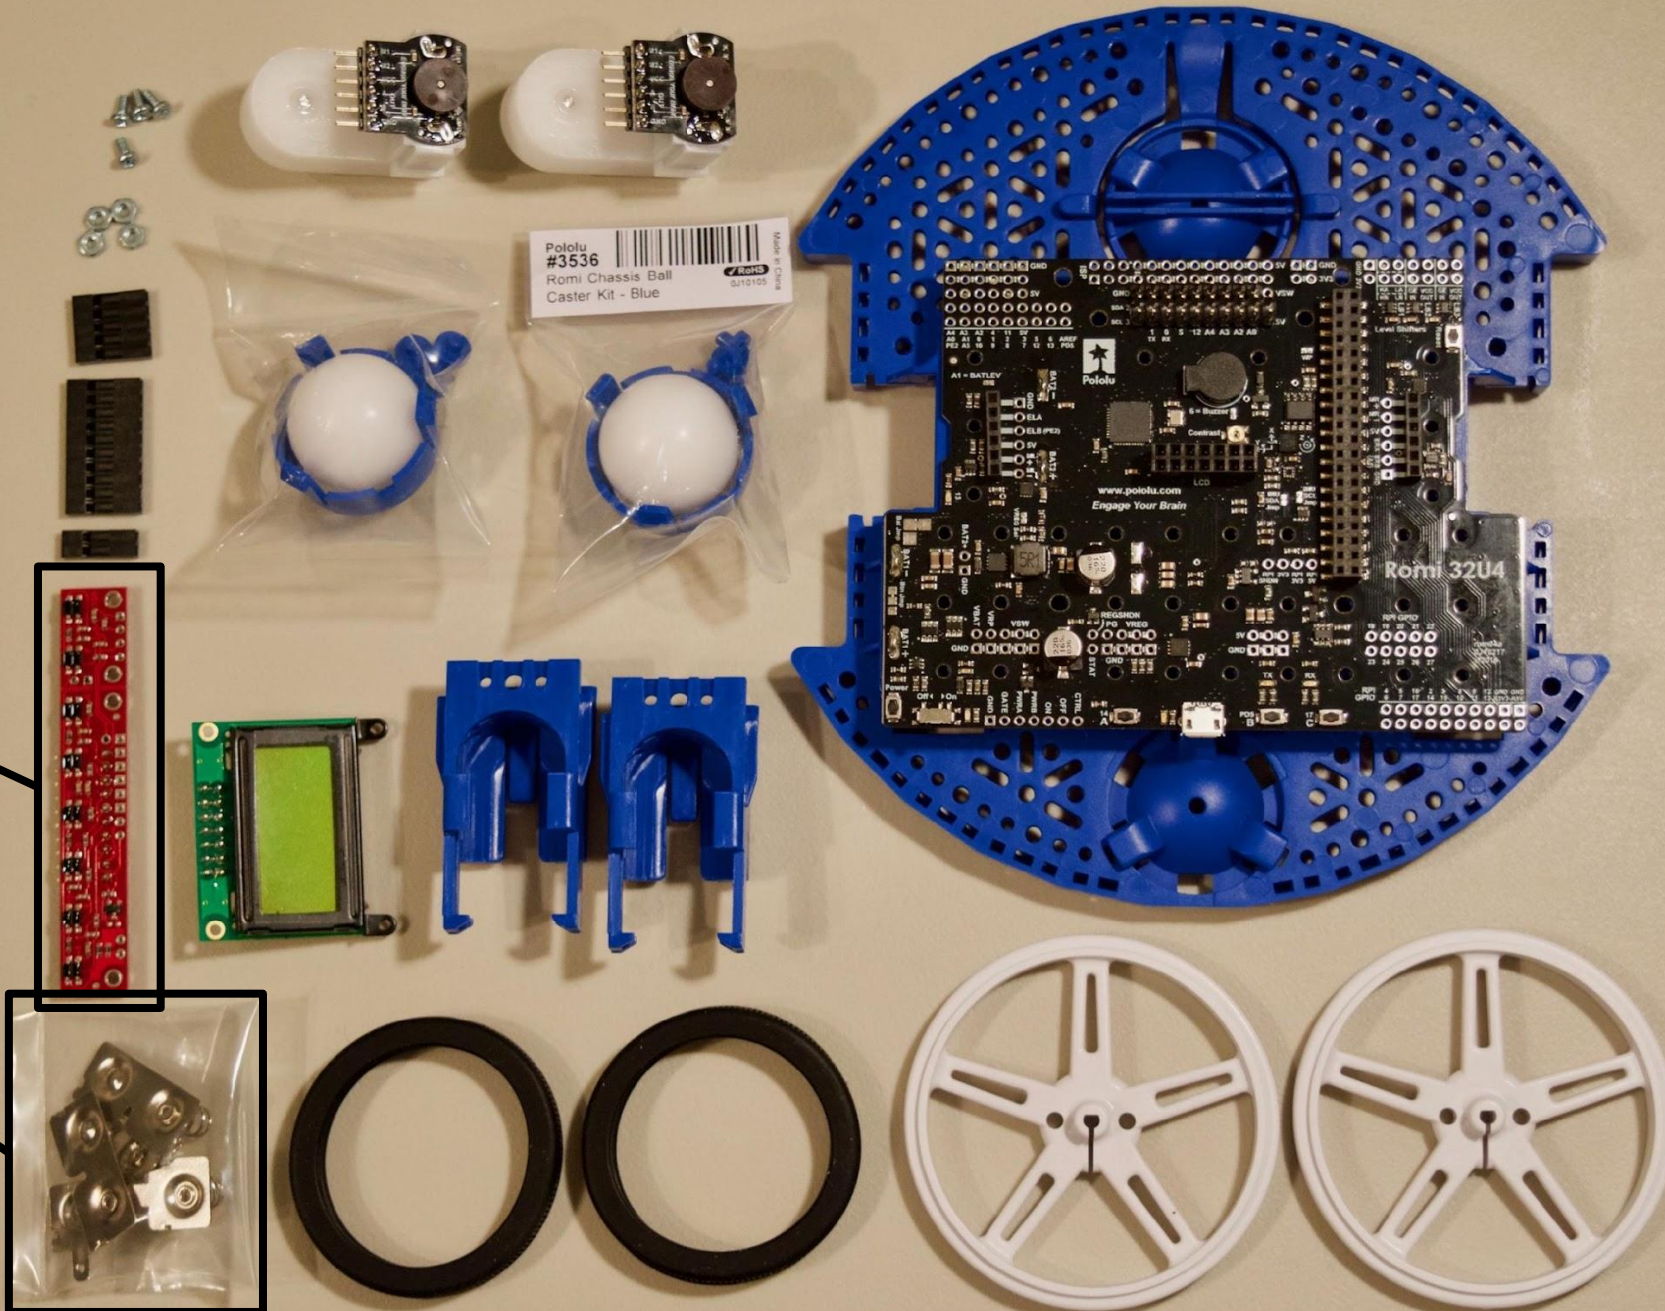


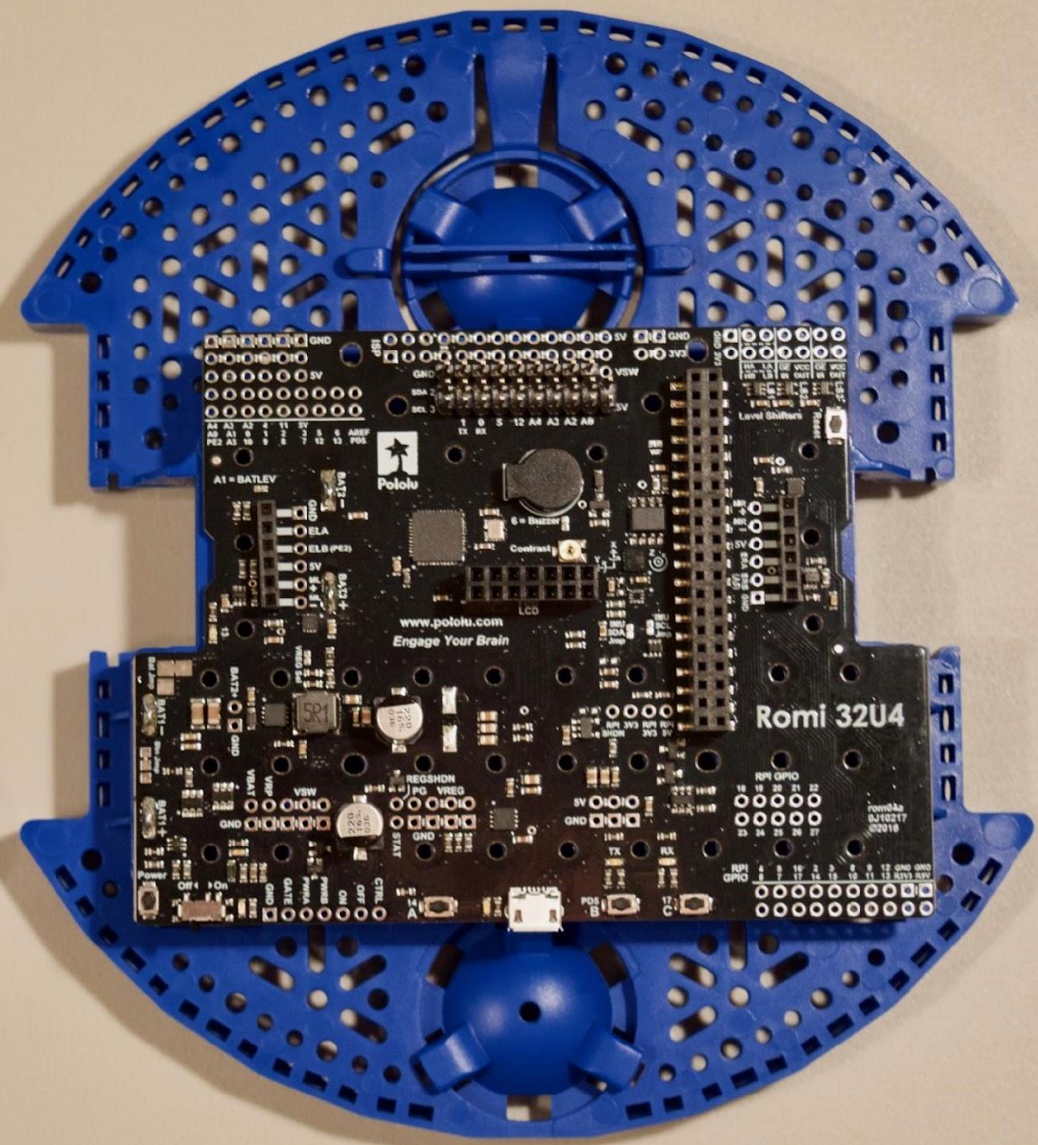

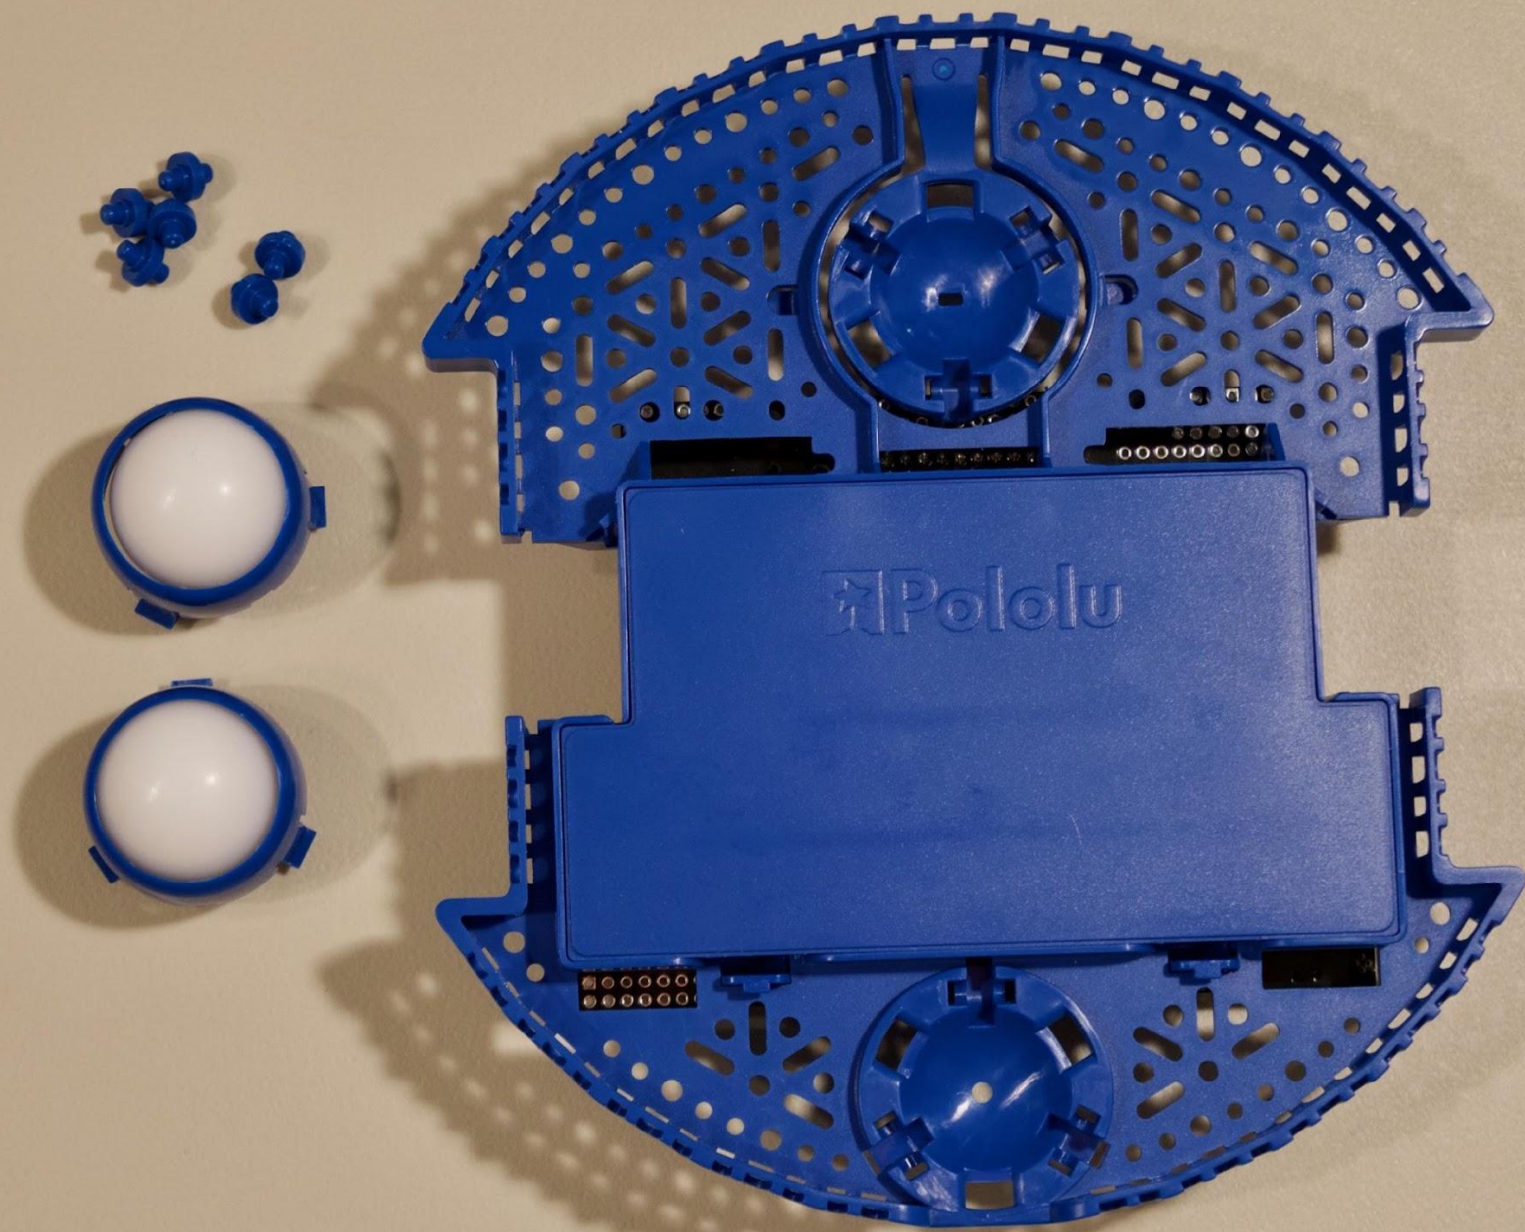


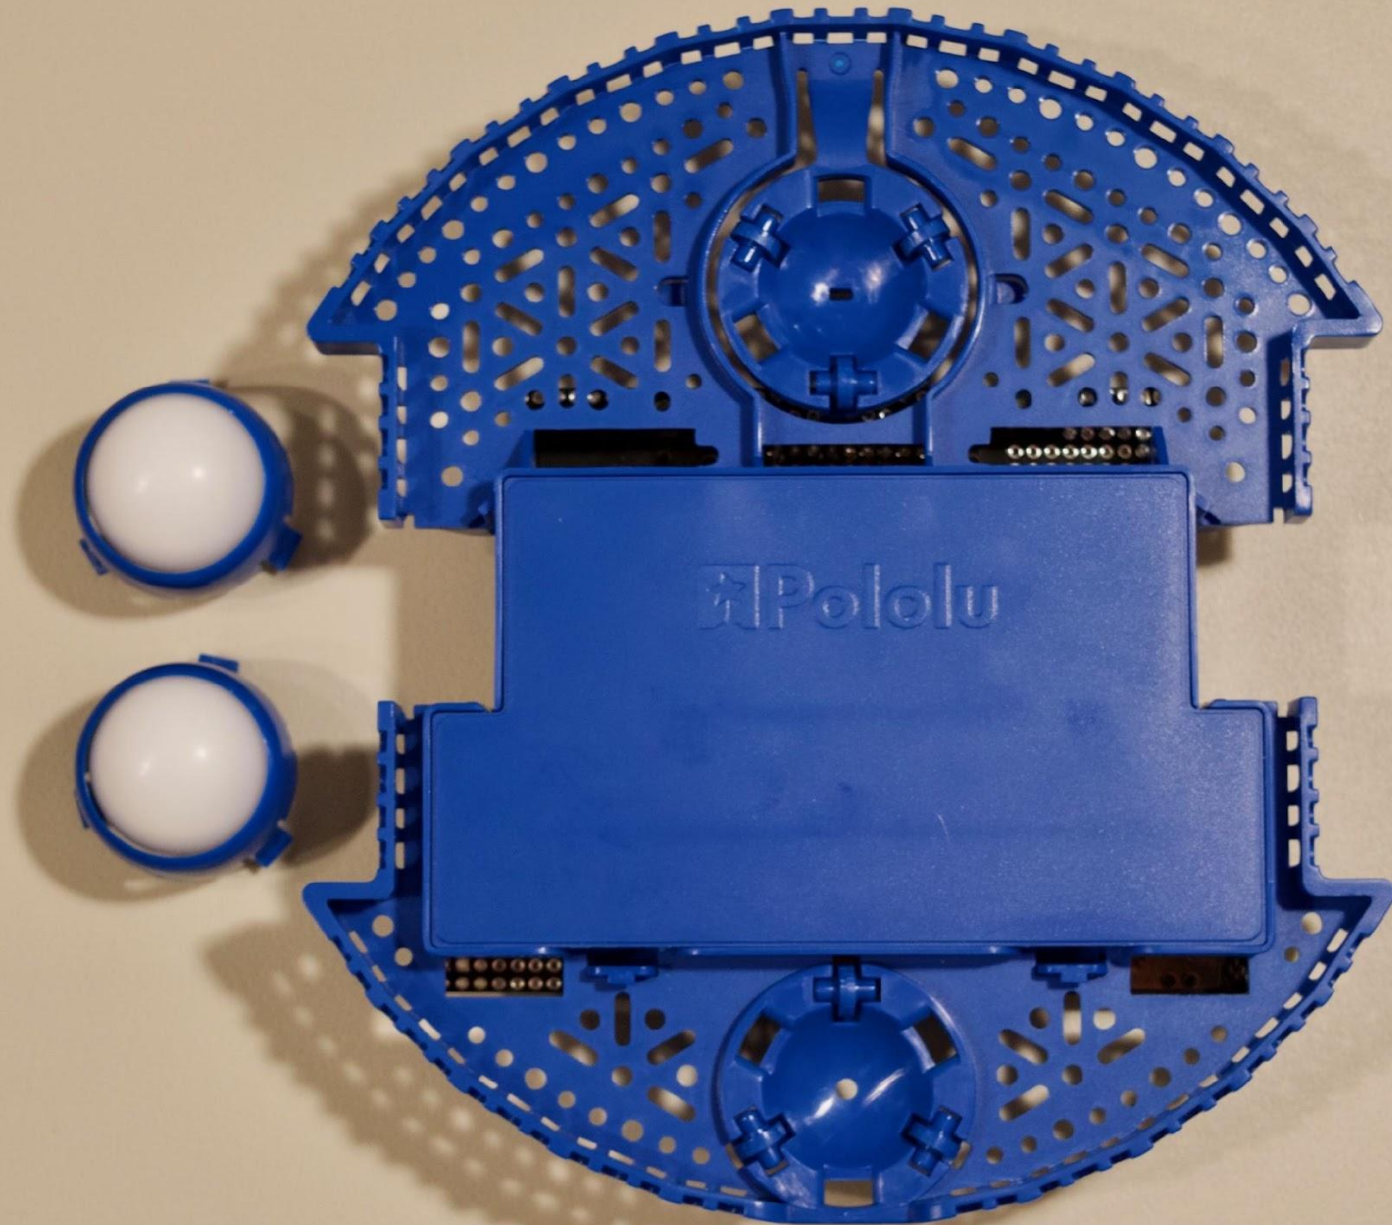


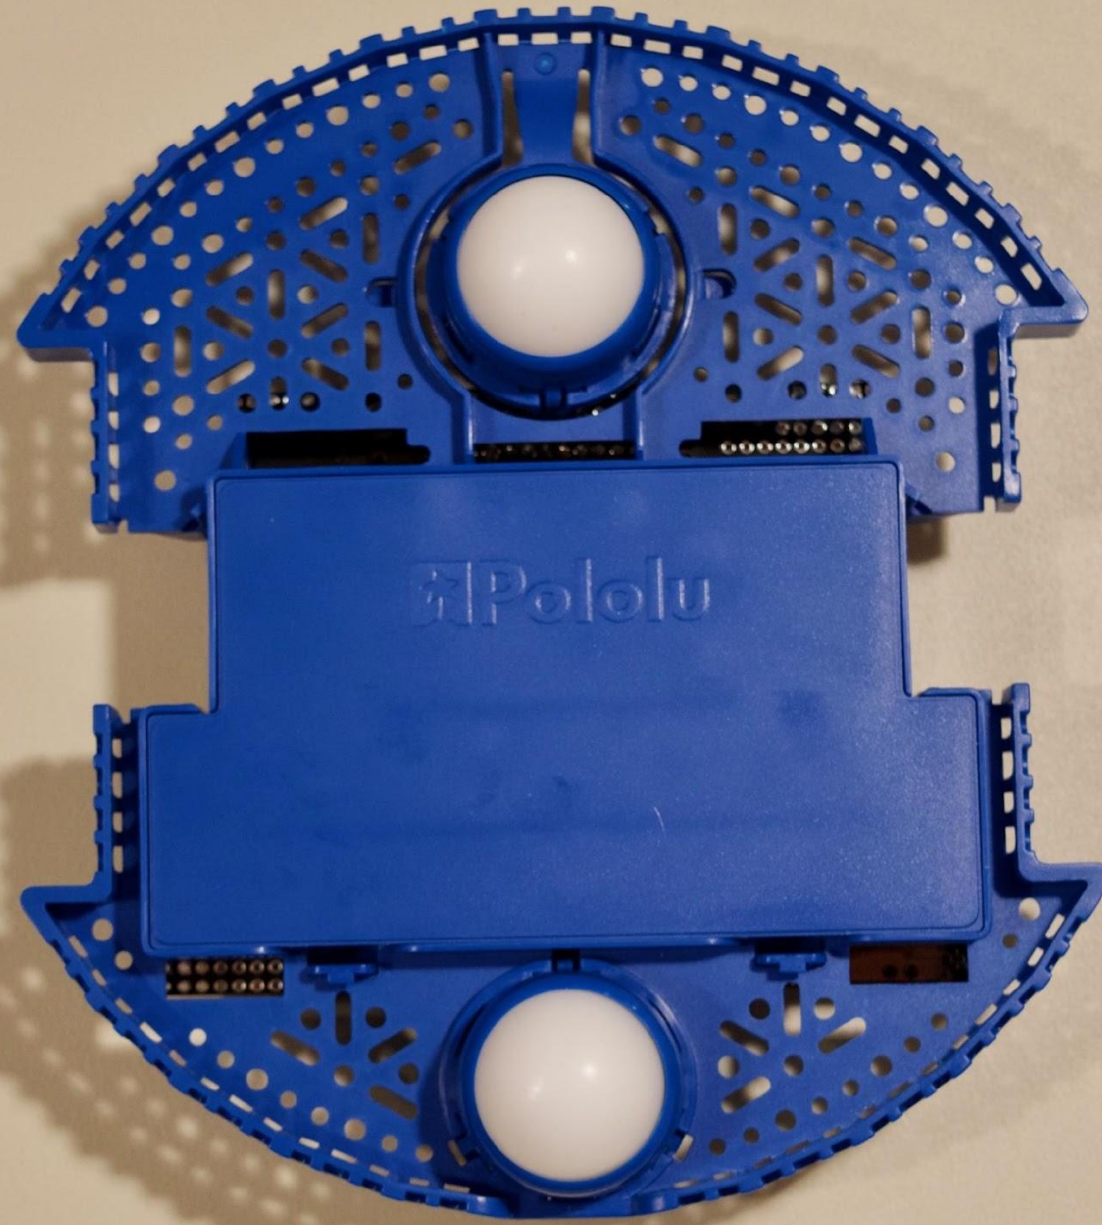


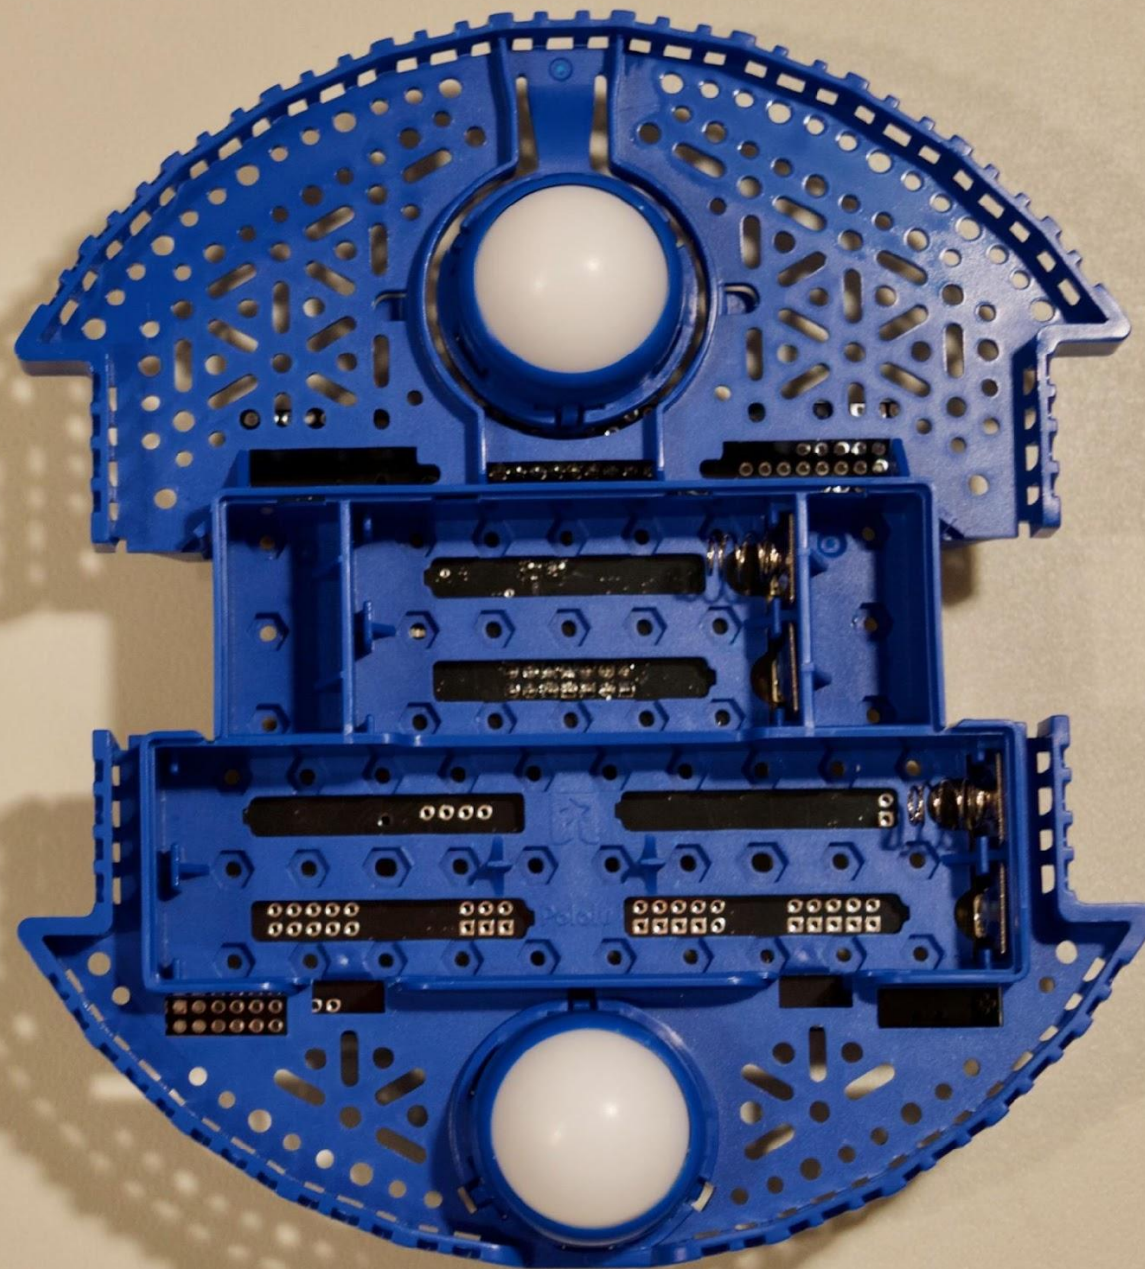



These are in the
silvery bag!

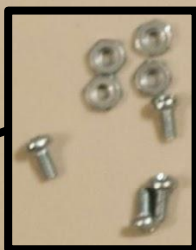


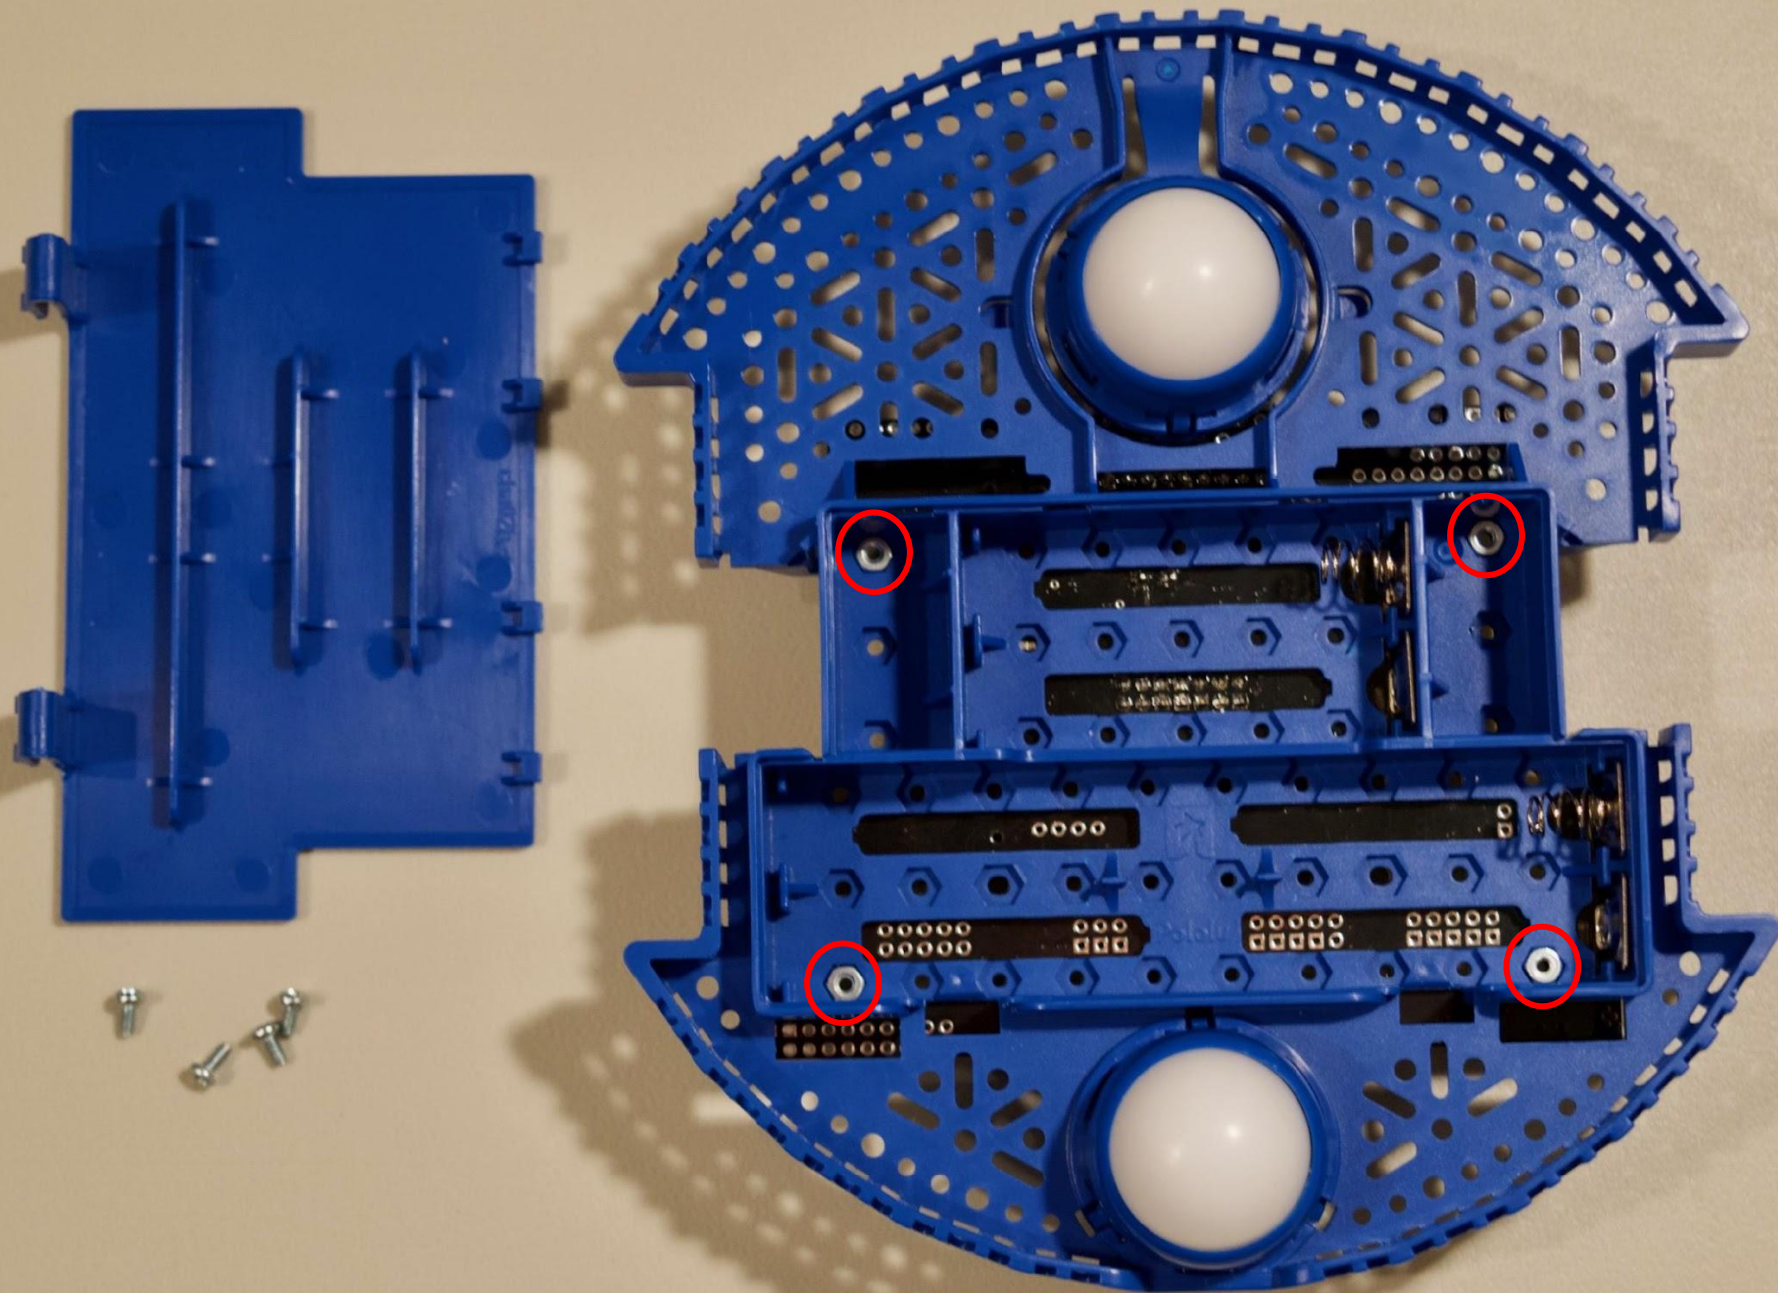

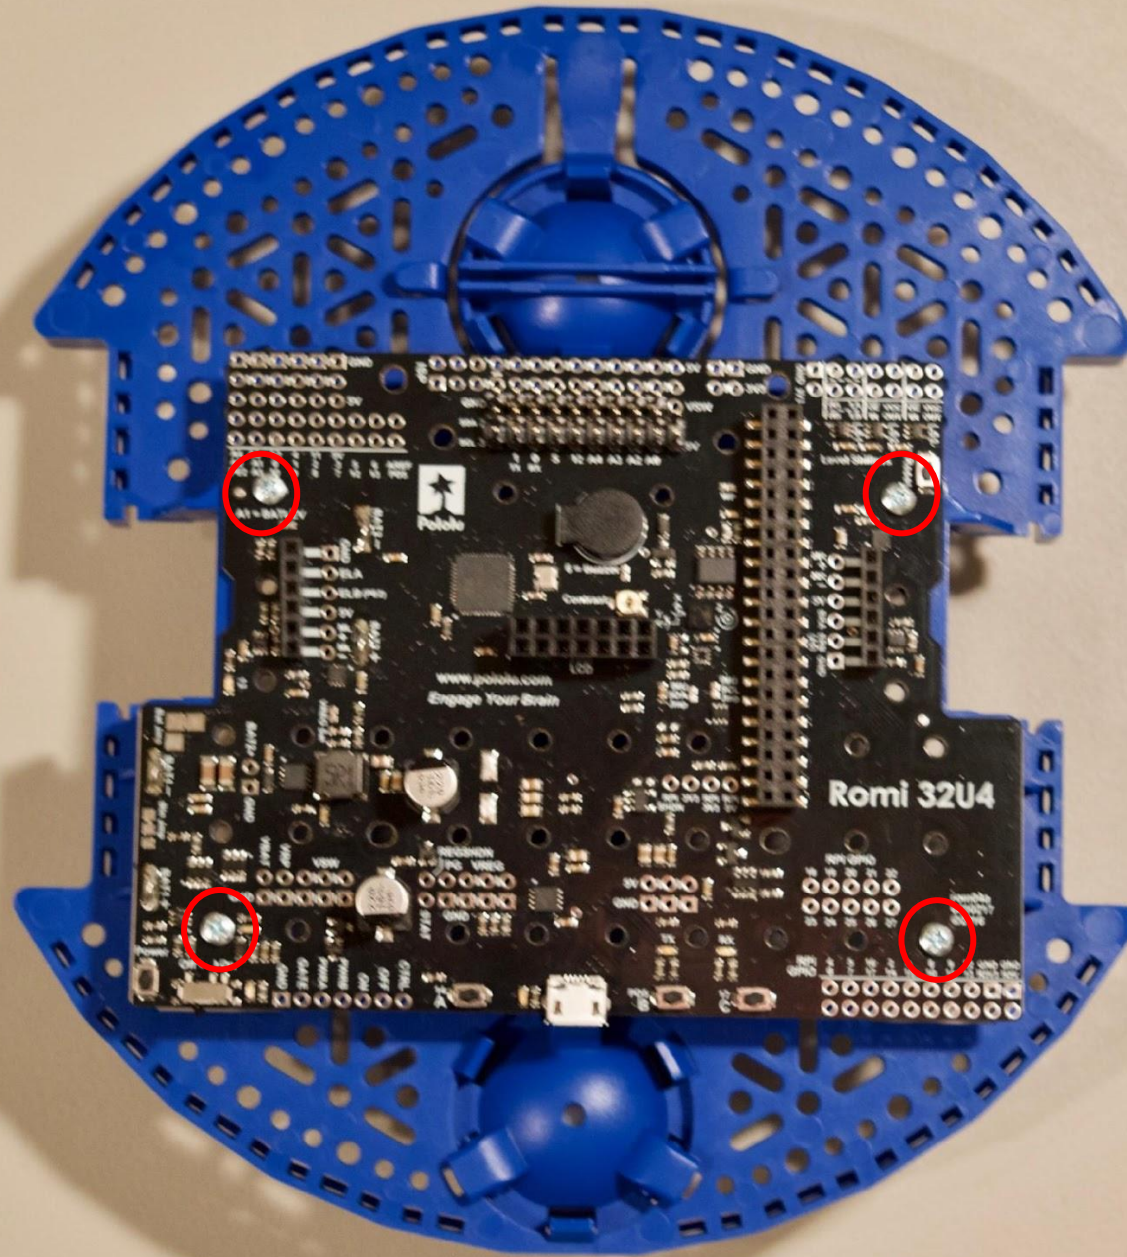


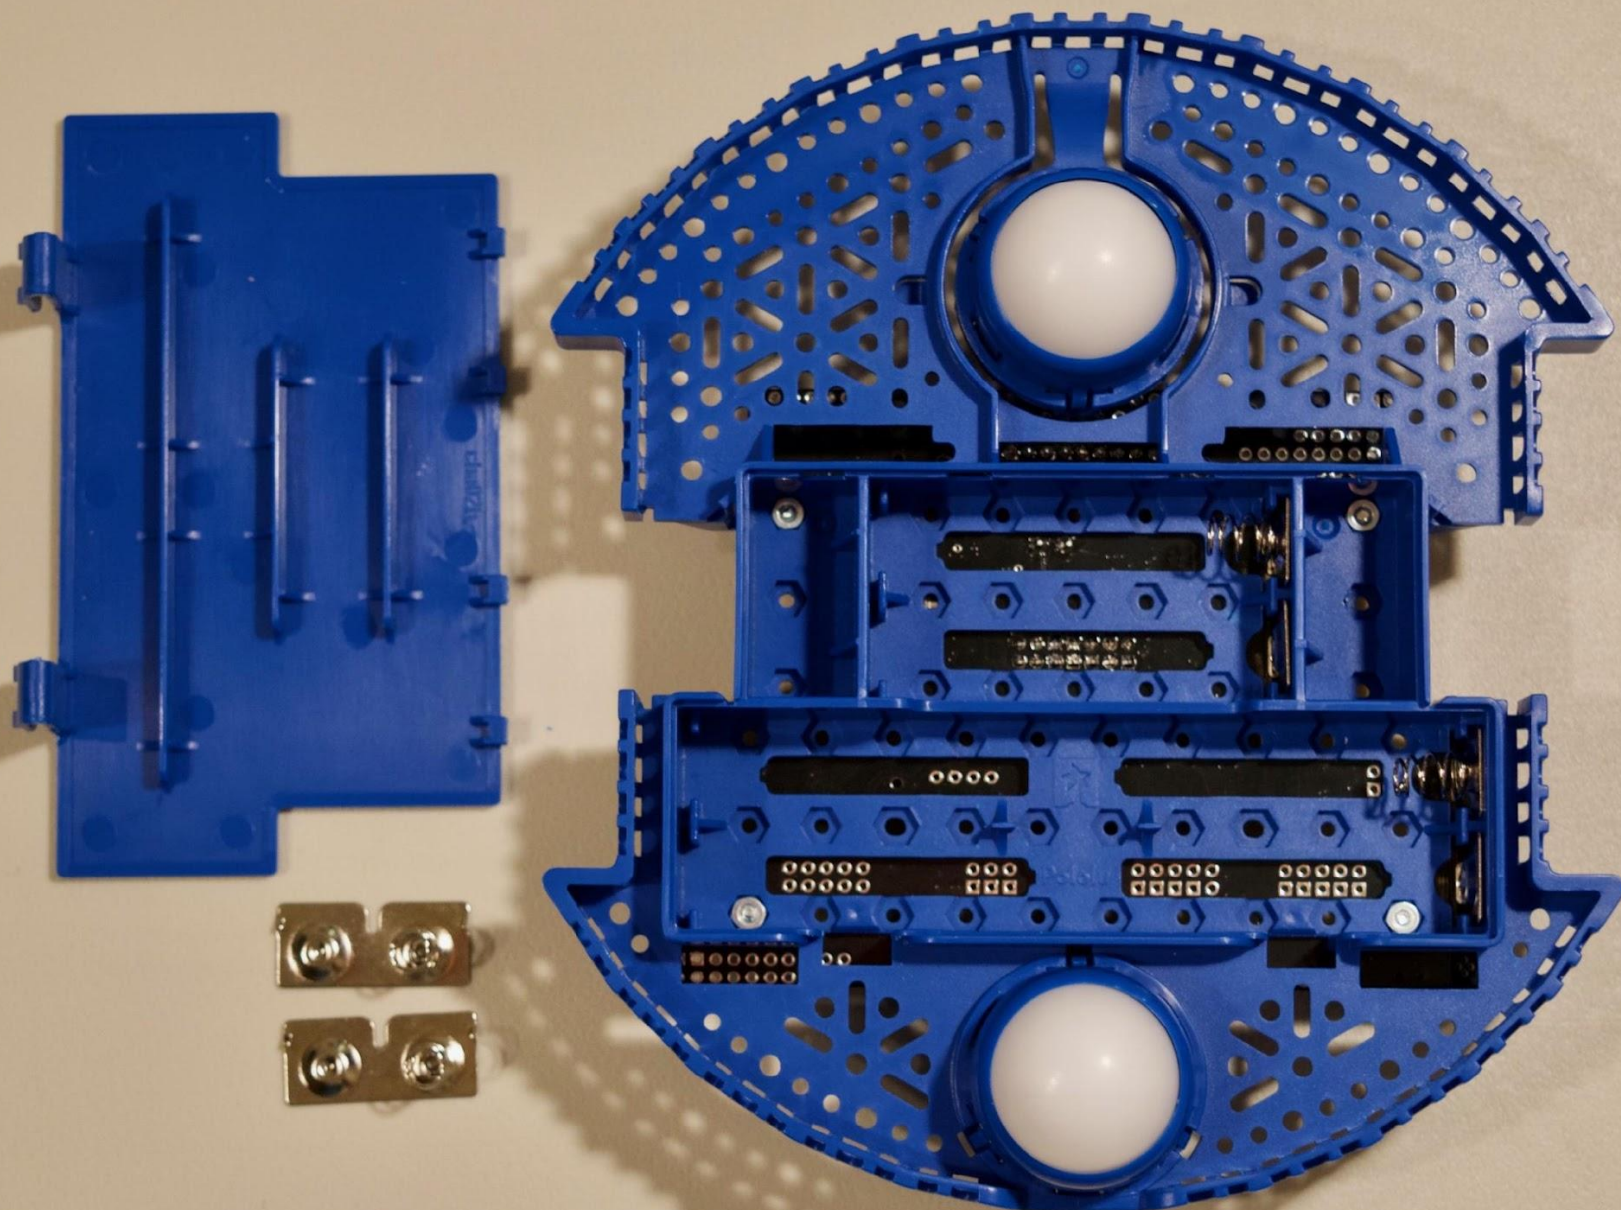


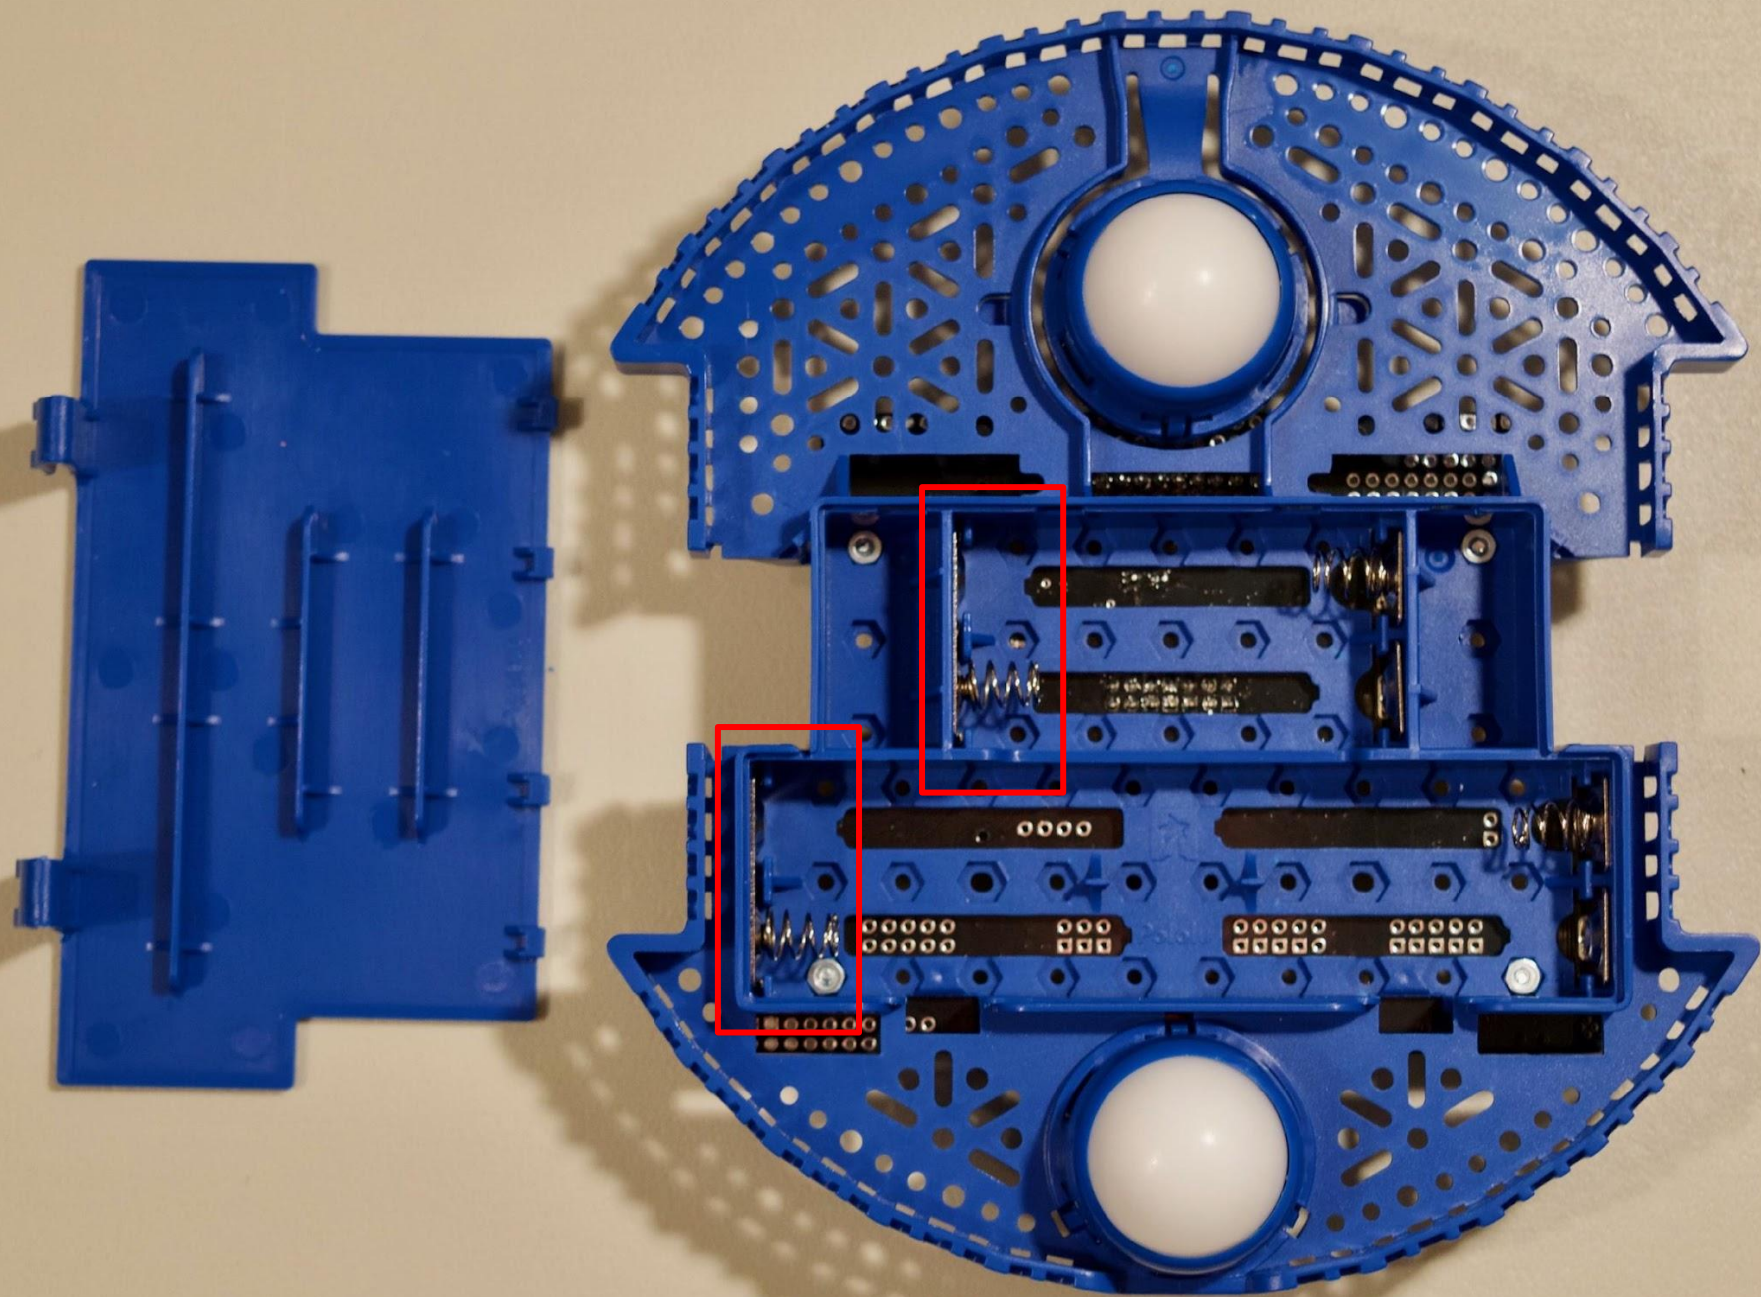

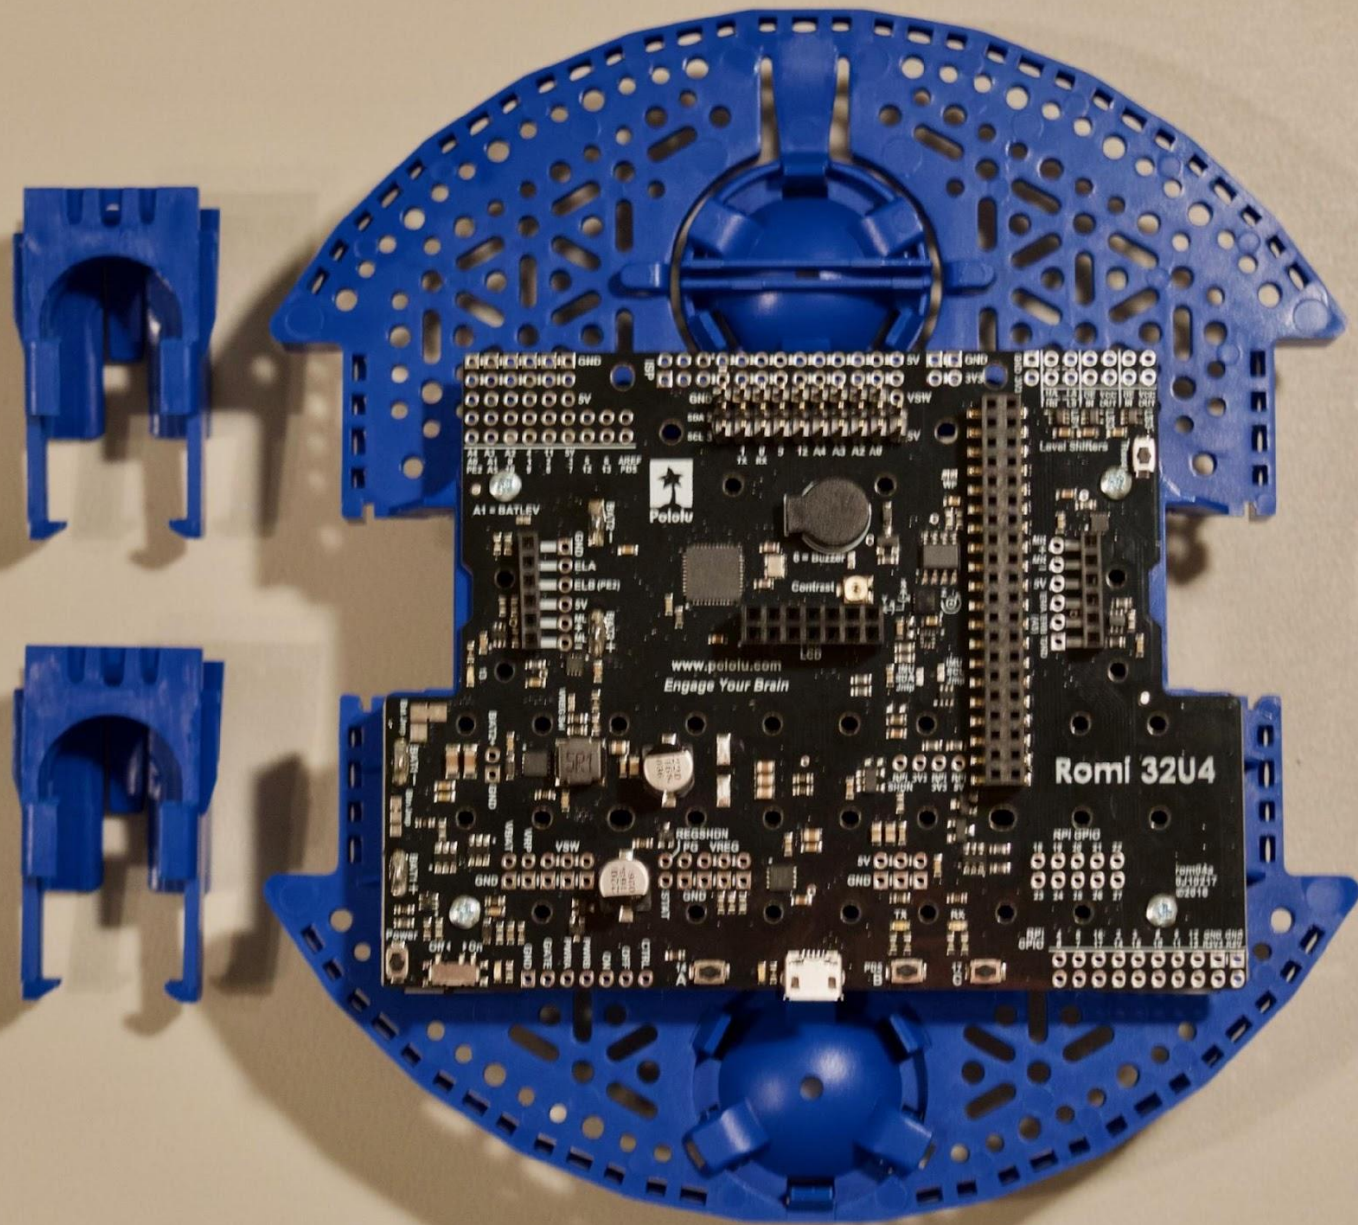

Motor clips slide in from the bottom up. You will need to be rather forceful.

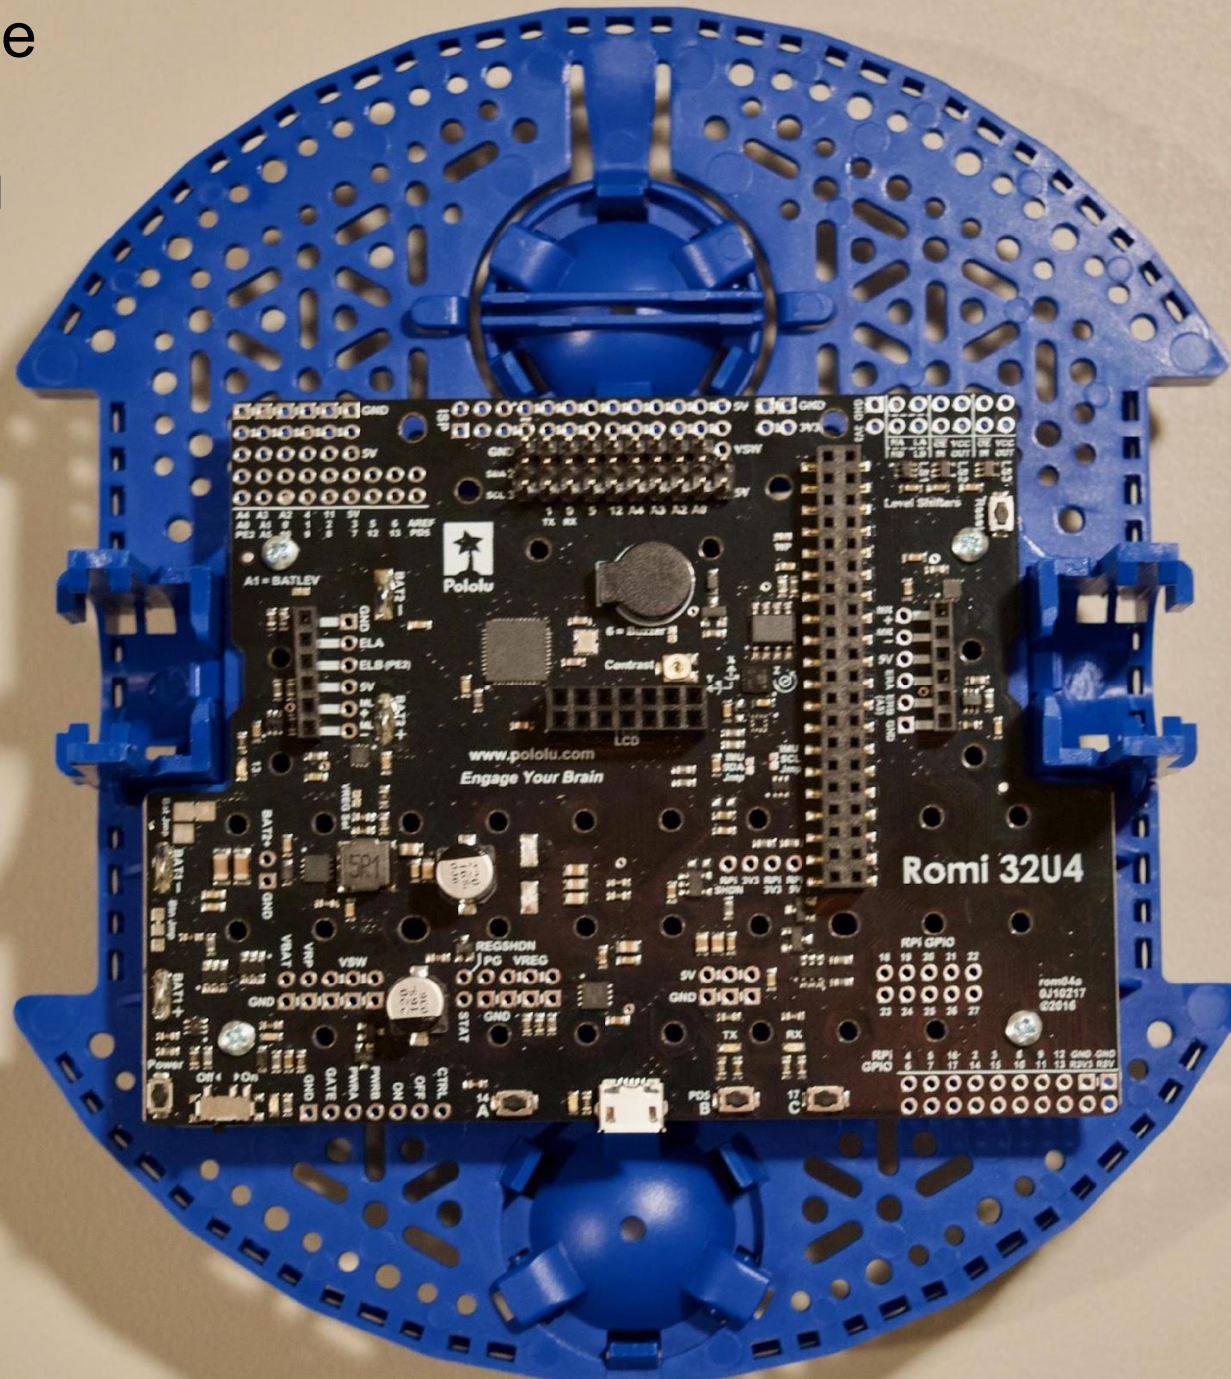


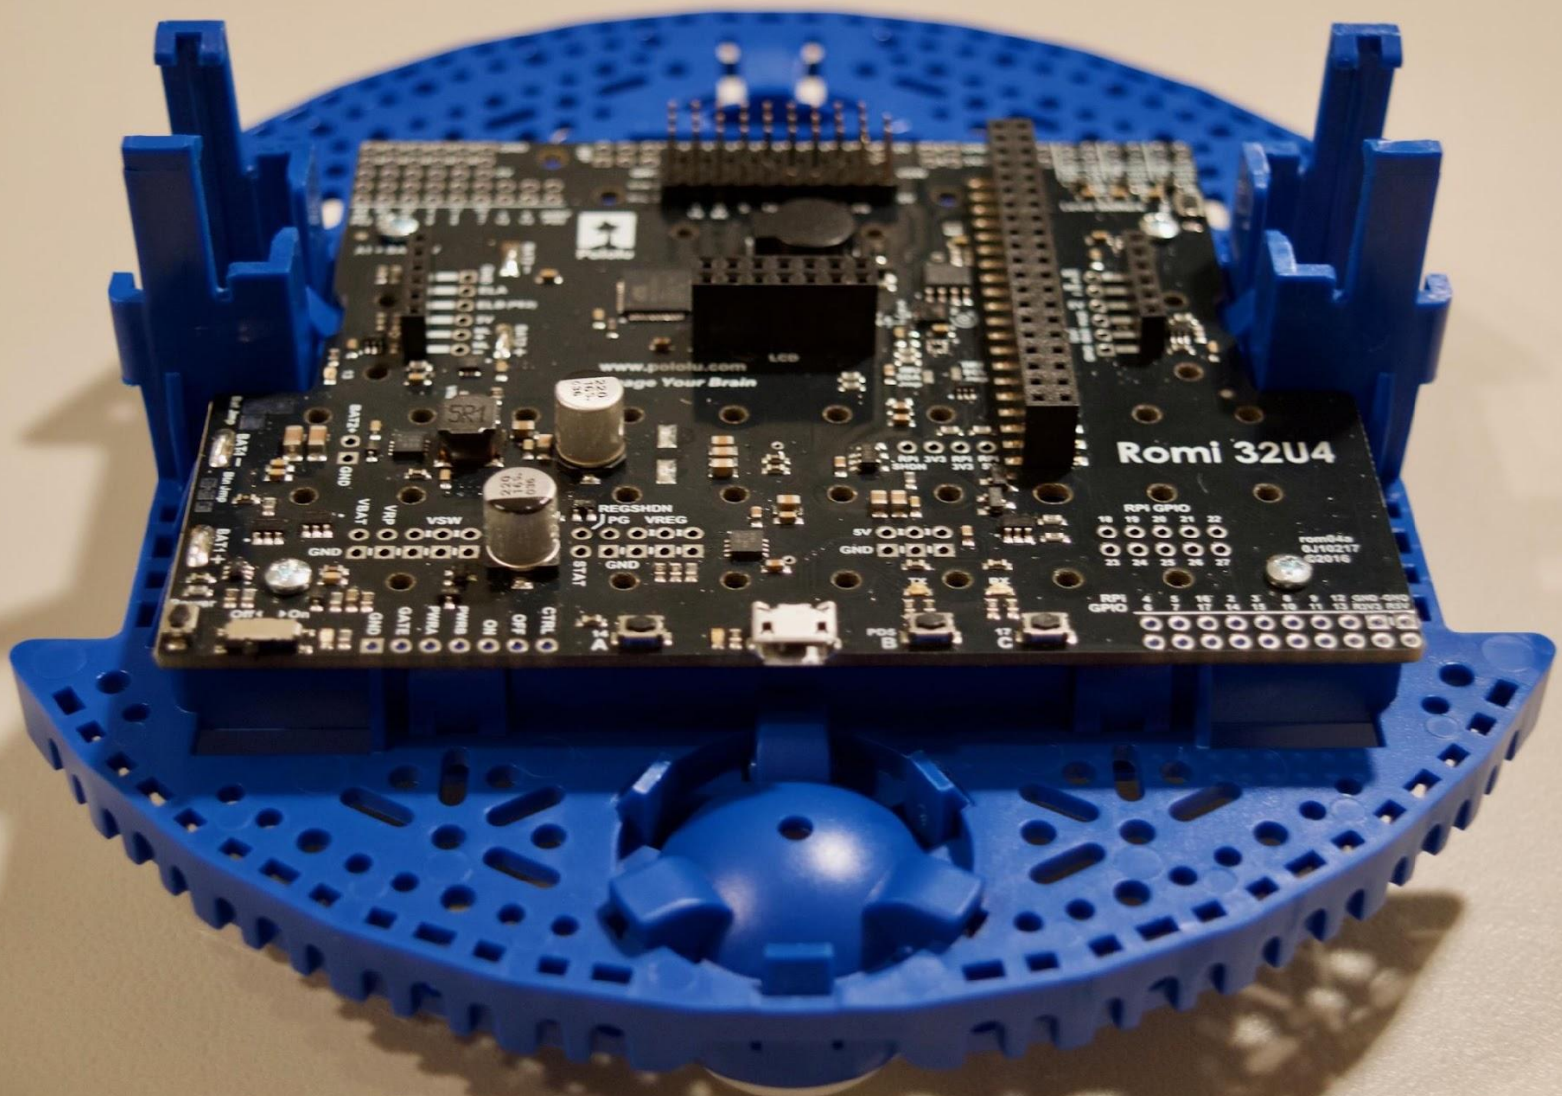



Romi 32U4


www.pololu.com
Save Your Brain


rev04a
01/02/17
©2016

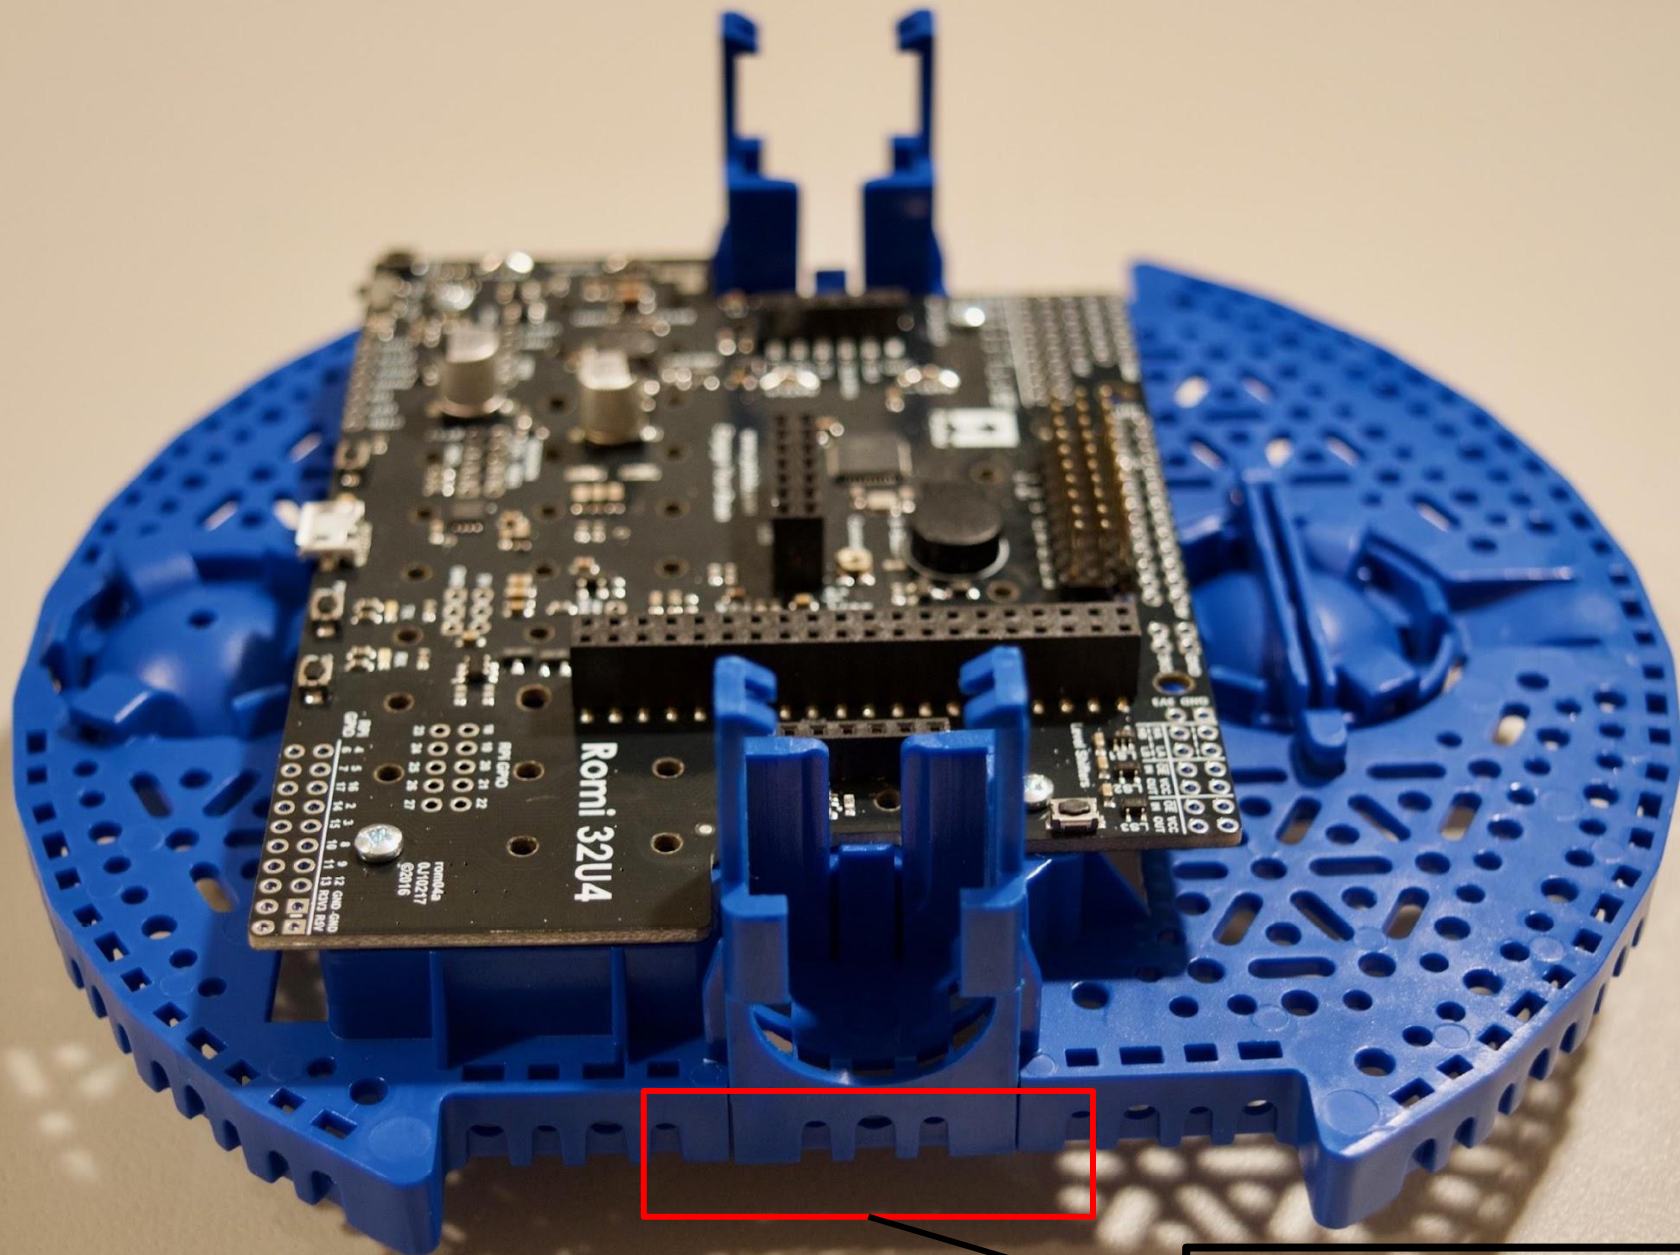


The bottom of the motor clip should be flush with the bottom of the chassis.

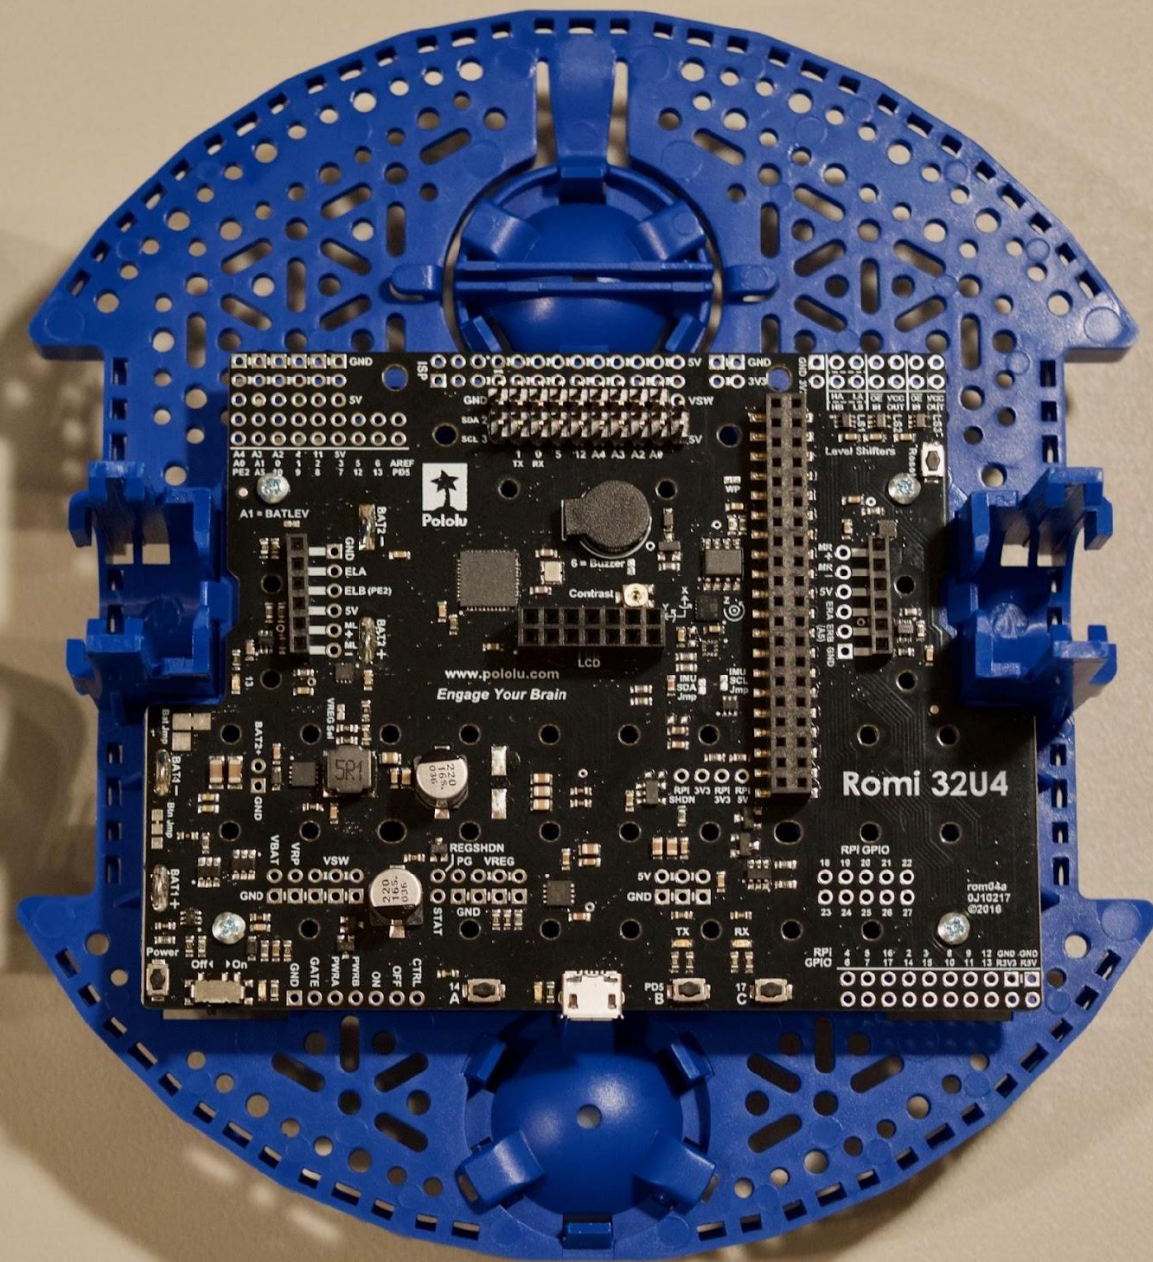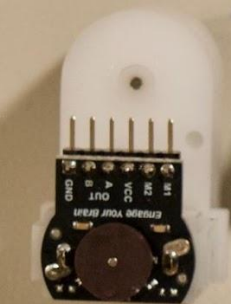

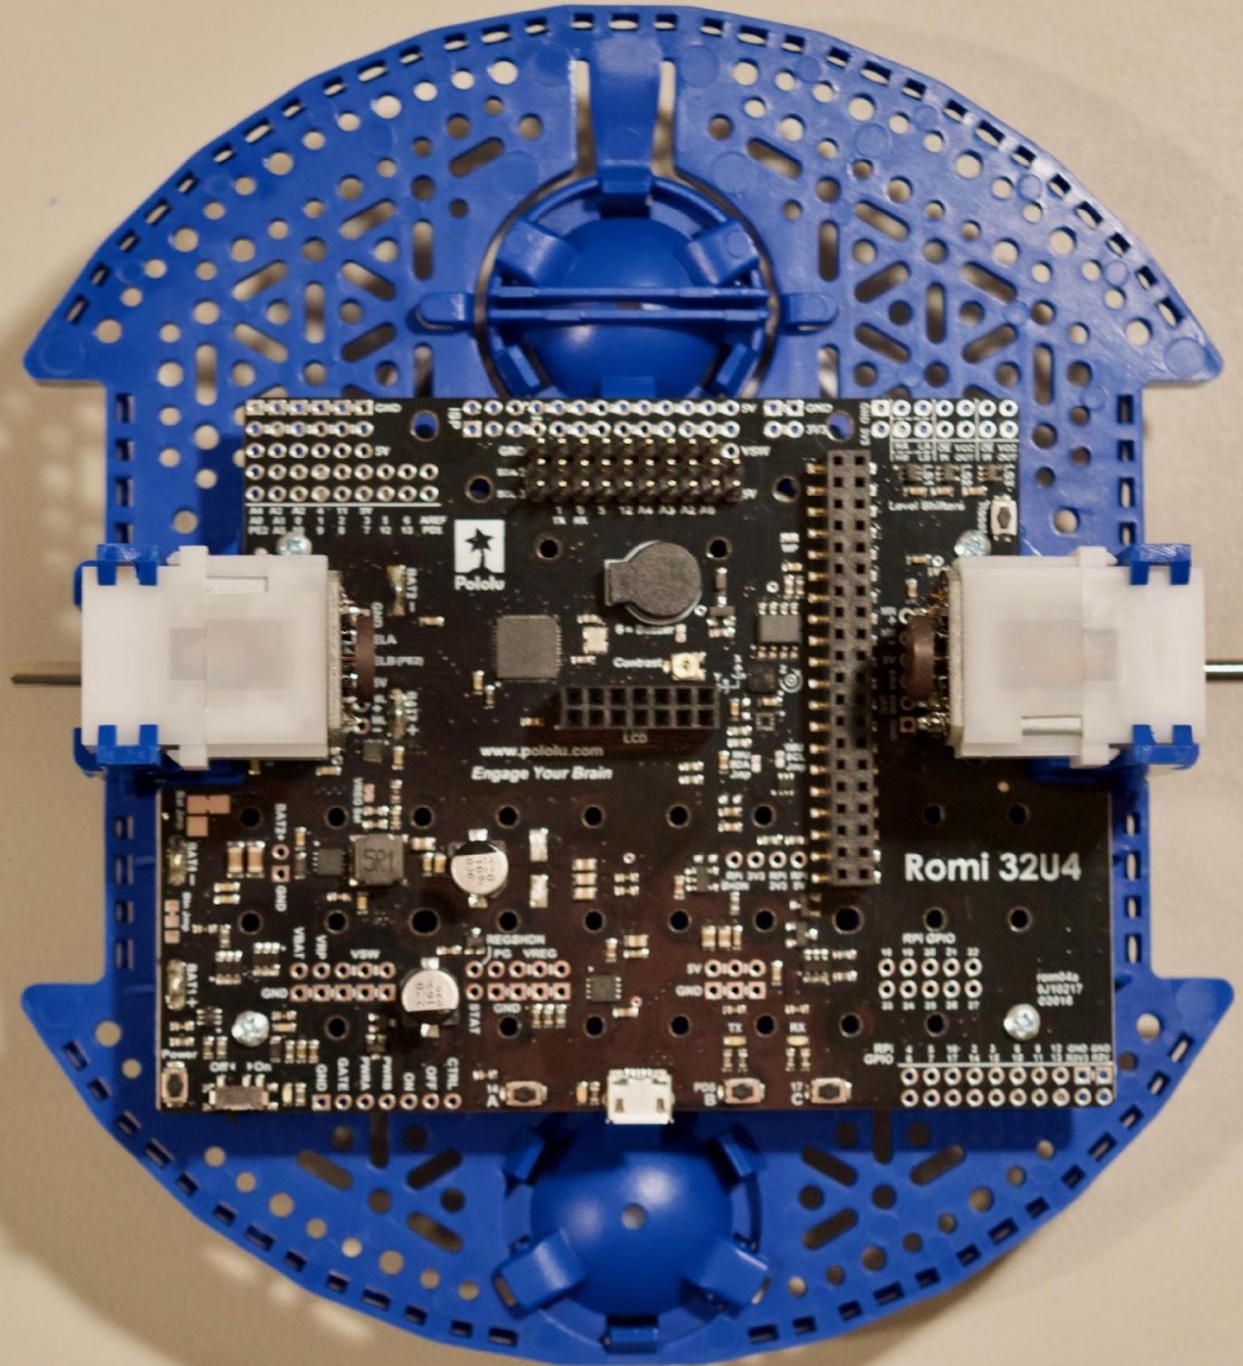

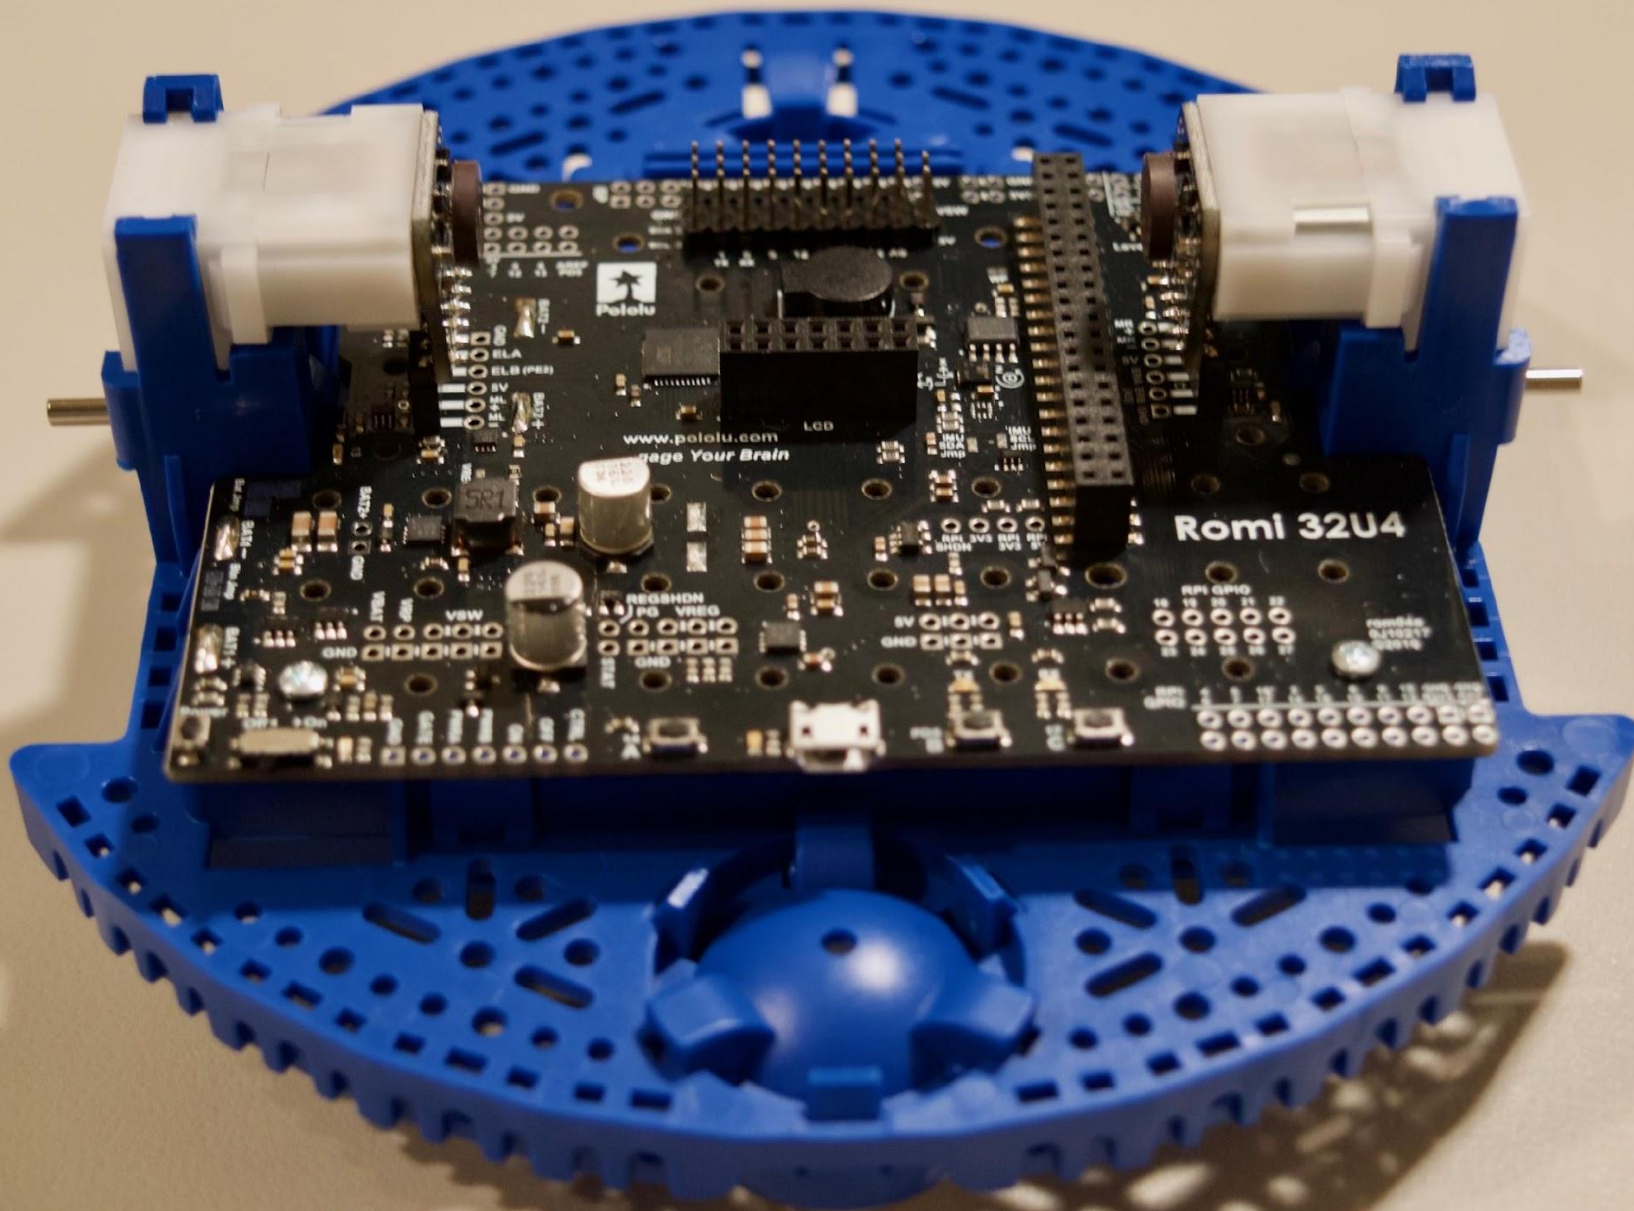


Make sure the pins on the motor go into the socket on the board

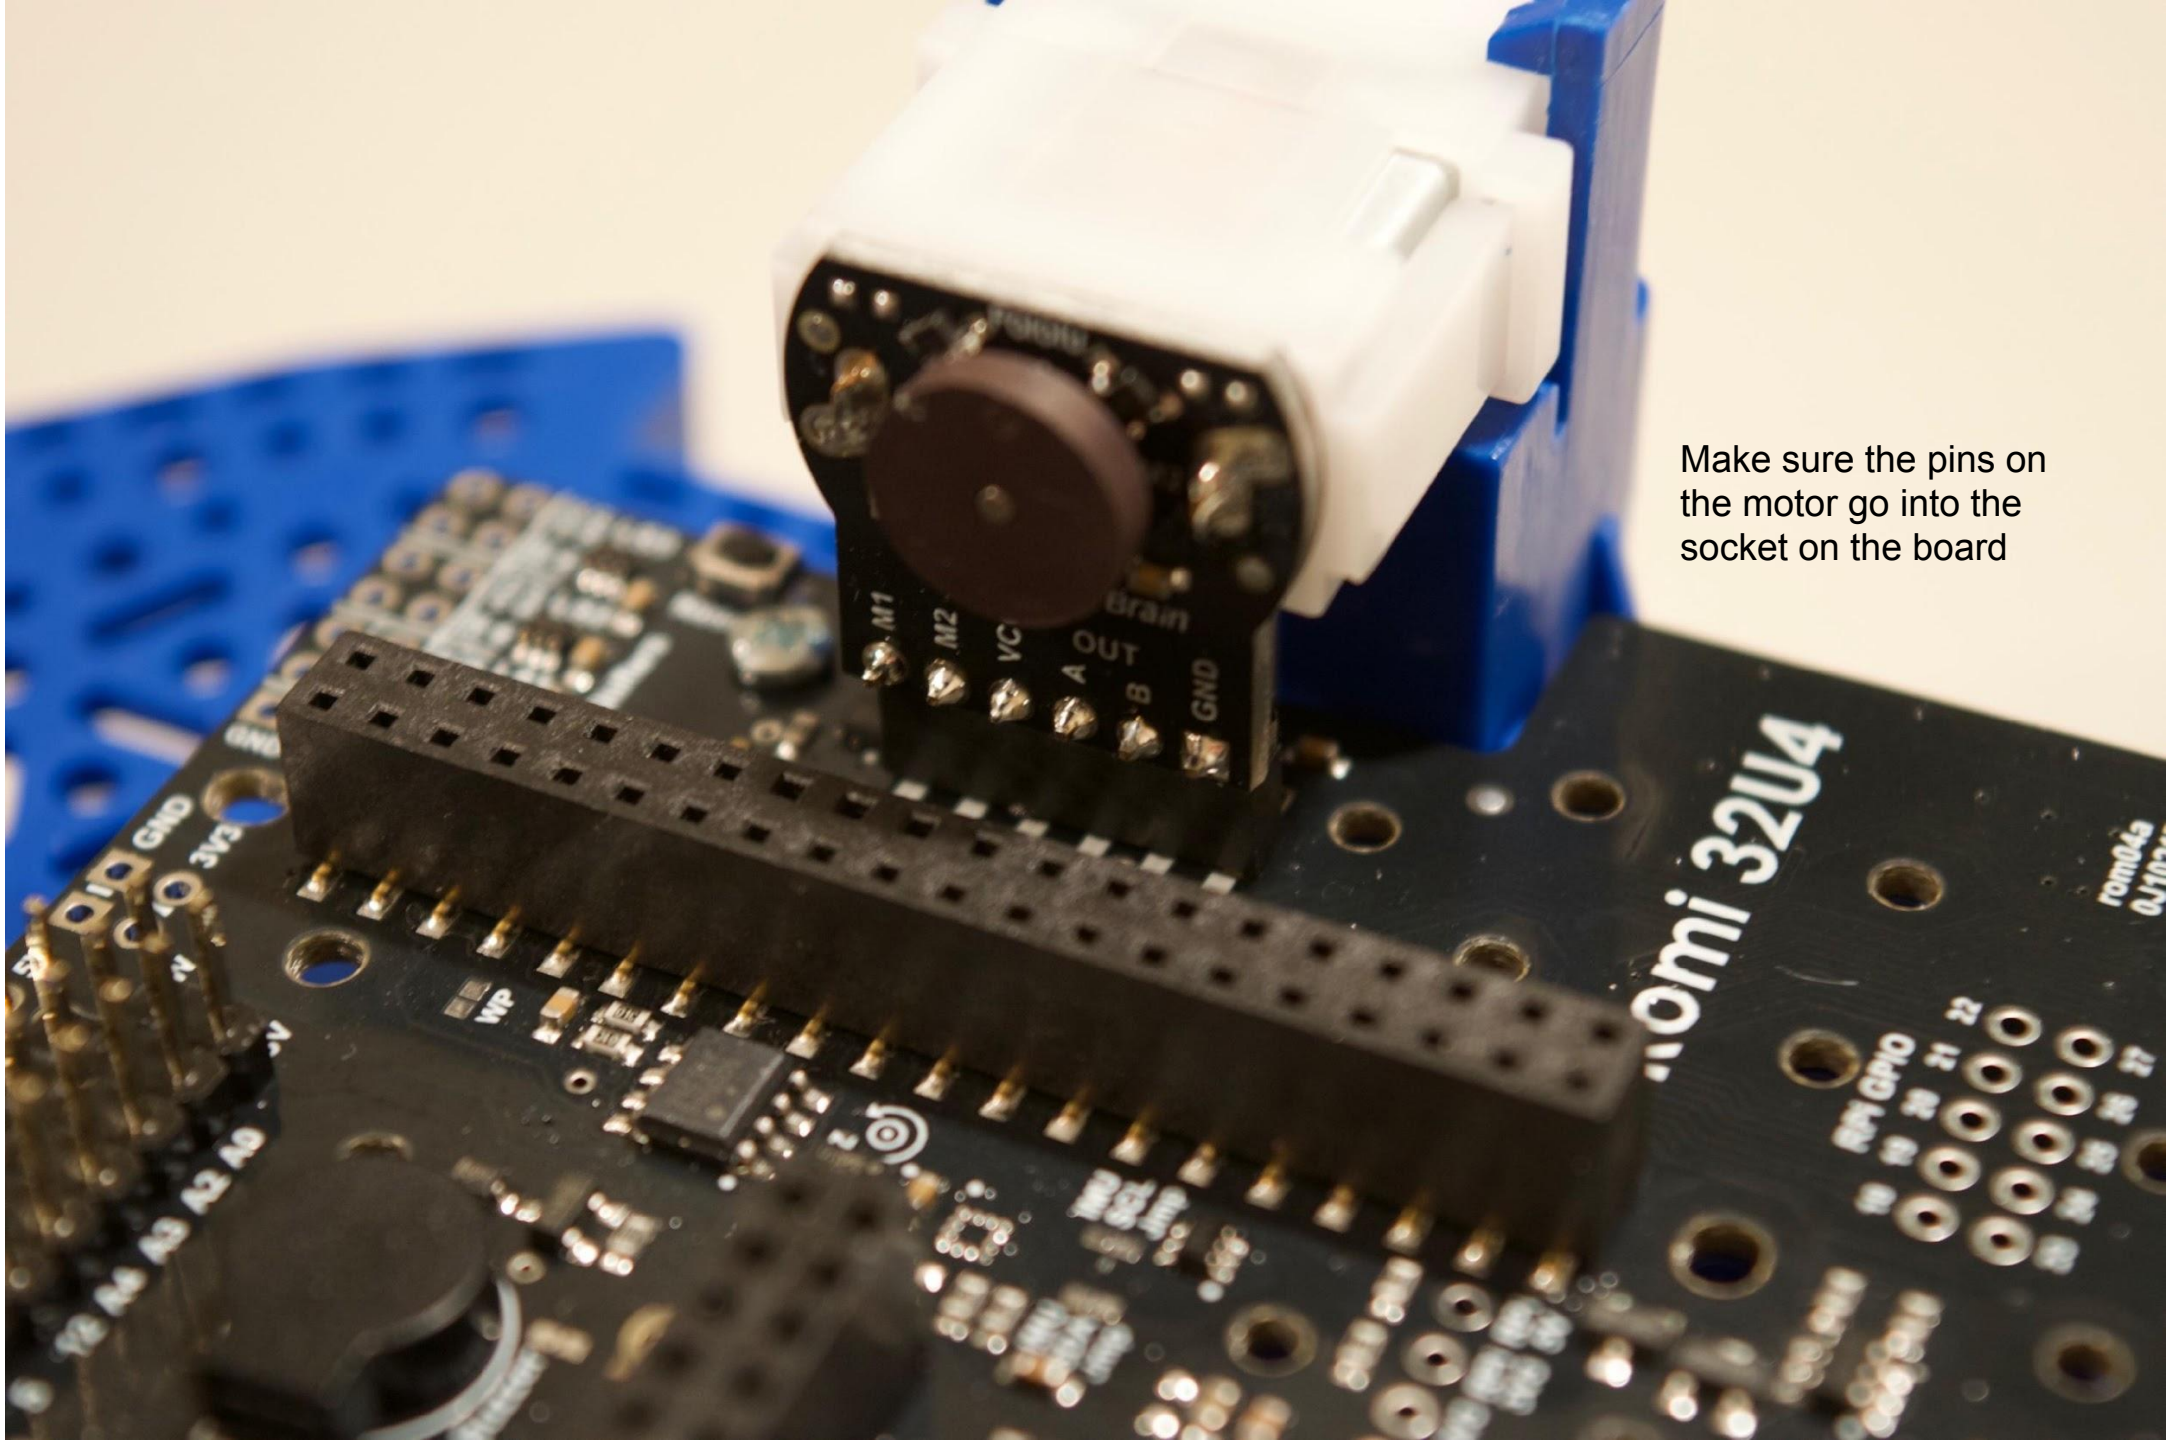








Stretching the tires first helps!

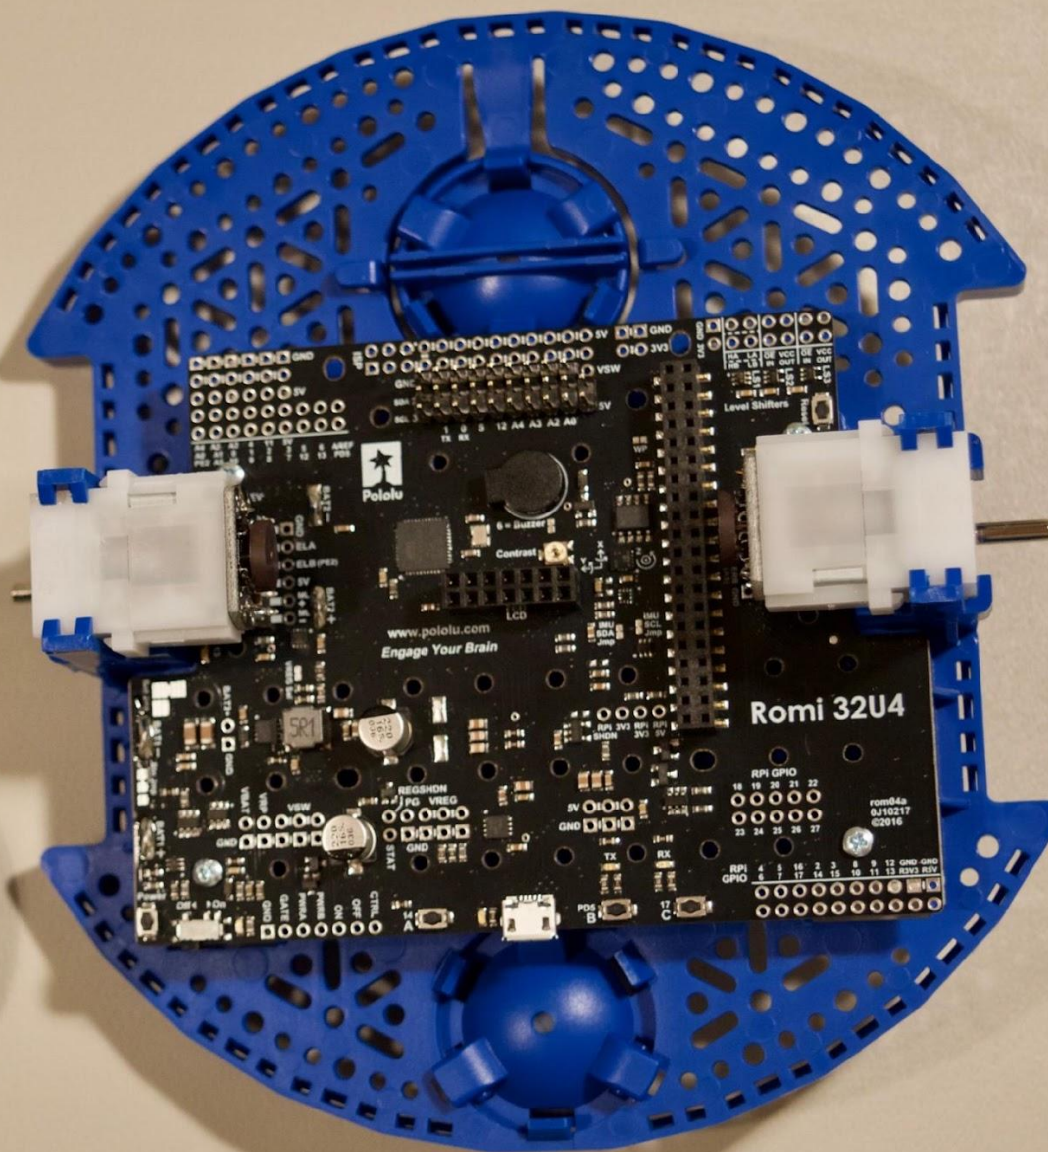

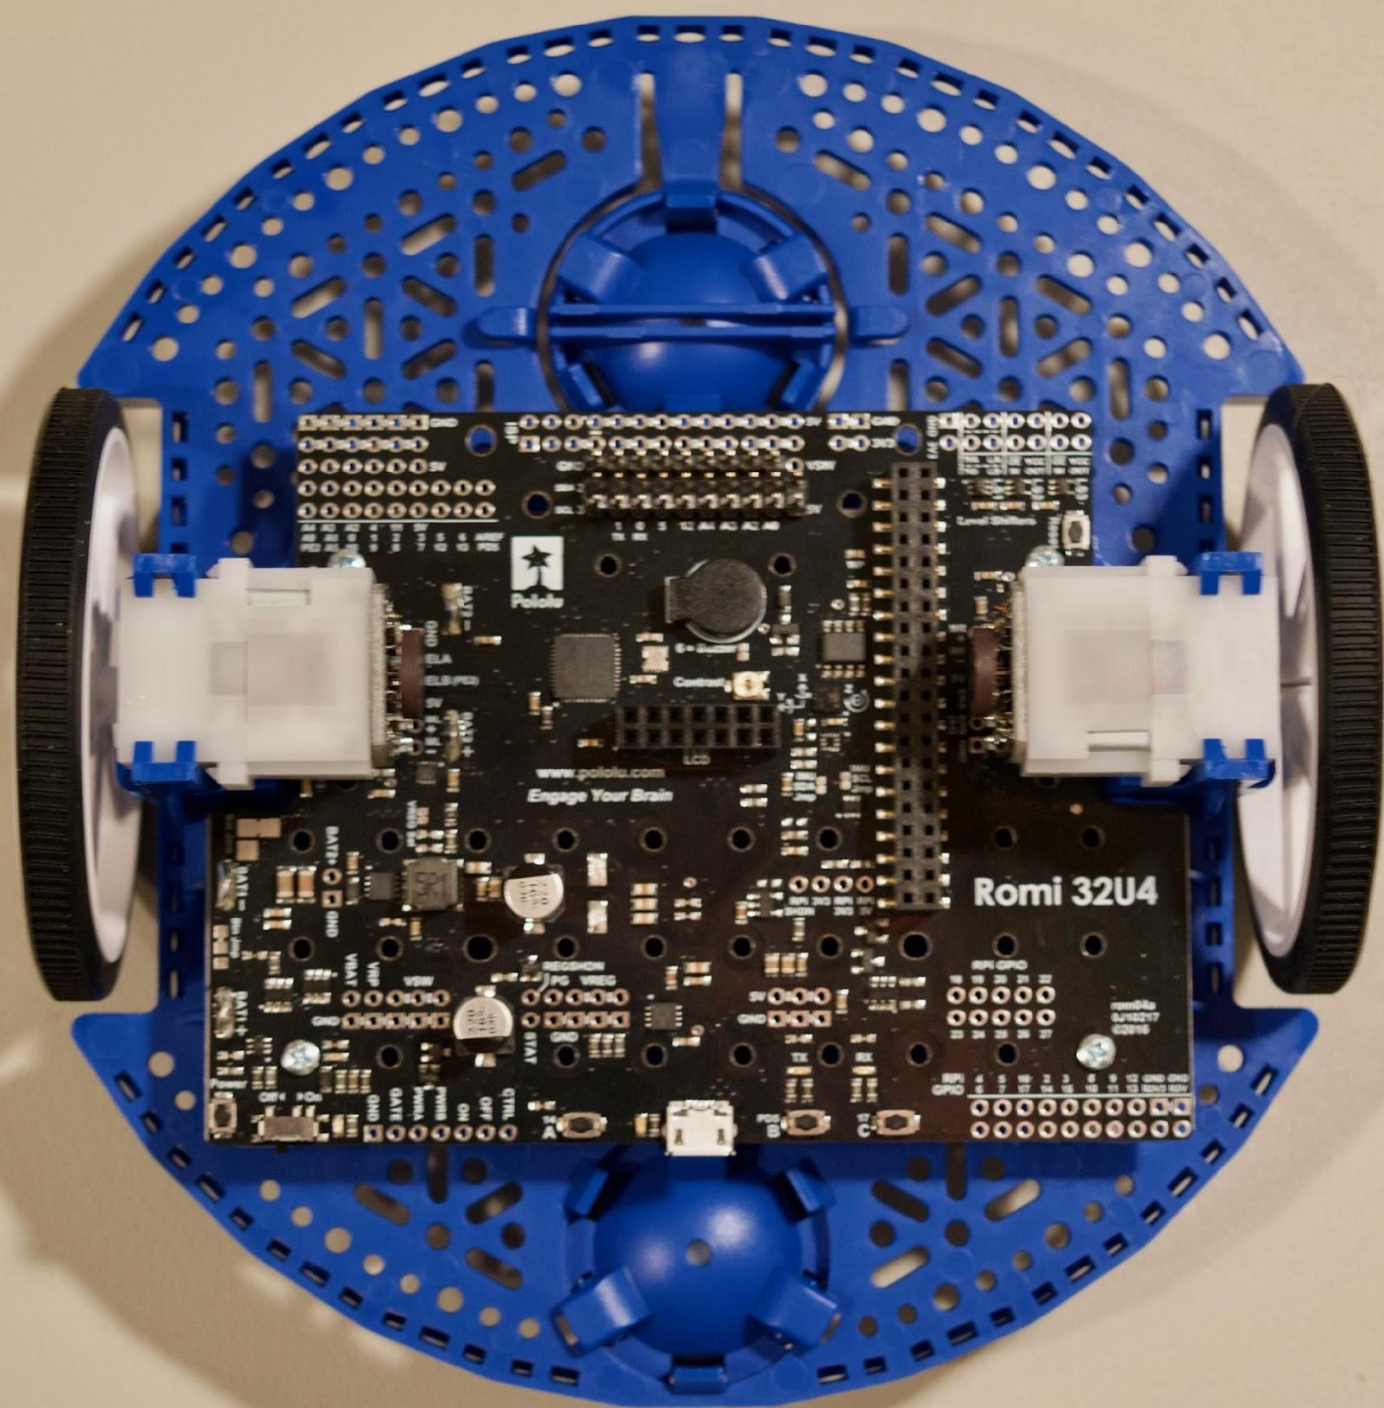


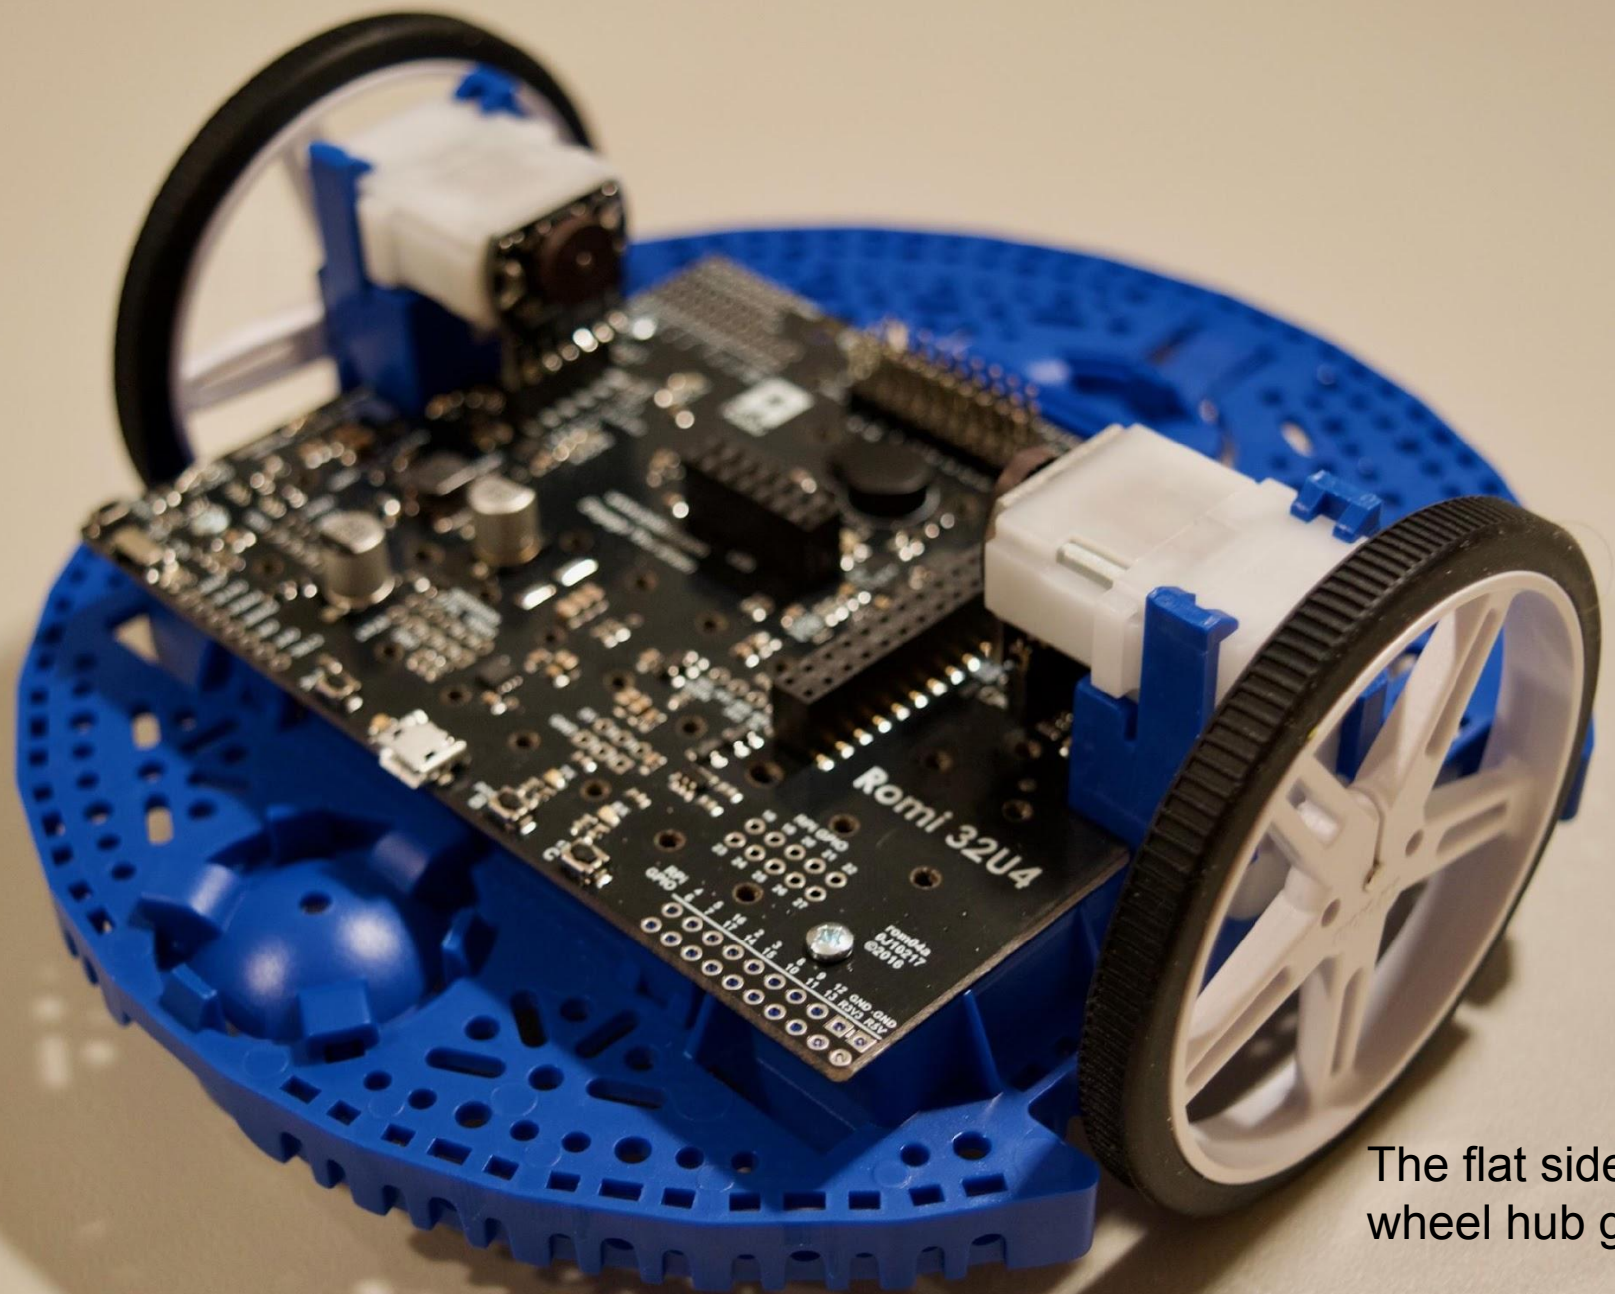


The flat side of the
wheel hub goes out

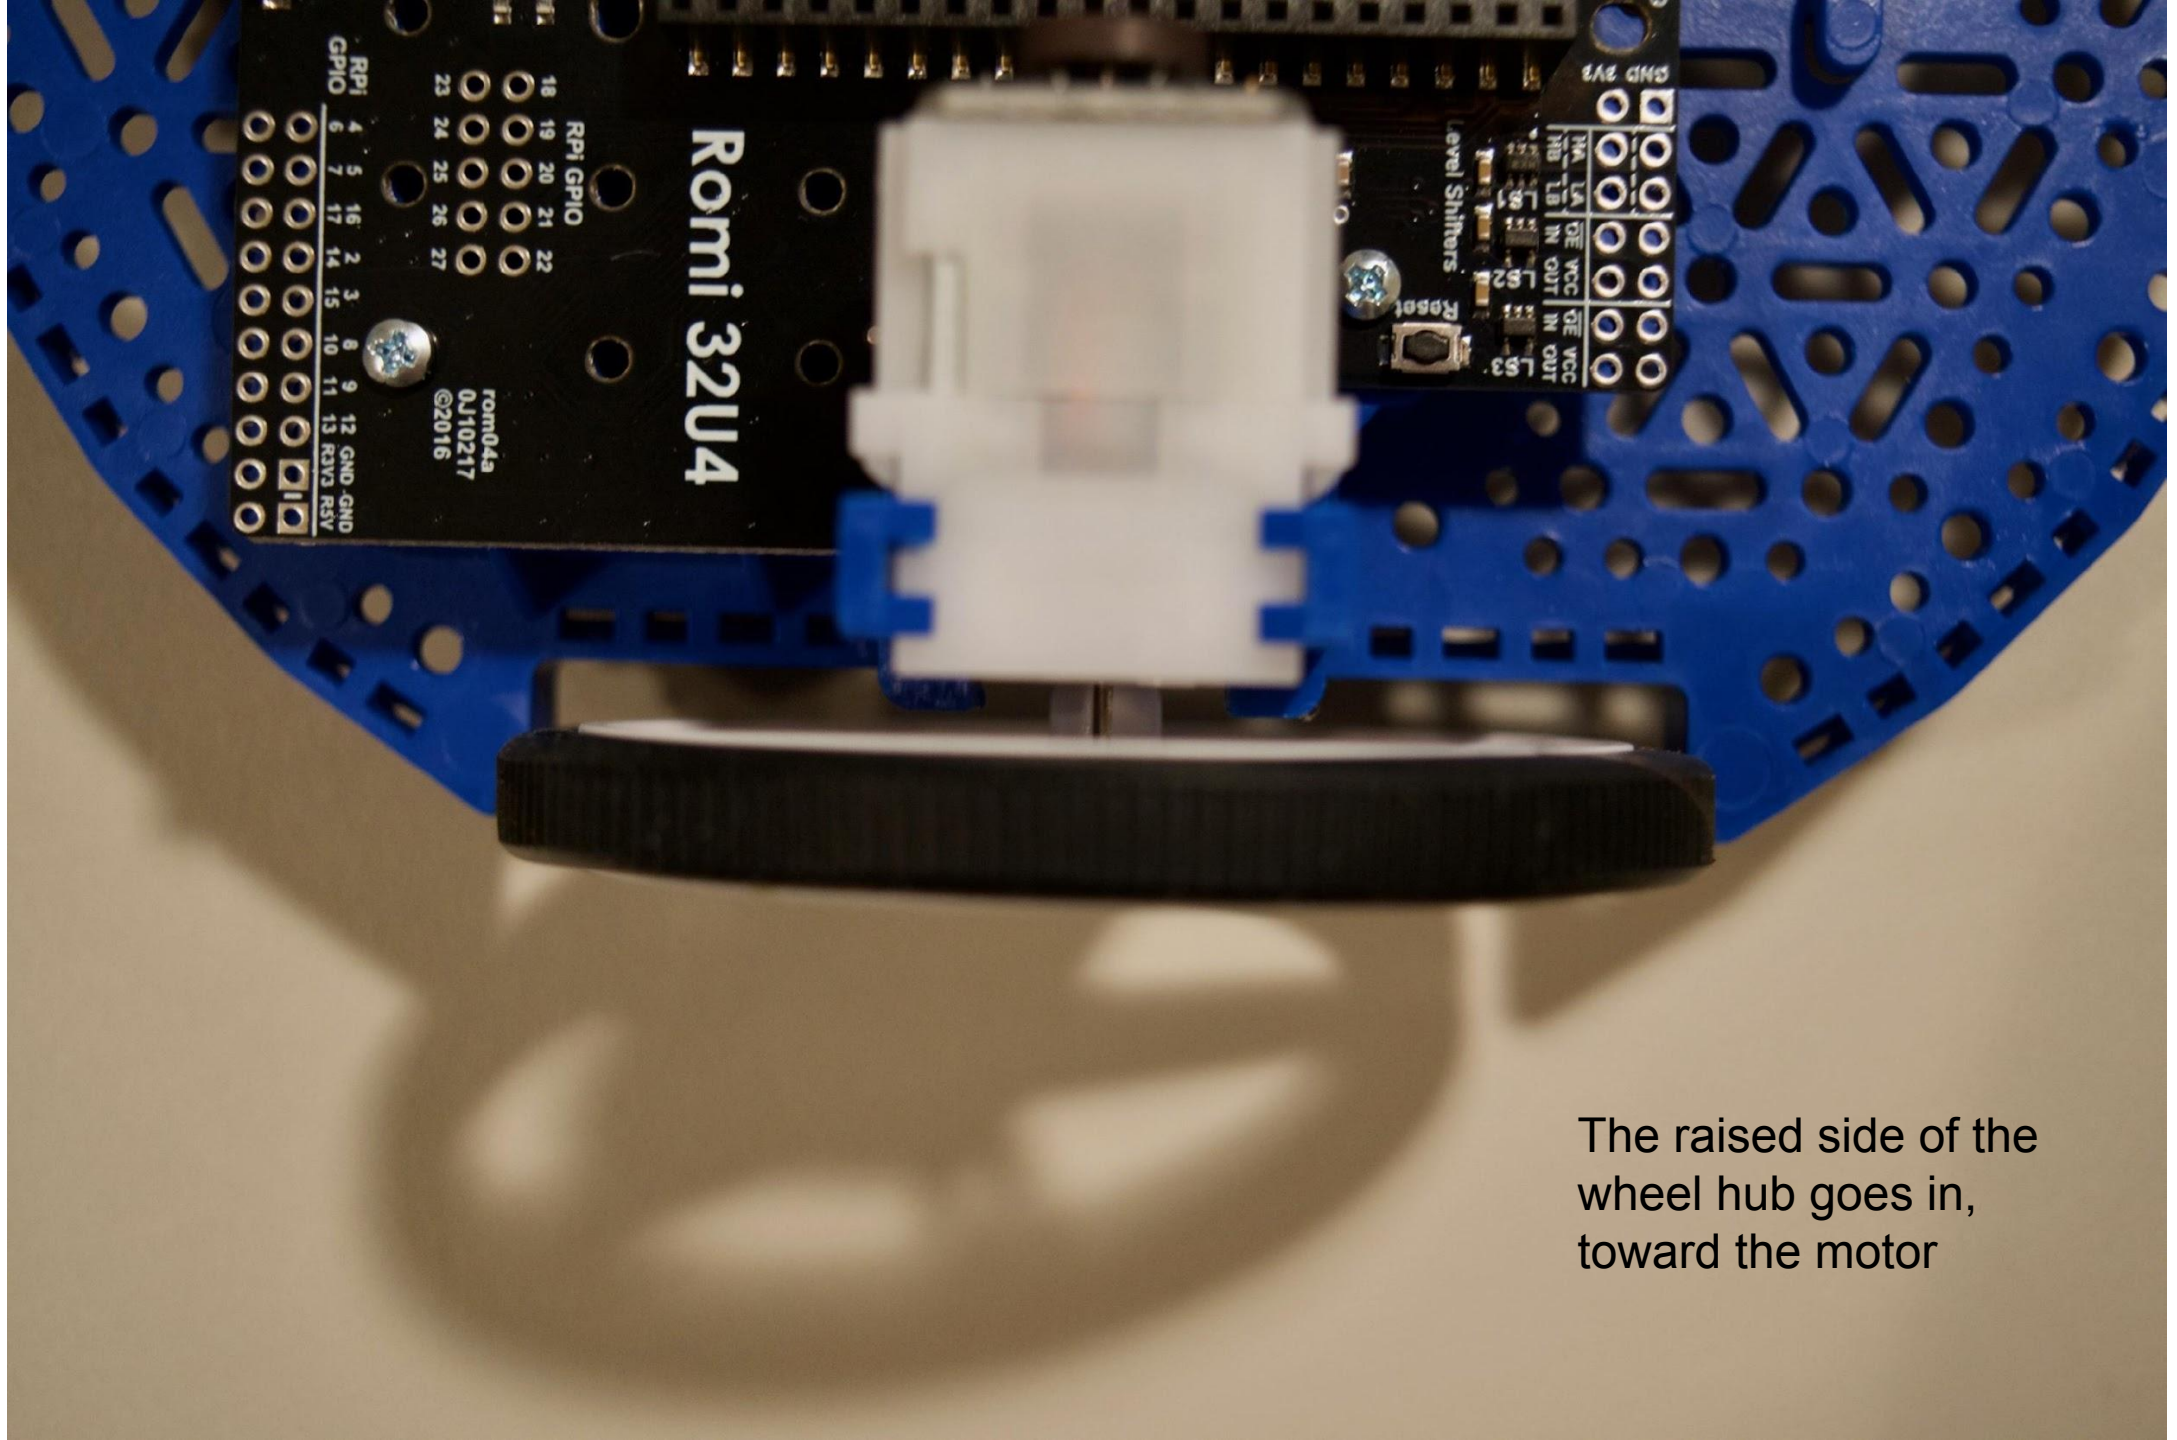



The raised side of the
wheel hub goes in,
toward the motor

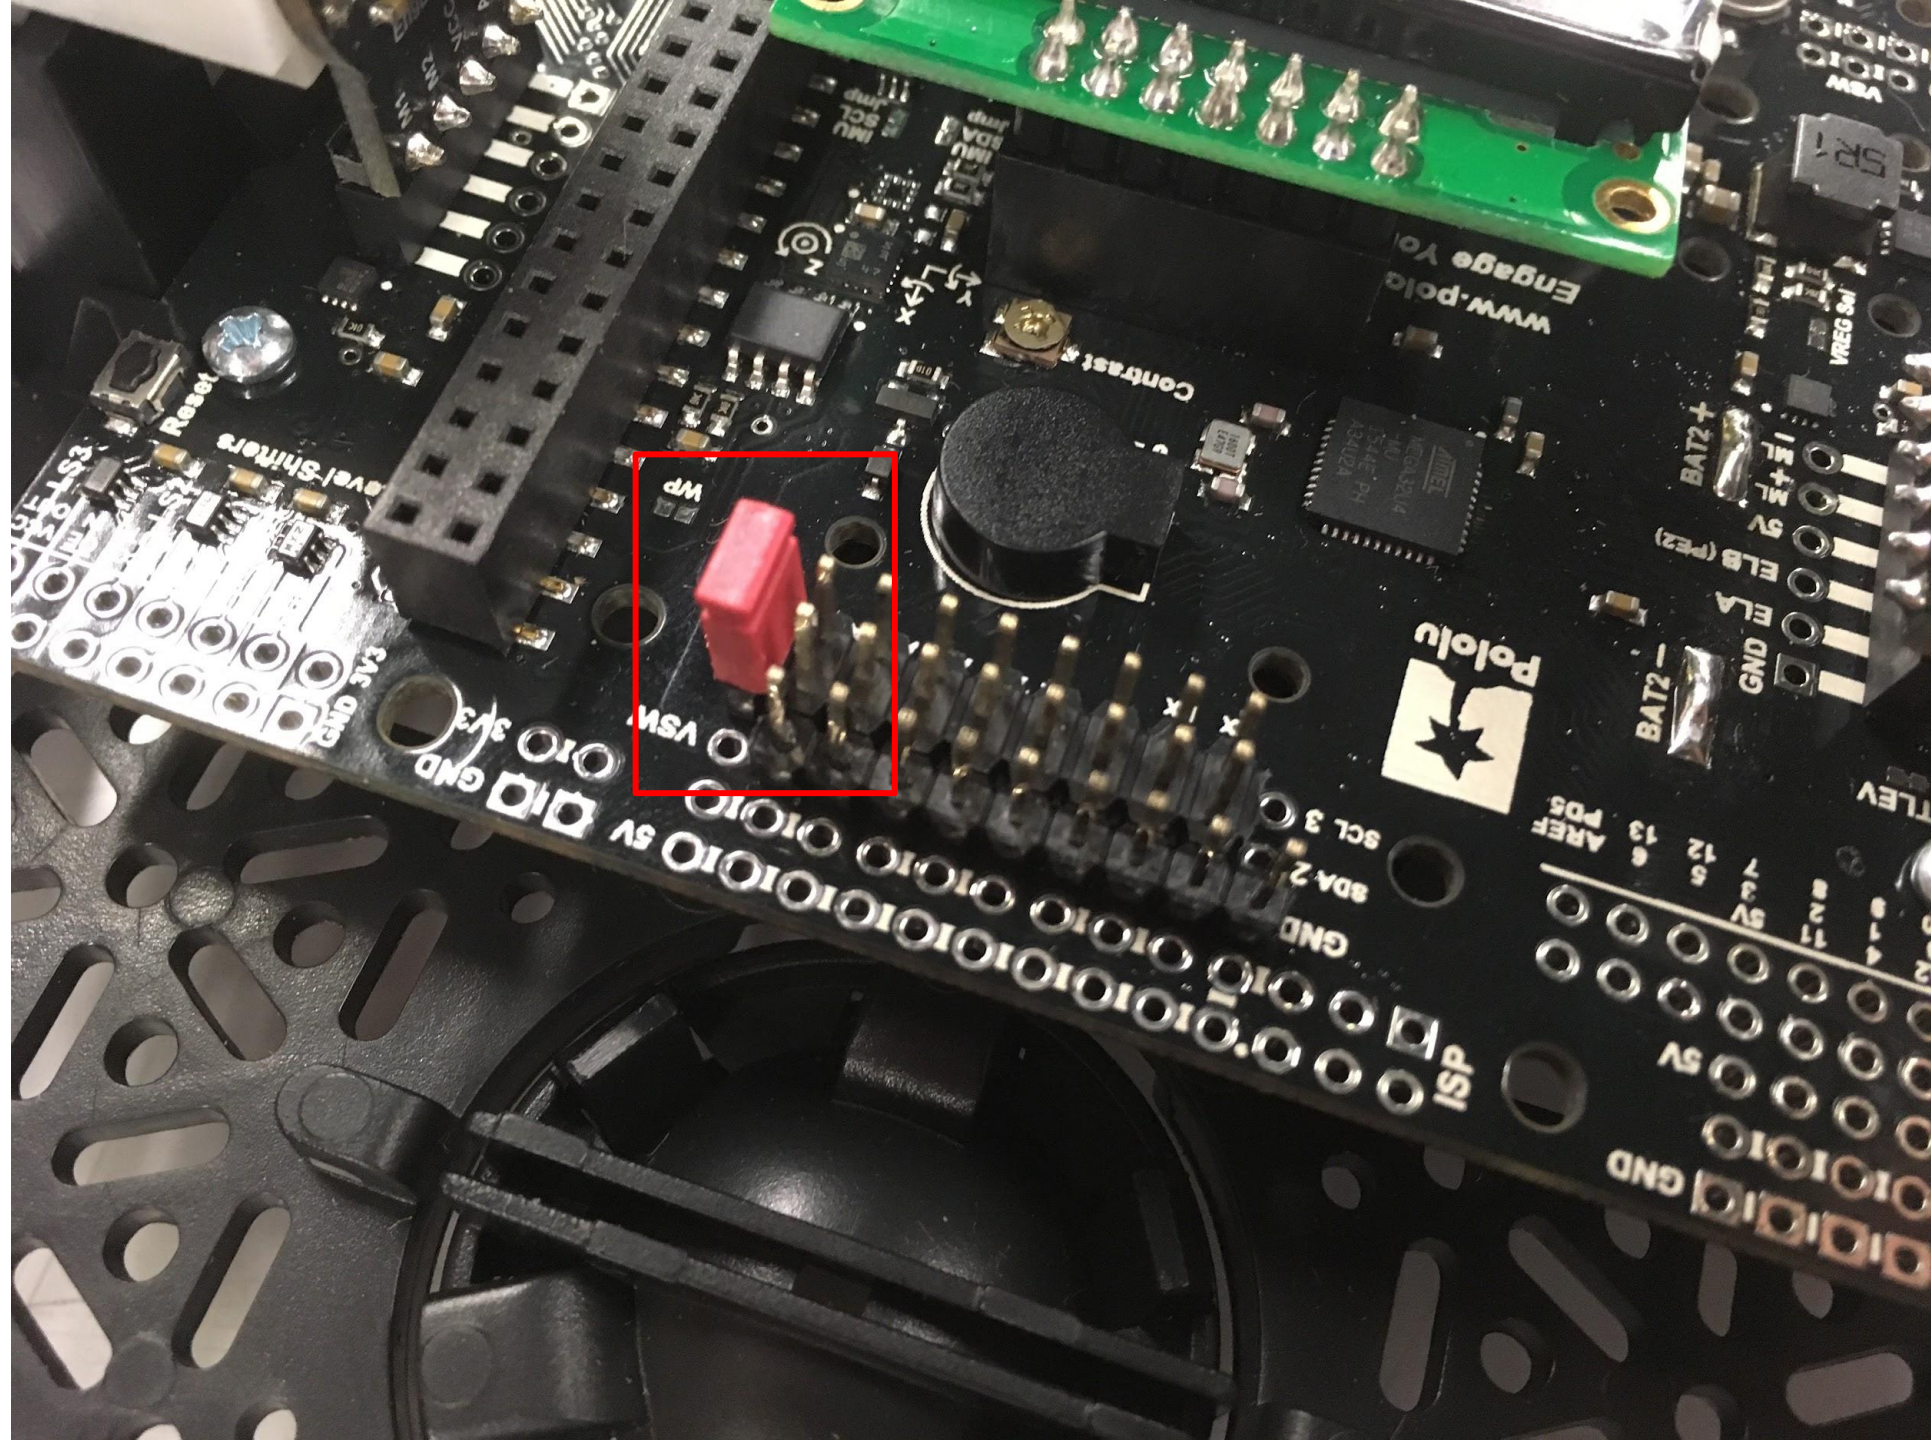

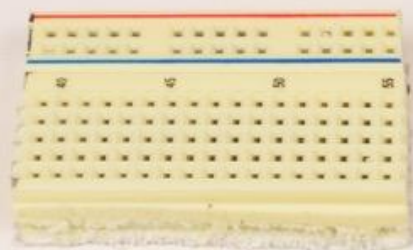



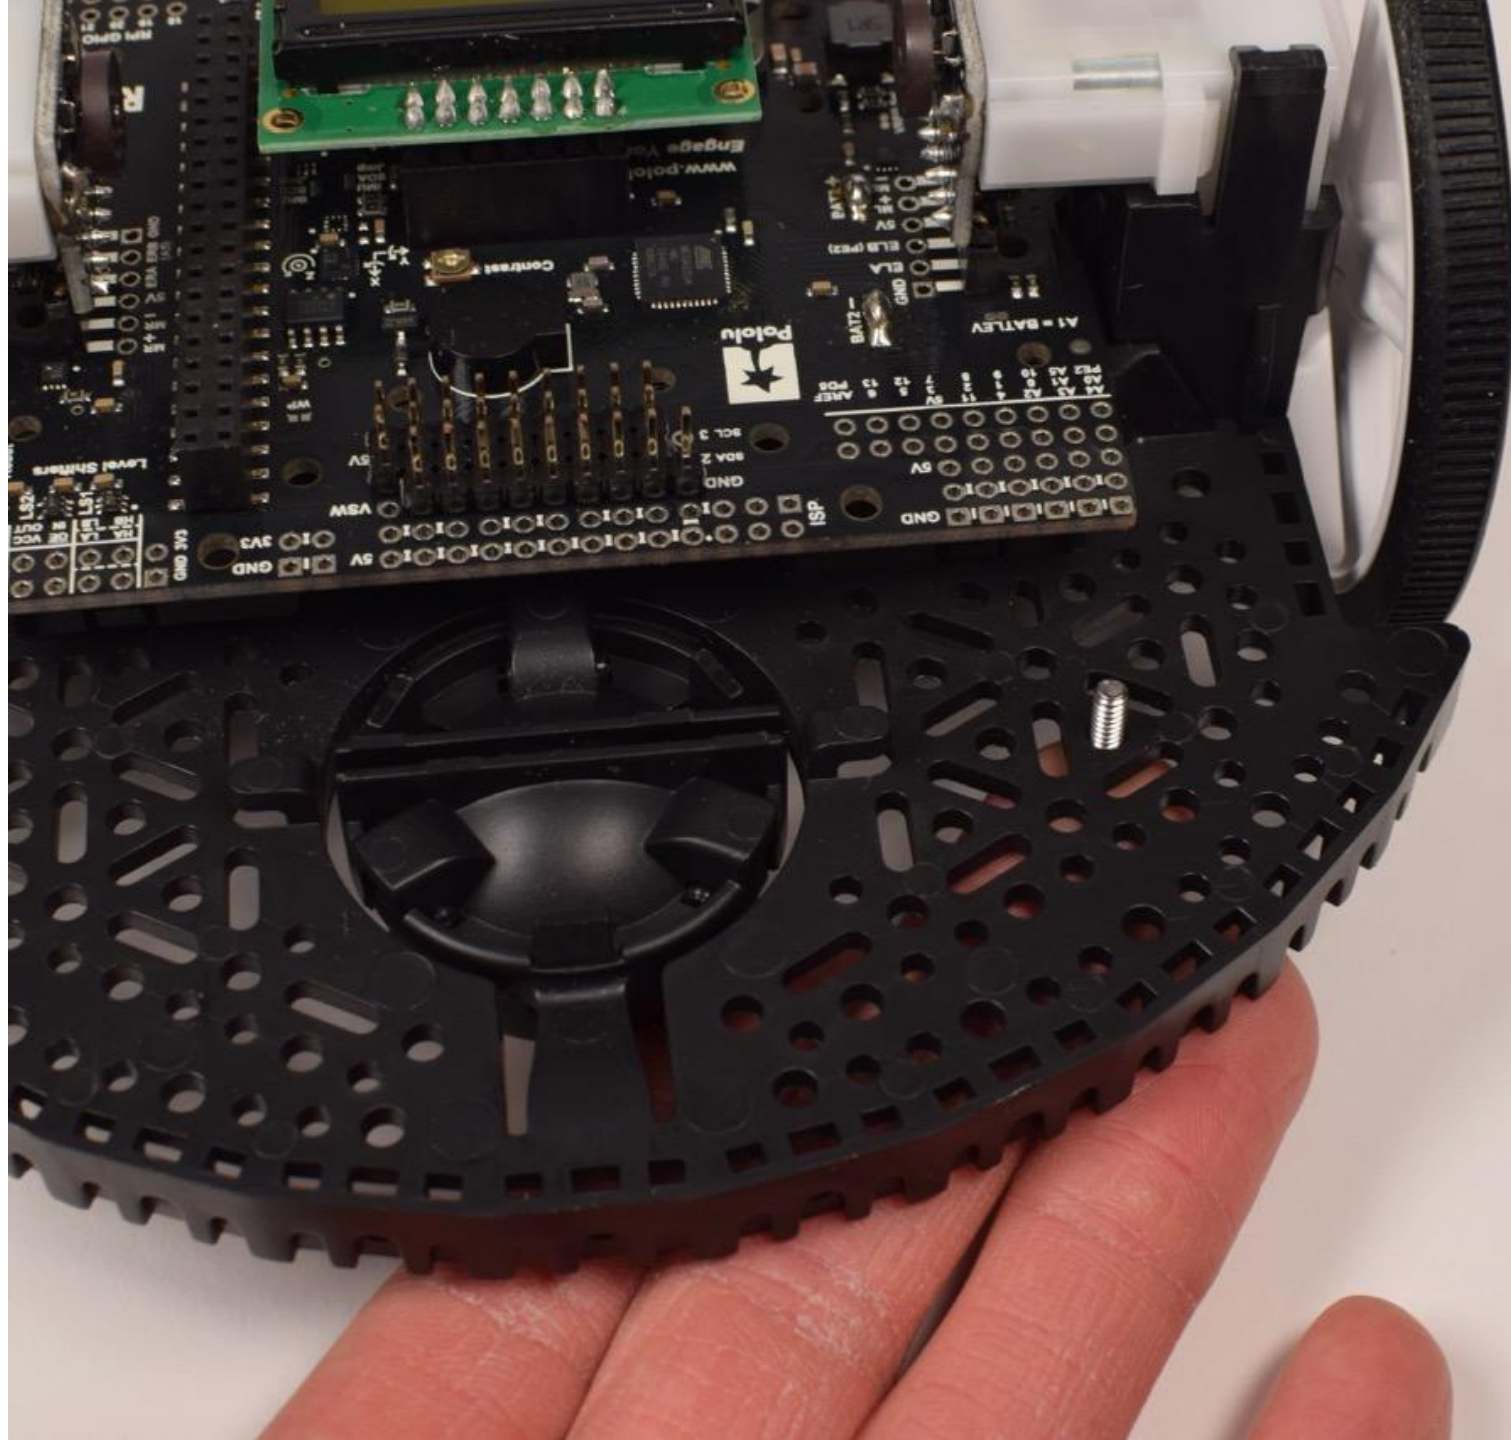

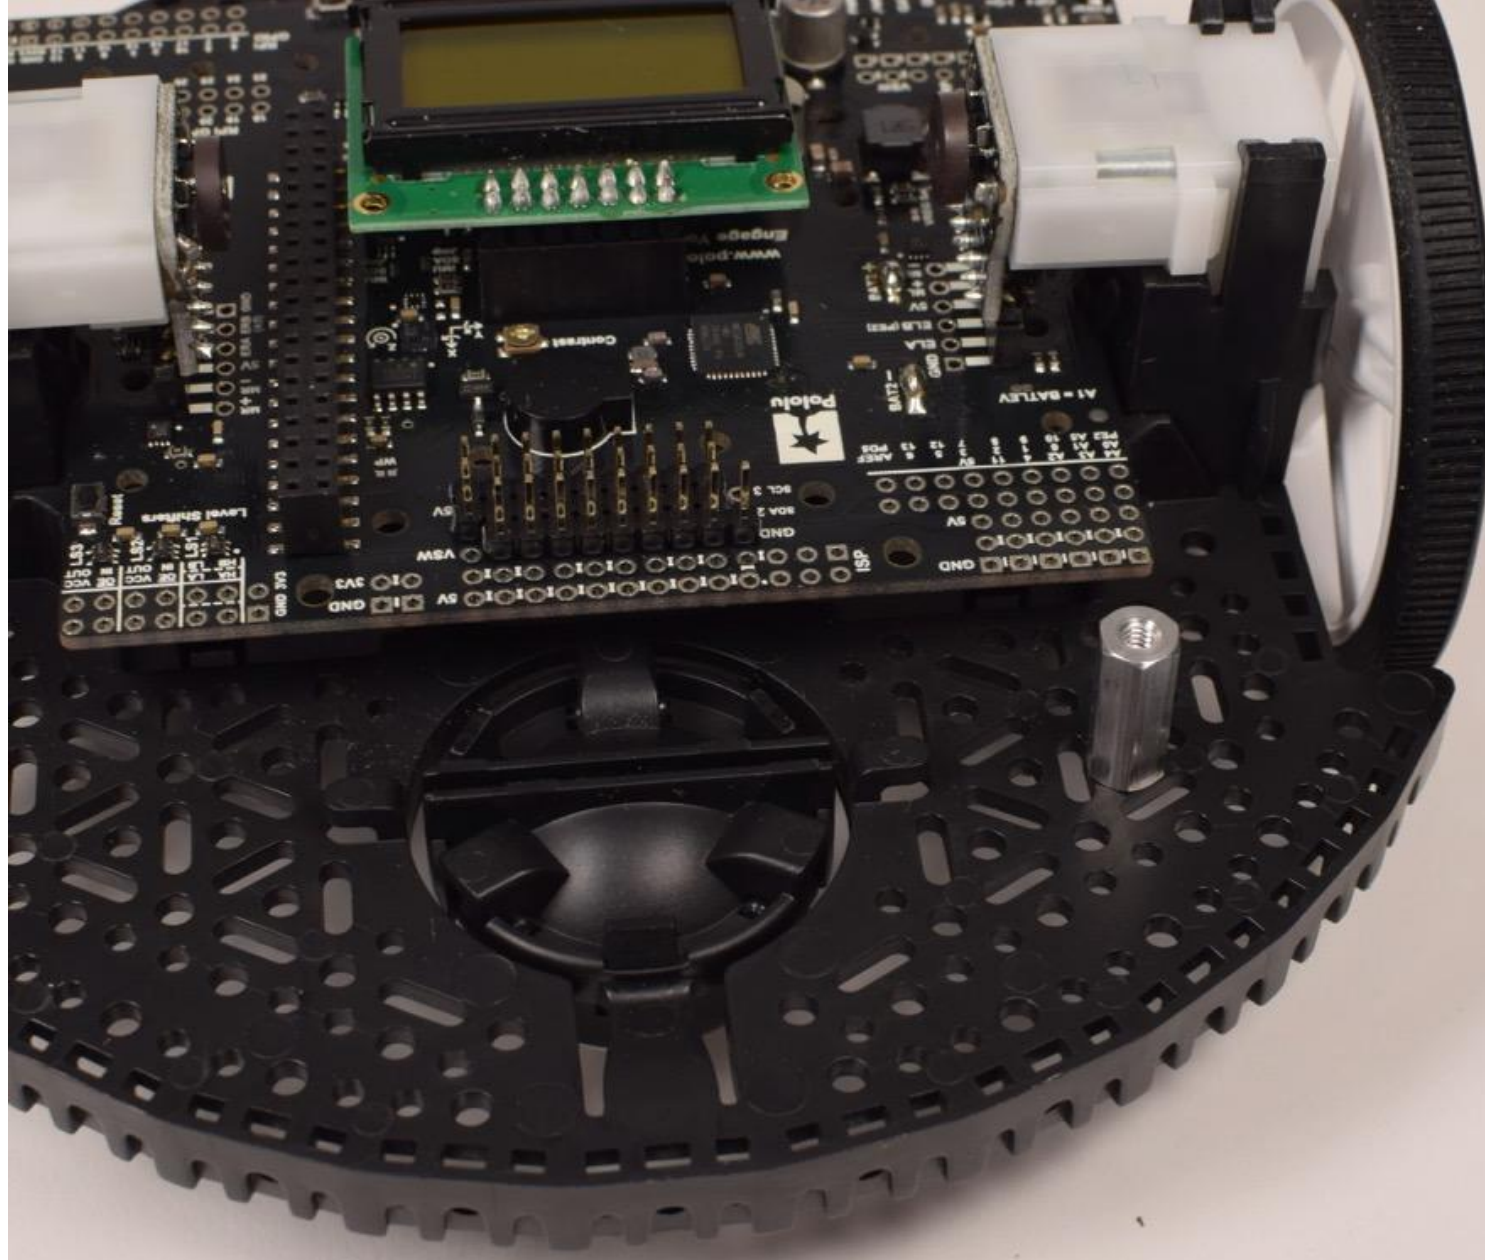

Use the short ones!

