

The Beginning Was The Centreline,
The Centreline Was With The Ingenieur
And The Ingenieur Was The Centreline

after John. 1.1



THE DEE

with

METRIC

dimensions

A transformation from Imperial to metric*

by
Ulli Holtmann

*Hopefully the Imperium will not strike back!?

INTRODUCTION

It was in 1964 when I heard for the first time about the G1MRA. In 1965 I saw a layout for the first time. It was in Onslow village (Guildford) in Bob Symes' garden ... and I got captured. I spent many, many weeks at Monica and Bob S's place. And what was most important to do? It was to swallow the NEWS LETTERS! But I had a problem! There were the famous 25,4mm called inches! Of course I knew about natural fractions, of course I studied intensely the design and ideas but I did not have the necessary feeling for the dimensions! To whichever country I came – except the English or American speaking area- I heard the same: "It is so difficult with the inches!"

When I heard from the authors that the DEE-book was to be published I offered to transform the drawings to metric. To start off with I had to buy a new drafting program – what the hell is compatible on a PC!? Then the program. didn't open some of the files Dick Moger sent to me! We tried various ways to open them on my machine but it refused to work! In the end I had to send them to the designers of the program. in Ireland. There they processed them and when the files were back they were accessible – but I had to redraw parts of them. Having done so I could have a go at the dimensions!

I have to thank my wife Uschi for the patience she offered when I sat at the machine, absorbed by my work and hardly able to be spoken to. I also have to thank my friend Barry Applegate for the time and effort he spent on proofreading.

I did not translate book so these metric drawings should be regarded as an appendix to the Imperial DEE book, which you will need for the construction text. Note that the drawings in this book are NOT in the same order as those in the DEE book. The tables opposite provide easy cross reference between the two books.

In the rear of THE DEE-METRIC book you will find a table showing how the inch fractions have been rounded .You will also find there some useful tables of threads, wire diameters, and sheet metal. There is also a table showing some German firms where you can get the necessary material.

If questions occur about the technical design ask the authors Barry Applegate and Dick Moger. If somebody finds a mistake in the metric dimensions let me know immediately, please.

If you like the book, tell me, if you don't like the book, tell others! Should this be correct?

Happy modelling,

Ulli Holtmann

November 2001

Published by the Gauge "1" Model Railway Association Limited [G1MRA], London, England.
Information on G1MRA can be obtained from their web site at www.gaugeone.org or by writing to the Membership Secretary at PO Box 5128, Northampton, NN6 0YG, England.

© Gauge "1" Model Railway Association Limited [G1MRA]

First published November 2001.


Reprinted October 2004 with correspondence table (page on left) updated for the DEE book Edition 2

Reprinted December 2008 as Edition 3 with correspondence table (page on left) updated for the DEE book Edition 3

All rights reserved. No part of this book may be reproduced in any form without written permission from G1MRA, except for the purpose of construction of an individual model of Dee.



Lubricator Alternative Arrangement

(Shallow beams and footplate as on LSWR T9 etc)

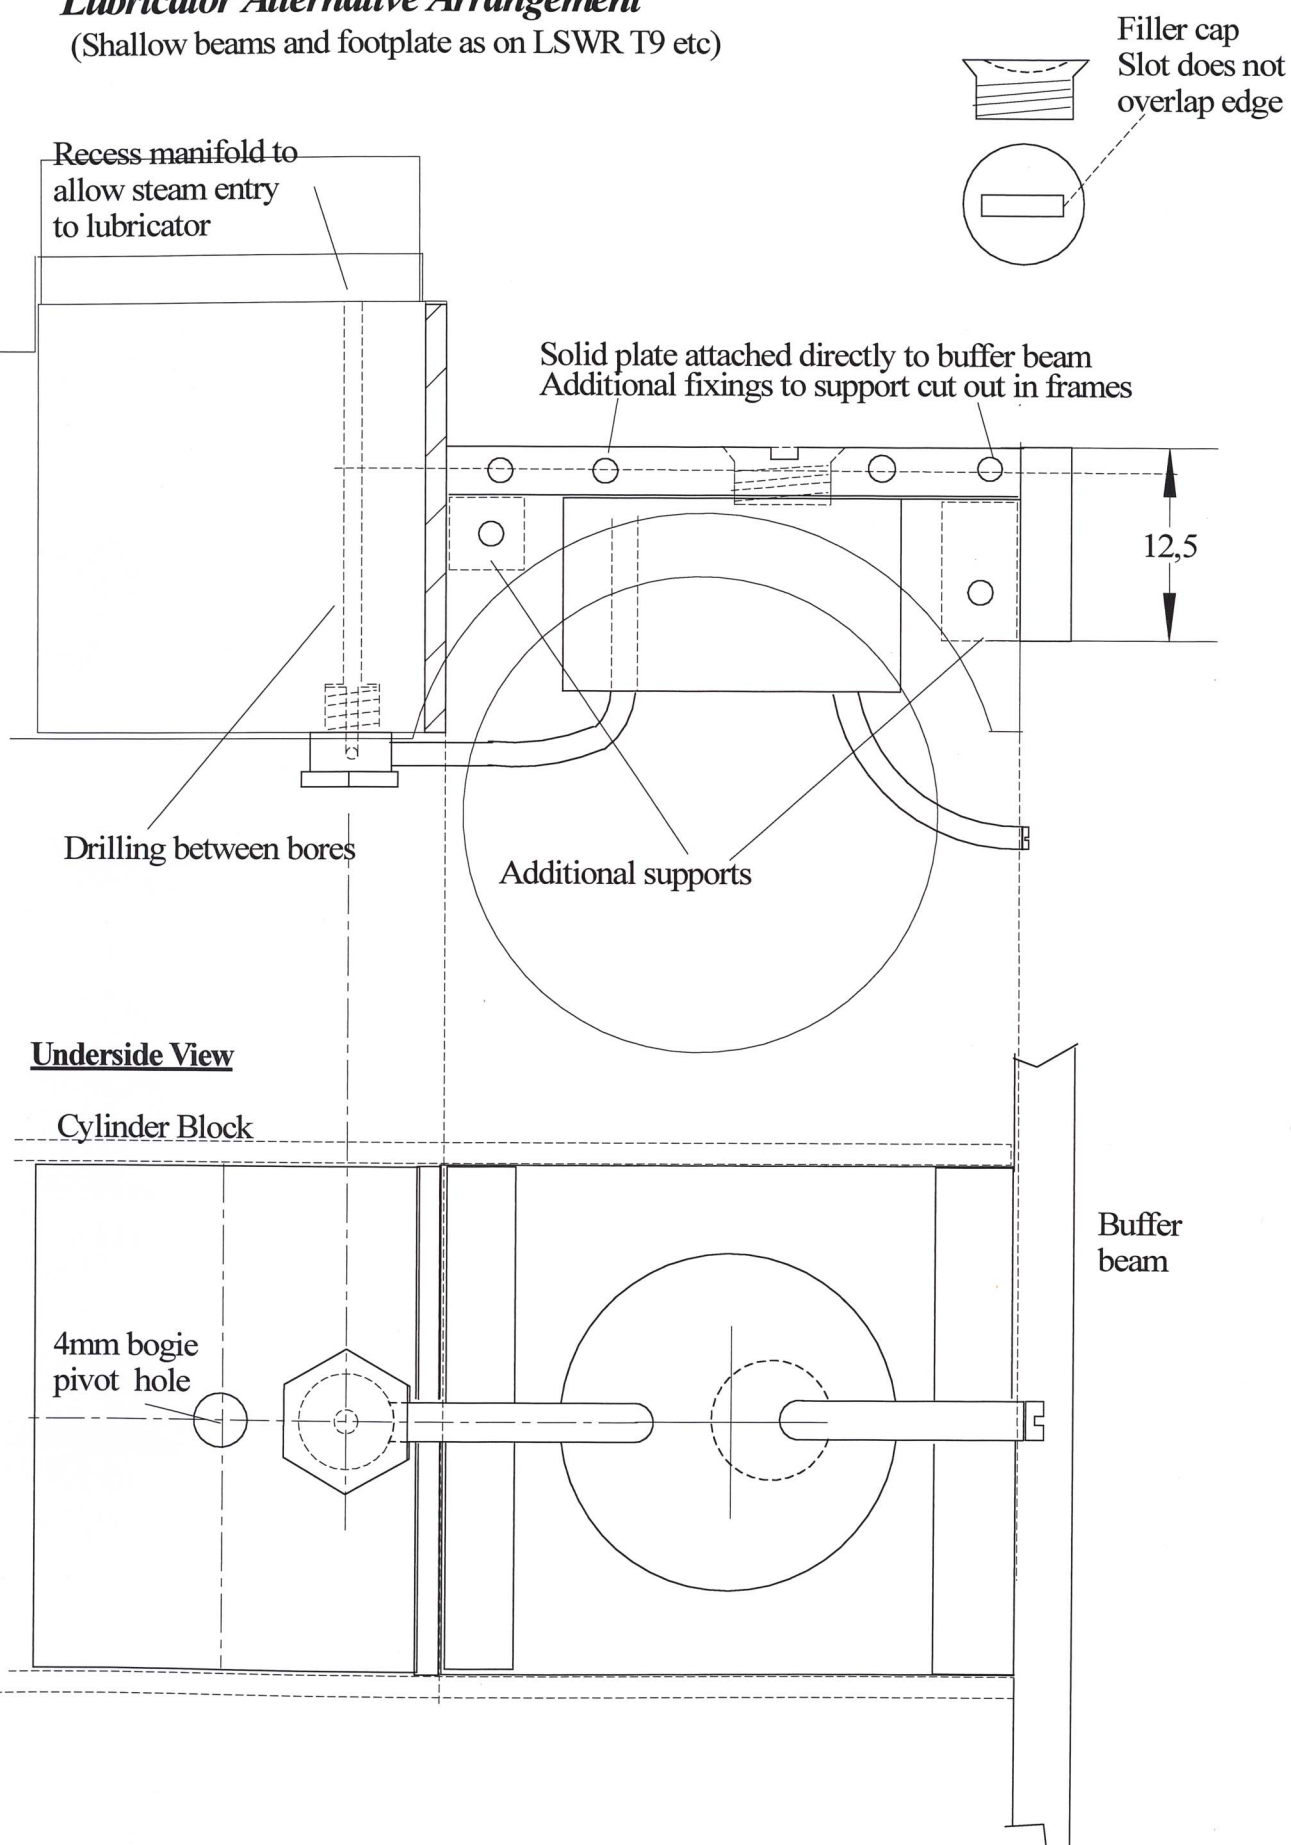


Safety Valve


General Arrangement

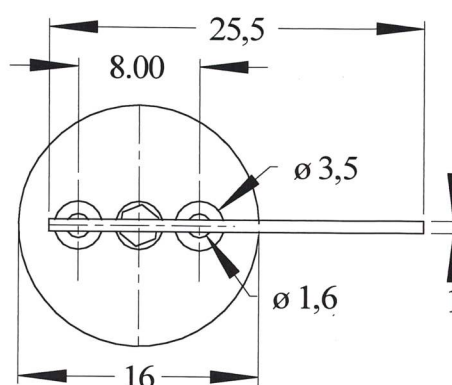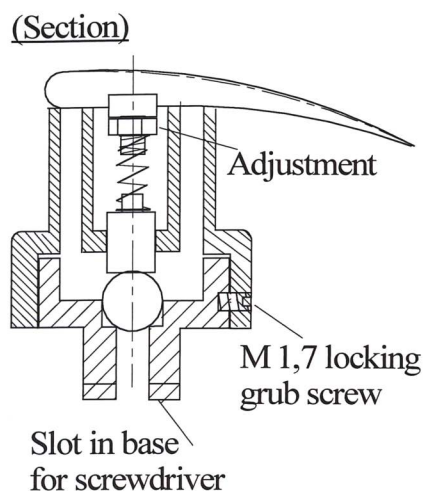

Upper Body

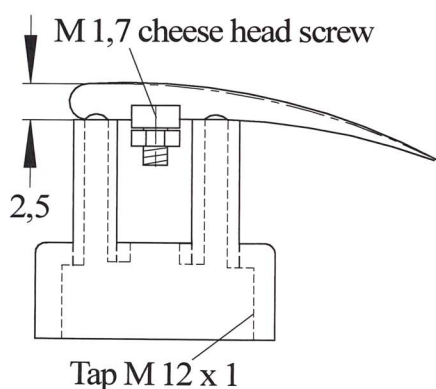


Lower Seating

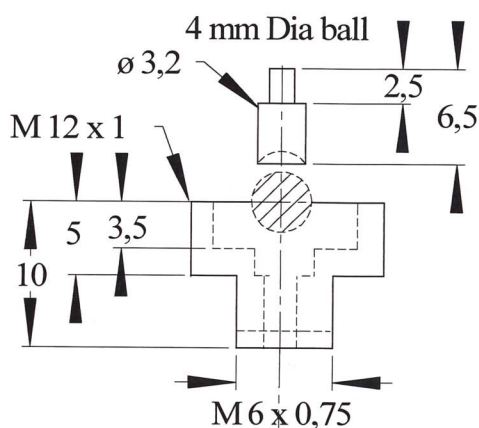



Scrap view

Upper body
assembly silver
soldered as one unit
Cheese head to be
tight fit on lever

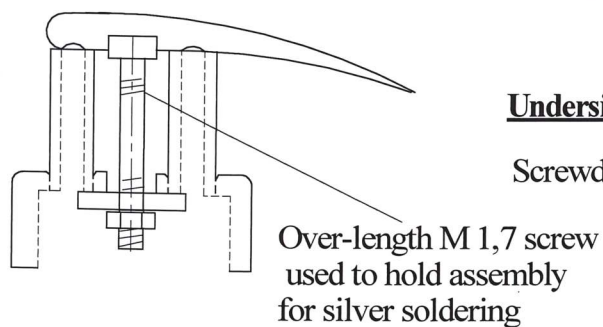


Top View of Lower Seating

Modify depth
of 4mm seating for
optimum
performance

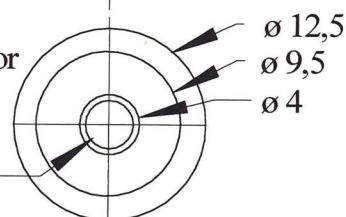

Underside view

Screwdriver slot

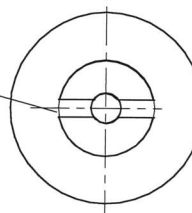

Metric threads, coarse & fine

COARSE	
Tap	Centre drill
[mm]	[mm]
1 x 0,25	0,7; (0,75)
1,1 x 0,25	0,8; (0,85)
1,2 x 0,25	0,9; (0,95)
1,4 x 0,3	1,1
1,6 x 0,35	1,2; (1,25)
1,7 x 0,35	1,3
1,8 x 0,35	1,4; (1,45)
2 x 0,4	1,6
2,2 x 0,45	1,7; (1,75)
2,5 x 0,45	2,0; (2,05)
3 x 0,5	2,5
3,5 x 0,6	2,9
4 x 0,7	3,3
4,5 x 0,75	3,7
5 x 0,8	4,2
6 x 1	5,0
7 x 1	6,0
8 x 1,25	6,8
9 x 1,25	7,8
10 x 1,5	8,5
11 x 1,5	9,5
12 x 1,75	10,2
14 x 2	12,0
16 x 2	14,0
18 x 2,5	15,5
20 x 2,5	17,5
22 x 2,5	19,5
24 x 3	21,0
27 x 3	24,0
30 x 3,5	26,5
33 x 3,5	29,5
36 x 4	32,0
39 x 4	35,0

FINE	
Tap	Centre drill
[mm]	[mm]
2,3 x 0,45	1,8; (1,85)
2,6 x 0,45	2,0; (2,0)
3 x 0,35	2,6; (2,65)
4 x 0,35	3,6
4 x 0,5	3,5
5 x 0,5	4,5
6 x 0,5	5,5
6 x 0,75	5,3; (5,25)
7 x 0,75	6,3; (6,25)
8 x 0,5	7,0
8 x 0,75	7,25
8 x 1,0	7,5
9 x 1,0	8,0
10 x 0,75	9,3; (9,25)
10 x 1	9,0
10 x 1,25	8,8
11 x 1	10,0
12 x 0,75	11,3; (11,25)
12 x 1	11,0
12 x 1,5	10,5
14 x 1	13,0
14 x 1,25	12,8
14 x 1,5	12,5
16 x 1	15,0
16 x 1,5	14,5
18 x 1	17,0
18 x 2	16,0
20 x 1	19,0
20 x 1,5	18,5
20 x 2	18,0
22 x 1	21,0
22 x 1,5	20,5
22 x 2	20,0
24 x 1,5	22,5
24 x 2	22,0

M2,3 and M2,6 are the better bet for modelling than M2,2 and M 2,5
 Generally: the metric centre drill dia. equals thread dia. minus pitch!