AFTERGLO

OWNER'S MANUAL

Permanent lighting system — the AFTERGLO app and the AFTERGLO controller. Setup, everyday use, safety, care, troubleshooting and warranty.



App version 5.1.0 (build 65) · Controller firmware 1.1.0 · Manual revision A, November 2026

Read the Safety chapter before installing or using this product. Keep this manual for future reference.

AFTERGLO Lighting, a division of Ward Legacy Group LLC · South Jordan, Utah 84095 · (385) 337-4144 · afterglolights@gmail.com · afterglolighting.org

READ THIS FIRST

Thank you for choosing AFTERGLO. Your lights are permanently installed on your home and run on their own — the AFTERGLO controller stores your looks and timers and keeps running whether or not your phone is nearby. The app is the remote control.

Who this manual is for

- **Owners** — Chapters 1–8, 10–11. Everything you need day to day.
- **Installers** — Chapter 9 (Setup → LEDS, power budget, xLights) and Chapter 12 (Specifications) contain settings that can affect electrical safety. Owners should not change them without guidance.

How the manual is organised

Like a car manual: safety first, then a one-page quick start, then each control in the order you meet it in the app, then care, troubleshooting, specifications and the legal notices at the back. Button names appear the way the app shows them, for example **SET UP NEW CONTROLLER**.

Signal words used in this manual

⚠ DANGER

A hazard that **will** cause death or serious injury if not avoided.

⚠ WARNING

A hazard that **could** cause death or serious injury if not avoided.

⚠ CAUTION

A hazard that could cause minor or moderate injury.

NOTICE

Information about avoiding damage to the product or property. Not related to personal injury.

Screens in this manual were captured from the AFTERGLO app 5.1.0 running in demonstration mode; names, light counts and times are examples. Your screens may differ slightly with app updates. Product specifications are subject to change without notice.

CONTENTS

1 **SAFETY**
Important safety instructions · Seizure warning · Electrical · Installation · Network security

2 **QUICK START**
From the box to lights on in five steps

3 **KNOW YOUR SYSTEM**
Components · Controller · Light signals · What runs where

4 **SETTING UP A CONTROLLER**
Install the app · Guided setup · Manual setup · Add by IP · Direct connect · Moving house

5 **THE APP AT A GLANCE**
The dock · The selected controller · Home

6 **PRESETS**
Folders · Adjusting · Pinning · Whites · Effects reference

7 **DESIGN**
Build · Accent · AI · Shared community presets

8 **TIMERS**
Quick starts · Custom timers · Sunset · Holiday dates · Pause · Clock

9 **SETUP (INSTALLER SETTINGS)**
Network · LEDs & power · Colour trim & check · AFTERGLO Connect · Firmware updates · Run hours

10 **CARE & MAINTENANCE**
Seasonal checks · Cleaning · Fuse · Updates · Service record

11 **TROUBLESHOOTING**
Symptoms · Error messages decoded · Decision tree

12 **SPECIFICATIONS**
Controller · Lights · Power · Wireless · Network · App

13 **LEGAL & REGULATORY**
FCC · Warranty · Privacy · Community & AI terms · Open source · Trademarks

14 **REFERENCE**
Quick reference card · Glossary · Index

1 SAFETY

Read all instructions before installing, servicing or using this product.

IMPORTANT SAFETY INSTRUCTIONS — SAVE THESE INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following.

⚠ WARNING — PHOTOSENSITIVE SEIZURES



Some lighting effects flash. A small percentage of people may experience a seizure or other symptoms (dizziness, altered vision, eye or face twitching, jerking of arms or legs, disorientation, loss of awareness) when exposed to flashing lights or patterns, **even with no history of epilepsy**.

- The **Strobe** effect flashes the whole display on and off. At the default speed it flashes about once or twice per second; **raising the speed slider makes it flash up to about ten times per second. The app and controller do not limit flash rate.** Heartbeat, Sparkle, Twinkle and fast Chase looks also flicker.
- Do not use flashing effects where anyone with photosensitivity may see them, including neighbours and passers-by, or where they can be seen from a roadway.
- Stop using flashing effects immediately and consult a doctor if anyone experiences any of the symptoms above. Parents should watch children for these symptoms.

⚠ WARNING — ELECTRIC SHOCK AND FIRE



- Installation and any work on wiring, power supplies or the controller enclosure must be done by a qualified installer in accordance with the National Electrical Code (NEC) and all local codes. Any work on line-voltage (mains) wiring requires a licensed electrician.
- Power the system only from the supplied or specified power supply: the 24 V DC low-voltage supply your AFTERGLO installer fitted (or an identical replacement from AFTERGLO), plugged into a **GFCI-protected** outlet rated for outdoor use where applicable.
- Disconnect the power supply from the outlet before inspecting, cleaning, or servicing the controller, wiring or lights. Turning the lights **OFF in the app does not remove power** from the controller or the power supply.
- The controller is protected by a **15 A fuse**. Replace it only with a fuse of the same type and rating. Never bypass the fuse.
- Do not use the product if any cord, connector, light or enclosure is damaged, cracked, melted, or shows water inside. Contact support.
- Do not change the LED count, strip type, power supply, or power-per-light settings (Setup → LEDS) to values that do not match the installed hardware. These values are what the controller uses to keep current within safe limits.
- **Ignore controller limits** (Setup → LEDS) turns off the controller's software current limiting. It does **not** make the hardware able to carry more current. For qualified installers only, on installs with external over-current protection or for bench testing.

⚠ WARNING — FALLS FROM HEIGHT



- Lights are mounted on rooflines, eaves and other high places. Do not climb onto roofs or ladders to inspect or adjust the lights. Contact your installer.
- Everything an owner needs to do — setup, changing looks, timers, troubleshooting — can be done from the ground with the app. If the controller must be power-cycled, use the outlet or switch feeding the power supply.

⚠ CAUTION — HEAT, WATER AND EYES



- The power supply and controller get warm during use. Keep them ventilated, away from insulation, leaves, paper and other combustibles, and out of direct sun where possible. Do not cover or wrap them.
- Mount the controller and power supply in a weather-protected location as your installer placed them. Do not submerge any part of the system. Keep connections above standing water and snow lines.
- Do not stare into lit LEDs at close range. At full white the lights are very bright.
- Aim and brightness: bright or flashing displays can distract drivers and disturb neighbours. Follow local ordinances, HOA rules and dark-sky guidance; use timers to switch lights off late at night.
- Keep children and pets away from power supplies, cords and connectors. This product is not a toy.

NOTICE — NETWORK SECURITY

- The controller is controlled over your home network and does **not** require a password once it is on your WiFi. Anyone who can join your home WiFi can control your lights. Protect your WiFi with a strong WPA2 or WPA3 password and do not share it with people you would not want controlling the lights.
- When the controller cannot reach your WiFi it broadcasts its own setup network, `AFTERGLO-Setup`, whose password is printed in this manual. Anyone nearby can join it while it is broadcasting. Finish setup promptly; the setup network turns off as soon as the controller is back on your WiFi.
- Keep the app and controller firmware up to date (Chapter 9) to receive security and reliability fixes.

NOTICE — RADIO INTERFERENCE AND MODIFICATIONS

This device contains a 2.4 GHz radio transmitter. Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment and void the warranty. See Chapter 13 for the FCC statement.

2 QUICK START

From installed lights to your first look in about five minutes.


1. **Install the app.** Search for **AFTERGLO** in the App Store (iPhone, iOS 15 or later) or Google Play (Android 7.0 or later). Allow **Local Network** and **Location** access when asked — they are used only to find your lights and join their setup network.

2. **Power the lights.** Make sure the controller's power supply is plugged in. A brand-new controller shows a **slow, gentle amber glow** along the lights: it is ready to be set up.

3. **Have your WiFi ready.** You need your home network name and password. The controller uses **2.4 GHz WiFi only** — most routers broadcast 2.4 GHz alongside 5 GHz under the same name.


4. **Set it up.** On the HOME tab tap **+ ADD**, then **START**. Tap **Connect / Join** on your phone's popup (the "no internet" warning is normal), pick your home WiFi, enter the password, and tap **CONNECT MY LIGHTS**. Wait for **You're all set!** — see Chapter 4.

5. **Pick a look.** Open **PRESETS**, choose a folder, tap a preset. Then open **TIMERS** and tap **Dusk to bedtime** so the lights look after themselves.

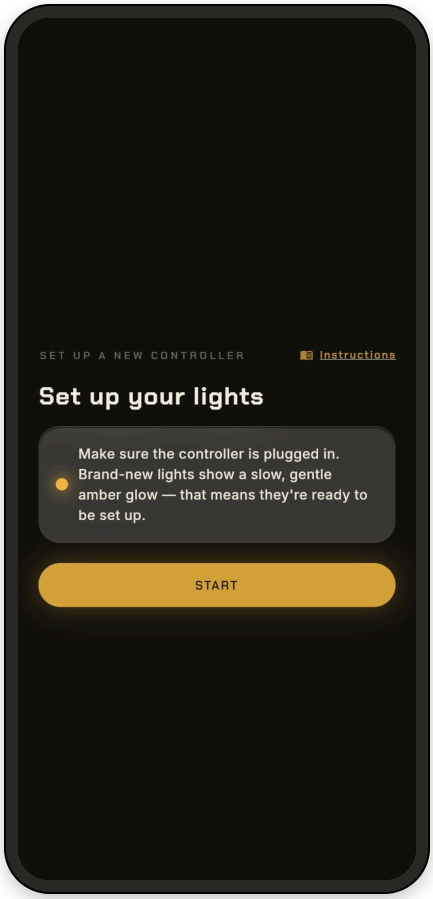

Step 4 — Set up your lights

> **TIP** — The lights do not need your phone after setup. Looks and timers are stored on the controller and keep running with your phone off or away from home.

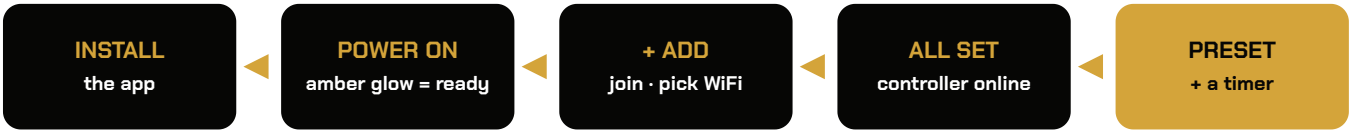

3 KNOW YOUR SYSTEM

What each part does, and where your settings live.

SYSTEM OVERVIEW

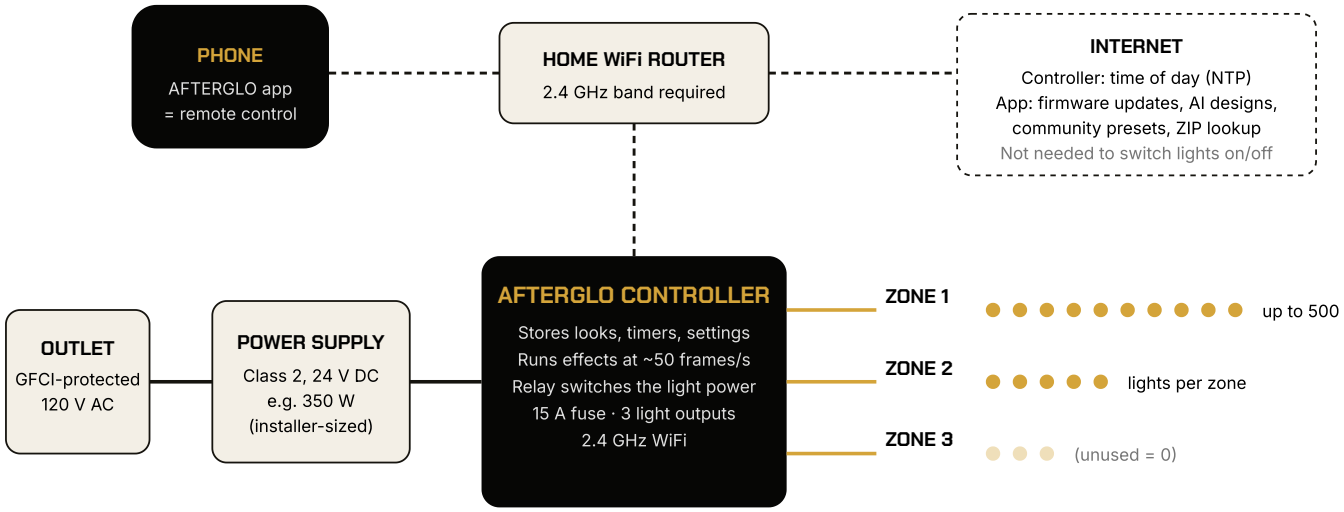


Figure 3-1. The parts of an AFTERGLO system. Solid lines carry power; dashed lines are network connections. Power supply size and light count vary by install.

WHAT RUNS WHERE

STORED ON THE CONTROLLER	STORED ON YOUR PHONE
On/off, brightness, speed, the look that is playing Your saved patterns (My Patterns) Timers, time zone, location for sunset WiFi, LED and power settings Run-hours odometer	Your list of controllers and their names Pinned presets Bright / warm white choice for Accent Community "agreed" and blocked users

Because the controller holds everything that matters, you can use any phone with the app, uninstall and reinstall the app, or let a family member control the lights from their own phone on the same WiFi.

WHEN POWER IS RESTORED

After a power cut the controller restarts in about 15 seconds and puts back the last look, brightness and on/off state. Your router usually takes longer to restart; until it does, the controller may show its **amber setup glow**. It retries your WiFi every 30 seconds, rejoins on its own and resumes timers once it has the time from the internet. **No action is needed** — wait a few minutes.

PRODUCT FAMILIES

AFTERGLO controllers are built for a **roofline**, **arch** or **tree** display. The family decides which firmware updates the app offers. All use the same app.

LIGHT SIGNALS

The controller has no screen. It talks to you through the lights themselves.

WHAT YOU SEE	WHAT IT MEANS	WHAT TO DO
Slow, gentle amber glow breathing along every light (about every 3 s)	Setup mode. The controller has no WiFi saved, or cannot reach the WiFi it was set up on. It is broadcasting its own network `AFTERGLO-Setup`.	New controller: set it up (Chapter 4). After a power cut: wait a few minutes for your router. If it persists: see Moving house / new router (4.6).
Your chosen look	Normal operation.	—
Lights dark	Switched off from the app or by a timer; or no power.	Check HOME. If the controller shows "Not responding", check power.
Show from xLights/FPP	AFTERGLO Connect is receiving a holiday show stream; it overrides your look.	Normal. The controller returns to its own look when the show stops (9.4).
Fixed coloured bands, dim	Colour check test pattern (installer tool).	Choose any preset to end it.

NOTICE

There is no reset button. A controller only returns to setup mode when it cannot reach its saved WiFi. To move it to a new network, use Setup → NETWORK while it is still online, or see 4.6.

4 SETTING UP A CONTROLLER

Connect a new controller to your home WiFi. Do this once per controller.

4.1 BEFORE YOU START

- Install the AFTERGLO app (iOS 15+ or Android 7.0+).
- Your phone must be on the same home WiFi you want the lights on, and close to the controller (same room or just outside).
- Know your WiFi name and password. The controller joins **2.4 GHz** networks only. Open networks (no password) are supported but not recommended.
- If you have several new controllers, power and set up **one at a time** — they all broadcast the same setup network name. (If two are on, the app joins the nearest one.)

PERMISSIONS THE APP ASKS FOR

PERMISSION	WHY
Local Network (iPhone)	To find controllers on your WiFi.
Location — while using (Android, and iPhone for WiFi name)	Your phone requires it before an app can read the WiFi name or join the lights' setup network. Your location is not stored or sent anywhere by this.
Join "AFTERGLO-Setup" (system popup)	Lets the app connect your phone to the lights for the minute setup takes. Your phone may say the network has "no internet" — that is expected.
Location (Timers, optional)	Only if you tap USE MY LOCATION for exact sunset times (8.5).

4.2 GUIDED SETUP (RECOMMENDED)

1. Plug in the controller. New lights show the **slow amber glow**.
2. On **HOME** tap **+ ADD** (top right). Read the screen and tap **START**.
3. **One quick permission** — the app explains the popup that is coming. Tap **OK, I'M READY**, then tap **Connect** (or Allow / Join) on your phone's popup.
4. The app shows *Connecting to your lights...* then *Found them! Saying hello...*
5. **Pick your home WiFi** from the list. Don't see it? Tap *My network isn't in this list* and type the name. Enter the password and tap **CONNECT MY LIGHTS**.
6. The app waits while the lights join your WiFi and checks they really came online (this can take up to a minute). Your phone is returned to your home WiFi automatically.
7. **You're all set!** The controller appears on HOME. Rename it from its ⋮ menu (5.3).

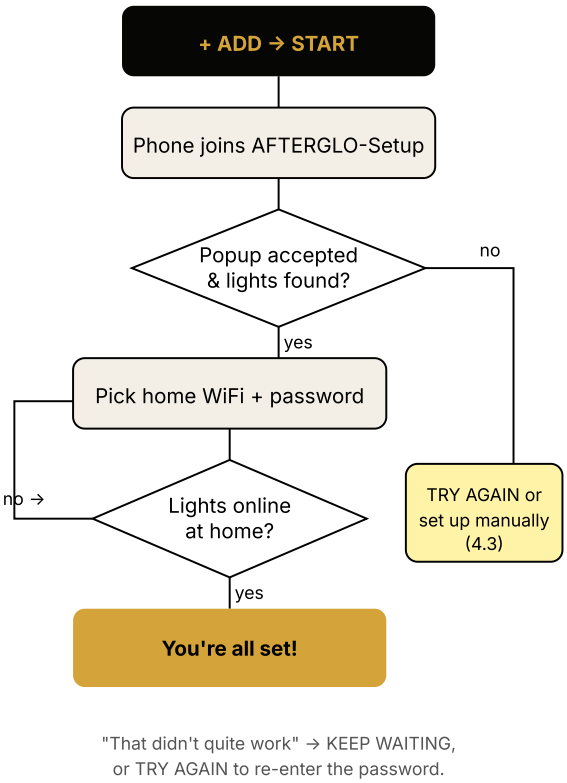


Figure 4-1. Guided setup. If the lights go back to the amber glow after you enter the password, the password was probably wrong or the router is out of range.


> **TIP** — *CANCEL SETUP* is available at every step. Nothing is saved until the lights are confirmed on your WiFi, so you can start again any time.

4.3 MANUAL SETUP

Use this if the popup never appears, your phone cannot join networks for apps, or you chose *I'd rather do this manually*.

1. Open your phone's **WiFi settings** and join `AFTERGLO-Setup`, password `afterglo`. Ignore the "no internet" message.
2. Come back to the AFTERGLO app.
3. Tap **I'VE JOINED THE LIGHTS' WIFI** and continue from step 5 of the guided setup.

Some phones show a "Sign in to network" page when you join the setup network. That page simply points you back to the app.

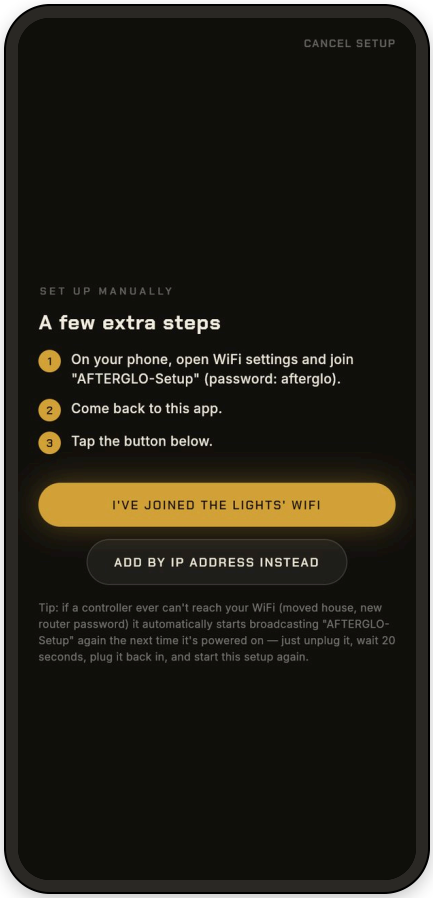

Manual setup

4.4 FINDING CONTROLLERS THAT ARE ALREADY SET UP


Controllers already on your WiFi appear on HOME automatically each time you open the app. To search again, pull down on HOME or tap **FIND CONTROLLERS**. The sheet shows which WiFi your phone is on and every controller found — a **green dot** means connected and responding; a red dot means not responding.

Add by IP address


If your network blocks discovery (some mesh, guest or business networks do), tap **ADD BY IP ADDRESS** and type the controller's address, which you can find in your router's device list (the controller's network name starts with `ag-`).

Forget

FORGET (on a not-responding controller) or ⋮ → **Remove from list** only removes it from this phone. The controller is not reset and keeps running; find it again any time.

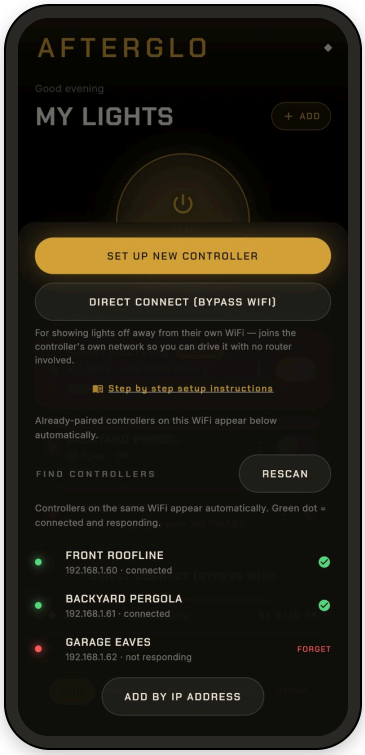

Find controllers

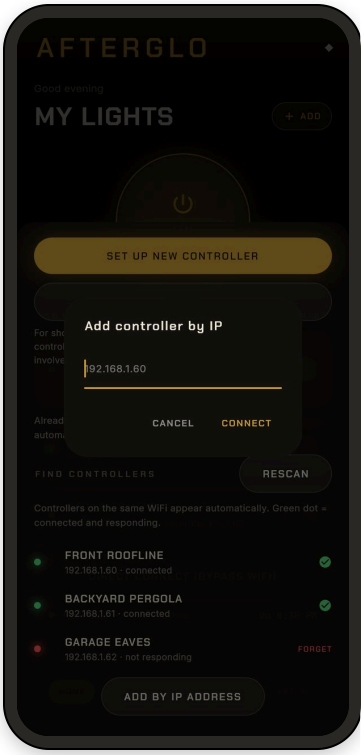

Add by IP

4.5 DIRECT CONNECT (BYPASS WIFI)

DIRECT CONNECT (BYPASS WIFI) joins your phone straight to a controller that is in setup mode (amber glow), with no router involved — useful for demonstrating lights away from their home WiFi, or controlling them while the home network is down. While connected directly **your phone has no internet** until it rejoins your usual WiFi. If the app reports *Can't see your lights*, the controller is not broadcasting — it only does that when it cannot reach its own WiFi.

4.6 MOVING HOUSE, NEW ROUTER, OR NEW WIFI PASSWORD

1. **If the controller is still online** (old network working): Setup → **NETWORK** → pick the new network (9.1). Done.
2. **If the old network is gone**: the controller cannot reach it and starts its amber setup glow by itself the next time it powers on. Unplug the power supply, wait **20 seconds**, plug it back in, wait for the amber glow, then run guided setup (4.2) again.

5 THE APP AT A GLANCE

Five tabs, one selected controller.



The dock floats at the bottom of every screen. Android's back gesture steps back through folders before leaving a tab.

Figure 5-1. Where everything lives.


THE SELECTED CONTROLLER

PRESETS, DESIGN, TIMERS and SETUP act on **one controller at a time** — the one marked SELECTED on HOME. Tap a controller card to select it. The selected controller's name is shown at the top of PRESETS (with SWITCH to change it) and on SETUP and TIMERS.


5.1 HOME

1. **+ ADD** — set up a new controller (Chapter 4).
2. **Master power ring** — tap to switch **all** controllers on or off together. It reads ON if any controller is on.
3. **FIND CONTROLLERS** — search the network again.
4. **Controller card** — status dot (green online, red not responding), name, number of lights and what is playing. The row of dots previews the look. Tap the card to select it; tap the switch to turn just that controller on/off.
5. ⋮ **menu** — Rename, or Remove from list (this phone only).
6. **Not responding** — shown with the last known address. The app will offer to switch to a controller that is answering if the selected one stops responding; the screen edge also glows red.
7. **DIRECT CONNECT** — see 4.5.
8. **Next timer** — the next on/off time for the selected controller, or "Timers paused".

When new firmware is available a gold **Update available** line appears on the card; tap it to go to Setup (9.5).

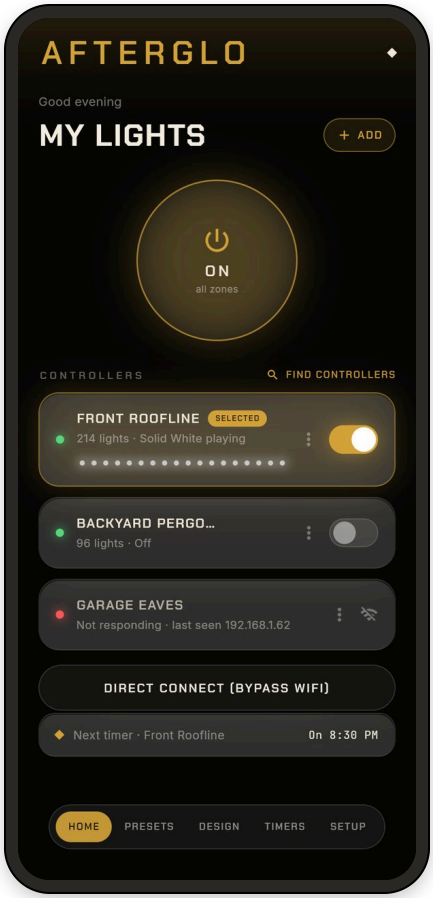

HOME — Garage Eaves is not responding.

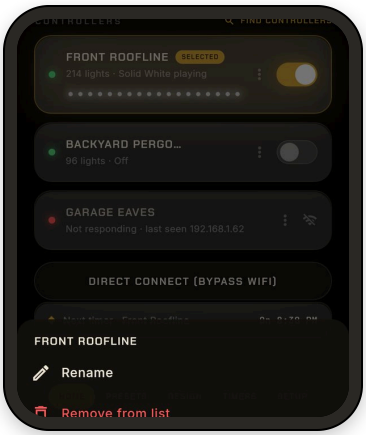


⋮ menu

6 PRESETS

Ready-made looks for every season, holiday and game day.

1. **Controller bar** — the controller presets are applied to. SWITCH picks another.
2. **ADJUST** — **BRIGHTNESS** (0–100%) and **SPEED** (0.1× to 5×) for whatever is playing, **REVERSE** to run moving effects the other way, and **RESET** to put back the default look, brightness and speed.
3. **Search** — find presets, teams or holidays by name.
4. **Folders** — Holidays, Game Day, Accent, Moving, Other, and **My Patterns** (looks you saved on DESIGN). Pinned presets appear under the folders.

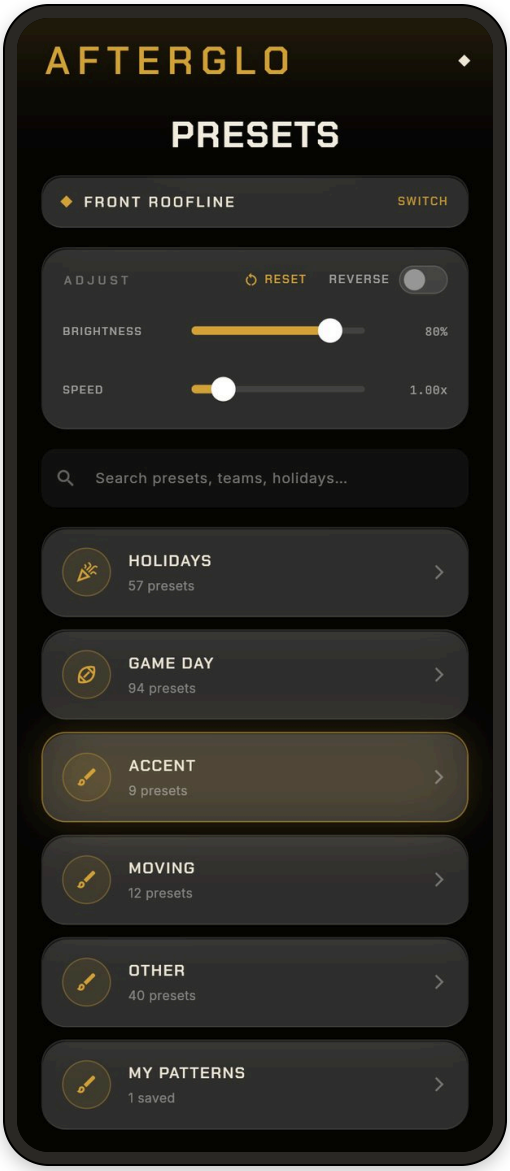

PRESETS overview

USING A PRESET

Tap any tile. The lights change within a second and the tile shows ON. Each tile has a photo-style banner, a moving dot preview of the effect and a one-line description.

- **Pin** — tap the pin icon on a tile to keep it on the Presets front page.
- **Delete** — in My Patterns, tap the bin icon to delete a saved pattern from the controller. Curated presets cannot be deleted.
- **Back** — the arrow next to the folder title (or your phone's back gesture) steps back: team → sport → folder → overview.

> **NOTE** — Tile previews of flashing effects (Strobe, Sparkle, Twinkle, Shimmer, Heartbeat) are deliberately slowed down on screen. The real lights run at full speed.

6.1 FOLDERS

FOLDER	WHAT'S INSIDE

Holidays	Valentine's, Mardi Gras, St. Patrick's, Easter, Fourth of July, Halloween, Harvest, Thanksgiving, Hanukkah, Diwali, Christmas, New Year's, birthdays and more — at least three looks each, always including a slow chase.
Game Day	Team-colour chases grouped into **Football**, **Basketball** and **Hockey**, listed by city. Team colours are used for fan display; AFTERGLO is not affiliated with any league or team.
Accent	Everyday architectural whites: Solid White, Golden Glow, Every Other Light, Two On Two Off, Every 3rd / 5th / 10th Light, Security, Sparkle White. A **BRIGHT WHITE / WARM WHITE** switch at the top re-shades the whole folder (remembered on this phone).
Moving	Effects that travel along the lights: chases, meteors, wipes, snakes, waterfalls, bounces.
Other	Everything else: twinkle, sparkle, fire, rainbow, breathe, theater, heartbeat, shimmer, strobe.
My Patterns	Patterns you saved from DESIGN, stored on the controller.




Christmas Static




Halloween Chase




Every 5th White

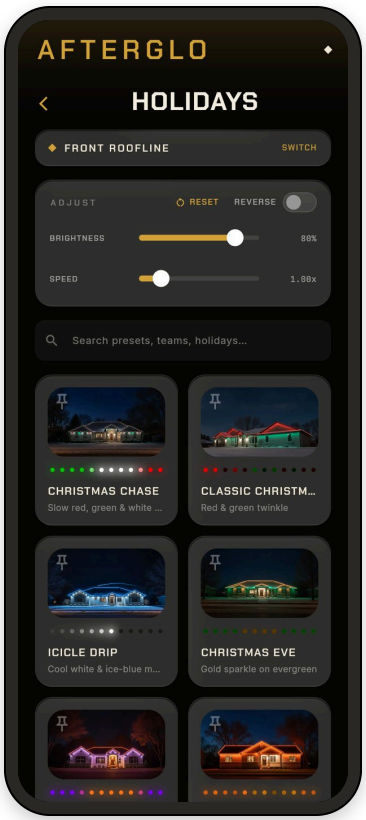

Holidays

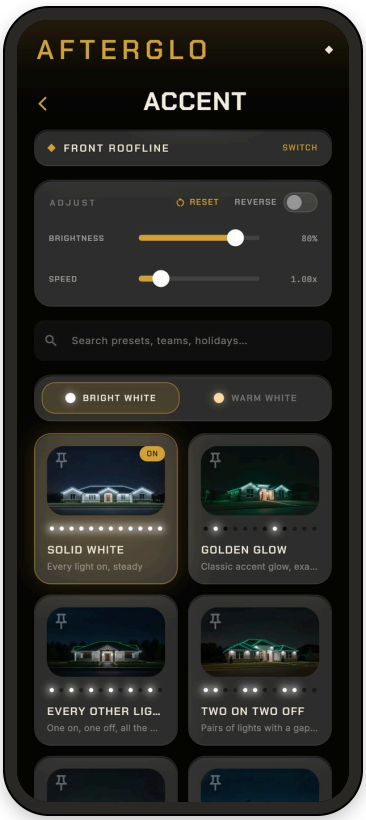

Accent — bright/warm switch

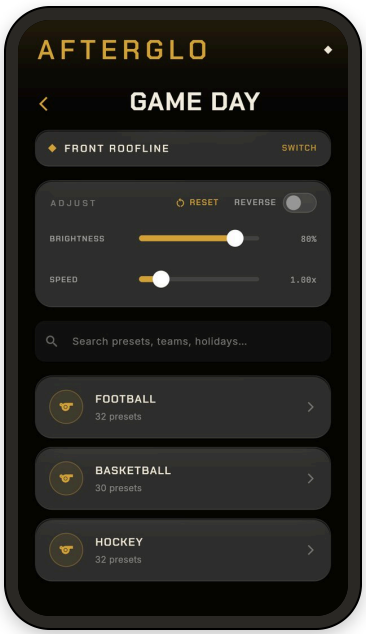

Game Day

Warm whites on RGBW lights: choosing a warm-white Accent look may turn on **Mix white with colour** so both whites are reachable on your strip. The app tells you when it does this; you can switch it off in Setup → LEDS.

6.2 EFFECTS REFERENCE

Every look is one of 17 effects plus a set of colours. Speed scales all of them.

EFFECT	WHAT IT DOES	EFFECT	WHAT IT DOES
Solid	Steady colours, no motion.	Fire	Flickering flame.
Chase	Colours march along the lights.	Snake	A lit segment slithers along.
Twinkle	Lights fade in and out at random. **⚠ flicker**	Waterfall	Cascading fill with a trailing fade, new colour each pass.
Meteor	A bright head with a fading tail.	Bounce	A light travels to the end and back.
Breathe	Whole display slowly brightens and dims.	Heartbeat	Double pulse. **⚠ flashing**
Theater	Classic marquee crawl.	Shimmer	Fine glitter over a base colour. **⚠ flicker**
Wipe	Colour fills the lights end to end.	**Strobe**	Whole display flashes on and off. **⚠ seizure risk — see Chapter 1.**
Rainbow	Moving rainbow (ignores your palette).	Pendulum	Light swings back and forth.
Sparkle	Random bright points pop. **⚠ flicker**		

7 DESIGN

Make your own looks: by effect, light by light, by description, or from the community.


DESIGN has four sections — **BUILD**, **ACCENT**, **AI**, **SHARED** — that all edit one **draft**, shown in the preview card at the top. Nothing reaches the lights until you choose:

BUTTON	WHAT HAPPENS
PREVIEW ON LIGHTS	Shows the draft on the lights temporarily. Not saved.
SAVE PRESET / **SAVE CHANGES**	Stores the draft on the controller as a pattern in **My Patterns** and plays it. Keep editing and save again to update it.
START A NEW PATTERN	Begins a fresh draft. If the current one is unsaved you are asked first (*KEEP EDITING* / *DISCARD*).
CLEAR DRAFT	Resets the draft's name, effect and colours.

7.1 BUILD — EFFECT AND COLOURS

1. **Name** your pattern.
2. **Effect** — pick one of the 17 effects (6.2).
3. **Colours & counts** — each row is one colour and how many lights **in a row** get it. The sequence repeats along the whole strip. Use − / + to change counts, × to remove, and drag ⋮⋮ to reorder. Example: gold ×3, off ×1 = three gold, one dark, repeating.
4. **Add a colour** — tap a swatch. Tap **+** to mix a new colour. **Hold** a swatch to edit or delete it. *RESET COLORS* puts the standard swatches back (your patterns are not changed).
5. **Speed** — how fast the effect runs.
6. **PREVIEW ON LIGHTS**, then **SAVE PRESET**.

Rainbow generates its own colours and ignores the palette. If the draft carries an individual-light map from ACCENT, effects use that map as their colours; tap *CLEAR MAP* to go back to palette colours.

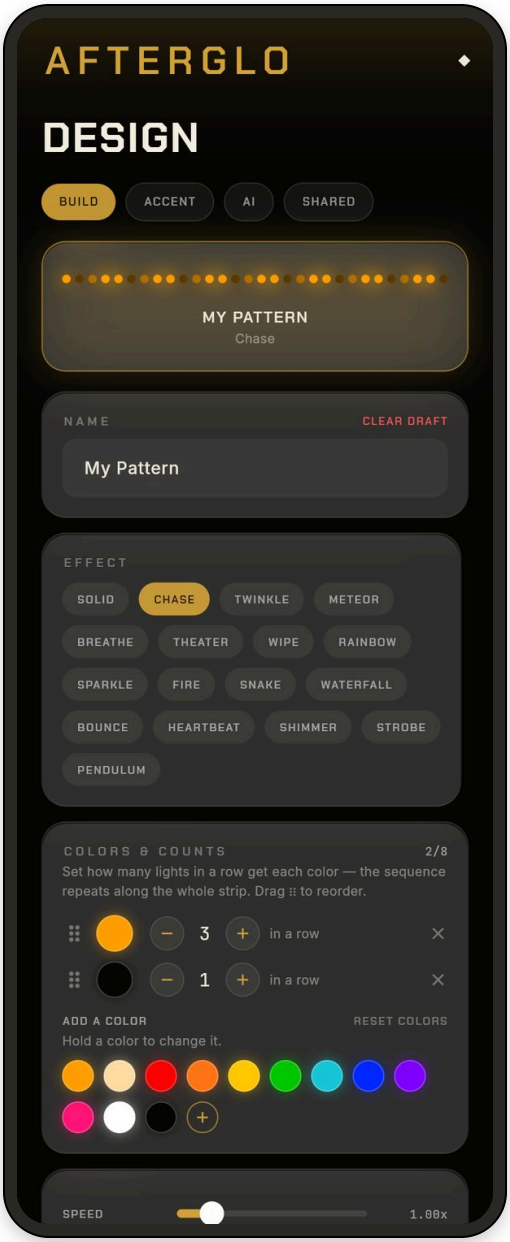

DESIGN → BUILD

7.2 ACCENT — INDIVIDUAL LIGHTS

Paint exactly which lights are which colour — for example two red lights either side of the front door and gold every fifth light.

PAINT mode

One numbered dot per light on the selected controller, in strip order (light 1 is nearest the controller). Choose a **brush colour**, then tap dots to paint; tap again to turn a light off. Pick **OFF** (⊘) as the brush to leave lights dark. *CLEAR* blanks the map.

BANDS mode

Pick a colour, set **HOW MANY** lights in a row, tap ADD. Repeat for each colour, then **FILL STRIP** to repeat the sequence across every light.

The light count comes from Setup → LEDS. If the dots don't match your real lights, ask your installer to check the LED count.




DESIGN → ACCENT (PAINT)

7.3 AI — DESCRIBE YOUR LIGHTS

Type the look you want in your own words — *"red, white, and blue flag for the 4th of July"*, *"every 4th light gold"* — and tap **GENERATE WITH AI**. The AI chooses an effect, speed and colours (including individual-light maps for positional requests). The result lands in the draft; check it with *PREVIEW ON LIGHTS*, adjust on BUILD or ACCENT, then save.

- Requires an internet connection. There is a daily usage limit; if you reach it the app says so — try again tomorrow.
- **What is sent:** only the text you type and a random code identifying this app installation (used to share the daily limit fairly). Not your name, location or light details. See Privacy, Chapter 13.
- AI output is automatically generated and may not match what you asked for. Review it before saving. Do not type personal information.

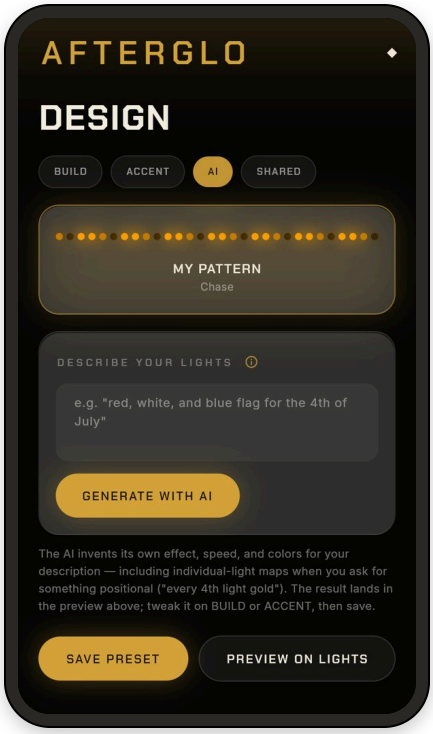


DESIGN → AI

7.4 SHARED — COMMUNITY PRESETS

Browse patterns other AFTERGLO owners have shared. The first time, you must read **Before you join in** and tap **I AGREE**.

- **Load** — tap a community preset to load it into your draft. Nothing you have saved changes until you save it yourself.
- **Share** — **SHARE DRAFT** uploads the draft's name, colours and effect, and the author name you enter. Don't use your full name or anything personal.
- **Report** — choose *Offensive or inappropriate*, *Spam or advertising* or *Something else*. Reports are reviewed and rule-breaking content removed; repeat offenders are banned from sharing.
- **Block this person** — hides everything from that uploader on this phone.

Community presets are not checked before they appear. Rules: keep names appropriate — no offensive names, no advertising, nothing pretending to be someone else. Full terms in Chapter 13.

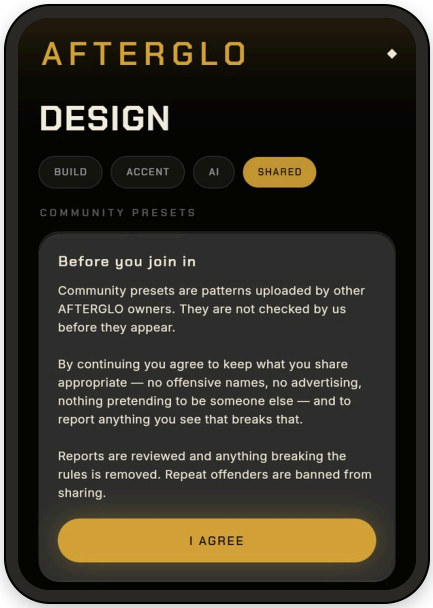


SHARED — the community agreement

8 TIMERS

Lights that look after themselves — stored and run on the controller.

Each timer turns the lights on and off by itself on the days you pick. Timers are stored on the controller, so they keep running when your phone is off, away from home, or the app is closed.

1. **NEXT** — the next thing that will happen (e.g. *Lights on at 8:30 PM*) and **PAUSE**.
2. **YOUR TIMERS** — each timer with its times and days; use the switch to enable/disable, tap to edit.
3. **ADD A TIMER** — four quick starts, plus **CUSTOM TIMER**.
4. **SETTINGS** — Location for sunset and Time zone.

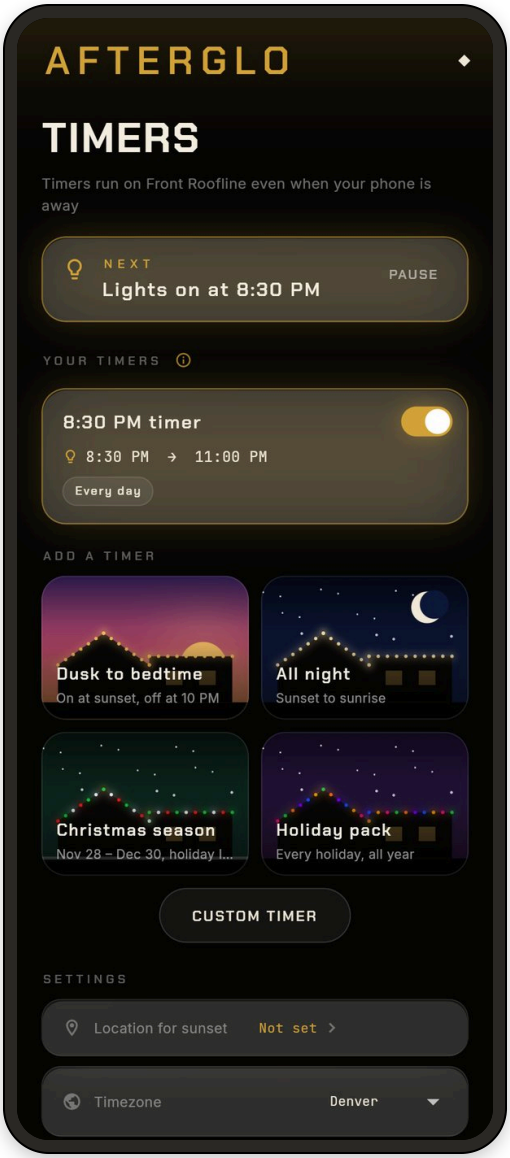

TIMERS


QUICK STARTS

TILE	DOES
Dusk to bedtime	On at sunset, off at 10 PM, every day.
All night	Sunset to sunrise.
Christmas season	Nov 28 – Dec 30 with a holiday look.
Holiday pack	Adds 7 timers — Valentine's, St. Patrick's, Fourth of July, Halloween, Harvest, Christmas, New Year's — each sunset to 11 PM with a holiday look. Needs 7 free slots.

8.1 CREATING OR EDITING A TIMER

1. Tap **CUSTOM TIMER** (or a timer to edit). Give it a name if you like.
2. **Turn on** — choose **TIME**, **SUNSET** or **SUNRISE**; tap the time to change it.
3. **Turn off** — same choices.
4. **Days** — *EVERY DAY*, *WEEKDAYS*, *WEEKENDS*, or tap individual days.
5. **Only between certain dates** (optional) — e.g. Dec 1 – Jan 6. Repeats every year.
6. **Look** — *Keep what's playing*, or choose a preset or one of your patterns to switch to when the timer turns on.
7. **Set brightness** (optional) and **Fade in and out** (brightens/dims over about a minute).
8. **ADD TIMER** / **SAVE CHANGES**. To remove: **DELETE TIMER** — it stops straight away.

The editor refuses a timer with no days, or with the same on and off time ("it would never turn on"). A controller holds up to **16 timers**.

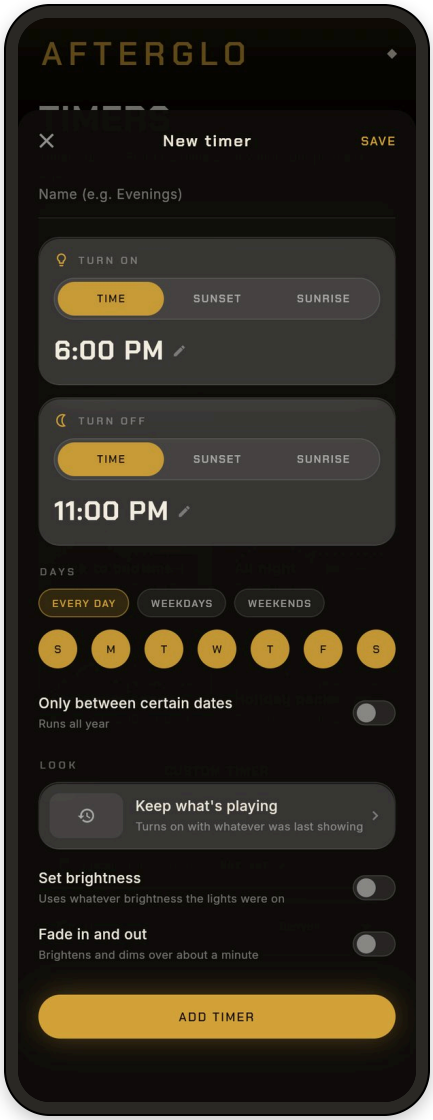

New timer

8.2 WHICH TIMER WINS — SEASONAL OVER EVERYDAY

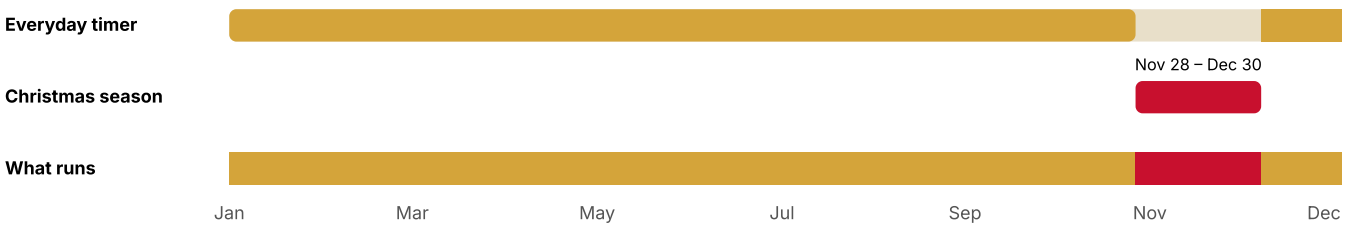



Figure 8-1. A timer with dates takes over from your everyday timers on those days, then hands back automatically.

8.3 PAUSE


Tap **PAUSE** to stop timers switching anything — handy for a party or when you're away. Choose *Until tomorrow* (resumes at midnight), *For a week*, *Until a date…*, or *Until I turn them back on*. Lights stay however you leave them; when the pause ends they go straight back to what the timers say. Tap **RESUME** to end a pause early.

8.4 HOLIDAY PACK

Adds seven dated holiday timers in one step. You'll see the list and dates before confirming. Change or delete any of them afterwards.

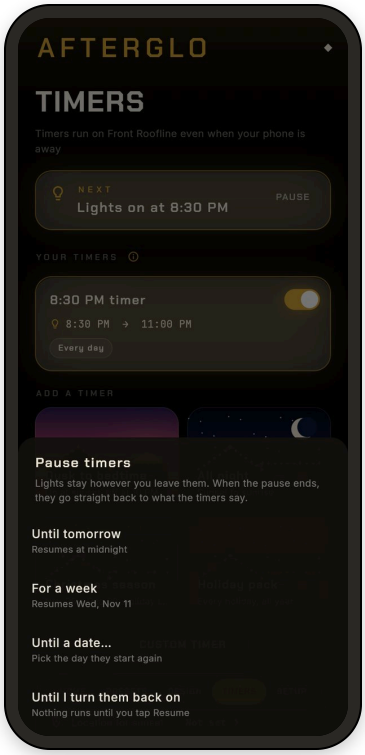


Pause

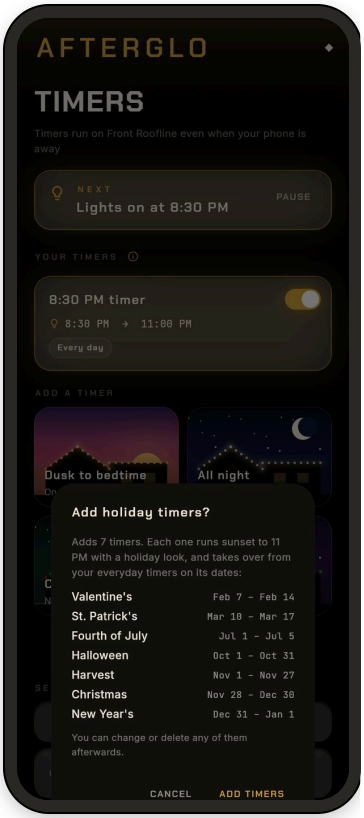


Holiday pack

8.5 SUNSET, SUNRISE, LOCATION AND TIME ZONE

- **Location for sunset** — tap **USE MY LOCATION** or enter a **ZIP code**. The controller keeps only a rounded position (about a kilometre) to work out sunrise and sunset. Until a location is set, sunset timers use 6:00 PM and sunrise timers 7:00 AM. **REMOVE LOCATION** deletes it.
- **Time zone** — set this to where the lights are. A wrong time zone shifts every timer by hours. Daylight saving time is handled automatically.
- **Waiting for the clock** — the controller sets its clock from the internet, usually within a minute of connecting. Timers start once it knows the time. If your internet is down after a power cut, timers wait until it's back.

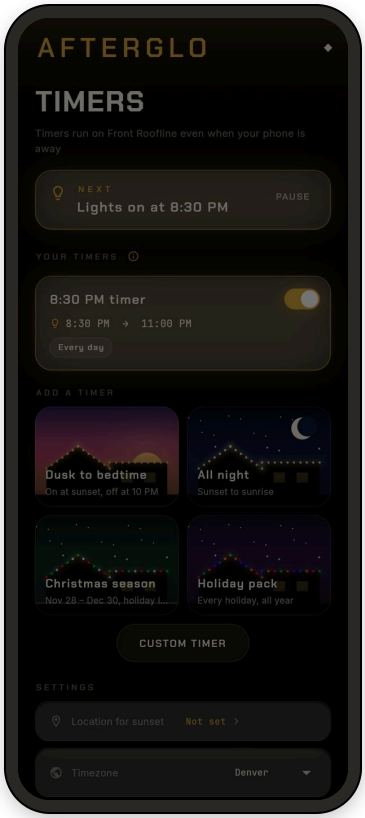

Location

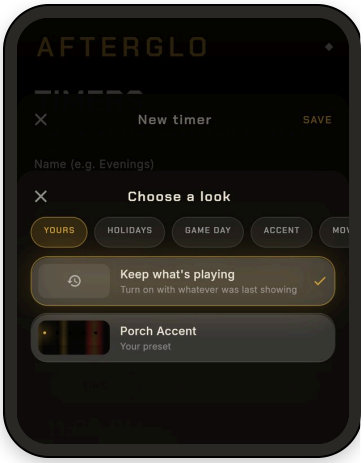

Choose a look


9 SETUP

Network, lights & power, show software, firmware. Sections 9.2–9.4 are installer settings.

SETUP shows the selected controller's name, address and firmware version, with ✎ to rename and 🗑 to remove it from this phone. Below that:

- **Run hours** — *Lights on X h · Powered Y h.* A lifetime odometer kept by the controller itself; it cannot be reset. Useful for warranty and service (Chapter 10).
- **Firmware** — CHECK for updates (9.5).
- Three tabs: NETWORK, LEDS, CONNECT.

If the controller is offline, its settings are unavailable until it answers again.

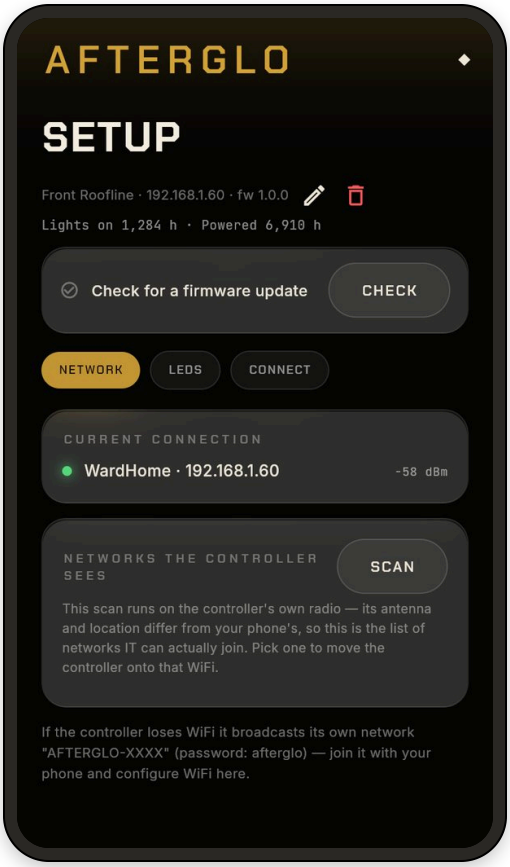

SETUP → NETWORK

9.1 NETWORK

Current connection shows the WiFi network, address and signal strength (dBm — closer to 0 is stronger; weaker than about −75 dBm may be unreliable).

Networks the controller sees — tap SCAN. This scan runs on the controller's own radio, so it lists what *the controller* can actually reach (not what your phone sees). Pick a network, enter its password and tap Join. The app then verifies the controller came back online on the new network (*"... is back online on ..."*). If it doesn't reconnect, check the password; if it can't reach the network at all it falls back to setup mode (amber glow) — see 4.6.

9.2 LEDS — LIGHTS & POWER INSTALLER

> ⚠ **WARNING**
>
> These settings tell the controller what is connected and how much current it may draw. Wrong values can overload wiring, the power supply or the controller and cause overheating or fire. Only a qualified installer should change them, and only to match the installed hardware.

Zones

Three outputs (ZONE 1–3, data pins GPIO 16 / 2 / 13), each 0–500 lights. Unused zones are 0. On arch and tree controllers zone counts are set from the controller's own web page (each arch is a fixed 50 lights) and shown read-only in the app.

What lights are these?


Pick the product to fill in the electrical details automatically: **SK6812 RGBW** (standard on AFTERGLO installs, warm white die), **WS2812B / WS2811 RGB**, **COB RGB**, **COB RGBW**, **COB tunable white**, **COB single colour** (all addressable). The controller drives **addressable lights only** — plain analog/PWM strips cannot be used.

Strip type, colour order, white

Strip type (RGB / RGBW / ...) and **Colour order** (e.g. GRB) must match the lights — if red shows as green, the colour order is wrong. **White shade** sets the colour temperature of the white die (2200 K candle to 6500 K daylight). **Mix white with colour** lets the white and colour dies work together so any shade of white is reachable; leave it off if the strip already looks right.

Colour trim

Red/Green/Blue/White sliders, 0–200% (100% = untouched), to correct a batch of lights that renders slightly warm or blue. Set them against the colour-check pattern (9.3), not by eye. Trim above 100% raises current draw beyond what the power budget assumed.

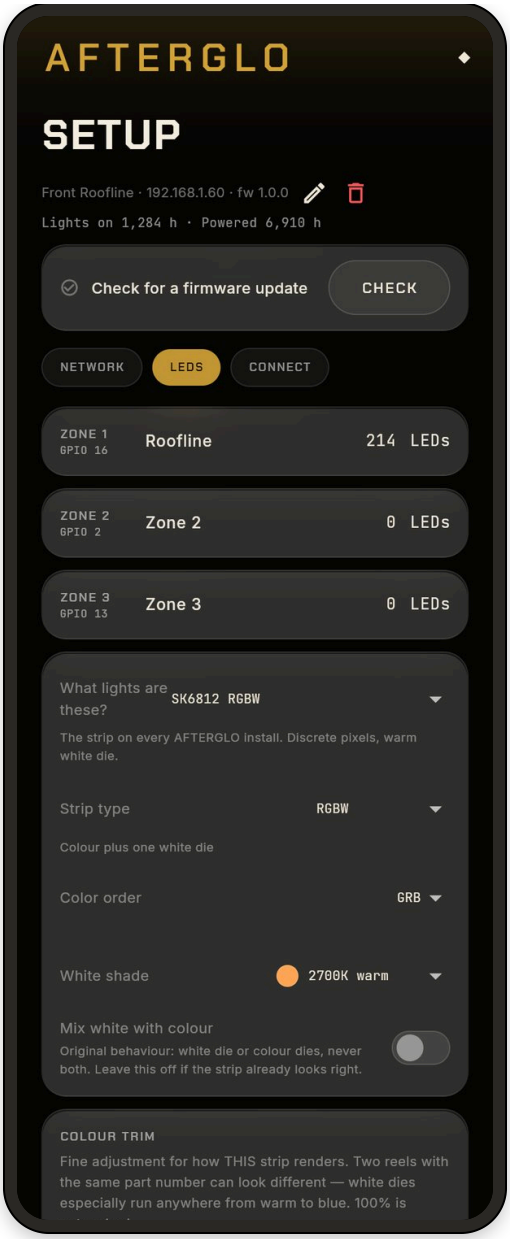

SETUP → LEDS

POWER SUPPLY AND THE POWER BUDGET

Power supply — choose the wattage printed on the supply (150–1000 W). The controller uses 80% of it, the safe continuous rating for a switching supply. **Power per light** — the watts one light draws at full white (from the light's spec sheet; 0.2–2.0 W). From these the controller works out how many lights can run at full brightness, and **quietly dims the display** rather than draw more than the supply, the 15 A fuse (12 A continuous) or a 10 A output can carry.

The app warns when an install would exceed the fuse, when one zone is close to its 10 A output rating ("Consider splitting it across two ports"), and when a zone is limited by its port rather than the supply.

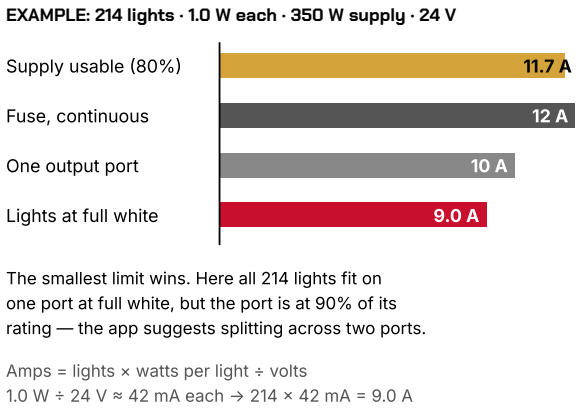


Figure 9-1. How the controller decides how bright the lights may run.

> **⚠ DANGER**
>
> **Ignore controller limits** stops the firmware respecting the 15 A fuse and 10 A per-port ratings. The hardware ratings do not change. Running past them blows the fuse or overheats wiring. Never enable on a customer install without external over-current protection sized for the wiring.

Tap **SAVE** after changing LED settings. Each zone must be 0–500 lights.


9.3 COLOUR CHECK INSTALLER

At the bottom of LEDS. **SHOW TEST PATTERN** lights fixed bands of known colours (R, G, B alone; R+G, G+B, R+B; all channels; AFTERGLO gold; warm white; mid and low grey) and holds them still at 30% brightness. Band 1 is the end nearest the controller. To photograph for support:

1. Lock your camera's **white balance to Daylight (about 5500 K)**. On auto, the camera "corrects away" the very colour cast you are trying to show.
2. No flash; turn HDR / auto-enhance off. A sheet of white paper in the shot gives a neutral reference.
3. Photograph the whole strip straight on. Choose any preset to end the test.

9.4 CONNECT — AFTERGLO CONNECT FOR SHOW SOFTWARE ADVANCED

Lets holiday-show software (xLights, Falcon Player (FPP), Vixen) stream pixels straight to this controller over your network using the **DDP** protocol on **UDP port 4048**. While a show is streaming it overrides presets; when the stream stops the controller falls back to its own look after the **FALLBACK AFTER** time (1–15 s). Shorter recovers faster; too short and a brief network hiccup mid-show makes the lights flick back to a preset for a moment.



Stream stops → fallback timer → own look

xLights setup: add an Ethernet controller, protocol **DDP**, the controller's IP address (shown on this tab), channels = lights × 3 (RGB).

Give the controller a fixed address (DHCP reservation in your router) so the show software always finds it.

9.5 FIRMWARE UPDATES

Tap **CHECK** on SETUP (or the **Update available** line on HOME). If an update exists, tap **UPDATE** and confirm.

> ***NOTICE***
>
> - The lights go dark for about a minute while the update installs, then reconnect to your WiFi by themselves.
> - **Leave the controller plugged in the whole time and don't close the app.** Losing power mid-update can leave the controller needing service.
> - The app downloads the update (about 0.8 MB) over your phone's internet connection and checks its integrity before sending it.

When it finishes the app confirms *"... is now running AFTERGLO x.y.z"*. If the lights don't reappear, search again from HOME; if they come back with the amber glow, run guided setup (4.2).

10 CARE & MAINTENANCE

A permanent install needs very little — but a little helps it last.

WHEN	WHAT	WHO
Whenever the app offers	Install firmware updates (9.5) and keep the app updated from your app store.	Owner
Spring & autumn	From the ground, run **Solid White** at full brightness and look for dark, flickering or wrong-coloured lights. Note the light number (use ACCENT to find it) and report it.	Owner
Each autumn	Check the controller and power supply area is clear of leaves, nests and debris and that vents are unobstructed.	Owner (ground level only)
After storms	Check for damaged cords or lights. If anything is damaged, unplug the power supply and call your installer.	Owner / Installer
Every 1–2 years	Inspect mounting, sealing and connections at height; tighten and reseal as needed.	**Installer only**

CLEANING

Unplug the power supply first. Wipe lenses with a soft damp cloth. Do not use pressure washers, solvents or abrasive cleaners, and do not spray water into connectors or the controller.

FUSE REPLACEMENT

The controller has one 15 A fuse. A blown fuse usually means a fault or an overload — have a qualified installer find the cause before replacing it with one of the same type and rating (15 A automotive-style blade fuse). AFTERGLO installs include lifetime installation support — call us rather than replacing it yourself.

POWER-CYCLE (RESTART)

Switch off or unplug the power supply, wait 20 seconds, restore power. Settings, looks and timers are kept.

LONG ABSENCES / STORAGE

The system can be left powered year-round; use **Pause** (8.3) or switch off from HOME. If removed lights are stored, keep them dry, coiled loosely and away from heat.

SERVICE RECORD

Run hours are on SETUP. Keep this record for warranty claims.

DATE	RUN HOURS (LIT / POWERED)	FIRMWARE	WORK DONE	BY
			Installation	

Installer / company	
Install date	
Controller name(s) and address(es)	
Power supply (W) / light type / count per zone	

11 TROUBLESHOOTING

Find the symptom, try the remedies in order. Everything here is done from the ground.

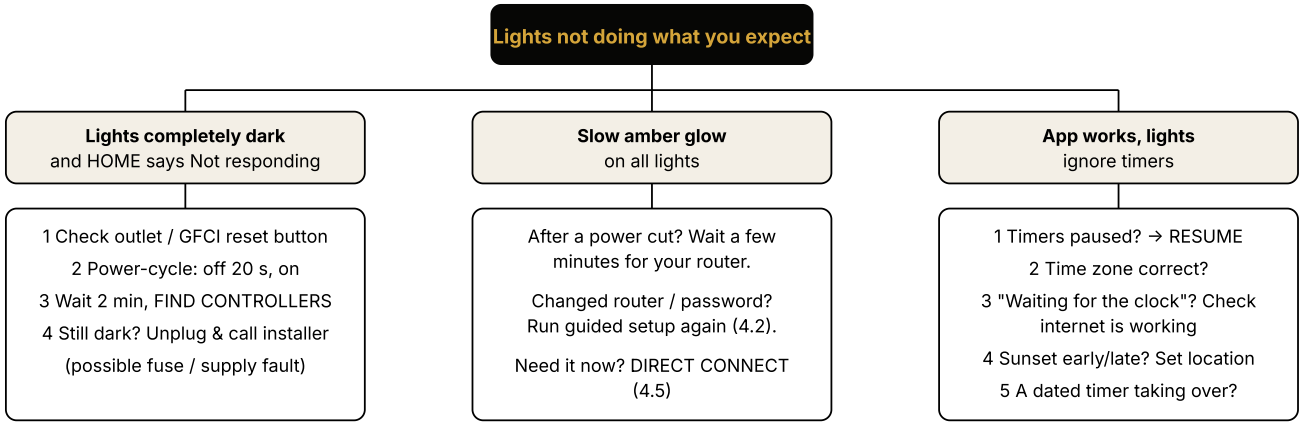


Figure 11-1. Start here.

11.1 SYMPTOMS

SYMPTOM	LIKELY CAUSE	REMEDY
Lights don't follow timers	Timers paused; wrong time zone; controller has no internet time yet; timer disabled or no days picked; a dated (seasonal) timer is taking over.	Check the NEXT card on TIMERS. Tap RESUME if paused. Check Time zone. Make sure your internet is working. See 8.2 for dated timers.
Sunset timer is off by an hour or more	No location set (uses 6 PM / 7 AM) or wrong time zone.	Set Location for sunset and Time zone (8.5).
App finds no controllers	Phone on a different network (guest, 5 GHz-only, mobile data, VPN); Local Network permission off (iPhone); router blocks discovery.	Join the same home WiFi; turn off VPN; allow Local Network in iPhone Settings → AFTERGLO; use ADD BY IP ADDRESS (4.4).
Controller shows "Not responding"	Controller unpowered, out of WiFi range, or WiFi changed.	Power-cycle; check for the amber glow (then see 4.6). Weak signal (Setup → NETWORK, below about −75 dBm): ask your installer about a WiFi extender.
Setup: "Couldn't find your lights"	Controller not in setup mode; phone too far away; another controller in setup mode.	Confirm the slow amber glow; move closer; power only one new controller at a time; try manual setup (4.3).

Setup: "That didn't quite work"	Wrong WiFi password, 5 GHz-only network, or router out of range.	KEEP WAITING once; then TRY AGAIN and re-enter the password carefully. Make sure the network has 2.4 GHz.
Setup: "Permission needed"	Location permission denied (Android).	Allow location for AFTERGLO in phone settings, then try again. It's only used to make the connection.
Some lights wrong colour or dark; rest fine	A failed light or connection at that point.	Note the light number (ACCENT shows numbers) and contact your installer.
All colours wrong (red shows green)	Colour order or strip type setting.	Installer: Setup → LEDS (9.2).
Whites look pink/blue/too warm	White shade or batch variation.	Try Accent's BRIGHT/WARM switch. Installer: white shade and colour trim (9.2–9.3).
Lights dimmer than expected at full white	Power budget is limiting brightness to protect the supply/fuse — working as designed.	Installer: check power supply and power-per-light settings; consider splitting zones.
Only part of the display lights	Zone LED count lower than the installed lights.	Installer: correct the counts (9.2).
Lights flick back to a preset during an xLights show	Network hiccups longer than the fallback time.	Increase FALLBACK AFTER (9.4); improve WiFi.
"Lights off" but a faint glow remains	Out-of-date firmware, or an install where the relay does not cut the light supply.	Update firmware (9.5). If it persists, contact your installer.
Update says failed, but lights came back	The controller restarts as the upload finishes.	Pull down / reopen the app — the version shown on SETUP is the truth. Run CHECK again.
AI says limit reached	Daily usage limit.	Try again tomorrow, or build the look on BUILD.
"Could not reach sharing service"	No internet on the phone.	Check mobile data / WiFi internet.

11.2 MESSAGES DECODED

THE APP SAYS	MEANING / WHAT TO DO
Timed out reaching the controller.	It didn't answer in time. Check power and WiFi signal; try again.

Could not connect — check the controller's power and WiFi.	Nothing answered at its address. Power-cycle; FIND CONTROLLERS.
Controller says: …	The controller refused a request and gave a reason — read it; usually a value out of range.
Controller returned an error (HTTP nnn) / an unexpected response	Usually fixed by a firmware update. Note the number for support.
No controller connected — find one on the HOME tab.	Select or add a controller first.
… hasn't been confirmed online yet — wait for the scan.	The app is still checking; wait a few seconds.
… is offline — settings unavailable.	See "Not responding" above.
A controller holds up to 16 timers.	Delete a timer to add another.
Joined, but found nothing	DIRECT joined the lights' network but nothing answered for 15 s; the controller may still be starting — try again.
Can't see your lights	No `AFTERGLO-Setup` network nearby: the controller isn't in setup mode, is unpowered, or is out of range.
This controller didn't say which model it is, so no update can be offered.	Contact support with the controller's address and firmware version.
Couldn't reach the update service.	Check your phone's internet and try again.

> **STILL STUCK?** Step-by-step setup instructions are online at **afterglolighting.org/setup.html** (also linked from the setup screens). Contact AFTERGLO: **(385) 337-4144 · afterglolights@gmail.com** (same-day response most days). Have your controller's name, address, firmware version and run hours (SETUP) ready.

12 SPECIFICATIONS

For installers and the curious. Subject to change.

CONTROLLER

Processor	Espressif ESP32 (dual-core, WiFi), ESP32-WROOM-32E module, FCC ID 2AC7Z-ESP32WROOM32E
Firmware	AFTERGLO 1.1.0 (families: roofline, arch, tree); updatable over the air
Light outputs	3 zones, data on GPIO 16 / 2 / 13
Lights per zone	0–500 (1,500 total)
Supported lights	Addressable only: SK6812 RGBW, WS2812B / WS2811 RGB, addressable COB (RGB, RGBW, tunable white, single colour)
Rendering	About 50 frames per second, on the controller
Light power switching	On-board relay (GPIO 18); at most one switch every 2 s
Over-current protection	15 A fuse (12 A continuous); 10 A per output; software current limiting from supply size
Supply voltage	24 V DC (low voltage) from the installed power supply
Controller self-consumption	About 0.25 A
Saved patterns / timers	Patterns: stored on controller · Timers: up to 16
Memory on power loss	All settings, looks, timers and run hours kept

WIRELESS & NETWORK

WiFi	IEEE 802.11 b/g/n, **2.4 GHz only**; WPA2-Personal or open networks
Setup network	`AFTERGLO-Setup` / `afterglo` at 192.168.4.1 — only while the controller cannot reach its WiFi
Hostname	`ag-xxxxxx` (from the controller's MAC address)
Discovery	mDNS `_afterglo._tcp` and `_http._tcp`; UDP beacon port 4210
Control	HTTP REST API on port 80 (local network, no login)
Show streaming	DDP, UDP port 4048
Time	NTP (pool.ntp.org, time.nist.gov); automatic daylight saving
Firmware updates	Pushed from the app; integrity-checked (SHA-256)

POWER PLANNING

Supply sizes in app	150, 200, 350, 400, 600, 750, 1000 W (used at 80%)
Power per light options	0.2–2.0 W
Default	1.0 W (42 mA at 24 V) per light

APP

Version	5.1.0 (build 65)
Phones	iPhone with iOS 15 or later; Android 7.0 or later

Watchdog	Restarts itself automatically if it ever stops responding
Mounting	Weather-protected location chosen by the installer (eave, garage or enclosure)
Models	AFTERGLO controller — roofline, arch, tree

Account	None required
Internet needed for	Firmware updates, AI designs, community presets, ZIP lookup, setup guide. **Not** needed to control the lights on your WiFi.

13 LEGAL & REGULATORY

Compliance statements, warranty, privacy and licences.

13.1 FCC STATEMENT (UNITED STATES)

Contains FCC ID: 2AC7Z-ESP32WROOM32E (Espressif ESP32-WROOM-32E module). Responsible party: Ward Legacy Group LLC (AFTERGLO Lighting), South Jordan, Utah 84095, (385) 337-4144.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna; increase the separation between the equipment and receiver; connect the equipment into an outlet on a circuit different from that to which the receiver is connected; consult the dealer or an experienced radio/TV technician for help.

RF exposure. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. It should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

13.2 ELECTRICAL SAFETY LISTING

Use only power supplies installed or supplied by AFTERGLO Lighting. Installation is performed by AFTERGLO's licensed and insured crews. Installation must comply with the National Electrical Code (NFPA 70) and local codes.

13.3 MARKETS

AFTERGLO systems are sold and installed in the United States (Utah) only.

13.4 DISPOSAL

Do not dispose of this product with household waste. Take electronic components, power supplies and lights to an electronics recycling facility in accordance with local regulations. This product contains no batteries.

13.5 LIMITED WARRANTY

AFTERGLO LIMITED WARRANTY. Ward Legacy Group LLC, doing business as AFTERGLO Lighting ("we") warrants to the original purchaser that the AFTERGLO controller, power supply and lights supplied by us will be free from defects in

materials and workmanship under normal residential use for **five (5) years** from the date of original installation ("Warranty Period"). Installation support is provided for the life of the system.

What we will do. If a covered defect appears during the Warranty Period, we will, at our option, repair or replace the defective part with a new or refurbished equivalent, or refund the purchase price of that part. Replacement parts are warranted for the remainder of the original Warranty Period. Because AFTERGLO installs every system, warranty service is performed by our crew.

How to make a claim. Contact AFTERGLO Lighting at (385) 337-4144 · afterglolights@gmail.com within the Warranty Period with your proof of purchase or installation, a description of the problem, and the controller's firmware version and run hours (shown on SETUP).

What is not covered. Damage from improper installation, repair or modification by anyone other than us or our authorised installer; use with power supplies, lights or accessories not supplied or approved by us; operation with *Ignore controller limits* enabled, or with LED, power-supply or power-per-light settings that do not match the installed hardware; power surges, lightning, flood, fire, ice, storms, animals, or other external causes; normal wear and gradual light-output and colour change of LEDs over time; cosmetic damage; third-party software or services (including show software, community presets and AI-generated designs); and products whose labels or serial numbers have been removed.

Limits. TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. WE ARE NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states and provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

13.6 SOFTWARE AND SERVICE TERMS

The AFTERGLO app and controller firmware are licensed, not sold. The app, cloud features (AI designs, community presets) and update service are provided "as is" and may change or be discontinued; the lights, your saved looks and timers continue to work on your local network without them. Full Terms of Use: afterglolighting.org/terms.html. These terms are governed by the laws of the State of Utah.

AI-generated designs. The AI feature produces lighting patterns automatically. Results may be inaccurate or not match your request; review them before use. Do not enter personal information.

Community presets. By sharing a preset you confirm you have the right to share it and grant Ward Legacy Group LLC and other users a free, worldwide, non-exclusive licence to use, display and adapt it. Community content is provided by users and is not reviewed before it appears; we may remove any content and suspend sharing for anyone who breaks the rules. Report content in the app. Copyright notices: Ward Legacy Group LLC, Attn: DMCA Agent, afterglolights@gmail.com (afterglolighting.org/dmca.html).

13.7 PRIVACY NOTICE (SUMMARY)

The AFTERGLO app does not require an account and contains no advertising. Controlling your lights happens directly between your phone and the controller on your home network. The following data leaves your phone or controller:

FEATURE	WHAT IS SENT	SENT TO

Run-hours reporting (automatic)	Each controller's MAC address, name, firmware version and lit/powered hours, at most every 6 hours while the app is open on your network. Used for warranty and product reliability.	AFTERGLO Lighting via Google Cloud (Firebase)
AI designs (when you use it)	The text you type and a random code for this app installation; your network address is visible to the service; a one-way hash of it is kept for an hour or a day to enforce fair-use limits.	Google Cloud (Firebase) functions, which pass the text to Anthropic (Claude) to generate the design
Community presets (when you share/report)	Pattern name, colours, effect, the author name you enter, a random uploader code, and any reports you file. Blocks stay on your phone.	Google Cloud Firestore
Sunset location (optional)	Phone location is rounded to about 1 km and stored **only on your controller**. If you enter a ZIP code instead, the ZIP code is looked up.	Your controller; ZIP lookup: Zippopotam.us
Firmware updates	Standard web requests to download the update list and file.	GitHub (raw.githubusercontent.com)
Controller clock	Standard time requests.	pool.ntp.org, time.nist.gov

Location and WiFi-name access on your phone are used only to find and join your lights during setup and are not stored or sent. The app does not knowingly collect information from children under 13. Full privacy policy, retention periods and your rights (access, correction, deletion): afterglolighting.org/privacy.html. Requests: afterglolights@gmail.com.

13.8 OPEN-SOURCE SOFTWARE

This product includes open-source software, including: Flutter and Dart (BSD-3-Clause); flutter_riverpod, dio, uuid (MIT); go_router, shared_preferences, url_launcher, http and other Flutter packages (BSD-3-Clause); geolocator, permission_handler, network_info_plus (MIT/BSD); FastLED (MIT); ArduinoJson (MIT); Arduino core for ESP32 (LGPL-2.1); ESP-IDF (Apache-2.0); ESPAsyncWebServer (LGPL-3.0) and AsyncTCP (LGPL-3.0). Full licence texts are available on request. For components licensed under the LGPL, we will provide the corresponding source code on request for at least three years: email afterglolights@gmail.com.

13.9 TRADEMARKS

AFTERGLO and the AFTERGLO logo are trademarks of Ward Legacy Group LLC. Apple, iPhone and App Store are trademarks of Apple Inc. Google Play and Android are trademarks of Google LLC. Wi-Fi is a registered trademark of the Wi-Fi Alliance. xLights, Falcon Player (FPP) and Vixen are the property of their respective owners. Anthropic and Claude are trademarks of Anthropic, PBC. Team colours in Game Day presets are provided for fan display; AFTERGLO is not affiliated with, sponsored or endorsed by any league or team. All other trademarks are the property of their respective owners.

© 2026 Ward Legacy Group LLC. AFTERGLO is a division of Ward Legacy Group LLC. All rights reserved. Specifications and features subject to change without notice.

14 REFERENCE

Quick reference card, glossary and index.

QUICK REFERENCE CARD — CUT OUT AND KEEP NEAR THE CONTROLLER

Lights on/off: HOME → power ring (all) or a card's switch.
Change look: PRESETS → folder → tap a tile.
Brightness / speed: PRESETS → ADJUST.
Automatic on/off: TIMERS → Dusk to bedtime.
Party tonight: TIMERS → PAUSE → Until tomorrow.
New router/password: unplug 20 s → amber glow → HOME → + ADD.

Amber glow = setup mode / waiting for WiFi.
Setup WiFi: AFTERGLO-Setup · password afterglo
Controller name: _____
Address (IP): _____
Installer: _____
Support: (385) 337-4144 · afterglolights@gmail.com

⚠ Strobe and flashing effects may trigger seizures in photosensitive people. ⚠ Don't climb to the lights — everything is done from the app. ⚠ Unplug the power supply before touching wiring.

GLOSSARY

Controller	The AFTERGLO box that powers and drives your lights and stores your settings.
Zone	One of the controller's three light outputs; each can run up to 500 lights.
Preset	A ready-made look supplied with AFTERGLO.
Pattern	A look you made on DESIGN and saved; lives in My Patterns.
Draft	The pattern currently being edited on DESIGN; not saved until you tap SAVE.
Effect	How a look moves: Solid, Chase, Twinkle… (6.2).
Setup mode	The controller broadcasting AFTERGLO-Setup with a slow amber glow because it has no reachable WiFi.
Direct connect	Phone joined to the controller's own setup network, no router.
Firmware	The software inside the controller.
RGBW / COB	Light types: red-green-blue plus a white die / continuous "dotless" strip.
DDP / AFTERGLO Connect	Network protocol show software uses to stream to the controller.
GFCI	Ground-fault circuit interrupter — a safety outlet required outdoors.

Class 2 power supply	A listed low-voltage supply with built-in power limiting.
dBm	WiFi signal strength; −50 is excellent, −75 is weak.

INDEX

A
Accent folder 6.1 · ACCENT (Design) 7.2 · Add by IP 4.4 · AI designs 7.3, 13.7 · Amber glow 3, 11 · AFTERGLO Connect 9.4

B
BANDS mode 7.2 · Brightness 6 · BUILD 7.1

C
Cleaning 10 · Colour check 9.3 · Colour order 9.2 · Colour trim 9.2 · Community presets 7.4, 13.6 · Controller card 5.1

D
Delete pattern 6 · Delete timer 8.1 · Direct connect 4.5 · Disposal 13.5

E
Effects 6.2 · Error messages 11.2

F
FCC 13.1 · Find controllers 4.4 · Firmware updates 9.5 · Folders 6.1 · Forget controller 4.4 · Fuse 1, 9.2, 10

G
Game Day 6.1 · GFCI 1

H
Holiday pack 8.4 · HOME 5.1

I
Ignore controller limits 1, 9.2

L
Light signals 3 · Location for sunset 8.5

M
Manual setup 4.3 · Master power 5.1 · Moving house 4.6 · My Patterns 6.1

N
NETWORK 9.1 · New router 4.6

O
Open source 13.8

P
Pause timers 8.3 · Permissions 4.1 · Pin preset 6 · Power budget 9.2 · Power cut 3 · Power supply 9.2 · Privacy 13.7

R
Relay 3, 12 · Rename controller 5.1 · Reset (none) 3 · Reverse 6 · Run hours 9, 10

S
Safety 1 · Seizure warning 1 · Service record 10 · Setup mode 3, 4 · SHARED 7.4 · Specifications 12 · Speed 6 · Strobe 1, 6.2 · Sunset/sunrise 8.5

T
Time zone 8.5 · Timers 8 · Troubleshooting 11

W
Warranty 13.5 · White shade 9.2 · WiFi 2.4 GHz 4.1, 12

X
xLights 9.4

Z
Zones 9.2 · ZIP code 8.5