

Iridium Short Burst Data Service Developers Guide

Release 2.3.1 October 1, 2010

Iridium Confidential & Proprietary

This document requires a valid Non-Disclosure Agreement with Iridium or an authorized Iridium Value Added Reseller or an authorized Iridium Value Added Manufacturer.

Revision History

Version	Date	Reason	
1.0	June 1, 2003	First Commercial Release	
1.1	August 24 2005	Updated Network Features: ISU-ISU SBD Optional reporting of geographic location on email messages MTMSN unique for each ISU Session status fields generated by the GSS Additional Documentation Multiple MT-SBD destinations in a single email Multiple MT-SBD payloads in a single email Incorporation of other documentation. SBD Troubleshooting Guide Removal of generic 9522 information	
1.2	February 10, 2006	Updated to reflect 9601 SBD Transceiver information and updates from network updates to the GSS to Version 4.1	
1.2.1	February 23, 2006	Updated to correct typographical error in 2.1	
2.0	March 20 2007	Updated to include IP Socket Information Updated to include SBD Security Information Updated to include features up to and including GSS Version 4.2 Removed AT Command Descriptions	
2.01	December 5 th 2007	 Changes Summary: Updates to correct typographical errors and clarifications. No functionality changes implemented. Minor feature additions Revised recommendations and new requirements in Section 6 Specific Changes: New addition: 3.4 Permitted Email address Formats New addition: 3.5 Bit Bucket for MO-SBD Messages 4.1.4.2 Clarifications on SBD Ring Alerts Table 5-6 Values correct for 'Overall Message length", and "MT Confirmation Header Message Length". Removal of "MT Confirmation IEI" and "MT Confirmation Length" Fields. Table 5-7 – Corrected to show correct table names. 5.4.2.7 Clarification of epoch reference Section 6.0 significantly updated and re-titled from "Optimal Message Size Selection" to "practical Considerations and Requirements for SBD Application Design and Solution Certification." 	
2.2	Jun 9 th 2008	Changes Summary	
2.3	July 15 th , 2010	Changes Summary Updated to reflect 9602 SBD Transceiver and 9522B Transceiver Update to existing sections; 2.1, 2.2, 3.1, 4.1.4, 5.1.2.1,	

Iridium Short Burst Data Developers Guide V2.3.1

		 5.1.3, 5.1.3, 5.2.2 Update to existing Tables: 0-2, Table 3-1, New addition; Section 3.5 	
2.3.1	October 1, 2010	Changes Summary	
		 Updates section 2.1, 3.1,3.2, 4.1.4,5.1.2.1 	
		 Update to tables 3-3, 3-4 	

LEGAL DISCLAIMER AND CONDITIONS OF USE

This Short Burst Data Service Developer's Guide ("Guide") contains information relating to Iridium's Short Burst Data Service ("Service") and is provided to you "as is." The purpose of providing such information is to enable Value Added Resellers and Value Added Manufacturers (collectively, "Developer(s)") to develop an integrated data application. Reasonable effort has been made to make the information in this Guide reliable [and consistent with specifications, test measurements and other information]. However, Iridium Communications Inc. and its affiliated companies, directors, officers, employees, agents, trustees or consultants ("Iridium") assume no responsibility for any typographical, technical, content or other inaccuracies in this Guide. Iridium reserves the right in its sole discretion and without notice to you to change the Service, specifications and materials and/or revise this Guide or withdraw it at any time. The Developer assumes the full risk of using the Guide and the Service and any other information provided.

IRIDIUM MAKES NO REPRESENTATIONS, GUARANTEES, CONDITIONS OR WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY IMPLIED REPRESENTATIONS, GUARANTEES, CONDITIONS OR WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, SATISFACTORY QUALITY, NON-INTERFERENCE, ACCURACY OF INFORMATIONAL CONTENT, OR ARISING FROM A COURSE OF DEALING, LAW, USAGE, OR TRADE PRACTICE, USE, OR RELATED TO THIS GUIDE OR THE INFORMATION CONTAINED IN THIS GUIDE OR THE PERFORMANCE OR NONPERFORMANCE OF ANY SERVICE EXCEPT AS EXPRESSLY STATED IN THIS GUIDE AND/OR THE SERVICE DOCUMENTATION. ANY OTHER STANDARDS OF PERFORMANCE, GUARANTEES, CONDITIONS AND WARRANTIES ARE HEREBY EXPRESSLY EXCLUDED AND DISCLAIMED TO THE FULLEST EXTENT PERMITTED BY LAW. THIS DISCLAIMER AND EXCLUSION SHALL APPLY EVEN IF THE EXPRESS LIMITED WARRANTY CONTAINED IN THIS GUIDE OR SUCH DOCUMENTATION FAILS OF ITS ESSENTIAL PURPOSE.

USERS OF THIS GUIDE AND THE INFORMATION CONTAINED HEREIN AND THE SERVICE ACKNOWLEDGE AND AGREE AS A CONDITION OF THE PROVISION OF THIS GUIDE AND THE SERVICE BY IRIDIUM THAT THEY WILL MAKE NO CLAIM, WHETHER IN CONTRACT, TORT OR ANY OTHER LEGAL THEORY, AGAINST IRIDIUM FOR BODILY INJURY, LOSS OF LIFE, DAMAGE TO PROPERTY OR FOR ANY OTHER LOSS WHATSOEVER, OR FOR SPECIAL, INCIDENTAL, INDIRECT, CONSEQUENTIAL OR PUNITIVE DAMAGES, BY REASON OF ANY UNAVAILABILITY, DELAY, FAULTINESS OR FAILURES OF THE SERVICE OR FOR INACCURACIES OR FAILURES WITH REGARD TO THIS GUIDE AND ANY INFORMATION PROVIDED. THIS IS A WAIVER AND RELEASE AND DISCLAIMER OF LIABILITY TO THE FULLEST EXTENT PERMITTED BY APPLICABLE LAW AND APPLIES REGARDLESS OF THE CAUSE OF ANY LIABILITY, INCLUDING WITHOUT LIMITATION, TO WRONGFUL CONDUCT, OMISSION OR FAULT OF IRIDIUM.

IN NO EVENT SHALL IRIDIUM BE LIABLE, WHETHER IN CONTRACT OR TORT OR ANY OTHER LEGAL THEORY, INCLUDING WITHOUT LIMITATION STRICT LIABILITY, GROSS NEGLIGENCE OR NEGLIGENCE, FOR ANY DAMAGES IN EXCESS OF THE COST OF THE SERVICE PROVIDED, NOR SHALL IRIDIUM BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES OF ANY KIND, OR FOR DAMAGES DUE TO LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF PRIVACY, LOSS OF USE, LOSS OF TIME OR INCONVENIENCE, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS CAUSED BY THE SERVICE, OR ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE SERVICE TO THE FULLEST EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW AND WHETHER IRIDIUM WAS ADVISED OF THE POSSIBILITIES OF SUCH DAMAGES. IRIDIUM IS NOT LIABLE FOR ANY CLAIM MADE BY A THIRD PARTY OR MADE BY YOU FOR A THIRD PARTY.

.

Table of Contents

1.0	Introd	uction	8
1.1	Pur	pose	8
1.2	Sco	pe	8
1.3	Ref	erences	8
1	.3.1	Specifically Referenced Documents	8
1	.3.2	Other Useful Documents	8
1.4	Def	initions, Acronyms, and Abbreviations	9
1.5	Tra	nsceiver Message Sizes	10
2.0	Overv	iew	11
2.1	Ove	erview of the Iridium Satellite Network for Short Burst Data	11
2.2	Tra	nsceiver Overview	13
3.0	Vendo	or Application to GSS Email Interface Description	14
3.1	Mol	oile Terminated Messages	15
3.2	Mol	oile Originated Messages Sent Via Email	19
3.3	Exa	mples of SBD Usage	20
3	3.3.1	Mobile Originated (MO) Message	21
3	3.3.2	Mailbox Check / Mobile Terminated (MT) Message	22
3	3.3.3	Mobile Originated and Mobile Terminated Message	23
3.4	Permitt	ed Email Address Formats	24
3.5	RFC C	ompliance	24
4.0 SB	D Auto	matic Notification for Mobile Terminated Messages and ISU-ISU Messages	26
4.15	SBD Au	tomatic Notification for Mobile Terminated Messages	26
4	.1.1Au1	omatic Notification Registration	26
4	.1.2 Re	trieval of a MT-SBD Message using SBD Automatic Notification	27
4	.1.3 SE	D Ring Alert Status Information	28
4	.1.4 Fie	eld Application Implementation	31
4	.1.5 SE	BD Automatic Notification: Automatic Registration (+SBDAREG)	35
4	.1.6 SE	BD Automatic Notification: Registration (+SBDREG) with Optional GPS Parameter	36
4.2	ISU- IS	U Messages	37
5.1	DirectIF	Concept of Operation	38
5.1.	1 Direc	tIP Overview	38
5	5.1.2	MO DirectIP Deliveries	39
5	5.1.3	MT DirectIP Deliveries	39
5	5.1.4	MT Disposition Flags	39

	5.2	MT and MO DirectIP Application Requirements	40
	5.2	2.2 MO DirectIP Server/Client Requirements	40
	5.2	2.3 MT DirectIP Server/Client Requirements	41
	5.3	MO and MT Message Specifications	42
	5.3	3.2 Overall Message Structure	42
	5.3	3.3 Information Elements	42
	5.3	3.4 Successful MO Message Delivery Example	43
	5.3	3.5 Failed MO Message Delivery Example	44
	5.3	3.6 MT Message Delivery Example	45
	5.4	Information Element Specifications	46
	5.4	4.2 Information Element Identifiers	46
	5.4	4.3 MO DirectIP Header	47
	5.4	4.4 MO Payload	48
	5.4	4.5 MO Location Information	48
	5.4	4.6 MT DirectIP Header	50
	5.4.7	MT Payload	50
	5.4	4.8 MT Message Confirmation Message	51
3	Ор	ptimal Message Size Selection	53
	6.1	1 Economic Message Size	53
	6.2	2 Technical Message Size	53
	6.2	2.2 Mobile Originated Message Size	53
	6.2	2.3 Mobile Terminated Message Size	53
7	Irid	dium Short Burst Data Service Security Features	54
7.	1 F	Purpose	54
7.2	2 l ı	Iridium Security Features	54
	7.2	2.2 Authentication Security	54
	7.2	2.3 Iridium Channel Security	55
	7.2	2.4 Gateway to Vendor Application	56
	7.2	2.5 Additional Considerations	56
3	Ba	asic Trouble Shooting	57
	8.1	Hardware Requirements	57
	8.2	Provisioning	57
	8.3	SIM PIN	57
	8.4	Network Registration Status	59
	8.5	Satellite Signal Strength Indicator	59
	8.6	Power Supply	59

1.0 Introduction

1.1 Purpose

The purpose of this document is to provide technical and operational information sufficient for an Iridium Value Added Reseller or Value Added Manufacturer to be able to develop an integrated data application that utilizes Iridium's Short Burst Data Service (SBD). Additional information will be required by the developer for the AT Commands to be utilized with the transceiver selected for use with SBD.

An overview of the satellite network is provided as well as descriptions of the terminal equipment and the end to end communications protocol for SBD. This document is intended for use by technical personnel and assumes a reasonable level of technical skill and familiarity with satellite and/or wireless data applications.

1.2 Scope

This document provides an explanation of:

- 1. How the Mobile Originated and Mobile Terminated SBD protocol works through an overview and command descriptions.
- 2. Specific SBD related AT commands and responses as it relates to Mobile Originated and Mobile Terminated SBD messages
- 3. Interface requirements between the GSS and the Vendor Application

Additional documents are referenced which provide more specific detail on certain topics and these are listed in Section 1.3 of this document. This document does not specifically define the provisioning process, although it does reference it. This document assumes a working knowledge of the Iridium satellite system.

1.3 References

1.3.1 Specifically Referenced Documents

- [1] ISU AT Command Reference
- [2] 9522A L-Band Transceiver Product Information Guide
- [3] 9522B L-Band Transceiver Product Information Guide
- [4] 9601 SBD Transceiver Product Developers Guide
- [5] 9602 SBD Transceiver Product Developers Guide

These documents are accessible from the http://developer.iridium.com, web site that is available only to authorized Value Added Manufacturers or Value Added Resellers.

1.3.2 Other Useful Documents

These documents are accessible from the Iridium public web site: http://www.iridium.com.

- Data Services Overview: The document includes Frequently Asked Questions (FAQs) for both Dial-up and Direct Internet Data Services. Both of these services are circuit switched.
- Dial-Up Data User's Guide: Provides detailed description of the set-up and use of dial-up data services
- Mobile Terminated Data User's Guide: Provides a detailed description of the set-up, operation, and constraints as it relates to terminating data calls.

1.4 Definitions, Acronyms, and Abbreviations

API	Application Programming Interface		
ATC	AT Command		
CDR	Call Detail Record		
DB	Data Base		
DSC	Delivery Short Code		
DTE	Data Terminal Equipment		
ECS	ETC Communications Subsystem		
ESS	ETC SBD Subsystem		
ETC	Earth Terminal Controller		
ETS	ETC Transmission Subsystem		
FA	Field Application		
GPS	Global Positioning System		
GSS	Gateway Short Burst Data Subsystem		
IE	Information Element		
IEI	Information Element Identifier		
IMEI	International Mobile Equipment Identity		
IP	Internet Protocol		
ISU	Iridium Subscriber Unit		
LBT	L-Band Transceiver		
Message	The complete data transfer between the Vendor Application and the GSS including a head, optional sets of information and the payload to be transmitted over the air.		
MIME	Multipurpose Internet Mail Extensions		
MO	Mobile Originated		
MOMSN	Mobile Originated Message Sequence Number		
MSN	Message Sequence Number		
MT	Mobile Terminated		
MTMSN	Mobile Terminated Message Sequence Number		
Mobile Terminated Buffer	This is the buffer in the ISU in which an SBD message sent from the GSS to the ISU will be stored.		
Payload	The actual user data to be transmitted over the Iridium network		
PIN	Personal Identification Number		
SBD	Short Burst Data		
SIM	Subscriber Identity Module		
SPNet	Iridium's proprietary provisioning tool for contracted business partners		
Mobile Originated Buffer	This is the buffer in the ISU in which an SBD message to be sent from the ISU to the GSS will be stored.		
SEP	SBD ETC Processor		
SPP	SBD Post Processor		
UTC	Coordinated Universal Time		
VA	Vendor Application		

1.5 Transceiver Message Sizes

In order to ensure consistency and provide a useful reference, the following table should be consulted for the maximum message size capabilities of various transceivers:

Transceiver Name	Maximum Mobile Originated	Maximum Mobile Terminated	Firmware Revision
	Message Size (Bytes)	Message Size (Bytes)	Required
9522A	1960	1890	IS06001
9522B	1960	1890	ST09005
9601	340	270	TD06002
9602	340	270	TA10003

2.0 Overview

The overview is split into two sections: network and transceiver

2.1 Overview of the Iridium Satellite Network for Short Burst Data

Iridium's Short Burst Data Service (SBD) is a simple and efficient satellite network transport capability to transmit short data messages between field equipment and a centralized host computing system. The maximum Mobile Originated (MO) SBD and Mobile Terminated (MT) SBD message sizes are transceiver specific and are described in Section 1.5 of this document. [Note that a zero (0) byte MO SBD message is referred to as a "Mailbox Check."] (See reference documents [2] and [3] in addition to Section 1.5.)

The primary elements of the end to end SBD architecture are shown in Figure 2-1. Specifically, the elements consist of the Field Application (FA), the Iridium Subscriber Unit (ISU), the Iridium satellite constellation, the Gateway SBD Subsystem (GSS) located at the Iridium gateway, the Internet, and the Vendor Application (VA.) More details on the system architecture are shown in Figure 2-2.

The Field Application represents the hardware and software that is configured by the VAR for specific applications such as collecting and transmitting GPS location information. The ISU is an Iridium L-Band Transceiver (LBT) with the SBD feature available in firmware and the service activated on the Iridium network. The GSS is responsible for storing and forwarding messages from the ISU to the Vendor Application and storing messages from the Vendor Application to forward to the ISU. The ISU communicates with the GSS via the Iridium satellite constellation.

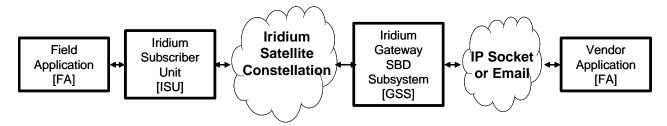


Figure 2-1: Short Burst Data Architecture.

The interface between the Vendor Application and the GSS uses either standard Internet mail protocols or an IP Socket type interface to send and receive messages. Mobile terminated messages are sent to the GSS using a common email or IP address, identifying the specific ISU by encoding the unique ISU IMEI in the subject line of the email or as part of the IP Socket payload. For email the data message itself is transported as a binary attachment to the email. For IP Socket the data message is part of the payload. Messages sent to the Vendor Application are delivered to a specific email or IP address that is configured when the IMEI is provisioned. The delivery address for each IMEI can be changed on-line by the VAR using the Iridium SPNet provisioning tool.

It is also possible for one ISU to send a message direct to another ISU(s) without the message passing to the Vendor Application. The second ISU destination IMEI must be programmed on-line by the VAR using the Iridium SPNet provisioning tool. However, only one delivery type (email or ISU-ISU) is permitted. Up to 5 IP socket addresses/ports for each MO session. As well, the SBD system will support a "mix and match" of Email/DirectIP/ISUtoISU provisioning a total of 5 unique destinations. The interface between the FA and the ISU is a serial connection with extended proprietary AT commands. This interface is used to load and retrieve messages between the ISU and the Field Application.

For a Mobile Originated SBD Message (MO-SBD), the message is loaded into the MO buffer in the ISU using the +SBDWB or +SBDWT AT Commands, a message transfer session between the ISU and the GSS is initiated using the AT Command +SBDI[X]. For a Mobile Terminated SBD Message (MT-SBD), the ISU can either initiate a Mailbox Check using the AT Command +SBDI to check whether a MT message is queued at the GSS; or the ISU can use the (suitably configured) "Ring Alert" or "Automatic Notification" capability to be told when a MT message is queued at the GSS. The ISU must then retrieve the MT-SBD message from the GSS by issuing the +SBDI[X] command. When the message is received from the GSS it can be retrieved from the MT buffer in the ISU by the Field Application using the +SBDRB or +SBDRT AT Commands. Additionally a MT-SBD message can also be retrieved in the same network transaction by the ISU when a MO-SBD message is sent from the ISU.

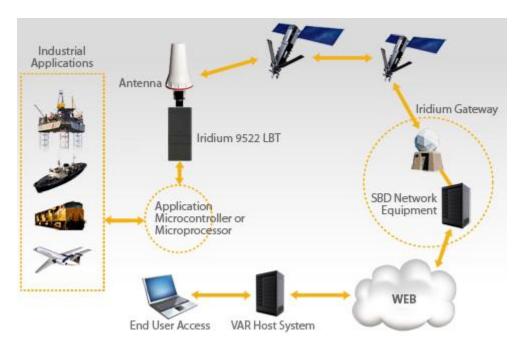


Figure 2-2: SBD System Architecture


Messages are transferred between the ISU and the GSS using a reliable transport mechanism that ensures the message is delivered error free. If the ISU was not able to send or receive messages, an indication is passed to the FA via the serial interface.

The MO and MT message buffers in the ISU will maintain messages as long as the ISU is powered on. Once a message is transferred from the FA to the MO buffer in the ISU, it will remain there even after it is successfully sent to the GSS. If a MT message is received at the ISU from the GSS, it will remain in the MT buffer even after the FA reads it. The buffers in the ISU will be cleared only when either given an explicit command (+SBDD) or when the ISU is power cycled or is overwritten with new data. The MT buffer will be cleared when a SBD session is initiated.

All MO and MT messages between the VA and the GSS are routed to the Internet by default. Iridium offers additional cost options for Virtual Private Network (VPN) and leased line routing of email or IP Socket messages to provide additional security, capacity and/or redundancy if required for the application. ISU-ISU SBD messages remain entirely within the Iridium network infrastructure, however it should be noted that they pass through the Iridium gateway and do not transfer directly from one ISU to another.

2.2 Transceiver Overview

The following Iridium transceivers are capable of Short Burst Data Service.

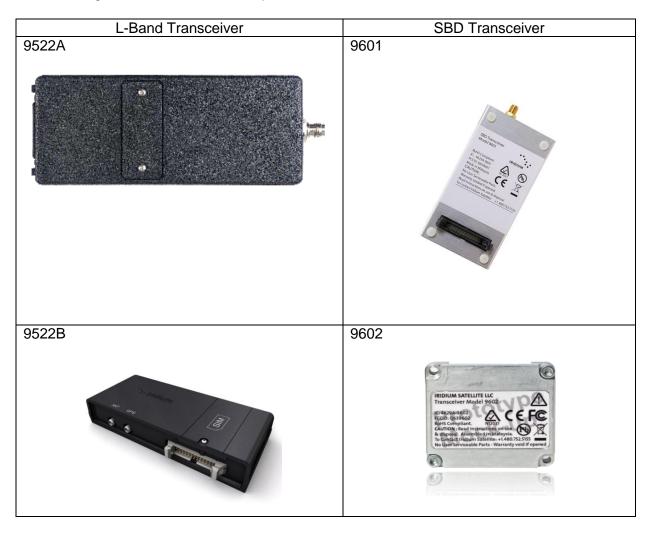

Developers should consult the appropriate developers guide document for the transceiver hardware.

3.0 Vendor Application to GSS Email Interface Description

Applications that utilize SBD will communicate to the Iridium network via the GSS interface. This interface utilizes email or IP Socket interfaces for the transfer of data messages to and from the Vendor Application. This section describes how to utilize the GSS interface in both Mobile Originated and Mobile Terminated cases. Mobile Terminated messages are messages originated by the Vendor Application (or another ISU), that are sent to the Field Application. Mobile Originated messages are messages originated by the Field Application that are sent to either the Vendor Application or to another ISU.

In the case of ISU-ISU SBD messages, the originating message from the first IMEI is a Mobile Originated Message. Once received and processed in the GSS the message then becomes a Mobile Terminated Message with respect to the second ISU.

For ISU's provisioned to use email, each MO or MT message the VA will receive an email for each session that reaches the GSS regardless of any message transfer, unless one or both of the ISUs are provisioned to send to another ISU, in which case only the ISU provisioned to send to an email address will receive email notifications.

This section describes in more detail the operation of Mobile Terminated, Mobile Originated in email mode. 'ISU to ISU' mode, which is independent of email or IP Socket, is described separately in Section 4.2.

3.1 Mobile Terminated Messages

In order to send a MT message from the Vendor Application to the Field Application, the Vendor Application must send the message to the GSS where it will be queued for delivery awaiting contact from the ISU to retrieve it. The message will remain in the queue for up to five (5) days awaiting contact from the ISU to retrieve it. After five days all MT message for the destination IMEI is removed from the queue automatically by the GSS. The Iridium MT purge script runs once a day at 00:06:14. If the script encounters a message that has been queued that is older than five days, then all MT messages for that IMEI are deleted.

There are two methods for the ISU to retrieve a queued MT messages from the GSS. The methods are hardware and firmware dependant. For specific capabilities consult the firmware release notes for the particular ISU type. Iridium recommends using the latest release of firmware available in order to provide the best performance and compatibility to the functionality described herein.

The first method, called "Polling," is universal to all ISUs that are capable of SBD. In this method the mailbox check command is sent from the Field Application to the ISU. The ISU contacts the GSS and transfers the MT message if one is queued.

The second method, called "Automatic Notification". In this method the GSS automatically notifies the ISU that a message is queued at the GSS. Note that the MT message is not automatically delivered to the ISU. The application designer has to program the Field Application to respond in an appropriate manner to the Automatic Notification. Figure 3-1 provides an example MT email message. MT messages must follow the formatting rules outlined below:

- The ISU must be provided in SPNet to send Ring Alerts. If this is not done the GSS will not send Ring Alerts even if new MT messages are queued by the Host and/or the ISU is suitably configured.
- Messages sent to an ISU from the Host are sent to the email address: data@sbd.iridium.com
- Placing at least one, and up to a total of four, IMEI(s) into the subject line of the email identifies the destination ISU(s).
 - o If there is more than one destination IMEIs then list the additional IMEIs on the subject line separated with a <u>single space</u> between each IMEI.
- White listing may be used to restrict the originator of MT-SBD messages to particular IMEIs. This restriction will fork for email and Direct IP.
- The message must contain a properly formatted sender ("From:" address), otherwise the message will be dropped by the GSS.
- The data message to the ISU must be carried as an attachment to the email:
 - The attachment name must have a '.sbd' file name extension: E.g. 'importantdata.sbd'
 - o File names must be 80 characters or less. (Including the .sbd extension.)
 - File names are not case sensitive.
 - The maximum size of the binary message (not the Base64 version) is <u>ISU specific</u> and is between one byte and the maximum MT message size stated in Section 1.5
 - The GSS will reject message sizes that are too large for a particular ISU type.
 - The attachment must use standard Multipurpose Internet Mail Extensions (MIME) Base64 encoding as defined in RFC 2045.
- Multiple messages may be queued by a single email by including the additional separate attachments in the email message, subject to the maximum number of messages permitted in the queue.
 - Note that if one of the attachments has an incorrect extension (something other than.sbd), while others are correct (.sbd) then an error indication email will be sent for the invalid extensions
 - A single email with multiple attachments creates a MT-SBD message for each attachment. In other words – one email with ten attachments creates ten entries for the destination ISU.
- The message body plays no role in the message transfer process; any information contained in the body will be discarded. It is recommended that this item be left blank.
- A maximum of 50 messages may be in any ISU's queue at any one time regardless of whether they

were sent as an individual message with attachment or a single message with multiple attachments. The GSS will reject any message over this limit.

 A single email with multiple attachments creates a MT-SBD message for each attachment. In other words – one email with ten attachments creates ten entries for the destination ISU.

```
To: data@sbd.iridium.com
From: VA@VendorDomain.com
Subject: 304050607080903
```

Figure 3-1: Mobile Terminated Email Message

The GSS validates each MT message upon receipt and returns a disposition notification email to the MT message originator. The format of this email is shown in Figure 3-2 and the definition of the email header and body descriptors is shown in Table 3-1. A sample success notification is shown in Figure 3-3. If there is more than one destination ISU a disposition notification email will be sent for each destination ISU. If the Vendor Application attempts to queue more than 50 messages for delivery at the GSS, a rejection notice email similar to Figure 3-4 will be sent to the message originator (From address).

```
To: VA@VendorDomain.com

From: techops@iridium.com

Subject: <Result Description>: <ISU IMEI>

<Description>

IMEI: <IMEI number>
Time: <Date>
```

Figure 3-2: MT-SBD Email disposition notification message field layout.

Table 3-1 SBD-MT disposition notification email header and message body field descriptors

Field Name		Description		
	This field will have one of the following values:			
<result description=""></result>	SBD Mobile Terminated	Message Queued for Unit: <isu imei=""></isu>		
	Error: SBD Mobile-Term	ninated Message Not Queued for Unit: <isu imei=""></isu>		
	Field Value	Description		
	(No IMEI specified)	No IMEI provided in the subject line of the email sent to the GSS.		
<isu imei=""></isu>	(Invalid IMEI specified)	The IMEI in the subject line of the email sent to the GSS was not in the proper format. Additional information can be found in the reason code in the body of the message		
	Actual IMEI	The actual 15 digit IMEI of the destination ISU is returned if it was validated.		
<description></description>	Additional text expanding on the queuing disposition in the subject line. It will have of the following values: The following mobile-terminated message was queued for delivery: The following mobile-terminated message was not queued for delivery:			
	The hardware identificat	ion number of the unit to which the message was to be queued.		
	Field Value Desc	ription		
IMEI	(none specified) No IN	MEI provided in the subject line of the email sent to the GSS.		
	Received IMEI the 1	MEI was received by the GSS. In the case of Success, this is 5 numeric-digit IMEI of the ISU. In the case of Error, this is the d Alpha-numeric string received by the GSS.		
Time	The timestamp, in UTC,	when the acknowledgement was sent from the GSS.		
Attachment Filename	The filename of the atta	chment received by the GSS.		
Attachment Size	The size of the attachment received by the GSS.			
<reason &="" descriptive<br="">Text></reason>	One of the following values will be displayed: The MTMSN is XX, and the message is number N in the queue Reason: IMEI length (M) is invalid – must be 15 characters. Reason: The IMEI (300xxxxxxxxxxxx) is not provisioned on the SBD system. Reason: No attachment with a '.sbd' file extension was found Reason: Payload size is too large (max size allowed is XXXX bytes). Reason: Mobile-termination message queue for the IMEI is full (max of 50 allowed).			

To: VA@VendorDomain.com
From: sbdservice@sbd.iridium.com
Subject: SBD Mobile-Terminated Message Queued for Unit 300001001247240
The following mobile-terminated message was queued for delivery:

IMEI: 300001001247240
Time: Mon Oct 27 17:24:29 2003
Attachment Filename: TestFile518chars.sbd
Attachment Size: 518 bytes
The MTMSN is 6870, and the message is number 12 in the queue

Figure 3-3: Mobile Terminated Email Message - Successful Queuing Notice

To: VA@Vendordomain.com
From: sbdservice@sbd.iridium.com
Subject: Error: SBD Mobile-Terminated Message Not Queued for Unit: 300001001247240

The following mobile-terminated message was not queued for delivery:

IMEI: 300001001247240
Time: Mon Oct 27 17:23:30 2003
Attachment Filename: TestFile518chars.sbd
Attachment Size: 518 bytes

Reason: Mobile-termination message queue for the IMEI is full (max of 50 allowed).

Figure 3-4: Mobile Terminated Email Message - Rejection Notice

3.2 Mobile Originated Messages Sent Via Email

Messages sent from the ISU to the GSS are processed at the GSS where they are immediately formatted and sent to the destination email address that was provisioned when the ISU IMEI was provisioned. The message sent to the Vendor Application from the ISU will be carried as a binary attachment to an email from the GSS to the Vendor Application. The binary attachment is encoded using standard MIME Base64 encoding as defined in RFC 2045. Unlike Mobile Terminated messages sent to the GSS, Mobile Originated messages sent to the Vendor Application carry additional information in the email message body. This information includes the Mobile Originated Message Sequence Number (MOMSN), the time of the session, the session status, the message size, and ISU specific geo-location information. The format of such an email message is provided in Figure 3-5, details of the email message fields are provided in Table 3-2. Note that it is possible to tell the GSS not to send the geographic location fields on a device by device basis. This is achieved by using SPNet and un-checking the "Include Geo-Data" box for the specific ISU IMEI. An example of an email message with no geo-location information is shown in Figure 3-6.

A MO-SBD message may be sent to up to five email destinations. The five destinations are programmed into the GSS by using the SPNet provisioning tool available to Value Added Resellers. Note that there is an ability to deliver a MO-SBD message to up to 5 Direct IP delivery destinations and it is possible to mix delivery types. [See also Section 4.2 "ISU to ISU Messages."]

```
From: sbdservice@sbd.iridium.com
Sent: Tuesday, August 13, 2002 12:49 PM
Subject: SBD Msg From Unit: 304050607080903

MOMSN: 23
MTMSN: 0
Time of Session (UTC): Tue Aug 13 16:51:04 2002
Session Status: 00 - TRANSFER OK
Message Size (bytes): 351
Unit Location: Lat = 59.372463 Long = 75.309806
CEPradius = 3

Message is Attached.
```

Figure 3-5: Mobile Originated Email Message Showing Geolocation information

```
From: sbdservice@sbd.iridium.com

Sent: Friday, July 8, 2005 00:12 AM

Subject: SBD Msg From Unit: 300003000210150

MOMSN: 652

MTMSN: 644

Time of Session (UTC): Fri Jul 8 00:12:55 2005
```

Figure 3-6: Mobile Originated Email Message without Geolocation information

Table 3-2: Mobile Originated Message Email Message Field Description

Field Name	Description			
From	This field identifies the sender of the email message as the SBD Service. This field normally contains "sbdservice@sbd.iridium.com"			
Sent	This field provides the time at which the message was emailed from the GSS to the Vendor Application. The timestamp is in UTC.			
Subject	This field	provides th	e ISU IME	EI of the unit that sent the MO message.
MOMSN	This is the Message Sequence Number set by the ISU when the message was sent from the ISU to the GSS. The value is an integer in the range 0 to 65,535 and is incremented each time an SBD session is successfully completed between the ISU to the GSS. It is a wrap around counter which will increment to 0 after reaching 65535.			
MTMSN	This is the Message Sequence Number used by the GSS when the message was sent from the GSS to the ISU. The value is an integer in the range 0 to 65,535 and is incremented each time the GSS forwards a message to a particular ISU. It is a wrap around counter which will increment to 1 after reaching 65535. It will have a value of zero (0) if no MT message transfer attempt occurred to the specific ISU.			
				mestamp of the ISU session between the ISU and the GSS. A text g format: "DDD MMM dd HH:MM:SS yyyy".
	Value			Description
Time of	DDD			un, Mon, Tue, Wed, Thu, Fri, Sat)
Session	MMM			Jan, Feb, Mar, Apr, May, Jun, Jul, Aug, Sep, Oct, Nov, Dec)
	dd	Day of the		
	hh	Hour (00 1	to 23)	mm Minute (00 to 59) ss Second (00 to 59)
	уууу	Year		1. (4. 000 . 1:1 . 1 . 1 . 1 . 1
		-		ults of the SBD session which are described below:
	Session Status Description			
	00 - Trans	fer OK		The SBD session between the ISU and the GSS completed successfully.
Session	01 - MT Message Too Large		o Large	The MT message queued at the GSS is too large to be transferred within a single SBD session
Status	10 - SBD Timeout			The SBD Session timed out before session completion
	12 - MO Message Too Large		oo Large	The MO message being transferred by the ISU is too large to be transferred within a single SBD session
	13 - Incomplete Transfer		sfer	A RF link loss occurred during the SBD session
	14 - SBD Protocol Error		ror	An ISU protocol anomaly occurred during the SBD session
	15 - SBD Denial			The ISU is not allowed to access the system
			n indicati	on of the size, in bytes, of the attached message in decoded form.
Message Size				ME encoded data.
	These fields are optional at the time that the ISU is provisioned. These fields provide t geographic location of the ISU. The latitude and longitude provide a center point and the CE Radius provides the radius (measured in Kilometers) around the center point within which the u is located. This reported position is accurate (within the reported circle) 80% of the time. Note the activating or deactivating the inclusion of the ISU location can only be accomplished via SPNet cannot be controlled by or from the ISU and is enabled by default.			the time that the ISU is provisioned. These fields provide the U. The latitude and longitude provide a center point and the CEP neasured in Kilometers) around the center point within which the unit ion is accurate (within the reported circle) 80% of the time. Note that inclusion of the ISU location can only be accomplished via SPNet. It in the ISU and is enabled by default.
Unit Location	Unit La	titude l	Positive r data is pro	provides the geographic latitude of the ISU measured in degrees. represents north, negative represents south. When GEO location ovisioned to "off" the latitude the field is not included in the email.
	Unit Lor	ngitude I	Positive re	provides the geographic longitude of the ISU measured in degrees. epresents east, negative represents west. When GEO location data oned to "off" the longitude the field is not included in the email.
	CEPR	adius p	This field provides an estimate of the accuracy of the ISU's location. This position is reported in Kilometers. When GEO location data is provisioned to "off" the CEPRadius the field is not included in the email.	

3.3 Examples of SBD Usage

This section outlines some generic examples of SBD usage scenarios. The scenarios are merely examples and developers may use the SBD AT Commands in other permutations and combinations.

3.3.1 Mobile Originated (MO) Message

The FA will load a Mobile Originated message into the ISU, initiate a SBD session, evaluate and act on the results of the SBD session (Table 3-3). Finally, the GSS will forward the MO message to the Vendor Application. (Figure 3-7.)

Table 3-3 FA to ISU Interface, MO Message

To ISU (from DTE)	To DTE (from ISU)	Description
AT+SBDWB=351₊		The FA instructs the ISU that it will write a 351 byte message into the ISU.
	READY↓	The ISU informs the FA that it is ready to receive the message
Binary transfer		The FA sends the 351 byte message followed by the two byte checksum to the ISU. This transfer is not echoed.
	0.1	The ISU will send a zero result code to the FA indicating that the message was loaded without error.
AT+SBDIX.J		The FA instructs the ISU to initiate an SBD transfer.
	+SBDI: 1, 23, 0, -1, 0, 0₊	The ISU informs the FA that the message was sent successfully using MOMSN 23. No MT message was received and no MT messages are queued.
AT+SBDD0₊J		The FA instructs the ISU to clear the message from the Mobile Originated buffer.
	0.1	The ISU informs the FA that the message buffer was cleared successfully.

```
From: sbdservice@sbd.iridium.com
Sent: Tuesday, August 13, 2002 12:49 PM
Subject: SBD Msg From Unit: 304050607080903

MOMSN: 23
MTMSN: 0
Time of Session (UTC): Tue Aug 13 16:51:04 2002
Session Status: 00 - TRANSFER OK
Message Size (bytes): 351
Unit Location: Lat = 59.372463 Long = 75.309806
CEPradius = 3

Message is Attached.
```

Figure 3-7 VA to GSS Interface, MO Message

3.3.2 Mailbox Check / Mobile Terminated (MT) Message

The GSS does have the ability to notify the ISU that a Mobile Terminated message is waiting for it at the GSS (Refer to section 4.0.) The FA is required to perform a Mailbox Check by initiating an SBD session with an empty MO buffer. If a MT message is waiting for the ISU at the GSS, the MT message is transmitted to the ISU.

In this scenario, a MT message is sent from the Vendor Application to the GSS (Figure 3-8.) The FA will initiate a SBD session, evaluate the results of the SBD session, and read the MT message from the ISU (Table 3-4). After the SBD session completes, the GSS sends an email message to the Vendor Application indicating the disposition of the SBD session (Figure 3-9).

```
To: <a href="mailto:Data@SBD.Iridium.com">Data@SBD.Iridium.com</a>
From: <a href="mailto:VA@VendorDomain.com">VA@VendorDomain.com</a>
Subject: 304050607080903
```

Figure 3-8 VA to GSS Interface, Mailbox Check / MT Message

```
From: <Iridium SBD Service (Tempe, AZ)>
Sent: Tuesday, August 13, 2002 12:49 PM
Subject: SBD Msg From Unit: 304050607080903

MOMSN: 498
MTMSN: 237
Time of Session (UTC): Tue Aug 13 16:51:04 2002
Session Status: 00 - TRANSFER OK
Message Size (bytes): 0
```

Figure 3-9 GSS to VA Interface, Status Message.

Table 3-4 FA to ISU	Interface, Mailbo	x Check / MT	Message
---------------------	-------------------	--------------	---------

To ISU (from DTE)	To DTE (from ISU)	Description
AT+SBDD0		The FA instructs the ISU to clear the send buffer.
AT+SBDIX↓		The FA instructs the ISU to initiate an SBD transfer.
	+SBDI: 0, 498, 1, 237, 561, 2,	The ISU informs the FA that no MO message was sent and a 561 byte MT message was successfully received with MTMSN 237. Two additional MT messages are queued.
AT+SBDRB↓		The FA instructs the ISU to transfer the MT message.
	Binary transfer	The ISU sends a two-byte length indicator followed by the 561 byte message followed by the two byte checksum to the FA.

3.3.3 Mobile Originated and Mobile Terminated Message

When the Field Application needs to send a Mobile Originated data message and the Vendor Application needs to send a Mobile Terminated Message, the following scenario assumes that the MT Message is waiting at the GSS before the MO message is sent.

In this scenario, the Vendor Application will send the MT message to the GSS (Figure 3-10); the FA will load the MO message into the ISU, initiate an SBD session, evaluate the results of the SBD session, and read the Mobile Terminated message from the ISU (Table 3-5). Finally the Vendor Application will receive the MO message (Figure 3-11).

To: Data@SBD.Iridium.com
From: VA@VendorDomain.com
Subject: 304050607080903

Figure 3-10 Vendor Application to GSS Interface, MT Message

Table 3-5 FA to ISU Interface, Mobile Originated and Mobile Terminated

To ISU (from DTE)	To DTE (from ISU)	Description
AT+SBDWB=351. □	(The FA instructs the ISU that it will write a 351 byte message into the ISU.
	READY₊J	The ISU informs the FA that it is ready to receive the message
Binary transfer		The FA sends the 351-byte message followed by the two byte checksum to the ISU. This transfer is not echoed.
	0+1	The ISU will send a zero result code to the FA indicating that the message was loaded without error.
AT+SBDI₊		The FA instructs the ISU to initiate an SBD transfer.
	+SBDI: 1, 2173, 1, 87, 429, 0₊	The ISU informs the FA that the message was sent successfully using MOMSN 2173. A 429-byte message was received using MTMSN 87. No additional messages are queued.
AT+SBDD0₊J		The FA instructs the ISU to clear the message from the send buffer.
	0.1	The ISU informs the FA that the message buffer was cleared successfully.
AT+SBDRB₊J		The FA instructs the ISU to transfer the received message.
	Binary transfer	The ISU sends a two-byte length indicator followed by the 429byte message followed by the two byte checksum to the FA.

```
From: <Iridium SBD Service (Tempe, AZ)>
Sent: Tuesday, August 13, 2002 12:49 PM
Subject: SBD Msg From Unit: 304050607080903

MOMSN: 2173
MTMSN: 87
Time of Session (UTC): Tue Aug 13 16:51:04 2002
Session Status: 00 - TRANSFER OK
Message Size (bytes): 351
```

Figure 3-11 VA to GSS Interface, MO Message

3.4 Permitted Email Address Formats

The following formats of email address are permitted for Mobile Originated messages:

- Name@domain.com
 - o E.g. <u>iridiumDBDProcessor@Iridium.varname.com</u>
- Name@IP_address.com
 - o E.G. <u>IridiumSBDProcessor@172.16.254.1</u>

Note that Iridium encourages the use of Name@domain.com. Use of Name@IP_address is discouraged as per the relevant RFC2821.

3.5 RFC Compliance

The following is a list of the principle relevant RFC's governing the e-mail messages received and sent by the EmailMT process. All e-mail clients connected to EMT are expected to conform to these standards, and EMT conforms to the relevant standards when sending diagnostic e-mails in response to SBD messages.

- 2045: Multipurpose Internet Mail Extensions (MIME) Part One: Format of Internet Message Bodies
- 2046: Multipurpose Internet Mail Extensions (MIME) Part Two: Media Types

- 2047: Multipurpose Internet Mail Extensions (MIME) Part Three: Message Header Extensions for Non-ASCII Text
- 2048: Multipurpose Internet Mail Extensions (MIME) Part Four: Registration Procedures
- 2049: Multipurpose Internet Mail Extensions (MIME) Part Five: Conformance Criteria and Examples
- 2183: Communicating Presentation Information in Internet Messages: The Content-Disposition Header Field
- 2231: MIME Parameter Value and Encoded Word Extensions: Character Sets, Languages, and Continuations (Obsoletes RFC 2184)
- 2821: Simple Mail Transfer Protocol (Obsoletes RFC 821)
- 2822: Internet Message Format (Obsoletes RFC 822)

4.0 SBD Automatic Notification for Mobile Terminated Messages and ISU-ISU Messages

The Iridium Short Burst Data service is a fully acknowledged protocol that confirms the delivery of the messages between the ISU and the GSS. By design, Mobile Originated messages are fully acknowledged as the ISU is in full control of the transmission. For Mobile Terminated messages the protocol does not permit the GSS to send an unsolicited MT-SBD message to an ISU as the ISU may not be ready or available to receive such a message and acknowledge it. Each time the GSS receives a MT-SBD message for an ISU, it is queued at the GSS until the ISU requests delivery. A capability of notifying the ISU that it has a queued MT-SBD message waiting for it has been implemented and that capability is called SBD Automatic Notification.

Prior to the release of SBD GSS Version 4.1, the ISU did not receive a notification that a MT-SBD message had been queued at the GSS. In order to determine if a message was queued for delivery, the ISU sent either a MO-SBD message or a 'mailbox check' and then the application checked the status codes returned from the GSS to determine if a MT-SBD message was received by the ISU and whether additional messages were still queued at the GSS. For applications that required timely notification of queued MT-SBD messages this process was less than optimal.

To provide a more optimal solution, Iridium implemented the SBD Automatic Notification feature in SBD GSS Version 4.1. This feature notifies the ISU that a MT-SBD message has been queued for it at the GSS. It does not automatically deliver the MT-SBD message. The actual notification is called a SBD Ring Alert. The application developer will need to implement an appropriate algorithm in the Field Application to process the SBD Ring Alert and then initiate a SBD session to receive the gueued message.

4.1SBD Automatic Notification for Mobile Terminated Messages

This section provides basic examples of how to configure the ISU. Please also consult the relevant AT Command set documentation for more detailed information. <u>SBD Automatic Notification requires both the correct configuration of the ISU through use of AT Commands and the activation of this feature at the time of provisioning through the use of SPNet.</u>

4.1.1 Automatic Notification Registration

To implement the SBD Ring Alert feature there are a number of implementation steps required:

- 1. The ISU must have the firmware revision that supports this feature. See Section 1.5. These versions can be downloaded from the extranet site if required.
- In the SPNet provisioning database, the SBD Ring Alert option needs to be selected in the provisioning screen for the ISU. This option indicates to the GSS that SBD Ring Alerts are intended to be used with this ISU. NOTE: In the majority of the instances where it is reported that "ring alerts are not working," it is due to not selecting the Ring Alert option in SPNet for the ISU.
- The Field Application is required to execute AT commands to configure the ISU to listen for SBD Ring Alerts and then the ISU has to complete SBD Network Registration which notifies the GSS that the ISU is ready to receive SBD Ring Alerts.

- a. The Field Application executes +SBDMTA command to configure the ISU to listen for SBD Ring Alerts sent from the GSS. Failure to complete this step will result in the ISU not listening for SBD Ring Alerts as this is the default setting. To configure the ISU to receive the SBD Ring Alert the command is: AT+SBDMTA=1.
- b. The Field Application next executes the +SBDREG command which will attempt to complete the SBD Network Registration. SBD Network Registration performs two functions. First it notifies the GSS that the ISU is configured and ready to receive SBD Ring Alerts and second it provides the required geo-location coordinates so that the GSS knows where to route the SBD Ring Alert(s) to. To complete the SBD Network Registration the command is: AT+SBDREG.

The table below describes the following: The FA verifies its registration state, performs a registration in order to be able to receive automatic notifications, and enables automatic notifications indications.

To ISU (from FA)	To FA (from ISU)	Description
AT+SBDMTA=1		Tell the ISU to listen for (enable) SBD Ring
	OK	Alerts.
AT+SBDREG?		Query the ISU SBD Network Registration status
	+SBDREG:0	ISU has not completed SBD Network
		Registration, ie it is detached.
AT+SBDREG		Tell the ISU to register for SBD Ring Alerts
	+SBDREG:2,0	ISU is now registered for SBD Ring Alerts
AT+SBDREG?		Query the ISU SBD Network Registration status
	+SBDREG:2	ISU is registered for SBD Ring Alerts

4.1.2 Retrieval of a MT-SBD Message using SBD Automatic Notification

The ISU must send a MO-SBD message in order to retrieve the MT-SBD message queued at the GSS. The MO-SBD may simply be a 'mailbox check' which has a zero-byte message payload or a valid MO-SBD message (i.e. payload size greater than zero bytes.) Either one will cause the next MT-SBD message queued at the GSS, if there is one, to be delivered to the ISU and retrieve the status information from the GSS.

If the application is configured to use the SBD Automatic Notification, the +SBDIX and +SBDIXA commands must be used to initiate the MO-SBD message. To respond to a SBD Ring Alert the Field Application should use the +SBDIXA command to retrieve the MT-SBD message. If the Field Application is sending an unsolicited MO-SBD message, the +SBDIX command is used. [Note: The +SBDI command can still be used, however, it also 'detaches' or stops SBD Ring Alerts being sent from GSS.]

In the table below: The FA verifies its registration state. Upon receiving a SBD Ring Alert the FA initiates an SBD session to receive an MT message.

To ISU (from FA)	To FA (from ISU)	Description	
AT+SBDREG?		Query the ISU SBD Network Registration status	
	+SBDREG:2	ISU is registered for SBD Ring Alerts	
		Vendor Application sends an MT message to the GSS. GSS sends a SBD Ring Alert to ISU	
	+SBDRING	ISU indicates an incoming message. The RI line also toggles.	
AT+SBDIXA		FA initiates an SBD session in response to the SBD Ring Alert	
	+SBDIXA:0,23,1,237,90,2	ISU informs FA that a 90-byte message was successfully received with MTMSN 237, and that two further MT messages are queued at the GSS	
AT+SBDRB		FA retrieves the received message from the ISU	
	 	1 A remeves the received message from the 150	

4.1.3 SBD Ring Alert Status Information

During a SBD message transfer, status information is transferred between the GSS and the ISU. This status information is retrieved from the ISU by using the +SBDSX command which returns six values: MO flag, MOMSN, MT flag, MTMSN, RA flag and number of messages waiting at the GSS. The parameters MO flag, MOMSN, MT flag, MTMSN are the same as those returned by the +SBDS command. The new parameters are the RA flag and the messages waiting. The RA flag indicates whether the ISU received a SBD Ring Alert from the GSS that has not been answered. The messages waiting value is the number of MT messages queued at the GSS waiting to be delivered. This information can be used by the Field Application to retrieve the queued messages.

This status information is updated every time there is a SBD session between the ISU and the GSS. The commands that initiate an SBD session are: +SBDI, +SBDIX[A], +SBD[A]REG, +SBDDET. The +SBDSX command can be properly used following any of these commands.

4.1.3.1 Automatic MT Ring Alert Implementation

The SBD service is a fully acknowledged protocol that confirms the delivery of the messages between the ISU and the gateway. To insure this, the gateway does not send unsolicited MT-SBD messages to an ISU that may not be acknowledged. The MT-SBD messages are queued at the gateway until the ISU requests delivery of them.

Prior to the release of SBD GSS 4.1, the ISU did not receive any notification that a MT-SBD message was queued at the gateway. In order to determine if a message was queued for delivery, the remote ISU sent a MO-SBD message or a 'mailbox check', a MO-SBD message with a 0-byte payload, and then checked the return status from the gateway to determine if a MT-SBD message was delivered and whether more messages were waiting. This made it cumbersome for applications that required asynchronous MT-SBD messaging.

To mitigate this, Iridium implemented the Automatic Ring Alert notification feature in the SBD 4.1 release. This feature does not deliver the MT-SBD message but notifies the ISU that a MT-SBD message has been queued for delivery at the gateway. The application, if it is configured to handle the RA, can then initiate a SBD session and receive the queued message.

4.1.3.2 MT Ring Alert Set Up - ISU

To implement the RA feature there are a few steps that must be taken. The ISU must have the firmware revision that supports this feature; call processor version TD06002 or later. This version can be downloaded from the Iridium extranet site, developer.iridium.com.

Once the ISU has the proper firmware version, there are a few operational steps needed to activate it. In the SPNet database, select the Ring Alert option. This option indicates to the gateway that the device supports the RA feature. The option can be changed at any time by the Iridium partner via SPNet. NOTE: The majority of the time the "ring alerts are not working" it is because this option was not selected.

Once the RA feature is selected in SPNet, the application must execute AT commands to configure the ISU to receive the RA and notify the network that it is set up for the RA notification.

The +SBDMTA command configures the ISU to receive the RA signal from the gateway. If the application does not issue this command to the ISU, it will not 'listen' for the ring alert and will not send the indication to the application. To configure the ISU to receive the RA: AT+SBDMTA=1.

After the RA option is selected in SPNet and the ISU is configured to receive the RA, the ISU must be 'attached' to the network. Attaching the device to the network performs two functions. First it notifies the network that the ISU is configured to receive the RA notification and second it provides geo-location coordinates so the gateway can route the RA signal. This is done with the +SBDREG command.

Once a device is attached using the +SBDREG command, the registration does not expire and does not need to be repeated. Every time the device initiates a SBD session to send a MO message, the GSS automatically updates the geo-location information and reattached the device. The device does not need to be reattached with the +SBDREG command unless the device is detached or it moves farther than the RA radius, approximately 150 Km, without sending a MO-SBD message.

4.1.3.3 Retrieving the MT-SBD Message

The ISU must initiate a MO-SBD message session to receive the MT-SBD message queued at the gateway. The MO-SBD may be a 'mailbox check' or a valid MO-SBD message. Either one will cause the next MT-SBD message queued at the gateway, if there is one, to be delivered to the ISU and exchange status information between the ISU and the gateway.

If the application is configured to use the RA notification, the +SBDIX and +SBDIXA commands must be used to initiate the session. If the SBD session is established as a response to the RA notification, the application should use the +SBDIXA command to retrieve the MT-SBD message. If the application is sending an unsolicited MO-SBD, the +SBDIX command is used. The +SBDI command will still function, send and receive, however, it also 'detaches' the IMEI from the network and disables the RA feature.

4.1.3.4 Retrieving MT Ring Alert Status Information

During a SBD session, status information is passed between the ISU and the gateway. This status information is retrieved from the ISU by the +SBDSX command. This command returns six values: MO flag, MOMSN, MT flag, MTMSN, RA flag and 'messages waiting'. The parameters MO flag, MOMSN, MT flag, MTMSN are the same as those returned by the +SBDS command. The new parameters are the RA flag and the 'messages waiting'. The RA flag indicates that the device received a Ring Alert from the network and has not been answered. The 'messages waiting' value is the number of MT messages queues at the switch to be delivered. This informs the application that messages are queued for this device and can be

Iridium

Short Burst Data Developers Guide V2.3.1

retrieved.

This status information is updated every time there is a SBD session between the ISU and the gateway. The commands that initiate an SBD session are: +SBDI, +SBDIX[A], +SBD[A]REG, +SBDDET. The +SBDSX command can be properly used following any of these commands.

4.1.3.5 Automatic MT Ring Alert Notification

When the gateway receives a MT-SBD message, and the destination device is configured for the RA and attached to the network, the gateway sends a RA signal to the device. If the device does not respond in approximately 20 seconds, a second RA is sent. If the ISU does not respond to the second RA, no further RAs will be sent until another MT-SBD is queued for this device.

If a subsequent MT-SBD message is received for this ISU, the RA process repeats itself. However, the gateway does not send a subsequent RA if the MT-SBD is received within 10 seconds of the previous MT-SBD.

4.1.3.6 Retrieving MT-SBD Message by the RA

The gateway queues a MT-SBD message for the ISU and send the RA signal. The ISU receives the RA and sends an unsolicited response to the application. This response is either SBDRING in Verbose Mode or "124" in Numeric Mode. The Ring Indicator pin is also asserted.

The application interprets the response and initiates a SBD session with the +SBDIXA command. The "A" suffix indicates this is a response to the RA signal and cancels the second RA to prevent a possible race condition.

If the application has a MO message to send, it moves the data into the transmit buffer prior to issuing the AT command. If the application has nothing to send and just wants to retrieve the queued message, it clears the MO transmit buffer before initiating the session, i.e. a 'mailbox check'.

The response codes from the +SBDIXA command indicate if there are additional MT-SBD messages waiting to be retrieved. If there are messages queued for delivery to this device, the application can initiate a SBD session and retrieve them.

4.1.3.7 MT-SBD Sequence of Events

- Customer sends a MT message to an ISU using DIP, email or another ISU.
- Message is received at the gateway.
- SBD system gueues message for delivery to IMEI and RA is issued to ISU
 - o If no response for the remote ISU in ~20 seconds a second RA is issued.
- ISU receives RA and initiates a session back to the gateway using the +SBDIXA command to retrieve message.
- Response code received at the destination ISU will indicate whether or not additional messages are waiting.

4.1.3.8 Send MT Ring Alert - No MT Payload

Additional features related to MT deliveries have been introduced using the 'Disposition Flags' in the MT Header Information Element for the DirectIP. These features will not be available when using other means of queuing MT messages such as email or ISU to ISU messaging. One of the disposition flags triggers a RA for an attached device. When this flag is set, the GSS is directed to send a RA to the given IMEI even though no new MT payload is being queued.

The ISU must meet the conditions for the RA; if the Ring Alert option is selected, the ISU is configured to receive Ring Alerts and it is attached. If these conditions are satisfied, the GSS sends a single RA to the device. If either of these conditions is not met, no ring alert will be sent. If a ring alert is sent, and an MT payload is already queued, that payload will be delivered when the ISU retrieves the MT-SBD message. This flag has no alternate effect if a new MT payload is included, and the message will be processed normally.

4.1.3.9 MT Disposition Flags

These flags are set to trigger particular actions by the GSS. The disposition flag field is contained in the standard MT Header Information Element, which is described in the table below. Any combinations of disposition flags are allowed. The field is a 2-byte bit map with 16 available flags, however only two are currently implemented. These are:

Disposition Flag	Value	Description
Flush MT Queue	0x0001	Delete all MT payloads in the IMEI's MT queue
Send Ring Alert – Mo MTM	0x0002	Send ring alert with no associated MT payload
Conditing / tion William		(normal ring alert rules apply)

4.1.3.9 MT Header Information Element

Field Name	Data Type	Length (bytes)	Range of Values
MT Header IEI	char	1	See Table 5-7
MT Header Length	unsigned short	2	21
Unique Client Message ID	char	4	From client (not MTMSN)
IMEI (User ID)	char	15	ASCII Numeric Characters
MT Disposition Flags	unsigned short	2	Bit Map


4.1.4 Field Application Implementation

4.1.4.1Power Up

- On power up, the Field Application configures the ISU to receive the SBD Ring Alert with the +SBDMTA command.
- This should be followed by a Obyte Upload, which will update the geo location of the device in the database for future Ring Alerts. Additionally, this action would download any MT messages that are

in queque, and provide with current queue depth.

9601 Power Up Process

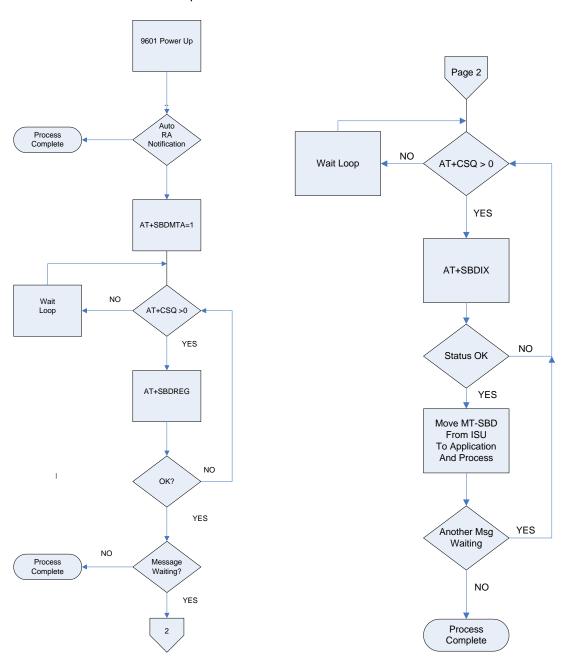

4.1.4.2 Automatic SBD Ring Alert Notification

When the GSS receives a MT-SBD message and the destination ISU is configured to listen for SBD Ring Alerts, and the ISU has successfully completed SBD Network Registration, the GSS sends a SBD Ring Alert to the ISU. If the ISU does not respond in approximately 13 seconds, a second SBD Ring Alert is sent. If the ISU does not respond to the second SBD Ring Alert, no further SBD Ring Alerts are sent until another new MT-SBD is queued for this ISU.

If a subsequent MT-SBD message is received for this ISU, the SBD Ring Alert process repeats itself.

Iridium
Short Burst Data Developers Guide V2.3.1

However, the GSS will not send a SBD Ring Alert if the subsequent MT-SBD is received within 10 seconds of the receipt of the previous MT-SBD.

Note that while the transfer of MO or MT SBD messages is via a reliable (duplex) protocol, SBD Ring Alerts are sent on a simplex channel. If the ISU is turned off or is blocked from seeing the satellite, then a SBD Ring Alert will not be received by the ISU and the GSS has no knowledge of whether an ISU eventually received a specific SBD Ring Alert or not.

4.1.4.3 Retrieving MT-SBD Message from the GSS when notified by the SBD Ring Alert

The GSS queues the MT-SBD message for the ISU and sends SBD Ring Alert. The ISU receives the SBD Ring Alert and sends an unsolicited response to the Field Application. This response is either SBDRING in Verbose Mode or "2" in Numeric Mode. The Field Application interprets the response and initiates a SBD session with the +SBDIXA command. The "A" suffix indicates this is a response to the SBD Ring Alert.

If the Field Application has a MO-SBD message to send, it moves the data into the transmit buffer prior to issuing the AT command. If the Field Application has nothing to send and just wants to retrieve the queued MT-SBD message, it clears the MO transmit buffer before initiating the session. The response codes from the +SBDIXA command indicate if there are additional MT-SBD messages waiting to be retrieved.

Applications where the ISU will move significant distances fairly quickly (e.g. aircraft) and applications where the ISU will move through an environment where the ISU may not always have a good view of the sky (e.g. cities, mountainous regions) should use the Automatic SBD Network Registration capability if a high degree of reliability/low latency of delivered MT-SBD messages is desired.

Respond to SBD Ring Alert Notification to Retrieve MT-SBD Message Unsolicted SBDRING YES NO MO-SBD Move Data to ISU Clear ISU to Send Transmit Buffert Transmit Buffert NO WAIT AT+CSQ > 0 YES Initiate SBD Session /w AT+SBDIXA NO OK YES Move MT-SBD Message to Application Process MT-SBD Message YES More MT-SBD


Queued

DONE

NO

4.1.4.4 Power Down

- 1. Before turning the ISU off, the Field Application should tell the GSS not to send any further SBD Ring Alerts. The Field Application will need to issue the +SBDDET to the ISU which will tell the GSS to "stop sending SBD Ring Alerts" or DETach from the GSS.
- When the response code for +SBDDET indicates a successful detach the ISU can be powered off.
- At power up the method described in Section 0 should be used to restart the GSS sending SBD Ring Alerts.

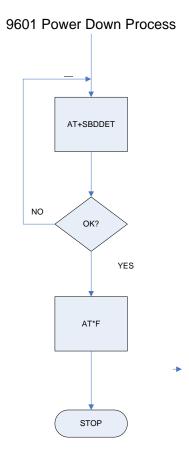

4.1.5 SBD Automatic Notification: Automatic Registration (+SBDAREG)

In order for the ISU to receive the SBD Ring Alert Notification, the GSS must have the current location of the ISU. This location is updated by the SBD Network Registration and each time a SBD session takes place. For fixed location ISUs and ISUs that do not travel more than approximately 100 miles between SBD sessions, the +SBDREG command is sufficient. If the ISU is mobile and can possible move more than 100 miles between SBD sessions, the +SBDAREG command should be used f This command is issued after the ISU has successfully attached to the GSS, either via the +SBDREG or +SBDIX commands. The +SBDAREG runs a passive geolocation algorithm which estimates the distance the ISU has moved since the previous SBD session. If the result indicates the ISU has moved 'too' far, the ISU automatically issues an updated SBD Network Registration.

The FA verifies its registration state and enables automatic registration using the "Ask" mode.

To ISU (from FA)	To FA (from ISU)	Description
AT+SBDREG?		Query the ISU registration status
	+SBDREG:2	ISU is registered
AT+SBDAREG=2		FA sets the automatic registration to "Ask" mode
	OK	
		ISU is moved
	+AREG:0,0	ISU notifies FA that it needs to register
AT+SBDREG		FA instructs the ISU to register
	+SBDREG:2,0	Registration is successful

4.1.6 SBD Automatic Notification: Registration (+SBDREG) with Optional GPS Parameter

The SBD Network Registration uses a Doppler calculation to update the geo-location at the GSS. This geo-location is inherently imprecise but is adequate for the majority of applications using SBD Automatic Notification. However, it may not be suitable for ISUs installed on very fast moving vehicles, such as aircraft. In this case, it is recommended that the Field Application provide the optional GPS parameter with the manual SBD Network Registration command +SBDREG.

4.2 ISU- ISU Messages

Messages from ISU #1 are to a second ISU (ISU #2) without leaving the Iridium network. [See Figure 4-1.] This option requires provisioning by the Value Added Reseller through SPNet. ISU #1 can be provisioned to send the same MO-SBD message to up to five ISUs. Note that there is an ability to deliver a MO-SBD message to up to 5 Directlp delivery destinations. It is also, possible to mix and match email, ISU, SSD-SSD and direct IP destinations for MO-SBD messages.

ISU-ISU SBD messages are billed twice. Once as a MO-SBD message to the initiating ISU IMEI and once as a MT-SBD message to the terminating ISU IMEI.

The MO-SBD message from ISU #1 is placed into the MT-SBD queue of ISU #2 when it has been received by the GSS. The MO-SBD message is never delivered to the Vendor Application as no email address can be programmed for the Vendor Application. No SBD session descriptors are delivered to either the originating or terminating ISU. However if ISU #2 is provided to send MO-SBD messages to a VA, then the mailbox check or sending of a MO-SBD message will cause an email message indicating the mailbox check or the transmission of the MO-SBD message to the Vendor Application. There are five error conditions that can occur in ISU-ISU SBD messaging as shown in Table 4-1 below.

Error Condition	Action			
Message size = 0 bytes	MT-SBD message will not be queued and will be deleted			
Message Size >270 bytes when ISU #2 is a 9601 or 9602 SBD Transceiver	MT-SBD message will not be queued and will be deleted			
Message size >1890 bytes when ISU #2 is a 9522, 9522A or 9522B LBT	MT-SBD message will not be queued and will be deleted			
Destination ISU MT queue > 50 messages	If the destination ISU MT queue is full the MT-SBD message will not be queued			
Destination ISU is not provisioned	If the destination ISU is not provisioned the MT-SBD message will not be queued			

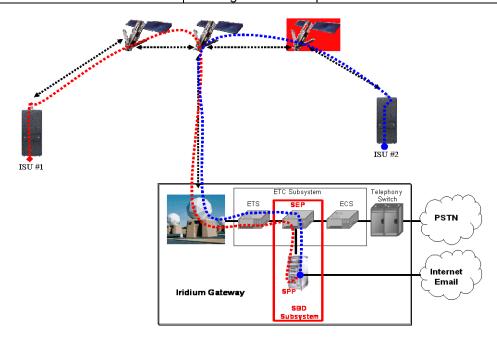


Figure 4-1 SBD Call Routing for ISU-ISU SBD Messages

5.0 Direct Internet Protocol Socket "DirectIP" GSS Interface

DirectIP is a socket-based delivery mechanism for Mobile Originated and Mobile Terminated SBD Messages. The name references the basic concept of directly connecting to a distant IP address for data delivery and reception. This section of the SBD Developers Guide is the DirectIP interface control document between the GSS and the Vendor Application(s). It does not provide details of the DirectIP processing within the GSS.


The Vendor Application interface to DirectIP requires software development by the applications developer. Iridium does not provide finished software, reference code, or applications software support for the Vendor Application. Applications developers will need to develop software to handle both Mobile Originated and Mobile Terminated DirectIP Connections.

5.1 DirectIP Concept of Operation

5.1.1 DirectIP Overview

DirectIP is an efficient method of transferring SBD data between the Iridium Gateway and the Vendor Application. DirectIP provides lower delivery latency than the existing email protocol. It consists of a specialized socket-oriented communications protocol that utilizes direct connections between the Iridium gateway SBD subsystem (GSS) and the Vendor Application.

Similar to SBD processing of MO and MT e-mail messages, DirectIP is composed of separate MO and MT GSS components. The MO DirectIP component acts as a client to the Vendor MO DirectIP server application. The MT DirectIP component acts as a server to the vendor MT DirectIP clients. In other words, the GSS MO component seeks to establish a connection to the vendor server for MO transfers while the GSS MT component actively listens for connections from the vendor clients for MT transfers. In either direction, clients only attach to the server when they are delivering data.

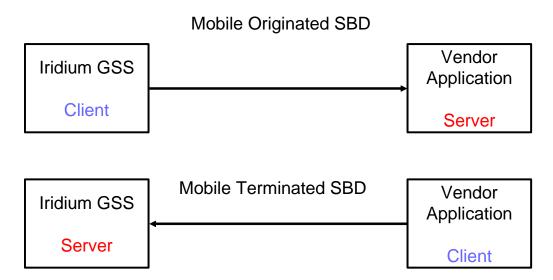

Both MO DirectIP and MT DirectIP protocols utilize bi-directional TCP/IP socket connections. The MO DirectIP protocol only delivers SBD MO messages from the GSS client to the vendor server. No acknowledgement is expected from the server. In contrast, the MT DirectIP protocol delivers SBD MT messages from the vendor client to the GSS server, and a confirmation is passed from the server back to the client indicating the success or failure of the processing of the message.

The specific TCP/IP ports and IP addresses for both MO and MT DirectIP are provided to authorized VARs in a separate document available from their Iridium account manager.

5.1.2 MO DirectIP Deliveries

Upon the completion of an SBD session between the IMEI and the GSS, the GSS opens a socket, connects to the Vendor Application, and delivers the MO message including SBD session descriptors. Messages to the same Vendor Application are delivered in a first-in-first-out (FIFO) manner so that they are delivered in the same sequence that they are received by the GSS. All other messages destined for the same Vendor Application are queued behind the first message while it is being delivered. Only one message is delivered per socket connection. Once a socket connection is established, a single MO message is delivered, and then the socket is closed. This sequence is repeated for every MO message queued for delivery to the vendor server.

5.1.2.1 Vendor Application Server Unavailable

If the initial attempt to connect to the vendor application times out, the subsequent MO message delivery will not take place and subsequent connection attempts will be made. A retry scheme has been implemented to back off delivery attempts to unreachable servers. Retries will occur after 1, 5, 10, 20, 30, 60, 120, 240, and 360 seconds with the maximum of 360 seconds used for every retry thereafter. Connection attempts continue to be made for up to 12 hours. Each individual message has a lifetime of 12 hours starting at the time that the payload was received at the GSS. If it is not able to be delivered within this lifetime, it will be marked as "DirectIP Timeout" in the SBD database and removed from the delivery queue.

Up to 10,000 messages may be queued for a specific Vendor Application. If this limit is exceeded, payloads will be deleted from the front of the queue (the "oldest" payloads.)

5.1.3 MT DirectIP Deliveries

When an MT message is to be queued, the Vendor Application client opens a socket, connects to the GSS server, and delivers the MT message with disposition (see Section 5.1.4). The GSS server then parses the message, inserts the payload into the database, and sends a confirmation message back to the Vendor Application.

Once the GSS server has inserted the payload into the database, a different process within the GSS queues the payload for delivery and assigns an MTMSN to each. If the payload is first in the queue, it is marked as "Queued" and is ready for immediate delivery. Otherwise, it is marked as "Pending."

5.1.4 MT Disposition Flags

Additional features related to MT deliveries are available using MT DirectIP. These features will not be available through other means of queuing MT messages such as email. They are flagged using the MT disposition field in the MT header and are described in the following sections. The disposition field itself is a 2-byte bit map with 16 available flags. Those flags defined are shown in Table 5-14 MT Disposition Flags.

5.1.4.1 Flush MT Queue

When this flag is set, all payloads in the MT queue for the given IMEI are deleted. This provides an integrated method to administer MT queues.

When a payload is included in the MT message, it will be queued after the currently queued payloads, if any, have been deleted. This enables the Vendor Application to maintain a queue depth of one, overwriting any previous payload queued.

5.1.4.2 Send SBD Ring Alert – No MT Payload

When this flag is set, the GSS is directed to send a SBD Ring Alert to the specified IMEI within the bounds of normal SBD Ring Alert processing even though no new MT message is being queued. The bounds refer to the IMEI's SBD Ring Alert enable flag and SBD Network Registration (attach/detach) status. If SBD Ring Alerts are enabled for this IMEI, and it is attached 9location is know), A Ring Alert will be sent to the field device, followed by a 2nd ring 20 seconds later (ie. Normal Ring Alert rules apply.) For normal MT SBD Ring Alerts two SBD Ring Alerts are sent.

If either of these conditions are not met, no SBD Ring Alert will be sent. If a SBD Ring Alert is sent, and an MT payload is already queued, that payload will be delivered when the IMEI retrieves the MT-SBD message. This flag has no alternate effect if a new MT payload is included, and the message will be processed normally. If a MT-SBD Message is included, the MT-SBD message delivery will fail with a protocol error. Note that excessive use of this feature could result in restrictions being implemented. This feature should not be used to compensate for poor Field Application design or situations where the IMEI may be frequently powered off. In such cases the Field Application should cause a Mailbox check to occur by executing a +SBDIX command with an empty send buffer. See the Section 0 for more details.

5.2 MT and MO DirectIP Application Requirements

5.2.2 MO DirectIP Server/Client Requirements

5.2.2.1 MO GSS Client Requirements

- A. The client will seek to establish a TCP/IP socket connection to the IP address and port provisioned for the originating IMEI.
- B. Once connected, the client will transmit the MO payload and close the socket connection.
- C. If no connection is established, the client will implement the retry scheme outlined in Section 5.1.2.1.
- D. Once the message has been transmitted, the client will close the socket connection. No acknowledgement from the server will be expected.

5.2.2.2 <u>MO Vendor Server Requirements</u>

- A. The server will listen for TCP/IP socket connections on a specific port. This specific port is what has been specified during provisioning.
- B. Once connected, the server will receive the entire MO message before parsing.
- C. The server will allow the GSS client to close the socket connection.
 - a. Client Side (DMO process at IST)
 - i. Open connection (a socket connection)
 - ii. Send data over socket
 - iii. Close connection (close the socket)
 - b. Server Side (Customer App)
 - i. Accept Connection
 - ii. Read header body
 - iii. Close socket. (This action allows the socket to be returned back into available use)
 - iv. A common TCP/IP 'best practice' is to close the socket connection from both sides.

5.2.3 MT DirectIP Server/Client Requirements

5.2.3.1 MT GSS Server Requirements

- A. The server will listen for TCP/IP socket connections on a specific port.
- B. Once connected, the server will receive the entire MT message before parsing.
- C. The server will validate the message to ensure it meets the following criteria:
 - I. IMEI is of a valid format and is provisioned
 - II. All other input values in the MT header are valid
 - III. Payload length does not exceed the specified maximum (See Section 1.5)
 - IV. GSS resources are available (the given IMEIs MT queue, overall number of active MT users)
- D. The server will send a confirmation message indicating the success or failure of processing the message.
- E. The server will terminate the socket connection once the confirmation message is sent.
- F. If the connection fails at any point prior to sending the confirmation message, the MT message will be dropped.

5.2.3.2 MT Vendor Client Requirements

- A. The client will seek to establish a TCP/IP socket connection to the IP address of the GSS MT DirectIP server on a specified port.
- B. Once connected, the client will transmit the MT payload and wait for the confirmation message.
- C. Once the confirmation message has been transmitted / received, the client will allow the server to close the socket connection.

5.3 MO and MT Message Specifications

5.3.2 Overall Message Structure

The overall message structure for both MO and MT DirectIP is shown in Table 5-1. When a connection is first established, the receiving application will receive three bytes. The first is a general DirectIP protocol revision number (this document describes revision 1). The following two bytes indicate the number of bytes that make up the body of the message that is made up of some number of information elements.

Table 5-1 Overall Message Format

Field Name	Data Type	Length (bytes)	Range of Values
Protocol Revision Number	char	1	1
Overall Message Length	unsigned short	2	N
Information Elements Related to Message	variable	N	See Section 5.4

5.3.2.1 <u>Message Length</u>

The message length value indicates the number of bytes that make up the body of the message being transferred following the initial three bytes. This enables the receiving end to know deterministically when all bytes transferred have been received. This is particularly relevant when multiple receives over the socket are required to read in the entire message.

5.3.2.2 Byte Alignment

The entire message transfer will be treated as a byte stream. This enables the various data types contained within the message to be transferred with no consideration given to the byte alignment of the data types. This also allows for the compacting of the fields to the appropriate sizes. Multi-byte fields are transmitted in network byte order (big endian). For example the four-byte field 0x0a0b0c0d is transmitted as follows:

byte	address	0	1	2	3
bit	offset	01234567	01234567	01234567	01234567
	binary	00001010	00001011	00001100	00001101
	hex	0a	0b	0 c	0d

5.3.3 Information Elements

To maintain maximum flexibility within the protocol, all data to be transferred has been segmented into information elements (IEs). Those IEs currently defined are shown in detail in Section 5.4. The general format of each IE is the same and is shown in Table 5-2.

Table 5-2 Information Element General Format

Field Name	Data Type	Length (bytes)	Range of Values
Information Element ID (IEI)	char	1	See Table 5-7
Information Element Length	unsigned short	2	Variable
Information Element Contents	variable	N	Section Information Element Specifications

5.3.3.1 Information Element Identifiers

Each IE begins with a 1-byte information element identifier (IEI) that uniquely defines the following 2+N bytes. A complete list of the IEs and their associated IEIs is shown in Table 5-7.

5.3.3.2 Information Element Length

The two bytes following the IEI give the length of the IE in bytes following the initial three bytes. While the length for all currently defined IEs other than the MO and MT payloads may be represented with a 1-byte field, a 2-byte field is used for consistency across all IEs.

The primary goal for including the length field in every IE as a standard is to allow for new IEs in the future that may or may not be recognized by a Vendor Application based the vendor's upgrade path. If the application does not recognize an IE, it will know that it can read the next two bytes as a length and then skip that number of bytes before checking for the next IEI.

5.3.3.3 Parsing Information Elements

Once an entire message has been received, a parser will step through the bytes. The first will be an IEI followed by two bytes representing the number of bytes in the IE following the length. How to interpret these bytes is dictated by the IE type as indicated by the IEI. Once they are parsed, and if there are additional bytes received in the overall message, the next IEI may be checked, etc. If there are too many or too few bytes received as determined by the parser, the overall message will be dropped. For MT message processing, an error will be returned in the confirmation message.

5.3.4 Successful MO Message Delivery Example

Table 5-3 gives an example of a byte stream for a typical MO DirectIP message following a successful SBD session. Note that the IMEI has been provisioned such that the geolocation information is not included in the message.

Table 5-3 MO DirectIP Message Delivery Example - Successful SBD Session

Field Name	Data Type	Length (bytes)	Value	CODE
Protocol Revision Number	char	1	1	01
Overall Message Length	unsigned short	2	104	0068
MO Header IEI	char	1	0x01	01
MO Header Length	unsigned short	2	28	001C
CDR Reference (Auto ID)	unsigned integer	4	1234567	0012D687
IMEI	char	15	300034010123450	333030303334303 130313233343530
Session Status	unsigned char	1	0 (Transfer OK)	00
MOMSN	unsigned short	2	54321	D431
MTMSN	unsigned short	2	12345	3039

Time of Session	unsigned integer	4	1135950305 (12/30/05 13:45:05)	43B539E1
MO Payload IEI	char	1	0x02	02
MO Payload Length	unsigned short	2	70	46
MO Payload	char	70	Payload Bytes	0x00 x70

5.3.5 Failed MO Message Delivery Example

Table 5-4 gives an example of a byte stream for an MO DirectIP message following a failed SBD session due to an incomplete transfer. Note that no payload is included.

Table 5-4 MO DirectIP Message Delivery Example - Failed SBD Session

Field Name	Data Type	Length (bytes)	Value	CODE
Protocol Revision Number	char	1	1	01
Overall Message Length	unsigned short	2	31	1F
MO Header IEI	char	1	0x01	01
MO Header Length	unsigned short	2	28	1C
CDR Reference (Auto ID)	unsigned integer	4	1301567	0013DC3F
IMEI	char	15	300034010123450	333030303334303 130313233343530
Session Status	unsigned char	1	13 (Incomplete Transfer)	0D
MOMSN	unsigned short	2	54322	D432
MTMSN	unsigned short	2	0	0000
Time of Session	unsigned integer	4	1135950325 (12/30/05 13:45:25)	43B539F5

5.3.6 MT Message Delivery Example

Table 5-5 gives an example of a byte stream for a typical MT DirectIP message delivery.

Table 5-5 MT DirectIP Message Delivery Example

Field Name	Data Type	Length (bytes)	Value	CODE
Protocol Revision Number	char	1	1	01
Overall Message Length	unsigned short	2	97	0061
MT Header IEI	char	1	0x41	41
MT Header Length	unsigned short	2	21	0015
Unique Client Message ID	char	4	"Msg1"	4D736731
IMEI (User ID)	char	15	300034010123450	333030303334303 130313233343530
MT Disposition Flags	unsigned short	2	0x0000	0000
MT Payload IEI	char	1	0x42	42
MT Payload Length	unsigned short	2	70	46
MT Payload	char	70	Payload Bytes	0x00 X70

Table 5-6 shows one potential confirmation response. This example assumes that the given IMEI already had 49 MT message queued (max of 50).

Table 5-6 MT DirectIP Message Confirmation Example.

Field Name	Data Type	Length (bytes)	Value	CODE
Protocol Revision Number	char	1	1	01
Overall Message Length	unsigned short	2	3128	0C38
MT Confirmation Message IEI	char	1	0x44	44
MT Confirmation Message Length	unsigned short	2	1925	0785
Unique Client Message ID	integer	4	"Msg1"	4D736731
IMEI (User ID)	char	15	300034010123450	333030303334303 130313233343530
Auto ID Reference	unsigned integer	4	58473	0000E469
MT Message Status	short	2	50	0032

5.4 Information Element Specifications

5.4.2 Information Element Identifiers

Table 5-7 summarizes the IEIs for the information elements passed within the DirectIP protocol.

Table 5-7 Information Elements

Information Element	IEI Value	Described In
MO Header IEI	0x01	Table 5-8 MO DirectIP Header IE
MO Payload IEI	0x02	Table 5-9 SBD Session Status Values
MO Location Information IEI	0x03	Table 5-10 MO Payload IE Information IE
MT Header IEI	0x41	Table 5-11 MO Location Information IE
MT Payload IEI	0x42	Table 5-12 MO Location Data Format
MT Confirmation Message IEI	0x44	Table 5-13 MT Header IE

5.4.3 MO DirectIP Header

The information in this header is required as part of every DirectIP MO message delivery. It includes all of the information necessary to uniquely identify the SBD MO message. It also includes the overall SBD session status and identifier (MTMSN) for the associated MT message delivery, if any.

Table 5-8 MO DirectIP Header IE

Field Name	Data Type	Length (bytes)	Range of Values
MO Header IEI	char	1	See Table 5-7
MO Header Length	unsigned short	2	28
CDR Reference (Auto ID)	unsigned integer	4	0 - 4294967295
IMEI	char	15	ASCII Numeric Characters
Session Status	unsigned char	1	See Table 5-9
MOMSN	unsigned short	2	1 – 65535
MTMSN	unsigned short	2	0 – 65535
Time of Session	unsigned integer	4	Epoch Time

5.4.3.1 MO Header Length

This field specifies the number of bytes in the IE following this byte. Even though the length is fixed, the field is included as a standard across all IEs and to allow for maximum flexibility for future enhancements.

5.4.3.2 CDR Reference

Each call data record (CDR) maintained in the GSS Database is given a unique value independent of all other information in order to absolutely guarantee that each CDR is able to be differentiated from all others. This reference number, also called the auto ID, is included should the need for such differentiation and reference arise.

5.4.3.3 IMEI

The IMEI is the equipment identifier, unique to each Iridium field device, of the IMEI originating the MO message. It is a 15-digit number represented here in ASCII format.

5.4.3.4 Session Status

This field provides an indication of success of the SBD session between the IMEI and the GSS associated with the over-the-air payload delivery. The possible values are shown in Table 5-9. If the status was unsuccessful, no payload will be included in the MO message.

Table 5-9 SBD Session Status Values

Value	Description
0	The SBD session completed successfully.
1	The MO message transfer, if any, was successful. The MT
	message queued at the GSS is too large to be transferred
	within a single SBD session.
2	The MO message transfer, if any, was successful. The reported
	location was determined to be of unacceptable quality. This
	value is only applicable to IMEIs using SBD protocol revision 1.
10	The SBD session timed out before session completion.
12	The MO message being transferred by the IMEI is too large to
	be transferred within a single SBD session.
13	An RF link loss occurred during the SBD session.
14	An IMEI protocol anomaly occurred during SBD session.
15	The IMEI is prohibited from accessing the GSS.

5.4.3.5 MOMSN

This is the mobile-originated message sequence number (MOMSN) associated with the SBD session. This value is set by the IMEI and transmitted to the GSS as part of every SBD session. It is incremented by the IMEI after every successful session.

5.4.3.6 <u>MTMSN</u>

This is the mobile-terminated message sequence number (MTMSN) associated with the SBD session. This value is set by the GSS at the time that an MT message is queued for delivery and is unique to each IMEI. It is then sent to the IMEI as part of the MT payload transfer. If an MT payload transfer was attempted, the MTMSN will be included in the header regardless of the success of the session. If the session failed, the payload is still queued for delivery. If no MT delivery attempt was made in the session, this value will be zero.

5.4.3.7 Time of Session

This field provides a UTC timestamp of the IMEI session between the IMEI and the GSS in the format of an epoch time integer. The epoch time is the number of seconds since the start of the UNIX epoch at 1/1/1970 00:00:00.

Format: epoch time integer Resolution: 1 second

5.4.4 MO Payload

This information element includes the actual MO payload delivered from the IMEI to the GSS during the SBD session identified in the header. In an MO message delivery related to an empty mailbox check (EMBC) session or a failed session, no payload will be included.

Field Name Data Type Length (bytes) Range of Values MO Pavload IEI See Table 5-7 char 1 MO Payload Length 1 - 1960unsigned short 2 MO Payload 1 - 1960Payload Bytes char

Table 5-10 MO Payload IE

5.4.4.1 MO Payload Length

This field indicates the number of the bytes in the MO payload.

5.4.4.2 MO Payload

This is the actual content of the MO payload. The maximum MO payload size is transceiver specific. See Section 1.5 for further information

5.4.5 MO Location Information

The location values included in this IE provide an estimate of the originating IMEI's location. The inclusion of this information in an MO message delivery is optional. Whether or not it is included is established when the IMEI is provisioned and may be changed at any time via SPNet. The CEP radius provides the radius around the center point within which the unit is located. While the resolution of the reported position is given to 1/1000th of a minute, it is only accurate to within 10Km 80% of the time.

Table 5-11 MO Location Information IE

Field Name	Data Type	Length (bytes)	Range of Values
MO Location Information IEI	char	1	See Table 5-7
MO Location Info Length	unsigned short	2	20
Latitude/Longitude	double	7	See Table 5-12
		· · · · · · · · · · · · · · · · · · ·	
CEP Radius	unsigned integer	4	1 – 2000

5.4.5.1 MO Location Information Length

This field specifies the number of bytes in the IE following this byte. Even though the length is fixed, the field is included as a standard across all IEs and to allow for maximum flexibility for future enhancements.

5.4.5.2 MO Latitude and Longitude

The latitude and longitude provide a center point of the estimated location and are derived from the LGC coordinates output from the CPLD exchange during the SBD session.

Table 5-12 MO Location Data Format

	Location Data Format										
MSB			Bit Po	osition			LSB	Byte	Description & Allowed Values		
0	1	2	3	4	5	6	7	Number	·		
	Reserved Format Code NSI EWI			EWI	1	Reserved & Format Code: 0 (all other values are reserved) NSI: North/South Indicator (0=North, 1=South) EWI: East/West Indicator (0=East, 1=West)					
	Latitude (degrees)							2	Decimal Range: 0 to 90 Hex Range: 0x00 to 0x5A		
Latitude (thousandths of a minute, MS-Byte)					ute, MS-	Byte)		3	Decimal Range: 0 to 59,999 (unsigned integer, American notation)		
Latitude (thousandths of a minute, LS-Byte)					nute, LS-	Byte)		4	Hex Range: 0x0000 to 0xEA5F		
Longitude (degrees)					Longitude (degrees)			5	Decimal Range: 0 to 180 Hex Range: 0x00 to 0xB4		
Longitude (thousandths of a minute, MS-Byte)					nute, MS	s-Byte)		6	Decimal Range: 0 to 59,999 (unsigned integer, American notation)		
Longitude (thousandths of a minute, LS-Byte)					inute, LS	-Byte)		7	Hex Range: 0x0000 to 0xEA5F		

Resolution: thousandths of a degree

5.4.5.3 <u>CEP Radius</u>

The CEP radius provides the radius (in Kilometers) around the center point within which the IMEI is located with an 80% probability of accuracy.

5.4.6 MT DirectIP Header

The information in this header is required as part of every DirectIP MT message delivery.

5.4.6.1 MT Header Length

This field specifies the number of bytes in the IE following this byte. Even though the length is fixed, the field is included as a standard across all IEs and to allow for maximum flexibility for future enhancements.

Table 5-13 MT Header IE

Field Name	Data Type	Length (bytes)	Range of Values	
MT Header IEI	char	1	See Table 5-7	
MT Header Length	unsigned short	2	21	
Unique Client Message ID	char	4	From client (not MTMSN)	
IMEI (User ID)	char	15	ASCII Numeric Characters	
MT Disposition Flags	unsigned short	2	Bit Map: See Table 5-14 MT Disposition Flags	

5.4.6.2 <u>Unique Client Message ID</u>

The vendor client will include a 4-byte message ID unique within its own application. This value is not used in any way by the GSS server except to include it in the confirmation message sent back to the client. This is intended to serve as a form of validation and reference for the client application. The data type is specified to be characters. However, from the client's perspective, the four bytes may be a character string, an integer, etc.

5.4.6.3 IMEI

The IMEI is the equipment identifier, unique to each Iridium field device, of the MT message destination IMEI. It is a 15-digit number represented here in ASCII format.

5.4.6.4 <u>MT Disposition Flags</u>

These flags are set by the vendor client to trigger particular actions by the GSS. Combinations of flags are allowed. The field is a 2-byte bit map with 16 available flags. Those defined are shown in Table 5-14.

Table 5-14 MT Disposition Flags

Disposition Flag	Value	Description	
Flush MT Queue	0x0001	Delete all MT payloads in the IMEI's MT queue	
Send Ring Alert – No MTM	0x0002	Send ring alert with no associated MT payload (normal ring alert rules apply)	

5.4.7 MT Payload

This information element includes the actual MT payload to be queued and delivered over the air to the destination IMEI. This inclusion of this IE in the MT delivery is optional based on the disposition flags included in the header.

Table 5-15 MT Payload IE

Field Name	Data Type	Length (bytes)	Range of Values
MT Payload IEI	char	1	See Table 5-7
MT Payload Length	unsigned short	2	1 – 1890
MT Payload	char	1 – 1890	Payload Bytes

5.4.7.1 MT Payload Length

This field indicates the number of the bytes in the MT payload.

5.4.7.2 MT Payload

This is the actual content of the MT payload. The MT payload size is transceiver dependent. See Section 1.5 for details.

5.4.8 MT Message Confirmation Message

A confirmation message indicating the status of the processing of the MT message is sent to the vendor client from the GSS for every MT message received.

Table 5-16 MT Confirmation Message IE

Field Name	Data Type	Length (bytes)	Range of Values
MT Confirmation Message IEI	char	1	See Table 5-7
MT Confirmation Msg Length	unsigned short	2	25
Unique Client Message ID	integer	4	From Client (not MTMSN)
IMEI (User ID)	char	15	ASCII Numeric Characters
Auto ID Reference	unsigned integer	4	0 – 4294967295
MT Message Status	short	2	Order of message in IMEI's queue or error reference (see Table 5-17 MT Message Status)

5.4.8.1 MT Confirmation Message Length

This field specifies the number of bytes in the IE following this byte. Even though the length is fixed, the field is included as a standard across all IEs and to allow for maximum flexibility for future enhancements.

5.4.8.2 Unique Client Message ID

This field is the unique client IE sent in the MT header in the message sent to the GSS. This is intended to serve as a form of validation and reference for the client application.

5.4.8.3 <u>IMEI</u>

The IMEI is the equipment identifier, unique to each Iridium field device, of the MT message destination IMEI. It is a 15-digit number represented here in ASCII format.

5.4.8.4 Auto ID Reference

This value provides a unique reference for identifying the MT payload within the SBD database. It is assigned at the time that the payload is inserted into the database as a new record, but prior to the record being queued for delivery and the MTMSN is assigned. This reference is passed instead of the MTMSN in

order for the GSS server to remain independent of all other GSS processes and to allow the socket connection to be closed as soon as possible. This value will be zero when there is an error in processing the message.

5.4.8.5 <u>MT Message Status</u>

This field is the status value that is returned with every confirmation indicating that the overall MT message was received and validated and that the payload was queued successfully or that a failure occurred. If successful, the value is a positive number indicating the order of the received payload in the IMEI's associated MT message queue. If not successful, the value will be a negative number serving as an error code specifying the problem detected. Table 5-17 MT Message Status shows the possible status values including the error codes. Note that the last two error values (-8 and -9) only apply when the "Send Ring Alert" disposition flag has been set.

Table 5-17 MT Message Status

Status	Description
1 – 50	Successful, order of message in the MT message queue
0	Successful, no payload in message
-1	Invalid IMEI – too few characters, non-numeric characters
-2	Unknown IMEI – not provisioned on the GSS
-3	Payload size exceeded maximum allowed
-3	(See Section 1.5)
-4	Payload expected, but none received
-5	MT message queue full (max of 50)
-6	MT resources unavailable
-7	Violation of MT DirectIP protocol error
-8	Ring alerts to the given IMEI are disabled
-9	The given IMEI is not attached (not set to receive ring alerts)
-10	Source IP address rejected by MT filter
-11	MTMSN value is out of range (valid range is 1 – 65,535)

6 Optimal Message Size Selection

There are two primary factors that affect optimal message size: Economic and technical.

6.1 Economic Message Size

The developer should take into account the minimum billable message size of the service plan that the ISU will be activated with on the Iridium network. E.g. For a minimum billable message size of 30 bytes, any message actually sent with less than 30 bytes will be billed at 30 bytes regardless of the actual number of bytes sent below 30. Note that this is a minimum and not an increment. E.g. for a minimum billable message size of 30 bytes all messages over 30 bytes will be billed at the exact number of bytes transmitted.

The developer should maximize the use of these bytes, and can do so in a number of ways. E.g. the business requirement is to report position every ten minutes. The position information in this case is fifteen bytes. The developer could therefore collect an intermediate position every five minutes and transmit both positions at the required ten-minute intervals to provide more detailed positioning information.

6.2 Technical Message Size

Each type of message whether MO or MT is broken into segments for actual transmission. The length of the segment relative to the absolute message length depends on whether it is a MO or MT message. Between each segment additional signaling and network overhead occurs. If optimizing for minimal latency or power consumption then the minimal number of message segments should be used.

Important: See Section 1.5 for message size limits that are dependent on the transceiver type.

6.2.2 Mobile Originated Message Size

First user data segment size	70 bytes
Subsequent user data segment size	135 bytes

E.g. for a 1960 byte message there will be one segment of 70 bytes and 14 segments of 135 bytes E.g. for a 71 byte message there will be one segment of 70 bytes and one segment of 1 byte.

6.2.3 Mobile Terminated Message Size

User data segment size	135 bytes

E.g. for a 1890 byte message there will be 14 segments of 135 bytes E.g. for a 71 byte message there will be one segment used.

7 Iridium Short Burst Data Service Security Features

7.1 Purpose

The purpose of this section is to provide information sufficient for an Iridium Value Added Reseller to be able to understand the basic security features of Iridium's Short Burst Data Service. It is assumed that the reader is familiar with the Iridium system and Short Burst Data.

7.2 Iridium Security Features

The Iridium System supports the GSM-specified algorithm A3 for authentication security, but not algorithms A5/A8 for channel encryption. Table 7-1 summarizes the security features explicitly designed into the Iridium system. Note that A3 is only used in transceivers using a SIM card.

Table 7-1: Baseline Iridium Security Features

Authentication	A3 (128-bit Key)
Equipment Anti-Theft Validation	Global Equipment Identity Register
Anonymity (User location confidentiality)	TMSI based
Signaling Message Confidentiality	Not Available

7.2.2 Authentication Security

Note that Authentication Security is only applicable to Iridium Subscriber Units (ISUs) that utilize a SIM card. The 9601 and 9602 SBD Transceiver do not utilize a SIM card and thus this section is not applicable to it. The Iridium authentication process is adapted without change directly from the GSM specifications. The GSM algorithm A3 is used to encrypt authentication information transmitted over the air interface.

- Authentication encryption
 - Designed to prevent ISU cloning fraud
 - GSM encryption algorithm A3 is executed on SIM card to generate Signed Result (SRES) response based on the following inputs
- Secret key parameter stored in SIM card
- RAND parameter supplied by network

Iridium Channel Security

SBD uses the signaling channel and is afforded some security by the limited distribution of the air interface and feeder link interface specifications. The Iridium Air Interface Specification is made available only to Iridium Subscriber Unit (ISU) manufacturers. Feeder link interface specifications are not distributed outside of the original manufacturer.

Figure 7-1 identifies the opportunities for surreptitious monitoring of Iridium bearer channels. An eavesdropper could, in principle, monitor L-band uplink and downlink channels, or K-band uplink and downlink feeder link channels.

- L-Band Channels
 - Uplink, from ISU to Space Vehicle (SV)
 - Downlink, from SV to ISU
- K-Band Channels
 - Uplink, from gateway to Space Vehicle (SV)
 - Downlink, from SV to gateway

7.2.3.1 L-Band Channel Security

To successfully monitor an L-band channel, an eavesdropper must be located within the transmit range of the ISU being monitored, approximately 10 to 30 km from the transmitting ISU. ISU downlink L-Band transmissions could be received over a much wider area. A single SV beam covers an area of about 400 km in diameter. As long as the eavesdropper is within the coverage area of a common beam, downlink L-Band transmissions could be received.

Fortunately, the complexity of the Iridium air interface should make the challenge of developing an Iridium L-Band monitoring device very difficult and probably beyond the reach of all but the most determined adversaries. Among the complications are:

- Large, continually changing Doppler shifts
- Frequent inter-beam and inter-SV handoffs
- Time-division multiplexed burst mode channels
- Complicated modulation, interleaving and coding

Iridium Constellation L-Band K-Band Downlink Downlink K-Band L-Band Uplink Uplink Miii ISU Gateway Monitor

Figure 7-1: Iridium Link Monitoring Opportunities

7.2.3.2 K-Band Channel Security

To successfully monitor a K-band feeder link channel, a fairly sophisticated monitoring device must be located in the general proximity of an Iridium gateway. The receiver must have a high-gain antenna capable of tracking SVs as they move from horizon to horizon.

Again, the complexity of the feeder link interface poses a formidable technical challenge for prospective eavesdroppers. The cost of the monitoring device alone would be a strong deterrent. Among the technical complications are

- Large, continually changing Doppler shifts
- High capacity, 3.072 Mbps channels
- High-gain tracking antenna required
- Must reacquire new SV every 10 minutes

7.2.4 Gateway to Vendor Application

While this document focuses on the Iridium network, security should be looked at from an end-to-end solution perspective. SBD communications to and from the Iridium Gateway can be protected by two additional cost items:

- (A) Virtual Private Network and/or
- (B) Private leased line communication

7.2.5 Additional Considerations

Depending on the level and sensitivity of the information being communicated the application developer may require additional security. Any additional security measure would require encrypting the information before transmitting to the destination point. This is referred to generically as application level encryption and requires the developer to select and implement an encryption method that provides the required level of security for the application. Any increase in the size of the actual information being sent due to the encryption is not distinguished by the Iridium network from normal user data and the Iridium network will rate the total size of the data message sent.

8 Basic Trouble Shooting

8.1 Hardware Requirements

Table 7-1 lists the available hardware that supports SBD. Firmware versions can be determined by issuing AT+CGMR to the transceiver.

Table 7-1 Hardware Firmware compatibility

L-Band Transceiver	Transceiver	Minimum Firmware revision	Requires Valid SIM
Product Number	"Code Name"	(see note)	Card?
9522	Sebring	SAC03xx [where xx are integers]	Yes
9522A	Daytona	IS05001	Yes
9522B	LBT Transceiver	ST09005	Yes
9601	SBD Transceiver	TD05002	No
9602	SBD Transceiver	TA10003	No

Note: The minimum firmware revision will not support every SBD feature. Developers are advised to use the most recent firmware revision available.

8.2 Provisioning

L-Band Transceivers require two key items in order to be operational on the Iridium Network:

- The IMEI (a 15 digit number beginning with 30 that identifies the hardware device) must be correctly
 provisioned in Iridium's SPNet with a valid destination defined (email address, another ISU's IMEI or IP
 Address), to which the MO-SBD messages are to be sent.
- A correctly provisioned SIM card must be installed in the LBT (9522, 9522A or 9522B.=).or the 9555 and 9505A handsets. This can be one of two flavors:
 - Any standard Iridium SIM card where the LBT will be used for voice and other data services
 - A SBD "Register only" or "Automatic Check" SIM for LBTs that will be just used for SBD
- The 9601 and 9602 SBD Transceiver does not require a SIM card.

It is important to check that both the IMEI and SIM are properly provisioned. Without verifying these items there is little value in continuing troubleshooting. It is also important to verify that the SIM you are checking on in SPNet is the same SIM that is physically installed in the LBT.

8.3 SIM PIN

<u>Iridium SIM cards are typically created with the PIN activated. The application developer should take this into account in the development of the Field Application.</u>

This section does not apply to 9601 transceivers as they do not use a SIM card.

In order to verify that the SIM does not have a PIN utilize the following command: AT+CPIN as described in [1]. If the SIM has a PIN it will require the developer's application to input this PIN correctly via AT Command. If this PIN is not input, the LBT will not be able to register, place calls, or receive calls. Furthermore, if the PIN is input 3 times incorrectly the SIM will become "blocked". To unblock the SIM requires sending the AT Command with the PIN1 Unblocking Key (PUK1). The PUK1 is an 8-digit sequence that can be provided by the SP/VAR. The application developer can use "AT+CPIN?" to determine what code the SIM is waiting for or expecting.

In order to turn off the PIN use the following command: AT+CLCK as described in [1]. However Iridium recommends that developers not remove the PIN unless the commercial Field Application will be design to detect

Iridium Short Burst Data Developers Guide V2.3.1

and remove the PIN. Commercial SIM cards are issued with the PIN activated.

8.4 Network Registration Status

For the 9522B LBT the following should be checked, it does not apply to the 9601 or 9602. Check the registration status by issuing the check registration status command: AT+CREG as detailed in [1]. In order to use the Iridium network a SIM based ISU must be registered with a gateway (telephony registration.) If an ISU is not registered then many of the AT commands and functions of the ISU will be inoperable. Registration cannot be disabled. If the unit is not registered:

- Check the provisioning of the SIM on SPNet
- Power the unit off, wait 10 seconds, power the unit on again and reissue the +CREG command
- If the unit still has not registered, ensure that an antenna is connected correctly and that it has clear line of sight to the sky through 360 degrees azimuth. Then proceed to the "Satellite Signal Strength Indicator" section

8.5 Satellite Signal Strength Indicator

Issue the AT+CSQ command as detailed [1] and observe the response.

Signal strength of 0 indicates that:

- Either the antenna is not connected properly;
- The signal loss in the antenna cable, connectors is too high resulting in excessive signal loss.
 - Ensure that the cable length, type and design frequency is appropriate for Iridium.
 - Iridium operates between 1616 and 1625 MHz
 - The entire RF loss of the antenna installation (including cable, connectors and lightning arrestors) shall not exceed 3dB.
- The antenna does not have a clear view of the sky. The optimal view is 360 degrees of azimuth and above 8 degrees of elevation.
- Interference from a local high power L-Band transmitter. E.g. an Inmarsat terminal.

Signal strength of 1 or higher should permit an SBD call to be made. Check signal strength over a period of 10 to 20 minutes to characterize the received signal strength for your antenna location. If you consistently see:

- A signal strength of 4 or higher you appear have a good installation.
- A varying signal strength ranging from 0/1 to 4/5 then your antenna location appears to have partial line of sight blockage. Identify the blockage and determine if you can relocate the antenna.

It is recommend that development, demonstration and test platforms have high quality installations with optimal line of sight conditions. Having an ideally located antenna removes the possibility that poor signal strength causes application issues and enables more rapid application debugging.

8.6 Power Supply

It is critical that an appropriate power supply is utilized. While an ISU can turn on using only a portion of the specified maximum current, registration and transmission of data messages will not occur if the transceiver cannot draw enough current from the power source. An under rated power supply can cause erratic behavior when using SBD. Ensure that your power supply can supply the specified peak maximum current for the transceiver that you are using. Check the power supply while operating the transceiver by using an ammeter and volt meter.