



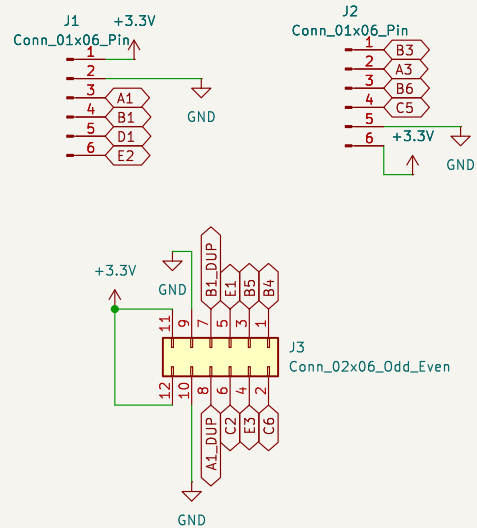

Why on earth are A1 and B1 connected to two different PMODs, when there are unused pins on the FPGA?

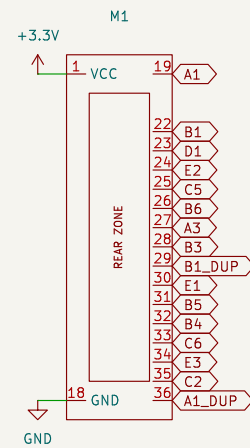

Sheet: /
File: icesugar-nano-carrier.kicad_sch

Title:

Size: A4

Date:

KiCad E.D.A. 9.0.1

Rev:

Id: 1/1