

Energy Efficient Practices  
(EEP)

Unit 2 notes

2IEE0304T

Part I

# Electric Supply System

- *The conveyance of electric power from a power station to consumers' premises is known as **electric supply system**.*
- An electric supply system consists of three principal components viz., the **power station**, the **transmission lines** and the **distribution system**. *& Retail*
- Electric power is produced at the power stations which are located at favourable places, generally quite away from the consumers.

# Electric Supply System

- It is then transmitted over large distances to load centres with the help of conductors known as **transmission lines**.
- Finally, it is distributed to a large number of small and big consumers through a **distribution network**.
- The electric supply system can be broadly classified into
  - d.c. or a.c. system
  - overhead or underground system.

# Typical a.c. Power Supply Scheme

## ○ Generating station :


- G.S. represents the generating station where electric power is produced by 3-phase alternators operating in parallel.

- The usual generation voltage is 11 kV

- For economy in the transmission of electric power, the generation voltage (*i.e.*, 11 kV) is stepped upto 132 kV (ormore)  
*(using 3phase Transformer)*

## ○ Primary transmission.


- The electric power at 132 kV is transmitted by 3-phase, 3-wire overhead system to the Outskirts of the city.
- This forms the primary transmission.

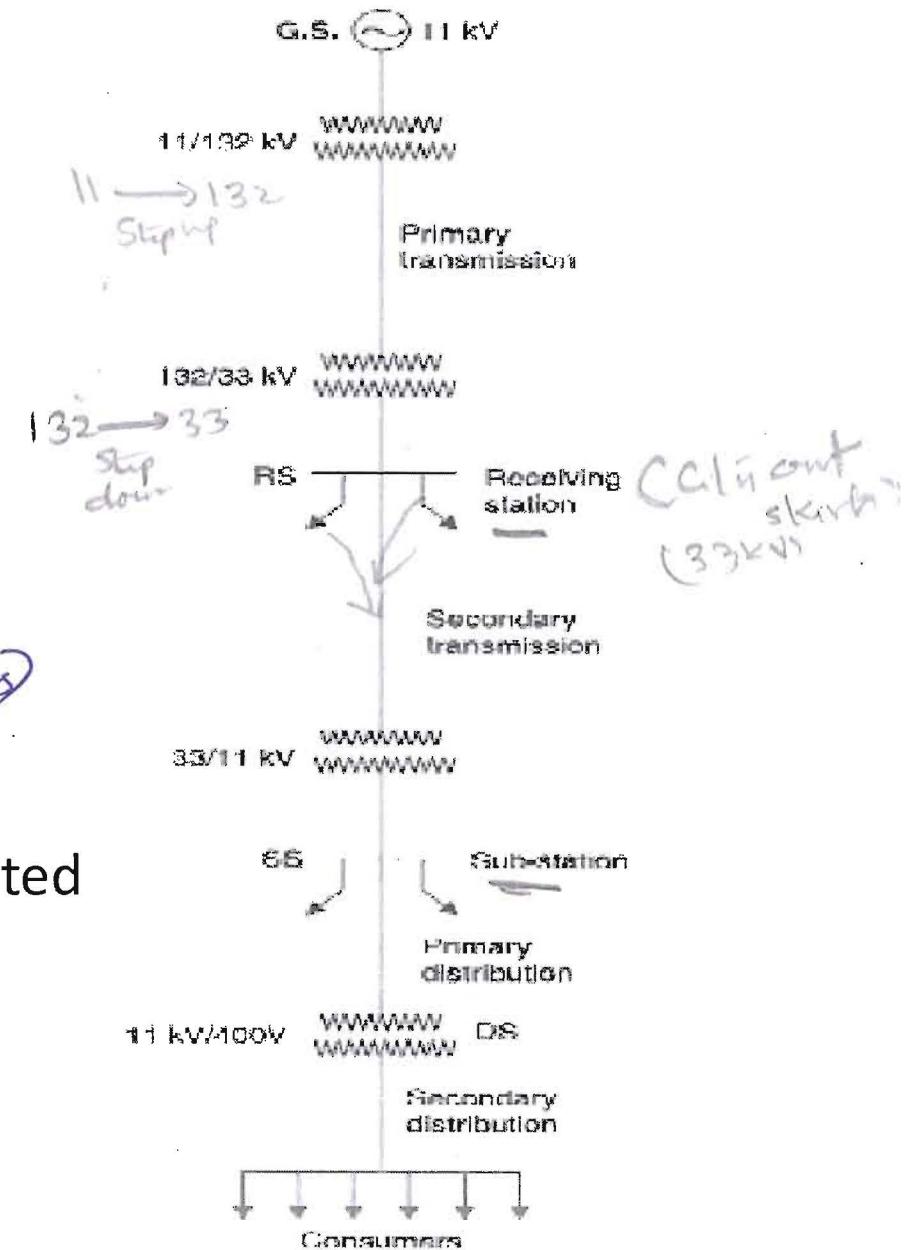

# Typical a.c. Power Supply Scheme

## ○ Secondary transmission.:

- The primary transmission line terminates at the receiving station (RS) which usually lies at the outskirts of the city.
- At the receiving station, the voltage is reduced to 33kV by step-down transformers.
- From this station, electric power is transmitted at 33kV by 3-phase, 3-wire overhead system to various sub-stations (SS) located at the strategic points in the city.
- This forms the secondary transmission.

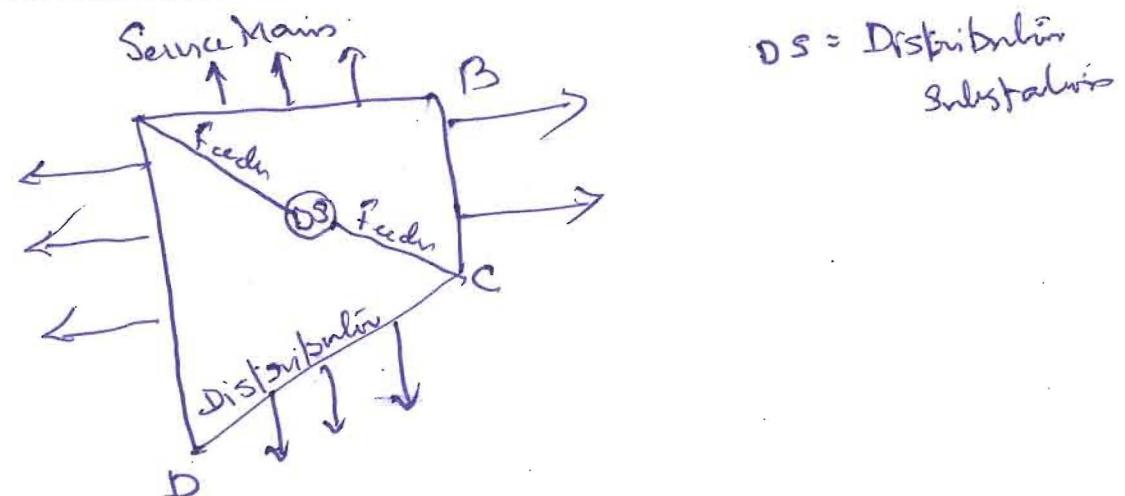

Next See (A)

strategic points in the city. This forms the secondary transmission. Fig. 7.2

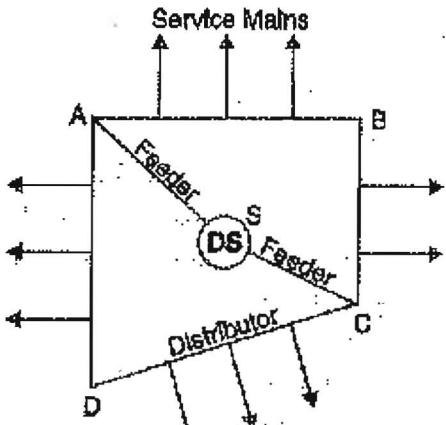


Fig. 7.2

(A)

(<https://www.eeeguide.com/wp-content/uploads/2018/05/Electric-Supply-System-1.jpg>)

**4. Primary distribution:** The secondary transmission line terminates at the sub-station (SS) where voltage is reduced from 33 kV to 11kV, 3-phase, 3-wire. The 11 kV lines run along the important road sides of the city. This forms the primary distribution. It may be noted that big consumers (having demand more than 50 kW) are generally supplied power at 11 kV for further handling with their own sub-stations.

$33\text{ kV} \rightarrow 11\text{ kV}$   
Road sides

**5. Secondary distribution:** The electric power from primary distribution line (11 kV) is delivered to distribution sub-stations (DS). These sub-stations are located near the consumers localities and step down the voltage to 400 V, 3-phase, 4-wire for secondary distribution. The voltage between any two phases is 400 V and between any phase and neutral is 230 V. The single-phase residential lighting load is connected between any one phase and neutral, whereas 3-phase, 400 V motor load is connected across 3-phase lines directly.

It may be worthwhile to mention here that secondary distribution system consists of feeders, distributors and

[hybrid-parameters-articles/](#)

[Large Signal or Power](#)

[Amplifiers](#)

[\(https://www.eeeguide.com/large-signal-or-power-amplifiers-articles/\)](https://www.eeeguide.com/large-signal-or-power-amplifiers-articles/)

[Linear Applications of Op-Amp](#)

[\(https://www.eeeguide.com/linear-applications-of-op-amp-articles/\)](https://www.eeeguide.com/linear-applications-of-op-amp-articles/)

[Linear Wave Shaping](#)

[\(https://www.eeeguide.com/linear-wave-shaping-articles/\)](https://www.eeeguide.com/linear-wave-shaping-articles/)

[Modulation and Demodulation](#)

[\(https://www.eeeguide.com/modulation-and-demodulation-articles/\)](https://www.eeeguide.com/modulation-and-demodulation-articles/)

[Multistage Amplifiers](#)

[\(https://www.eeeguide.com/multistage-amplifiers-articles/\)](https://www.eeeguide.com/multistage-amplifiers-articles/)

[Non Linear Wave Shaping](#)

[\(https://www.eeeguide.com/non-linear-wave-shaping-articles/\)](https://www.eeeguide.com/non-linear-wave-shaping-articles/)

[Number System and Codes](#)

[\(https://www.eeeguide.com/number-system-and-codes-articles/\)](https://www.eeeguide.com/number-system-and-codes-articles/)

[Op-Amp with Negative Feedback](#)

[\(https://www.eeeguide.com/op-amp-with-negative-feedback-articles/\)](https://www.eeeguide.com/op-amp-with-negative-feedback-articles/)

[Operational Amplifiers and their Parameters](#)

[\(https://www.eeeguide.com/operational-amplifiers-and-their-parameters-articles/\)](https://www.eeeguide.com/operational-amplifiers-and-their-parameters-articles/)

[Operational](#)

PTV

No consumer is given direct connection from the feeders. Instead, the consumers are connected to the distributors through their service mains.

**Note.** A practical power system has large number of auxiliary equipments (e.g., fuses, circuit breakers, voltage control devices etc.). However, such equipments are not shown in Fig. 7.1. It is because the amount of information included in the diagram depends on the purpose for which the diagram is intended. Here our purpose is to display general lay out of the power system (<http://www.circuitstoday.com>). Therefore, the location of circuit breakers, relays etc., is unimportant.

Further, the structure of power system is shown by a single line diagram. The complete 3-phase circuit is seldom necessary to convey even the most detailed information about the system. In fact, the complete diagram is more likely to hide than to clarify the information we are seeking from the system viewpoint.

[\(/#facebook\)](#) [\(/#twitter\)](#) [\(/#pinterest\)](#) [\(/#tumblr\)](#)  
[\(/#linkedin\)](#) [\(/#buffer\)](#) [\(/#diigo\)](#) [\(/#mewe\)](#)  
[\(/#reddit\)](#) [\(/#blogger\)](#) [\(/#pocket\)](#) [\(/#refind\)](#)

(<https://www.addtoany.com/share#url=https%3A%2F%2Fwww.eeguide.com%2Felectric-supply-system%2F&title=Electric%20Supply%20System>)

## Related Posts:

1. **Requirements of Satisfactory Electric Supply Connection**  
(<https://www.eeguide.com/requirements-of-satisfactory-electric-supply-connection/>)
2. **Power Supply for Electric Traction Interview Questions and Answers**

**Optoelectronics**  
(<https://www.eeguide.com/optoelectronics-articles/>)

**Power Converters**  
(<https://www.eeguide.com/power-convertisers-articles/>)

**Power Semiconductor Devices**  
(<https://www.eeguide.com/power-semiconductor-devices-articles/>)

**Pulse Signals**  
(<https://www.eeguide.com/pulse-signals-articles/>)

**Rectifiers**  
(<https://www.eeguide.com/rectifiers-articles/>)

**Regulated and Switching Power Supplies**  
(<https://www.eeguide.com/regulated-and-switching-power-supplies-articles/>)

**Semiconductor Physics**  
(<https://www.eeguide.com/semiconductor-physics-articles/>)

**Single Stage Transistor Amplifiers**  
(<https://www.eeguide.com/single-stage-transistor-amplifiers-articles/>)

**Sinusoidal Oscillators**  
(<https://www.eeguide.com/sinusoidal-oscillators-articles/>)

**Switching Circuits**  
(<https://www.eeguide.com/switching-circuits-articles/>)

**Theory of PN Junction Diodes**  
(<https://www.eeguide.com/theory-of-pn-junction-diodes-articles/>)

(A2)

## Typical a.c. Power Supply Scheme

- The large network of conductors between the **power station** and the **consumers** can be broadly divided into two parts viz., **transmission system** and **distribution system**.
  - Each part can be further sub-divided into two—**primary transmission** and **secondary transmission** and **primary distribution** and **secondary distribution**.
  - Fig. 1. shows the layout of a typical a.c. power supply scheme by a single line diagram.
- ✓ Note: it is not necessary that all power schemes include all the stages shown in the figure.

# Electric Supply System

- Now-adays, 3-phase, 3-wire a.c. system is universally adopted for generation and transmission of electric power as an economical proposition.
- However, distribution of electric power is done by 3-phase, 4-wire a.c. system.
- The underground system is more expensive than the overhead system.d.c. or a.c. system

⇒ Overhead is mostly adopted

# Advantages of High Transmission Voltage

- **Limitations of high transmission voltage.**
  - From the above discussion, it might appear advisable to use the highest possible voltage for transmission of power in a bid to save conductor material.
  - However, it must be realised that high transmission voltage results in
    - (i) the increased cost of insulating the conductors
    - (ii) the increased cost of transformers, switchgear and other terminal apparatus.
  - Therefore, there is a limit to the higher transmission voltage which can be economically employed in a particular case.
  - This limit is reached when the saving in cost of conductor material due to higher voltage is offset by the increased cost of insulation, transformer, switchgear etc.
  - Hence, the choice of proper transmission voltage is essentially a question of economics.

Generally primary trans. voltage is carried at  
66 kV  
132 kV  
220 kV  
407 kV

# Advantages of High Transmission Voltage

- Decreases percentage line drop

$$\begin{aligned}\text{Line drop} &= IR = I \times \frac{\rho l}{a} \\ &= I \times \rho l \times J/I = \rho l J \quad [ \because a = I/J ] \\ \text{\%age line drop} &= \frac{J \rho l}{V} \times 100 \quad ... (iii)\end{aligned}$$

As  $J$ ,  $\rho$  and  $l$  are constants, therefore, percentage line drop decreases when the transmission voltage increases.

# Advantages of High Transmission Voltage

- Increases transmission efficiency

$$\text{Input power} = P + \text{Total losses}$$

$$= P + \frac{P^2 \rho l}{V^2 \cos^2 \phi a}$$

Assuming  $J$  to be the current density of the conductor, then,

$$a = I/J = \text{area}$$

∴

$$\begin{aligned}\text{Input power} &= P + \frac{P^2 \rho l J}{V^2 \cos^2 \phi I} = P + \frac{P^2 \rho l J}{V^2 \cos^2 \phi} \times \frac{1}{I} \\ &= P + \frac{P^2 \rho l J}{V^2 \cos^2 \phi} \times \frac{\sqrt{3} V \cos \phi}{P} \\ &= P + \frac{\sqrt{3} P J \rho l}{V \cos \phi} = P \left[ 1 + \frac{\sqrt{3} J \rho l}{V \cos \phi} \right]\end{aligned}$$

$P$  = const power  
 $V$  = Line voltage  
 $J$  = Current density  
 $\rho$  = resistivity  
 $a$  = area =  $I/J$   
 $l$  = length of conductor  
 $R = \rho \frac{l}{a}$  Distance over which power is transmitted

$a$  = area of cross-section of conductor

# Advantages of High Transmission Voltage

- Increases transmission efficiency

$$\begin{aligned}\text{Transmission efficiency} &= \frac{\text{Output power}}{\text{Input power}} = \frac{P}{P \left[ 1 + \frac{\sqrt{3} J \rho l}{V \cos \phi} \right]} = \frac{1}{\left[ 1 + \frac{\sqrt{3} J \rho l}{V \cos \phi} \right]} \\ &= \left[ 1 - \frac{\sqrt{3} J \rho l}{V \cos \phi} \right] \text{ approx.} \quad \dots(ii)\end{aligned}$$

As  $J$ ,  $\rho$  and  $l$  are constants, therefore, transmission efficiency increases when the line voltage is increased.

## Various Systems of Power Transmission

- For transmission of electric power, 3-phase, 3-wire a.c. system is universally adopted.
- However, other systems can also be used for transmission under special circumstances.
- The different possible systems of transmission are :
  - ✓  D.C. system
    - (i) D.C. two-wire.
    - (ii) D.C. two-wire with mid-point earthed.
    - (iii) D.C. three-wire.

## **Various Systems of Power Transmission**

### **□ Single-phase A.C. system**

- (i) Single-phase two-wire.
- (ii) Single-phase two-wire with mid-point earthed.
- (iii) Single-phase three-wire.

### **□ Two-phase A.C. system**

- (i) Two-phase four-wire.
- (ii) Two-phase three wire.

### **□ Three-phase A.C. system**

- (i) Three-phase three-wire.
- (ii) Three-phase four-wire.

# Various Systems of Power Transmission

- While comparing the amount of conductor material required in various systems, the proper comparison shall be on the basis of equal maximum stress on the dielectric.
- There are two cases :
  - (i) When transmission is by overhead system. In the overhead system, the maximum disruptive stress exists between the conductor and the earth.  
Therefore, the comparison of the system in this case has to be made on the basis of maximum voltage between conductor and earth.
  - (ii) When transmission is by underground system.  
In the underground system, the chief stress on the insulation is between conductors.  
Therefore, the comparison of the systems in this case should be made on the basis of maximum potential difference between conductors.


## Comparison of Conductor Material in Overhead System

- In comparing the relative amounts of conductor material necessary for different systems of transmission, similar conditions will be assumed in each case viz.,
- Assume Similar conditions in each case : Same P, i, W (line losses), V  
C<sub>max</sub> voltage between conductor & earth
- (i) same power ( $P$  watts) transmitted by each system.
  - (ii) the distance ( $l$  metres) over which power is transmitted remains the same.
  - (iii) the line losses ( $W$  watts) are the same in each case.
  - (iv) the maximum voltage between any conductor and earth ( $V_m$ ) is the same in each case.

# Comparison of Conductor Material in Overhead System

## □ Two-wire d.c. system with one conductor earthed

- In the 2-wire d.c. system, one is the outgoing or positive wire and the other is the return or negative wire as shown in Fig.
  - The load is connected between the two wires.
  - Max. voltage between conductors =  $V_m$
  - Power to be transmitted =  $P$
- Load current,  $I_1 = P/V_m$
- If  $R_1$  is the resistance of each line conductor, then,
  - $R_1 = \rho l/a_1$
  - where  $a_1$  is the area of X-section of the conductor

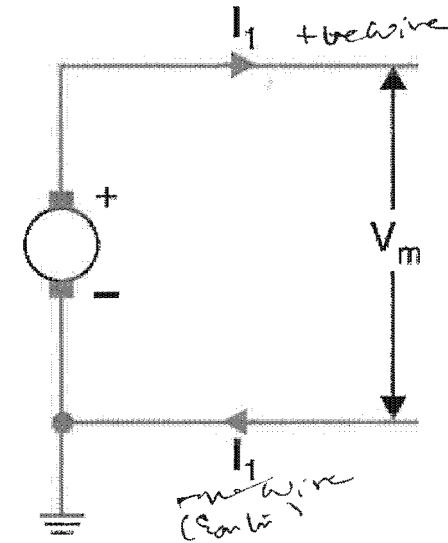

... Contd. (PTO)

# Comparison of Conductor Material in Overhead System

## □ Two-wire d.c. system with one conductor earthed

Line losses,  $W = 2I_1^2 R_1 = 2 \left( \frac{P}{V_m} \right)^2 \rho \frac{l}{a_1}$   $\Rightarrow \therefore$  Area of X-section,  $a_1 = \frac{2 P^2 \rho l}{W V_m^2}$

( $\downarrow$  for two wires)

Volume of conductor material required

$$= 2 a_1 l = 2 \left( \frac{2 P^2 \rho l}{W V_m^2} \right) l = \frac{4 P^2 \rho l^2}{W V_m^2} \quad \checkmark$$

( $V_{ol.} = a_1 \times l$   
 $\Rightarrow$  for 2 wires  
2a1l)


- ❖ It is a usual practice to make this system as the basis for comparison with other systems.
- ❖ Therefore, volume of conductor material required in this system shall be taken as the basic quantity i.e.

$$\frac{4 P^2 \rho l^2}{W V_m^2} = K \text{ (say)}$$

# Comparison of Conductor Material in Overhead System

## □ Three-wire d.c. system.

- ❖ In a 3-wire d.c. system, there are two outers and a middle or neutral wire which is earthed at the generator end as shown in Fig.  
(Zeis current)
- ❖ If the load is balanced, the current in the neutral wire is zero.
- ❖ Assuming balanced loads,
- ❖ Load current,  $I_3 = P/2V_m$
- ❖ Let  $a_3$  be the area of X-section of each outer wire

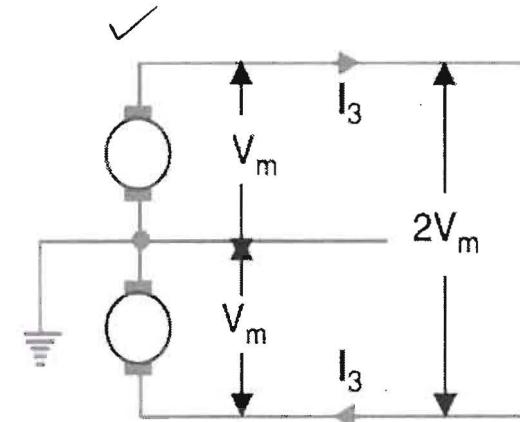

$$\text{Line losses, } W = 2I_3^2 R_3 = 2 \left( \frac{P}{2V_m} \right)^2 \times \rho \frac{l}{a_3} = \frac{P^2 \rho l}{2V_m^2 a_3} \quad \checkmark \quad \therefore \quad \text{Area of X-section, } a_3 = \frac{P^2 \rho l}{2W V_m^2} \quad \checkmark$$

- ❖ Assuming the area of X-section of neutral wire to be half that of the outer wire,  
Volume of conductor material required

$$= 2.5 a_3 l = 2.5 \left( \frac{P^2 \rho l}{2W V_m^2} \right) l = \frac{2.5}{2} \left( \frac{P^2 \rho l^2}{W V_m^2} \right) = \frac{5}{16} K$$

outer 0.5 neutral

$$\left[ \because K = \frac{4P^2 \rho l^2}{W V_m^2} \right]$$

- ✓ Hence the volume of conductor material required in this system is  $5/16^{\text{th}}$  of what is required for a 2-wire d.c. system with one conductor earthed

# Comparison of Conductor Material in Overhead System

## Two-wire d.c. system with mid-point earthed

- ❖ Fig. shows the two-wire d.c. system with mid-point earthed.
- ❖ The maximum voltage between any conductor and earth is  $V_m$  so that maximum voltage between conductors is  $2V_m$ .
- ❖ Load current,  $I_2 = P/2V_m$
- ❖ Let  $a_2$  be the area of X-section of the conductor.

$$\text{Line losses, } W = 2I_2^2 R_2 = 2 \left( \frac{P}{2V_m} \right)^2 \times \frac{\rho l}{a_2}$$


$\left[ \because R_2 = \rho l/a_2 \right]$

$$\therefore W = \frac{P^2 \rho l}{2a_2 V_m^2} \quad \therefore \text{Area of X-section, } a_2 = \frac{P^2 \rho l}{2W V_m^2}$$

$\therefore$  Volume of conductor material required

$$= 2a_2 l = 2 \left( \frac{P^2 \rho l}{2W V_m^2} \right) l = \frac{P^2 \rho l^2}{W V_m^2} = \underline{\frac{K}{4}} \quad \left[ \because K = \frac{4P^2 \rho l^2}{W V_m^2} \right]$$

- ✓ Hence, the volume of conductor material required in this system is *one-fourth* of that required in a two-wire d.c. system with one conductor earthed.

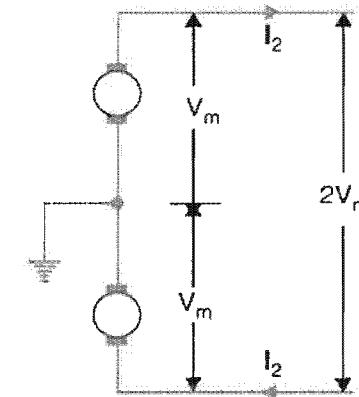


Difference with previous  
 ① No conductor at mid pt. which is earthed  
 ② So volume of conductor material is  $2a_2 l$  instead of  $2.5 a_2 l$

# Comparison of Conductor Material in Overhead System

## □ Single phase 2-wire a.c. system with one conductor earthed

- ❖ Fig. shows a single phase 2-wire a.c. system with one conductor earthed.
- ❖ The maximum voltage between conductors is  $V_m$  so that r.m.s. value of voltage between them is  $V_m / \sqrt{2}$   $\rightarrow V_m / \sqrt{2}$
- ❖ Assuming the load power factor to be  $\cos \phi$ ,

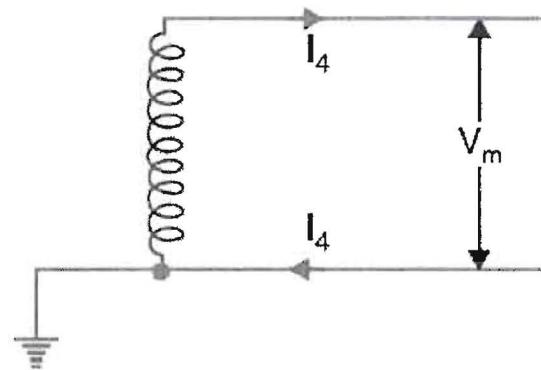

$$\text{Load current, } I_4 = \frac{P}{(V_m / \sqrt{2}) \cos \phi} = \frac{\sqrt{2} P}{V_m \cos \phi} \quad \begin{matrix} \text{= Power} \\ \text{Voltage} \end{matrix}$$

$\phi = \text{phase angle}$   
~~Imp. Cond.~~

- ❖ Let  $a_4$  be the area of X-section of the conductor.

$$\therefore \text{Line losses, } W = 2 I_4^2 R_4 = 2 \left( \frac{\sqrt{2} P}{V_m \cos \phi} \right)^2 \times \frac{\rho l}{a_4} = \frac{4 P^2 \rho l}{\cos^2 \phi V_m^2 a_4} \quad \checkmark$$

$$\therefore \Rightarrow \text{Area of X-section, } a_4 = \frac{4 P^2 \rho l}{\cos^2 \phi W V_m^2}$$


Contd. (PTO)

# Comparison of Conductor Material in Overhead System

## □ Single phase 2-wire a.c. system with one conductor earthed

- ❖ Volume of conductor material required

$$\begin{aligned} &= 2 a_4 l = 2 \left( \frac{4 P^2 \rho l}{V_m^2 W \cos^2 \phi} \right) l \\ &= \frac{2}{\cos^2 \phi} \times \frac{4 P^2 \rho l^2}{W V_m^2} = \frac{2 K}{\cos^2 \phi} \quad \checkmark \end{aligned}$$
$$\left[ \because K = \frac{4 P^2 \rho l^2}{W V_m^2} \right]$$

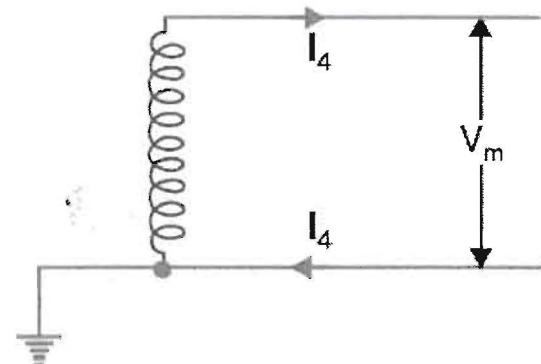

- ❖ Hence, the volume of conductor material required in this system is  $2/\cos^2 \phi$  times that of 2-wire d.c. system with the one conductor earthed.


# Comparison of Conductor Material in Overhead System

## □ Single phase 2-wire system with mid-point earthed

- ❖ Fig. shows a single phase a.c. system with mid-point earthed.
- ❖ The two wires possess equal and opposite voltages to earth (i.e.,  $V_m$ ).
- ❖ Therefore, the maximum voltage between the two wires is  $2V_m$ .
- ❖ The r.m.s. value of voltage between conductors is =  $2V_m/\sqrt{2} = \sqrt{2}V_m$  .
- ❖ Assuming the power factor of the load to be  $\cos \phi$ ,

$$\text{Load current, } I_s = \frac{P}{\sqrt{2} V_m \cos \phi}$$

➤ Let  $a_s$  be the area of X-section of the conductor.

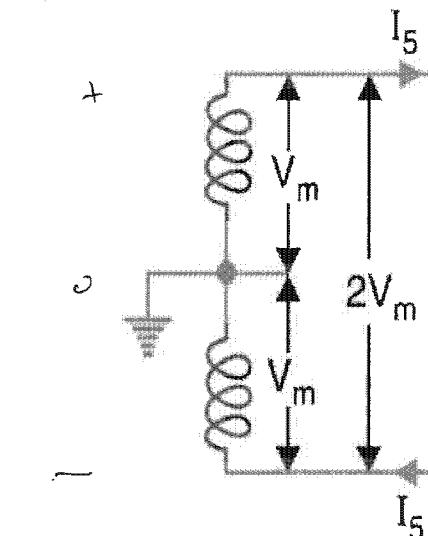

$$\text{Line losses, } W = 2 I_s^2 R_s = 2 \left( \frac{P}{\sqrt{2} V_m \cos \phi} \right)^2 R_s$$


$$\therefore W = \frac{P^2 \rho l}{a_s V_m^2 \cos^2 \phi} \quad \therefore \text{Area of X-section, } a_s = \frac{P^2 \rho l}{W V_m^2 \cos^2 \phi}$$

# Comparison of Conductor Material in Overhead System

## □ Single phase 2-wire system with mid-point earthed

- ❖ Volume of conductor material required

$$\begin{aligned} = 2 a_s l &= 2 \left( \frac{P^2 \rho l}{W V_m^2 \cos^2 \phi} \right) l = \frac{2 P^2 \rho l^2}{W V_m^2 \cos^2 \phi} \\ &= \frac{2}{\cos^2 \phi} \times \frac{P^2 \rho l^2}{W V_m^2} \\ &= \frac{K}{2 \cos^2 \phi} \quad \left[ \because K = \frac{4 P^2 \rho l^2}{W V_m^2} \right] \end{aligned}$$

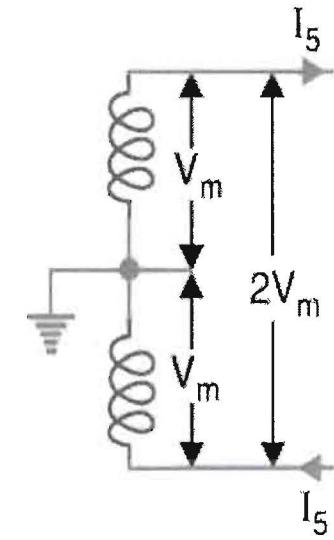

- Hence the volume of conductor material required in this system is  $1/2 \cos^2 \phi$  times that of 2-wire d.c. system with one conductor earthed.

# Comparison of Conductor Material in Overhead System


## □ Single phase, 3-wire system (Conductor wire in middle ear (b front) (neutral wire))

- ❖ The single phase 3-wire system is identical in principle with 3-wire d.c. system.
- ❖ The system consists of two outers and neutral wire taken from the mid-point of the phase winding as shown in Fig.
- ❖ If the load is balanced, the current through the neutral wire is zero.
- ❖ Assuming balanced load,
- ❖ Max. voltage between conductors =  $2 V_m$
- ❖ R.M.S. value of voltage between conductors =  $2 V_m / \sqrt{2} = \sqrt{2} V_m$
- ❖ If the p.f of the load is  $\cos \phi$ , then,

$$\text{Load current, } I_6 = \frac{P}{\sqrt{2} V_m \cos \phi}$$

➤ Let  $a_6$  be the area of X-section of each outer conductor

$$\text{Line losses, } W = 2 I_6^2 R_6 = 2 \left( \frac{P}{\sqrt{2} V_m \cos \phi} \right)^2 \times \frac{\rho l}{a_6} = \frac{P^2 \rho l}{a_6 V_m^2 \cos^2 \phi} \quad \therefore \quad \text{Area of X-section, } a_6 = \frac{P^2 \rho l}{W V_m^2 \cos^2 \phi}$$

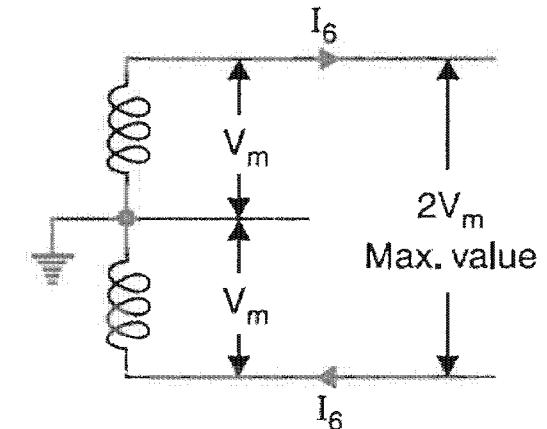


# Comparison of Conductor Material in Overhead System

## □ Single phase, 3-wire system

- ❖ Assuming the area of X-section of neutral wire to be half that of the outer wire,
- ❖ Volume of conductor material required

$$\begin{aligned} &= 2.5 a_6 l = 2.5 \left( \frac{P^2 \rho l}{W V_m^2 \cos^2 \phi} \right) l = \frac{2.5 P^2 \rho l^2}{W V_m^2 \cos^2 \phi} \\ &\quad (2+0.5) \\ &= \frac{2.5}{\cos^2 \phi} \times \frac{P^2 \rho l^2}{W V_m^2} \\ &= \frac{5K}{8 \cos^2 \phi} \end{aligned}$$

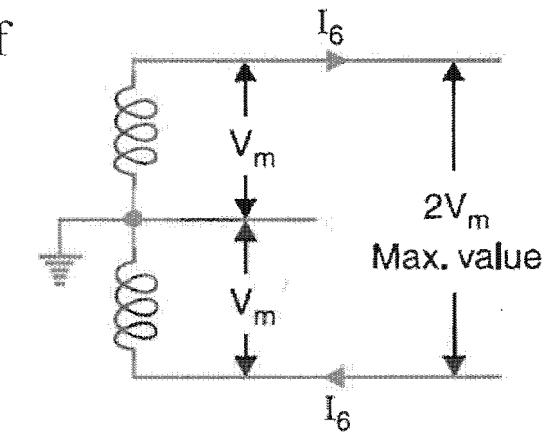

$$\left[ \because K = \frac{4P^2 \rho l^2}{W V_m^2} \right]$$

- Hence, the volume of conductor material required in this system is  $\frac{5}{8} \cos^2 \phi$  times that required in a 2-wire d.c. system with one conductor earthed.


✓

# Comparison of Conductor Material in Overhead System

## Two phase, 4-wire a.c. system

$$\begin{aligned}4 \text{ wire} &\Rightarrow 2^2 \Rightarrow 2 \text{ phases} \\2/3 \text{ wire} &\Rightarrow 1 \text{ phase}\end{aligned}$$

- ❖ As shown in Fig., the four wires are taken from the ends of the two-phase windings and the mid-points of the two windings are connected together.
- ❖ This system can be considered as two independent single-phase systems, each transmitting one half of the total power.
- ❖ Max. voltage between outers A and B =  $2V_m$
- ❖ R.M.S. value of voltage =  $2V_m/\sqrt{2} = \sqrt{2}V_m$
- ❖ Power supplied per phase (i.e., by outers A and B) =  $P/2$
- ❖ Assuming p.f. of the load to be  $\cos \phi$ ,

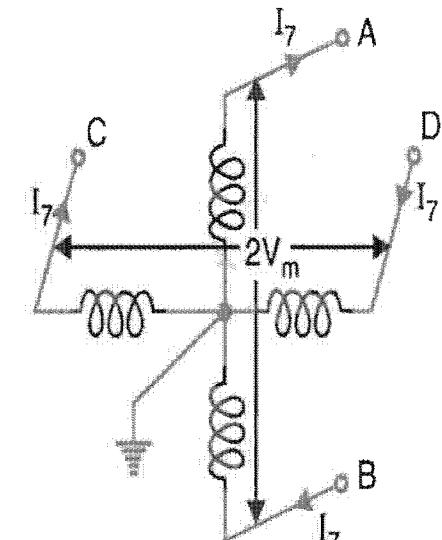

$$\text{Load current, } I_7 = \frac{P/2}{\sqrt{2} V_m \cos \phi} = \frac{P}{2\sqrt{2} V_m \cos \phi}$$

# Comparison of Conductor Material in Overhead System

## □ Two phase, 4-wire a.c. system

❖ Let  $a_7$  be the area of X-section of one conductor


$$\text{Line losses, } W = 4 I_7^2 R_7 = 4 \left( \frac{P}{2\sqrt{2} V_m \cos \phi} \right)^2 \times \frac{\rho l}{a_7}$$

*4 wires*

∴

$$W = \frac{P^2 \rho l}{2 a_7 V_m^2 \cos^2 \phi}$$

$$\therefore \text{Area of X-section, } a_7 = \frac{P^2 \rho l}{2 W V_m^2 \cos^2 \phi}$$

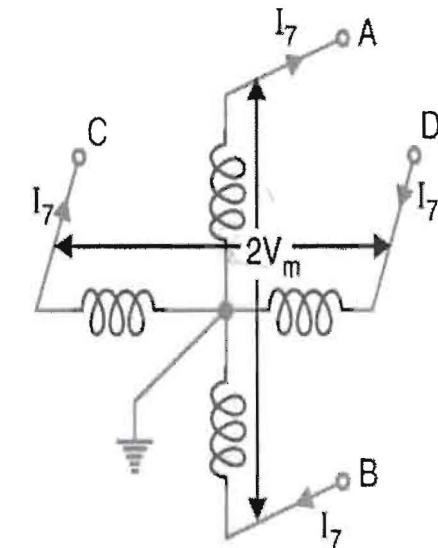

➤ Volume of conductor material required =  $4 a_7 l$  ✓

$$= 4 \left( \frac{P^2 \rho l}{2 W V_m^2 \cos^2 \phi} \right) l = \frac{4 P^2 \rho l^2}{2 W V_m^2 \cos^2 \phi} = \frac{1}{2 \cos^2 \phi} \times \frac{4 P^2 \rho l^2}{W V_m^2} = \frac{K}{2 \cos^2 \phi}$$

$$\left[ \because K = \frac{4 P^2 \rho l^2}{W V_m^2} \right]$$

➤ Hence, the volume of conductor material required for this system is  $\frac{1}{2} \cos^2 \phi$  times that of 2-wire d.c. system with one conductor earthed.