



Example of the Dell d500 teardown and identification slide.

Step 10 Done

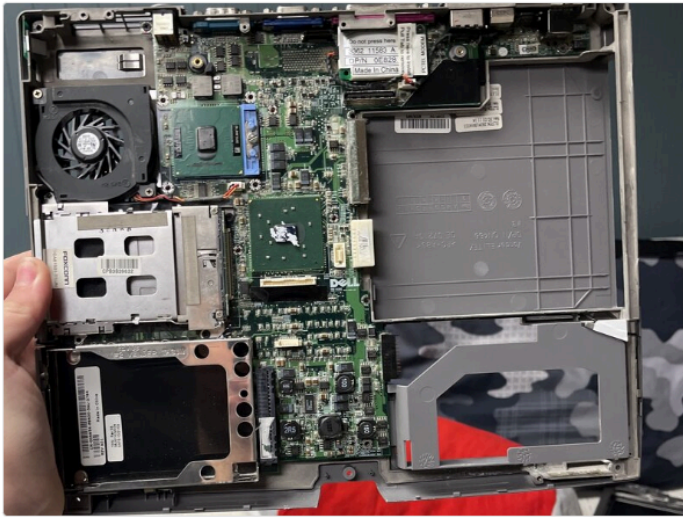




- When complete, it should look something like this. To reassemble, follow steps in reverse.

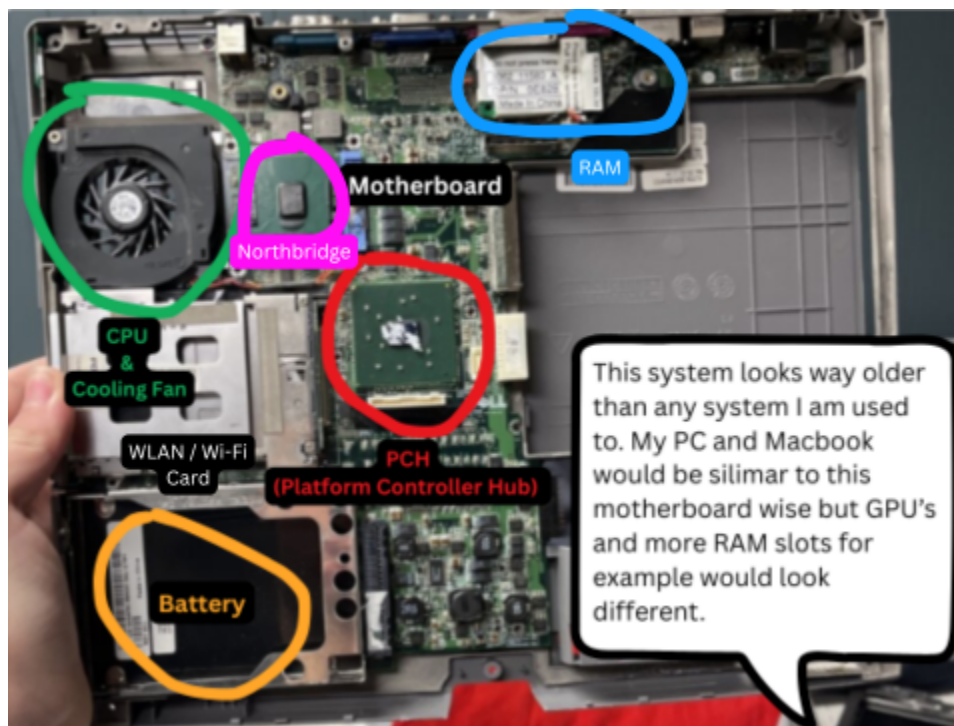


Caption text: This system looks way older than any system I am used to. My PC and Macbook would be similar to this motherboard wise but GPU's and more RAM slots for example would look different.

Example of the Komplete Audio 2 teardown and identification slide

Step 5 Remove Front Panel Daughterboard

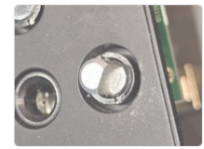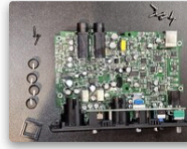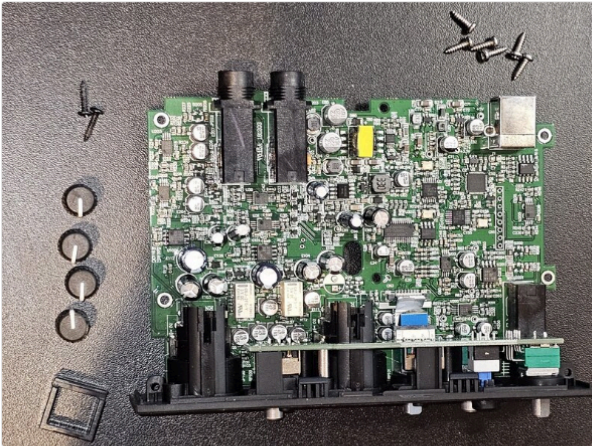

- The daughterboard (holding the top-row controls and/or inputs) is attached to the front panel housing.
 - ⚠ Before separating the board, you must **remove the control knobs** from the front side. **Pull them straight up** with firm, even pressure. Avoid prying against the plastic faceplate to prevent scratches.
- Remove the screws (and nuts on the potentiometers) securing the PCB to the plastic frame.
 - Once all the screws and fasteners are removed, **gently lift the daughterboard** away from the front panel.
 - ⚠ Make sure you are cautious while removing the daughterboard! It is still connected to the Main PCB by a ribbon cable (FFC). Do not pull the board away abruptly, as this could damage the cable or the connector.
- After gently moving the daughterboard to gain access, you can now **disconnect the FFC (ribbon cable)**.
- Unlock the connector by **lifting the locking tab** (if your model has one) and gently pull the cable out of the socket.
- Once the cable is disconnected, the daughterboard can be completely removed from the housing.

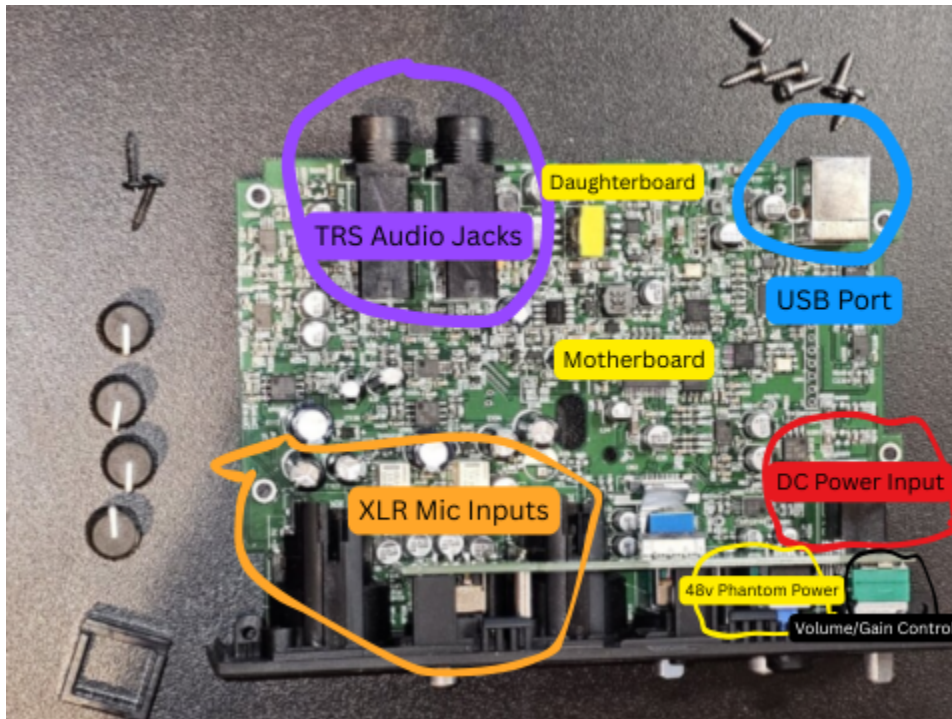

Caption text: It's interesting to see the contents of an audio interface since I own 3 and have never taken them apart. I might for a project now.