
CP00 — contact-a

At most ten added wires per view. Inspect each net with power isolated.

contact-a — MIRRORED UNDERSIDE

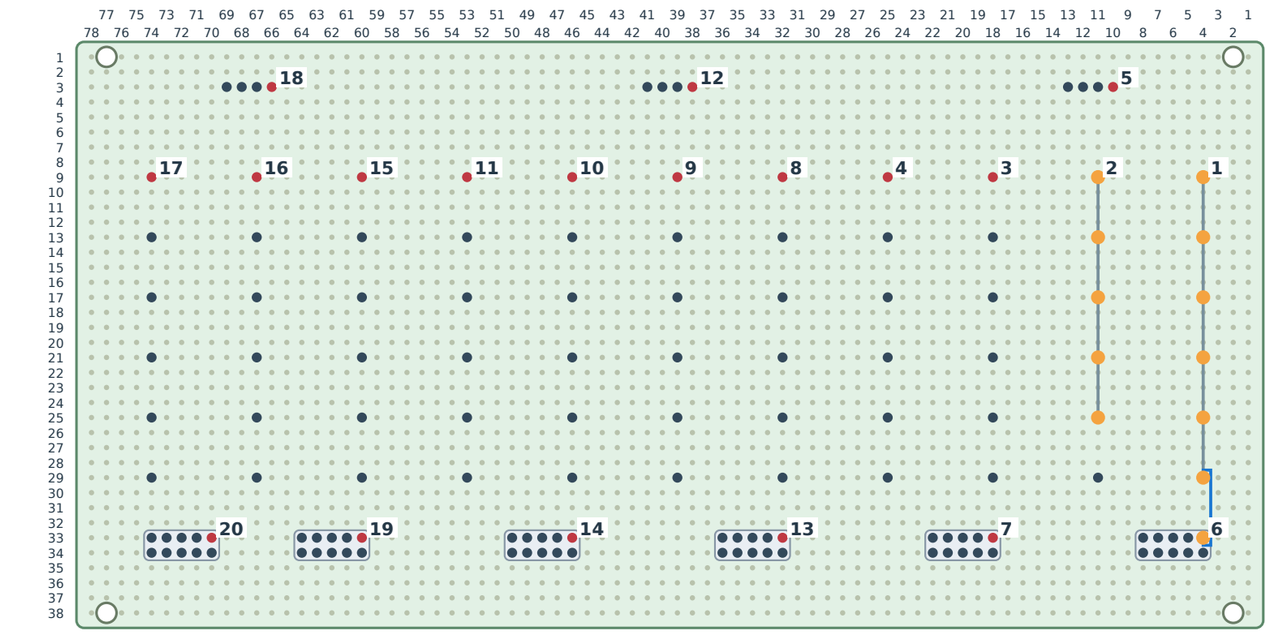

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W1 / NODE00	J_A1_NODE00.1 → J_A1_NODE00.2	4,9 → 4,13
W2 / NODE00	J_A1_NODE00.2 → J_A1_NODE00.3	4,13 → 4,17
W3 / NODE00	J_A1_NODE00.3 → J_A1_NODE00.4	4,17 → 4,21
W4 / NODE00	J_A1_NODE00.4 → J_A1_NODE00.5	4,21 → 4,25
W5 / NODE00	J_A1_NODE00.5 → J_A1_NODE00.6	4,25 → 4,29
W6 / NODE00	J_A1_NODE00.6 → J_A1_NODE.1	4,29 → 4,33
W8 / NODE01	J_A1_NODE01.1 → J_A1_NODE01.2	11,9 → 11,13
W9 / NODE01	J_A1_NODE01.2 → J_A1_NODE01.3	11,13 → 11,17
W10 / NODE01	J_A1_NODE01.3 → J_A1_NODE01.4	11,17 → 11,21
W11 / NODE01	J_A1_NODE01.4 → J_A1_NODE01.5	11,21 → 11,25

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP00 — contact-a

At most ten added wires per view. Inspect each net with power isolated.

contact-a — MIRRORED UNDERSIDE

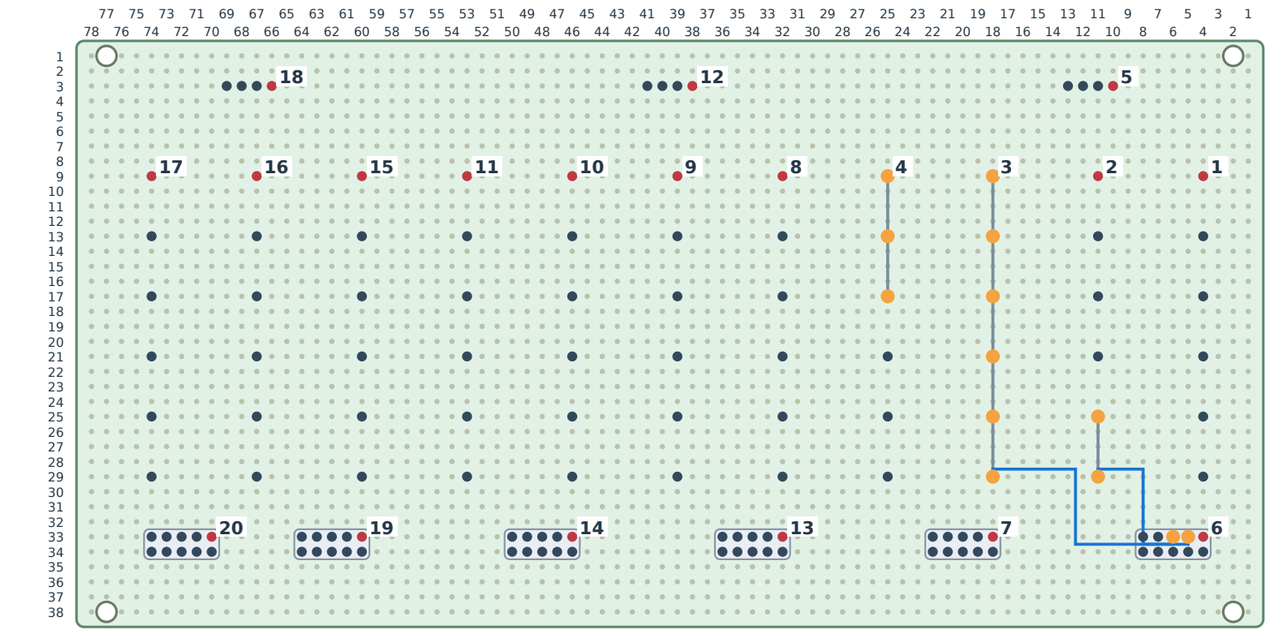

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W12 / NODE01	J_A1_NODE01.5 → J_A1_NODE01.6	11,25 → 11,29
W13 / NODE01	J_A1_NODE01.6 → J_A1_NODE.3	11,29 → 5,33
W15 / NODE02	J_A1_NODE02.1 → J_A1_NODE02.2	18,9 → 18,13
W16 / NODE02	J_A1_NODE02.2 → J_A1_NODE02.3	18,13 → 18,17
W17 / NODE02	J_A1_NODE02.3 → J_A1_NODE02.4	18,17 → 18,21
W18 / NODE02	J_A1_NODE02.4 → J_A1_NODE02.5	18,21 → 18,25
W19 / NODE02	J_A1_NODE02.5 → J_A1_NODE02.6	18,25 → 18,29
W20 / NODE02	J_A1_NODE02.6 → J_A1_NODE.5	18,29 → 6,33
W22 / NODE03	J_A1_NODE03.1 → J_A1_NODE03.2	25,9 → 25,13
W23 / NODE03	J_A1_NODE03.2 → J_A1_NODE03.3	25,13 → 25,17


Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP00 — contact-a

At most ten added wires per view. Inspect each net with power isolated.

Wire / net	From → to	TOP holes
W24 / NODE03	J_A1_NODE03.3 → J_A1_NODE03.4	25,17 → 25,21
W25 / NODE03	J_A1_NODE03.4 → J_A1_NODE03.5	25,21 → 25,25
W26 / NODE03	J_A1_NODE03.5 → J_A1_NODE03.6	25,25 → 25,29
W27 / NODE03	J_A1_NODE03.6 → J_A1_NODE.7	25,29 → 7,33

contact-a — MIRRORED UNDERSIDE

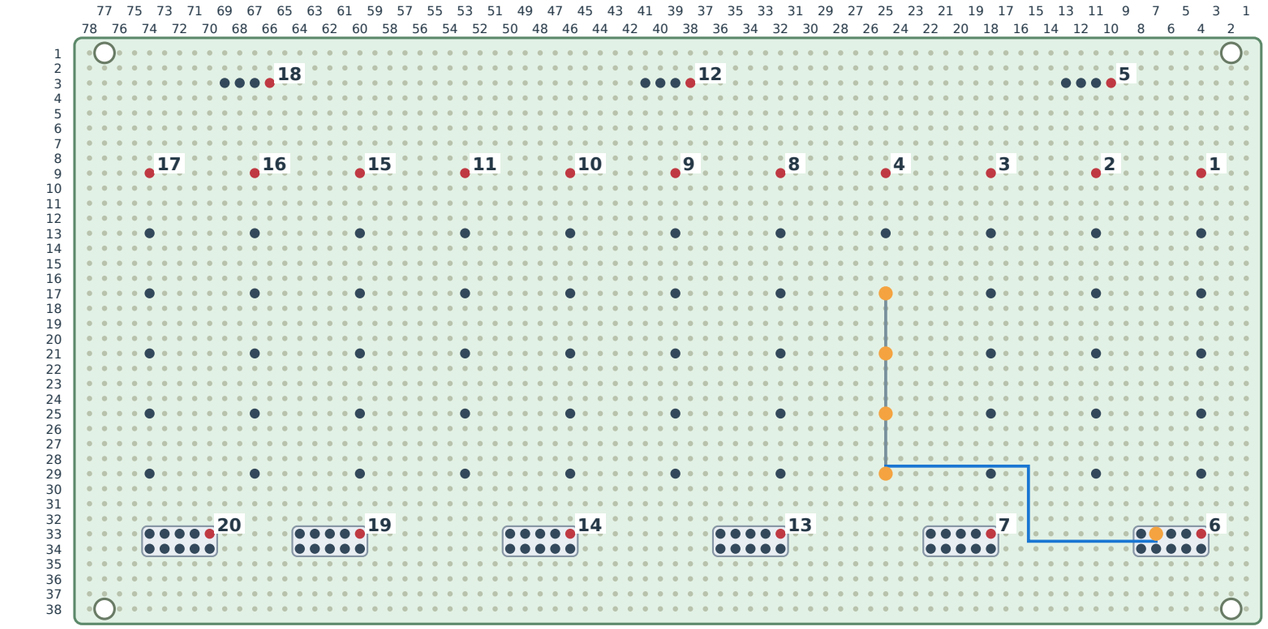

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red


TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP00 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

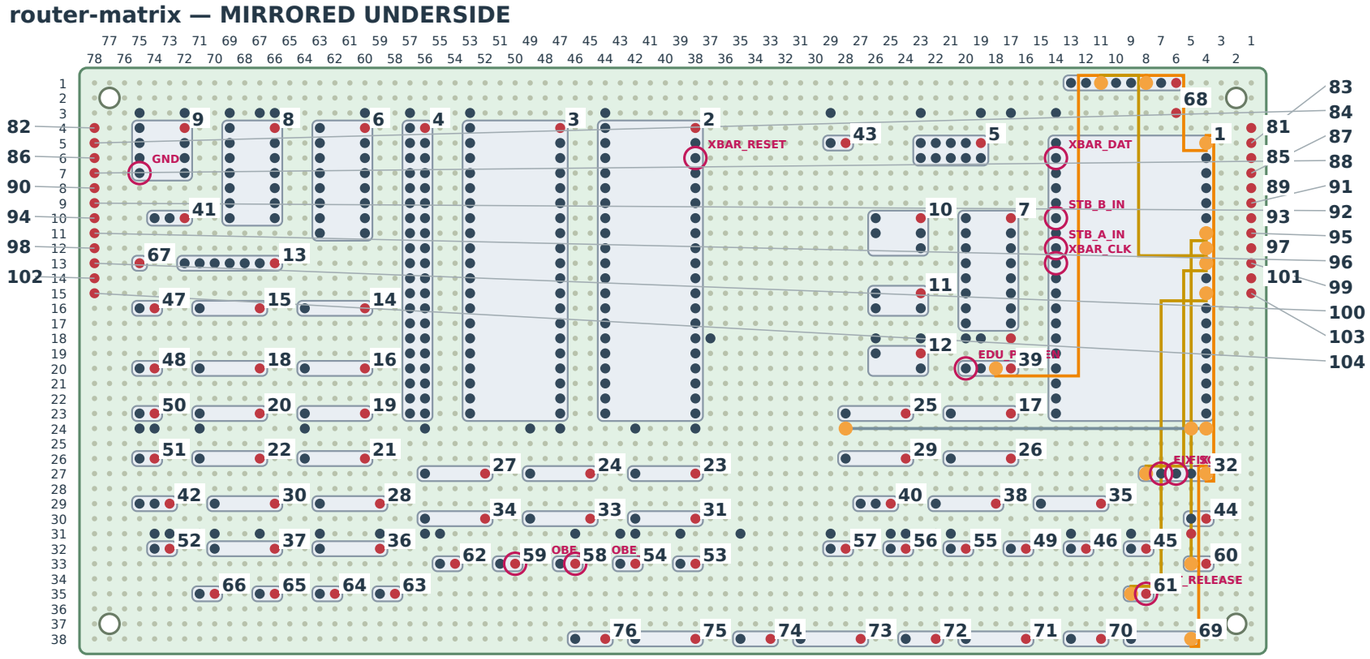

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W1 / USB_ROUTER_3V3	J_PROBE.3 → U_ROUTER_CORE_ESP1.1	8,1 → 4,5
W2 / USB_ROUTER_3V3	U_ROUTER_CORE_ESP1.1 → J_ROUTER_CORE_FIXTURE.1	4,5 → 4,27
W3 / USB_ROUTER_3V3	J_ROUTER_CORE_FIXTURE.1 → R_LED_USBROUTER3V3.1	4,27 → 5,38
W4 / USB_ROUTER_3V3	J_PROBE.3 → J_ROUTER_CORE_PROTOTYPE.2	8,1 → 18,20
W19 / EDU_PWR_EN__B	JP_R7_EN.2 → U_ROUTER_CORE_ESP1.7	5,33 → 4,11
W20 / HEARTBEAT	J_PROBE.6 → U_ROUTER_CORE_ESP1.8	11,1 → 4,12
W23 / FIX_STIM	J_ROUTER_CORE_FIXTURE.5 → U_ROUTER_CORE_ESP1.9	8,27 → 4,13
W24 / RST_RELEASE__B	JP_R7_RST.2 → U_ROUTER_CORE_ESP1.11	9,35 → 4,15
W25 / GND	BAR_GND_1.1 → BAR_GND_1.2	4,24 → 5,24
W26 / GND	BAR_GND_1.2 → BAR_GND_1.3	5,24 → 28,24

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP00 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

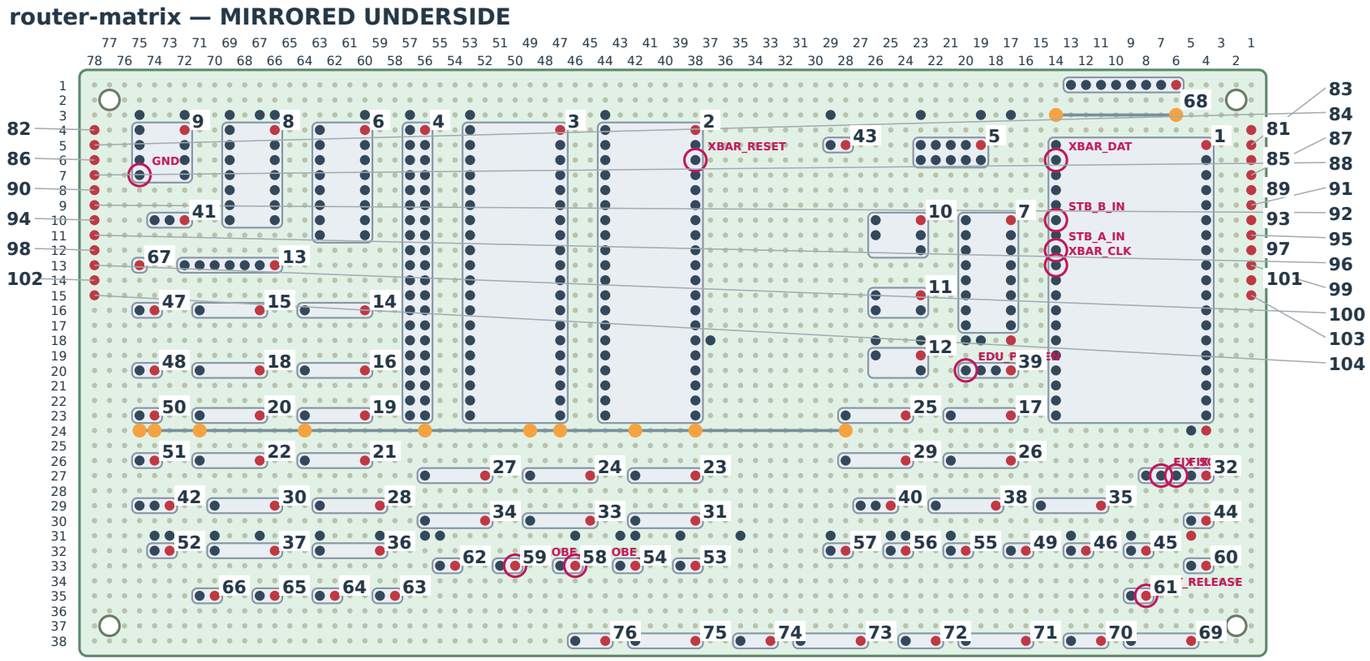

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W27 / GND	BAR_GND_1.3 → BAR_GND_1.4	28,24 → 38,24
W28 / GND	BAR_GND_1.4 → BAR_GND_1.5	38,24 → 42,24
W29 / GND	BAR_GND_1.5 → BAR_GND_1.6	42,24 → 47,24
W30 / GND	BAR_GND_1.6 → BAR_GND_1.7	47,24 → 49,24
W31 / GND	BAR_GND_1.7 → BAR_GND_1.8	49,24 → 56,24
W32 / GND	BAR_GND_1.8 → BAR_GND_1.9	56,24 → 64,24
W33 / GND	BAR_GND_1.9 → BAR_GND_1.10	64,24 → 71,24
W34 / GND	BAR_GND_1.10 → BAR_GND_1.11	71,24 → 74,24
W35 / GND	BAR_GND_1.11 → BAR_GND_1.12	74,24 → 75,24
W36 / GND	BAR_GND_2.1 → BAR_GND_2.2	6,3 → 14,3

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP00 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

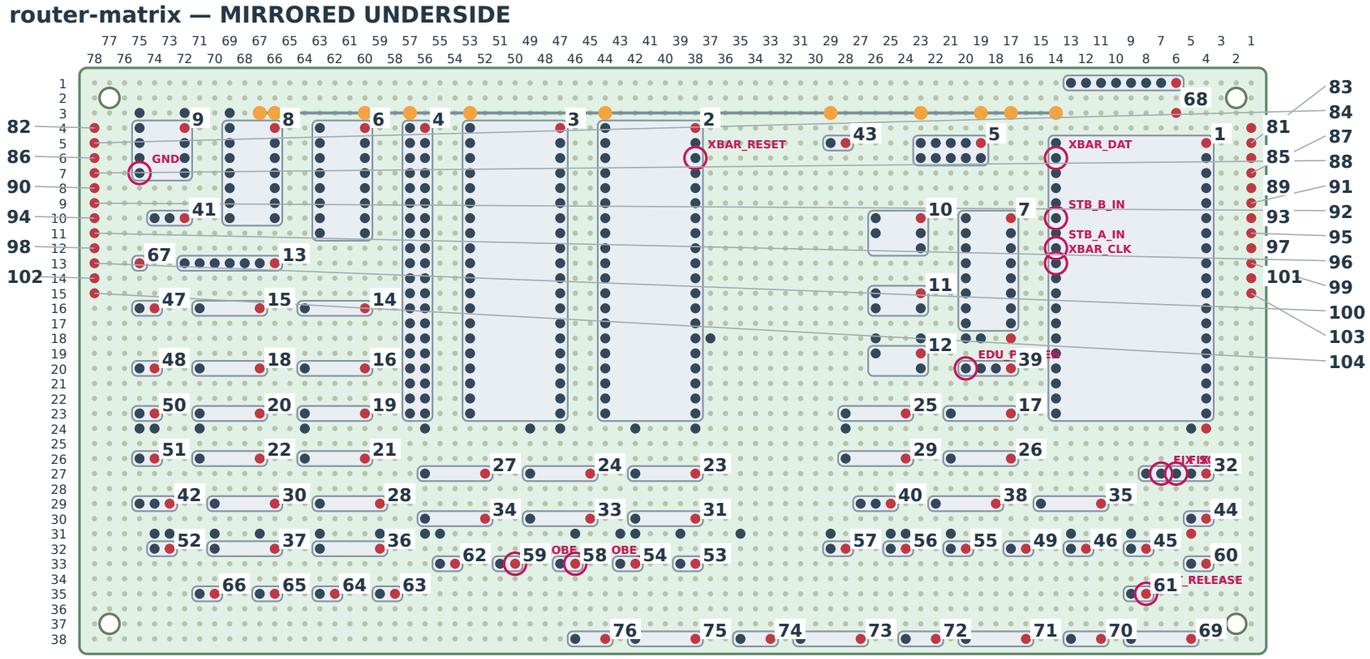

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W37 / GND	BAR_GND_2.2 → BAR_GND_2.3	14,3 → 17,3
W38 / GND	BAR_GND_2.3 → BAR_GND_2.4	17,3 → 19,3
W39 / GND	BAR_GND_2.4 → BAR_GND_2.5	19,3 → 23,3
W40 / GND	BAR_GND_2.5 → BAR_GND_2.6	23,3 → 29,3
W41 / GND	BAR_GND_2.6 → BAR_GND_2.7	29,3 → 44,3
W42 / GND	BAR_GND_2.7 → BAR_GND_2.8	44,3 → 53,3
W43 / GND	BAR_GND_2.8 → BAR_GND_2.9	53,3 → 57,3
W44 / GND	BAR_GND_2.9 → BAR_GND_2.10	57,3 → 60,3
W45 / GND	BAR_GND_2.10 → BAR_GND_2.11	60,3 → 66,3
W46 / GND	BAR_GND_2.11 → BAR_GND_2.12	66,3 → 67,3

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP00 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

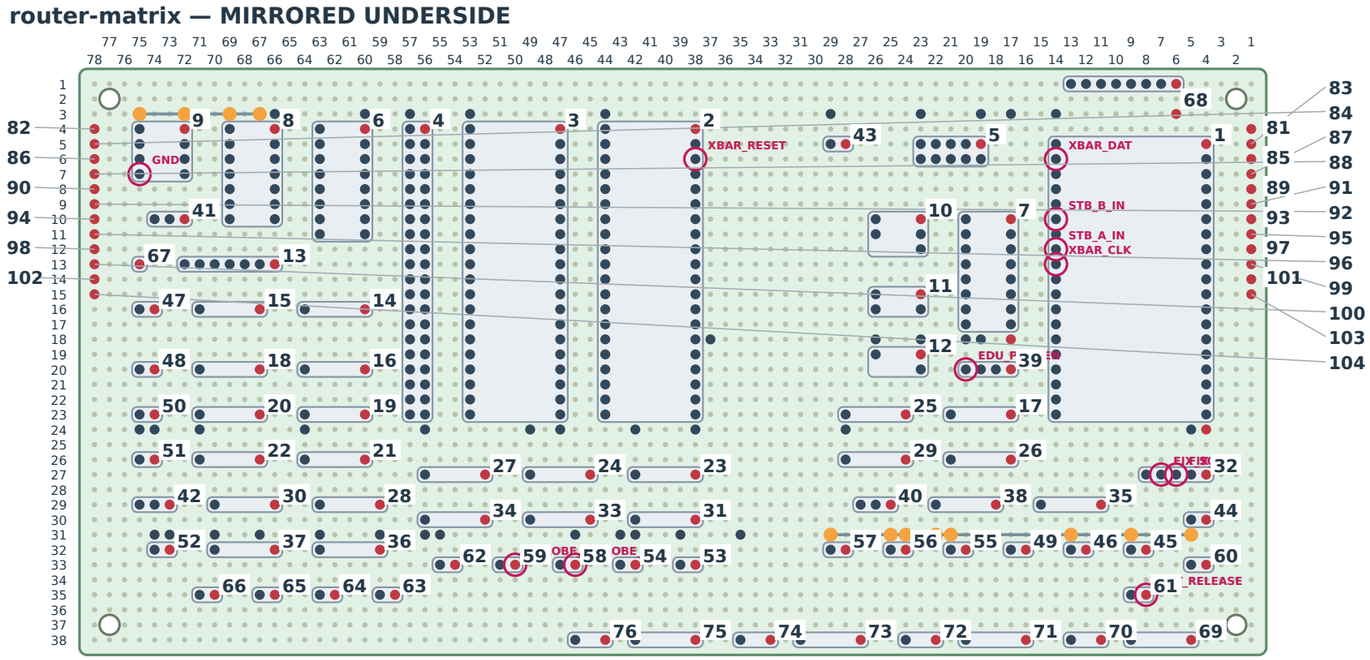

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W47 / GND	BAR_GND_2.12 → BAR_GND_2.13	67,3 → 69,3
W48 / GND	BAR_GND_2.13 → BAR_GND_2.14	69,3 → 72,3
W49 / GND	BAR_GND_2.14 → BAR_GND_2.15	72,3 → 75,3
W50 / GND	BAR_GND_3.1 → BAR_GND_3.2	5,31 → 9,31
W51 / GND	BAR_GND_3.2 → BAR_GND_3.3	9,31 → 13,31
W52 / GND	BAR_GND_3.3 → BAR_GND_3.4	13,31 → 21,31
W53 / GND	BAR_GND_3.4 → BAR_GND_3.5	21,31 → 22,31
W54 / GND	BAR_GND_3.5 → BAR_GND_3.6	22,31 → 24,31
W55 / GND	BAR_GND_3.6 → BAR_GND_3.7	24,31 → 25,31
W56 / GND	BAR_GND_3.7 → BAR_GND_3.8	25,31 → 29,31

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP00 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

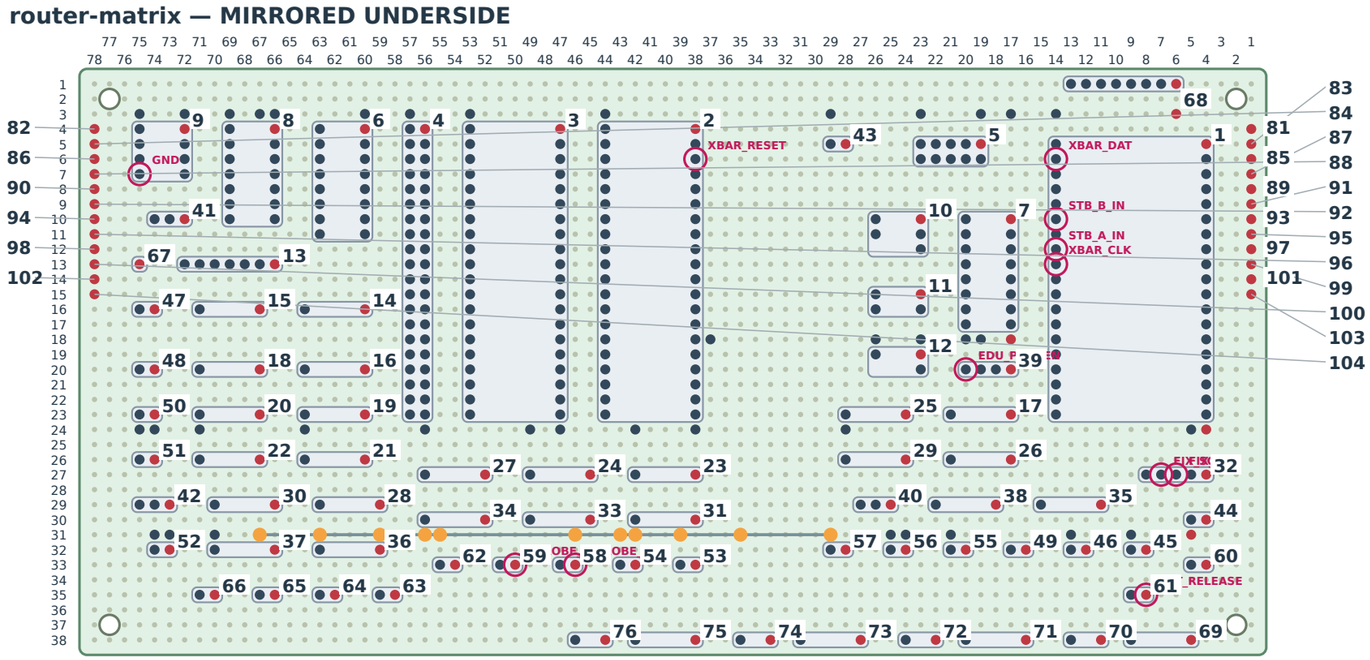

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W57 / GND	BAR_GND_3.8 → BAR_GND_3.9	29,31 → 35,31
W58 / GND	BAR_GND_3.9 → BAR_GND_3.10	35,31 → 39,31
W59 / GND	BAR_GND_3.10 → BAR_GND_3.11	39,31 → 42,31
W60 / GND	BAR_GND_3.11 → BAR_GND_3.12	42,31 → 43,31
W61 / GND	BAR_GND_3.12 → BAR_GND_3.13	43,31 → 46,31
W62 / GND	BAR_GND_3.13 → BAR_GND_3.14	46,31 → 55,31
W63 / GND	BAR_GND_3.14 → BAR_GND_3.15	55,31 → 56,31
W64 / GND	BAR_GND_3.15 → BAR_GND_3.16	56,31 → 59,31
W65 / GND	BAR_GND_3.16 → BAR_GND_3.17	59,31 → 63,31
W66 / GND	BAR_GND_3.17 → BAR_GND_3.18	63,31 → 67,31

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP00 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

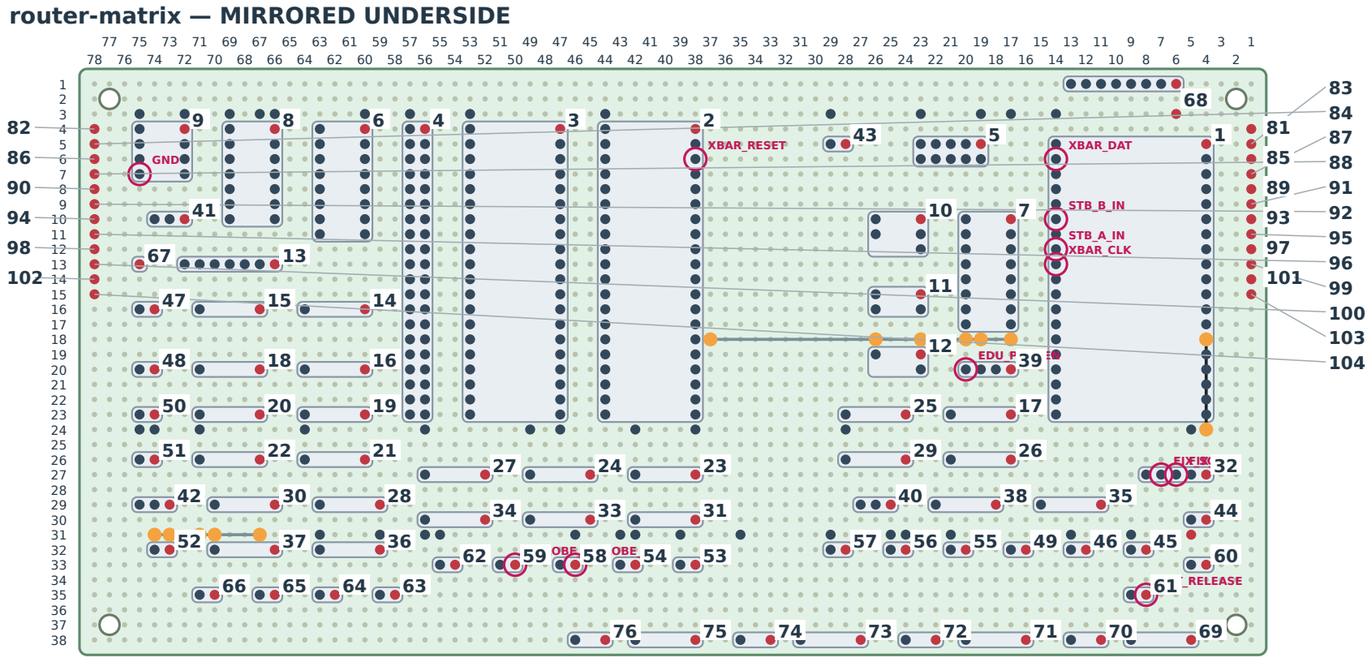

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W67 / GND	BAR_GND_3.18 → BAR_GND_3.19	67,31 → 70,31
W68 / GND	BAR_GND_3.19 → BAR_GND_3.20	70,31 → 71,31
W69 / GND	BAR_GND_3.20 → BAR_GND_3.21	71,31 → 73,31
W70 / GND	BAR_GND_3.21 → BAR_GND_3.22	73,31 → 74,31
W71 / GND	BAR_GND_4.1 → BAR_GND_4.2	17,18 → 19,18
W72 / GND	BAR_GND_4.2 → BAR_GND_4.3	19,18 → 20,18
W73 / GND	BAR_GND_4.3 → BAR_GND_4.4	20,18 → 23,18
W74 / GND	BAR_GND_4.4 → BAR_GND_4.5	23,18 → 26,18
W75 / GND	BAR_GND_4.5 → BAR_GND_4.6	26,18 → 37,18
W76 / GND	U_ROUTER_CORE_ESP1.14 → BAR_GND_1.1	4,18 → 4,24

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP00 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

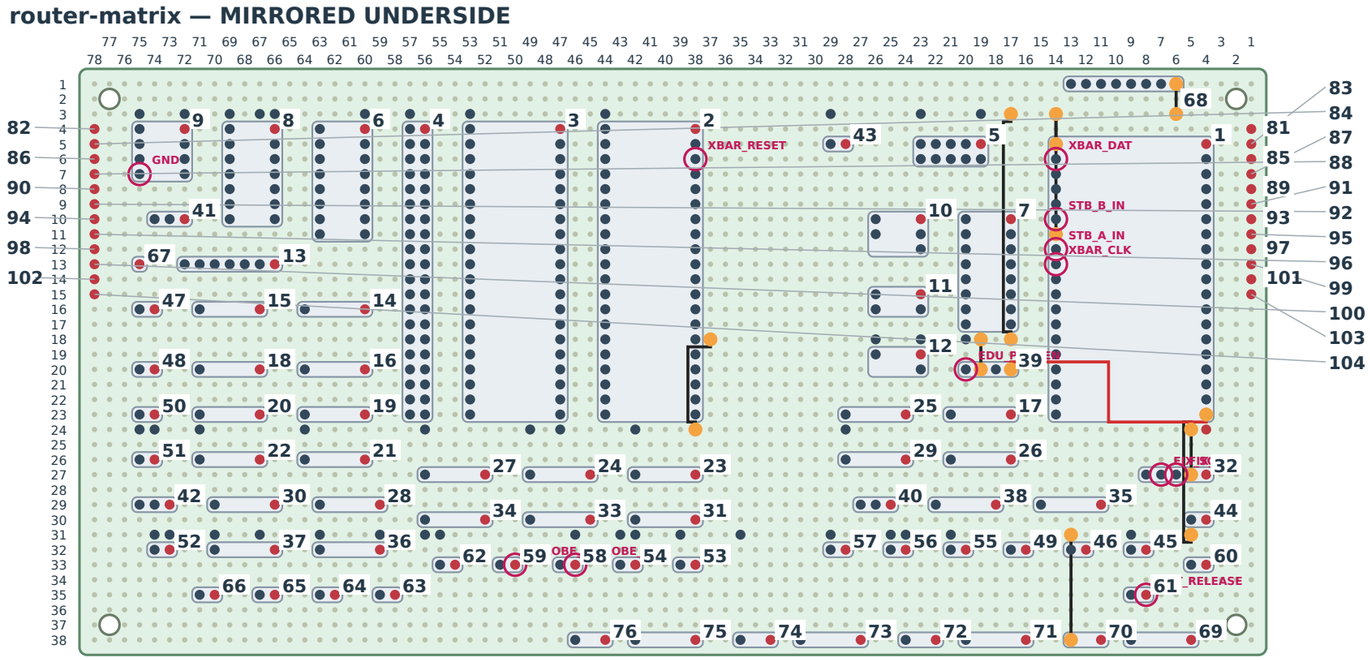

Wire / net	From → to	TOP holes
W88 / GND	J_ROUTER_CORE_FIXTURE.2 → BAR_GND_1.2	5,27 → 5,24
W93 / GND	U_ROUTER_CORE_ESP1.20 → BAR_GND_2.2	14,5 → 14,3
W94 / GND	U_ROUTER_CORE_ESP1.26 → BAR_GND_2.2	14,11 → 14,3
W110 / GND	J_PROBE.1 → BAR_GND_2.1	6,1 → 6,3
W132 / GND	LED_USBROUTER3V3.2 → BAR_GND_3.3	13,38 → 13,31
W144 / GND	J_ROUTER_CORE_PROTOTYPE.3 → BAR_GND_4.2	19,20 → 19,18
W145 / GND	BAR_GND_1.2 → BAR_GND_3.1	5,24 → 5,31
W146 / GND	BAR_GND_1.4 → BAR_GND_4.6	38,24 → 37,18
W147 / GND	BAR_GND_4.1 → BAR_GND_2.3	17,18 → 17,3
W148 / USB_5V	J_ROUTER_CORE_PROTOTYPE.1 → U_ROUTER_CORE_ESP1.19	17,20 → 4,23

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red


TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP00 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

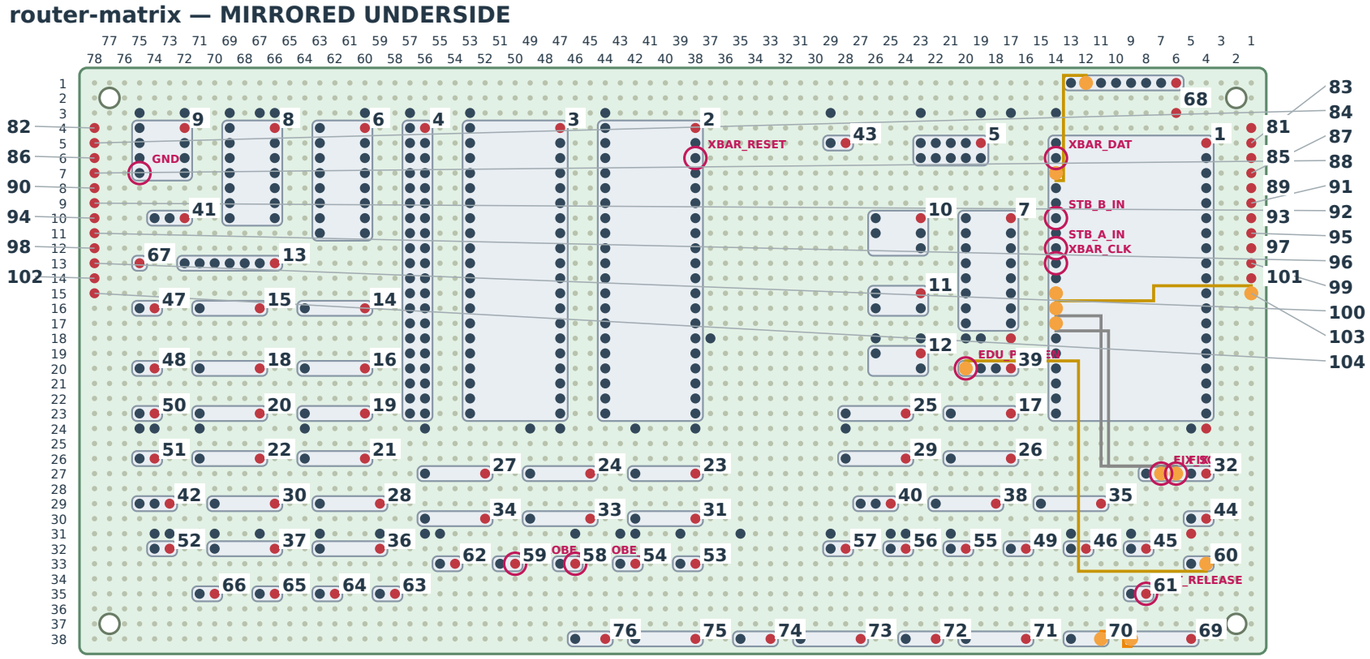

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W151 / XBAR_LATCH	J_PROBE.7 → U_ROUTER_CORE_ESP1.22	12,1 → 14,7
W160 / EDU_FAULT_RESET	J_BOUNDARY_23.1 → U_ROUTER_CORE_ESP1.30	1,15 → 14,15
W162 / FIX_SCL	J_ROUTER_CORE_FIXTURE.4 → U_ROUTER_CORE_ESP1.31	7,27 → 14,16
W163 / FIX_SDA	J_ROUTER_CORE_FIXTURE.3 → U_ROUTER_CORE_ESP1.32	6,27 → 14,17
W263 / EDU_PWR_EN	J_ROUTER_CORE_PROTOTYPE.4 → JP_R7_EN.1	20,20 → 4,33
W295 / LEDA_USBROUTER3V3	LED_USBROUTER3V3.1 → R_LED_USBROUTER3V3.2	11,38 → 9,38

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP06 — contact-a

At most ten added wires per view. Inspect each net with power isolated.

contact-a — MIRRORED UNDERSIDE

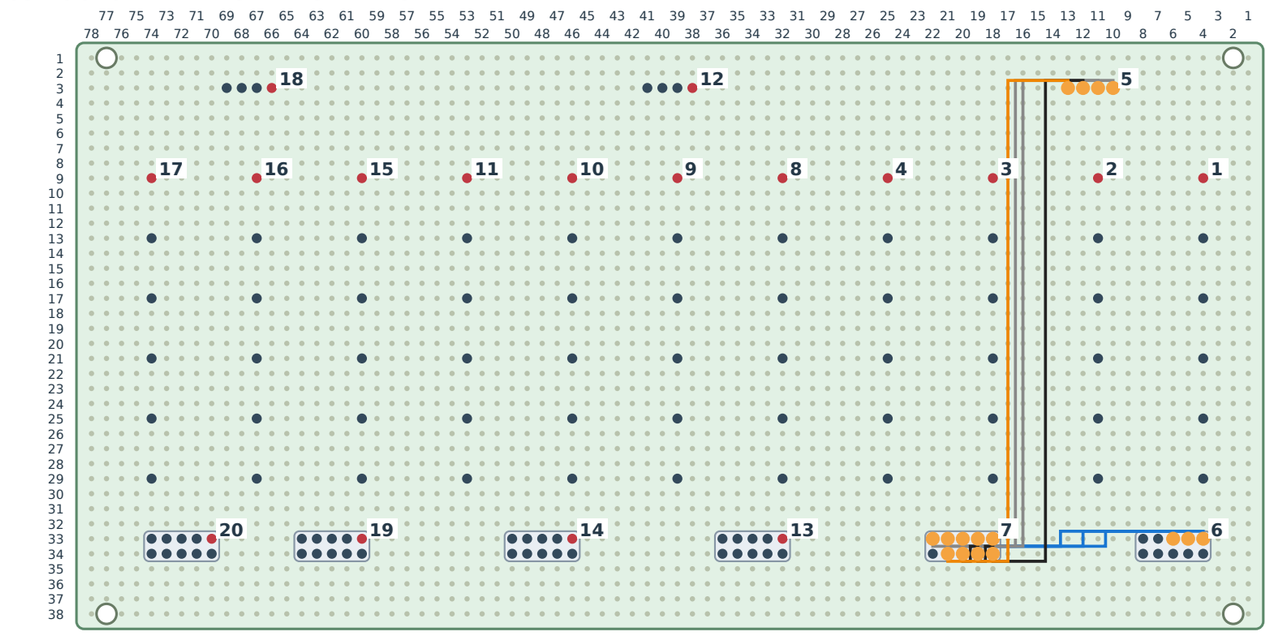

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W7 / NODE00	J_A1_NODE.1 → J_A1_SMART.1	4,33 → 18,33
W14 / NODE01	J_A1_NODE.3 → J_A1_SMART.3	5,33 → 19,33
W21 / NODE02	J_A1_NODE.5 → J_A1_SMART.5	6,33 → 20,33
W28 / SCL_POSITION_0	J_A1_SERVICE.1 → J_A1_SMART.9	10,3 → 22,33
W29 / SDA_POSITION_0	J_A1_SERVICE.2 → J_A1_SMART.7	11,3 → 21,33
W30 / GND	J_A1_SERVICE.3 → J_A1_SMART.2	12,3 → 18,34
W31 / GND	J_A1_SMART.2 → J_A1_SMART.4	18,34 → 19,34
W32 / GND	J_A1_SMART.4 → J_A1_SMART.6	19,34 → 20,34
W41 / 3V3_SYS	J_A1_SERVICE.4 → J_A1_SMART.8	13,3 → 21,34

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP09 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

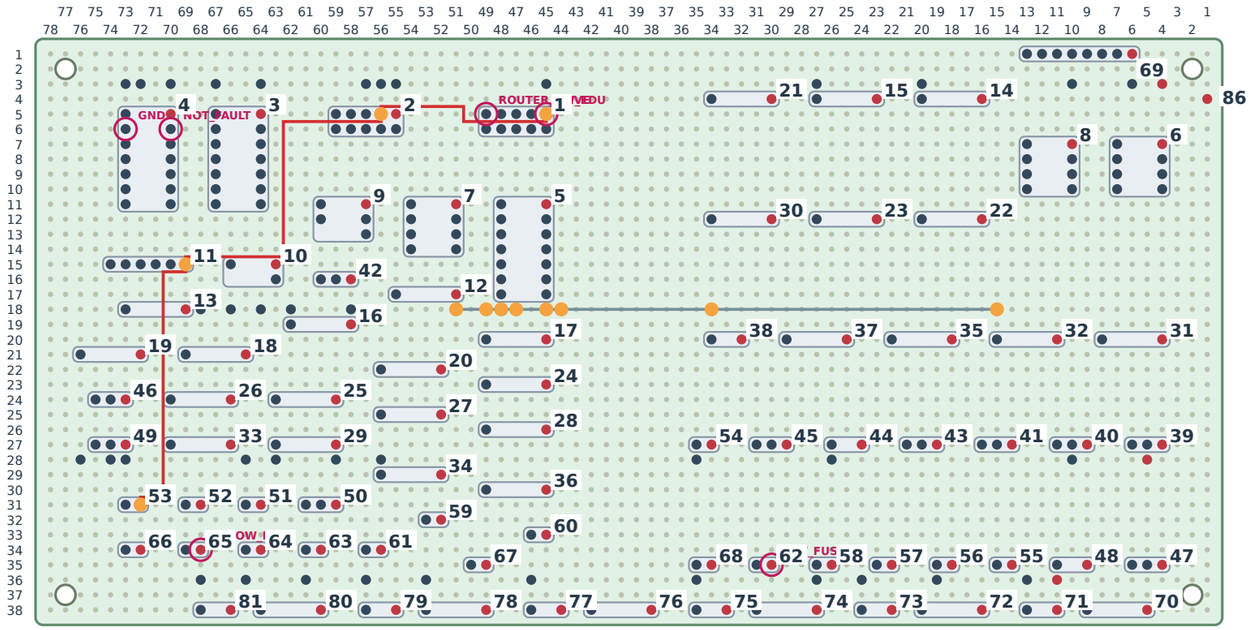

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W1 / 5V_EDU	J_POWER_INTERLOCK_FIXED_BATTERY.1 → J_POWER_INTERLOCK_TEST.1	72,31 → 69,15
W2 / 5V_EDU	J_POWER_INTERLOCK_TEST.1 → J_POWER_INTERLOCK_SMART.3	69,15 → 56,5
W3 / 5V_EDU	J_POWER_INTERLOCK_SMART.3 → J_POWER_INTERLOCK_MATRIX.1	56,5 → 45,5
W8 / GND	BAR_GND_1.1 → BAR_GND_1.2	15,18 → 34,18
W9 / GND	BAR_GND_1.2 → BAR_GND_1.3	34,18 → 44,18
W10 / GND	BAR_GND_1.3 → BAR_GND_1.4	44,18 → 45,18
W11 / GND	BAR_GND_1.4 → BAR_GND_1.5	45,18 → 47,18
W12 / GND	BAR_GND_1.5 → BAR_GND_1.6	47,18 → 48,18
W13 / GND	BAR_GND_1.6 → BAR_GND_1.7	48,18 → 49,18
W14 / GND	BAR_GND_1.7 → BAR_GND_1.8	49,18 → 51,18

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP09 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

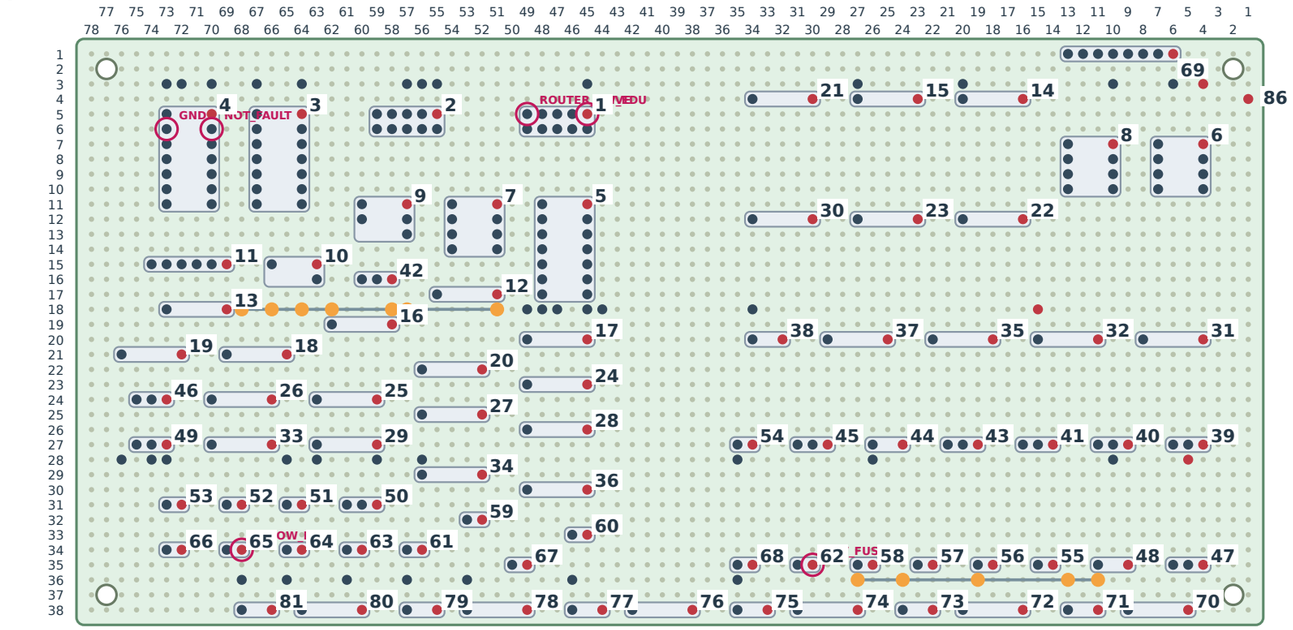

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W15 / GND	BAR_GND_1.8 → BAR_GND_1.9	51,18 → 57,18
W16 / GND	BAR_GND_1.9 → BAR_GND_1.10	57,18 → 58,18
W17 / GND	BAR_GND_1.10 → BAR_GND_1.11	58,18 → 62,18
W18 / GND	BAR_GND_1.11 → BAR_GND_1.12	62,18 → 64,18
W19 / GND	BAR_GND_1.12 → BAR_GND_1.13	64,18 → 66,18
W20 / GND	BAR_GND_1.13 → BAR_GND_1.14	66,18 → 68,18
W21 / GND	BAR_GND_2.1 → BAR_GND_2.2	11,36 → 13,36
W22 / GND	BAR_GND_2.2 → BAR_GND_2.3	13,36 → 19,36
W23 / GND	BAR_GND_2.3 → BAR_GND_2.4	19,36 → 24,36
W24 / GND	BAR_GND_2.4 → BAR_GND_2.5	24,36 → 27,36

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP09 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

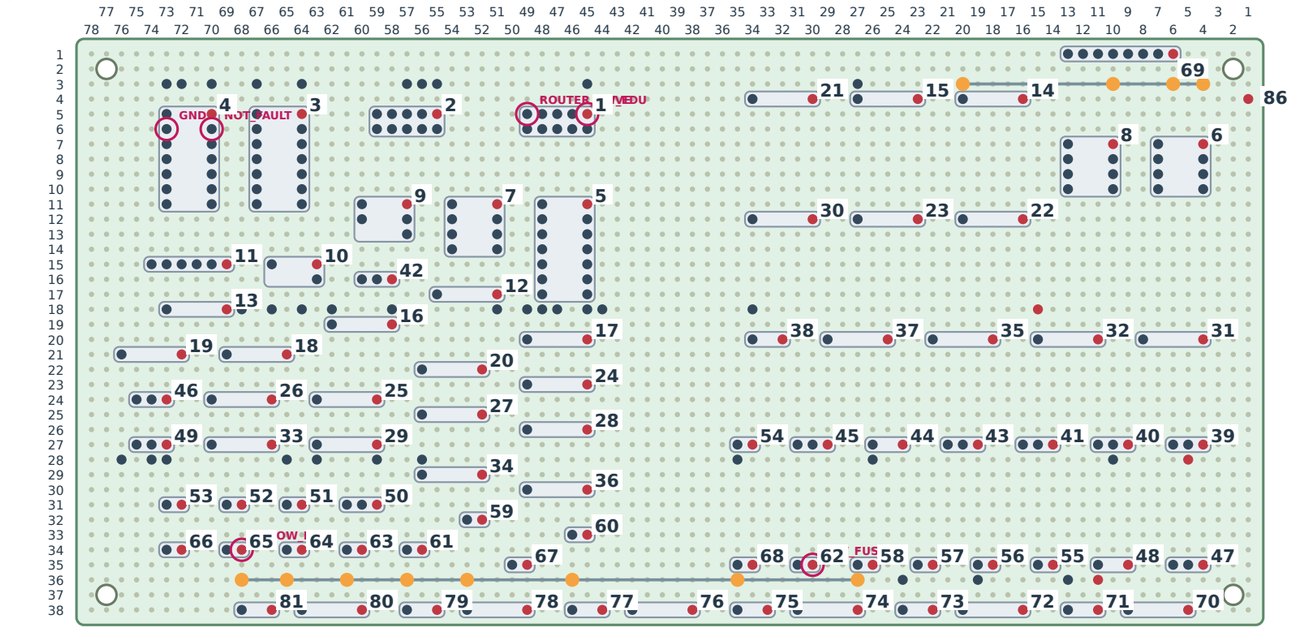

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W25 / GND	BAR_GND_2.5 → BAR_GND_2.6	27,36 → 35,36
W26 / GND	BAR_GND_2.6 → BAR_GND_2.7	35,36 → 46,36
W27 / GND	BAR_GND_2.7 → BAR_GND_2.8	46,36 → 53,36
W28 / GND	BAR_GND_2.8 → BAR_GND_2.9	53,36 → 57,36
W29 / GND	BAR_GND_2.9 → BAR_GND_2.10	57,36 → 61,36
W30 / GND	BAR_GND_2.10 → BAR_GND_2.11	61,36 → 65,36
W31 / GND	BAR_GND_2.11 → BAR_GND_2.12	65,36 → 68,36
W32 / GND	BAR_GND_3.1 → BAR_GND_3.2	4,3 → 6,3
W33 / GND	BAR_GND_3.2 → BAR_GND_3.3	6,3 → 10,3
W34 / GND	BAR_GND_3.3 → BAR_GND_3.4	10,3 → 20,3

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP09 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

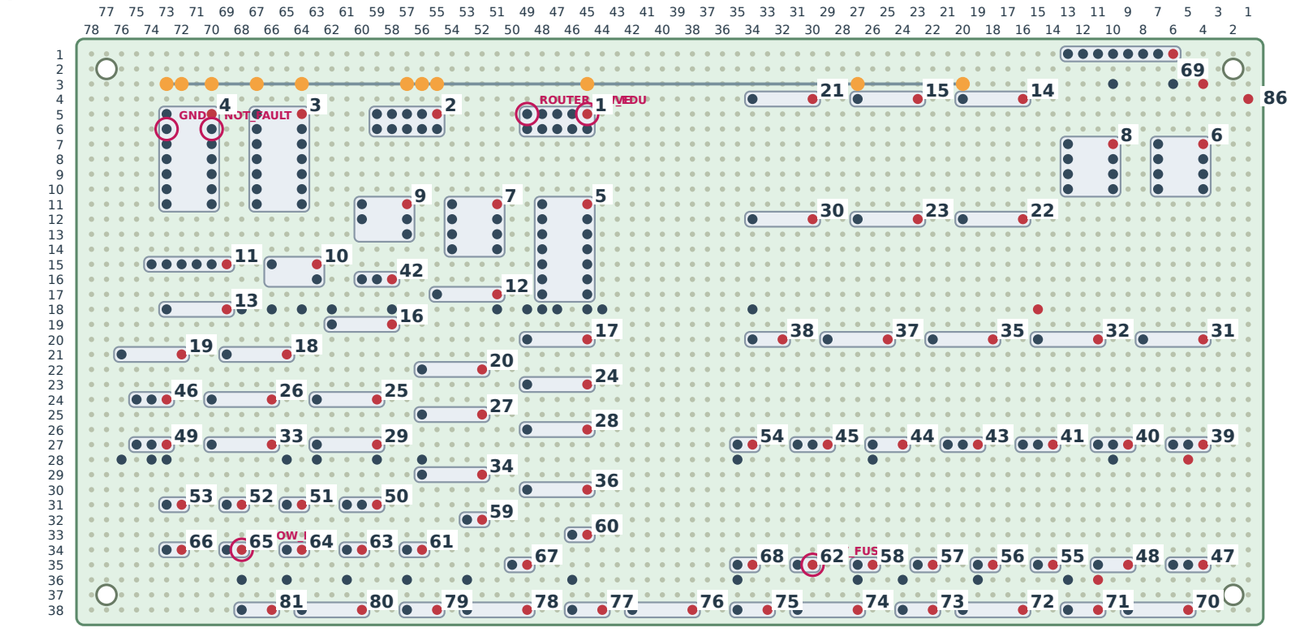

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W35 / GND	BAR_GND_3.4 → BAR_GND_3.5	20,3 → 27,3
W36 / GND	BAR_GND_3.5 → BAR_GND_3.6	27,3 → 45,3
W37 / GND	BAR_GND_3.6 → BAR_GND_3.7	45,3 → 55,3
W38 / GND	BAR_GND_3.7 → BAR_GND_3.8	55,3 → 56,3
W39 / GND	BAR_GND_3.8 → BAR_GND_3.9	56,3 → 57,3
W40 / GND	BAR_GND_3.9 → BAR_GND_3.10	57,3 → 64,3
W41 / GND	BAR_GND_3.10 → BAR_GND_3.11	64,3 → 67,3
W42 / GND	BAR_GND_3.11 → BAR_GND_3.12	67,3 → 70,3
W43 / GND	BAR_GND_3.12 → BAR_GND_3.13	70,3 → 72,3
W44 / GND	BAR_GND_3.13 → BAR_GND_3.14	72,3 → 73,3

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP09 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

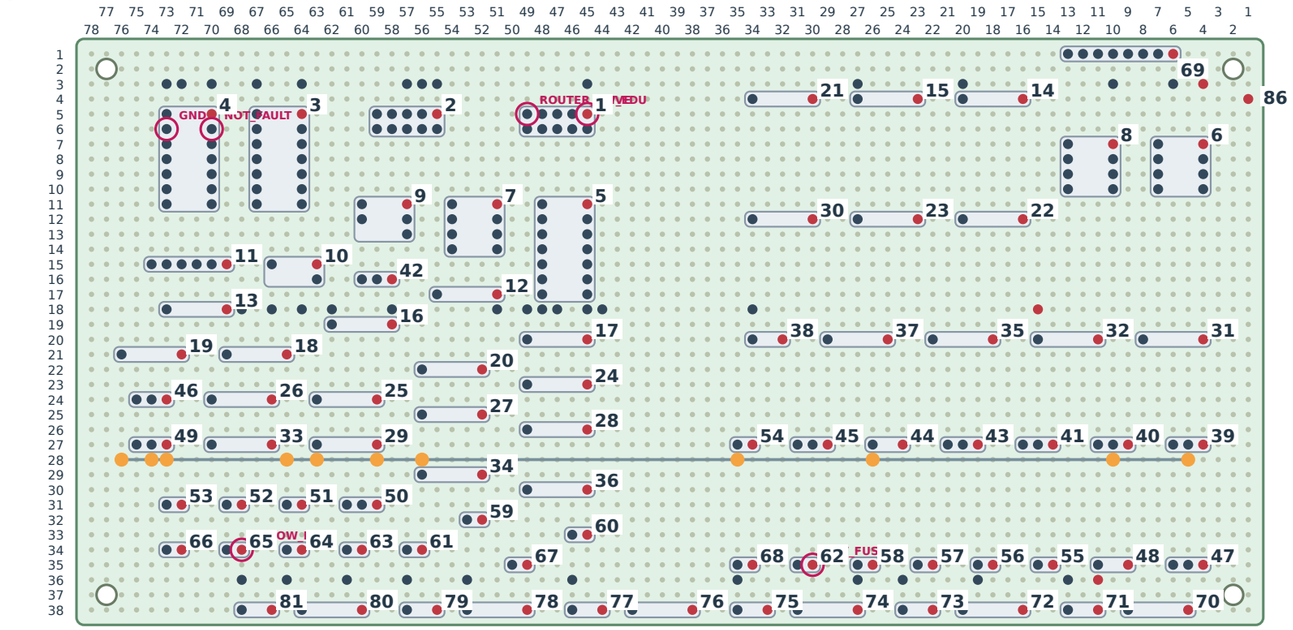

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W45 / GND	BAR_GND_4.1 → BAR_GND_4.2	5,28 → 10,28
W46 / GND	BAR_GND_4.2 → BAR_GND_4.3	10,28 → 26,28
W47 / GND	BAR_GND_4.3 → BAR_GND_4.4	26,28 → 35,28
W48 / GND	BAR_GND_4.4 → BAR_GND_4.5	35,28 → 56,28
W49 / GND	BAR_GND_4.5 → BAR_GND_4.6	56,28 → 59,28
W50 / GND	BAR_GND_4.6 → BAR_GND_4.7	59,28 → 63,28
W51 / GND	BAR_GND_4.7 → BAR_GND_4.8	63,28 → 65,28
W52 / GND	BAR_GND_4.8 → BAR_GND_4.9	65,28 → 73,28
W53 / GND	BAR_GND_4.9 → BAR_GND_4.10	73,28 → 74,28
W54 / GND	BAR_GND_4.10 → BAR_GND_4.11	74,28 → 76,28

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP09 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

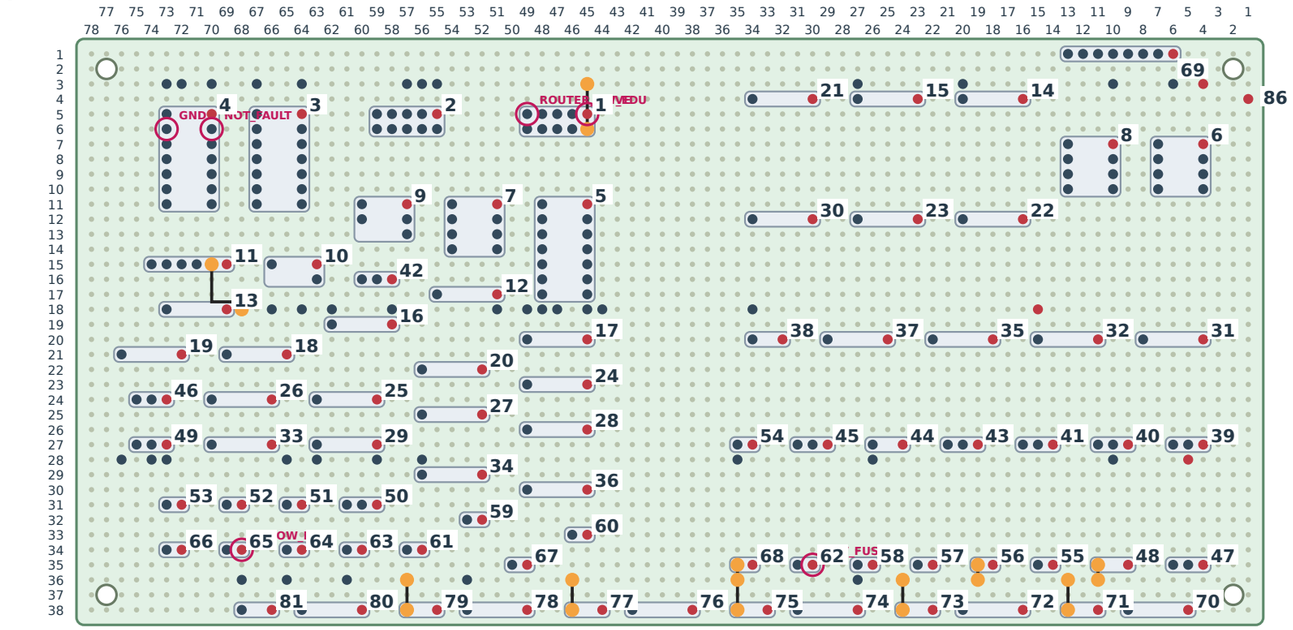

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W66 / GND	J_POWER_INTERLOCK_TEST.2 → BAR_GND_1.14	70,15 → 68,18
W74 / GND	C_POWER_INPUT_INPUT.2 → BAR_GND_2.1	11,35 → 11,36
W75 / GND	C_POWER_INPUT_INPUT_HF.2 → BAR_GND_2.3	19,35 → 19,36
W82 / GND	J_POWER_INPUT_INPUT.2 → BAR_GND_2.6	35,35 → 35,36
W83 / GND	LED_12VFUSED.2 → BAR_GND_2.2	13,38 → 13,36
W84 / GND	LED_BUCK5V.2 → BAR_GND_2.4	24,38 → 24,36
W85 / GND	LED_BUCK3V3.2 → BAR_GND_2.6	35,38 → 35,36
W86 / GND	LED_5VSYS.2 → BAR_GND_2.7	46,38 → 46,36
W87 / GND	LED_3V3SYS.2 → BAR_GND_2.9	57,38 → 57,36
W89 / GND	J_POWER_INTERLOCK_MATRIX.2 → BAR_GND_3.6	45,6 → 45,3

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP09 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

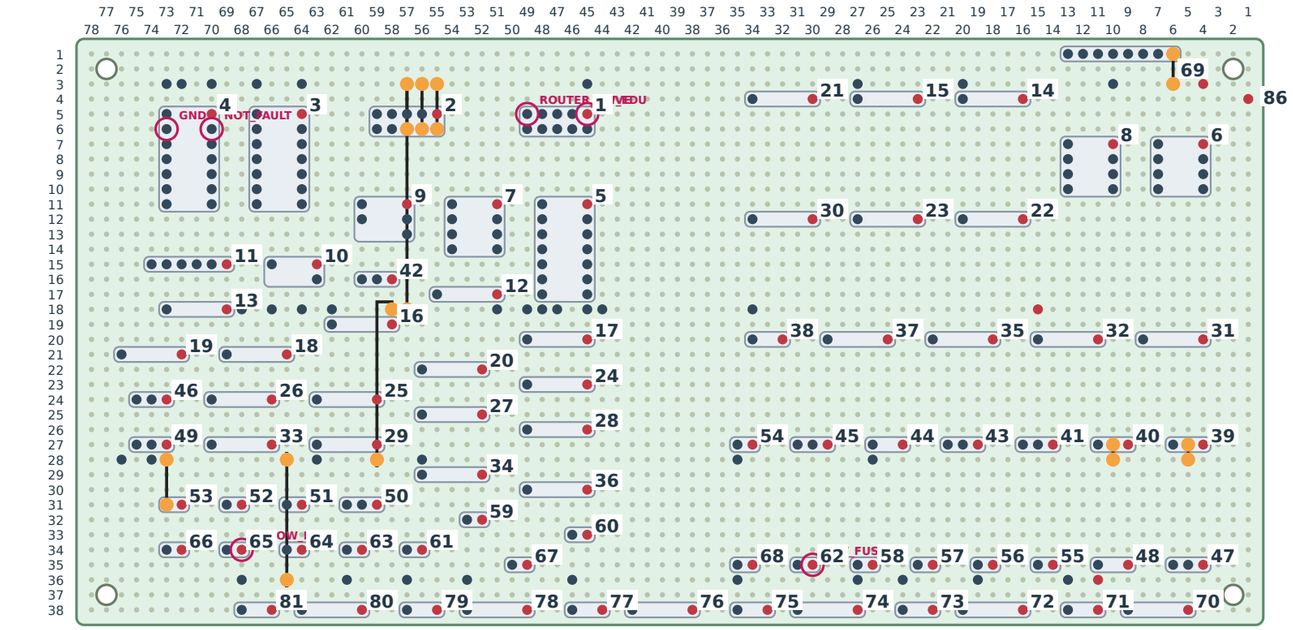

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W90 / GND	J_POWER_INTERLOCK_SMART.2 → BAR_GND_3.7	55,6 → 55,3
W91 / GND	J_POWER_INTERLOCK_SMART.4 → BAR_GND_3.8	56,6 → 56,3
W92 / GND	J_POWER_INTERLOCK_SMART.6 → BAR_GND_3.9	57,6 → 57,3
W106 / GND	J_PROBE.1 → BAR_GND_3.2	6,1 → 6,3
W111 / GND	J_POWER_INPUT_BUCK_3V3.2 → BAR_GND_4.1	5,27 → 5,28
W112 / GND	J_POWER_INPUT_BUCK_5V.2 → BAR_GND_4.2	10,27 → 10,28
W117 / GND	J_POWER_INTERLOCK_FIXED_BATTERY.2 → BAR_GND_4.9	73,31 → 73,28
W119 / GND	BAR_GND_1.10 → BAR_GND_4.6	58,18 → 59,28
W120 / GND	BAR_GND_4.8 → BAR_GND_2.11	65,28 → 65,36
W121 / GND	BAR_GND_1.9 → BAR_GND_3.9	57,18 → 57,3

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP09 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

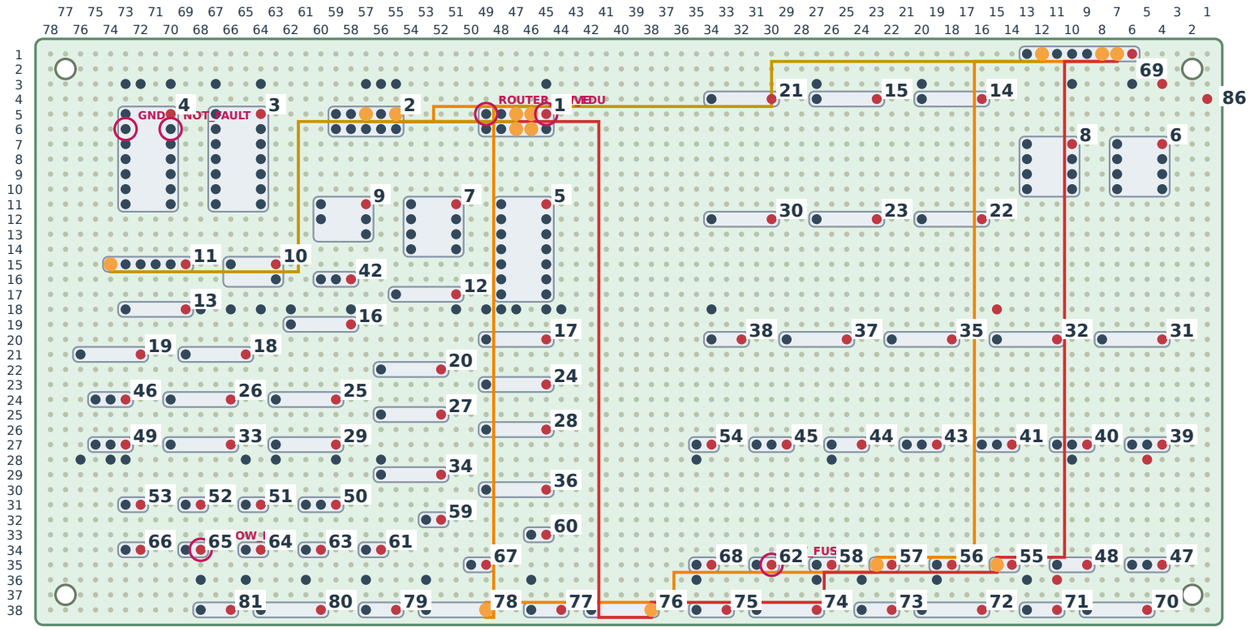

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W122 / 3V3_SYS	J_POWER_INTERLOCK_MATRIX.3 → J_POWER_INTERLOCK_SMART.5	46,5 → 57,5
W123 / 3V3_SYS	J_POWER_INTERLOCK_MATRIX.3 → R_LED_3V3SYS.1	46,5 → 49,38
W124 / 3V3_SYS	R_LED_3V3SYS.1 → JP_POWER_INPUT_3V3.2	49,38 → 23,35
W125 / 3V3_SYS	JP_POWER_INPUT_3V3.2 → J_PROBE.3	23,35 → 8,1
W139 / 5V_SYS	J_POWER_INTERLOCK_MATRIX.4 → J_POWER_INTERLOCK_SMART.1	46,6 → 55,5
W140 / 5V_SYS	J_POWER_INTERLOCK_MATRIX.4 → R_LED_5VSYS.1	46,6 → 38,38
W141 / 5V_SYS	R_LED_5VSYS.1 → JP_POWER_INPUT_LOGIC.2	38,38 → 15,35
W142 / 5V_SYS	JP_POWER_INPUT_LOGIC.2 → J_PROBE.2	15,35 → 7,1
W148 / EDU_PWR_EN	J_POWER_INTERLOCK_MATRIX.5 → J_PROBE.7	47,5 → 12,1
W150 / EDU_FAULT	J_POWER_INTERLOCK_MATRIX.6 → J_POWER_INTERLOCK_TEST.6	47,6 → 74,15

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP09 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

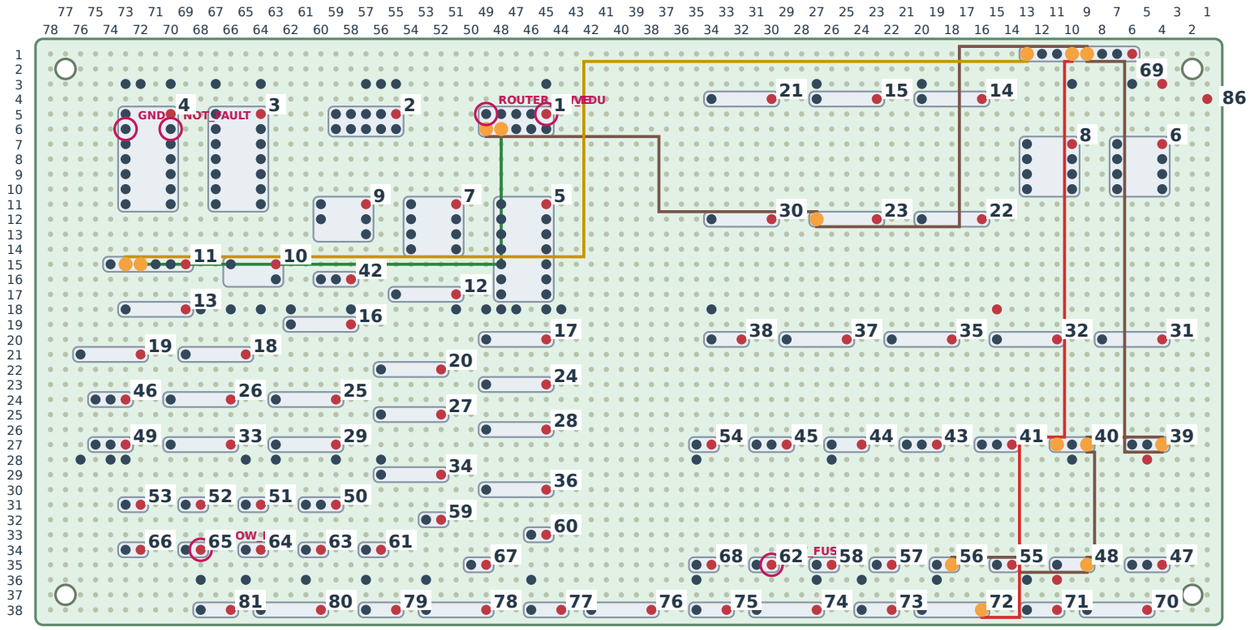

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W154 / CURRENT_SENSE	J_POWER_INTERLOCK_MATRIX.8 → J_POWER_INTERLOCK_TEST.4	48,6 → 72,15
W158 / 12V_SYS	C_POWER_INPUT_INPUT_HF.1 → C_POWER_INPUT_INPUT.1	18,35 → 9,35
W159 / 12V_SYS	C_POWER_INPUT_INPUT.1 → J_POWER_INPUT_BUCK_5V.1	9,35 → 9,27
W160 / 12V_SYS	J_POWER_INPUT_BUCK_5V.1 → J_POWER_INPUT_BUCK_3V3.1	9,27 → 4,27
W161 / 12V_SYS	J_POWER_INPUT_BUCK_3V3.1 → J_PROBE.4	4,27 → 9,1
W162 / 12V_SYS	J_PROBE.4 → D_POWER_INPUT_REVERSE.2	9,1 → 27,12
W163 / 12V_SYS	D_POWER_INPUT_REVERSE.2 → J_POWER_INTERLOCK_MATRIX.10	27,12 → 49,6
W169 / PRESET_N	J_POWER_INTERLOCK_TEST.5 → J_PROBE.8	73,15 → 13,1
W185 / BUCK_5V	J_POWER_INPUT_BUCK_5V.3 → R_LED_BUCK5V.1	11,27 → 16,38
W186 / BUCK_5V	J_POWER_INPUT_BUCK_5V.3 → J_PROBE.5	11,27 → 10,1

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP09 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

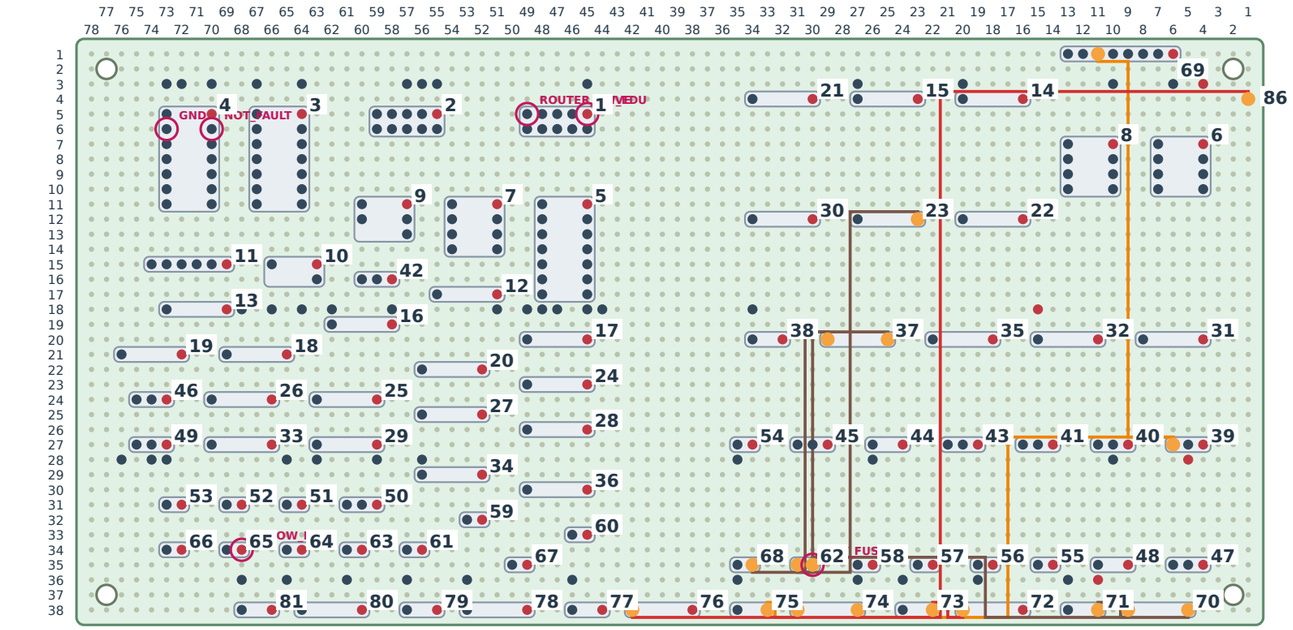

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W208 / BUCK_3V3	J_POWER_INPUT_BUCK_3V3.3 → J_PROBE.6	6,27 → 11,1
W209 / BUCK_3V3	J_POWER_INPUT_BUCK_3V3.3 → R_LED_BUCK3V3.1	6,27 → 27,38
W230 / 12V_SWITCHED	D_POWER_INPUT_REVERSE.1 → J_POWER_INPUT_SW_MAIN.2	23,12 → 31,35
W238 / 12V_IN	F_POWER_INPUT_INPUT.1 → J_POWER_INPUT_INPUT.1	25,20 → 34,35
W239 / 12V_FUSED	F_POWER_INPUT_INPUT.2 → J_POWER_INPUT_SW_MAIN.1	29,20 → 30,35
W240 / 12V_FUSED	J_POWER_INPUT_SW_MAIN.1 → R_LED_12VFUSED.1	30,35 → 5,38
W244 / LEDA_12VFUSED	LED_12VFUSED.1 → R_LED_12VFUSED.2	11,38 → 9,38
W245 / LEDA_BUCK5V	LED_BUCK5V.1 → R_LED_BUCK5V.2	22,38 → 20,38
W246 / LEDA_BUCK3V3	LED_BUCK3V3.1 → R_LED_BUCK3V3.2	33,38 → 31,38
W247 / LEDA_5VSYS	J_BOUNDARY_1.1 → R_LED_5VSYS.2	1,4 → 42,38


Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP09 — power

At most ten added wires per view. Inspect each net with power isolated.

Wire / net	From → to	TOP holes
W248 / LEDA_5VSYS	R_LED_5VSYS.2 → LED_5VSYS.1	42,38 → 44,38
W249 / LEDA_3V3SYS	LED_3V3SYS.1 → R_LED_3V3SYS.2	55,38 → 53,38

power — MIRRORED UNDERSIDE

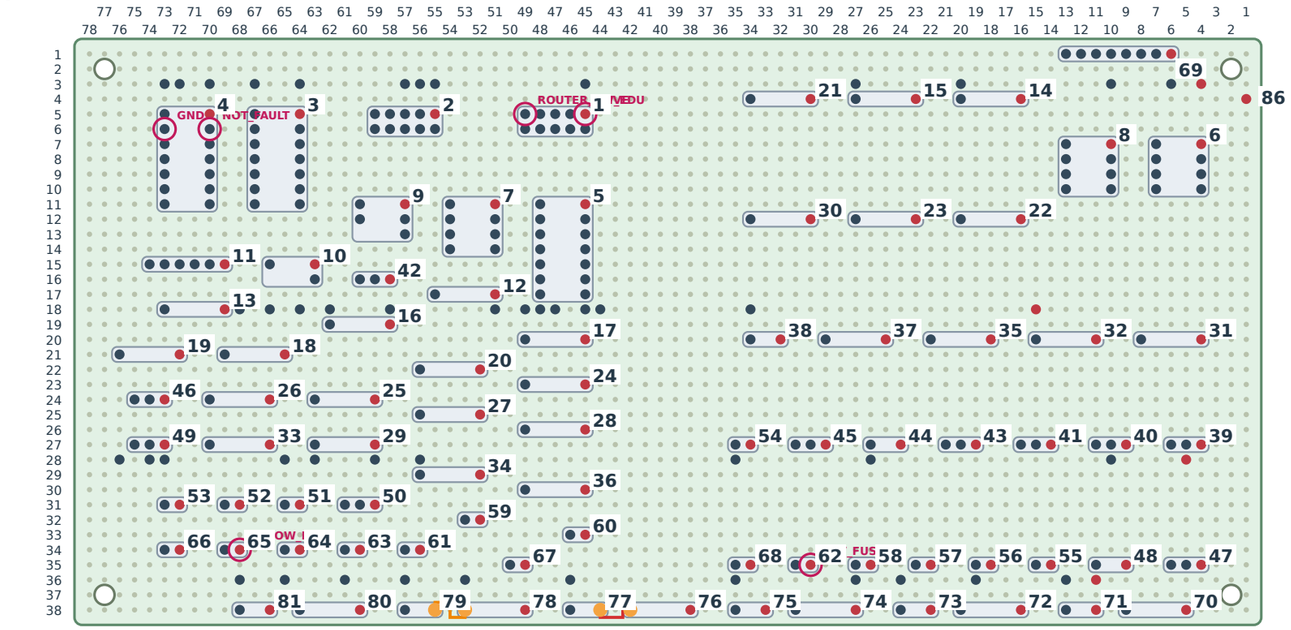

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP10 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

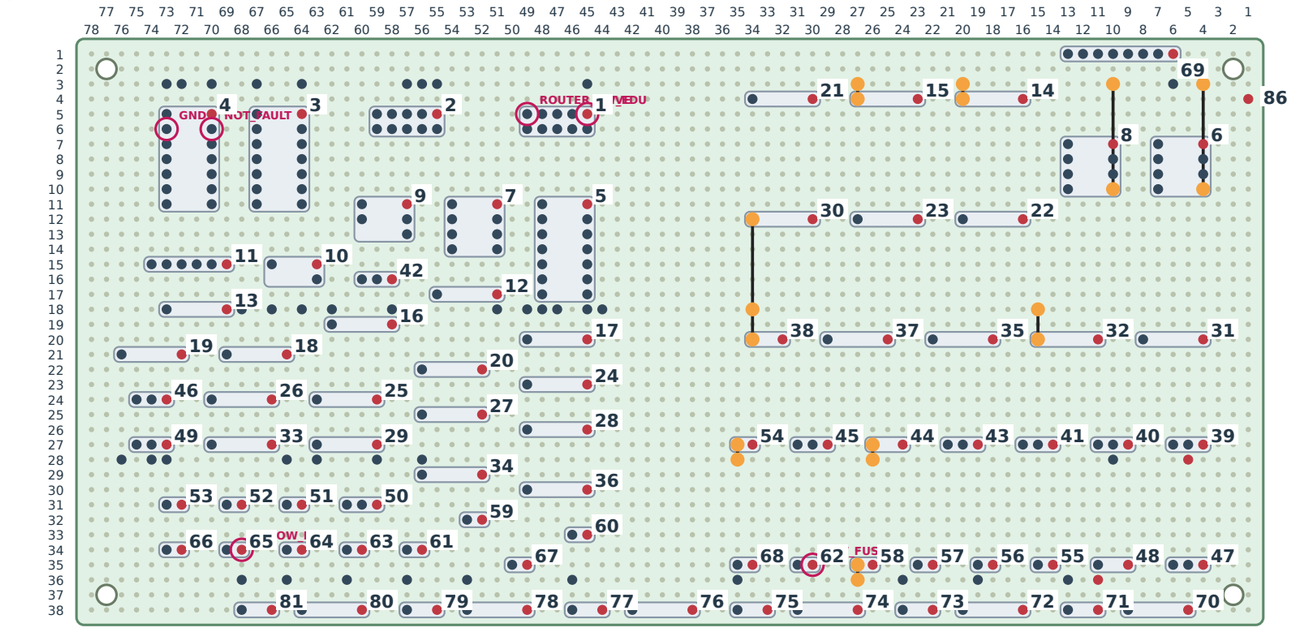

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W70 / GND	R_POWER_GUARDS_OV_5V_BOTTOM.2 → BAR_GND_1.2	34,12 → 34,18
W71 / GND	R_POWER_GUARDS_UV_5V_BOTTOM.2 → BAR_GND_1.1	15,20 → 15,18
W72 / GND	C_POWER_GUARDS_OV_3V3_OUT.2 → BAR_GND_1.2	34,20 → 34,18
W76 / GND	C_POWER_GUARDS_OV_5V_IN.2 → BAR_GND_2.5	27,35 → 27,36
W102 / GND	U_POWER_GUARDS_OV_5V.4 → BAR_GND_3.1	4,10 → 4,3
W103 / GND	U_POWER_GUARDS_OV_3V3.4 → BAR_GND_3.3	10,10 → 10,3
W104 / GND	R_POWER_GUARDS_OV_3V3_BOTTOM.2 → BAR_GND_3.4	20,4 → 20,3
W105 / GND	R_POWER_GUARDS_UV_3V3_BOTTOM.2 → BAR_GND_3.5	27,4 → 27,3
W113 / GND	C_POWER_GUARDS_OV_5V_OUT.2 → BAR_GND_4.3	26,27 → 26,28
W118 / GND	C_POWER_GUARDS_OV_3V3_IN.2 → BAR_GND_4.4	35,27 → 35,28

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP10 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

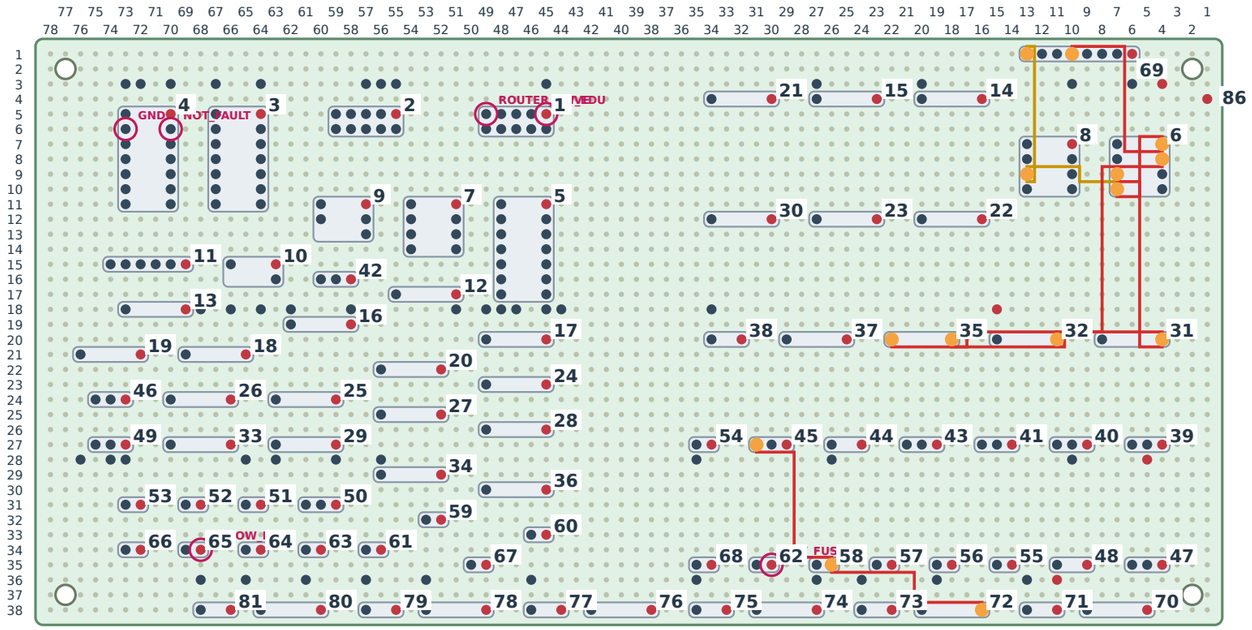

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W170 / PRESET_N	J_PROBE.8 → U_POWER_GUARDS_OV_3V3.6	13,1 → 13,9
W171 / PRESET_N	U_POWER_GUARDS_OV_3V3.6 → U_POWER_GUARDS_OV_5V.6	13,9 → 7,9
W187 / BUCK_5V	J_PROBE.5 → U_POWER_GUARDS_OV_5V.1	10,1 → 4,7
W188 / BUCK_5V	U_POWER_GUARDS_OV_5V.1 → U_POWER_GUARDS_OV_5V.5	4,7 → 7,10
W189 / BUCK_5V	R_LED_BUCK5V.1 → C_POWER_GUARDS_OV_5V_IN.1	16,38 → 26,35
W190 / BUCK_5V	C_POWER_GUARDS_OV_5V_IN.1 → Q_POWER_GUARDS_OV_5V_IN.3	26,35 → 31,27
W191 / BUCK_5V	U_POWER_GUARDS_OV_5V.5 → R_POWER_GUARDS_OV_5V_TOP.1	7,10 → 4,20
W192 / BUCK_5V	R_POWER_GUARDS_OV_5V_TOP.1 → R_POWER_GUARDS_UV_5V_TOP.1	4,20 → 18,20
W193 / UV_5V	R_POWER_GUARDS_UV_5V_BOTTOM.1 → R_POWER_GUARDS_UV_5V_TOP.2	11,20 → 22,20
W194 / UV_5V	R_POWER_GUARDS_UV_5V_BOTTOM.1 → U_POWER_GUARDS_OV_5V.2	11,20 → 4,8

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP10 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

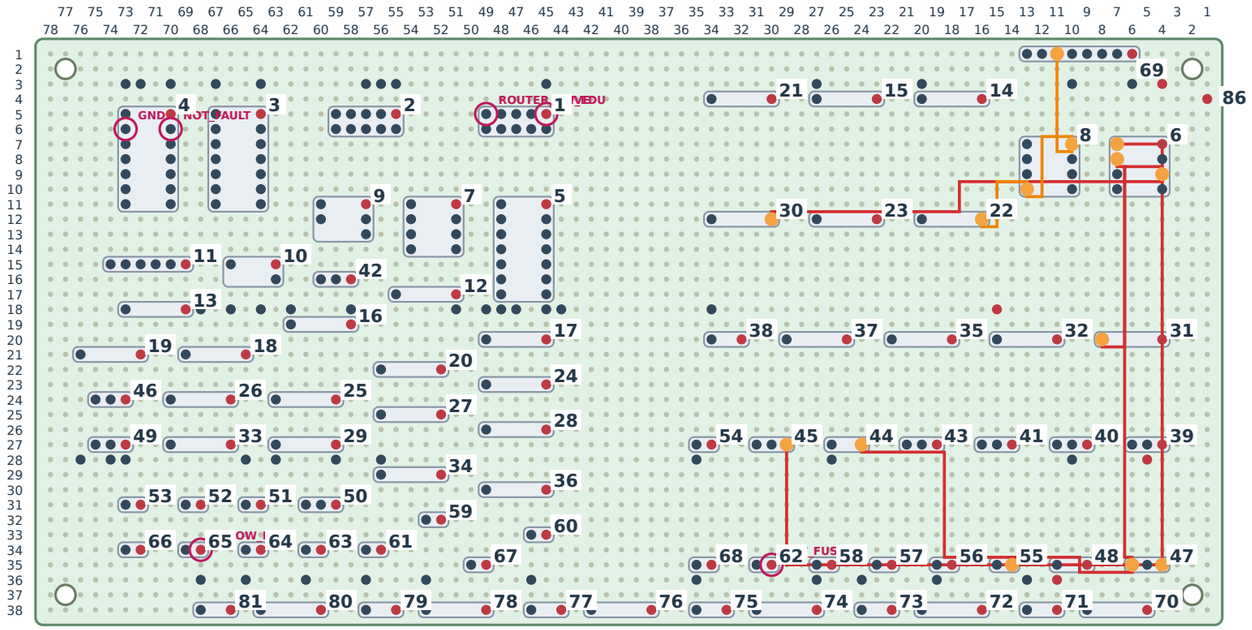

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W195 / OV_5V	R_POWER_GUARDS_OV_5V_BOTTOM.1 → U_POWER_GUARDS_OV_5V.3	30,12 → 4,9
W196 / OV_5V	U_POWER_GUARDS_OV_5V.3 → R_POWER_GUARDS_OV_5V_TOP.2	4,9 → 8,20
W197 / SAFE_5V	JP_POWER_INPUT_LOGIC.1 → Q_POWER_GUARDS_OV_5V_OUT.3	14,35 → 6,35
W198 / SAFE_5V	JP_POWER_INPUT_LOGIC.1 → C_POWER_GUARDS_OV_5V_OUT.1	14,35 → 24,27
W199 / SAFE_5V	Q_POWER_GUARDS_OV_5V_OUT.3 → U_POWER_GUARDS_OV_5V.7	6,35 → 7,8
W200 / OV_GATE_5V	Q_POWER_GUARDS_OV_5V_IN.1 → Q_POWER_GUARDS_OV_5V_OUT.1	29,27 → 4,35
W201 / OV_GATE_5V	Q_POWER_GUARDS_OV_5V_OUT.1 → U_POWER_GUARDS_OV_5V.8	4,35 → 7,7
W210 / BUCK_3V3	J_PROBE.6 → U_POWER_GUARDS_OV_3V3.1	11,1 → 10,7
W211 / BUCK_3V3	U_POWER_GUARDS_OV_3V3.1 → U_POWER_GUARDS_OV_3V3.5	10,7 → 13,10
W212 / BUCK_3V3	U_POWER_GUARDS_OV_3V3.5 → R_POWER_GUARDS_UV_3V3_TOP.1	13,10 → 16,12

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP10 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

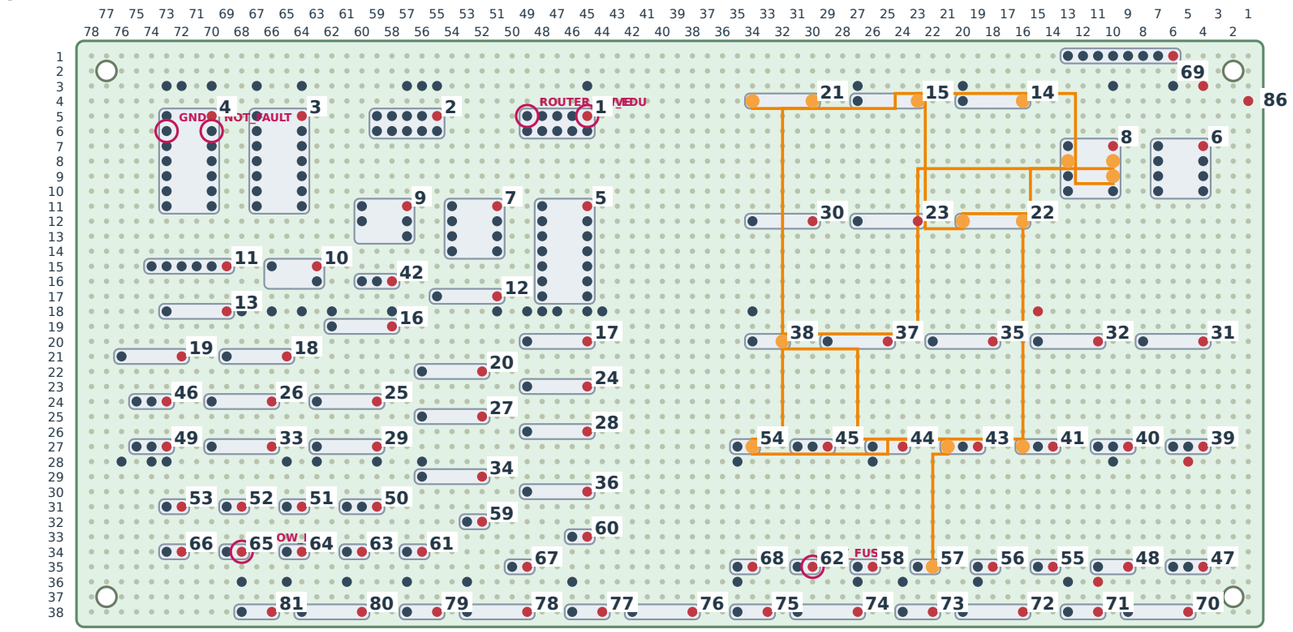

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W213 / BUCK_3V3	R_POWER_GUARDS_UV_3V3_TOP.1 → Q_POWER_GUARDS_OV_3V3_IN.3	16,12 → 16,27
W214 / BUCK_3V3	Q_POWER_GUARDS_OV_3V3_IN.3 → C_POWER_GUARDS_OV_3V3_IN.1	16,27 → 34,27
W215 / BUCK_3V3	C_POWER_GUARDS_OV_3V3_IN.1 → R_POWER_GUARDS_OV_3V3_TOP.1	34,27 → 30,4
W216 / UV_3V3	R_POWER_GUARDS_UV_3V3_BOTTOM.1 → R_POWER_GUARDS_UV_3V3_TOP.2	23,4 → 20,12
W217 / UV_3V3	R_POWER_GUARDS_UV_3V3_TOP.2 → U_POWER_GUARDS_OV_3V3.2	20,12 → 10,8
W218 / OV_3V3	R_POWER_GUARDS_OV_3V3_BOTTOM.1 → U_POWER_GUARDS_OV_3V3.3	16,4 → 10,9
W219 / OV_3V3	R_POWER_GUARDS_OV_3V3_BOTTOM.1 → R_POWER_GUARDS_OV_3V3_TOP.2	16,4 → 34,4
W220 / SAFE_3V3	JP_POWER_INPUT_3V3.1 → Q_POWER_GUARDS_OV_3V3_OUT.3	22,35 → 21,27
W221 / SAFE_3V3	Q_POWER_GUARDS_OV_3V3_OUT.3 → C_POWER_GUARDS_OV_3V3_OUT.1	21,27 → 32,20
W222 / SAFE_3V3	C_POWER_GUARDS_OV_3V3_OUT.1 → U_POWER_GUARDS_OV_3V3.7	32,20 → 13,8

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP10 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

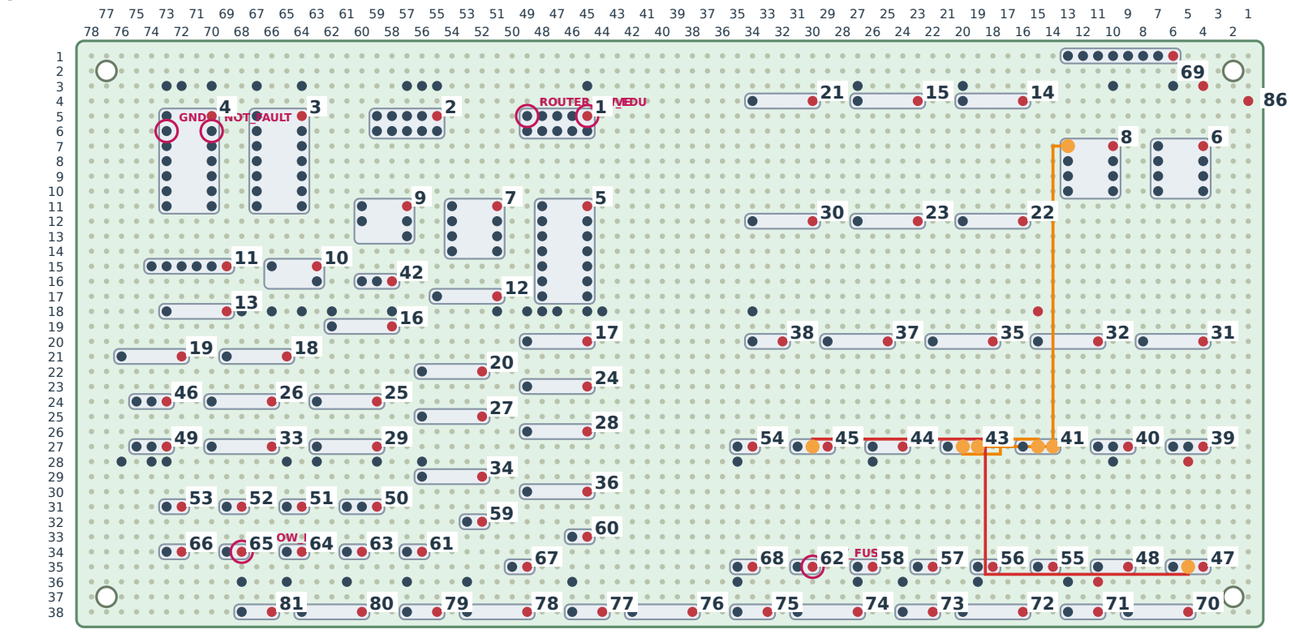

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W223 / OV_GATE_3V3	Q_POWER_GUARDS_OV_3V3_IN.1 → Q_POWER_GUARDS_OV_3V3_OUT.1	14,27 → 19,27
W224 / OV_GATE_3V3	Q_POWER_GUARDS_OV_3V3_IN.1 → U_POWER_GUARDS_OV_3V3.8	14,27 → 13,7
W241 / OV_MID_3V3	Q_POWER_GUARDS_OV_3V3_IN.2 → Q_POWER_GUARDS_OV_3V3_OUT.2	15,27 → 20,27
W243 / OV_MID_5V	Q_POWER_GUARDS_OV_5V_IN.2 → Q_POWER_GUARDS_OV_5V_OUT.2	30,27 → 5,35

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

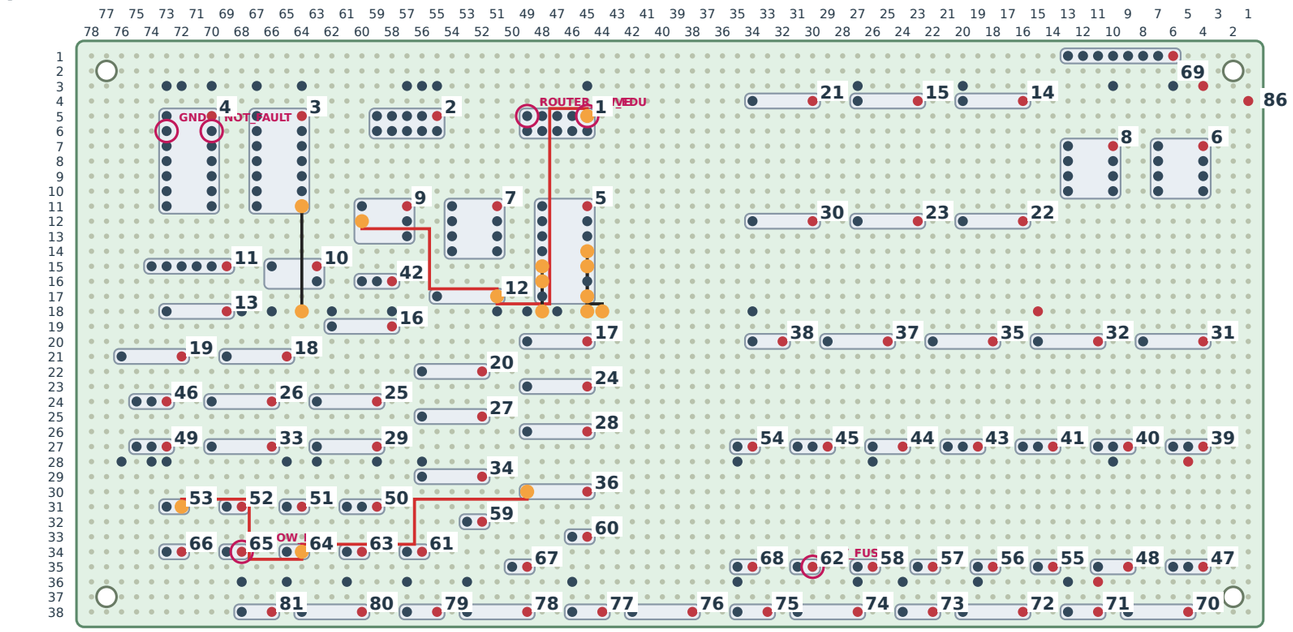

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W4 / 5V_EDU	J_POWER_INTERLOCK_FIXED_BATTERY.1 → C_POWER_ANALOG_EDU.1	72,31 → 64,34
W5 / 5V_EDU	J_POWER_INTERLOCK_MATRIX.1 → R_POWER_ANALOG_EDU_TOP.1	45,5 → 51,17
W6 / 5V_EDU	R_POWER_ANALOG_EDU_TOP.1 → U_POWER_ANALOG_SENSE.4	51,17 → 60,12
W7 / 5V_EDU	C_POWER_ANALOG_EDU.1 → R_POWER_ANALOG_SHUNT.2	64,34 → 49,30
W55 / GND	U_POWER_INTERLOCK_FAULT.7 → BAR_GND_1.12	64,11 → 64,18
W56 / GND	U_POWER_INTERLOCK_RESET.4 → BAR_GND_1.4	45,14 → 45,18
W57 / GND	U_POWER_INTERLOCK_RESET.5 → BAR_GND_1.4	45,15 → 45,18
W58 / GND	U_POWER_INTERLOCK_RESET.7 → BAR_GND_1.3	45,17 → 44,18
W59 / GND	U_POWER_INTERLOCK_RESET.9 → BAR_GND_1.6	48,16 → 48,18
W60 / GND	U_POWER_INTERLOCK_RESET.10 → BAR_GND_1.6	48,15 → 48,18

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

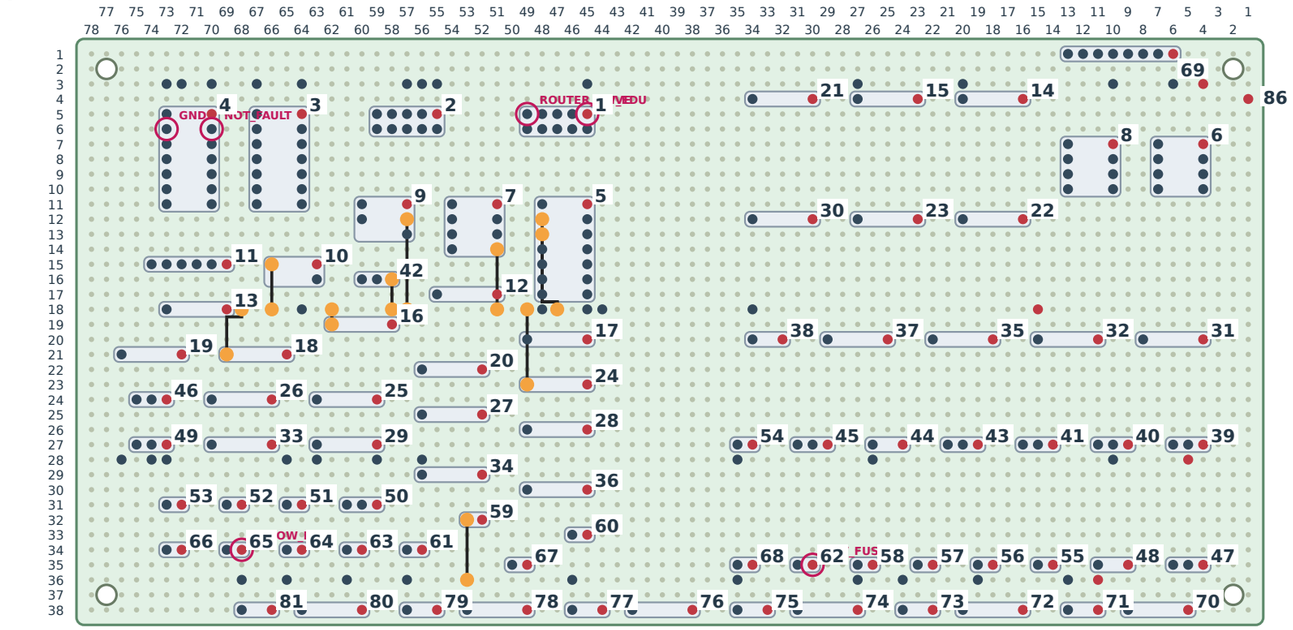

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W61 / GND	U_POWER_INTERLOCK_RESET.12 → BAR_GND_1.5	48,13 → 47,18
W62 / GND	U_POWER_INTERLOCK_RESET.13 → BAR_GND_1.5	48,12 → 47,18
W63 / GND	U_POWER_ANALOG_TRIP.4 → BAR_GND_1.8	51,14 → 51,18
W64 / GND	U_POWER_ANALOG_SENSE.2 → BAR_GND_1.9	57,12 → 57,18
W65 / GND	U_POWER_INTERLOCK_POR.3 → BAR_GND_1.13	66,15 → 66,18
W67 / GND	R_POWER_INTERLOCK_EDU_FAULT_RESET_OFF.2 → BAR_GND_1.11	62,19 → 62,18
W68 / GND	R_POWER_ANALOG_TRIP_BOTTOM.2 → BAR_GND_1.14	69,21 → 68,18
W69 / GND	R_POWER_INTERLOCK_EDU_PWR_EN_OFF.2 → BAR_GND_1.7	49,23 → 49,18
W73 / GND	Q_POWER_INTERLOCK_BATTERY_LED.1 → BAR_GND_1.10	58,16 → 58,18
W77 / GND	C_POWER_INTERLOCK_FAULT.2 → BAR_GND_2.8	53,32 → 53,36

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

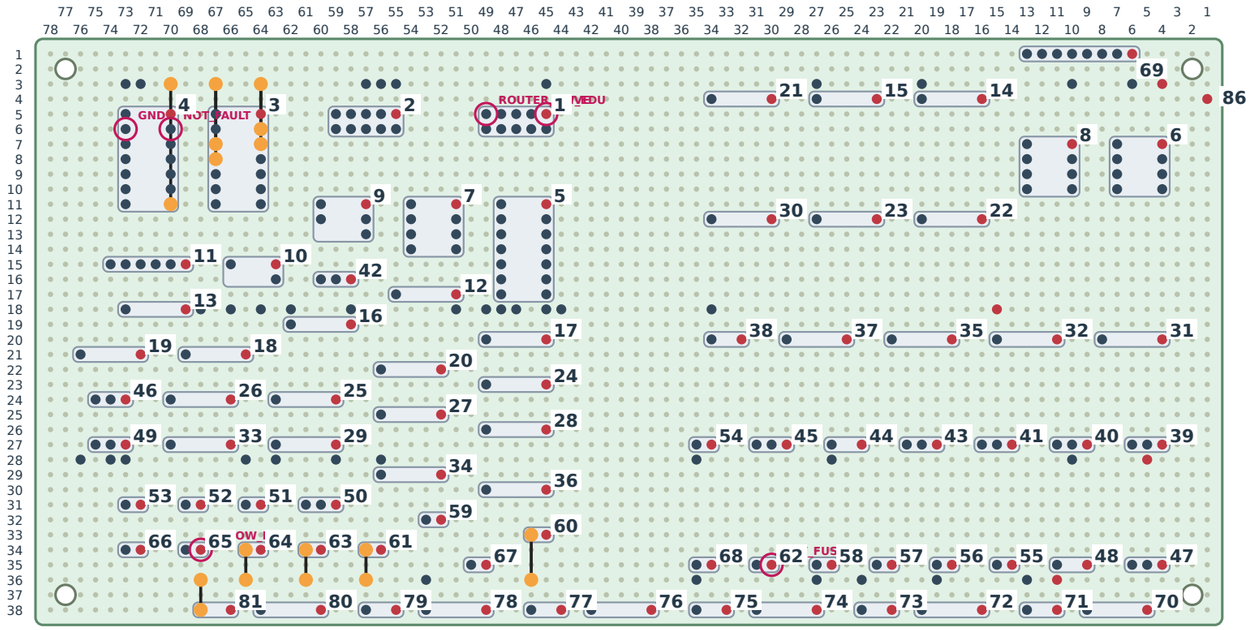

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W78 / GND	C_POWER_INTERLOCK_RESET.2 → BAR_GND_2.7	46,33 → 46,36
W79 / GND	C_POWER_ANALOG_SENSE.2 → BAR_GND_2.9	57,34 → 57,36
W80 / GND	C_POWER_INTERLOCK_ALLOW.2 → BAR_GND_2.10	61,34 → 61,36
W81 / GND	C_POWER_ANALOG_EDU.2 → BAR_GND_2.11	65,34 → 65,36
W88 / GND	LED_NOTFAULT.2 → BAR_GND_2.12	68,38 → 68,36
W93 / GND	U_POWER_INTERLOCK_FAULT.2 → BAR_GND_3.10	64,6 → 64,3
W94 / GND	U_POWER_INTERLOCK_FAULT.3 → BAR_GND_3.10	64,7 → 64,3
W95 / GND	U_POWER_INTERLOCK_FAULT.11 → BAR_GND_3.11	67,8 → 67,3
W96 / GND	U_POWER_INTERLOCK_FAULT.12 → BAR_GND_3.11	67,7 → 67,3
W97 / GND	U_POWER_INTERLOCK_ALLOW.7 → BAR_GND_3.12	70,11 → 70,3

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

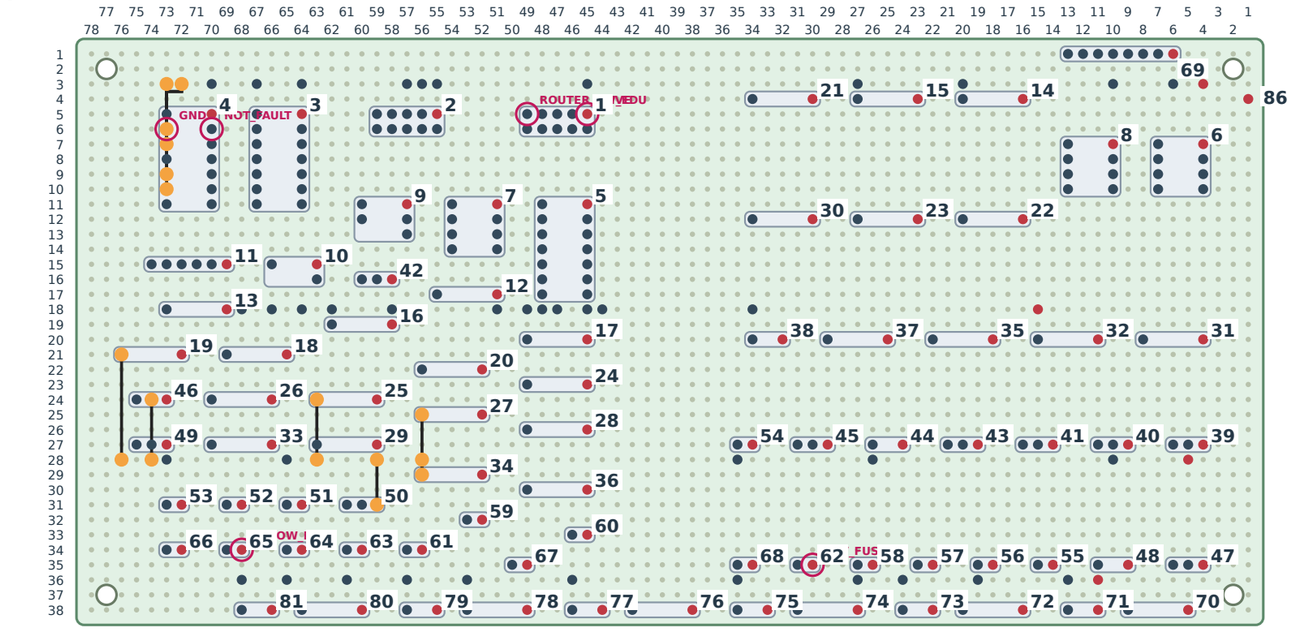

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W98 / GND	U_POWER_INTERLOCK_ALLOW.9 → BAR_GND_3.14	73,10 → 73,3
W99 / GND	U_POWER_INTERLOCK_ALLOW.10 → BAR_GND_3.14	73,9 → 73,3
W100 / GND	U_POWER_INTERLOCK_ALLOW.12 → BAR_GND_3.13	73,7 → 72,3
W101 / GND	U_POWER_INTERLOCK_ALLOW.13 → BAR_GND_3.13	73,6 → 72,3
W107 / GND	R_POWER_ANALOG_EDU_BOTTOM.2 → BAR_GND_4.11	76,21 → 76,28
W108 / GND	R_POWER_INTERLOCK_ROUTER_ALIVE_OFF.2 → BAR_GND_4.7	63,24 → 63,28
W109 / GND	R_POWER_INTERLOCK_LED_GATE_OFF.2 → BAR_GND_4.5	56,25 → 56,28
W110 / GND	R_R7_PASS_PD.2 → BAR_GND_4.5	56,29 → 56,28
W114 / GND	U_POWER_ANALOG_REF.2 → BAR_GND_4.10	74,24 → 74,28
W115 / GND	Q_POWER_ANALOG_ENABLE.1 → BAR_GND_4.6	59,31 → 59,28

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

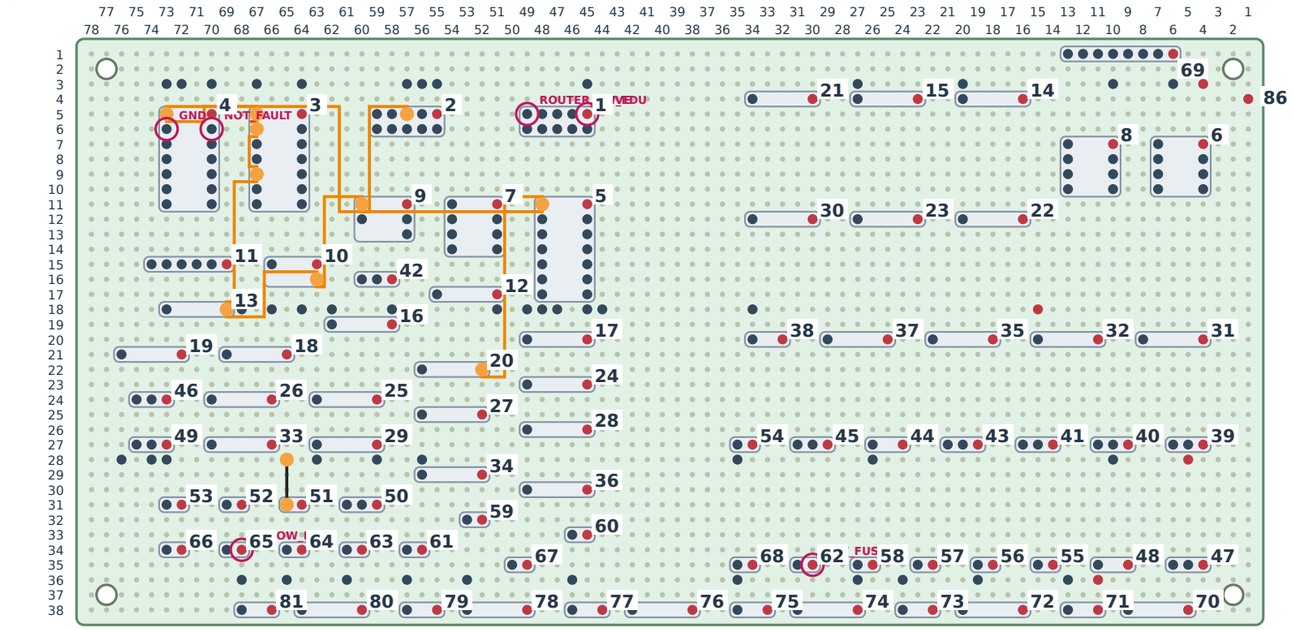

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W116 / GND	C_POWER_ANALOG_TRIP.2 → BAR_GND_4.8	65,31 → 65,28
W126 / 3V3_SYS	J_POWER_INTERLOCK_SMART.5 → U_POWER_ANALOG_SENSE.5	57,5 → 60,11
W127 / 3V3_SYS	U_POWER_ANALOG_SENSE.5 → U_POWER_INTERLOCK_POR.2	60,11 → 63,16
W128 / 3V3_SYS	U_POWER_INTERLOCK_POR.2 → R_POWER_ANALOG_EDU_ON.1	63,16 → 69,18
W129 / 3V3_SYS	R_POWER_ANALOG_EDU_ON.1 → U_POWER_INTERLOCK_FAULT.10	69,18 → 67,9
W130 / 3V3_SYS	U_POWER_INTERLOCK_FAULT.10 → U_POWER_INTERLOCK_FAULT.13	67,9 → 67,6
W131 / 3V3_SYS	U_POWER_INTERLOCK_FAULT.13 → U_POWER_INTERLOCK_FAULT.14	67,6 → 67,5
W132 / 3V3_SYS	U_POWER_INTERLOCK_FAULT.14 → U_POWER_INTERLOCK_ALLOW.14	67,5 → 73,5
W133 / 3V3_SYS	U_POWER_INTERLOCK_ALLOW.14 → U_POWER_INTERLOCK_RESET.14	73,5 → 48,11
W134 / 3V3_SYS	U_POWER_INTERLOCK_RESET.14 → R_POWER_ANALOG_PRESET.1	48,11 → 52,22

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

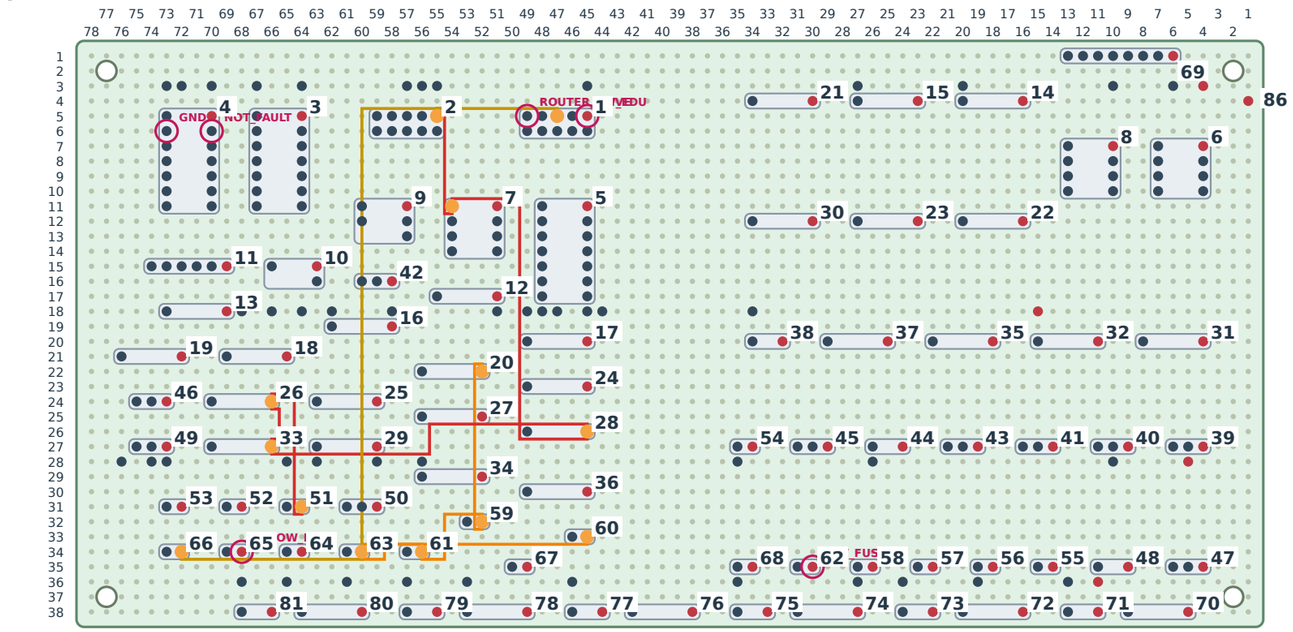

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W135 / 3V3_SYS	R_POWER_ANALOG_PRESET.1 → C_POWER_INTERLOCK_FAULT.1	52,22 → 52,32
W136 / 3V3_SYS	C_POWER_INTERLOCK_FAULT.1 → C_POWER_ANALOG_SENSE.1	52,32 → 56,34
W137 / 3V3_SYS	C_POWER_ANALOG_SENSE.1 → C_POWER_INTERLOCK_ALLOW.1	56,34 → 60,34
W138 / 3V3_SYS	C_POWER_INTERLOCK_ALLOW.1 → C_POWER_INTERLOCK_RESET.1	60,34 → 45,33
W143 / 5V_SYS	J_POWER_INTERLOCK_SMART.1 → U_POWER_ANALOG_TRIP.8	55,5 → 54,11
W144 / 5V_SYS	U_POWER_ANALOG_TRIP.8 → R_POWER_ANALOG_REF_FEED.1	54,11 → 45,26
W145 / 5V_SYS	R_POWER_ANALOG_REF_FEED.1 → F_POWER_ANALOG_EDU.1	45,26 → 66,27
W146 / 5V_SYS	F_POWER_ANALOG_EDU.1 → R_POWER_INTERLOCK_BATTERY_LED.1	66,27 → 66,24
W147 / 5V_SYS	R_POWER_INTERLOCK_BATTERY_LED.1 → C_POWER_ANALOG_TRIP.1	66,24 → 64,31
W149 / EDU_PWR_EN	J_POWER_INTERLOCK_MATRIX.5 → JP_R7_ENABLE.1	47,5 → 72,34

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

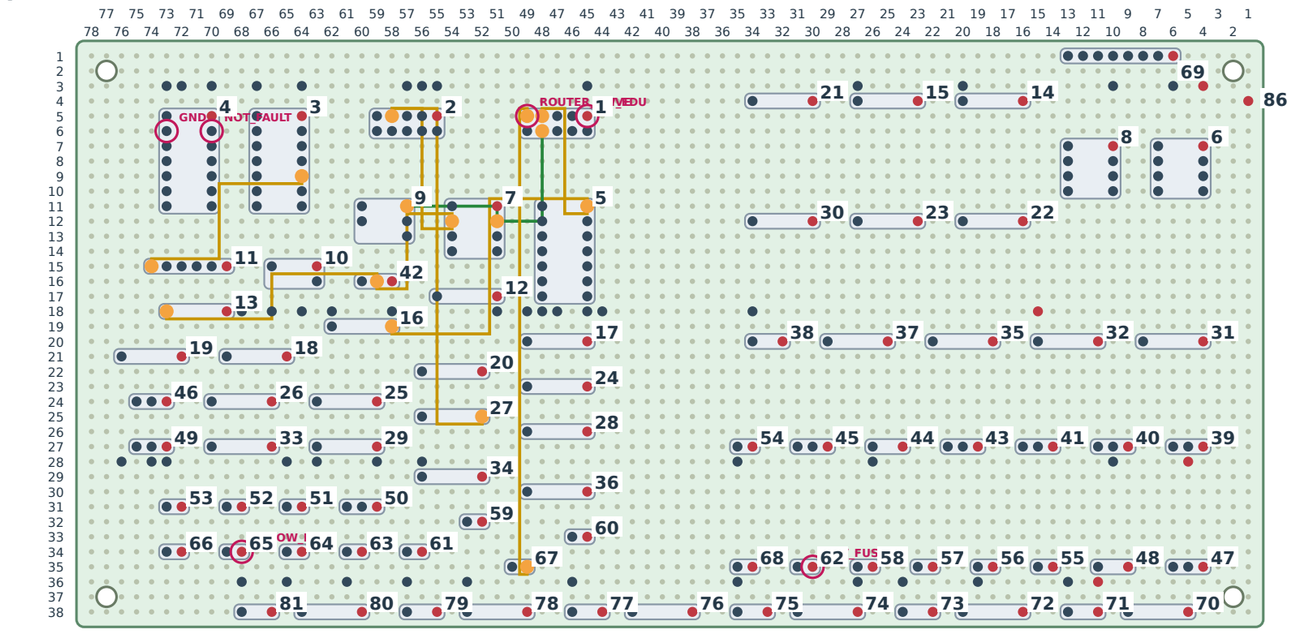

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W151 / EDU_FAULT	J_POWER_INTERLOCK_TEST.6 → U_POWER_INTERLOCK_FAULT.5	74,15 → 64,9
W152 / EDU_FAULT_RESET	J_POWER_INTERLOCK_MATRIX.7 → U_POWER_INTERLOCK_RESET.1	48,5 → 45,11
W153 / EDU_FAULT_RESET	U_POWER_INTERLOCK_RESET.1 → R_POWER_INTERLOCK_EDU_FAULT_RESET_OFF.1	45,11 → 58,19
W155 / CURRENT_SENSE	J_POWER_INTERLOCK_MATRIX.8 → U_POWER_ANALOG_TRIP.2	48,6 → 51,12
W156 / CURRENT_SENSE	U_POWER_ANALOG_TRIP.2 → U_POWER_ANALOG_SENSE.1	51,12 → 57,11
W157 / ROUTER_ALIVE	J_POWER_INTERLOCK_MATRIX.9 → JP_R7_ALIVE.1	49,5 → 49,35
W164 / EDU_ON	J_POWER_INTERLOCK_SMART.7 → U_POWER_ANALOG_TRIP.7	58,5 → 54,12
W165 / EDU_ON	U_POWER_ANALOG_TRIP.7 → Q_POWER_INTERLOCK_BATTERY_LED.2	54,12 → 59,16
W166 / EDU_ON	Q_POWER_INTERLOCK_BATTERY_LED.2 → R_POWER_ANALOG_EDU_ON.2	59,16 → 73,18
W167 / EDU_ON	J_POWER_INTERLOCK_SMART.7 → R_POWER_INTERLOCK_LED_GATE_OFF.1	58,5 → 52,25

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

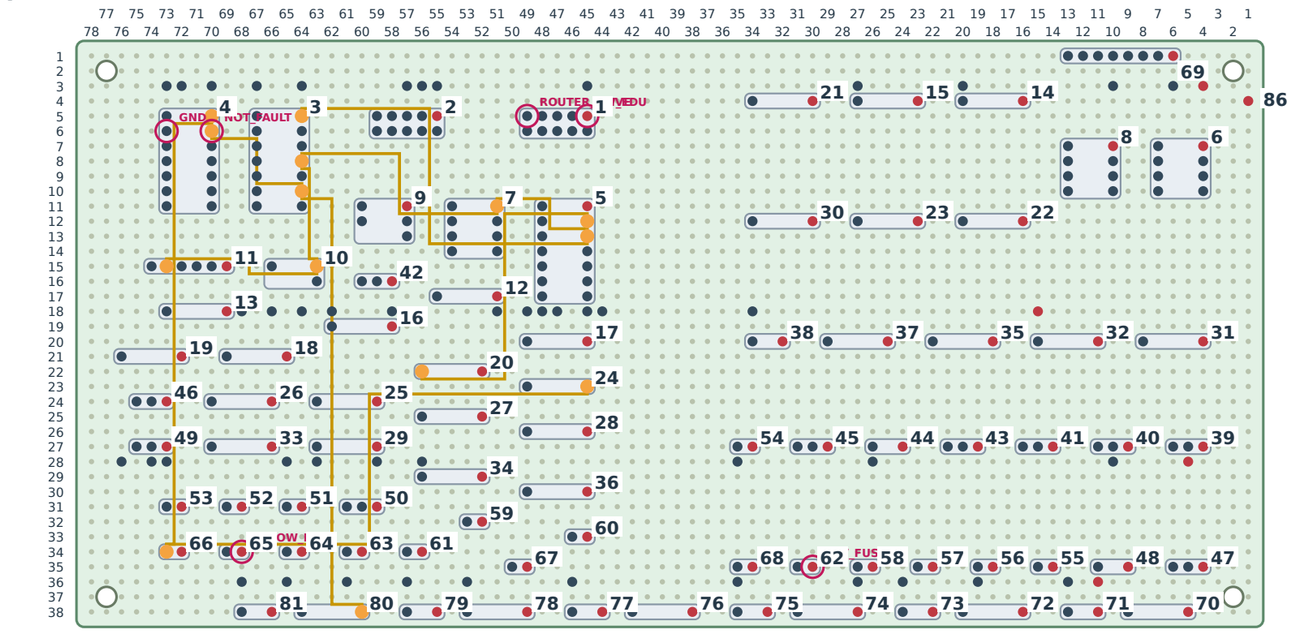

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W168 / CLEAR_N	U_POWER_INTERLOCK_FAULT.1 → U_POWER_INTERLOCK_RESET.3	64,5 → 45,13
W172 / PRESET_N	J_POWER_INTERLOCK_TEST.5 → U_POWER_INTERLOCK_POR.1	73,15 → 63,15
W173 / PRESET_N	U_POWER_INTERLOCK_POR.1 → U_POWER_INTERLOCK_FAULT.4	63,15 → 64,8
W174 / PRESET_N	U_POWER_INTERLOCK_FAULT.4 → U_POWER_ANALOG_TRIP.1	64,8 → 51,11
W175 / PRESET_N	U_POWER_ANALOG_TRIP.1 → U_POWER_INTERLOCK_RESET.2	51,11 → 45,12
W176 / PRESET_N	U_POWER_INTERLOCK_RESET.2 → R_POWER_ANALOG_PRESET.2	45,12 → 56,22
W177 / NOT_FAULT	R_LED_NOTFAULT.1 → U_POWER_INTERLOCK_FAULT.6	60,38 → 64,10
W178 / NOT_FAULT	U_POWER_INTERLOCK_FAULT.6 → U_POWER_INTERLOCK_ALLOW.2	64,10 → 70,6
W179 / EDU_PWR_EN__B	JP_R7_ENABLE.2 → U_POWER_INTERLOCK_ALLOW.1	73,34 → 70,5
W180 / EDU_PWR_EN__B	JP_R7_ENABLE.2 → R_POWER_INTERLOCK_EDU_PWR_EN_OFF.1	73,34 → 45,23

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

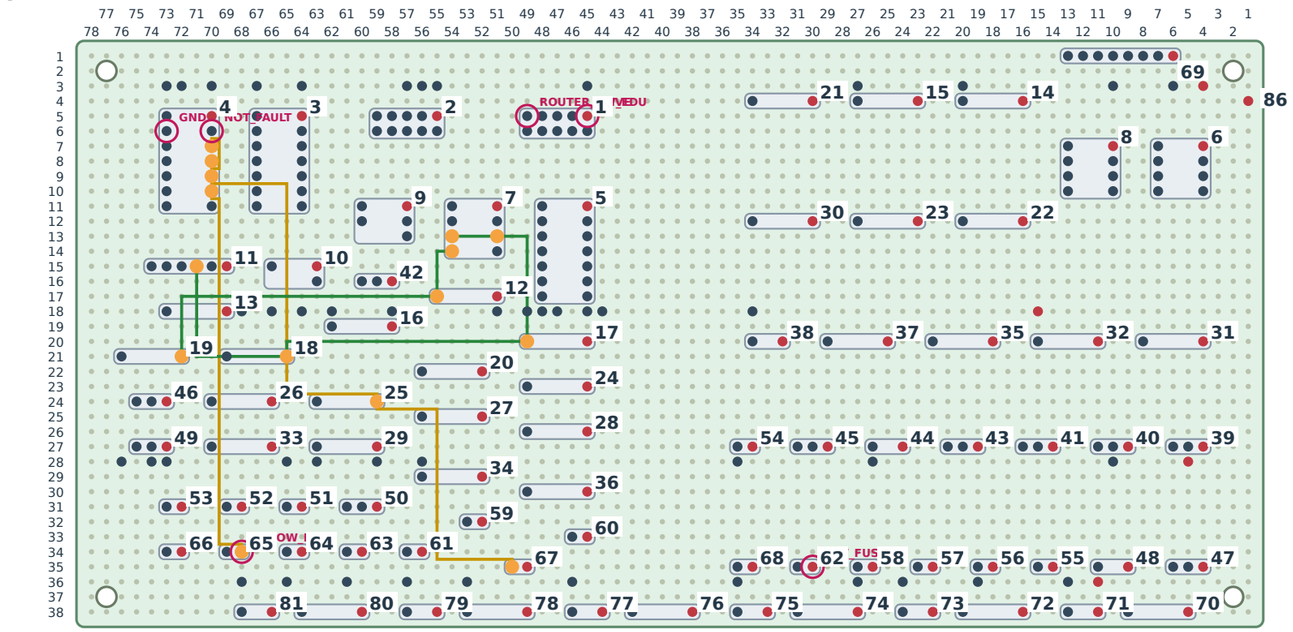

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W181 / ENABLE_NO_FAULT	U_POWER_INTERLOCK_ALLOW.3 → U_POWER_INTERLOCK_ALLOW.4	70,7 → 70,8
W182 / ROUTER_ALIVE__B	JP_R7_ALIVE.2 → R_POWER_INTERLOCK_ROUTER_ALIVE_OFF.1	50,35 → 59,24
W183 / ROUTER_ALIVE__B	R_POWER_INTERLOCK_ROUTER_ALIVE_OFF.1 → U_POWER_INTERLOCK_ALLOW.5	59,24 → 70,9
W184 / ALLOW_RAIL	JP_R7_PASS.1 → U_POWER_INTERLOCK_ALLOW.6	68,34 → 70,10
W202 / REF_TRIP	J_POWER_INTERLOCK_TEST.3 → R_POWER_ANALOG_TRIP_BOTTOM.1	71,15 → 65,21
W203 / REF_TRIP	R_POWER_ANALOG_TRIP_BOTTOM.1 → R_POWER_ANALOG_TRIP_TOP.2	65,21 → 49,20
W204 / REF_TRIP	R_POWER_ANALOG_TRIP_TOP.2 → U_POWER_ANALOG_TRIP.3	49,20 → 51,13
W205 / REF_TRIP	U_POWER_ANALOG_TRIP.3 → U_POWER_ANALOG_TRIP.6	51,13 → 54,13
W206 / EDU_DIV	R_POWER_ANALOG_EDU_BOTTOM.1 → R_POWER_ANALOG_EDU_TOP.2	72,21 → 55,17
W207 / EDU_DIV	R_POWER_ANALOG_EDU_TOP.2 → U_POWER_ANALOG_TRIP.5	55,17 → 54,14

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

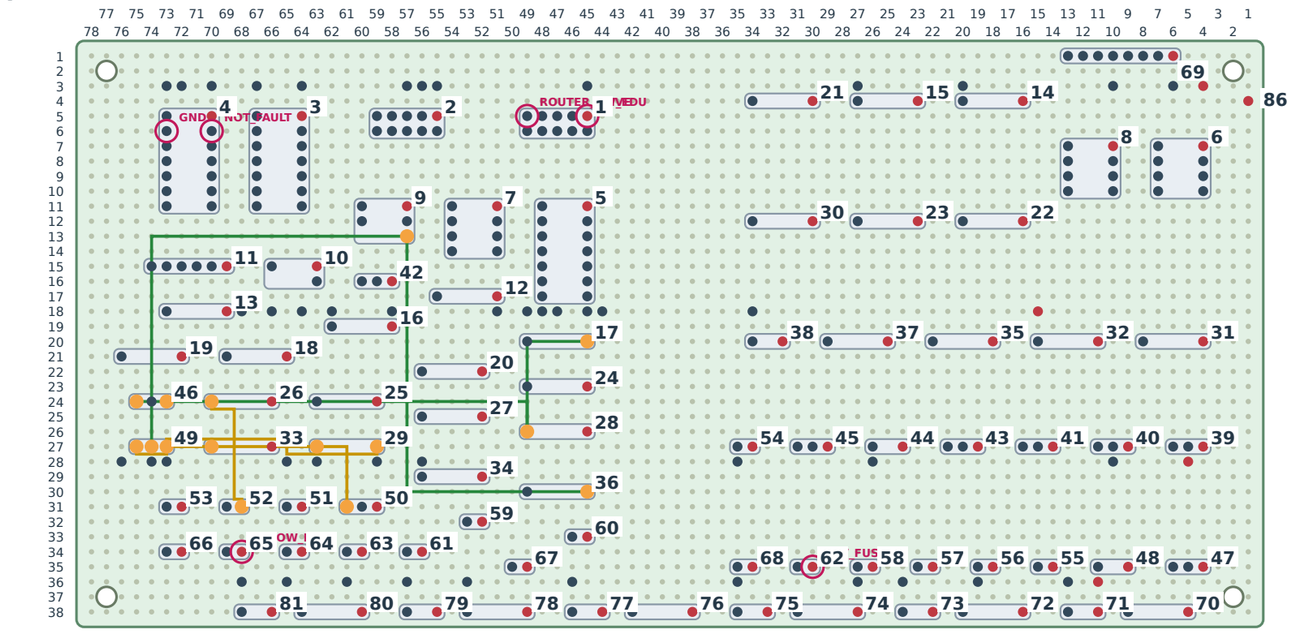

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W225 / SHUNT_P	Q_POWER_ANALOG_PASS.2 → U_POWER_ANALOG_SENSE.3	74,27 → 57,13
W226 / SHUNT_P	U_POWER_ANALOG_SENSE.3 → R_POWER_ANALOG_SHUNT.1	57,13 → 45,30
W227 / REF_2V495	R_POWER_ANALOG_REF_FEED.2 → R_POWER_ANALOG_TRIP_TOP.1	49,26 → 45,20
W228 / REF_2V495	R_POWER_ANALOG_REF_FEED.2 → U_POWER_ANALOG_REF.1	49,26 → 73,24
W229 / REF_2V495	U_POWER_ANALOG_REF.1 → U_POWER_ANALOG_REF.3	73,24 → 75,24
W231 / BATTERY_LED_A	LED_POWER_INTERLOCK_BATTERY.1 → R_POWER_INTERLOCK_BATTERY_LED.2	68,31 → 70,24
W232 / PTC_OUT	F_POWER_ANALOG_EDU.2 → Q_POWER_ANALOG_PASS.3	70,27 → 75,27
W233 / PTC_OUT	F_POWER_ANALOG_EDU.2 → R_POWER_ANALOG_GATE_OFF.1	70,27 → 59,27
W234 / PASS_GATE	Q_POWER_ANALOG_ENABLE.3 → R_POWER_ANALOG_GATE_OFF.2	61,31 → 63,27
W235 / PASS_GATE	R_POWER_ANALOG_GATE_OFF.2 → Q_POWER_ANALOG_PASS.1	63,27 → 73,27

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — power

At most ten added wires per view. Inspect each net with power isolated.

power — MIRRORED UNDERSIDE

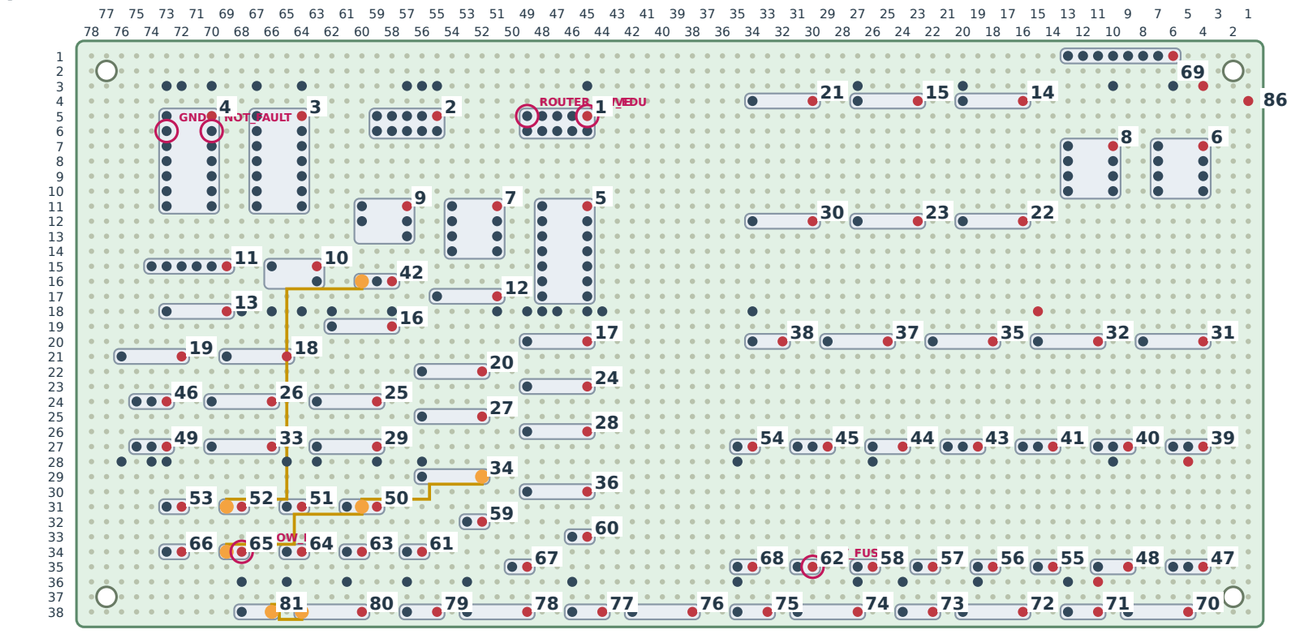

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W236 / ALLOW_RAIL__B	JP_R7_PASS.2 → Q_POWER_ANALOG_ENABLE.2	69,34 → 60,31
W237 / ALLOW_RAIL__B	Q_POWER_ANALOG_ENABLE.2 → R_R7_PASS_PD.1	60,31 → 52,29
W242 / BATTERY_LED_K	LED_POWER_INTERLOCK_BATTERY.2 → Q_POWER_INTERLOCK_BATTERY_LED.3	69,31 → 60,16
W250 / LEDA_NOTFAULT	LED_NOTFAULT.1 → R_LED_NOTFAULT.2	66,38 → 64,38

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

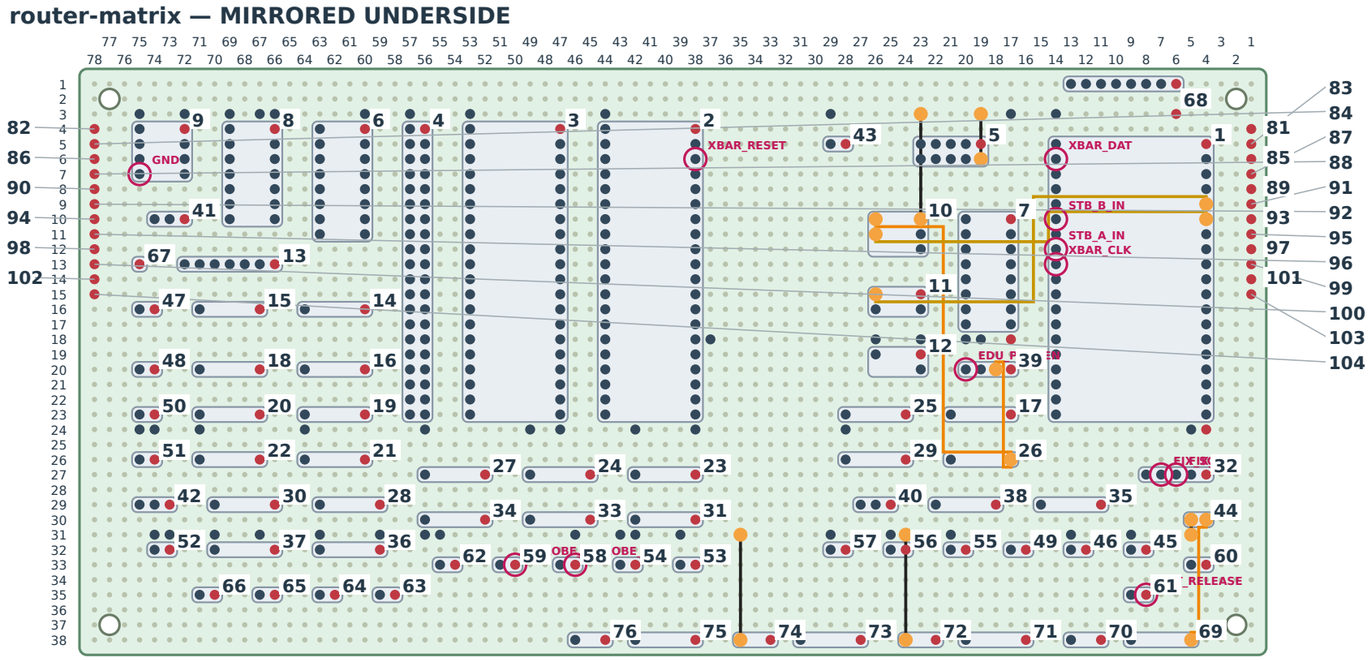

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W5 / USB_ROUTER_3V3	J_ROUTER_CORE_PROTOTYPE.2 → R_ROUTER_SAFETY_KADC_LED.1	18,20 → 17,26
W6 / USB_ROUTER_3V3	R_LED_USBROUTER3V3.1 → C_ROUTER_SAFETY_RETURN.1	5,38 → 4,30
W7 / USB_ROUTER_3V3	R_ROUTER_SAFETY_KADC_LED.1 → U_ROUTER_SAFETY_FAULT_RETURN.5	17,26 → 26,10
W17 / CURRENT_USB	U_ROUTER_CORE_ESP1.5 → K_ROUTER_SAFETY_ADC.4	4,9 → 26,15
W18 / FAULT_USB	U_ROUTER_CORE_ESP1.6 → U_ROUTER_SAFETY_FAULT_RETURN.4	4,10 → 26,11
W98 / GND	J_ROUTER_CORE_POWER.2 → BAR_GND_2.4	19,6 → 19,3
W106 / GND	U_ROUTER_SAFETY_FAULT_RETURN.1 → BAR_GND_2.5	23,10 → 23,3
W118 / GND	C_ROUTER_SAFETY_RETURN.2 → BAR_GND_3.1	5,30 → 5,31
W133 / GND	LED_5VSYS.2 → BAR_GND_3.6	24,38 → 24,31
W134 / GND	LED_12VSYS.2 → BAR_GND_3.9	35,38 → 35,31

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

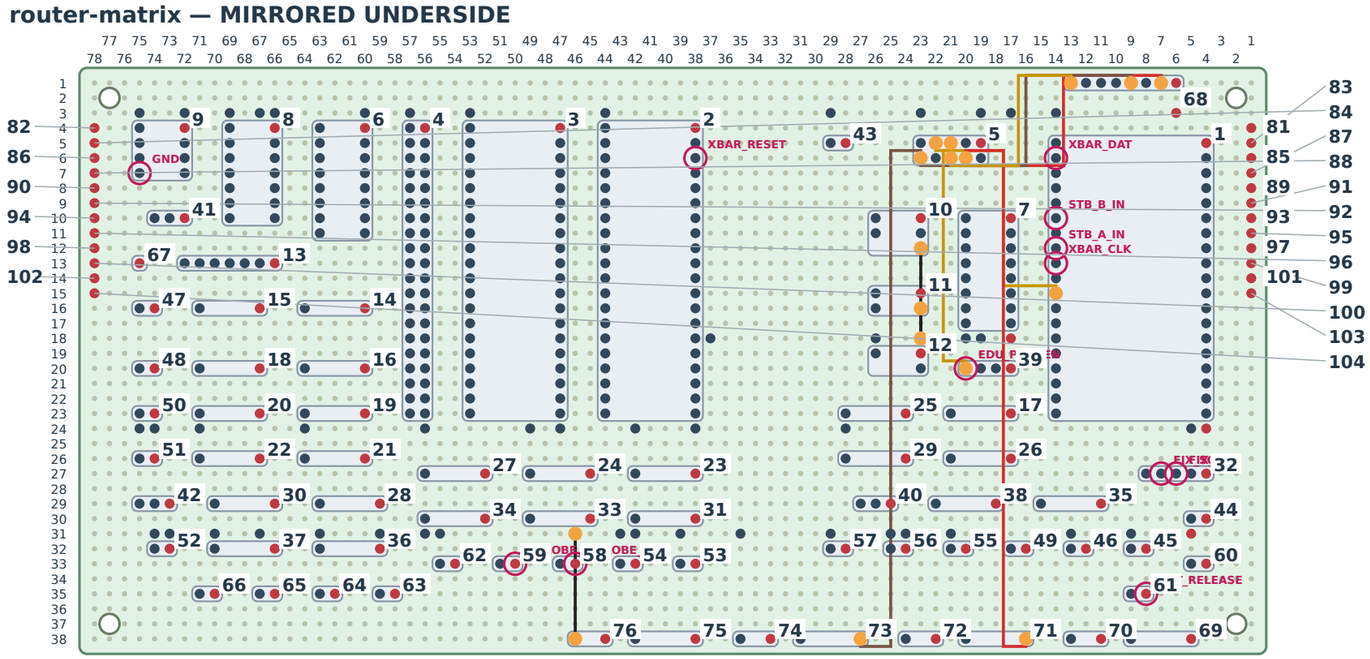

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W135 / GND	LED_ROUTERALIVE.2 → BAR_GND_3.13	46,38 → 46,31
W141 / GND	U_ROUTER_SAFETY_FAULT_RETURN.3 → BAR_GND_4.4	23,12 → 23,18
W142 / GND	K_ROUTER_SAFETY_ADC.2 → BAR_GND_4.4	23,16 → 23,18
W161 / EDU_FAULT_RESET	U_ROUTER_CORE_ESP1.30 → J_ROUTER_CORE_POWER.7	14,15 → 22,5
W204 / 5V_SYS	J_PROBE.2 → J_ROUTER_CORE_POWER.4	7,1 → 20,6
W205 / 5V_SYS	J_ROUTER_CORE_POWER.4 → R_LED_5VSYS.1	20,6 → 16,38
W223 / 12V_SYS	J_PROBE.4 → J_ROUTER_CORE_POWER.10	9,1 → 23,6
W224 / 12V_SYS	J_ROUTER_CORE_POWER.10 → R_LED_12VSYS.1	23,6 → 27,38
W264 / EDU_PWR_EN	J_ROUTER_CORE_PROTOTYPE.4 → J_ROUTER_CORE_POWER.5	20,20 → 21,5
W265 / EDU_FAULT	J_PROBE.8 → J_ROUTER_CORE_POWER.6	13,1 → 21,6

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP11 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

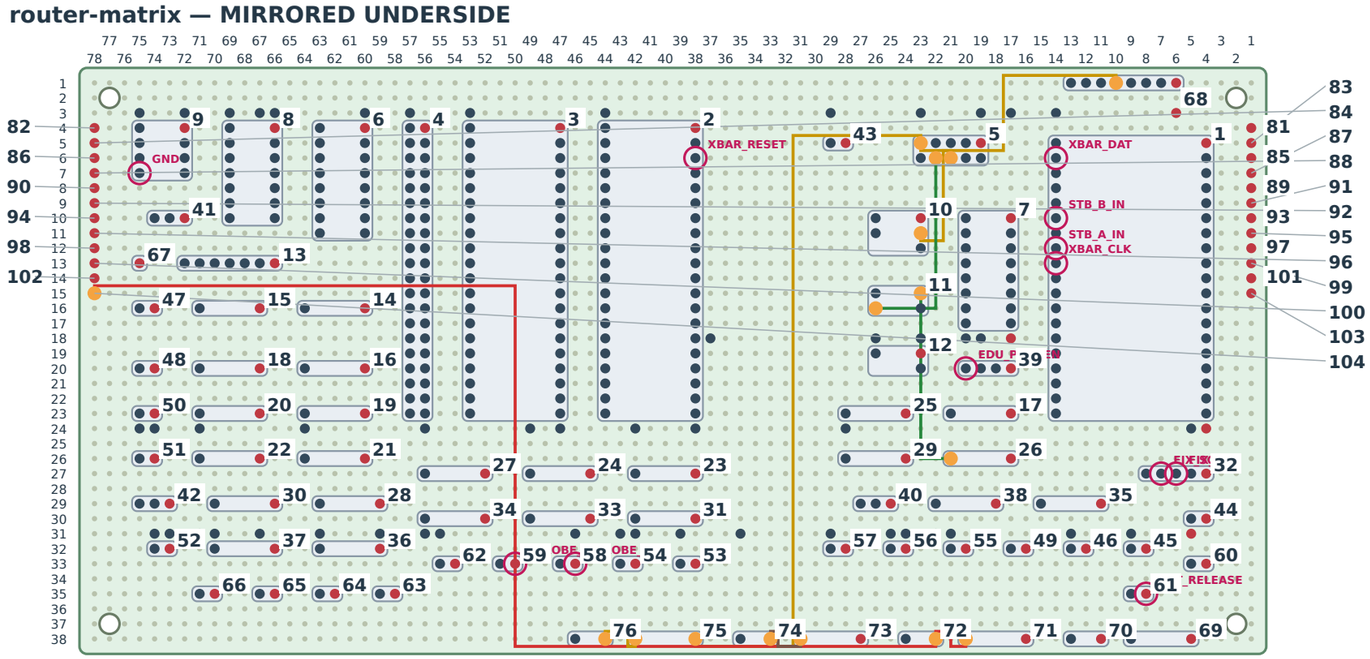

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W266 / EDU_FAULT	J_ROUTER_CORE_POWER.6 → U_ROUTER_SAFETY_FAULT_RETURN.2	21,6 → 23,11
W267 / CURRENT_SENSE	J_ROUTER_CORE_POWER.8 → K_ROUTER_SAFETY_ADC.3	22,6 → 26,16
W268 / ROUTER_ALIVE	J_PROBE.5 → J_ROUTER_CORE_POWER.9	10,1 → 23,5
W269 / ROUTER_ALIVE	J_ROUTER_CORE_POWER.9 → R_LED_ROUTERALIVE.1	23,5 → 38,38
W289 / K_ADC_LED	K_ROUTER_SAFETY_ADC.1 → R_ROUTER_SAFETY_KADC_LED.2	23,15 → 21,26
W296 / LEDA_5VSYS	J_BOUNDARY_24.1 → LED_5VSYS.1	78,15 → 22,38
W297 / LEDA_5VSYS	LED_5VSYS.1 → R_LED_5VSYS.2	22,38 → 20,38
W298 / LEDA_12VSYS	LED_12VSYS.1 → R_LED_12VSYS.2	33,38 → 31,38
W299 / LEDA_ROUTERALIVE	LED_ROUTERALIVE.1 → R_LED_ROUTERALIVE.2	44,38 → 42,38

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP13 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

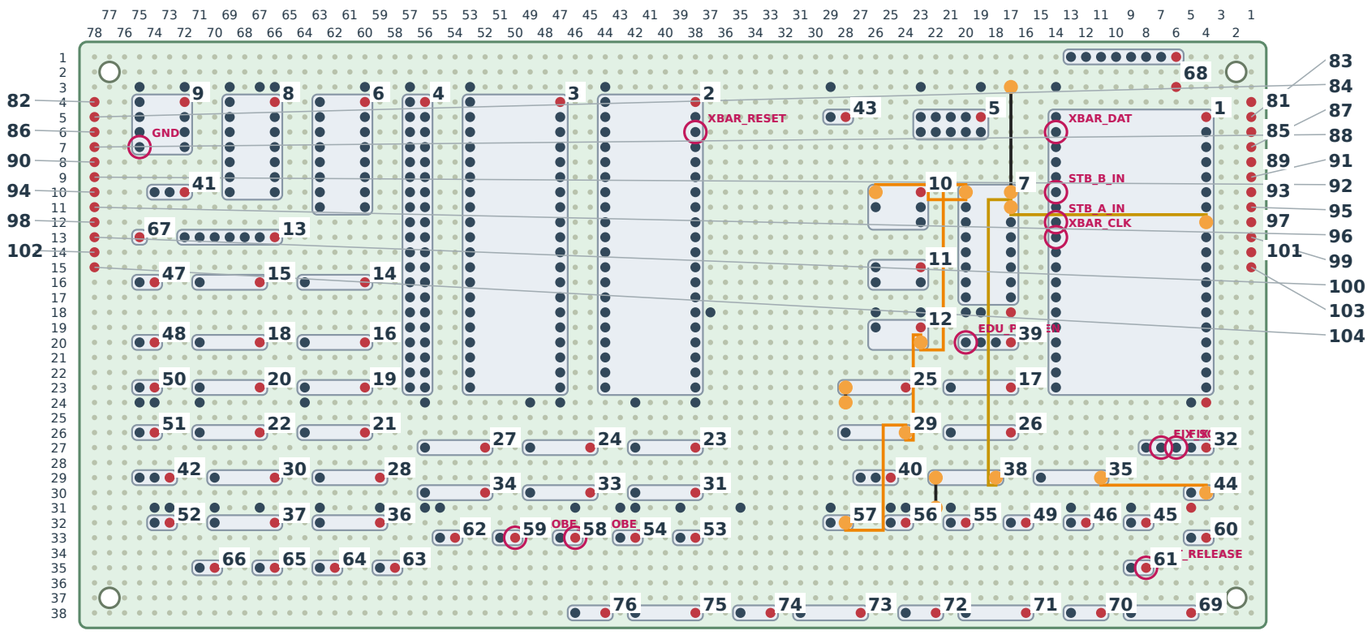

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W8 / USB_ROUTER_3V3	U_ROUTER_SAFETY_FAULT_RETURN.5 → U_ROUTER_SAFETY_WATCH.16	26,10 → 20,10
W9 / USB_ROUTER_3V3	C_ROUTER_SAFETY_RETURN.1 → R_ROUTER_SAFETY_WATCH.1	4,30 → 11,29
W10 / USB_ROUTER_3V3	U_ROUTER_SAFETY_WATCH.16 → U_ROUTER_SAFETY_USB_POR.2	20,10 → 23,20
W11 / USB_ROUTER_3V3	U_ROUTER_SAFETY_USB_POR.2 → R_ROUTER_SAFETY_USB_POR.1	23,20 → 24,26
W12 / USB_ROUTER_3V3	R_ROUTER_SAFETY_USB_POR.1 → C_ROUTER_SAFETY_WATCH_VCC.1	24,26 → 28,32
W21 / HEARTBEAT	U_ROUTER_CORE_ESP1.8 → U_ROUTER_SAFETY_WATCH.2	4,12 → 17,11
W22 / HEARTBEAT	U_ROUTER_SAFETY_WATCH.2 → R_ROUTER_SAFETY_HEART.1	17,11 → 18,29
W86 / GND	R_ROUTER_SAFETY_ALIVE_OFF.2 → BAR_GND_1.3	28,23 → 28,24
W100 / GND	U_ROUTER_SAFETY_WATCH.1 → BAR_GND_2.3	17,10 → 17,3
W115 / GND	R_ROUTER_SAFETY_HEART.2 → BAR_GND_3.5	22,29 → 22,31

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP13 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

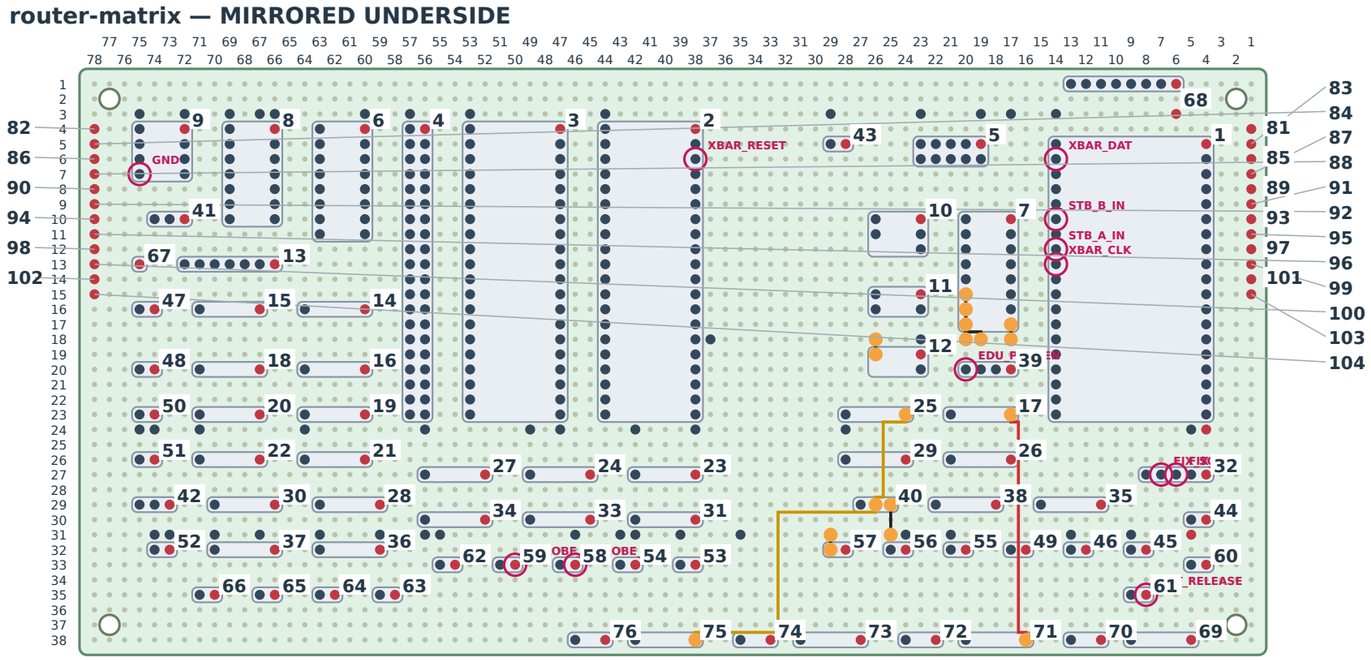

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W116 / GND	Q_ROUTER_SAFETY_BUF.1 → BAR_GND_3.7	25,29 → 25,31
W126 / GND	C_ROUTER_SAFETY_WATCH_VCC.2 → BAR_GND_3.8	29,32 → 29,31
W137 / GND	U_ROUTER_SAFETY_WATCH.8 → BAR_GND_4.1	17,17 → 17,18
W138 / GND	U_ROUTER_SAFETY_WATCH.9 → BAR_GND_4.3	20,17 → 20,18
W139 / GND	U_ROUTER_SAFETY_WATCH.10 → BAR_GND_4.3	20,16 → 20,18
W140 / GND	U_ROUTER_SAFETY_WATCH.11 → BAR_GND_4.2	20,15 → 19,18
W143 / GND	U_ROUTER_SAFETY_USB_POR.3 → BAR_GND_4.5	26,19 → 26,18
W206 / 5V_SYS	R_LED_5VSYS.1 → R_ROUTER_SAFETY_BUF_OE.1	16,38 → 17,23
W270 / ROUTER_ALIVE	R_LED_ROUTERALIVE.1 → Q_ROUTER_SAFETY_BUF.2	38,38 → 26,29
W271 / ROUTER_ALIVE	Q_ROUTER_SAFETY_BUF.2 → R_ROUTER_SAFETY_ALIVE_OFF.1	26,29 → 24,23

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP13 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

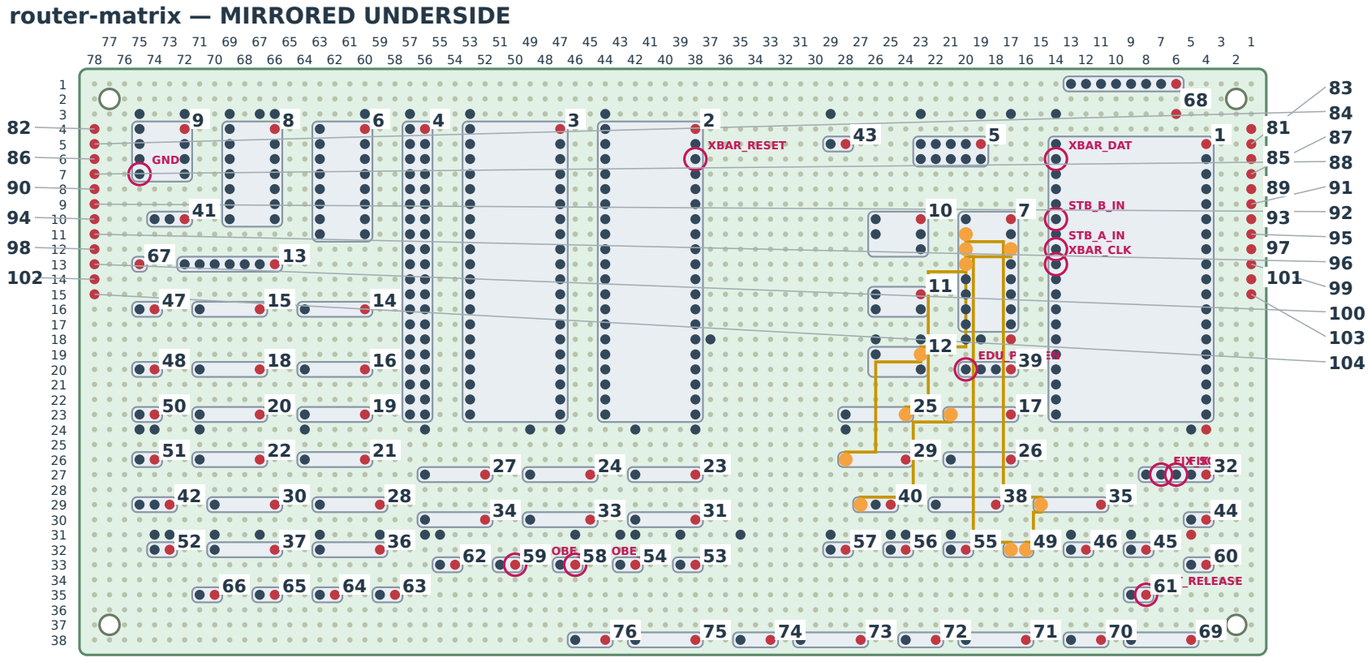

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W272 / ROUTER_ALIVE	R_ROUTER_SAFETY_ALIVE_OFF.1 → U_ROUTER_SAFETY_WATCH.13	24,23 → 20,13
W274 / XBAR_OE_N	Q_ROUTER_SAFETY_BUF.3 → R_ROUTER_SAFETY_BUF_OE.2	27,29 → 21,23
W278 / USB_RESET_N	R_ROUTER_SAFETY_USB_POR.2 → U_ROUTER_SAFETY_USB_POR.1	28,26 → 23,19
W279 / USB_RESET_N	U_ROUTER_SAFETY_USB_POR.1 → U_ROUTER_SAFETY_WATCH.3	23,19 → 17,12
W280 / WATCH_CX	C_ROUTER_SAFETY_WATCH.2 → U_ROUTER_SAFETY_WATCH.14	17,32 → 20,12
W281 / WATCH_RX	C_ROUTER_SAFETY_WATCH.1 → R_ROUTER_SAFETY_WATCH.2	16,32 → 15,29
W282 / WATCH_RX	R_ROUTER_SAFETY_WATCH.2 → U_ROUTER_SAFETY_WATCH.15	15,29 → 20,11

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

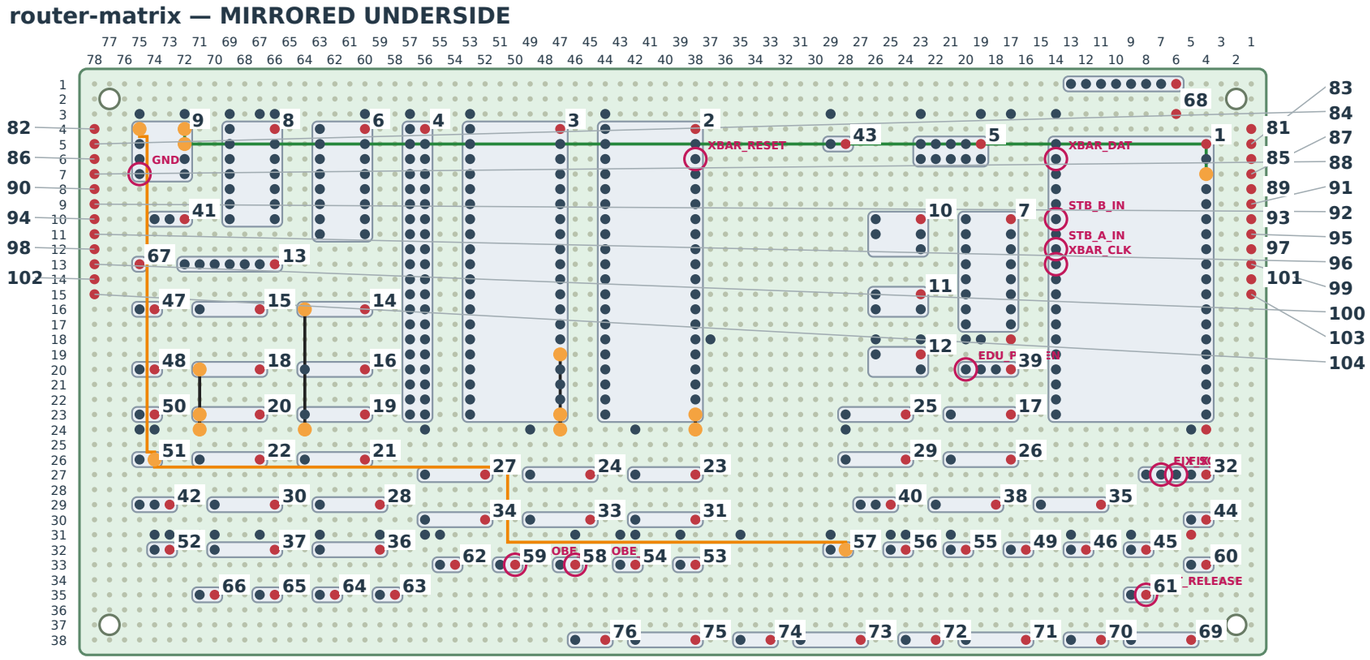

Wire / net	From → to	TOP holes
W13 / USB_ROUTER_3V3	C_ROUTER_SAFETY_WATCH_VCC.1 → C_MATRIX_CONTROL_DIAG_VCC.1	28,32 → 74,26
W14 / USB_ROUTER_3V3	C_MATRIX_CONTROL_DIAG_VCC.1 → U_MATRIX_CONTROL_DIAG.8	74,26 → 75,4
W15 / DIAG_ADC	U_ROUTER_CORE_ESP1.3 → U_MATRIX_CONTROL_DIAG.2	4,7 → 72,5
W16 / DIAG_ADC	U_MATRIX_CONTROL_DIAG.2 → U_MATRIX_CONTROL_DIAG.1	72,5 → 72,4
W77 / GND	U_MATRIX_SWITCHES_MT_A.20 → BAR_GND_1.4	38,23 → 38,24
W78 / GND	U_MATRIX_SWITCHES_MT_B.16 → BAR_GND_1.6	47,19 → 47,24
W79 / GND	U_MATRIX_SWITCHES_MT_B.20 → BAR_GND_1.6	47,23 → 47,24
W80 / GND	R_MATRIX_CONTROL_STB_B_IN_OFF.2 → BAR_GND_1.9	64,16 → 64,24
W81 / GND	R_MATRIX_CONTROL_STB_A_IN_OFF.2 → BAR_GND_1.10	71,20 → 71,24
W82 / GND	R_MATRIX_CONTROL_CAL.2 → BAR_GND_1.10	71,23 → 71,24

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red


TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

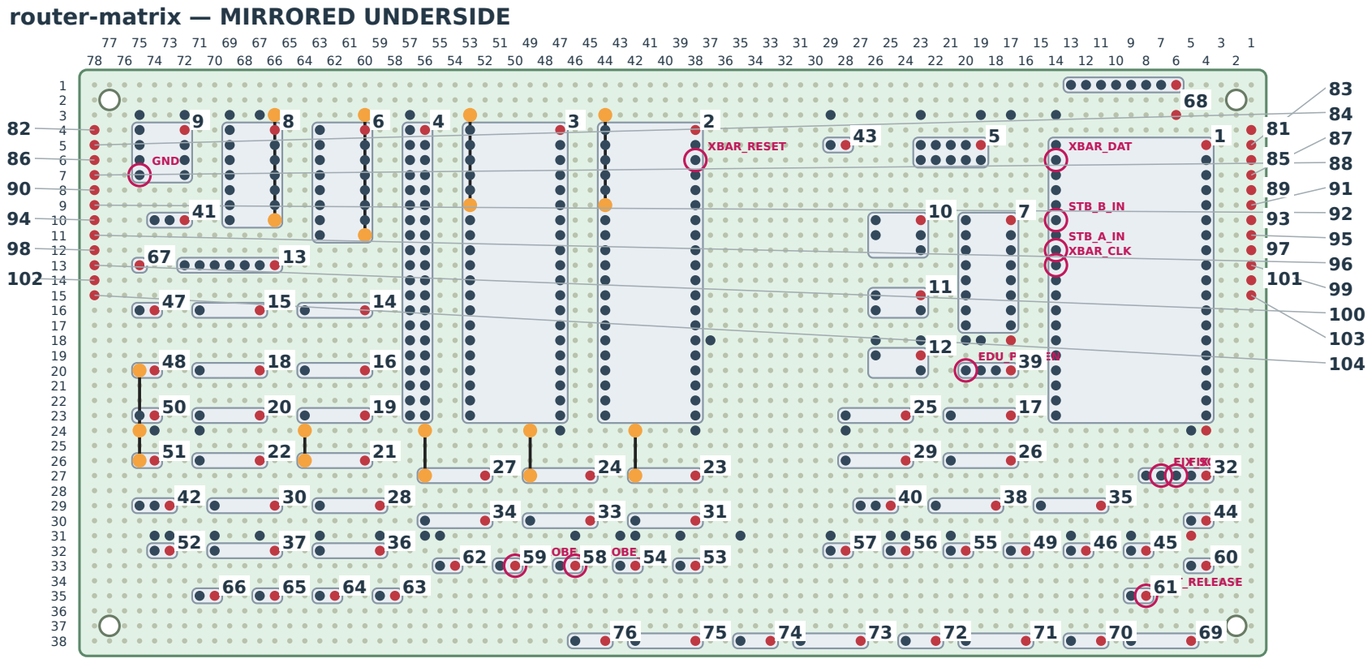

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W83 / GND	R_MATRIX_CONTROL_XBAR_LATCH_OFF.2 → BAR_GND_1.9	64,26 → 64,24
W84 / GND	R_MATRIX_CONTROL_DISCHARGE.2 → BAR_GND_1.5	42,27 → 42,24
W85 / GND	R_MATRIX_CONTROL_DIAG_BOTTOM.2 → BAR_GND_1.7	49,27 → 49,24
W87 / GND	R_MATRIX_CONTROL_XBAR_CLK_OFF.2 → BAR_GND_1.8	56,27 → 56,24
W90 / GND	C_MATRIX_CONTROL_BUFFER.2 → BAR_GND_1.12	75,20 → 75,24
W92 / GND	C_MATRIX_CONTROL_DIAG_VCC.2 → BAR_GND_1.12	75,26 → 75,24
W95 / GND	U_MATRIX_SWITCHES_MT_A.35 → BAR_GND_2.7	44,9 → 44,3
W96 / GND	U_MATRIX_SWITCHES_MT_B.35 → BAR_GND_2.8	53,9 → 53,3
W99 / GND	U_MATRIX_CONTROL_ADDR.8 → BAR_GND_2.10	60,11 → 60,3
W101 / GND	U_MATRIX_CONTROL_BUFFER.7 → BAR_GND_2.11	66,10 → 66,3

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

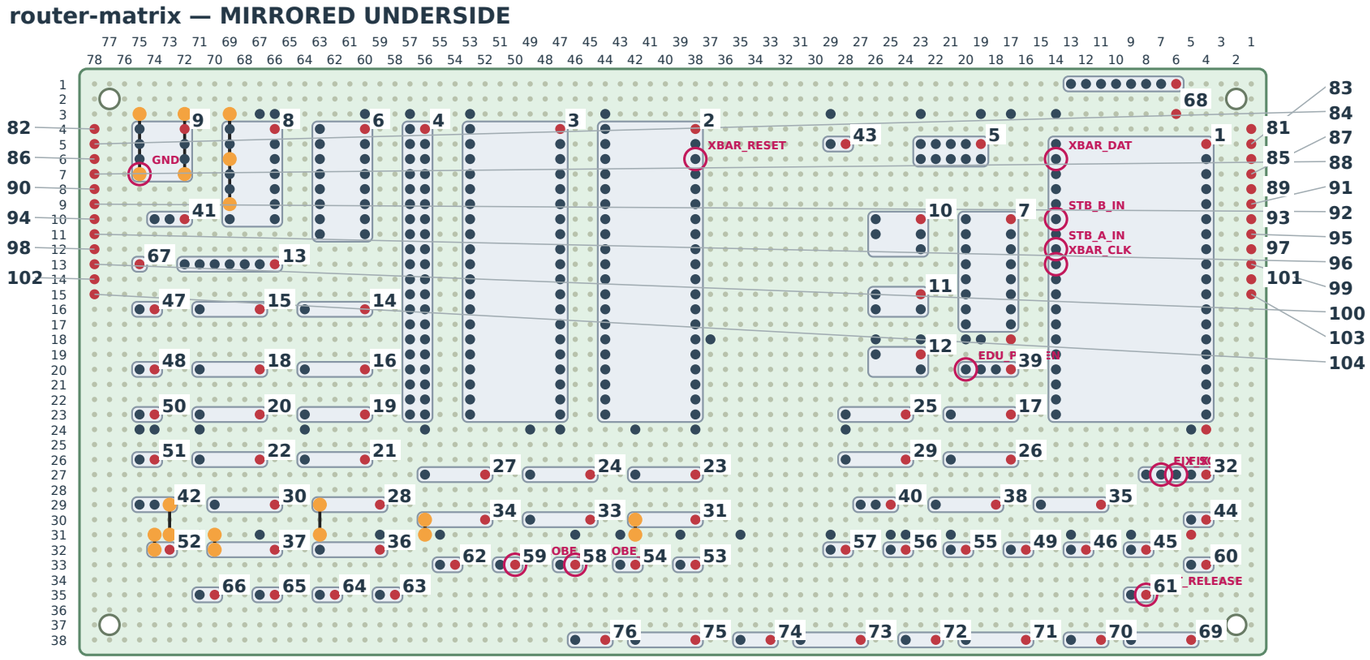

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W102 / GND	U_MATRIX_CONTROL_BUFFER.9 → BAR_GND_2.13	69,9 → 69,3
W103 / GND	U_MATRIX_CONTROL_BUFFER.12 → BAR_GND_2.13	69,6 → 69,3
W104 / GND	U_MATRIX_CONTROL_DIAG.4 → BAR_GND_2.14	72,7 → 72,3
W105 / GND	U_MATRIX_CONTROL_DIAG.5 → BAR_GND_2.15	75,7 → 75,3
W111 / GND	R_MATRIX_CONTROL_XBAR_DAT_OFF.2 → BAR_GND_3.17	63,29 → 63,31
W112 / GND	R_MATRIX_SWITCHES_RST_RELEASE_OFF.2 → BAR_GND_3.11	42,30 → 42,31
W113 / GND	R_MATRIX_SWITCHES_STBB_OFF.2 → BAR_GND_3.15	56,30 → 56,31
W114 / GND	R_MATRIX_SWITCHES_STBA_OFF.2 → BAR_GND_3.19	70,32 → 70,31
W117 / GND	Q_MATRIX_SWITCHES_RESET_ALIVE.1 → BAR_GND_3.21	73,29 → 73,31
W121 / GND	C_MATRIX_SWITCHES_MT0_BULK.2 → BAR_GND_3.22	74,32 → 74,31

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

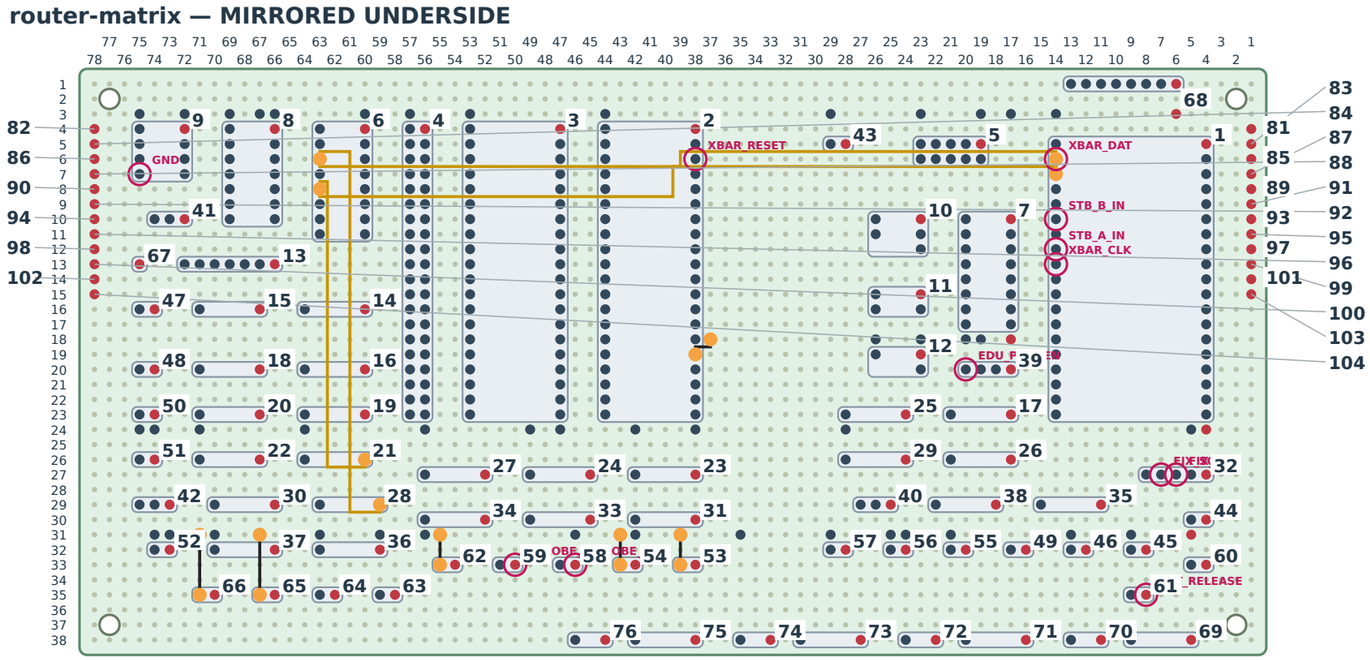

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W122 / GND	C_MATRIX_SWITCHES_MT1.2 → BAR_GND_3.10	39,33 → 39,31
W123 / GND	C_MATRIX_SWITCHES_MT1_BULK.2 → BAR_GND_3.12	43,33 → 43,31
W127 / GND	C_MATRIX_CONTROL_ADDR.2 → BAR_GND_3.14	55,33 → 55,31
W130 / GND	C_MATRIX_CONTROL_DIAG.2 → BAR_GND_3.18	67,35 → 67,31
W131 / GND	C_MATRIX_SWITCHES_MT0.2 → BAR_GND_3.20	71,35 → 71,31
W136 / GND	U_MATRIX_SWITCHES_MT_A.16 → BAR_GND_4.6	38,19 → 37,18
W149 / XBAR_DAT	U_ROUTER_CORE_ESP1.21 → U_MATRIX_CONTROL_ADDR.14	14,6 → 63,6
W150 / XBAR_DAT	U_MATRIX_CONTROL_ADDR.14 → R_MATRIX_CONTROL_XBAR_DAT_OFF.1	63,6 → 59,29
W152 / XBAR_LATCH	U_ROUTER_CORE_ESP1.22 → U_MATRIX_CONTROL_ADDR.12	14,7 → 63,8
W153 / XBAR_LATCH	U_MATRIX_CONTROL_ADDR.12 → R_MATRIX_CONTROL_XBAR_LATCH_OFF.1	63,8 → 60,26

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

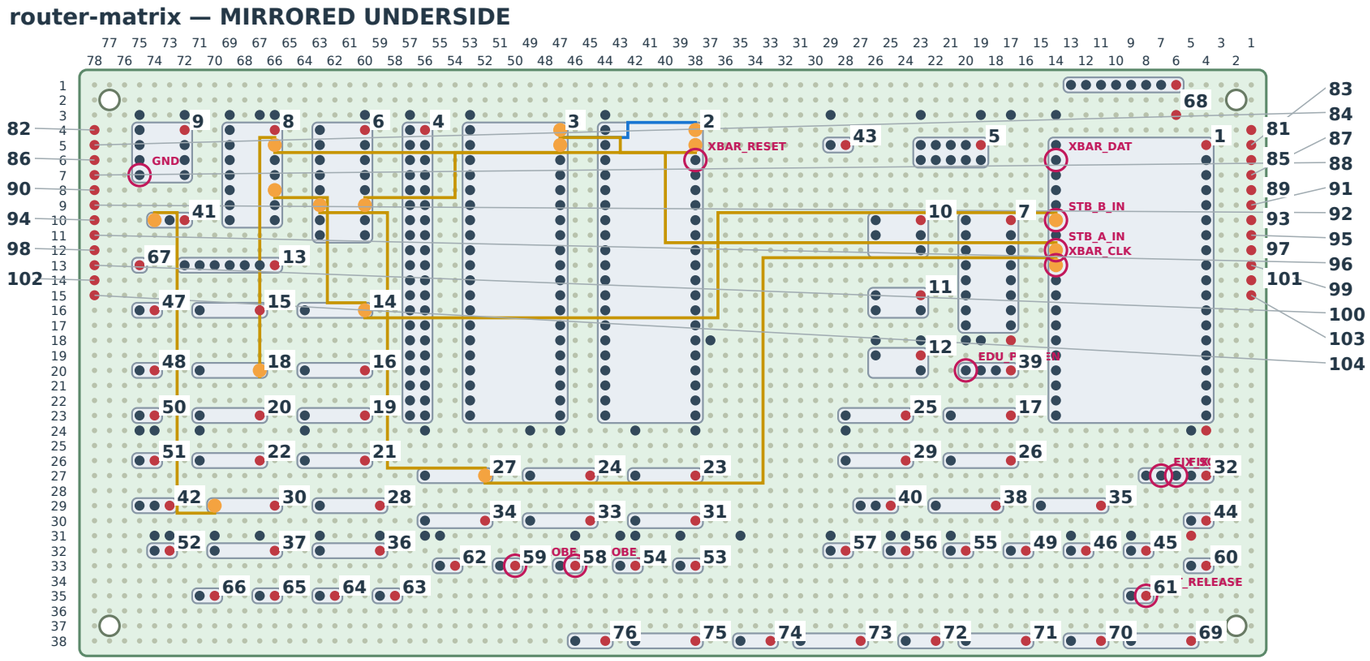

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W154 / STB_B_IN	U_ROUTER_CORE_ESP1.25 → R_MATRIX_CONTROL_STB_B_IN_OFF.1	14,10 → 60,16
W155 / STB_B_IN	R_MATRIX_CONTROL_STB_B_IN_OFF.1 → U_MATRIX_CONTROL_BUFFER.5	60,16 → 66,8
W156 / STB_A_IN	U_ROUTER_CORE_ESP1.27 → U_MATRIX_CONTROL_BUFFER.2	14,12 → 66,5
W157 / STB_A_IN	U_MATRIX_CONTROL_BUFFER.2 → R_MATRIX_CONTROL_STB_A_IN_OFF.1	66,5 → 67,20
W158 / XBAR_CLK	U_ROUTER_CORE_ESP1.28 → R_MATRIX_CONTROL_XBAR_CLK_OFF.1	14,13 → 52,27
W159 / XBAR_CLK	R_MATRIX_CONTROL_XBAR_CLK_OFF.1 → U_MATRIX_CONTROL_ADDR.11	52,27 → 63,9
W164 / BUS3	U_MATRIX_SWITCHES_MT_A.1 → U_MATRIX_SWITCHES_MT_B.1	38,4 → 47,4
W165 / AY2	U_MATRIX_CONTROL_ADDR.6 → U_MATRIX_SWITCHES_MT_B.2	60,9 → 47,5
W166 / AY2	U_MATRIX_SWITCHES_MT_B.2 → U_MATRIX_SWITCHES_MT_A.2	47,5 → 38,5
W167 / XBAR_RESET	Q_MATRIX_SWITCHES_RESET_RELEASE.3 → R_MATRIX_SWITCHES_RESET_ON.2	74,10 → 70,29

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

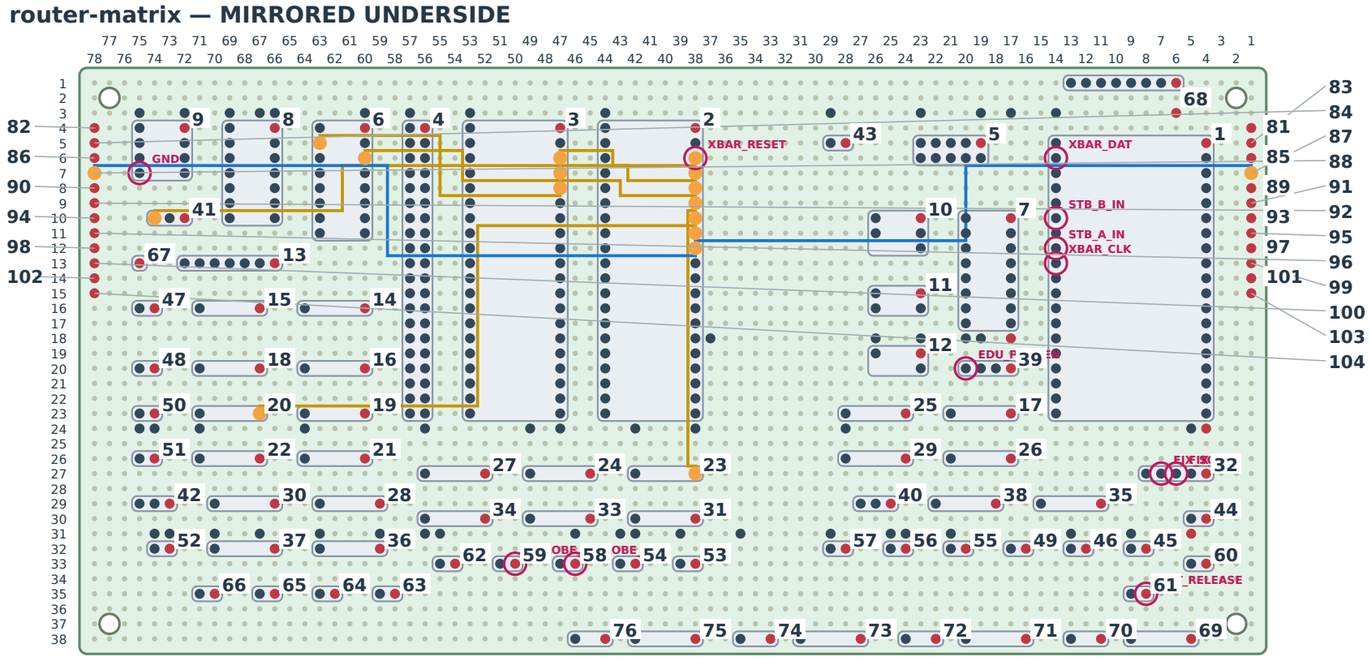

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W168 / XBAR_RESET	Q_MATRIX_SWITCHES_RESET_RELEASE.3 → U_MATRIX_SWITCHES_MT_B.3	74,10 → 47,6
W169 / XBAR_RESET	U_MATRIX_SWITCHES_MT_B.3 → U_MATRIX_SWITCHES_MT_A.3	47,6 → 38,6
W170 / AX3	U_MATRIX_CONTROL_ADDR.3 → U_MATRIX_SWITCHES_MT_B.4	60,6 → 47,7
W171 / AX3	U_MATRIX_SWITCHES_MT_B.4 → U_MATRIX_SWITCHES_MT_A.4	47,7 → 38,7
W172 / AX0	U_MATRIX_CONTROL_ADDR.15 → U_MATRIX_SWITCHES_MT_B.5	63,5 → 47,8
W173 / AX0	U_MATRIX_SWITCHES_MT_B.5 → U_MATRIX_SWITCHES_MT_A.5	47,8 → 38,8
W174 / DISCHARGE	R_MATRIX_CONTROL_DISCHARGE.1 → U_MATRIX_SWITCHES_MT_A.6	38,27 → 38,9
W175 / CAL_LOAD	R_MATRIX_CONTROL_CAL.1 → U_MATRIX_SWITCHES_MT_A.7	67,23 → 38,10
W176 / NODE06	J_BOUNDARY_7.1 → U_MATRIX_SWITCHES_MT_A.8	1,7 → 38,11
W177 / NODE07	J_BOUNDARY_8.1 → U_MATRIX_SWITCHES_MT_A.9	78,7 → 38,12

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

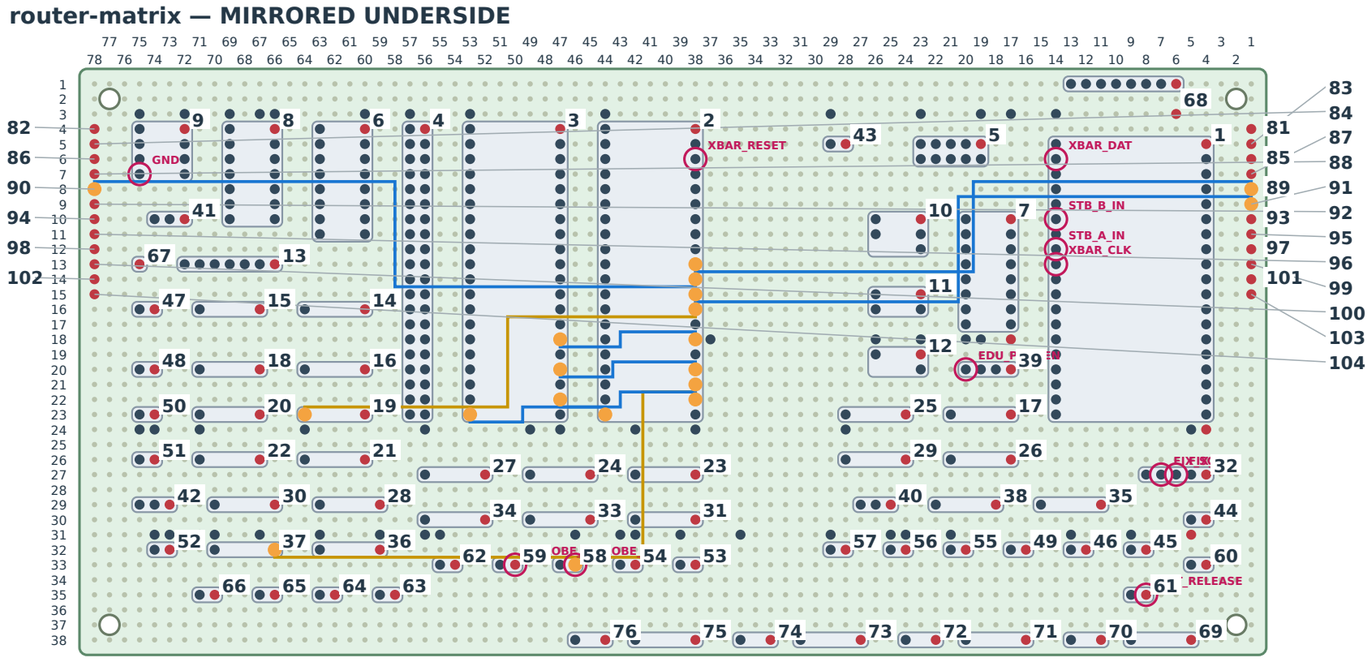

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W178 / NODE08	J_BOUNDARY_9.1 → U_MATRIX_SWITCHES_MT_A.10	1,8 → 38,13
W179 / NODE09	J_BOUNDARY_10.1 → U_MATRIX_SWITCHES_MT_A.11	78,8 → 38,14
W180 / NODE10	J_BOUNDARY_11.1 → U_MATRIX_SWITCHES_MT_A.12	1,9 → 38,15
W181 / SOURCE_HI	R_MATRIX_CONTROL_SOURCE_HI.2 → U_MATRIX_SWITCHES_MT_A.13	64,23 → 38,16
W182 / BUS7	U_MATRIX_SWITCHES_MT_A.15 → U_MATRIX_SWITCHES_MT_B.15	38,18 → 47,18
W183 / BUS6	U_MATRIX_SWITCHES_MT_A.17 → U_MATRIX_SWITCHES_MT_B.17	38,20 → 47,20
W184 / STROBE_A	JP_R7_STBA.1 → U_MATRIX_SWITCHES_MT_A.18	46,33 → 38,21
W185 / STROBE_A	JP_R7_STBA.1 → R_MATRIX_SWITCHES_STBA_OFF.1	46,33 → 66,32
W186 / BUS5	U_MATRIX_SWITCHES_MT_A.19 → U_MATRIX_SWITCHES_MT_B.19	38,22 → 47,22
W187 / BUS4	U_MATRIX_SWITCHES_MT_A.21 → U_MATRIX_SWITCHES_MT_B.21	44,23 → 53,23

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

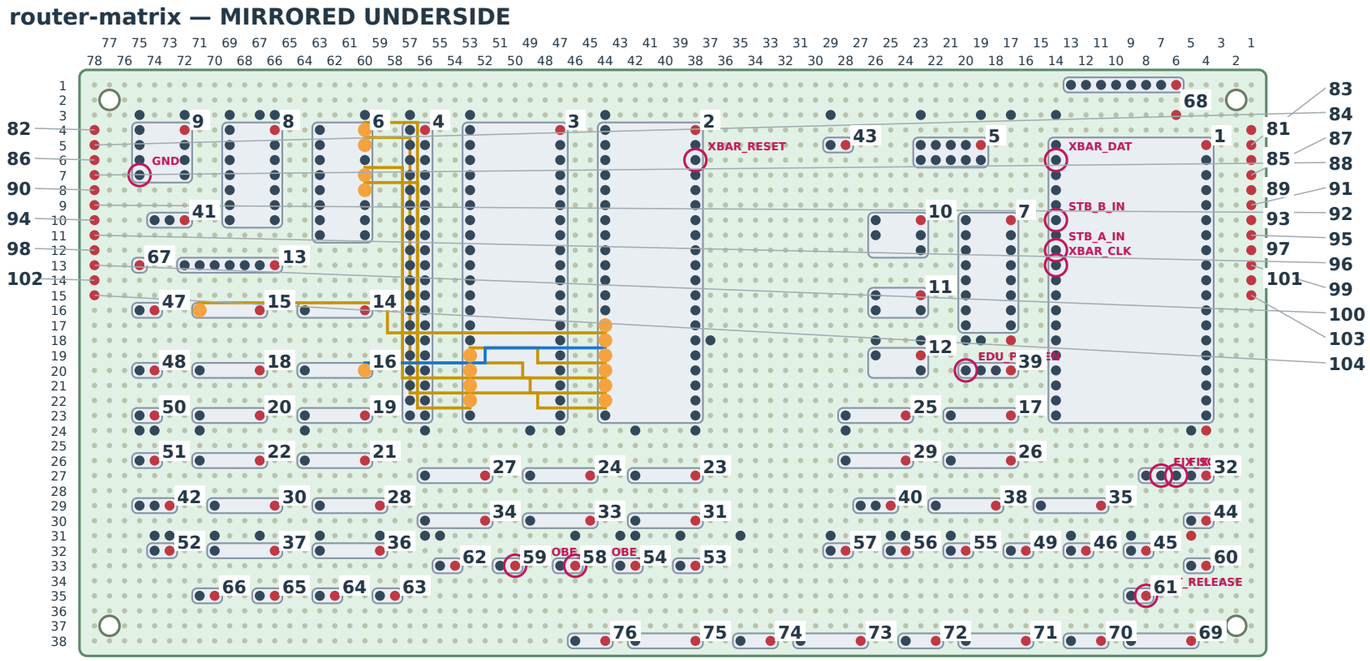

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W188 / AX1	U_MATRIX_CONTROL_ADDR.1 → U_MATRIX_SWITCHES_MT_B.22	60,4 → 53,22
W189 / AX1	U_MATRIX_SWITCHES_MT_B.22 → U_MATRIX_SWITCHES_MT_A.22	53,22 → 44,22
W190 / AX2	U_MATRIX_CONTROL_ADDR.2 → U_MATRIX_SWITCHES_MT_B.23	60,5 → 53,21
W191 / AX2	U_MATRIX_SWITCHES_MT_B.23 → U_MATRIX_SWITCHES_MT_A.23	53,21 → 44,21
W192 / AY0	U_MATRIX_CONTROL_ADDR.4 → U_MATRIX_SWITCHES_MT_B.24	60,7 → 53,20
W193 / AY0	U_MATRIX_SWITCHES_MT_B.24 → U_MATRIX_SWITCHES_MT_A.24	53,20 → 44,20
W194 / AY1	U_MATRIX_CONTROL_ADDR.5 → U_MATRIX_SWITCHES_MT_B.25	60,8 → 53,19
W195 / AY1	U_MATRIX_SWITCHES_MT_B.25 → U_MATRIX_SWITCHES_MT_A.25	53,19 → 44,19
W196 / DIAG_NODE	R_MATRIX_CONTROL_DIAG_TOP.1 → U_MATRIX_SWITCHES_MT_A.26	60,20 → 44,18
W197 / SOURCE_LO	R_MATRIX_CONTROL_SOURCE_LO.2 → U_MATRIX_SWITCHES_MT_A.27	71,16 → 44,17

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

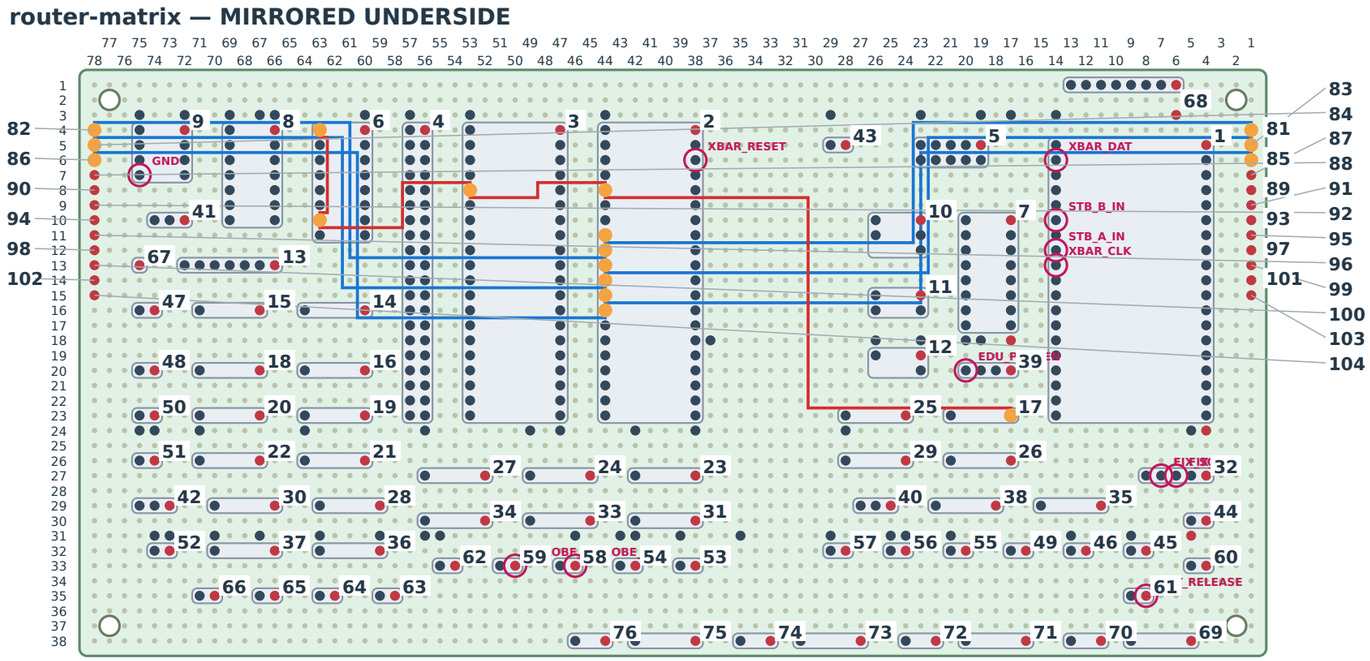

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W198 / NODE05	J_BOUNDARY_6.1 → U_MATRIX_SWITCHES_MT_A.28	78,6 → 44,16
W199 / NODE04	J_BOUNDARY_5.1 → U_MATRIX_SWITCHES_MT_A.29	1,6 → 44,15
W200 / NODE03	J_BOUNDARY_4.1 → U_MATRIX_SWITCHES_MT_A.30	78,5 → 44,14
W201 / NODE02	J_BOUNDARY_3.1 → U_MATRIX_SWITCHES_MT_A.31	1,5 → 44,13
W202 / NODE01	J_BOUNDARY_2.1 → U_MATRIX_SWITCHES_MT_A.32	78,4 → 44,12
W203 / NODE00	J_BOUNDARY_1.1 → U_MATRIX_SWITCHES_MT_A.33	1,4 → 44,11
W207 / 5V_SYS	R_ROUTER_SAFETY_BUF_OE.1 → U_MATRIX_SWITCHES_MT_A.36	17,23 → 44,8
W208 / 5V_SYS	U_MATRIX_SWITCHES_MT_A.36 → U_MATRIX_SWITCHES_MT_B.36	44,8 → 53,8
W209 / 5V_SYS	U_MATRIX_SWITCHES_MT_B.36 → U_MATRIX_CONTROL_ADDR.10	53,8 → 63,10
W210 / 5V_SYS	U_MATRIX_CONTROL_ADDR.10 → U_MATRIX_CONTROL_ADDR.16	63,10 → 63,4

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

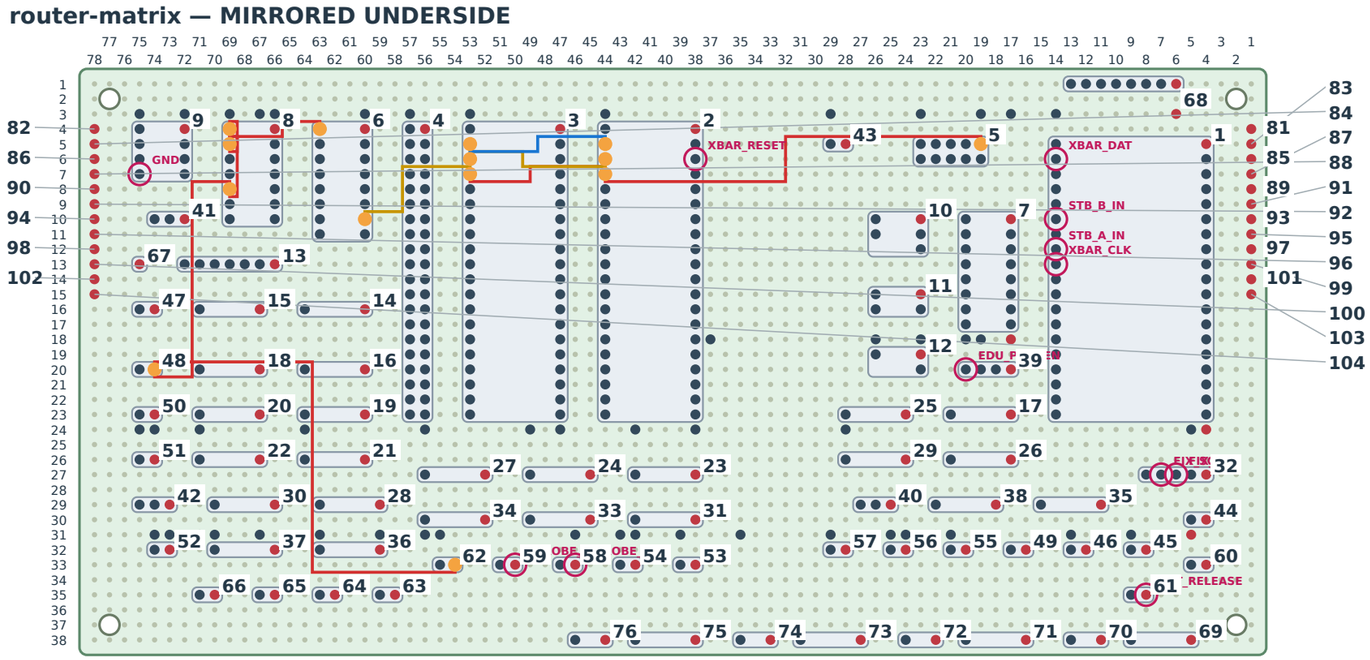

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W211 / 5V_SYS	U_MATRIX_CONTROL_ADDR.16 → U_MATRIX_CONTROL_BUFFER.14	63,4 → 69,4
W212 / 5V_SYS	U_MATRIX_CONTROL_BUFFER.14 → U_MATRIX_CONTROL_BUFFER.13	69,4 → 69,5
W213 / 5V_SYS	U_MATRIX_CONTROL_BUFFER.13 → U_MATRIX_CONTROL_BUFFER.10	69,5 → 69,8
W214 / 5V_SYS	U_MATRIX_CONTROL_BUFFER.10 → C_MATRIX_CONTROL_BUFFER.1	69,8 → 74,20
W215 / 5V_SYS	C_MATRIX_CONTROL_BUFFER.1 → C_MATRIX_CONTROL_ADDR.1	74,20 → 54,33
W218 / 5V_EDU	J_ROUTER_CORE_POWER.1 → U_MATRIX_SWITCHES_MT_A.37	19,5 → 44,7
W219 / 5V_EDU	U_MATRIX_SWITCHES_MT_A.37 → U_MATRIX_SWITCHES_MT_B.37	44,7 → 53,7
W220 / XBAR_DATA	U_MATRIX_CONTROL_ADDR.7 → U_MATRIX_SWITCHES_MT_B.38	60,10 → 53,6
W221 / XBAR_DATA	U_MATRIX_SWITCHES_MT_B.38 → U_MATRIX_SWITCHES_MT_A.38	53,6 → 44,6
W222 / BUS2	U_MATRIX_SWITCHES_MT_A.39 → U_MATRIX_SWITCHES_MT_B.39	44,5 → 53,5

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

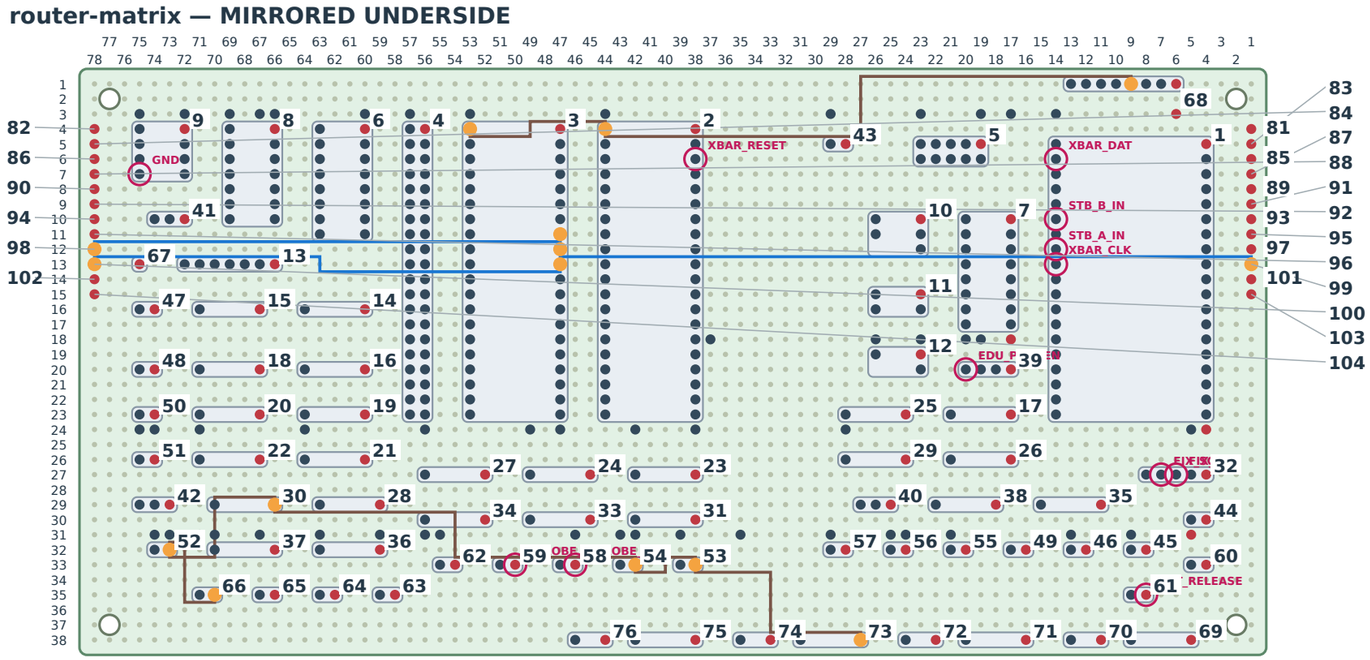

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W225 / 12V_SYS	R_LED_12VSYS.1 → C_MATRIX_SWITCHES_MT1.1	27,38 → 38,33
W226 / 12V_SYS	C_MATRIX_SWITCHES_MT1.1 → C_MATRIX_SWITCHES_MT1_BULK.1	38,33 → 42,33
W227 / 12V_SYS	C_MATRIX_SWITCHES_MT1_BULK.1 → R_MATRIX_SWITCHES_RESET_ON.1	42,33 → 66,29
W228 / 12V_SYS	R_MATRIX_SWITCHES_RESET_ON.1 → C_MATRIX_SWITCHES_MT0_BULK.1	66,29 → 73,32
W229 / 12V_SYS	C_MATRIX_SWITCHES_MT0_BULK.1 → C_MATRIX_SWITCHES_MT0.1	73,32 → 70,35
W230 / 12V_SYS	J_PROBE.4 → U_MATRIX_SWITCHES_MT_A.40	9,1 → 44,4
W231 / 12V_SYS	U_MATRIX_SWITCHES_MT_A.40 → U_MATRIX_SWITCHES_MT_B.40	44,4 → 53,4
W235 / NODE17	J_BOUNDARY_18.1 → U_MATRIX_SWITCHES_MT_B.8	78,12 → 47,11
W236 / NODE18	J_BOUNDARY_19.1 → U_MATRIX_SWITCHES_MT_B.9	1,13 → 47,12
W237 / NODE19	J_BOUNDARY_20.1 → U_MATRIX_SWITCHES_MT_B.10	78,13 → 47,13

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

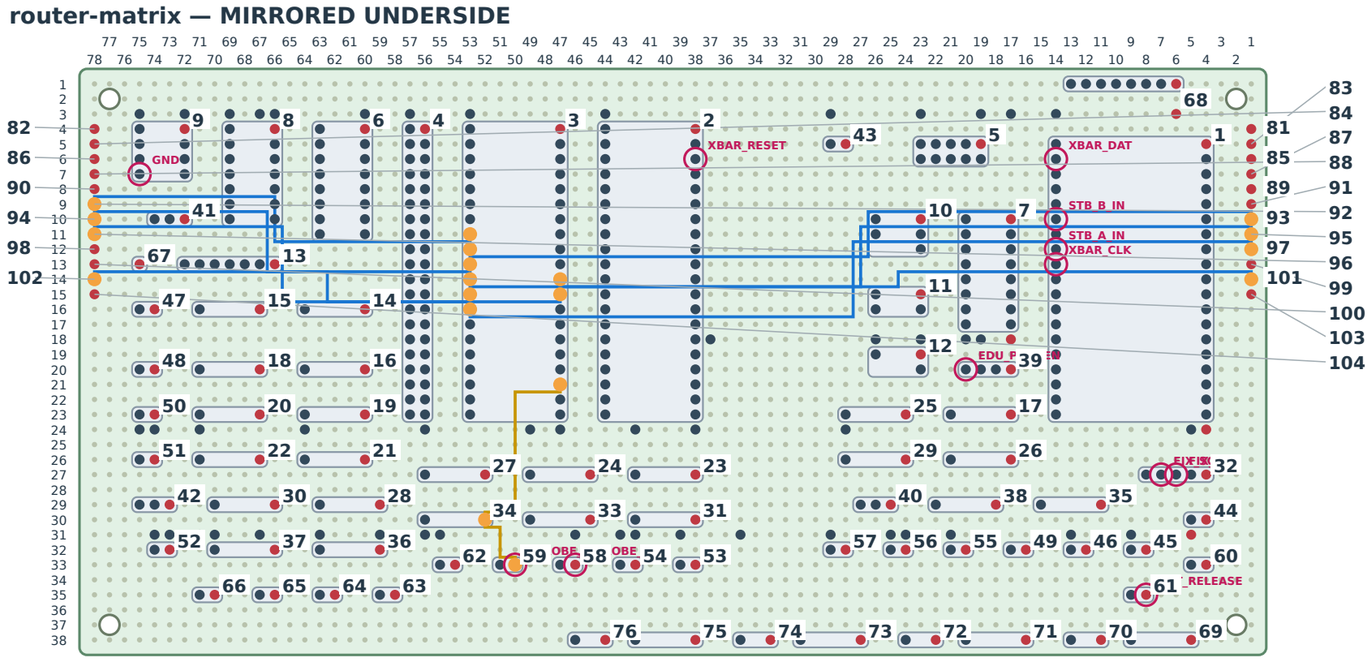

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W238 / NODE20	J_BOUNDARY_21.1 → U_MATRIX_SWITCHES_MT_B.11	1,14 → 47,14
W239 / NODE21	J_BOUNDARY_22.1 → U_MATRIX_SWITCHES_MT_B.12	78,14 → 47,15
W240 / STROBE_B	JP_R7_STBB.1 → R_MATRIX_SWITCHES_STBB_OFF.1	50,33 → 52,30
W241 / STROBE_B	R_MATRIX_SWITCHES_STBB_OFF.1 → U_MATRIX_SWITCHES_MT_B.18	52,30 → 47,21
W242 / NODE16	J_BOUNDARY_17.1 → U_MATRIX_SWITCHES_MT_B.28	1,12 → 53,16
W243 / NODE15	J_BOUNDARY_16.1 → U_MATRIX_SWITCHES_MT_B.29	78,11 → 53,15
W244 / NODE14	J_BOUNDARY_15.1 → U_MATRIX_SWITCHES_MT_B.30	1,11 → 53,14
W245 / NODE13	J_BOUNDARY_14.1 → U_MATRIX_SWITCHES_MT_B.31	78,10 → 53,13
W246 / NODE12	J_BOUNDARY_13.1 → U_MATRIX_SWITCHES_MT_B.32	1,10 → 53,12
W247 / NODE11	J_BOUNDARY_12.1 → U_MATRIX_SWITCHES_MT_B.33	78,9 → 53,11

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

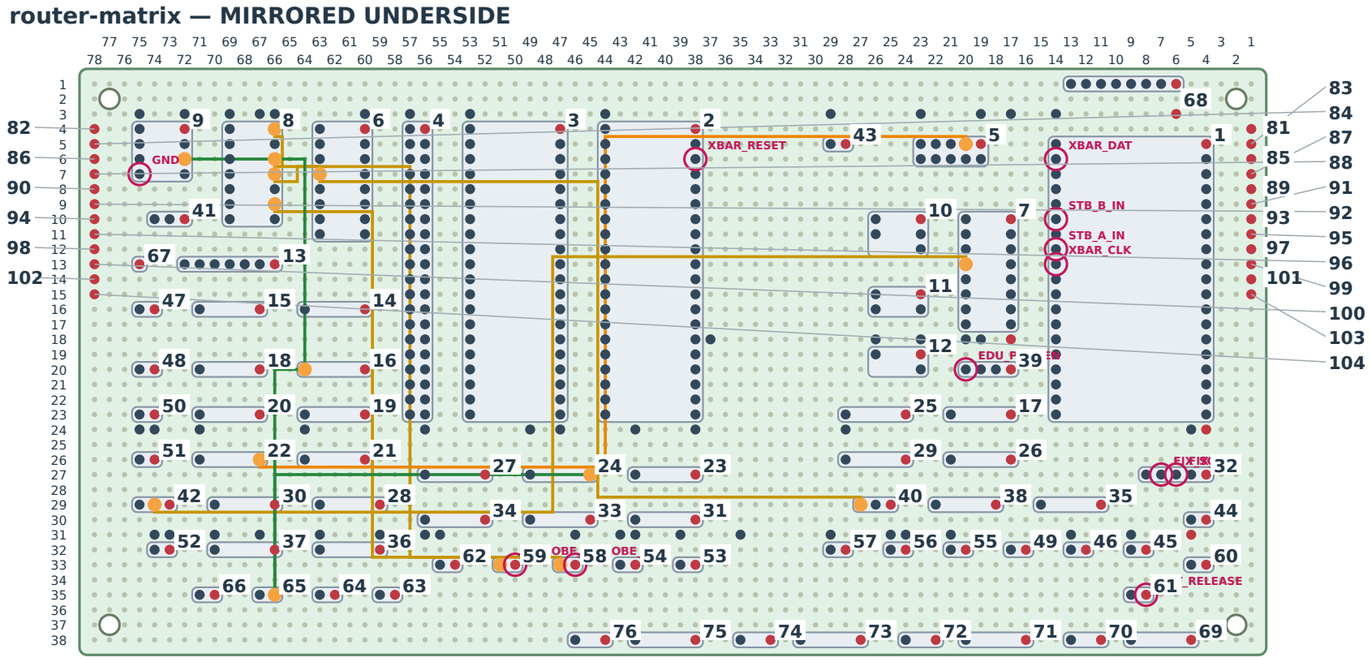

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W262 / 3V3_SYS	J_ROUTER_CORE_POWER.3 → D_MATRIX_CONTROL_SOURCE.1	20,5 → 67,26
W273 / ROUTER_ALIVE	U_ROUTER_SAFETY_WATCH.13 → Q_MATRIX_SWITCHES_RESET_ALIVE.2	20,13 → 74,29
W275 / XBAR_OE_N	Q_ROUTER_SAFETY_BUF.3 → U_MATRIX_CONTROL_ADDR.13	27,29 → 63,7
W276 / XBAR_OE_N	U_MATRIX_CONTROL_ADDR.13 → U_MATRIX_CONTROL_BUFFER.4	63,7 → 66,7
W277 / XBAR_OE_N	U_MATRIX_CONTROL_BUFFER.4 → U_MATRIX_CONTROL_BUFFER.1	66,7 → 66,4
W283 / STROBE_A__B	JP_R7_STBA.2 → U_MATRIX_CONTROL_BUFFER.3	47,33 → 66,6
W284 / STROBE_B__B	JP_R7_STBB.2 → U_MATRIX_CONTROL_BUFFER.6	51,33 → 66,9
W285 / DIAG_DIV	C_MATRIX_CONTROL_DIAG.1 → R_MATRIX_CONTROL_DIAG_TOP.2	66,35 → 64,20
W286 / DIAG_DIV	R_MATRIX_CONTROL_DIAG_TOP.2 → U_MATRIX_CONTROL_DIAG.3	64,20 → 72,6
W287 / DIAG_DIV	C_MATRIX_CONTROL_DIAG.1 → R_MATRIX_CONTROL_DIAG_BOTTOM.1	66,35 → 45,27

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP24 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

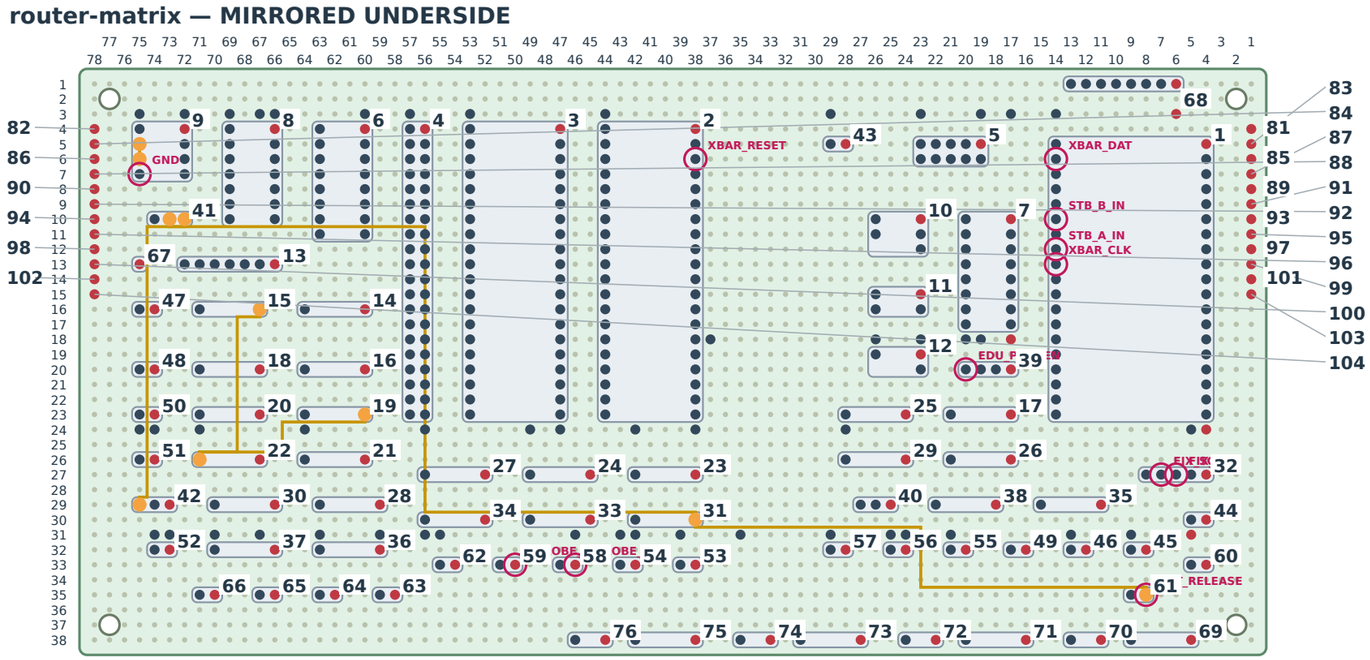

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W288 / DIAG_UNUSED	U_MATRIX_CONTROL_DIAG.6 → U_MATRIX_CONTROL_DIAG.7	75,6 → 75,5
W290 / SOURCE_FEED	D_MATRIX_CONTROL_SOURCE.2 → R_MATRIX_CONTROL_SOURCE_HI.1	71,26 → 60,23
W291 / SOURCE_FEED	D_MATRIX_CONTROL_SOURCE.2 → R_MATRIX_CONTROL_SOURCE_LO.1	71,26 → 67,16
W292 / RST_RELEASE	JP_R7_RST.1 → R_MATRIX_SWITCHES_RST_RELEASE_OFF.1	8,35 → 38,30
W293 / RST_RELEASE	R_MATRIX_SWITCHES_RST_RELEASE_OFF.1 → Q_MATRIX_SWITCHES_RESET_RELEASE.2	38,30 → 73,10
W294 / RESET_MID	Q_MATRIX_SWITCHES_RESET_ALIVE.3 → Q_MATRIX_SWITCHES_RESET_RELEASE.1	75,29 → 72,10

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP27 — contact-a

At most ten added wires per view. Inspect each net with power isolated.

contact-a — MIRRORED UNDERSIDE

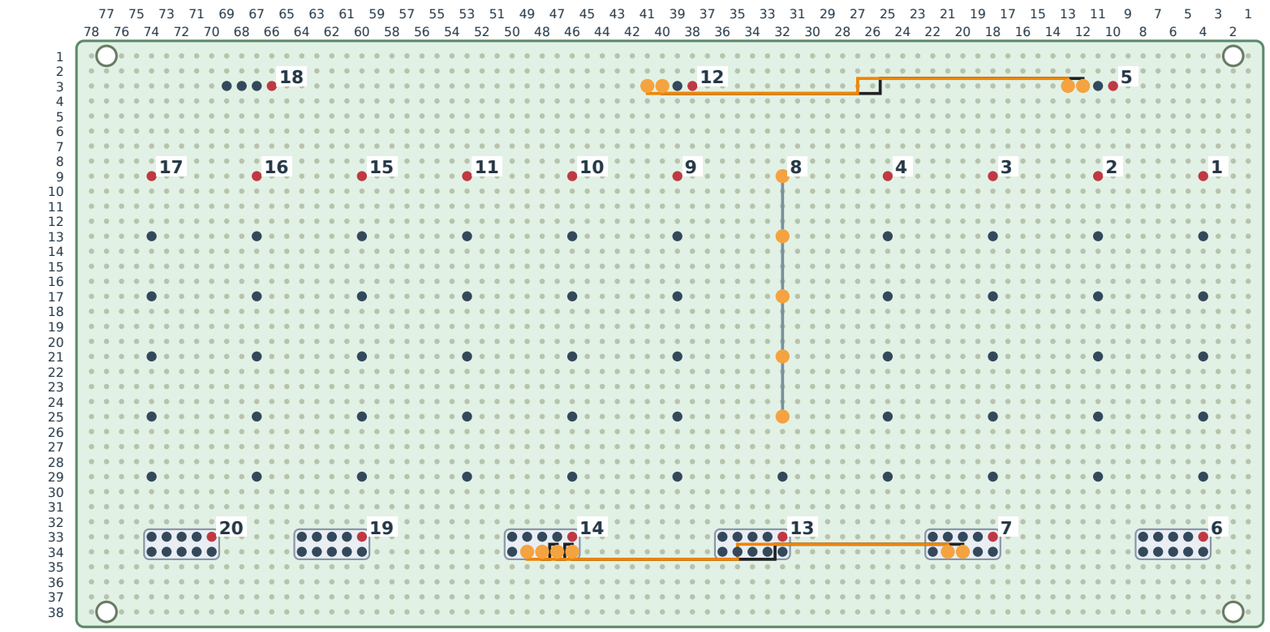

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W33 / GND	J_A1_SMART.6 → J_A2_SMART.2	20,34 → 46,34
W34 / GND	J_A2_SMART.2 → J_A2_SMART.4	46,34 → 47,34
W35 / GND	J_A2_SMART.4 → J_A2_SMART.6	47,34 → 48,34
W36 / GND	J_A1_SERVICE.3 → J_A2_SERVICE.3	12,3 → 40,3
W42 / 3V3_SYS	J_A1_SERVICE.4 → J_A2_SERVICE.4	13,3 → 41,3
W43 / 3V3_SYS	J_A1_SMART.8 → J_A2_SMART.8	21,34 → 49,34
W46 / NODE04	J_A2_NODE04.1 → J_A2_NODE04.2	32,9 → 32,13
W47 / NODE04	J_A2_NODE04.2 → J_A2_NODE04.3	32,13 → 32,17
W48 / NODE04	J_A2_NODE04.3 → J_A2_NODE04.4	32,17 → 32,21
W49 / NODE04	J_A2_NODE04.4 → J_A2_NODE04.5	32,21 → 32,25

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP27 — contact-a

At most ten added wires per view. Inspect each net with power isolated.

contact-a — MIRRORED UNDERSIDE

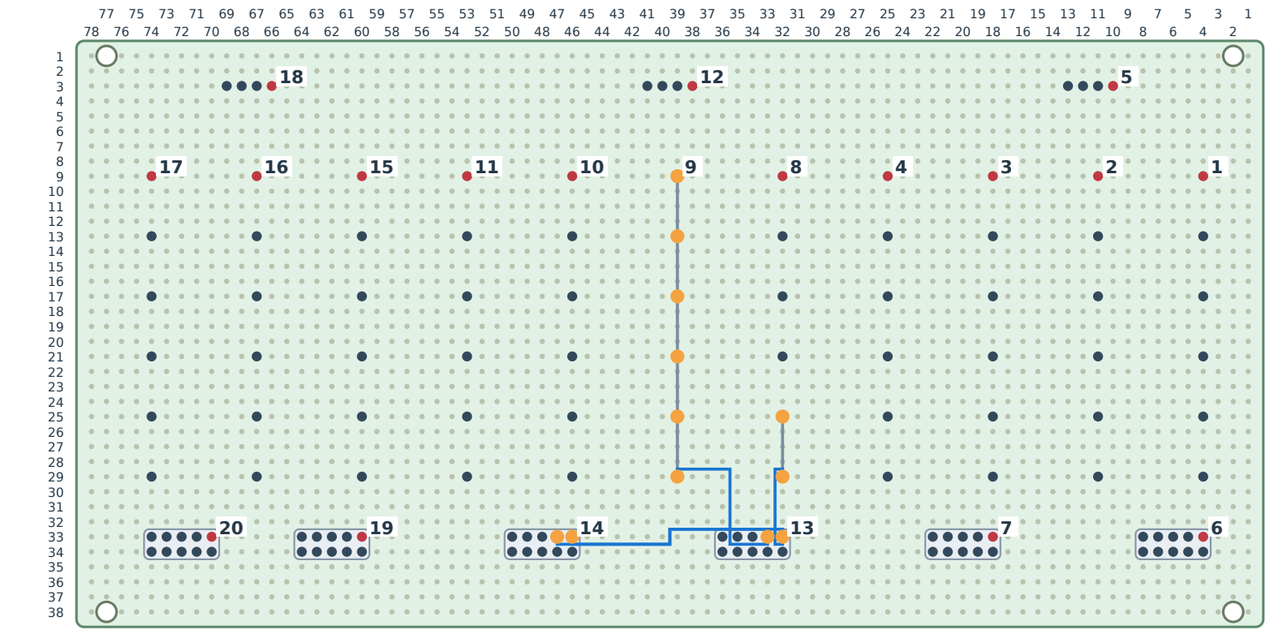

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W50 / NODE04	J_A2_NODE04.5 → J_A2_NODE04.6	32,25 → 32,29
W51 / NODE04	J_A2_NODE04.6 → J_A2_NODE.1	32,29 → 32,33
W52 / NODE04	J_A2_NODE.1 → J_A2_SMART.1	32,33 → 46,33
W53 / NODE05	J_A2_NODE05.1 → J_A2_NODE05.2	39,9 → 39,13
W54 / NODE05	J_A2_NODE05.2 → J_A2_NODE05.3	39,13 → 39,17
W55 / NODE05	J_A2_NODE05.3 → J_A2_NODE05.4	39,17 → 39,21
W56 / NODE05	J_A2_NODE05.4 → J_A2_NODE05.5	39,21 → 39,25
W57 / NODE05	J_A2_NODE05.5 → J_A2_NODE05.6	39,25 → 39,29
W58 / NODE05	J_A2_NODE05.6 → J_A2_NODE.3	39,29 → 33,33
W59 / NODE05	J_A2_NODE.3 → J_A2_SMART.3	33,33 → 47,33

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP27 — contact-a

At most ten added wires per view. Inspect each net with power isolated.

contact-a — MIRRORED UNDERSIDE

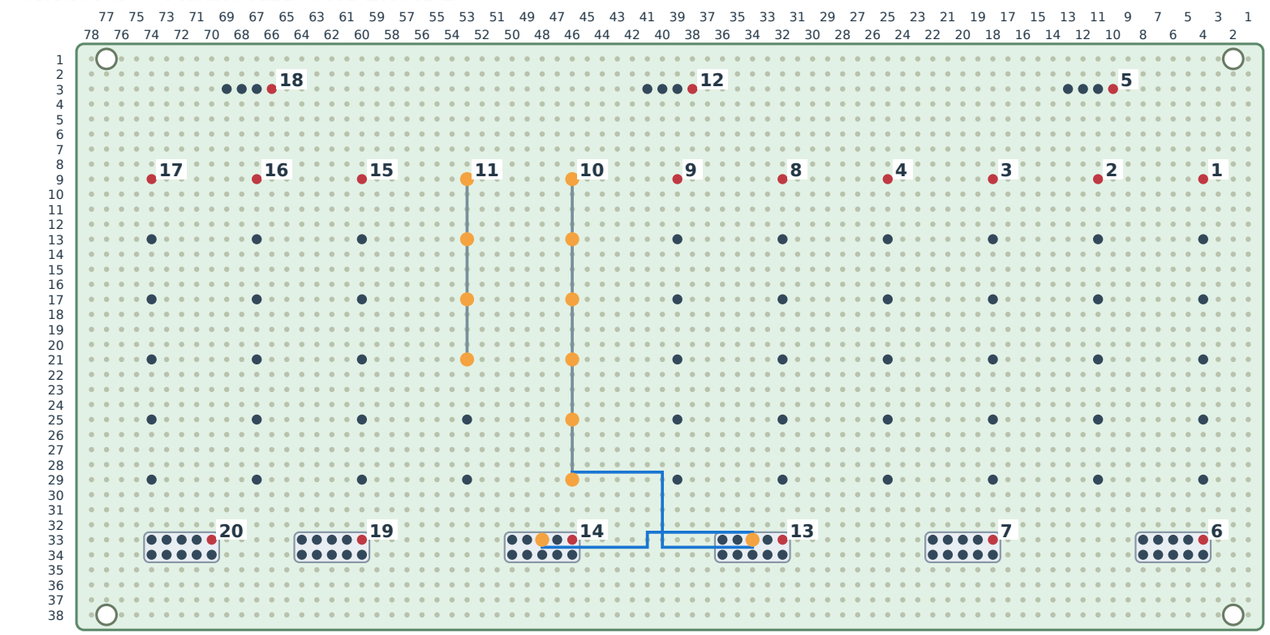

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W60 / NODE06	J_A2_NODE06.1 → J_A2_NODE06.2	46,9 → 46,13
W61 / NODE06	J_A2_NODE06.2 → J_A2_NODE06.3	46,13 → 46,17
W62 / NODE06	J_A2_NODE06.3 → J_A2_NODE06.4	46,17 → 46,21
W63 / NODE06	J_A2_NODE06.4 → J_A2_NODE06.5	46,21 → 46,25
W64 / NODE06	J_A2_NODE06.5 → J_A2_NODE06.6	46,25 → 46,29
W65 / NODE06	J_A2_NODE06.6 → J_A2_NODE.5	46,29 → 34,33
W66 / NODE06	J_A2_NODE.5 → J_A2_SMART.5	34,33 → 48,33
W67 / NODE07	J_A2_NODE07.1 → J_A2_NODE07.2	53,9 → 53,13
W68 / NODE07	J_A2_NODE07.2 → J_A2_NODE07.3	53,13 → 53,17
W69 / NODE07	J_A2_NODE07.3 → J_A2_NODE07.4	53,17 → 53,21

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP27 — contact-a

At most ten added wires per view. Inspect each net with power isolated.

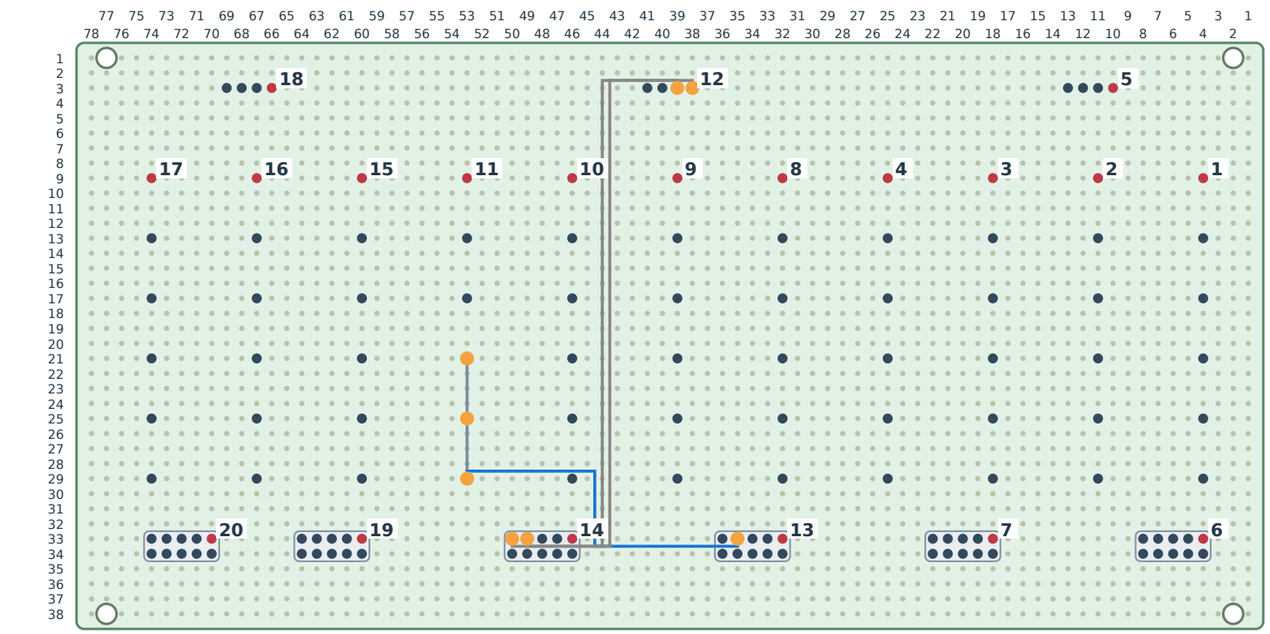

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W70 / NODE07	J_A2_NODE07.4 → J_A2_NODE07.5	53,21 → 53,25
W71 / NODE07	J_A2_NODE07.5 → J_A2_NODE07.6	53,25 → 53,29
W72 / NODE07	J_A2_NODE07.6 → J_A2_NODE.7	53,29 → 35,33
W73 / SCL_POSITION_1	J_A2_SERVICE.1 → J_A2_SMART.9	38,3 → 50,33
W74 / SDA_POSITION_1	J_A2_SERVICE.2 → J_A2_SMART.7	39,3 → 49,33

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP28 — contact-a

At most ten added wires per view. Inspect each net with power isolated.

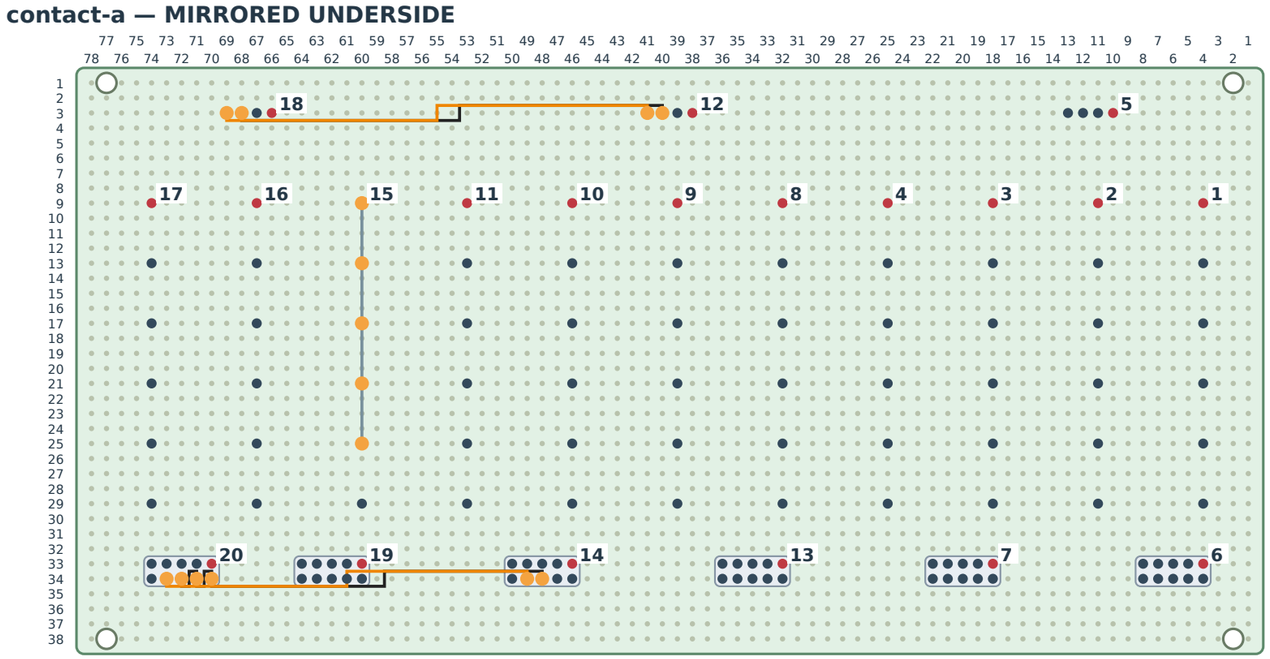

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W37 / GND	J_A2_SMART.6 → J_A3_SMART.2	48,34 → 70,34
W38 / GND	J_A3_SMART.2 → J_A3_SMART.4	70,34 → 71,34
W39 / GND	J_A3_SMART.4 → J_A3_SMART.6	71,34 → 72,34
W40 / GND	J_A2_SERVICE.3 → J_A3_SERVICE.3	40,3 → 68,3
W44 / 3V3_SYS	J_A2_SMART.8 → J_A3_SMART.8	49,34 → 73,34
W45 / 3V3_SYS	J_A2_SERVICE.4 → J_A3_SERVICE.4	41,3 → 69,3
W75 / NODE08	J_A3_NODE08.1 → J_A3_NODE08.2	60,9 → 60,13
W76 / NODE08	J_A3_NODE08.2 → J_A3_NODE08.3	60,13 → 60,17
W77 / NODE08	J_A3_NODE08.3 → J_A3_NODE08.4	60,17 → 60,21
W78 / NODE08	J_A3_NODE08.4 → J_A3_NODE08.5	60,21 → 60,25

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP28 — contact-a

At most ten added wires per view. Inspect each net with power isolated.

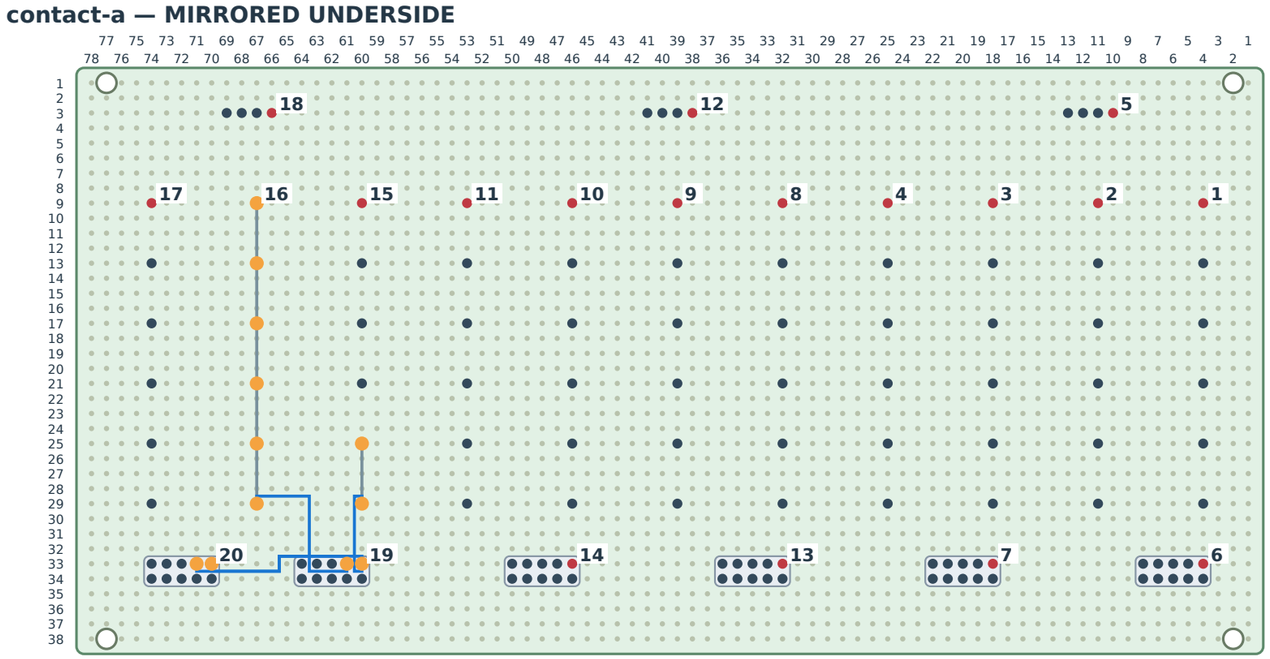

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W79 / NODE08	J_A3_NODE08.5 → J_A3_NODE08.6	60,25 → 60,29
W80 / NODE08	J_A3_NODE08.6 → J_A3_NODE.1	60,29 → 60,33
W81 / NODE08	J_A3_NODE.1 → J_A3_SMART.1	60,33 → 70,33
W82 / NODE09	J_A3_NODE09.1 → J_A3_NODE09.2	67,9 → 67,13
W83 / NODE09	J_A3_NODE09.2 → J_A3_NODE09.3	67,13 → 67,17
W84 / NODE09	J_A3_NODE09.3 → J_A3_NODE09.4	67,17 → 67,21
W85 / NODE09	J_A3_NODE09.4 → J_A3_NODE09.5	67,21 → 67,25
W86 / NODE09	J_A3_NODE09.5 → J_A3_NODE09.6	67,25 → 67,29
W87 / NODE09	J_A3_NODE09.6 → J_A3_NODE.3	67,29 → 61,33
W88 / NODE09	J_A3_NODE.3 → J_A3_SMART.3	61,33 → 71,33

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP28 — contact-a

At most ten added wires per view. Inspect each net with power isolated.

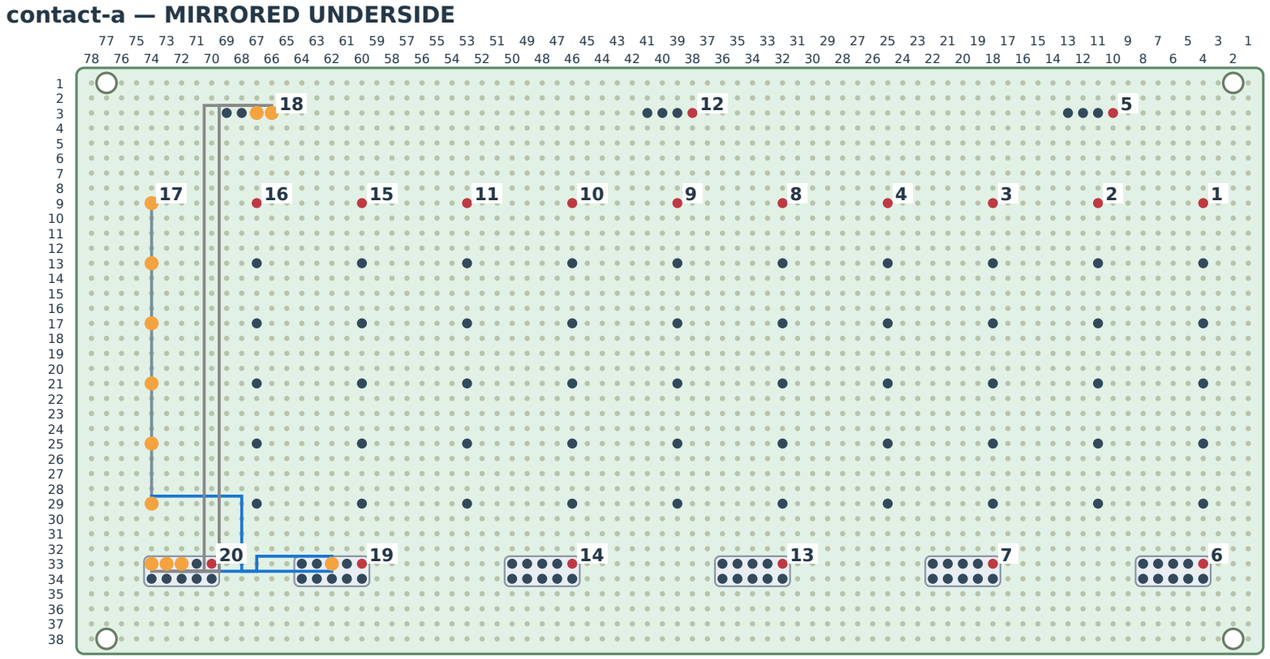

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W89 / NODE10	J_A3_NODE10.1 → J_A3_NODE10.2	74,9 → 74,13
W90 / NODE10	J_A3_NODE10.2 → J_A3_NODE10.3	74,13 → 74,17
W91 / NODE10	J_A3_NODE10.3 → J_A3_NODE10.4	74,17 → 74,21
W92 / NODE10	J_A3_NODE10.4 → J_A3_NODE10.5	74,21 → 74,25
W93 / NODE10	J_A3_NODE10.5 → J_A3_NODE10.6	74,25 → 74,29
W94 / NODE10	J_A3_NODE10.6 → J_A3_NODE.5	74,29 → 62,33
W95 / NODE10	J_A3_NODE.5 → J_A3_SMART.5	62,33 → 72,33
W96 / SCL_POSITION_2	J_A3_SERVICE.1 → J_A3_SMART.9	66,3 → 74,33
W97 / SDA_POSITION_2	J_A3_SERVICE.2 → J_A3_SMART.7	67,3 → 73,33

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP29 — contact-b

At most ten added wires per view. Inspect each net with power isolated.

contact-b — MIRRORED UNDERSIDE

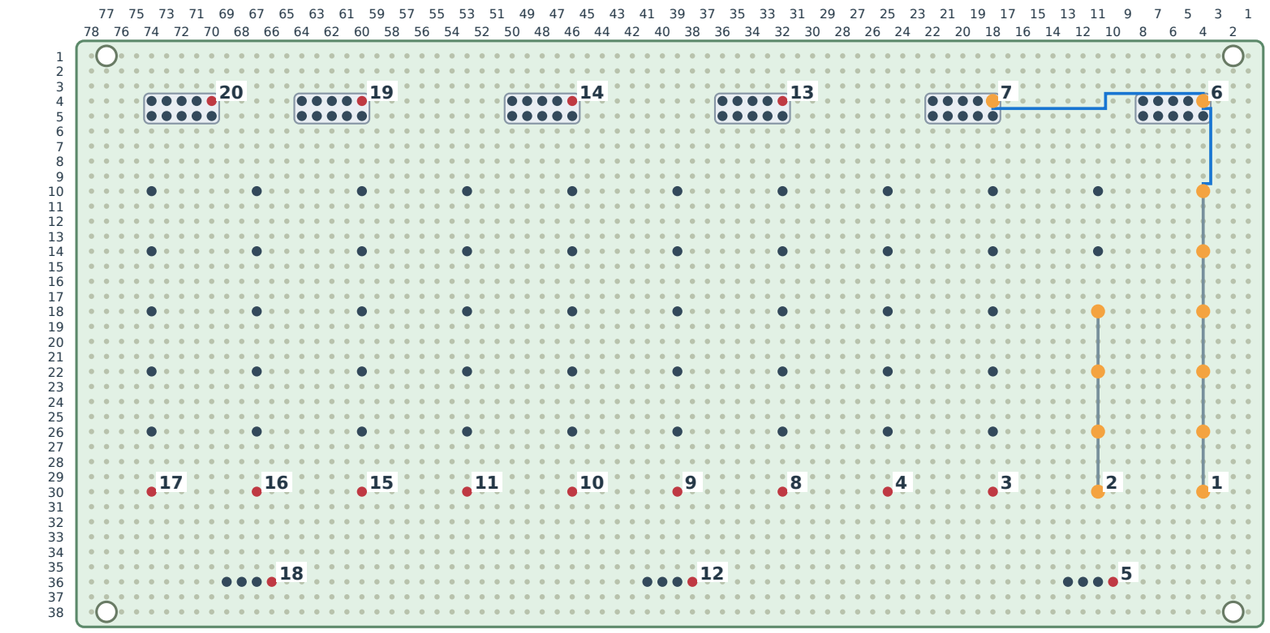

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W1 / NODE11	J_B1_NODE11.1 → J_B1_NODE11.2	4,30 → 4,26
W2 / NODE11	J_B1_NODE11.2 → J_B1_NODE11.3	4,26 → 4,22
W3 / NODE11	J_B1_NODE11.3 → J_B1_NODE11.4	4,22 → 4,18
W4 / NODE11	J_B1_NODE11.4 → J_B1_NODE11.5	4,18 → 4,14
W5 / NODE11	J_B1_NODE11.5 → J_B1_NODE11.6	4,14 → 4,10
W6 / NODE11	J_B1_NODE11.6 → J_B1_NODE.1	4,10 → 4,4
W7 / NODE11	J_B1_NODE.1 → J_B1_SMART.1	4,4 → 18,4
W8 / NODE12	J_B1_NODE12.1 → J_B1_NODE12.2	11,30 → 11,26
W9 / NODE12	J_B1_NODE12.2 → J_B1_NODE12.3	11,26 → 11,22
W10 / NODE12	J_B1_NODE12.3 → J_B1_NODE12.4	11,22 → 11,18

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP29 — contact-b

At most ten added wires per view. Inspect each net with power isolated.

contact-b — MIRRORED UNDERSIDE

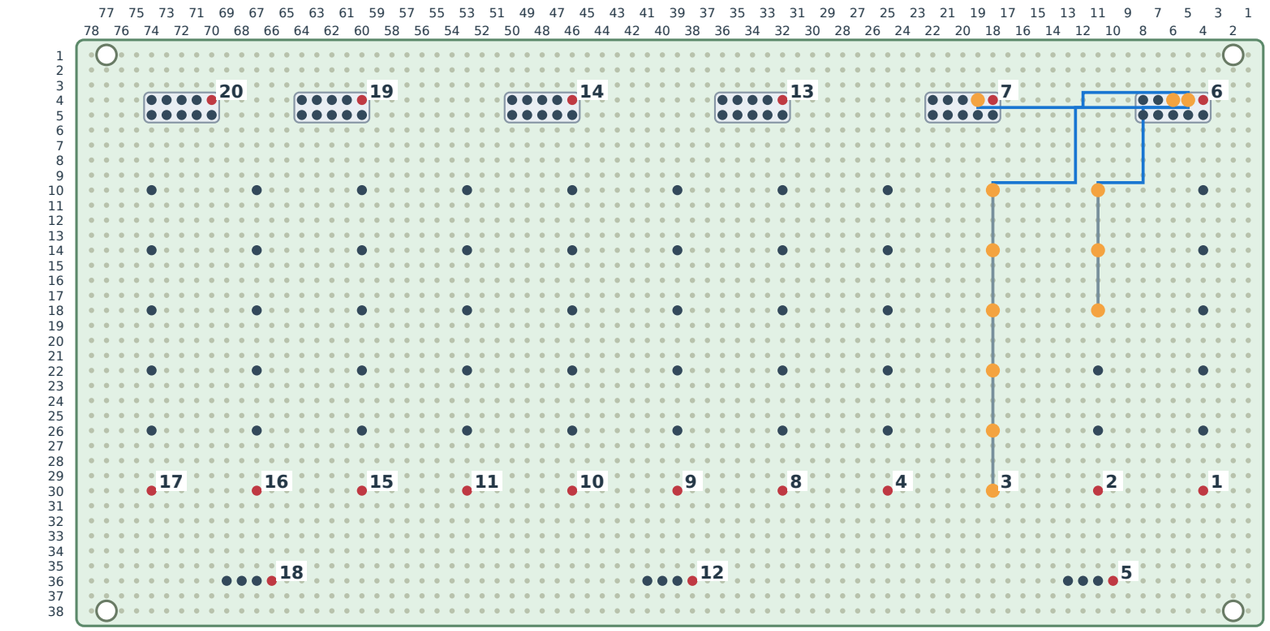

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W11 / NODE12	J_B1_NODE12.4 → J_B1_NODE12.5	11,18 → 11,14
W12 / NODE12	J_B1_NODE12.5 → J_B1_NODE12.6	11,14 → 11,10
W13 / NODE12	J_B1_NODE12.6 → J_B1_NODE.3	11,10 → 5,4
W14 / NODE12	J_B1_NODE.3 → J_B1_SMART.3	5,4 → 19,4
W15 / NODE13	J_B1_NODE13.1 → J_B1_NODE13.2	18,30 → 18,26
W16 / NODE13	J_B1_NODE13.2 → J_B1_NODE13.3	18,26 → 18,22
W17 / NODE13	J_B1_NODE13.3 → J_B1_NODE13.4	18,22 → 18,18
W18 / NODE13	J_B1_NODE13.4 → J_B1_NODE13.5	18,18 → 18,14
W19 / NODE13	J_B1_NODE13.5 → J_B1_NODE13.6	18,14 → 18,10
W20 / NODE13	J_B1_NODE13.6 → J_B1_NODE.5	18,10 → 6,4

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP29 — contact-b

At most ten added wires per view. Inspect each net with power isolated.

contact-b — MIRRORED UNDERSIDE

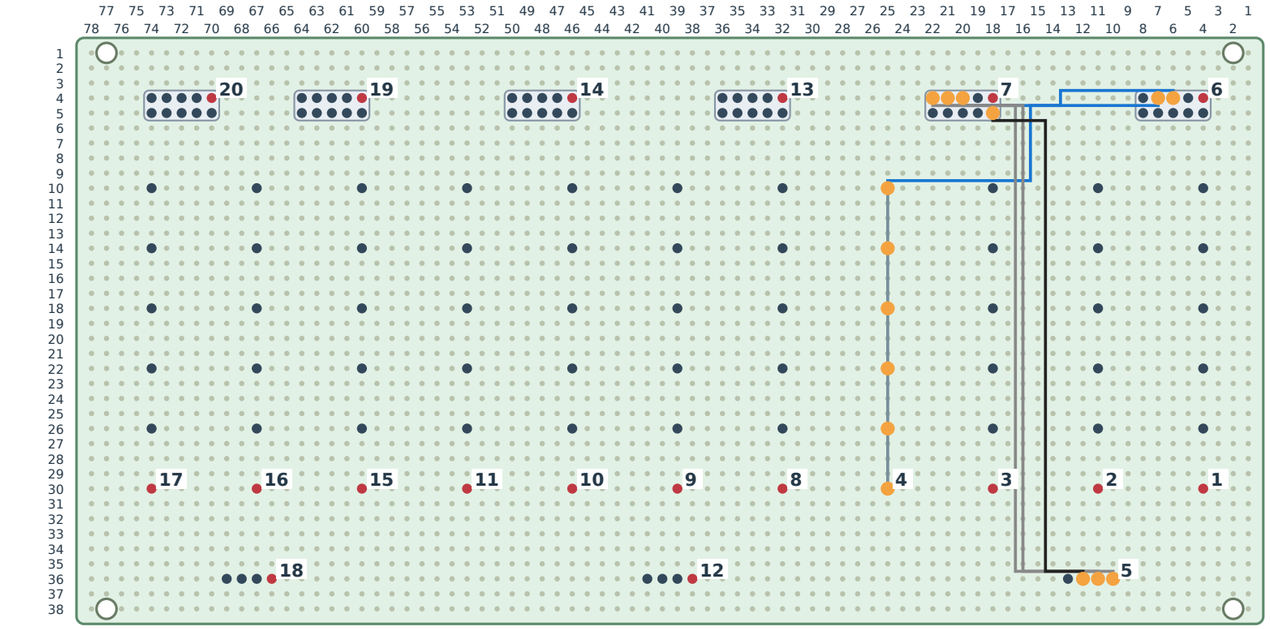

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W21 / NODE13	J_B1_NODE.5 → J_B1_SMART.5	6,4 → 20,4
W22 / NODE14	J_B1_NODE14.1 → J_B1_NODE14.2	25,30 → 25,26
W23 / NODE14	J_B1_NODE14.2 → J_B1_NODE14.3	25,26 → 25,22
W24 / NODE14	J_B1_NODE14.3 → J_B1_NODE14.4	25,22 → 25,18
W25 / NODE14	J_B1_NODE14.4 → J_B1_NODE14.5	25,18 → 25,14
W26 / NODE14	J_B1_NODE14.5 → J_B1_NODE14.6	25,14 → 25,10
W27 / NODE14	J_B1_NODE14.6 → J_B1_NODE.7	25,10 → 7,4
W28 / SCL_POSITION_3	J_B1_SERVICE.1 → J_B1_SMART.9	10,36 → 22,4
W29 / SDA_POSITION_3	J_B1_SERVICE.2 → J_B1_SMART.7	11,36 → 21,4
W30 / GND	J_B1_SERVICE.3 → J_B1_SMART.2	12,36 → 18,5


Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP29 — contact-b

At most ten added wires per view. Inspect each net with power isolated.

Wire / net	From → to	TOP holes
W31 / GND	J_B1_SMART.2 → J_B1_SMART.4	18,5 → 19,5
W32 / GND	J_B1_SMART.4 → J_B1_SMART.6	19,5 → 20,5
W41 / 3V3_SYS	J_B1_SERVICE.4 → J_B1_SMART.8	13,36 → 21,5

contact-b — MIRRORED UNDERSIDE

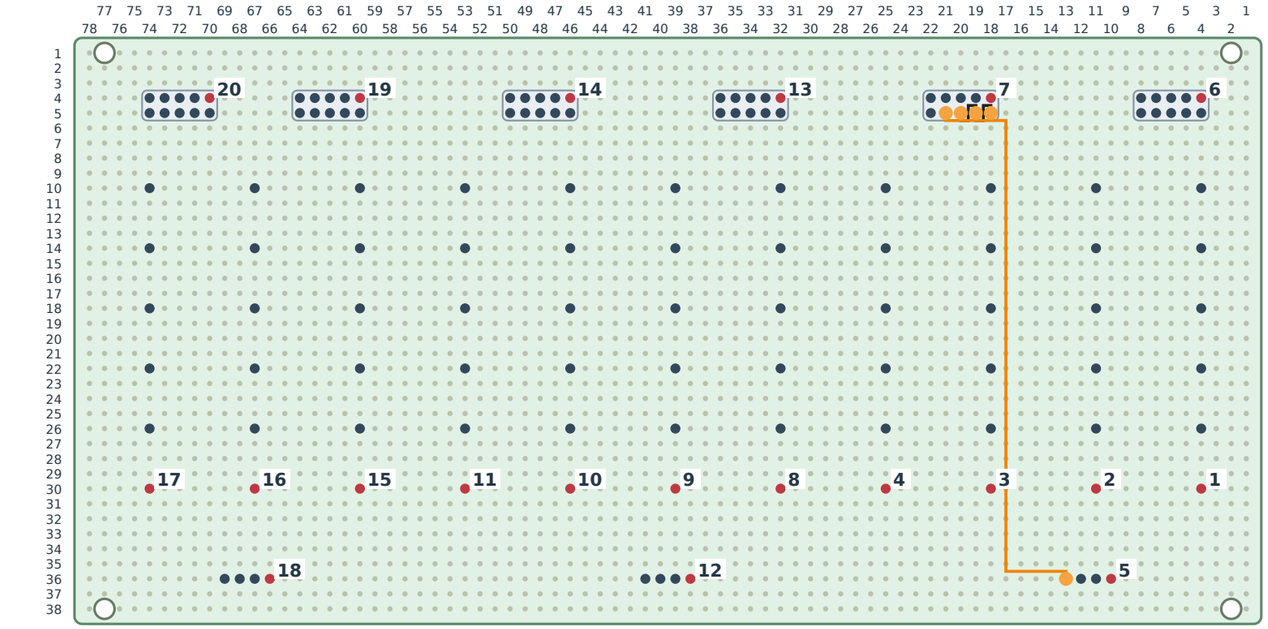

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP30 — contact-b

At most ten added wires per view. Inspect each net with power isolated.

contact-b — MIRRORED UNDERSIDE

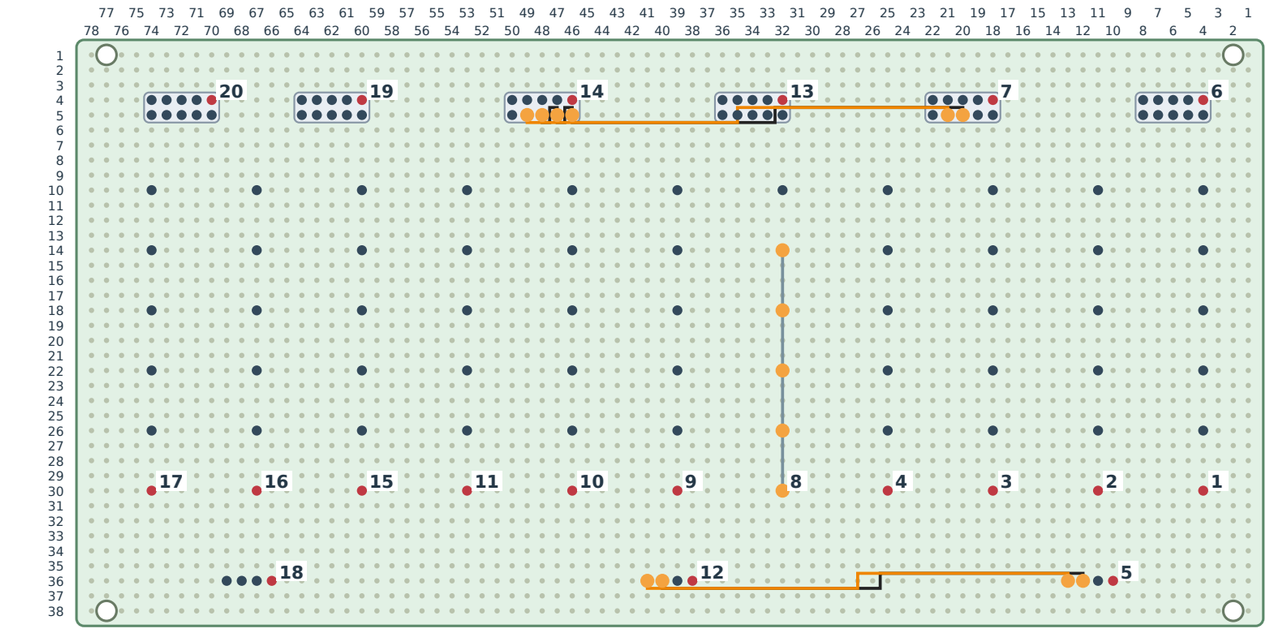

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W33 / GND	J_B1_SMART.6 → J_B2_SMART.2	20,5 → 46,5
W34 / GND	J_B2_SMART.2 → J_B2_SMART.4	46,5 → 47,5
W35 / GND	J_B2_SMART.4 → J_B2_SMART.6	47,5 → 48,5
W36 / GND	J_B1_SERVICE.3 → J_B2_SERVICE.3	12,36 → 40,36
W42 / 3V3_SYS	J_B1_SERVICE.4 → J_B2_SERVICE.4	13,36 → 41,36
W43 / 3V3_SYS	J_B1_SMART.8 → J_B2_SMART.8	21,5 → 49,5
W46 / NODE15	J_B2_NODE15.1 → J_B2_NODE15.2	32,30 → 32,26
W47 / NODE15	J_B2_NODE15.2 → J_B2_NODE15.3	32,26 → 32,22
W48 / NODE15	J_B2_NODE15.3 → J_B2_NODE15.4	32,22 → 32,18
W49 / NODE15	J_B2_NODE15.4 → J_B2_NODE15.5	32,18 → 32,14

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP30 — contact-b

At most ten added wires per view. Inspect each net with power isolated.

contact-b — MIRRORED UNDERSIDE

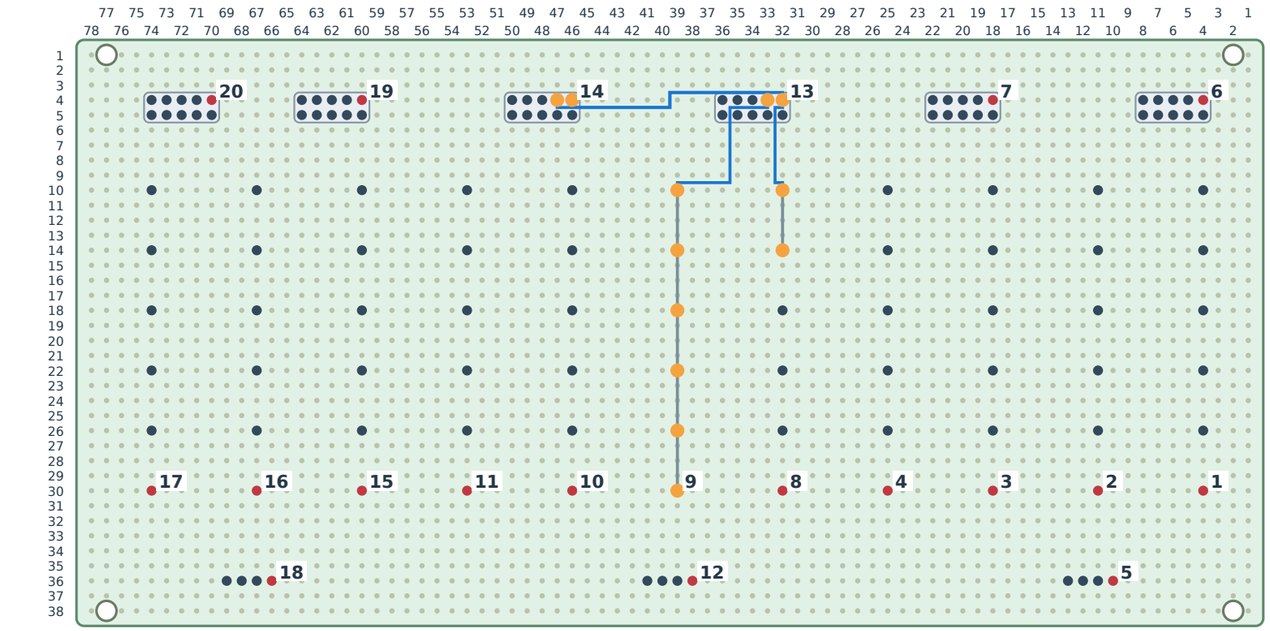

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W50 / NODE15	J_B2_NODE15.5 → J_B2_NODE15.6	32,14 → 32,10
W51 / NODE15	J_B2_NODE15.6 → J_B2_NODE.1	32,10 → 32,4
W52 / NODE15	J_B2_NODE.1 → J_B2_SMART.1	32,4 → 46,4
W53 / NODE16	J_B2_NODE16.1 → J_B2_NODE16.2	39,30 → 39,26
W54 / NODE16	J_B2_NODE16.2 → J_B2_NODE16.3	39,26 → 39,22
W55 / NODE16	J_B2_NODE16.3 → J_B2_NODE16.4	39,22 → 39,18
W56 / NODE16	J_B2_NODE16.4 → J_B2_NODE16.5	39,18 → 39,14
W57 / NODE16	J_B2_NODE16.5 → J_B2_NODE16.6	39,14 → 39,10
W58 / NODE16	J_B2_NODE16.6 → J_B2_NODE.3	39,10 → 33,4
W59 / NODE16	J_B2_NODE.3 → J_B2_SMART.3	33,4 → 47,4

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP30 — contact-b

At most ten added wires per view. Inspect each net with power isolated.

contact-b — MIRRORED UNDERSIDE

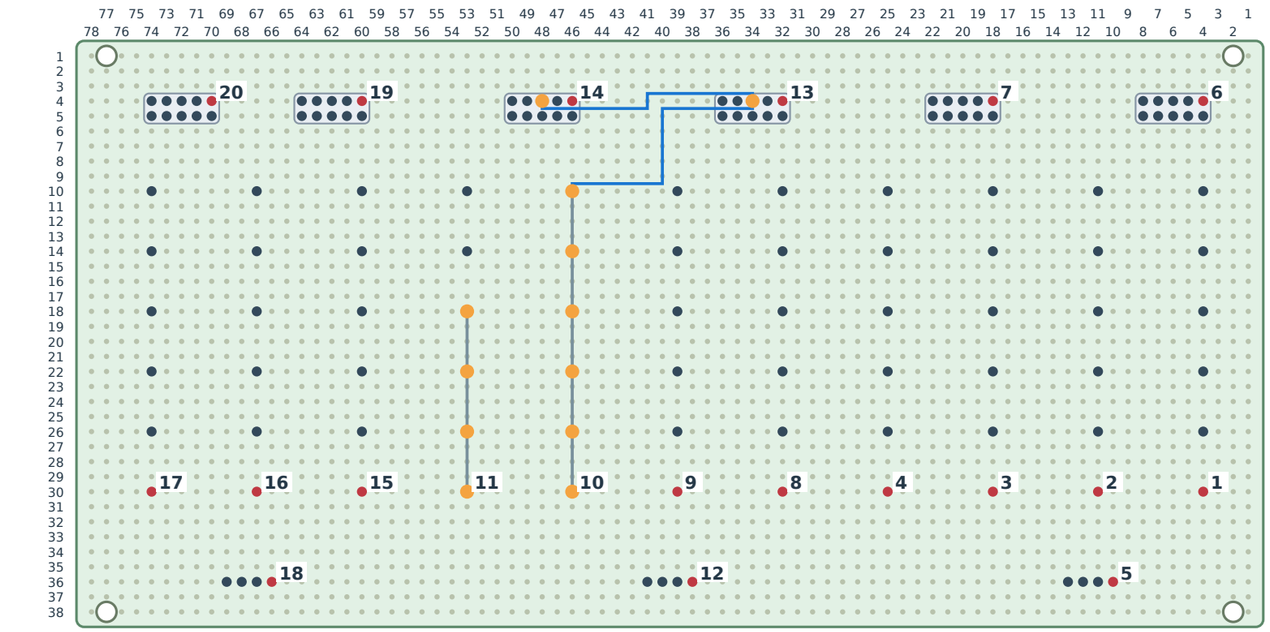

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W60 / NODE17	J_B2_NODE17.1 → J_B2_NODE17.2	46,30 → 46,26
W61 / NODE17	J_B2_NODE17.2 → J_B2_NODE17.3	46,26 → 46,22
W62 / NODE17	J_B2_NODE17.3 → J_B2_NODE17.4	46,22 → 46,18
W63 / NODE17	J_B2_NODE17.4 → J_B2_NODE17.5	46,18 → 46,14
W64 / NODE17	J_B2_NODE17.5 → J_B2_NODE17.6	46,14 → 46,10
W65 / NODE17	J_B2_NODE17.6 → J_B2_NODE.5	46,10 → 34,4
W66 / NODE17	J_B2_NODE.5 → J_B2_SMART.5	34,4 → 48,4
W67 / NODE18	J_B2_NODE18.1 → J_B2_NODE18.2	53,30 → 53,26
W68 / NODE18	J_B2_NODE18.2 → J_B2_NODE18.3	53,26 → 53,22
W69 / NODE18	J_B2_NODE18.3 → J_B2_NODE18.4	53,22 → 53,18

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP30 — contact-b

At most ten added wires per view. Inspect each net with power isolated.

contact-b — MIRRORED UNDERSIDE

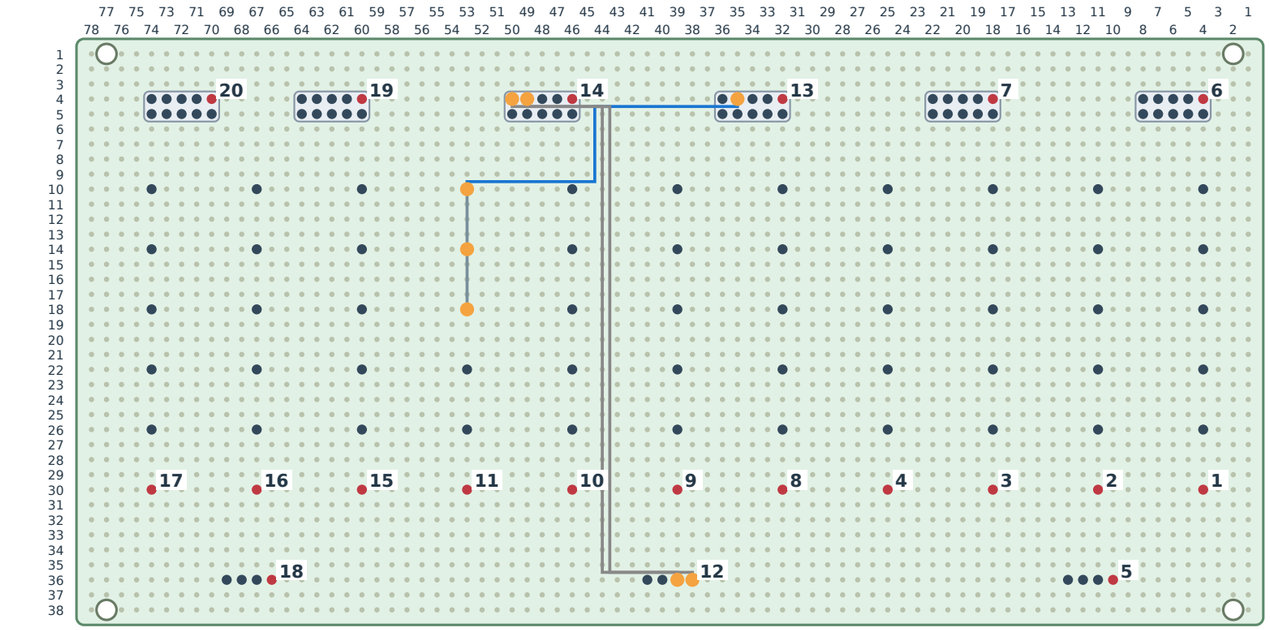

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W70 / NODE18	J_B2_NODE18.4 → J_B2_NODE18.5	53,18 → 53,14
W71 / NODE18	J_B2_NODE18.5 → J_B2_NODE18.6	53,14 → 53,10
W72 / NODE18	J_B2_NODE18.6 → J_B2_NODE.7	53,10 → 35,4
W73 / SCL_POSITION_4	J_B2_SERVICE.1 → J_B2_SMART.9	38,36 → 50,4
W74 / SDA_POSITION_4	J_B2_SERVICE.2 → J_B2_SMART.7	39,36 → 49,4

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP31 — contact-b

At most ten added wires per view. Inspect each net with power isolated.

contact-b — MIRRORED UNDERSIDE

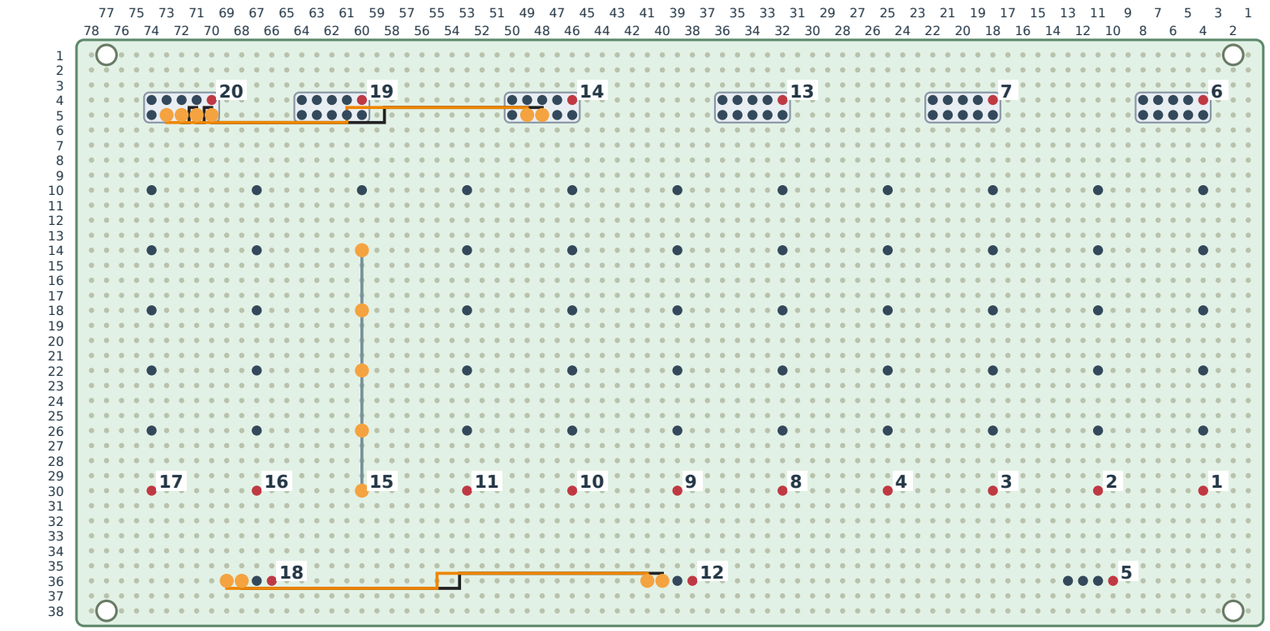

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W37 / GND	J_B2_SMART.6 → J_B3_SMART.2	48,5 → 70,5
W38 / GND	J_B3_SMART.2 → J_B3_SMART.4	70,5 → 71,5
W39 / GND	J_B3_SMART.4 → J_B3_SMART.6	71,5 → 72,5
W40 / GND	J_B2_SERVICE.3 → J_B3_SERVICE.3	40,36 → 68,36
W44 / 3V3_SYS	J_B2_SMART.8 → J_B3_SMART.8	49,5 → 73,5
W45 / 3V3_SYS	J_B2_SERVICE.4 → J_B3_SERVICE.4	41,36 → 69,36
W75 / NODE19	J_B3_NODE19.1 → J_B3_NODE19.2	60,30 → 60,26
W76 / NODE19	J_B3_NODE19.2 → J_B3_NODE19.3	60,26 → 60,22
W77 / NODE19	J_B3_NODE19.3 → J_B3_NODE19.4	60,22 → 60,18
W78 / NODE19	J_B3_NODE19.4 → J_B3_NODE19.5	60,18 → 60,14

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP31 — contact-b

At most ten added wires per view. Inspect each net with power isolated.

contact-b — MIRRORED UNDERSIDE

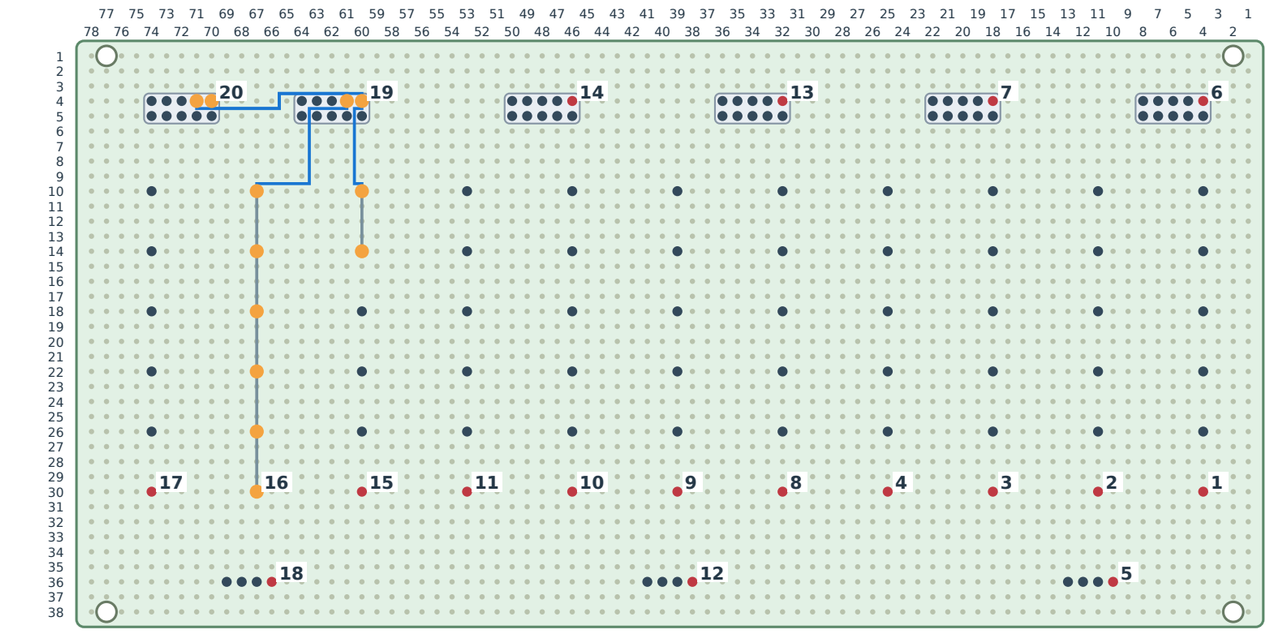

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.


Wire / net	From → to	TOP holes
W79 / NODE19	J_B3_NODE19.5 → J_B3_NODE19.6	60,14 → 60,10
W80 / NODE19	J_B3_NODE19.6 → J_B3_NODE.1	60,10 → 60,4
W81 / NODE19	J_B3_NODE.1 → J_B3_SMART.1	60,4 → 70,4
W82 / NODE20	J_B3_NODE20.1 → J_B3_NODE20.2	67,30 → 67,26
W83 / NODE20	J_B3_NODE20.2 → J_B3_NODE20.3	67,26 → 67,22
W84 / NODE20	J_B3_NODE20.3 → J_B3_NODE20.4	67,22 → 67,18
W85 / NODE20	J_B3_NODE20.4 → J_B3_NODE20.5	67,18 → 67,14
W86 / NODE20	J_B3_NODE20.5 → J_B3_NODE20.6	67,14 → 67,10
W87 / NODE20	J_B3_NODE20.6 → J_B3_NODE.3	67,10 → 61,4
W88 / NODE20	J_B3_NODE.3 → J_B3_SMART.3	61,4 → 71,4

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP31 — contact-b

At most ten added wires per view. Inspect each net with power isolated.

contact-b — MIRRORED UNDERSIDE

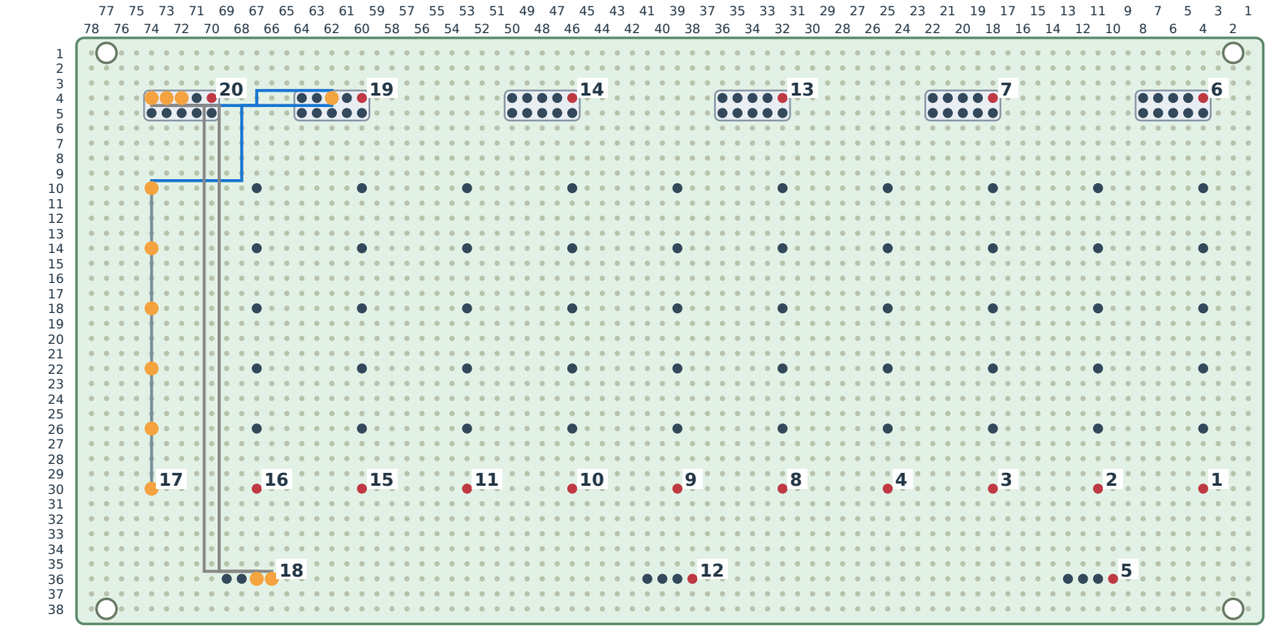

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W89 / NODE21	J_B3_NODE21.1 → J_B3_NODE21.2	74,30 → 74,26
W90 / NODE21	J_B3_NODE21.2 → J_B3_NODE21.3	74,26 → 74,22
W91 / NODE21	J_B3_NODE21.3 → J_B3_NODE21.4	74,22 → 74,18
W92 / NODE21	J_B3_NODE21.4 → J_B3_NODE21.5	74,18 → 74,14
W93 / NODE21	J_B3_NODE21.5 → J_B3_NODE21.6	74,14 → 74,10
W94 / NODE21	J_B3_NODE21.6 → J_B3_NODE.5	74,10 → 62,4
W95 / NODE21	J_B3_NODE.5 → J_B3_SMART.5	62,4 → 72,4
W96 / SCL_POSITION_5	J_B3_SERVICE.1 → J_B3_SMART.9	66,36 → 74,4
W97 / SDA_POSITION_5	J_B3_SERVICE.2 → J_B3_SMART.7	67,36 → 73,4

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP32 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

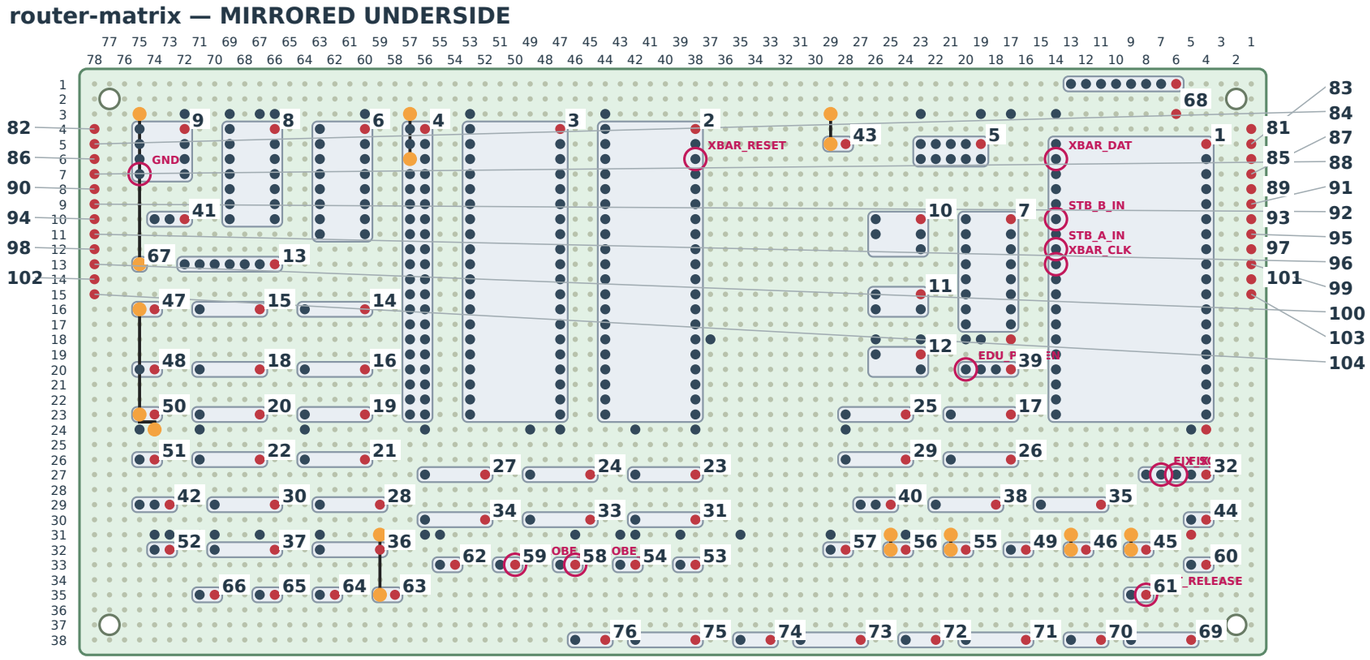

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.


PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W89 / GND	J_INTEGRATION_SW_ENERGIZE.2 → BAR_GND_1.11	75,16 → 74,24
W91 / GND	J_INTEGRATION_SW_BACK.2 → BAR_GND_1.11	75,23 → 74,24
W97 / GND	J_INTEGRATION_PI.6 → BAR_GND_2.9	57,6 → 57,3
W108 / GND	J_ROUTER_CORE_LIGHT.2 → BAR_GND_2.6	29,5 → 29,3
W109 / GND	J_INTEGRATION_GROUND.1 → BAR_GND_2.15	75,13 → 75,3
W119 / GND	J_ROUTER_CORE_FAN1.2 → BAR_GND_3.2	9,32 → 9,31
W120 / GND	J_ROUTER_CORE_FAN2.2 → BAR_GND_3.3	13,32 → 13,31
W124 / GND	J_ROUTER_CORE_12V.2 → BAR_GND_3.4	21,32 → 21,31
W125 / GND	J_ROUTER_CORE_5V.2 → BAR_GND_3.7	25,32 → 25,31
W128 / GND	C_INTEGRATION_ENERGIZE.2 → BAR_GND_3.16	59,35 → 59,31

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP32 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

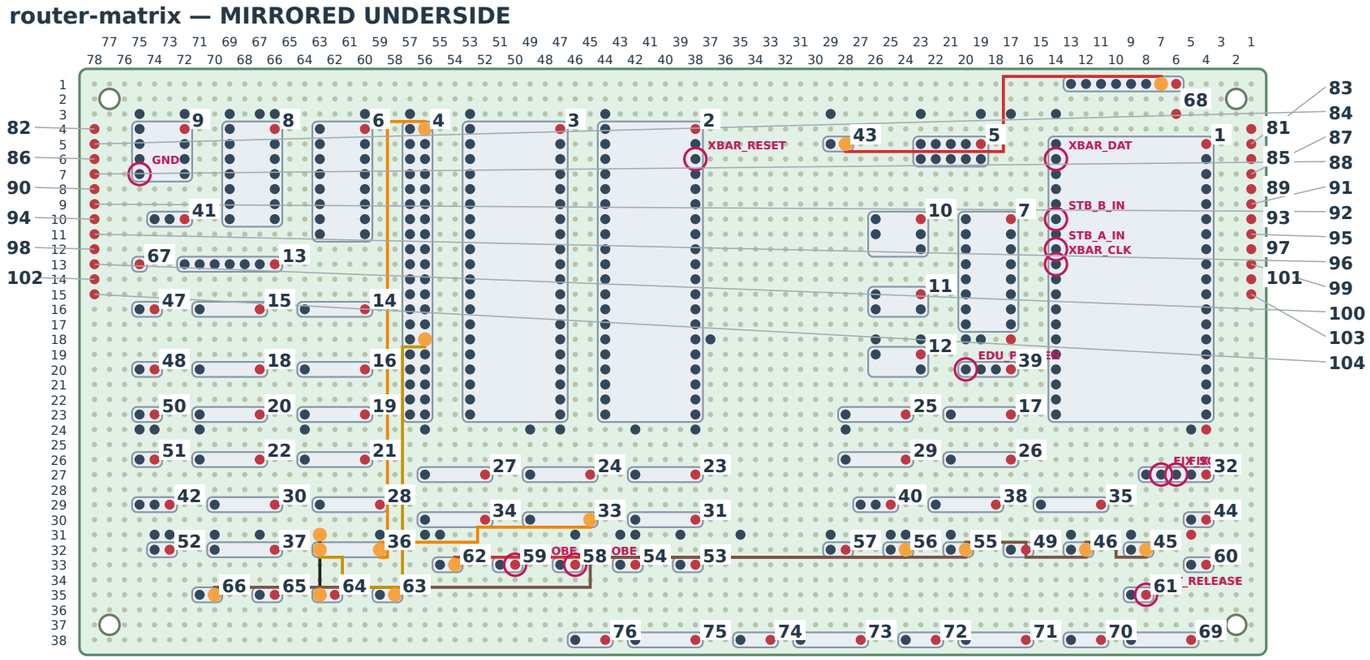

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W129 / GND	C_INTEGRATION_BACK.2 → BAR_GND_3.17	63,35 → 63,31
W216 / 5V_SYS	J_PROBE.2 → J_ROUTER_CORE_LIGHT.1	7,1 → 28,5
W217 / 5V_SYS	C_MATRIX_CONTROL_ADDR.1 → J_ROUTER_CORE_5V.1	54,33 → 24,32
W232 / 12V_SYS	C_MATRIX_SWITCHES_MT0.1 → J_ROUTER_CORE_12V.1	70,35 → 20,32
W233 / 12V_SYS	J_ROUTER_CORE_12V.1 → J_ROUTER_CORE_FAN2.1	20,32 → 12,32
W234 / 12V_SYS	J_ROUTER_CORE_FAN2.1 → J_ROUTER_CORE_FAN1.1	12,32 → 8,32
W248 / PI_3V3	J_INTEGRATION_PI.1 → R_INTEGRATION_ENERGIZE.1	56,4 → 59,32
W249 / PI_3V3	R_INTEGRATION_ENERGIZE.1 → R_INTEGRATION_BACK.1	59,32 → 45,30
W256 / ENERGIZE_N	C_INTEGRATION_ENERGIZE.1 → R_INTEGRATION_ENERGIZE.2	58,35 → 63,32
W257 / ENERGIZE_N	C_INTEGRATION_ENERGIZE.1 → J_INTEGRATION_PI.29	58,35 → 56,18


Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP32 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

Wire / net	From → to	TOP holes
W258 / ENERGIZE_N	J_INTEGRATION_PI.29 → J_INTEGRATION_SW_ENERGIZE.1	56,18 → 74,16
W259 / BACK_N	C_INTEGRATION_BACK.1 → R_INTEGRATION_BACK.2	62,35 → 49,30
W260 / BACK_N	R_INTEGRATION_BACK.2 → J_INTEGRATION_PI.31	49,30 → 56,19
W261 / BACK_N	J_INTEGRATION_PI.31 → J_INTEGRATION_SW_BACK.1	56,19 → 74,23

router-matrix — MIRRORED UNDERSIDE

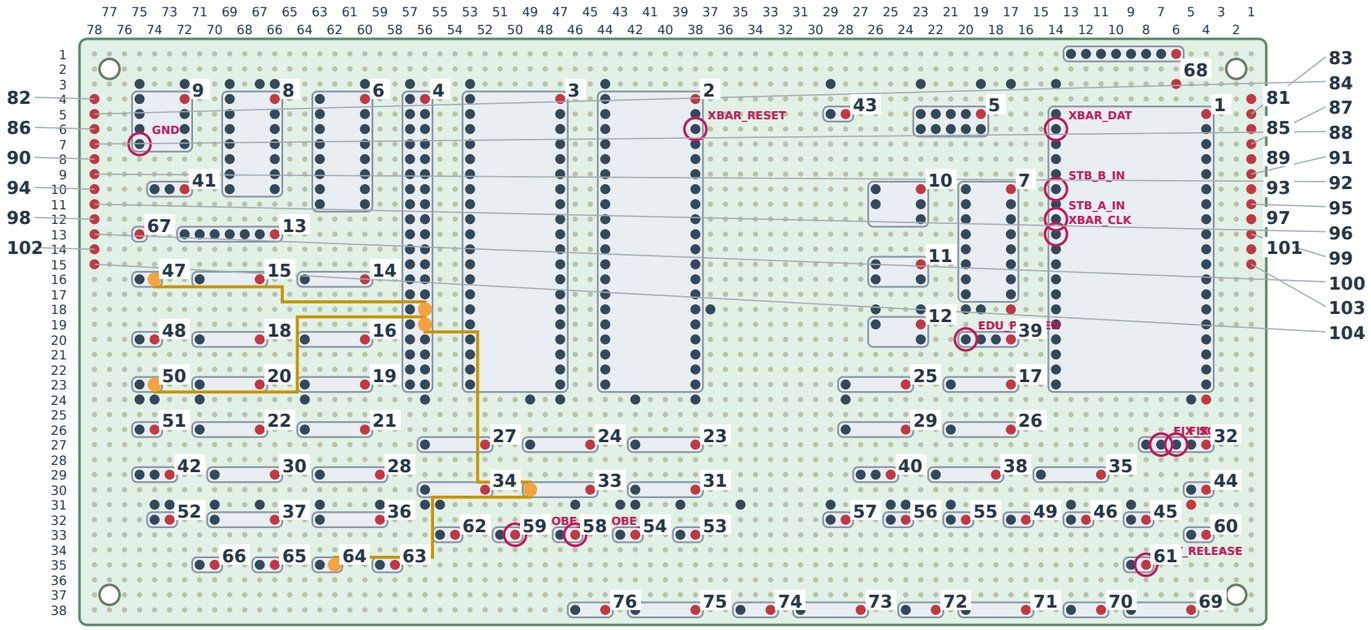

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red


TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.

CP34 — router-matrix

At most ten added wires per view. Inspect each net with power isolated.

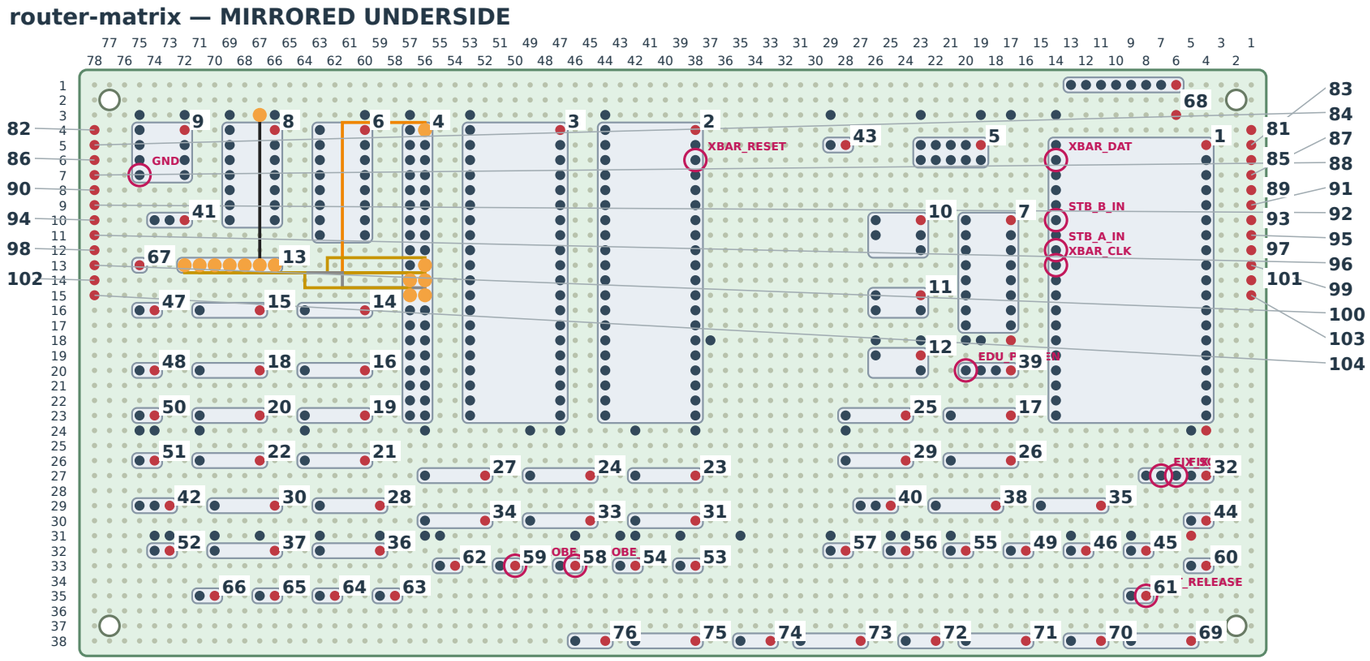

200×100 mm · 2.54 mm pitch · isolated pads · pin 1 red

TOP coordinates. Crossings are not joints. See numbered table.

PROTOTYPE: physical fit and hardware tests pending.

Wire / net	From → to	TOP holes
W107 / GND	J_INTEGRATION_RFID.2 → BAR_GND_2.12	67,13 → 67,3
W250 / PI_3V3	J_INTEGRATION_PI.1 → J_INTEGRATION_RFID.1	56,4 → 66,13
W251 / MOSI	J_INTEGRATION_PI.19 → J_INTEGRATION_RFID.4	56,13 → 69,13
W252 / MISO	J_INTEGRATION_PI.21 → J_INTEGRATION_RFID.5	56,14 → 70,13
W253 / RFID_RESET	J_INTEGRATION_PI.22 → J_INTEGRATION_RFID.7	57,14 → 72,13
W254 / SCLK	J_INTEGRATION_PI.23 → J_INTEGRATION_RFID.3	56,15 → 68,13
W255 / CE0_N	J_INTEGRATION_PI.24 → J_INTEGRATION_RFID.6	57,15 → 71,13

Bare node-column straps only; all other wires insulated underneath. A bend is not a joint. Consult the endpoint CSV; do not infer a connection from a crossing.