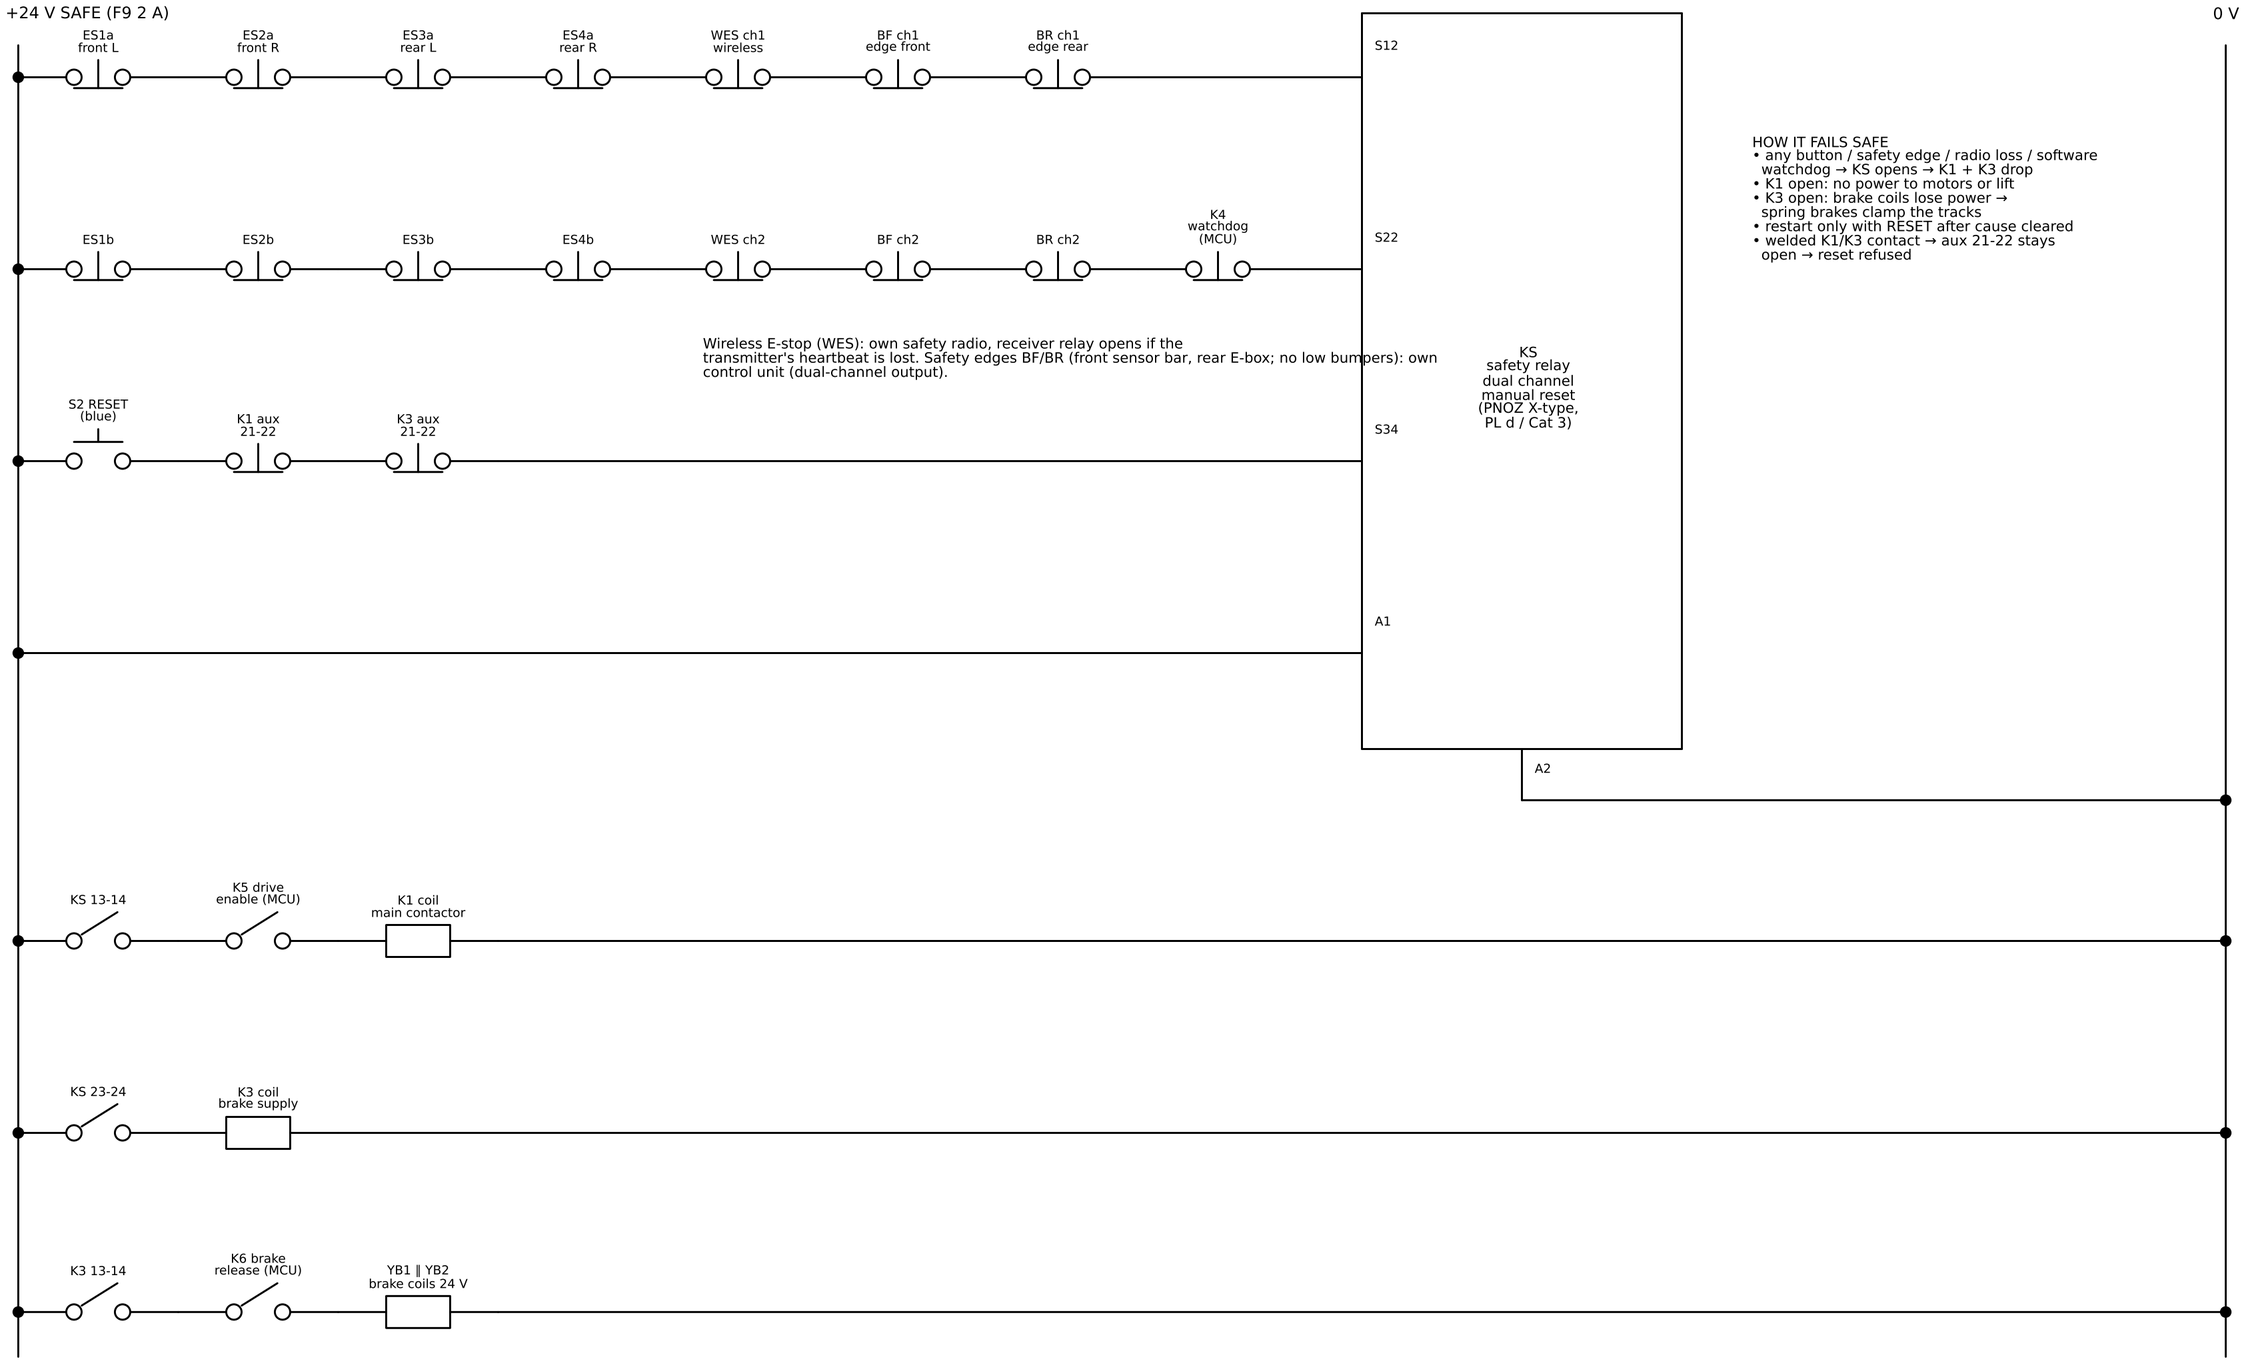

Shown generic. On PNOZ X-type relays the chains run S11→S12, S21→S22, S33→S34 (relay-supplied test voltage) instead of from +24 V. E-stops: 2 NC contact blocks each (a/b). Final design to be checked against ISO 13849 by a qualified person.

BINBOT — autonomous olive bin carrier

SAFETY CIRCUIT — E-STOP, CONTACTOR, BRAKES

DWG E-02 REV A BP-04 electronics

PRELIMINARY — check against vendor datasheets 2026-10-28