

Assembling Printer Adapters (Various Types) (Male + Female)

❗ Look for number labels on pin holes that wires are going into. They are very small, but they are there.

DB-9F (Female) to DB-9M (Male)

1. **Orange** on DB-9F Pin 1 (DCD) to DB-9M Pin 1 (DCD)
2. **Green** on DB-9F Pin 2 (RXD) to DB-9M Pin 3 (TXD)
3. **Yellow** on DB-9F Pin 3 (TXD) to DB-9M Pin 2 (RXD)
4. **Blue** on DB-9F Pin 4 (DTR) to DB-9M Pin 6 (DSR)
5. **White** on DB-9F Pin 5 (GND) to DB-9M Pin 5 (GND)
6. **Red** on DB-9F Pin 6 (DSR) to DB-9M Pin 4 (DTR)
7. **Brown** on DB-9F Pin 7 (RTS) to DB-9M Pin 8 (CTS)
8. **Black** on DB-9F Pin 8 (CTS) to DB-9M Pin 7 (RTS)
9. **Purple** on DB-9F Pin 9 (RI) to DB-9M Pin 9 (RI)

Left side - Female

Right side - Male


DB25 Male to RJ45

Adapter Pin-outs

DB25 male to RJ-45

No cutting or
soldering

Black=2
Red=3
White=4
Brown=5
Blue=6
Orange=7
Green=20
Yellow=cut off and discard

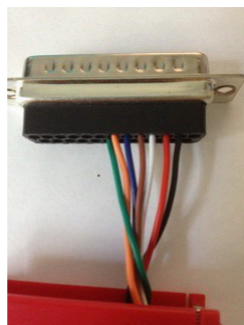

DB9 Female to RJ45

DB9 female to RJ-45

1=Yellow
2=Black
3=Red
4=Blue
5=Orange
6=Green
7=Brown
8=White

Adapters can only be used together in matched pairs.

