



ElementOne

User's Guide

Version 1.31.2

July 2026

Contents

Chapter 1. Copyright.....	5
Chapter 2. Introduction.....	6
Chapter 3. ElementOne Vshell.....	7
dlog.....	7
elementone.....	8
env.....	15
iface.....	18
logout.....	21
ping.....	21
poweroff.....	21
pwd.....	22
reboot.....	22
resolv.....	22
Chapter 4. ElementOne Functions.....	24
Log In to ElementOne.....	24
Log Out of ElementOne.....	25
Dashboard.....	25
Assets Statistics.....	26
Device List.....	28
Global Group Controls.....	30
Group Management.....	42
Device Management.....	46
Logs.....	77
Import Logs.....	77
Portable Inspector Scans.....	79
Portable Inspector Events Page.....	89
Safe Port Scans.....	91

Audit Logs Page.....	110
Filters and Sorting.....	113
Assets.....	115
Vulnerability Detection Service.....	116
View and Analyze Assets.....	117
Export Equipment Security Inspection Report.....	133
Rename Asset.....	137
Remove Asset.....	138
User Account Management.....	139
ElementOne User Account Role.....	140
Add User Account.....	141
Edit User Account.....	142
Change Password.....	143
Reset Password.....	144
Delete User Account.....	145
Administration.....	147
API Management.....	147
Corporate Identity.....	149
License.....	151
Log Purge.....	160
Proxy.....	162
SenninOne Integration.....	164
Single Sign-On.....	166
SSL Certificate.....	166
Syslog Forwarding.....	169
Updates.....	224
Secure Distribute.....	233
Secure Distribute: Functions and Operations.....	235
Chapter 5. About ElementOne.....	241

Chapter 6. Appendix.....	242
Chapter 7. Contact Us.....	245

Chapter 1. Copyright

TXOne Networks Incorporated reserves the right to make changes to this document and to the product described herein without notice. Before installing and using the product, review the readme files, release notes, and/or the latest version of the applicable documentation, which are available at <https://help.txone.com/> and <https://my.txone.com/>.

TXOne Networks, TXOne Portable Inspector, TXOne Virtual Portable Inspector, TXOne ElementOne, and TXOne Safe Port are registered trademarks of TXOne Networks Incorporated. All other product names may be trademarks or registered trademarks of their owners.

Copyright ©2026 TXOne Networks Incorporated. All rights reserved. No part of this publication may be reproduced, photocopied, stored in a retrieval system, or transmitted without the express prior written consent of TXOne Networks Incorporated.

Chapter 2. Introduction

This user's guide provides instructions on how to use ElementOne.

Chapter 3. ElementOne Vshell

VShell is the CLI (Command Line Interface) of ElementOne. You can use it to monitor the status of, troubleshoot, and configure the settings of ElementOne.

dlog

Collects OS information and service debug logs.

Send File via scp

dlog scp

1. Enter the following command:

```
$ dlog scp -u admin -a 10.8.146.118 -f c:\Logs -p 22
```

2. VShell will take some time to collect the files and transmit them to the target host.

```
$ dlog scp -u admin -a 10.8.146.118 -f C:\Logs -p 22
Target machine's password:
Collecting files ...
Copying file to admin@10.8.146.118:22:C:\Logs ...
a6ee9c11-eb16-4792-81f7-497c3f05f29c_20231023030833.008.dlog sent!
```

Table 1. Arguments

Short Argument	Long Argument	Description
-u	--user	User account on the remote SSH server
-a	--address	IPv4 address or FQDN of the remote SSH server
-f	--folder	The folder pathname on the remote host designated for log storage
-p	--port	The remote SSH server's port (default port is 22)

elementone

ElementOne Service.


Commands

• Show the Communication Port for Scanning Tools

1. Enter the following command:

```
$ elementone deviceport show
```

2. The device port number will be displayed.



```
$ elementone deviceport show
Device port: 3030
```

• Update the Communication Port for Scanning Tools

1. Enter the following command:

```
$ elementone deviceport update -p 3000
```

2. Vshell will prompt you to restart ElementOne. The changes will take effect after restarting.

The following arguments can be used to set the port number.

Short Argument	Long Argument	Description
-p	--port	Port number



Note:

Updating the communication port on Safe Port is currently unavailable.
To use ElementOne with Safe Port, please keep 3030 as the device port.

• Restart the ElementOne service

1. Enter the following command:

```
$ elementone service restart
```

- The following text indicates the ElementOne service restart was successful.

```
[36110.720010] device veth2a14cf2 entered promiscuous mode
[36111.003170] eth0: renamed from vethe0080d4
[36111.021610] IPv6: ADDRCONF(NETDEV_CHANGE): veth2a14cf2: link becomes ready
[36111.021958] br-592a2baf269b: port 9(veth2a14cf2) entered blocking state
[36111.022237] br-592a2baf269b: port 9(veth2a14cf2) entered forwarding state
Active: active (running) since Sun 2023-09-03 20:20:23 UTC; 6ms ago
```

dlog	Collect OS information and service debug logs.
elementone	ElementOne Service.
env	Manage system environment variables.
iface	Manage the network interfaces.
logout	Log out of Vshell.
ping	Test the reachability of a host.
poweroff	Shut down the machine immediately.
pwd	Reset the Linux root password.
reboot	Restart the machine immediately.
resolv	Manage the DNS settings.
help	List all commands.

• Start the ElementOne Service

- Enter the following command:

```
$ elementone service start
```

- The following text indicates the ElementOne service startup was successful.

```
[36355.623791] device vethf6c4437 entered promiscuous mode
[36355.821559] eth0: renamed from vethda1399c
[36355.840639] IPv6: ADDRCONF(NETDEV_CHANGE): vethf6c4437: link becomes ready
[36355.840976] br-b285f3642f3a: port 9(vethf6c4437) entered blocking state
[36355.841229] br-b285f3642f3a: port 9(vethf6c4437) entered forwarding state
Active: active (running) since Sun 2023-09-03 20:24:28 UTC; 6ms ago
```

dlog	Collect OS information and service debug logs.
elementone	ElementOne Service.
env	Manage system environment variables.
iface	Manage the network interfaces.
logout	Log out of Vshell.
ping	Test the reachability of a host.
poweroff	Shut down the machine immediately.
pwd	Reset the Linux root password.
reboot	Restart the machine immediately.
resolv	Manage the DNS settings.
help	List all commands.

• Show the ElementOne Status

- Enter the following command:

```
$ elementone service status
```

- Vshell will display the ElementOne service status.

• Stop the ElementOne Service

1. Enter the following command:

```
$ elementone service stop
```

2. The following text indicates the ElementOne service shutdown was successful.

```
[36177.986622] vethe84a8b6: renamed from eth0
[36178.032212] br-592a2baf269b: port 2(veth10bd1bf) entered disabled state
[36178.033691] device veth10bd1bf left promiscuous mode
[36178.034108] br-592a2baf269b: port 2(veth10bd1bf) entered disabled state
active: inactive (dead) since Sun 2023-09-03 20:21:29 UTC; 8ms ago
```

dlog	Collect OS information and service debug logs.
elementone	ElementOne Service.
env	Manage system environment variables.
iface	Manage the network interfaces.
logout	Log out of Vshell.
ping	Test the reachability of a host.
poweroff	Shut down the machine immediately.
pwd	Reset the Linux root password.
reboot	Restart the machine immediately.
resolv	Manage the DNS settings.
help	List all commands.

• Display Data Disk

Enter the following command:

```
$ elementone datadisk ls
```

• Extend Data Disk

Extend the capacity of the ElementOne data disk.

1. Enter the following command:

```
elementone datadisk extend
```

2. Proceed to complete the procedure.

```
Device name: /dev/sdb
data disk status: mount
Disk capacity: 30.0 GB
Allocated space: 20.0 GB
Unallocated free space: 10.0 GB
The data disk "/dev/sdb" will be extended by 10.0 GB, increasing its capacity to 30.0 GB.
```

```
Proceed (yes/no)?
```

• Display Element Connect Local Disk

Enter the following command:

```
$ elementone elementconnect local ls
```

• Set Up Element Connect Local Disk

1. Enter the following command:

```
$ elementone elementconnect local setup
```

2. Select a disk and proceed.

```
$ elementone elementconnect local setup

Select a disk from the list below to designate it as the Element Connect disk:

1.  /dev/sdc - 200.0 GB (available)
[-] /dev/sda - 100.0 GB (system disk)
[-] /dev/sdb - 20.0 GB (data disk)

Enter the number corresponding to your choice: 1

The disk "/dev/sdc" will be formatted and assigned to Element Connect disk. Proceed (y/n)? y

Device name: /dev/sdc
Element Connect disk status: mount
Disk capacity: 200.0 GB
Allocated space: 200.0 GB
Unallocated free space: 0.0 GB
```

• Extend Element Connect Local Disk

Enter the following command:

```
$ elementone elementconnect local extend
```

- **Reset the Password of the Default Web Master Admin's Account**

1. Enter the following command:

```
$ elementone web reset
```

2. The default password will be displayed. After typing it, you can reset the password.

```
$ elementone web reset
Password: 0xzDUJEbKS
```

- **Set Up the Password of Scanning Tools for Registration Use**

1. Enter the following command:

```
$ elementone web stpwd -p [password]
```

2. The registration password of Scanning Tools will be updated.

```
$ elementone web stpwd -p e12f55431907b79d822d672ba5c895986b194bd63711601ebb6735f40ff286b7
The password setup was successful!
```

Register Portable Inspector Device

Use the address, port and password below to register your devices to ElementOne via the devices' console (Scanning Tool).

ElementOne IP/Domain	192.168.3.188
Port	3030
Password	e12f55431907b79d822d672ba5c895986 b194bd63711601ebb6735f40ff286b7




OK

The following arguments can be used to set the password.

Short Argument	Long Argument	Description
-p	--password	The registration password is always consisted of 64 characters, case sensitive, and accepting only letters between A to F and numbers.

• Show Asset Identification Rule

ElementOne supports two asset identification rules used to determine how scanned assets are grouped.

Enter the following command:

```
$ elementone asset identification show
```

ElementOne will display the current identification rule:

- BASIC: BIOS UUID + Motherboard Serial Number + Hostname
- PLUS: BIOS UUID + Motherboard Serial Number + Hostname + MAC Address set

• Update Asset Identification Rule

The command `$ elementone asset identification update` allows you to change the asset identification rule.

1. Check the current rule:

```
$ elementone asset identification show
```

2. Stop the ElementOne service:

```
$ elementone service stop
```



Note:

You **must stop the ElementOne service** before updating the rule.

3. Update the rule:

```
$ elementone asset identification update
```

4. Restart the ElementOne service:

```
$ elementone service start
```



Note:

ElementOne cannot start the service until the update task is completed.



Note:

- After the rule is changed, both **Syslog** and **SageOne** forwarders will resend all asset-related data.
- Use this command carefully in production environments, as changing the identification rule can significantly impact asset grouping behavior.

Impact of Changing the Asset Identification Rule:

Changing the rule affects how assets are grouped and may impact existing data:

- Changing Rule BASIC to Rule PLUS:
 - Asset snapshots with the same host ID and hostname but different MAC addresses will be classified as separate assets.
 - Because alias names and related settings are shared, this may result in duplicate asset entries from a user perspective.
- Changing Rule PLUS to Rule BASIC:
 - All alias names and related settings will be flushed.

Verify That the Rule Change Takes Effect

After updating the asset identification rule using vShell, verify that the new rule is applied correctly.

Follow these steps:

1. Connect a Portable Inspector device to ElementOne and synchronize it through the Portable Inspector console.
2. On the Portable Inspector console, run a scan.

During the scan, asset information collection is performed automatically.

3. Go to the **Assets** page in ElementOne and check whether the asset list in the left pane reflects changes based on the new identification rule.

If the asset grouping changes as expected, the new identification rule has been successfully applied.

env

Manage the settings of the system's environment.

Commands

- **List the OS and Service Environment Variables**

1. Enter the following command:

```
$ env ls
```

2. Vshell will display the system information of ElementOne.

- **Rename the Hostname**

1. Enter the following command:

```
$ env hostname --hostname <value>
```



Note:

The naming must follow RFC 1123.

2. Vshell will display the host with its new name.

- **Show the Service Network Configurations**

1. Enter the following command:

```
$ env service-network ls
```

2. Vshell will display the service network settings information.

- **Update the Service Network Base Address**

1. Enter the following command:

```
$ env service-network update -n 169.254.10.196
```

**Note:**

When entering the command, the following are parameters for the network argument.

Short Argument	Long Argument	Description
-n	--network	Base network address, IPv4 IP

2. After entering the command, restart to apply the changes.

- **Disable NTP and Setup Time Manually**

1. Enter the following command:

```
$ env time manual -y 2023 -m 8 -d 31 -H 15 -M 54
```

**Note:**

When entering the command, use the following arguments to set up the time.

Short Argument	Long Argument	Description
-y	--year	Year, range > 0
-m	--month	Month, range 1-12
-d	--day	Day, range 1-31
-H	--hour	Hour, range 0-23
-M	--minute	Minute, range 0-59

2. The time has been successfully modified.

- **Disable and Stop NTP**

1. Enter the following command:

```
$ env time ntp disable
```

2. The time, timezone, and NTP in a disabled state.

• Enable and Start NTP

Enables and starts the NTP service and optionally allows for changing the NTP server.

1. Enter the following command:

```
$ env time ntp enable -s "<value>"
```

**Note:**

When entering the command, the following are parameters for the server argument.

Short Argument	Long Argument	Description
-s	--server	NTP server name, FQDN, or IPv4 IP address.

2. The time, timezone, and the enabled NTP.

**Note:**

Update the network's Access Control List (ACL) to include the NTP (UDP port 123).

• Set Up Timezone

1. Enter the following command:

```
$ env timezone Asia/Taipei
```

**Note:**

You can use the Tab key to select the continent/city corresponding to the prefix entered.

**Note:**

The following are parameters for the network argument.

	Argument	Description
	<continent/city>	Based on Greenwich Mean Time Zone, GMT

2. The time zone has been changed.

iface

Manage the network interfaces.

Commands

- **Deactivate the Specified Interface Setting Under /etc/network/interfaces.d/**

1. Enter the following command:

```
$ iface down -i eth0
```



Note:

Arguments:

Short Argument	Long Argument	Description
-i	--interface	Network interface name

2. VShell will disable the specified interface setting and list the relevant information.

- **List All the Interface Settings**

1. Enter the following command:

```
$ iface ls
```

2. VShell will list the interface settings.

- **Restart the Specified Interface Setting Under /etc/network/interfaces.d**

1. Enter the following command:

```
$ iface restart -i eth0
```

**Note:****Arguments:**

Short Argument	Long Argument	Description
-i	--interface	Network interface name

2. VShell will restart the specified interface setting.

- **Activate the Specified Interface Setting Under /etc/network/interfaces.d/**

1. Enter the following command:

```
$ iface up -i eth0
```

**Note:****Arguments:**

Short Argument	Long Argument	Description
-i	--interface	Network interface name

2. VShell will activate the specified interface setting.

- **Update the Specified Interface Setting Under /etc/network/interfaces.d/**

- Updating settings on local console:

1. Deactivate the interface.

```
$ iface down -i eth0
```

**Note:****Arguments:**

Short Argument	Long Argument	Description
-i	--interface	Network interface name

	Short Argument	Long Argument	Description
	-t	--type	IP configuration type
	-a	--address	IPv4 address
	-n	--netmask	IPv4 netmask
	-g	--gateway	IPv4 gateway

2. Update the interface setting.

```
$ iface update -i eth0 -t static -a 10.8.146.194 -n 255.255.255.0 -g
10.8.146.254
```

3. VShell will update the specified interface setting.
4. Reactivate the interface.

```
$ iface up -i eth0
```

- Updating settings through remote ssh console:

1. Update the interface setting.

```
$ iface update -i eth0 -t static -a 10.8.146.194 -n 255.255.255.0 -g
10.8.146.254
```

2. Execute the following command twice.

```
$ iface restart -i eth0
```

3. The current connection would be disconnected, and a new SSH connection to ElementOne must be re-established with new IP address.



Note:

A connection must already be established before starting the procedure.

logout

- **Log out of Vshell**

1. Enter the following command:

```
$ logout
```

2. VShell will ask for confirmation.
3. Logout is successful.

ping

- **Test the Reachability of a Host**

1. Enter the following command:

```
$ ping -t 142.251.43.14
```

**Note:**

Arguments:

Short Argument	Long Argument	Description
-t	--target	FQDN or IPv4 IP address

2. VShell will display the relevant information.

poweroff

- **Shut Down the Machine Immediately**

1. Enter the following command:

```
$ poweroff
```

2. VShell will ask for confirmation.

pwd

- **Reset the Linux Root Password**

1. Enter the following command:

```
$ pwd
```

2. VShell will prompt you to enter your current and new passwords. After confirmation, the password will be successfully changed.

reboot

- **Restart the Machine Immediately**

1. Enter the following command:

```
$ reboot
```

2. VShell will ask for confirmation.

resolv

Manage the DNS settings.

Commands

- **List all DNS Servers**

1. Enter the following command:

```
$ resolv ls
```

2. VShell will list all DNS settings.

- **Update the Custom DNS Servers**

1. Enter the following command:

```
$ resolv update -d 8.8.8.8 -d 1.1.1.1
```



Note:

Arguments:

	Short Argument	Long Argument	Description
	-d	--dns	DNS server, IPv4 IP address

2. Enter the DNS information to update it, and it will take effect after restarting ElementOne.

**Note:**

Update the network's Access Control List (ACL) to include the DNS (TCP and UDP port 53).

Chapter 4. ElementOne Functions

Log In to ElementOne


ElementOne will block an IP address for 5 (five) minutes after 5 (five) failed log-in attempts within a 5 (five) minutes period.

During this time, any activity from the blocked IP address will be rejected by ElementOne. After a successful log-in, the attempt count will be reset.

The system does not allow multiple logins from different IP addresses with one account. The system will automatically log out the first login session when the second login is accepted.

After login, there is a 15-minute timeout period. Any activity on ElementOne during this time will renew the timeout period. ElementOne will log you out automatically once the timeout period is reached.

1. Go to **[https://\[ElementOne_IP\]](https://[ElementOne_IP])** to visit the login page and input the user account.

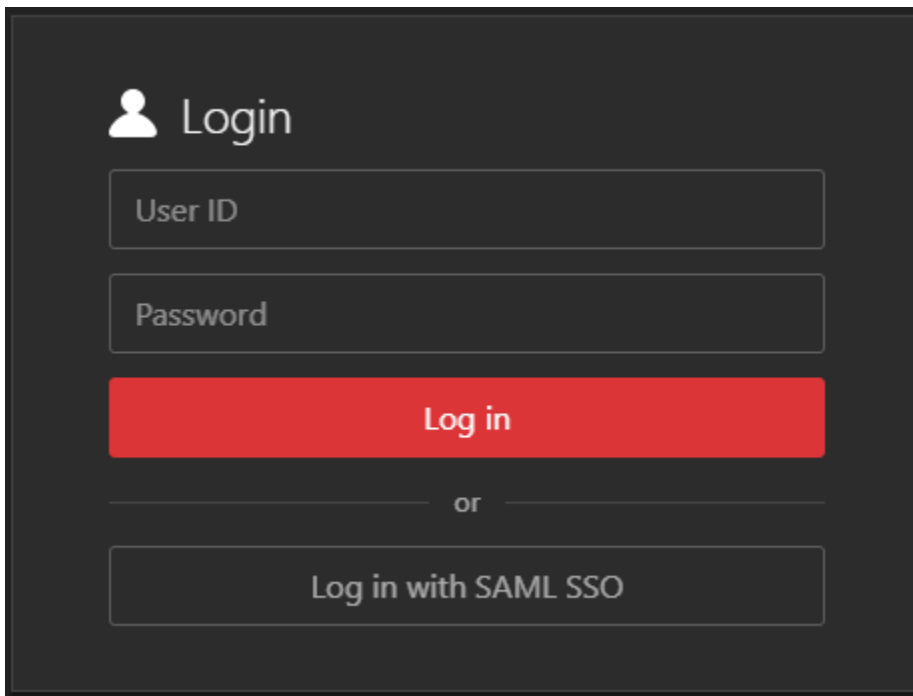The image shows a dark-themed login interface. At the top left is a white user icon followed by the word "Login". Below this are two input fields: "User ID" and "Password". A prominent red button labeled "Log in" is positioned below the password field. Underneath the button is the word "or" flanked by horizontal lines. At the bottom is a button labeled "Log in with SAML SSO".

Login

User ID

Password

Log in

or

Log in with SAML SSO

2. Input the password.
3. Click "Log in", or click "Log in with SAML SSO" to proceed with single sign-on authentication step.
4. When the user account is logged in for the first time or the password has been reset, ElementOne will display Login Information Setup and will require a password change.

Input the new password.

**Note:**

The new password must be between 8 and 64 characters in length and cannot be identical to the current password.

5. Re-enter the new password for confirmation.
6. After "Confirm" is clicked, ElementOne will display a notification indicating that the password has been successfully changed. You can now log in with the new password.
7. Now you have successfully logged in to ElementOne.

Log Out of ElementOne

1. On ElementOne dashboard, click your user account located at the top right corner of the browser, and then click "Log Off".
2. Now you have successfully logged off.

Dashboard


This page allows users to browse assets, statistics, and vulnerabilities on ElementOne.

**Note:**


Only masteradmin and admins can browse this page.

When you log in with either a master admin or admin user account, the Dashboard page will be the default.

When browsing other pages, you can navigate to the "Administration" icon on the menu and click "Dashboard" to browse the Dashboard page.

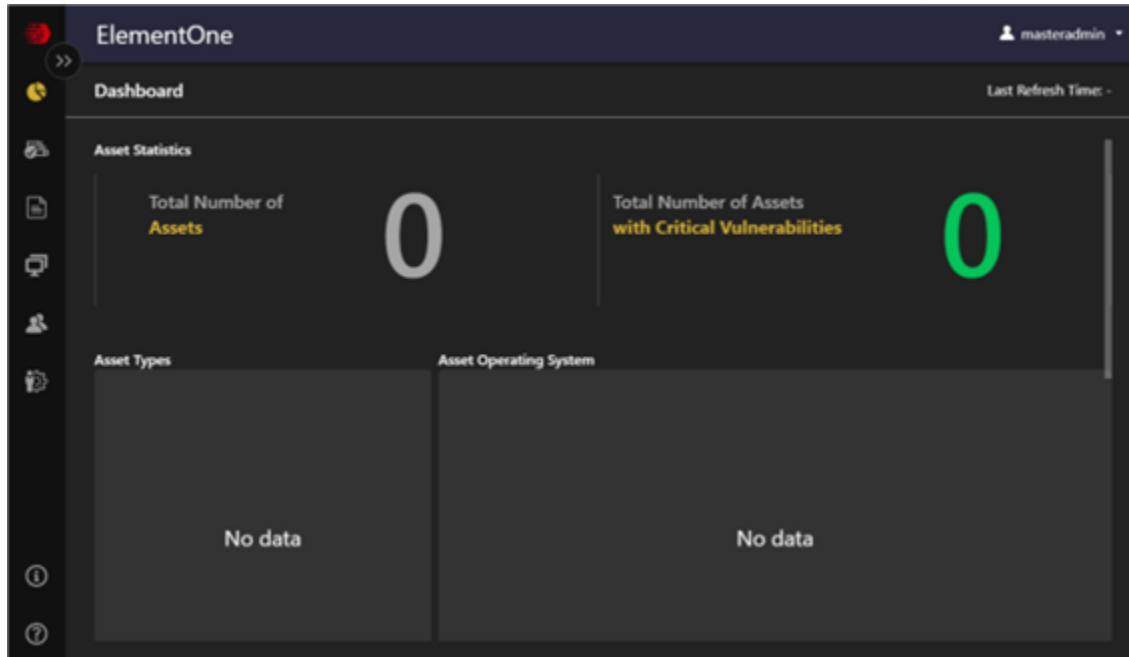

Assets Statistics

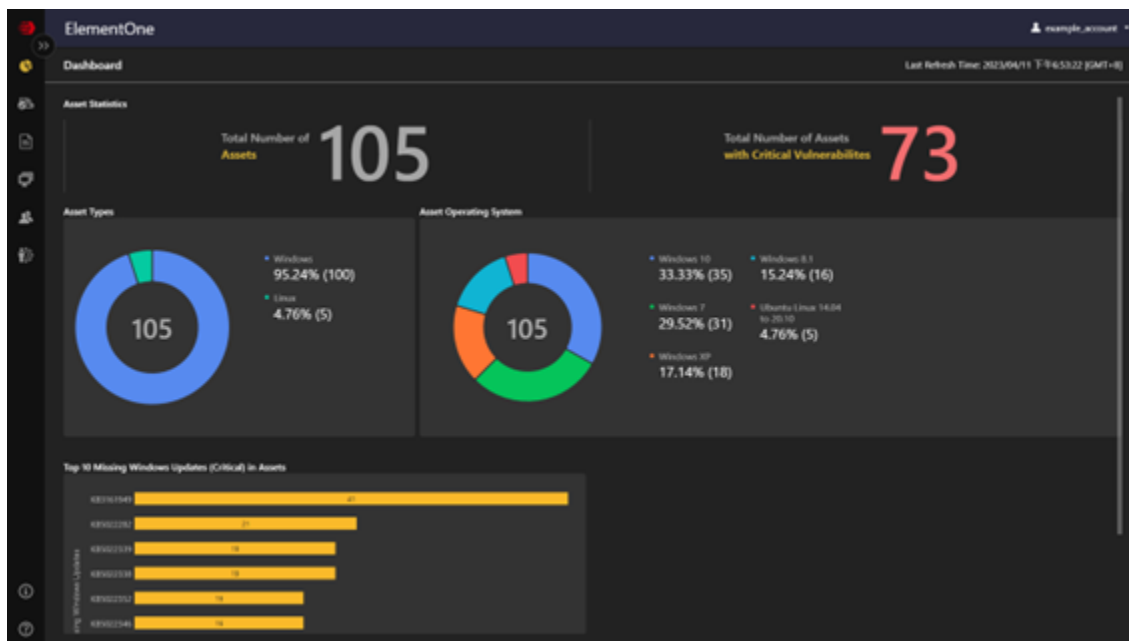

Total Number of Assets

Clicking on the number will open a new tab in the browser that goes directly to the Assets page.

Opening a new tab in the browser will send you directly to the Assets page.

Total Number of Critical Severity Vulnerabilities

Clicking on the number will open a new tab in the browser and send you directly to the Assets page with Vulnerability Severity Levels: Critical Filter.

Opening a new tab in the browser will send you directly to the assets page with Vulnerability Severity Levels: Critical Filter.

Asset Types

This widget displays the types of operating systems for all assets.

- Category
 - Windows
 - Linux
 - Others

Asset Operating System

This widget displays the top seven types of asset operating systems, with all others being aggregated under the “Others” type.

Operating systems that cannot be recognized will also be categorized under “Others”.

- Category
 - Windows 2000
 - Windows XP
 - Windows Vista
 - Windows 7
 - Windows 8
 - Windows 8.1
 - Windows 10
 - Windows 11
 - Windows Server 2003
 - Windows Server 2008
 - Windows Server 2012
 - Windows Server 2016
 - Windows Server 2019
 - Windows Server 2022
 - Windows Server 2003 R2

- Windows Server 2008 R2
- Windows Server 2012 R2
- Windows Server, version 1709
- Windows Server, version 1803
- Windows Server, version 1903
- Windows Server, version 1909
- Windows Server, version 2004
- Windows Server, version 20H2
- CentOS 6 or Red Hat Enterprise Linux 6
- CentOS 7 or Red Hat Enterprise Linux 7
- CentOS 8 or Red Hat Enterprise Linux 8
- Ubuntu Linux 14.04 to 20.10
- Others

Top 10 Missing Windows Updates (Critical) in Assets

This widget displays the top ten Windows Updates that can fix critical vulnerabilities after being installed on assets.

Clicking on the bar will open a new tab in the browser and send you directly to the Assets page with specific Windows Update filter.

Opening a new tab in the browser will send you directly to the Assets page with specific Windows Update filter.

Device List

The Device List page enables group-based management of Portable Inspector, Portable Inspector Pro, Virtual Portable Inspector (vPI), and Safe Port devices. It provides centralized visibility and control by organizing devices into groups and applying role-based access control.

Administrators and Group Supervisors can create, rename, and manage groups and devices; assign, move, remove, or ungroup Portable Inspector, Virtual Portable Inspector, and Safe Port devices; and configure both device-level and group-level policies.

Group Supervisors and Group Viewers can view devices assigned to their groups based on group-based access permissions. The Device List also enables group-based access to scan logs, allowing administrators, group supervisors, and group viewers to view and manage scan logs for devices within their assigned groups according to their role permissions.

Role-Based Access Control (RBAC)

The Device List page uses role-based access control to determine which devices, groups, and scan logs users can view or manage.

• Role Summary

◦ Admin

Has full visibility and management permissions across all groups, devices, policies, and scan logs.

◦ Group Supervisor

Can manage devices and groups within assigned groups, configure policies, and manage scan logs for assigned devices.

◦ Group Viewer

Has read-only access to devices and scan logs within assigned groups and cannot perform management or configuration actions.

Table 2. Device List and Scan Log Permissions

Feature / Action	Admin	Group Supervisor	Group Viewer
Access Device List page	✓	✓	✓
View devices in assigned groups	✓	✓	✓
View devices in sub-groups of assigned groups	✓	✓	✓
View scan logs of assigned devices	✓	✓	✓
Download detained files from assigned devices	✓	✓	✓
Create, move, rename, or remove groups and devices	✓	✓	✗

Table 2. Device List and Scan Log Permissions (continued)

Feature / Action	Admin	Group Supervisor	Group Viewer
Manage group-level and device-level policies	✓	✓	X
Delete scan logs of assigned devices	✓	✓	X
View devices or scan logs outside assigned groups	✓	X	X

In the **Device List** page, you can use the following controls to manage and update the displayed information:

- Click the **Refresh** button in the upper-right corner to update the device list with the latest group and device information.
- Under the **Device List** label, click the arrow next to the checkbox to access the following selection options:
 - **Select All**: Select all groups and devices.
 - **Deselect All**: Clear all current selections.
 - **Select All Groups**: Select all groups only.
 - **Select All Devices**: Select all devices only.

Global Group Controls

Click the **Global Group** label to access the following options:

- **Device/Group Policy**
- **Group Access Control**

Administrators can configure global group policies and group access control settings.

Device/Group Policy

The **Device/Group Policy** page allows administrators to configure default policy settings that apply to devices within the selected group.

Three device tabs are available:

- Portable Inspector
- Safe Port
- Virtual Portable Inspector

After configuring the policy settings, click **Save** to save and apply the changes to the selected device type.

Policy Inheritance

The **Policy Inheritance** toggle controls whether a group inherits policy settings from its parent group.

- When enabled, the group inherits the policy settings configured in its parent group.
- When disabled, the group can maintain its own custom policy settings.

When enabling **Policy Inheritance** for a group that already has custom policy settings, a confirmation message is displayed asking whether you want to replace the custom policy settings with the inherited policy settings from the parent group.

When validation errors occur while configuring policy settings, the total number of errors is displayed next to the corresponding tab label (**Portable Inspector** or **Safe Port**). This indicator helps you quickly identify which policy settings require attention.

For example, if you enter **0 hours** for **Pattern Outdate Alert**, which is not a valid value in the **Portable Inspector** policy settings, the number **1** appears next to the **Portable Inspector** tab label to indicate one configuration error.

Portable Inspector Policy Settings

The following sections describe the settings available under the **Portable Inspector** tab.

Basic Settings

- **Scan Type:** Use these settings to define which drives and folders are scanned.
 - **All local folders:** Scans all folders on the target endpoint.
 - **Default folders (Quick Scan):** Scans only folders that are most vulnerable to system threats, such as the Windows system folder.
 - **Specific folder:** Scans only the folders specified by the user. Use this option to limit scanning to selected directories.

Scan Option

Configure additional scan behavior:

- **Collect asset info during scanning:** Collects asset details from the endpoint during the scan, without requiring a separate collection.
- **Scan removable drives:** Scans removable storage connected to the endpoint.
- **Set to the lowest priority:** Runs the scan with the lowest system priority to reduce resource usage.



Note:

Enabling this option may increase scan time.

- **Enable suspend scan:** Displays a **Suspend** button during scanning, allowing users to pause and resume scans later.



Note:

Temporary files are stored and may affect scan time.

- **Enable exploit detection:** Detects files containing known exploit patterns related to CVEs (Common Vulnerabilities and Exposures).

Scan Action

Defines the action taken when a threat is detected:

- **Confirm:** Prompts the user to confirm the action.
- **Log only:** Logs the threat without taking action.
- **Take the recommended action:** Automatically applies TXOne's recommended response based on threat type.



Note:

Actions may include removal, quarantine, or skipping the file. Automatic responses may change after updates.

Advanced Settings

- **Exclude files, folders, or extensions:** Specify items to exclude from scanning.



Note:

Up to 100 files or folders can be excluded. Use commas to separate extensions.

- **Scan without saving temporary files on local asset**
- **Scan as Administrator:** Allows scans to run with administrator credentials for users without administrative privileges.



Note:

Use a backslash (\) or at sign (@) to separate the domain and user name.

- **Number of compressed layers to scan:** Defines how many compression layers are scanned. Layers beyond this number are skipped.

Rescue Disk

Defines scan behavior when using the Rescue Disk:

- **Scan and quarantine objects:** Automatically quarantines detected threats.
- **Scan and quarantine objects (confirm before quarantine):** Prompts the user before quarantine starts.
- **Scan only:** Scans without quarantining detected threats.

Others

- **Using proxy server:** Enable if a proxy is required to access the Internet:
 - Import Internet Explorer proxy settings
 - Manually enter proxy server settings
- **Restrict log deletion on Scanning Tool**
- **Device Name Controlled By:** Select **Portable Inspector** or **ElementOne** to control device naming.
- **Pattern Outdate Alert:** Displays an alert when launching the Scanning Tool if antivirus patterns are outdated beyond the configured time period.



Note:

Supported time units: **Hour(s)**, **Day(s)**, **Week(s)**.

**Note:**

The result of the pattern update check is recorded in scan logs. On the **Scan Result** page, the **Last Pattern Check** field shows the last time Portable Inspector successfully checked whether pattern updates were available. If the check is overdue or a potential system time issue is detected, the timestamp is highlighted in red with a warning message. For details, refer to the [Portable Inspector Scans \(on page 79\)](#) section.

- **Scan Restriction:** Suspends scanning when antivirus patterns are outdated beyond a configured time period.

**Note:**

Supported time units: **Hour(s)**, **Day(s)**, **Week(s)**.

- **Auto Start:** When enabled, Portable Inspector automatically starts scanning or asset information collection after launch. Select either **Start scanning automatically** or **Start collecting asset information automatically**, and set a countdown from 1 to 30 seconds before the action begins.

Storage Allocation

The **Secure Storage** console supports two storage modes:

- **User Data mode:** Allows users to manually transfer files and folders into Secure Storage. Files are scanned by Portable Inspector before being saved.
- **Distributed mode:** Displays files securely distributed from ElementOne through the **Secure Distribute** feature. Files are uploaded, scanned, and distributed through ElementOne, and synchronized to the Portable Inspector device when users perform a sync operation in the Secure Storage console.

**Note:**

Select **Distributed mode** to use the Secure Distribute feature. For details, refer to the [Secure Distribute \(on page 233\)](#) section.

Safe Port Policy Settings

The following sections describe the settings available under the **Safe Port** tab.

Auto Start Mode

It will automatically:

- Scan whenever a USB device is plugged in.
- Synchronize whenever a Portable Inspector device is plugged in.

Reset Disk

When the disk reset function is enabled and a removable media device is connected to Safe Port, the corresponding **Reset Disk** button will appear on the Safe Port home page. If the function is disabled, the button will be hidden.

Under the Reset Disk toggle on ElementOne Policy page, administrators can select one or more reset options for Safe Port to perform:

- **Format:** Format the media as a single partition.
- **Wipe:** Remove all partition information and reinitialize the disk using the GPT format.
- **Erase:** Erase all data on the media while keeping the existing partitions and format.

The reset options configured in ElementOne determine which actions Safe Port displays. For example, if only **Format** and **Wipe** are enabled, only the **Format Disk** and **Wipe Disk** buttons will be shown on Safe Port. The **Erase Disk** button will not appear.

If only one reset option is enabled, Safe Port will display that specific action button directly on the home page **instead of** the general Reset Disk button. For example, if only **Erase** is enabled, Safe Port will show the **Erase Disk** button on the home page.



Note:

- This feature can only be configured through ElementOne. Safe Port UI does not allow modification of the settings.
- Resetting a disk will permanently delete all data. Ensure that all important files are backed up before performing any reset action.
- For instructions on performing a disk reset on Safe Port, refer to the **Safe Port User's Guide**.

Secure File Transfer

The **Secure File Transfer** function provides a controlled and secure method to transfer files through Safe Port between the following source and destination pairs:

- From a general USB storage device to a Portable Inspector Pro (PI Pro) device
- From a general USB storage device to OneDrive
- From OneDrive to a general USB storage device
- From OneDrive to a PI Pro device

This integration ensures that files are scanned for malware and unscannable items before the transfer takes place, reducing the risk of infection or unauthorized file introduction from external or cloud-based sources.

When the Secure File Transfer function is enabled in ElementOne, and a removable media device or a PI Pro device is connected to Safe Port, the **Secure File Transfer** button will appear on the Safe Port home page. If the function is disabled, the button will not be displayed.



Note:

- This function cannot be configured in Safe Port, it can only be configured in ElementOne.
- For instructions on performing Secure File Transfer on Safe Port, refer to the **Safe Port User's Guide**.

Visitor Management

Visitor Management can be set to **Guest Mode**, **Employee Mode**, or **Anonymous Mode**.

- In **Guest mode**, user information is required before starting any scan. This user information is solely for recording purposes and not used for authentication.
- In **Employee mode**, users must hold their badge near the badge reader to access Safe Port.

**Note:**

- Employee Mode works only with badge readers that have been integrated and verified with Safe Port. To use this feature, customers must provide their badge reader and badge for integration and compatibility verification before use. **Badge readers that have not been integrated are not supported.**
- If a supported badge reader is not available, you can change the Visitor Management policy setting to **Anonymous Mode** or **Guest Mode** to allow access.

- In **Anonymous mode**, user information is not required for scans.

Scan Action

Safe Port supports four scan actions, i.e., **Log only**, **Clean Malware**, **Lock Suspicious Item**, and **Confirm Before Action**.

- **Log Only:** The infected files will be logged and displayed in the UI.
- **Clean Malware:** All the infected files will be cleaned or deleted.
- **Lock Suspicious Item:** All the risky files will be encrypted, including malware and unscannable files, to ensure no risky file could be executed in the environment. You can use the "Unlock Items" feature on Safe Port to restore the locked files.
- **Confirm Before Action:** When threats or unscannable items are detected, no action is taken immediately. The items are submitted to ElementOne, where the administrator reviews and selects actions such as **clean**, **ignore**, or **approve**. The selected actions are then applied on Safe Port.

Removable Media Validation

Removable Media Validation ensures that files on USB devices are scanned by Safe Port and remain unchanged before they can be executed on devices where **StellarProtect** or **Safe Port Agent** is installed. This feature is configured and enabled through ElementOne, while Safe Port performs the actual scanning process. It helps prevent tampered or unauthorized files from being used in Operational Technology (OT) environments.

**Note:**

Make sure to install **StellarProtect** or **Safe Port Agent** to execute Removable Media Validation. Refer to the **Safe Port Agent Administrator Guide**, available from the MyTXOne Portal, for instructions on installing the Safe Port Agent.

Two validation methods are available: **File-based validation** and **Time-based validation**.

- **File-based validation:**

StellarProtect and **Safe Port Agent** work with **Safe Port** to ensure files on USB devices are safe to access. After Safe Port scans the USB device and confirms that one of the three conditions "No Threats Found", "All Threats Fixed", and "All Items Fixed" is met, it generates two files: an encrypted scan record and a list of approved file hashes.

When the USB device is later connected to a device with StellarProtect or Safe Port Agent installed, StellarProtect and Safe Port Agent check the files against this list. Only files that match the list can be opened. This process helps prevent unauthorized or tampered files from being executed in enterprise environments, enhancing overall data security.

- **Time-based validation:**

StellarProtect and **Safe Port Agent** use scan results from **Safe Port** and checks whether file access falls within the time period configured through **ElementOne** to ensure USB files can be safely accessed.

After a USB device has been scanned and verified safe by Safe Port that one of the three conditions "No Threats Found", "All Threats Fixed", and "All Items Fixed" is met, the system creates a tag file on the drive containing a timestamp that defines the allowed access period. This period is configured by an ElementOne administrator through the ElementOne UI. When the USB is later connected to a computer running **StellarProtect** or **Safe Port Agent**, the system verifies whether the current time is still within the allowed window. If the period has expired, file access is denied.



Note:

After Safe Port scans a USB device, it creates a tag file containing a timestamp on the device. StellarProtect and Safe Port Agent trust this timestamp to allow file access. The valid access period is configured by ElementOne. However, if new malicious files are added to the USB after the scan, StellarProtect and Safe Port Agent won't check again during the valid period and may allow access to unsafe files. This creates a security gap because StellarProtect and Safe Port Agent only verify the original scan and tag file, not any changes made afterward.

Sample Collection

The **Sample Collection** feature allows Safe Port to upload detected samples to ElementOne for further forensic analysis. This function can only be configured in ElementOne, and offers three collection scope options:

- **All items (malware and unscannable items)**
- **Malware only**
- **Unscannable items only**

When Safe Port scans files on a connected USB device and detects malware or unscannable items, the selected samples are automatically uploaded to ElementOne. Administrators can then download these samples from ElementOne for investigation, validation, or forensic analysis.



Note:

- If the USB device is disconnected from Safe Port while scanning is in progress, the affected samples will **not** be uploaded to ElementOne.
- For instructions on how to download samples, refer to the [Sample Collection \(on page 107\)](#) section in this guide.

Scan Restriction

Scan Restriction determines whether Safe Port is allowed to perform scanning based on pattern update and connection conditions.

When enabled, Safe Port will suspend scanning under either of the following situations:

- The antivirus pattern becomes **outdated** for longer than the configured period.
- Safe Port is **disconnected from ElementOne** beyond the configured time period.

Both the restriction conditions (Pattern Outdated/Disconnection) and their corresponding time periods must be configured in ElementOne. The selected options and time values are then displayed on Safe Port's **Scan Restriction** toggle for reference.



Note:

- When Scan Restriction is enabled, Safe Port will display warning messages if users attempt to scan while the restriction conditions are met.
- If restriction conditions are met, scanning during the **Secure File Transfer** process will also be suspended.

Windows Auto Update

Controls whether Safe Port automatically downloads and installs available Windows updates.

- When **enabled**, Safe Port automatically downloads and installs available Windows updates.
- When **disabled**, administrators can manually trigger Windows updates from the Safe Port device list by clicking the **Download and Install** icon when updates are available.



Note:

Go to [Windows Update Status \(on page 68\)](#) and [Manual Windows Update \(on page 69\)](#) for details.



Note:

The default is enabled.

Connection Method

Specifies how Safe Port connects to external services.

- **Direct Connection:** Safe Port connects directly to external services without using a proxy.
- **ElementOne Proxy:** Safe Port connects to external services through the ElementOne proxy.

Allow List

A predefined list of items excluded from malware scans, including:

- Trusted items
- Items with specific attributes (e.g., password-protected or deeply compressed)
- Items under system restrictions

When Safe Port encounters a file that matches the allow list during scanning, it will be considered non-threatening. These files will not be disclosed in scan logs.

- **Add a Rule:**

1. Click the plus sign “+”.
2. Choose a condition from the list.
 - **Unscanned Cause:** Directory/File Permission forbids, Compression exceeded layer limit, or Password-protected.
 - **Specified Folder:** type in the relative path.
 - **File Name:** type in the complete filename.
 - **Extension:** type in the extension.
 - **File Hash:** type in the hash value of the file.
3. Click the green checkmark icon to submit the rule. Click the white “X” icon or the red trash can icon to cancel.
4. Click “Save”.

- **Delete a Rule:**

1. Hover over the entry to delete.
2. Click the trash can icon on the far-right side.
3. Click “Save”.

Virtual Portable Inspector Policy Settings

- **Scan Type:** Use these settings to define which drives and folders are scanned.
 - **All local folders:** Scans all folders on the target endpoint.
 - **Default folders (Quick Scan):** Scans only folders that are most vulnerable to system threats, such as the Windows system folder.
 - **Specific folder:** Scans only the folders specified by the user. Use this option to limit scanning to selected directories.



Note:

The vPI scan action cannot be configured. By default, the scan action is Log Only. vPI identifies security threats but does not clean, quarantine, or take action against them.

Group Access Control

In ElementOne, groups have two types of roles: **group supervisor** and **group viewer**.

- The group supervisor has full access and control over the group and its sub-groups, including the ability to add or remove devices, create sub-groups, and manage access control for the group and its sub-groups.
- The group viewer, on the other hand, has limited access and control, with read-only access to the group and its sub-groups. An **admin** user account is automatically added as a group supervisor for all groups by default.

Group member user accounts can be assigned either the role of group supervisor or group viewer within a specific group. However, if they are assigned the role of group supervisor, they cannot be designated as a group viewer in that group or any of its sub-groups.

The group roles determine the level of access and control that each user account has over the devices and sub-groups within the group. When browsing the Device List page with a group member user account, it will display the highest layer of groups that the user account has access to.

It is important to ensure that the appropriate roles are assigned to each user account for the purposes of maintaining proper access control and management of devices and groups within ElementOne.

For details, refer to [Role-Based Access Control \(RBAC\) \(on page 28\)](#).

Group Management

The **Groups** section provides group-based management for **Portable Inspector**, **Safe Port**, and **Virtual Portable Inspector** devices. It allows administrators and group supervisors to organize devices into hierarchical groups, apply group-level policies, and control user access. Group viewers can view only the groups and devices assigned to them.

You can switch between **Portable Inspector**, **Safe Port**, and **Virtual Portable Inspector** views by clicking the corresponding icons in the upper-right corner of the page. The group hierarchy displayed reflects the selected device type.

Groups are displayed in a hierarchical structure. The top-level group is **Global Group**, followed by groups and subgroups if they exist. The current group level is shown next to the **Device List** label. Click a group name to navigate to its subgroups.

You can search for groups by **group name** or filter groups by **Inherited Policy** or **Custom Policy**.

Add Group

This function allows users to create a new group under the current group.

**Note:**

- Only the **group supervisor** of the current group can add a group.
- Excluding the **Global Group**, the maximum group depth is **eight levels**.

**Note:**

Example: *Global Group > Layer 1 > Layer 2 > Layer 3 > Layer 4 > Layer 5 > Layer 6 > Layer 7 > Layer 8*

- The **Add Group** function is not available at **Layer 8**.

Steps:

1. Click **Add Group**.
2. Enter a **group name**.

**Note:**

- Case-sensitive
- 1–64 characters
- Commas are not allowed
- Must be unique within the current parent group

3. Select **Group Supervisors**.

**Note:**

- Users already assigned as supervisors in parent groups are marked **(Inherited)** and cannot be selected again.
- Users selected as group viewers are not displayed.
- You can enter a partial user name to filter results.
- Click **X** to remove a selected user.

4. Select **Group Viewers**.

**Note:**

Users selected as group supervisors are not displayed.

5. Select devices in the current group to move into the new group, if needed.
6. Click **Confirm**.

After the group is created, a confirmation message is displayed. Click the group name to navigate into the group and view its devices and subgroups. Each group card shows the number of devices assigned to that group.

Edit Group Policy

Click the **Inherited Policy** or **Custom Policy** label under a group name to edit the group's policy settings.

- **Inherited Policy** indicates that the group uses policies inherited from its parent.
- **Custom Policy** indicates that the group has its own policy configuration.

For detailed policy settings, refer to the [Device/Group Policy \(on page 30\)](#) section.

Manage Group Access

Click the **Group Access Control** icon on a group bar to configure access control for that group.

This setting controls which users can view or manage the group and its devices.

For details, refer to the [Group Access Control \(on page 41\)](#) section.

Rename Group

This function allows you to rename an existing group.

Steps:

1. Click the **Settings** icon on the group card.
2. Select **Rename**.
3. Enter a new group name.



Note:

- Case-sensitive
- 1–64 characters
- Commas are not allowed
- Must be unique within the same parent group

4. Click **Confirm**.

Move Group

This function allows you to move a group or subgroup to another location in the group hierarchy.



Note:

- The **Global Group** cannot be moved.
- The maximum group depth is **eight levels**.
- If moving a group would exceed eight levels, the operation will fail.

Move a single group:

• Method 1:

1. Click the **Settings** icon from the group card.
2. Select **Move**.
3. Select a destination group.
4. Click **Confirm**.

• Method 2:

1. Select the checkbox next to the groups you want to move.
2. Click the **Move** icon at the top of the page.
3. Select a destination group.
4. Click **Confirm**.

Bulk move groups:

You can move multiple groups at the same time.

1. Select the checkboxes next to the groups you want to move.
2. Click the **Move** icon at the top of the page.
3. Select a destination group.
4. Click **Confirm**.

Ungroup

Ungrouping removes a group and moves its **subgroups and devices** to the parent group.

Ungroup a single group:

- **Method 1:**

1. Click the **Settings** icon from the group card.
2. Select **Ungroup**.
3. Confirm the action in the confirmation message.

- **Method 2:**

1. Select the checkbox next to the group you want to ungroup.
2. Click the **Ungroup** icon at the top of the page.
3. Confirm the action.

Bulk ungroup:

You can ungroup multiple groups at the same time.

1. Select the checkboxes next to the groups you want to ungroup.
2. Click the **Ungroup** icon at the top of the page.
3. Confirm the action.

Device Management

The **Device** section allows you to manage **Portable Inspector**, **Safe Port**, and **Virtual Portable Inspector** devices from the **Device List** page. Click the **Portable Inspector**, **Safe Port**, or **Virtual Portable Inspector** icon in the upper-right corner of the **Device List** page to switch between device views. The number displayed next to each icon indicates the total number of registered **Portable Inspector**, **Safe Port**, or **Virtual Portable Inspector** devices.

In the **Portable Inspector** device management view, you can register, rename, move, and remove Portable Inspector devices. You can also configure device policy settings, lock the device policy for an individual Portable Inspector device, filter devices using available filter options, and customize the device table view by selecting the columns to display.

In the **Safe Port** device management view, you can register, rename, move, and remove Safe Port devices. You can also configure device policy settings, filter devices using available filter options, and customize the device table view by selecting the columns to display.

In the **Virtual Portable Inspector** device management view, you can add and move Virtual Portable Inspector devices. You can also configure device policy settings, manage vPI authentication passwords, and customize the device table view by selecting the columns to display. In addition, you can download vPI packages, monitor vPI seat usage, and view the status and scan progress of recent vPI deployments.

Portable Inspector Device Management

The **Portable Inspector** device management view allows you to manage all Portable Inspector devices registered in ElementOne. From this view, you can register, rename, move, and remove Portable Inspector devices. You can also configure device policy settings, lock device policies for individual devices, filter devices using available filter options, and customize the device list table by selecting which columns to display.

This view provides centralized visibility into device status, policy application, synchronization state, and version information to help administrators efficiently manage and monitor Portable Inspector deployments.

Portable Inspector List (Table View)

The **Portable Inspector List** displays devices in a table format. Each row represents a device, and each column provides key information about the device's identity, status, policy, and synchronization state.

A status icon appears before the device name. The icon color indicates the current status of the device.

• Column Definitions

- **Name:** Displays the **device name**. An icon appears before the name to indicate the device status:
 - **Red:** The device settings are not synchronized with ElementOne.
 - **Green:** The device settings are synchronized with ElementOne.
- **Device ID:** The unique identifier of the Portable Inspector device.



Note:

Example: 2203-3839-BE0107001CDB1B2000001

- **Device Policy:** Indicates which policy is applied to the item:
 1. **Inherited:** The device follows the global group policy.
 2. **Custom:** The device uses its own custom policy.
- **Lock Policies:** Indicates whether device policies are locked to prevent users from editing settings via the **Scanning Tool** console. Policy changes take effect after synchronization.
 - **Locked:** Policy editing is disabled on the device.
 - **Disabled:** Policy editing is allowed.
- **Last Sync Time:** The most recent time the device synchronized scan logs and policy settings with ElementOne.

**Note:**

Example:

`2023/11/17 09:34:09 AM GMT+8`

- **Firmware Version:** The current firmware version installed on the Portable Inspector device. This information helps with troubleshooting, upgrade verification, and compatibility checks with ElementOne.

**Note:**

Example: 1.0.2169

- **Anti-Virus Pattern:** The anti-virus pattern version currently installed on the device. The pattern contains malware definitions used to detect and block threats during scans. Keeping this version up to date ensures protection against newly discovered threats.

**Note:**

Example: 20.427.00

- **Last Update Time:** The last time the device successfully received a component update from ElementOne.

**Note:**

Example:

`2023/11/17 09:50:09 AM GMT+8`

Device Details

To view detailed information about a Safe Port device, click the device in the list.

Click the **X** button to close the details panel.

Customize Table View

You can customize the Portable Inspector device table to control which columns are displayed and their order.

Click **Customize Table** in the upper-right corner of the device section.

- **Select Columns**

- Select the checkboxes for the columns you want to display.
- Clear the checkboxes to hide columns.
- Click **Confirm** to save changes.
- Click **Back to default** to restore the default table layout.

- **Rearrange Columns**

- Click and hold a column row.
- Drag it to the desired position.
- Click **Confirm** to save changes.
- Click **Back to default** to restore the default order.



Note:

Default table layout: All columns will be displayed except for the **Firmware Version** and **Anti-Virus Pattern Version** columns.

Import Settings from Management Program

This function allows users to import settings exported from Management Program to ElementOne under the condition there are no devices currently registered or imported on ElementOne.



Note:


Only masteradmin and admins can perform this action.

1. When no Portable Inspector devices are registered with ElementOne, the **Import Device List and Settings** button is displayed. Click this button to start the import process.
2. Click "Browse".
3. Locate and select the exported zip file from the folder.
4. Click "Open".
5. Input the password of the exported zip file.

6. If you want to apply the standard settings from Management Program to the global group settings in ElementOne, keep the checkbox ticked. Otherwise, un-tick it.
7. Click "Confirm" to import device list and settings.
8. After "Confirm" is clicked, ElementOne will display a notification indicating that the device list and settings have been successfully imported.

**Note:**

The newly imported device will be displayed with a red device icon.

**Note:**

Imported devices cannot communicate with ElementOne until they are registered.

Register Portable Inspector Device to ElementOne

This function allows users to register **Portable Inspector** and **Portable Inspector Pro** devices to ElementOne. After registration is completed, the device is activated and can communicate with ElementOne for management, policy synchronization, and log upload.

**Note:**

- Only **Master Admins** and **Admins** can perform this action.
- Before registering a device, make sure the **Portable Inspector / Portable Inspector Pro license** has been activated in ElementOne.

Registration Steps:

1. Click **Add Portable Inspector** next to the **Device** label.
2. Click the **Copy** icon to copy the registration password to the clipboard.

**Note:**

Record the **ElementOne IP/Domain, Port, and Password**.

3. Click **OK** to close the window.
4. On the **Portable Inspector** console, enter the **ElementOne IP/Domain, Port, and Password** to complete registration.

**Note:**

For detailed instructions on registering a Portable Inspector device, refer to the **Portable Inspector User's Guide**.

**Note:**

- After registration, the device is placed in the **Global Group** by default. You can move the device to another group as needed.
- Devices can still be registered using the copied information even after the **Register Device** window is closed.
- The device registration password is **automatically renewed** whenever the ElementOne service restarts, including when:
 - The ElementOne virtual machine reboots.
 - The `elementone service restart` command is executed in **vShell**.

Rename Portable Inspector Device

To rename a Portable Inspector device using **ElementOne**, make sure **ElementOne** is selected as the device name controller on the **Policy** page.

- If **Portable Inspector** is selected to control the device name, renaming the device from ElementOne is not allowed.
- If you attempt to rename a device in ElementOne while **Portable Inspector** controls the device name, a notification will appear instructing you to change the setting on the **Policy** page.

**Note:**

- For instructions on configuring the device name source, refer to [Portable Inspector Policy Settings \(on page 31\)](#).
- Only the **group supervisor** of the group can perform this action.

Steps:

1. In the device row, click the **Settings** icon and select **Rename**.
2. Enter a new device name.

**Note:**

The device name is case-sensitive, must be **1–64 characters** long, and **cannot contain commas**.

3. Click **Confirm**.
4. A notification appears indicating that the device has been successfully renamed.

Move Portable Inspector Device

**Note:**

Only the **group supervisor** of the group can perform this action.

You can move a Portable Inspector device to another group using one of the following methods.

Move a single device:**• Method 1:**

1. In the device row, click the **Settings** icon and select **Move**.
2. Select the destination group.
3. Click **Confirm**.
4. A notification appears indicating that the device has been successfully moved.

• Method 2:

1. Select the checkbox next to the device you want to move.
2. Click the **Move** icon at the top of the **Device List** page.
3. Select the destination group.

4. Click **Confirm**.
5. A notification appears indicating that the device has been successfully moved.

Bulk move devices:

You can move multiple devices at the same time.

1. Select the checkboxes next to the devices you want to move.
2. Click the **Move** icon at the top of the **Device List** page.
3. Select the destination group.
4. Click **Confirm**.
5. A notification appears indicating that the selected devices have been successfully moved.

Remove Portable Inspector Device

This function allows users to remove a Portable Inspector device from ElementOne.

When a device is removed, it is deregistered from ElementOne. The device will no longer be able to communicate with ElementOne, but its historical logs are retained.



Note:

Only the **group supervisor** of the group can perform this action.

Remove a Single Device

• Method 1:

1. In the device row, click the **Settings** icon and select **Remove**.
2. Enter **REMOVE** to confirm the action.
3. Click **Confirm**.
4. A notification appears indicating that the device has been successfully removed.

• Method 2:

1. Select the checkbox next to the device you want to remove.
2. Click the **Remove** icon at the top of the **Device List** page.
3. Enter **REMOVE** to confirm the action.

4. Click **Confirm**.
5. A notification appears indicating that the device has been successfully removed.

Bulk Remove Devices

You can remove multiple devices at the same time.

1. Select the checkboxes next to the devices you want to remove.
2. Click the **Remove** icon at the top of the **Device List** page.
3. Enter **REMOVE** to confirm the action.
4. Click **Confirm**.
5. A notification appears indicating that the selected devices have been successfully removed.

Edit Portable Inspector Device Policy

This function allows users to view and modify device policy settings for a Portable Inspector device.



Note:

- Admins and group members can view the Group/Device Policy.
- Only the **group supervisor** of the current group can modify the Group/Device Policy.
- By default, a newly registered device uses the inherited group policy.

Update the Device Policy

1. In the device row, click **Inherited** or **Custom** to open the policy settings.
2. Configure the policy settings as needed.

For details, refer to [Portable Inspector Policy Settings \(on page 31\)](#).

3. Click **Save**.
4. After you click **Save**, ElementOne displays a notification indicating that the device policy has been successfully updated.

Lock Portable Inspector Device Policies

By default, when a **Portable Inspector** or **Portable Inspector Pro** is connected to an endpoint, device policies are **unlocked**, allowing users to modify scan settings through the **Scanning Tool** (Windows application).

Once the device is registered to a **Management Program** or **ElementOne**, lock policies can be applied to prevent local users from changing scan settings. When device policies are locked, scan settings can no longer be modified through the Windows application.

Policy lock settings take effect after the device synchronizes its policy with **ElementOne**.

**Note:**

Only the group supervisor of the group can lock or unlock device policies.

Lock Device Policies

1. In the device row, click the **Unlock** icon to switch the device to **Locked** status.

**Note:**

By default, a newly registered device is unlocked.

2. After the action is completed, ElementOne displays a notification indicating that the device policy has been successfully locked.

Unlock Device Policies

1. In the device row, click the **Lock** icon to switch the device to **Unlocked** status.
2. After the action is completed, ElementOne displays a notification indicating that the device policy has been successfully unlocked.

Safe Port Device Management

The **Safe Port** device management view allows you to manage all Safe Port devices registered in **ElementOne**. From this view, you can register, rename, move, and remove Safe Port devices. You can also configure **device policy settings**, filter devices using available filter options, refresh device information, and customize the device list table by selecting which columns to display.

This view provides centralized visibility into Safe Port device connectivity, policy synchronization status, firmware and component versions, and update allow administrators to efficiently manage and monitor Safe Port deployments.

Safe Port List (Table View)

Column Name	Definition	Example
Device Name	The device name. There is an icon in front of the name to indicate the connection status of the device. If a device is unreachable, ElementOne will continue to attempt to connect for a maximum of 5 minutes. After that period, ElementOne will mark the device as disconnected.	The device is connected:  Safe Port
		The device is disconnected:  Safe Port
Hostname	The host name of the device.	DESKTOP-PRM4DOV
MAC Address	The unique MAC address assigned to the Safe Port device.	11:22:33:44:55:66
IP Address	The IP address assigned to the Safe Port device.	192.168.1.2
Device ID	The ID of the device.	ES101-4C4C4544-0030-3110-804D
Device Policy	There is an icon in front of the device policy to indicate the sync status of the policy.	When the device is connected and synchronized with the latest policy on ElementOne.

Column Name	Definition	Example
		 Custom
		When the device is connected but not synchronized with the latest policy on ElementOne.  Custom
		When the device is disconnected.  Custom
	This indicates whether the item is following the group policy or has its own policy.	When following the group policy:  Inherited
		When it has its own policy:  Custom
Last Policy Sync Time	The date and time when the Safe Port device last synchronized its policy settings with ElementOne.	2025/07/24 03:55:39 PM GMT+8
Firmware Version	The firmware version of the device. When the version is incompatible with ElementOne, the firmware of the device must be upgraded to continue integration with ElementOne.	When the device firmware version is compatible with ElementOne: 1.0.1012
		When the device firmware version is incompatible with ElementOne:

Column Name	Definition	Example
		1.0.1004 (Incompatible)
Firmware Update Status	Firmware update progress and status.	Firmware update complete: 
		Firmware update fail: 
		Firmware update underway: 
		Firmware update initiated: 
		Device not selected: -
Last Firmware Update Time	The date and time when the Safe Port device last received a firmware update.	2025/07/24 03:55:39 PM GMT+8
Scan Engine Version	The version of the scan engine currently installed on the Safe Port device.	24.55.1002

Column Name	Definition	Example
Virus Pattern Version	The version of the virus pattern file installed on the Safe Port device.	20.357.00
Last Component Update Time	The date and time when the Safe Port device last updated its scan components, such as the scan engine and virus pattern file.	2025/07/24 03:55:39 PM GMT+8
Windows Update Status	The current Windows update status of the Safe Port device.  Note: Go to Windows Update Status (on page 68) and Manual Windows Update (on page 69) for details.	- Update Server Unavailable Update Check Failed Update Available Updating Up to Date Update Failed

Device Details

To view detailed information about a Safe Port device, click the device in the list.

The details panel displays information in the following tabs:

- The **Device Info** tab displays basic device information, network settings, Windows update information, firmware and component versions, and the time zone configured on the Safe Port device.

Field Name	Definition	Example
De-vice Name	The name assigned to the Safe Port device.	Taipei-Group-A-ST132
Host-name	The hostname of the Safe Port device.	DESKTOPP8H39NM
De-vice ID	The unique identifier of the Safe Port device.	ES101-00000000-0000-0000-0000-000000000000
MAC Ad-dress	The MAC address of the Safe Port device.	10:FA:10:60:14:00
IP Ad-dress	The IPv4 address assigned to the Safe Port device.	109.2.356.1
IP As-sign-ment	The method used to assign the IP address.	Automatic (DHCP)
Sub-net Mask	The subnet mask configured on the Safe Port device.	255.255.255.0
De-fault Gate-way	The default gateway configured on the Safe Port device.	10.6.182.254
DNS Serv-er	The DNS server configured on the Safe Port device.	8.8.8.8
Oper-ating	The operating system installed on the Safe Port device.	Microsoft Win 10 (build 17763), 64-bit

Field Name	Definition	Example
Sys-tem		
Last Win-dows Up-date Check	The date and time when the Safe Port device last successfully checked whether Windows updates were available. This includes checks where updates were found and checks where no updates were available.	2023/07/05 05:07:51 PM GMT+8
Last Pol-icy Sync	The date and time when the Safe Port device last synchronized its policy from ElementOne.	2025/01/10 05:13:33 PM UTC+09:00
Firm-ware Ver-sion	The firmware version currently installed on the Safe Port device.	1.0.1008
Last Firm-ware Up-date	The date and time when the firmware was last updated.	2025/01/10 05:13:33 PM UTC+09:00
Scan En-gine Ver-sion	The version of the scan engine installed on the Safe Port device.	21.6.1006
Scan Pat-tern Ver-sion	The version of the antivirus pattern installed on the Safe Port device.	19.785.00
Last Com-po-	The date and time when the scan components were last updated.	2025/01/10 05:13:33 PM UTC+09:00

Field Name	Definition	Example
nent Up-date		
Time Zone	The time zone configured on the Safe Port device.	UTC-7:00

- The **Device Policy** tab displays the policy currently applied to the Safe Port device, including device operation settings, security settings, Windows update settings, and allowlist information.

Field Name	Definition	Example
Last Change Time	The date and time when the current policy was last modified.	2025/01/10 05:13:33 PM UTC+09:00
Last Change Source	The source that last modified the policy.	Local
Auto Start Mode	Indicates whether Auto Start mode is enabled.	Enabled
Items Un-lock Mode	Indicates whether Items Unlock mode is enabled.	Disabled
Reset Disk	Indicates whether Reset Disk is enabled and the available disk reset actions.	Enabled (Format, Wipe, Erase)
Secure File Transfer	Indicates whether Secure File Transfer is enabled.	Enabled
Visitor Management	The visitor management mode applied to the Safe Port device.	Guest mode
Scan Action	The action taken when threats are detected during scanning.	Log only
Removable Media Validation	Indicates whether Removable Media Validation is enabled.	Enabled

Field Name	Definition	Example
Sample Collection	Indicates whether malware or unscannable items are collected for analysis.	Enabled (All items: malware, unscannable items)
Scan Restriction	Indicates whether scan restrictions are enabled and the configured conditions.	Enabled (Pattern outdated: 1 day(s), Disconnection: 15 min(s))
Windows Auto Update	Indicates whether Safe Port automatically downloads and installs available Windows updates.	Enabled
Connection Method	The method Safe Port uses to connect to external services.	Direct Connection
Allowlist	The number of allowlist rules currently applied to the Safe Port device. The rule details are displayed in the table below.	2 Rule(s)

Click the **X** button to close the details panel.

Customize Table View

You can customize the Safe Port device table to control which columns are displayed and their order.

Click **Customize Table** in the upper-right corner of the device section.

• Select Columns

- Select the checkboxes for the columns you want to display.
- Clear the checkboxes to hide columns.
- Click **Confirm** to save changes.
- Click **Back to default** to restore the default table layout.

• Rearrange Columns

- Click and hold a column row.
- Drag it to the desired position.

- Click **Confirm** to save changes.
- Click **Back to default** to restore the default order.

Register Safe Port Device to ElementOne

This function allows users to register **Safe Port** devices to ElementOne. After registration is completed, the device is activated and can communicate with ElementOne for management, policy synchronization, and log upload.



Note:

- Only **Master Admins** and **Admins** can perform this action.
- Before registering a device, make sure the **Safe Port license** has been activated in ElementOne.

Registration Steps:

1. Click **Add Safe Port** next to the **Device** label.
2. Click the **Copy** icon to copy the registration password to the clipboard.



Note:

Record the **ElementOne IP/Domain, Port, and Password**.

3. Click **OK** to close the window.
4. On Safe Port, enter the **ElementOne IP/Domain, Port, and Password** to complete registration.



Note:

For detailed instructions on registering a Safe Port device, refer to the **Safe Port User's Guide**.

**Note:**

- After registration, the device is placed in the **Global Group** by default. You can move the device to another group as needed.
- Devices can still be registered using the copied information even after the **Register Device** window is closed.
- The device registration password is **automatically renewed** whenever the ElementOne service restarts, including when:
 - The ElementOne virtual machine reboots.
 - The `elementone service restart` command is executed in **vShell**.

Rename Safe Port Device

This function allows users to rename a Safe Port device.

**Note:**

Only the **group supervisor** of the group can perform this action.

Steps:

1. In the device row, click the **Settings** icon and select **Rename**.
2. Enter a new device name.

**Note:**

The device name is case-sensitive, must be **1–64 characters** long, and **cannot contain commas**.

3. Click **Confirm**.
4. A notification appears indicating that the device has been successfully renamed.

Move Safe Port Device

**Note:**

Only the **group supervisor** of the group can perform this action.

You can move a Safe Port device to another group using one of the following methods.

Move a single device:

- **Method 1:**

1. In the device row, click the **Settings** icon and select **Move**.
2. Select the destination group.
3. Click **Confirm**.
4. A notification appears indicating that the device has been successfully moved.

- **Method 2:**

1. Select the checkbox next to the device you want to move.
2. Click the **Move** icon at the top of the **Device List** page.
3. Select the destination group.
4. Click **Confirm**.
5. A notification appears indicating that the device has been successfully moved.

Bulk move devices:

You can move multiple devices at the same time.

1. Select the checkboxes next to the devices you want to move.
2. Click the **Move** icon at the top of the **Device List** page.
3. Select the destination group.
4. Click **Confirm**.
5. A notification appears indicating that the selected devices have been successfully moved.

Remove Safe Port Device

This function allows users to remove a Safe Port device from ElementOne.

When a device is removed, it is deregistered from ElementOne. The device will no longer be able to communicate with ElementOne, but its historical logs are retained.



Note:

Only the **group supervisor** of the group can perform this action.

Remove a Single Device

• Method 1:

1. In the device row, click the **Settings** icon and select **Remove**.
2. Enter **REMOVE** to confirm the action.
3. Click **Confirm**.
4. A notification appears indicating that the device has been successfully removed.

• Method 2:

1. Select the checkbox next to the device you want to remove.
2. Click the **Remove** icon at the top of the **Device List** page.
3. Enter **REMOVE** to confirm the action.
4. Click **Confirm**.
5. A notification appears indicating that the device has been successfully removed.

Bulk Remove Devices

You can remove multiple devices at the same time.

1. Select the checkboxes next to the devices you want to remove.
2. Click the **Remove** icon at the top of the **Device List** page.
3. Enter **REMOVE** to confirm the action.
4. Click **Confirm**.
5. A notification appears indicating that the selected devices have been successfully removed.

Edit Safe Port Device Policy

This function allows users to view and modify device policy settings for a Safe Port device.

**Note:**

- Admins and group members can view the Group/Device Policy.
- Only the **group supervisor** of the current group can modify the Group/Device Policy.
- By default, a newly registered device uses the inherited group policy.

Update the Device Policy

1. In the device row, click **Inherited** or **Custom** to open the policy settings.
2. Configure the policy settings as needed.

For details, refer to [Safe Port Policy Settings \(on page 34\)](#).

3. Click **Save**.
4. After you click **Save**, ElementOne displays a notification indicating that the device policy has been successfully updated.

Windows Update Status

The **Windows Update Status** column displays the current Windows update state of the Safe Port device. Depending on the status, the **Download and Install** icon may be available for performing a manual Windows update.

Status	Download and Install	Description
-	Unavailable	Safe Port has not performed a Windows update check.
Update Server Unavailable	Unavailable	Safe Port cannot connect to the Windows update server.
Update Check Failed	Unavailable	Safe Port failed to retrieve Windows update information.
Update Available	Available	Windows updates are available, and Windows Auto Update is disabled.
Update Available	Unavailable	A manual Windows update request is being processed.
Update Available	Unavailable	Windows Auto Update is enabled.
Updating	Unavailable	Windows updates are being installed.

Status	Download and Install	Description
Up to Date	Unavailable	No Windows updates are available.
Update Failed	Available	One or more Windows updates failed to install.

**Note:**

- Move the pointer over **Update Available** to view the list of available Windows updates.
- Move the pointer over **Update Failed** to view the list of failed Windows updates.
- When **Windows Auto Update** is enabled, Safe Port automatically downloads and installs available Windows updates.
- When **Windows Auto Update** is disabled, administrators can perform manual Windows updates by clicking the **Download and Install** icon.
- During a manual Windows update, the **Download and Install** icon is unavailable until the update request is completed.

Manual Windows Update

Administrators and Group Supervisors can perform manual Windows updates on Safe Port devices when **Windows Auto Update** is disabled.

Perform a Manual Windows Update for a Single Safe Port Device

1. Go to **Device List**.
2. Click the **Safe Port** icon in the upper-right corner to display the Safe Port device list.
3. Locate the desired Safe Port device.
4. In the **Windows Update Status** column, click the **Download and Install** icon.
5. The Windows update request is sent to the Safe Port device.

Perform a Manual Windows Update for Multiple Safe Port Devices

1. Go to **Device List**.
2. Click the **Safe Port** icon in the upper-right corner to display the Safe Port device list.
3. Select one or more Safe Port devices.
4. Click the **Download and Install** icon above the device list.
5. The Windows update request is sent to the selected Safe Port devices.

Virtual Portable Inspector Device Management

In the Virtual Portable Inspector device management view, you can register, rename, move, and remove Virtual Portable Inspector (vPI) devices. You can also configure device policy settings, manage vPI authentication passwords, filter devices using available filter options, and customize the device table view by selecting the columns to display.

The Device List page displays registered vPI devices in a table view. By default, the table includes the following columns:

Col- umn	Description	Example
Name	The name of the vPI device.	Southern Eu- rope-C-50894
De- vice ID	The unique identifier assigned to the vPI device.	e01c5973-77b3-4828- a3d0-75f31943bb76
De- vice Policy	Indicates whether the vPI device uses an inherited policy or a custom policy. Click Inherited or Custom to configure the device policy settings.	Inherited Custom
Down- load	Allows you to download the vPI package for deployment.	Download icon

The Device List page also provides the following functions:

Function	Description
Add Virtual Portable In- spector	Registers a new vPI device.
Recent vPI Deployments	Displays recent vPI deployments, seat usage, deployment status, and scan progress.
Refresh	Refreshes the device list.
View	Switches the group display between Single Row, Grid, and List views.
Customize Table	Selects the columns displayed in the device table.

To prevent unauthorized use, each vPI device is assigned a password that must be entered when running a vPI scan. Administrators can view, copy, and regenerate the password when necessary.

Recent vPI Deployments

To monitor vPI usage and deployment progress, click the **Recent vPI Deployments** icon in the upper-right corner of the Device List page. The Recent vPI Deployments page displays current vPI seat usage and provides an overview of recent vPI deployments, including deployment status and scan progress. Go to [View Recent vPI Deployments \(on page 75\)](#) for details.

Customize Table View

You can customize the Virtual Portable Inspector device table to control which columns are displayed and their order.

Click **Customize Table** in the upper-right corner of the device section.

• Select Columns

- Select the checkboxes for the columns you want to display.
- Clear the checkboxes to hide columns.
- Click **Confirm** to save changes.
- Click **Back to default** to restore the default table layout.

• Rearrange Columns

- Click and hold a column row.
- Drag it to the desired position.
- Click **Confirm** to save changes.
- Click **Back to default** to restore the default order.

Register Virtual Portable Inspector Device to ElementOne

This function allows users to register a Virtual Portable Inspector (vPI) device to ElementOne. After registration is completed, the device is activated and can communicate with ElementOne for management, policy synchronization, and log uploads.

**Note:**

- Only **Group Supervisors** can perform this action.
- Before registering a device, make sure the **Virtual Portable Inspector license** has been activated in ElementOne.

Registration Steps:

1. Go to **Device List**, and click the **Virtual Portable Inspector** icon in the upper-right corner to switch to the **Virtual Portable Inspector** device list.
2. Click **Add Virtual Portable Inspector** next to the **Device** label.
3. Enter a device name and click **Confirm**.
4. Click the **Copy** icon to copy the device registration password to the clipboard.

**Note:**

The password must be entered in the vPI console.

5. Click **OK** to close the window.

**Note:**

- After registration, the device is placed in the **Global Group** by default. You can move the device to another group as needed.
- The device can still be registered using the copied password after the **vPI Device Password** window is closed.
- The device registration password is automatically regenerated whenever the ElementOne service restarts, including when:
 - The ElementOne virtual machine reboots.
 - The `elementone service restart` command is executed in **vShell**.

Edit Virtual Portable Inspector Device Policy

This function allows users to view and modify device policy settings for a Virtual Portable Inspector device.

**Note:**

- Admins and group members can view the Group/Device Policy.
- Only **group supervisors** can modify the Group/Device Policy.
- By default, a newly registered device uses the inherited group policy.

Update the Device Policy

1. In the device row, click **Inherited** or **Custom** to open the policy settings.
2. Configure the policy settings as needed.

For details, refer to [Virtual Portable Inspector Policy Settings \(on page 41\)](#).

3. Click **Save**.
4. After you click **Save**, ElementOne displays a notification indicating that the device policy has been successfully updated.

Download vPI Package

This function allows users to download a Virtual Portable Inspector (vPI) package for deployment to target endpoints.

**Note:**

- Only **group supervisors** can perform this action.
- Before downloading a vPI package, make sure that:
 - A Virtual Portable Inspector license has been activated.
 - A vPI device has been added in ElementOne.

To download a vPI package:

1. Go to **Device List**, and click the **Virtual Portable Inspector** icon in the upper-right corner to switch to the Virtual Portable Inspector device list.
2. Locate the target vPI device.
3. Click the **Download** icon in the **Download** column.
4. Save the downloaded package to a local location.

After the package is downloaded, copy it to the target endpoint and run the package to start the vPI deployment process.

Move Virtual Portable Inspector Device

**Note:**

Only **group supervisors** can perform this action.

You can move a Virtual Portable Inspector device to another group using one of the following methods.

Move a single device:

• Method 1:

1. In the device row, click the **Settings** icon and select **Move**.
2. Select the destination group.
3. Click **Confirm**.
4. A notification appears indicating that the device has been successfully moved.

• Method 2:

1. Select the checkbox next to the device you want to move.
2. Click the **Move** icon at the top of the **Device List** page.
3. Select the destination group.
4. Click **Confirm**.
5. A notification appears indicating that the device has been successfully moved.

Bulk move devices:

You can move multiple devices at the same time.

1. Select the checkboxes next to the devices you want to move.
2. Click the **Move** icon at the top of the **Device List** page.
3. Select the destination group.
4. Click **Confirm**.
5. A notification appears indicating that the selected devices have been successfully moved.

Manage vPI Authentication Password

This function allows users to view, copy, and regenerate the authentication password for a Virtual Portable Inspector (vPI) device.

**Note:**

- Only **Group Supervisors** can perform this action.
- The vPI authentication password must be entered in the vPI console before a scan can start. Only authorized vPI devices can upload scan logs and asset information to ElementOne.

To manage a vPI authentication password:

1. Go to **Device List**, and click the **Virtual Portable Inspector** icon in the upper-right corner to switch to the Virtual Portable Inspector device list.
2. Locate the target vPI device.
3. Click the **Setting** icon.
4. Select **Manage Password**.
5. The **vPI Device Password** window displays the following information:

Field	Description	Example
vPI Name	The name of the vPI device.	Southern Europe-C-50894135135131507
Device ID	The unique identifier of the vPI device.	e01c5973-77b3-4828-a3d0-75f31943bb76
Password	The authentication password used by the vPI client.	5513289538

6. You can perform the following actions:

Action	Description
Copy	Copies the password to the clipboard.
Regenerate	Generates a new password for the vPI device.

7. Click **OK** to close the **vPI Device Password** window.

View Recent vPI Deployments

This function allows users to view recent Virtual Portable Inspector (vPI) deployments, monitor scan progress, and track vPI seat usage.

To view recent vPI deployments:

1. Go to **Device List**, and click the **Virtual Portable Inspector** icon in the upper-right corner to switch to the Virtual Portable Inspector device list.
2. Click the **Recent vPI Deployments** icon below the device icons.
3. The following information is displayed:

Column Name	Definition	Example
Scan Time	The date and time when the vPI scan started.	2022/07/10 6:34:11 PM
Hostname	The hostname of the scanned endpoint.	TW-Taipei-James-0570101
MAC Address	The MAC address of the scanned endpoint.	10:FA:1Q:64:17:A0
IP Address	The IP address of the scanned endpoint.	10.8.168.72
Device Name	The name of the vPI device that performed the scan.	vPI for Southern Europe
Device ID	The unique identifier of the vPI device.	D7w7515863G
Group	The group to which the vPI device belongs.	Southern Europe
Scan Status	The current scan status reported by the vPI device.	Scan Completed

The following scan status values may be displayed:

Scan Status	Definition
Preparing	The vPI device has started and is preparing to connect to ElementOne.
Collecting Asset Info	The vPI device is collecting asset information from the endpoint.
Scanning...	The endpoint is being scanned.
Scan Completed	The scan completed successfully and the results have been uploaded to ElementOne.
Scan Failed	The scan did not complete successfully.



Note:

You can click the **Arrow** icon next to each column label to sort the results in ascending or descending order.

You can use **Add Filter** to filter deployment records, click **Refresh** to update the deployment list, and click the **Customize Table** icon to select the columns displayed in the table.

The **Recent vPI Deployments** page displays the current vPI seat usage.

**Note:**

vPI seat usage is calculated based on the number of unique assets scanned by vPI devices, not the number of registered vPI devices. For example, if one vPI device scans 100 assets, or 10 vPI devices scan the same 100 assets, 100 vPI seats are used.

Logs

Data Usage Limitation

ElementOne has a data usage limitation to prevent system overload. This ensures that the system remains available and operational.

When the Data Disk usage reaches 80%, the system will deny requests for the following commands:

- Import device list
- Import logs
- Upload logs from devices

You can extend the Data Disk to clear the 80% threshold and resume normal system operation.

Import Logs

This function allows users to import log files from the Management Program.

**Note:**

To learn how to export logs from the Management Program, please refer to the Portable Inspector User's Guide available on MyTXOne Portal.

These log files contain scan logs, asset logs, Portable Inspector logs, and quarantined files.

If the related device is not imported or registered on ElementOne, only the admin user account can browse these logs.


Once the device is imported or registered on ElementOne, the group supervisor of the device can browse the logs.

The log import function can be executed multiple times, but if the imported logs already exist in ElementOne, they will not be overwritten.


**Note:**

- Only masteradmin and admins can perform this action.
- The size limit for Portable Inspector log files is 500 MB.

1. On the Scan Logs page, click the “Import Logs” icon.

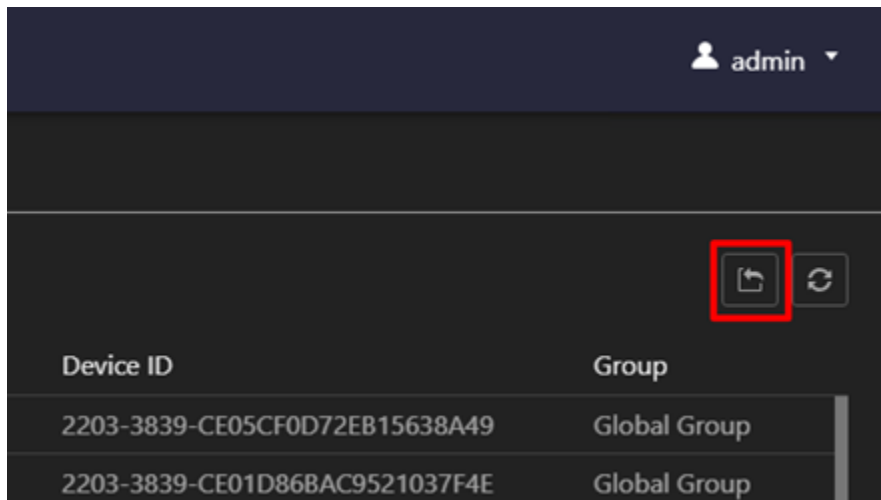

2. Click “Browse”.
3. In the file dialog window, select the exported zip file.
4. Click “Open”.
5. Input the password of the zip file.
6. Click “Import”.
7. After “Import” is clicked, ElementOne will display a notification indicating that the logs have been successfully imported.
8. To browse imported logs, the filter needs to be modified. Click “Scan Time” filter.

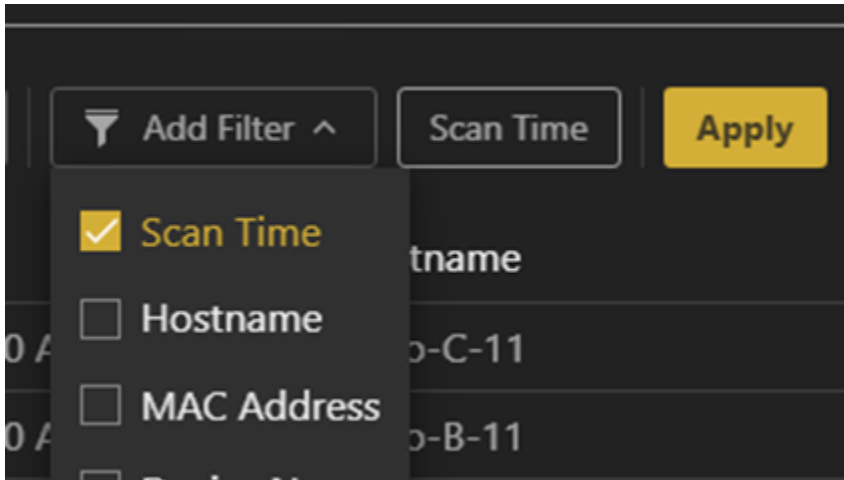

9. Click "Custom Range".
10. Select the desired time range.
11. Click "Confirm".
12. Click "Apply".
13. Now the Scan Logs page displays imported logs.

Portable Inspector Scans


This page allows users to browse scan logs for Portable Inspector and Virtual Portable Inspector devices, browse Portable Inspector rescue disk logs, export scan logs as PDF files, and view vPI seat usage.



Note:

- Masteradmin and admins can browse logs for all devices, while group member user accounts can only browse logs for devices where they are either a group member or the group supervisor.
- If the related device is not imported or registered on ElementOne, only an admin user account can browse these logs.

1. Log in with either a master admin, admin, or group member user account, and navigate to the "Logs" icon on the menu.
2. Click "Portable Inspector Scans" to browse the Scan Logs page.

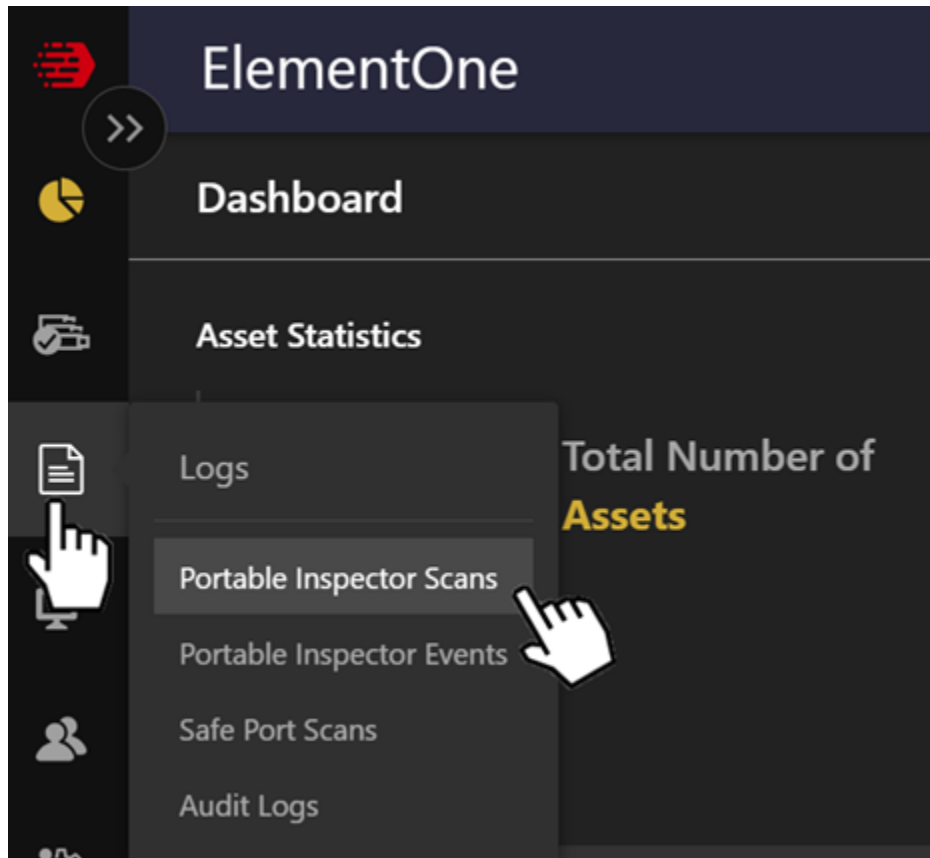

3. On the Portable Inspector Scans page, click a scan log to display its scan results.
4. On the **Scan Result** page, click on the **Export** button to export the scan logs as a PDF file.



Note:

The **Export** button can be found in each **Scan Result** page. Click on a scan log on **Portable Inspector Scans** page, see its scan result, then click on the **Export** button to export a report in PDF format.



Note:

Scan logs for both Portable Inspector and Virtual Portable Inspector devices are displayed on the **Portable Inspector Scans** page.

**Note:**

The current vPI seat usage is displayed in the upper-right corner of the page. If the number of used seats exceeds the licensed limit, scan results for assets scanned after the seat limit is reached are not displayed.

5. When the Scan Results window is displayed, you can click another scan log to view its scan results directly.
6. Click the “X” button to close the Scan Result window.

Views

ElementOne provides three different views to browse scan logs: Default, Filter by Hostname, and Filter by Device.

Default

In the “Default” view, you can browse through every single scan log from each device.

Click on the item in the “Default” view to browse the scan results.

Table 3. Default Table View

Column Name	Definition	Example
Scan Time	The time when the scan started corresponds to the system time of the asset	2023/10/18 09:28:06 AM GMT+8
Hostname	The hostname of the scanned asset	Arizona-1
MAC Address	The MAC address of the scanned asset	5F:C9:EE:85:0B:F3
Detection	The number of detected threats on the asset	1
Comment	The comment for the scan. Users can customize the comment on the Scanning Tool console upon completing the scan.	• No threats found • 1 threat found • Scan suspended

Table 3. Default Table View (continued)

Column Name	Definition	Example
Device Name	The name of the device	PI Pro
Device ID	The ID of the device	2203-3839-BE0107001CD-B1B2000001

Table 4. Scan Result

Column Name	Definition	Example
Type	The type of the scan	• When performing a normal scan: OS Scan • When performing a rescue disk scan: Rescue Scan • When performing a Virtual Portable Inspector scan: Virtual Device Scan
Log Received Time	The time when ElementOne received the scan log	2023/10/18 09:28:06 AM GMT+8
Log ID	The ID of the scan log	df775232-6c61-4e9e-b234-d6d94536eea3
Start Date/Time	The time when the scan started corresponds to the system time of the asset	2023/10/18 09:28:06 AM GMT+8
End Date/Time	The time when the scan ended corresponds to the system time of the asset	2023/10/18 09:34:06 AM GMT+8
Device Name	The name of the device	PI Pro
Device ID	The ID of the device	2203-3839-BE0107001CD-B1B2000001
Firmware Version	The version of the firmware used during the scan	1.0.1001

Table 4. Scan Result (continued)

Column Name	Definition	Example
Advanced Threat Scan Engine Version	The version of the Advanced Threat Scan Engine used during the scan	21.6.1006
Virus Pattern Version	The version of the Virus Pattern used during the scan	18.819.00
Last Pattern Check	The last time Portable Inspector successfully checked whether pattern updates were available. This includes checks where updates were found and checks where no updates were available.  Note: • If the time exceeds the configured period of Pattern Outdate Alert, the timestamp is highlighted in red and the message "The pattern update check is overdue." is displayed. • If a potential system time issue is detected, the timestamp is highlighted in red and the message "The system time may be incorrect. Pattern Outdate Alert" is displayed.	2023/10/18 09:34:06 AM GMT+8

Table 4. Scan Result (continued)

Column Name	Definition	Example
	 and Scan Restriction may not work correctly." is displayed.	
Hostname	The hostname of the scanned asset	Arizona-1
Domain Name	The domain name of the logged-in user during the scan	AzureAD
User Name	The name of the logged-in user during the scan	OperatorEric
IP Address	The IPv4 address of the scanned asset	192.168.1.230
MAC Address	The MAC address of the scanned asset	5F:C9:EE:85:0B:F3
Platform	The operating system of the scanned asset	Microsoft Windows 10 Enterprise Edition (build 19045), 64-bit
Scan Status	The status of the scan	When the scan has been canceled: Canceled
		When the scan has been suspended once or more: Suspend
		When the scan has been completed:

Table 4. Scan Result (continued)

Column Name	Definition	Example
		Completed
Scan Results	The results of the scan	When no threats are found during the scan: No Threats Found
		When threats are found during the scan: Threats Found
Scanned	The total number of scanned files during the scan	19903
Infected	The total number of identified threat files during the scan	1
Fixed	The total number of resolved threat files during the scan	1
Scan Folders	The target folder of the scan	When Scan Type is "All local folders": All local folders
		When Scan Type is "Default folders (Quick Scan)": Default folders (Quick Scan)
		When Scan Type is "Specific folders": c:\user\specific\folder

Table 4. Scan Result (continued)

Column Name	Definition	Example
Excluded Folders	The folders to be excluded from the scan	- When the setting is empty: - - When the setting exists: c:\excluded_folder_1,c:\excluded_folder_2
Excluded Files	The files to be excluded from the scan	When the setting is empty: -
		When the setting exists: c:\skip_this_file.exe,c:\skip_this_file_too.exe
Excluded Extensions	The extensions of files to be excluded from the scan	When the setting is empty: -
		When the setting exists: pdf, txt
Comment	The comment for the scan. Users can customize the comment on the Scanning Tool console upon completing the scan.	- No threats found 1 threat found - Scan suspended

Table 5. Threats Table View in Scan Results

Column Name	Definition	Example
Threat Name	The name of the identified threat	Eicar_test_file

Table 5. Threats Table View in Scan Results (continued)

Column Name	Definition	Example
File Path	The file path of the identified threat	C:\Program Files (x86)\Intel\Icar.txt
Result	The action taken for the identified threat during the scan	When the Scan Action is “Log only” or user decide “Ignore” when during fix problems: Ignored
		When the threat has been resolved after the scan: Fixed
		When the threat cannot be resolved after the scan: Unable to Fix
		When the threat will be resolved after restarting the asset: Fixed at Restart
SHA-256	The SHA-256 hash value of the identified threat file	275A021BBF-B6489E54D471899F7DB9D1663

Filter by Hostname

In the “Filter by Hostname” view, you can browse through scan statistics and the latest scan status of each asset.

Column Name	Definition	Example
Hostname	The hostname of the scanned asset	Arizona-1

Column Name	Definition	Example
MAC Address	The MAC address of the scanned asset	5F:C9:EE:85:0B:F3
Total Number of Scans	The total of scan times on the asset	4
Total Number of Detections	The total number of detected threats on the asset across all scan logs	1
Comment	The comment from the last scan on the asset	No threats found 1 threat found
Last Scan Time	The time when the last scan started with the device corresponds to the system time of the asset	2023/10/18 09:28:06 AM GMT+8

Filter by Device

In the "Filter by Device" view, you can browse through device group information, scan statistics and the latest scan status of each device.

Column Name	Definition	Example
Device Name	The name of the device	PI Pro
Device ID	The ID of the device	2203-3839- BE0107001CD- B1B2000001
Group	The current device group of the device	For Imported but not registered devices: -
		For Registered devices: My first group (Global Group/My first group)
Total Number of Scans	The total of scan times of the device	30

Column Name	Definition	Example
Total Number of Hostname Scanned	The total number of scanned assets with the device	10
Last Scan Time	The time when the last scan started with the device corresponds to the system time of the asset	2023/10/18 09:28:06 AM GMT+8

Delete PI and vPI Scan Logs

Allow deletion of Portable Inspector and Virtual Portable Insepctor scan logs.



Note:

Please note this action cannot be rolled back; take careful consideration before confirming.

1. Tick the checkbox(es) to select the logs to delete.

Scan Time	Hostname	MAC Address	Detection	Comment	Device Name	Device ID	Group
☒ 2023/05/27 12:52:30 AM UTC	Ohio-C-11	7668AA4D185A	1	1 threat found	PI Pro	Z803-3839-C109C70D72B19638A9	Global Gr
☒ 2023/05/27 12:52:30 AM UTC	Ohio-B-11	E68D7C3C9181	0	No threats found	PI Pro	Z803-3839-C10D68AC952103714E	Global Gr
☐ 2023/05/27 12:52:30 AM UTC	Arizona-11	8C8E36AE9049	1	1 threat found	PI Pro	Z803-3839-C105ADE7185C294683F9	Global Gr
☐ 2023/05/27 12:52:30 AM UTC	Arizona-31	5E4E354020AC	2	2 threats found	PI	Z803-3838-C00100CAB848F215763	Global Gr
☐ 2023/05/27 12:52:30 AM UTC	Arizona-21	8C0A29C031250	1	1 threat found	PI Pro	Z803-3839-C1019415031A8062CE7	Global Gr
☐ 2023/05/27 12:52:30 AM UTC	Ohio-A-11	26302D528444	1	1 threat found	PI Pro	Z803-3839-C1018C19362025280A4	Global Gr
☐ 2023/05/27 12:52:30 AM UTC	Ohio-C-1	1F0A28E340270	0	No threats found	PI	Z803-3838-C0053A2975068E0C84F1	Global Gr
☐ 2023/05/27 12:52:30 AM UTC	Ohio-B-1	8076343046F1	0	No threats found	PI Pro	Z803-3839-C105C3128D067A854C3F	Global Gr
☐ 2023/05/27 12:52:30 AM UTC	Ohio-A-1	EA024106602D	0	No threats found	PI	Z803-3838-C0041889CA3700F528	Global Gr
☐ 2023/05/27 12:52:30 AM UTC	Arizona-1	5F426E8568F3	0	No threats found	PI Pro	Z803-3839-C10160CCE2F78A341808D	Global Gr
☐ 2023/05/26 11:52:30 PM UTC	Ohio-C-12	C503555F7054	0	No threats found	PI Pro	Z803-3839-C109C70D72B19638A9	Global Gr
☐ 2023/05/26 11:52:30 PM UTC	Ohio-B-12	5C338F1C16128	1	1 threat found	PI Pro	Z803-3839-C10D68AC952103714E	Global Gr
☐ 2023/05/26 11:52:30 PM UTC	Arizona-12	3F9F2E7777DE	1	1 threat found	PI Pro	Z803-3839-C105ADE7185C294683F9	Global Gr
☐ 2023/05/26 11:52:30 PM UTC	Arizona-32	C5375FA92553	1	1 threat found	PI	Z803-3838-C00100CAB848F215763	Global Gr
☐ 2023/05/26 11:52:30 PM UTC	Arizona-22	46F797A8093F	2	2 threats found	PI Pro	Z803-3839-C1019415031A8062CE7	Global Gr

2. Click the "Delete" button, and "Confirm".

Portable Inspector Events Page


This page allows users to browse Portable Inspector and Portable Inspector Pro events.



Note:

- Masteradmin and admins can browse events for all devices, while group member user accounts can only browse events for devices they are part of either as a group member or a group supervisor.
- If the related device is not imported or registered on ElementOne, only the admin user account can browse these events.

1. Log in with either a master admin, admin, or group member user account, and navigate to the “Logs” icon on the menu.
2. Click “Portable Inspector Events” to browse Portable Inspector Events page.

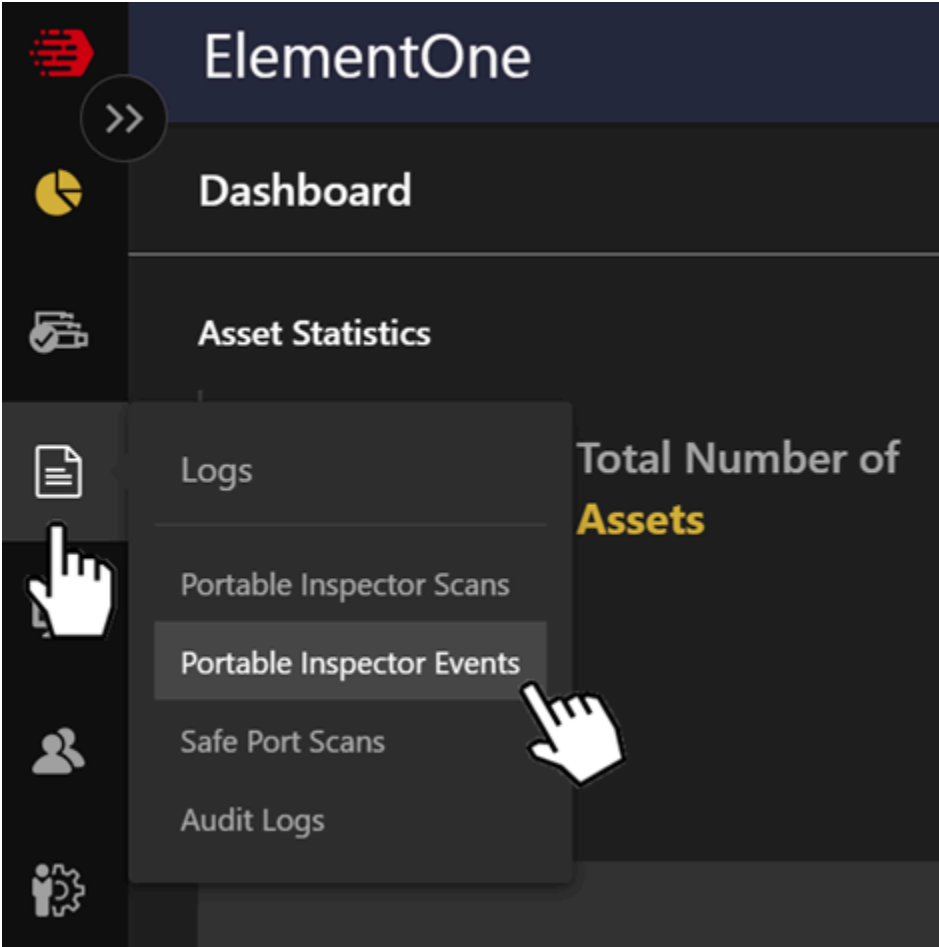

Column Name	Definition	Example
Time	The time when the activity completed	2023/10/18 09:28:06 AM GMT+8

Column Name	Definition	Example
Device Name	The name of the device	PI Pro
Device ID	The ID of the device	2203-3839-BE0107001CDB1B2000001
Description	The description of the device event	After synchronizing settings with ElementOne: Updated Settings
		After synchronizing scan logs with ElementOne: Transferred Scan Logs
		After updating components with ElementOne: Updated Components

Safe Port Scans


This page allows users to browse the scan logs for their devices.



Note:

Only masteradmin and admins can browse this page.

1. Log in with either a master admin or admin user account, and navigate to the “Logs” icon on the menu.
2. Click “Safe Port Scans” to browse the Scan Logs page.

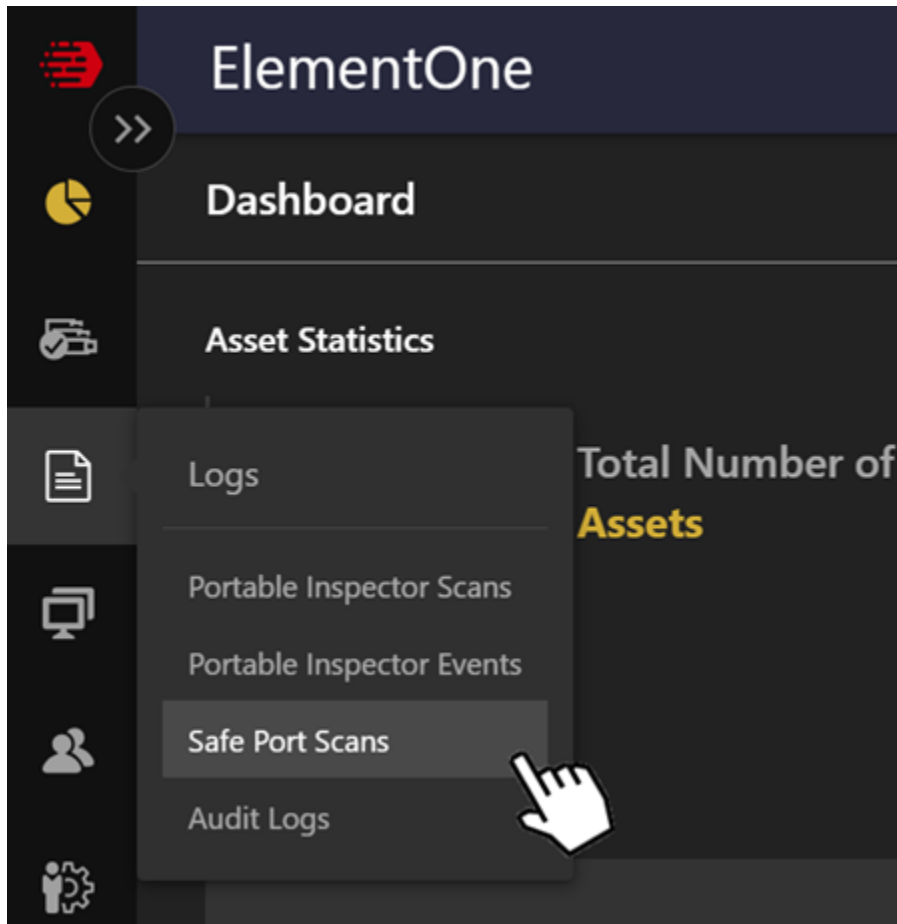

3. On the Safe Port Scans page, click a scan log to display the scan result.
4. On the **Scan Result** page, click on the **Export** button to export the scan logs as a PDF file.



Note:

The **Export** button can be found in each **Scan Result** page. Click on a Safe Port's scan log on **Safe Port Scans** page, see its scan result, then click on the **Export** button to export a report in PDF format.

5. When the Scan Result window is displayed, you can click another scan log to view its scan result directly.
6. Click the "X" button to close the Scan Result window.

Table View

In the table view, you can browse through every single scan log from each device.

Table 6. Safe Port Scan Table View

Column Name	Definition	Example
Scan Time	The time when the scan started, which corresponds to the system time of the device	2023/10/18 09:28:06 AM GMT+8
Removable Media Serial Number	The serial number of the scanned removable media	04ZSS671KL75UTJG
Visitor	The name of the visitor who performed the scan	- When performing a scan with Guest mode: Timothy - When performing a scan in Employee Mode, the Badge ID is displayed in the column: E1234567890123456 - When performing a scan with Anonymous mode: -
Detection	The number of detected threats on the removable media	2
Unscannable	The number of files and folders that cannot be scanned on the removable media	3
Result	The scan result or status depending on the selected scan action. Before actions are taken (Log Only or Confirm Before Action mode): Possible results include	- No threats found - Scanning failed - Threats found - Unscannable items found - Waiting for approval

Table 6. Safe Port Scan Table View (continued)

Column Name	Definition	Example
	◦ No threats found ◦ Scanning failed ◦ Threats found ◦ Unscannable items found ◦ Waiting for approval • During processing (Confirm Before Action mode): Possible statuses include ◦ Sending selected action ◦ Cleaning in progress • After actions are taken (Confirm Before Action mode): Possible results include ◦ All items fixed ◦ All items approved ◦ Unable to fix all items ◦ Unscannable items found ◦ Submission canceled	• Sending selected action • Cleaning in progress • All items fixed • All items approved • Unable to fix all items • Unscannable items found • Submission canceled
Safe Port	The name of the device	Safe Port
Safe Port ID	The ID of the device	ES101-F4104D56-3AFF-E4B-B-0792-9E1869B4AEB6

Confirm Before Action

When the scan action is set to **Confirm Before Action** and threats or unscannable items are detected, an administrator must review the items and select actions in ElementOne's **Safe Port Scans** page. The selected actions are then applied on Safe Port.

Approval Steps

1. When an approval request is sent to ElementOne, a notification count is displayed both next to the **Logs** icon in the left navigation bar and next to the **Safe Port Scans** label under the Logs menu. This indicates that there are scan logs waiting for review. On the **Safe Port Scans** page, the **Result** column shows the status **Waiting for Approval**.



Note:

The number indicates the number of scan logs waiting for review. One scan may include multiple threats and unscannable items, so this number does not represent the total number of affected files.

2. In the **Result** column on the **Safe Port Scans** page, click **Waiting for Approval** to open the **Select Actions** window.
3. In the **Select Actions** window, two tabs are available: **Threats** and **Unscannable Items**. Review each threat and unscannable item under the two tabs.

Table 7. Threats tab

Column Name	Description	Example
Threat Name	The name of the identified threat	Eicar_test_file
File Path	The file path of the identified threat	C:\Program Files (x86)\Intel\ecar.txt
SHA-256	The SHA-256 hash value of the identified threat file	275A021BBF-B6489E54D471899F7D-B9D1663FC695
Action	The action to take for the threat. Available actions:	Clean Ignore

Column Name	Description	Example
	◦ Clean: Perform a clean action on the threat. ◦ Ignore: Keep the result for the threat without taking further action.	

Table 8. Unscannable Items tab

Column Name	Description	Example
Path	The file or folder path of the unscannable item	c:\path\unscan\file.exe
Unscannable Reason	The reason why the file is unscannable	The file is protected by password.
Action	The action to take for the unscannable item. Available actions: ◦ Approve: Mark the unscannable item as safe and approved for use. ◦ Clean: Perform a clean action on the unscannable item. ◦ Ignore: Keep the result for the unscannable item without taking further action.	Approve Clean Ignore

4. Under the **Threats** and **Unscannable Items** tabs, select an action for each item. If needed, add a note such as an employee ID or ticket number in the **Note** column, then click **Apply**.

**Note:**

- You must select an action for all items under both tabs before you can apply the request. If any item does not have an action selected after you click **Apply**, an error message is displayed, and the number of remaining items is shown next to the **Threats** or **Unscannable Items** label.



- If you click **Cancel** after selecting some actions, a confirmation message is displayed. In the confirmation message box, click **Discard** to cancel the selected actions, or click **Cancel** to continue selecting actions.
- For threats, only **Clean** or **Ignore** can be selected. Threats cannot be approved as safe. For unscannable items, **Approve** is allowed.
- The selected actions apply only to the current scan. For example, if you approve an unscannable item, you can select a different action for the same item in a future scan.

5. After you click **Apply**, the **Result** column on the **Safe Port Scans** page may show one of the following statuses:

- **Sending selected action:**

The selected actions are being sent to Safe Port

- **Cleaning in progress:**

Safe Port is processing the selected actions

6. After Safe Port completes the selected actions, the final result is displayed in the **Result** column on the **Safe Port Scans** page.

Possible results include:

- **All items fixed:**

Threats are fixed, and unscannable items are fixed or approved as safe

- **All items approved:**

No threats are found, and unscannable items are approved as safe

- **Unable to fix all items:**

Some threats or unscannable items are not fixed

- **Unscannable items found:**

No threats are found, and unscannable items are not fixed

- **Submission canceled:**

If the approval submission is canceled on Safe Port before actions are applied

Scan Result

Click on an item in the table view to browse its scan result.

Scan Details

Table 9. Scan Result

Column Name	Definition	Example
Log ID	The ID of the scan log	59de0ac4-5a4b-49c3-87be
Log Received Time	The time when ElementOne received the scan log	2023/10/18 09:28:06 AM GMT+8
Start Date/Time:	The time when the scan started, which corresponds to the system time of the device	2023/10/18 09:28:06 AM GMT+8
End Date/Time:	The time when the scan ended, which corresponds to the system time of the device	2023/10/18 09:34:06 AM GMT+8
Safe Port Name	The name of Safe Port	Safe Port
Safe Port Device ID	The ID of the device	2203-3839-BE0107001CD-B1B2000001
Firmware Version	The version of the firmware used during the scan	1.0.1001
Advanced Threat Scan Engine Version	The version of the Advanced Threat Scan Engine used during the scan	21.6.1006
Virus Pattern Version	The version of the Virus Pattern used during the scan	18.819.00
Removable Media Name	The name of removable media	Timothy's USB Disk
Removable Media Serial Number	The serial number of the scanned removable media	04ZSS671KL75UTJG
Visitor Management	The mode of visitor management	Guest mode
		Employee mode
		Anonymous mode

Table 9. Scan Result (continued)

Column Name	Definition	Example
Visitor	The name of the visitor who performed the scan	When scan with Anonymous mode: -
Scan Status	The status of the scan	When the scan has been canceled or failed: Scanning Failed
		When the scan has been completed: Scanning Completed
Scan Results	The results of the scan	Threats found No threats found
Scanned	The total number of files scanned during the scan	19903
Detection	The total number of identified threat files during the scan	2
Unscannable	The number of files and folders that cannot be scanned on the removable media	3
Scan Action	The action to take when a threat is found during the scan	Log Only
		Clean Malware
		Lock Suspicious Items
		Confirm Before Action

- **Scan Action: Log Only**

When the scan action is “Log Only”, the Scan Result window contains a “Detection” and an “Unscannable Files” table view.

Table 10. Detections Table View in Scan Details

Column Name	Definition	Example
Threat Name	The name of the identified threat	Eicar_test_file
File Path	The file path of the identified threat	C:\Program Files (x86)\Intel\eicar.txt
Last Modified	The last modification time of the file, which corresponds to the system time of the device	2023/11/13 01:26:41 AM GMT +8
SHA-256	The SHA-256 hash value of the identified threat file	275A021BBF-B6489E54D471899F7D-B9D1663

Table 11. Unscannable Files Table View in Scan Details

Column Name	Definition	Example
File/Folder Path	The file or folder path of unscannable files	c:\path\unscan\file.exe
		c:\path\unscan_directroy
Cause(s) for being Unscannable	The cause why the file is unscannable	Unknown cause.
		Directory/File permission forbids scan engine from opening the file.
		The media drive was removed during a file scan.
		Media drive not ready or there is a hidden partition in this drive.
		File compression exceeded layer limit of 20.

Column Name	Definition	Example
		The file is protected by password.

- **Scan Action: Clean Malware**

When the scan action is “Clean Malware”, the Scan Result window contains a “Cleaned Files”, an “Unable to Clean”, and an “Unscannable Files” table view.

Table 12. Cleaned Files Table View in Scan Details

Column Name	Definition	Example
File Path	The file path of the cleaned file	C:\Program Files (x86)\Intel\eicar.txt
Threat Name	The name of the identified threat	Eicar_test_file
SHA-256	The SHA-256 hash value of the identified threat file	275A021BBF - B6489E54D471899F7D - B9D1663FC695

Table 13. Unable to Clean Table View in Scan Details

Column Name	Definition	Example
File Path	The file path of the cleaned file	C:\Program Files (x86)\Intel\eicar.txt
Threat Name	The name of the identified threat	Eicar_test_file
SHA-256	The SHA-256 hash value of the identified threat file	275A021BBF - B6489E54D471899F7D - B9D1663FC695

- **Scan Action: Lock Suspicious Items**

When the scan action is “Lock Suspicious Items”, the Scan Result window contains a “Locked”, and an “Unable to Lock” table view.

Table 14. Locked View in Scan Details

Column Name	Definition	Example
File Path	The file path of the locked file	C:\Program Files (x86)\Intel\eicar.txt
Cause	The cause why the file is locked	Malware
Threat Name	The name of the identified threat	Eicar_test_file
SHA-256	The SHA-256 hash value of the identified threat file	275A021BBF- B6489E54D471899F7D- B9D1663FC695

Table 15. Unable to Lock Table View in Scan Details

Column Name	Definition	Example
File Path	The file path of the file	C:\Program Files (x86)\Intel\eicar.txt
Cause	The cause for lock failure	Permission denied

- **Scan Action: Confirm Before Action**

When the scan action is **Confirm Before Action**, the Scan Result window displays different tags, statuses, and table views depending on the current processing state.

1. **Before Actions Are Applied**

When Safe Port has sent an approval request but actions have not yet been selected and applied, the following tags may be displayed next to the **Scan Result** label:

- **No threats found**
- **Scanning failed**
- **Threats found**
- **Unscannable items found**

The following drawers are available:

▪ **Detections: [number]**

Table 16. Detections Table View in Scan Details

Column Name	Definition	Example
Threat Name	The name of the identified threat	Eicar_test_file
File Path	The file path of the identified threat	C:\Program Files (x86)\Intel\eicar.txt
Last Modified	The last modification time of the file, which corresponds to the system time of the device	2023/11/13 01:26:41 AM GMT+8
SHA-256	The SHA-256 hash value of the identified threat file	275A021BBF-B6489E54D471899F7D-B9D1663

▪ **Unscannable Files: [number]**

Table 17. Unscannable Files Table View in Scan Details

Column Name	Definition	Example
File/Folder Path	The file or folder path of unscannable files	c:\path\unscan\file.exe
		c:\path\unscan_directroy
Cause(s) for being Unscannable	The cause why the file is unscannable	Unknown cause.
		Directory/File permission forbids scan engine from opening the file.
		The media drive was removed during a file scan.
		Media drive not ready or there is a hidden partition in this drive.

Column Name	Definition	Example
		File compression exceeded layer limit of 20.
		The file is protected by password.

2. During Processing

During processing, the following statuses may be displayed:

- **Sending selected action**
- **Cleaning in progress**



Note:

If actions have been selected and are being sent to Safe Port, or if Safe Port is processing the selected actions:

- No tag is displayed next to the **Scan Result** label.
- The **Cleaned Files** and **Not Fixed Files** drawers show **In progress...** instead of a number.

3. After Actions Are Applied

After actions have been selected and applied, or if the submission is canceled, the following tags may be displayed next to the **Scan Result** label:

▪ **All items fixed:**

Threats are fixed, and unscannable items are fixed or approved as safe

▪ **All items approved:**

No threats are found, and unscannable items are approved as safe

▪ **Unable to fix all items:**

Some threats or unscannable items are not fixed

▪ **Unscannable items found:**

No threats are found, and unscannable items are not fixed

▪ **Submission canceled:**

If the approval submission is canceled on Safe Port before actions are applied

The following drawers are available:

▪ **Cleaned Files: [number]**

Table 18. Cleaned Files Table View in Scan Details

Column Name	Description	Example
File Path	The file path of the cleaned file	C:\Program Files (x86)\Intel\eicar.txt
Details	The threat name or the reason for an unscannable item	eicar File is encrypted.

▪ **Not Fixed Files: [number]**

Table 19. Not Fixed Files Table View in Scan Details

Column Name	Description	Example
File Path	The file path of the file not fixed	C:\Program Files (x86)\Intel\eicar.txt
Details	The threat name or the reason for an unscannable item	eicar
Reason Not Cleaned	The reason why a threat or unscannable item could not be fixed	Invalid file format.

▪ **Approved Files: [number]**

Table 20. Approved Files Table View in Scan Details

Column Name	Description	Example
File Path	The file path of the approved file	C:\Program Files (x86)\Intel\eicar.txt
Details	The reason for the unscannable item	File is encrypted.

▪ **Ignored Files: [number]**

Table 21. Ignored Files Table View in Scan Details

Column Name	Description	Example
File Path	The file path of the ignored file	C:\Program Files (x86)\Intel\eicar.txt
Details	The threat name or the reason for an unscannable item	eicar File is encrypted.

**Note:**

Only unscannable items can be approved as safe. Threats cannot be approved as safe.

Disk Details

Displays the partition layout of the scanned media.

The screenshot displays the ElementOne software interface. On the left, a sidebar shows navigation icons. The main area is titled 'Scan Result' with a sub-header 'Unscannable Items Found'. Below this, there are two tabs: 'Scan Details' and 'Disk Details'. The 'Disk Details' tab is active, showing a table of scanned partitions. The table has columns for Media Name, Label, Size, and Format. The first entry is 'Kingston DataTraveler 3.0 USB Device' with a label of 'C:\F-1', a size of 400 MB, and a format of NTFS. Below this, there is a section for 'Unsupported Partition' and a section for 'Unallocated Space'. The 'Unallocated Space' section shows a single entry for 'Kingston DataTraveler 3.0 USB Device' with a size of 115.1 GB.

Media Name	Label	Size	Format
1 Kingston DataTraveler 3.0 USB Device	C:\F-1	400 MB	NTFS

Media Name	Size
1 Kingston DataTraveler 3.0 USB Device	115.1 GB

- **Scanned Partition:** All supported partitions on the media.

Table 22. Scanned Partition Table View in Disk Details

Column Name	Definition	Example
Media Name	Media name	SanDisk Extreme USB
Label	Label of the partition	Data_disk
Size	Size of the partition	64MB, 32GB, 2TB
Format	Format of the partition	FAT16, FAT32, NTFS

- **Unsupported Partition:** These are non-Windows, hidden, or encrypted partitions.

Table 23. Unsupported Partition Table View in Disk Details

Column Name	Definition	Example
Media Name	Media name	SanDisk Extreme USB
Size	Size of the unsupported partition	64MB, 32GB, 2TB

- **Unallocated Space:** Available free space on the media.

Table 24. Unallocated Space Table View in Disk Details

Column Name	Definition	Example
Media Name	Media name	SanDisk Extreme USB
Size	Size of the free space	100MB, 250GB, 2TB

Sample Collection

The Sample Collection feature allows Safe Port to upload detected samples to ElementOne for further forensic analysis. When Safe Port scans files on a connected USB device and detects malware or unscannable items, the corresponding samples are sent to ElementOne, where users can download them for investigation and analysis.

Prepare

Before using the **Sample Collection** feature, complete the following steps:

1. Ensure the ElementConnect Disk is installed.

Make sure the **ElementConnect** disk is installed and added successfully.

Follow the steps below to add the ElementConnect disk to ElementOne:

- a. Shut down ElementOne.
- b. Create a disk with a minimum capacity of **200 GB** and attach it to ElementOne.
- c. Boot up ElementOne.
- d. Log in to the ElementOne vShell.
- e. Enter the following command to stop ElementOne:

```
$ elementone service stop
```

- f. Enter the following command to set up the ElementConnect local disk:

```
$ elementone elementconnect local setup
```

- g. Select the target disk and proceed with the setup.

```
Select a disk from the list below to designate it as the Element Connect disk:

1. /dev/sdc - 200.0 GB (available)
[-] /dev/sda - 100.0 GB (system disk)
[-] /dev/sdb - 20.0 GB (data disk)

Enter the number corresponding to your choice: 1

The disk "/dev/sdc" will be formatted and assigned to Element Connect disk. Proceed (y/n)? y

Device name: /dev/sdc
Element Connect disk status: mount
Disk capacity: 200.0 GB
Allocated space: 200.0 GB
Unallocated free space: 0.0 GB
```

- h. After the setup is complete, enter the following command to start ElementOne:

```
$ elementone service start
```

For the detailed disk installation instructions, refer to the **ElementOne Installation Guide** available on the MyTXOne Portal.

2. Enable Sample Collection in Safe Port Device Policy.

- a. From the left navigation menu, select **Device List > Safe Port**.
- b. Locate the target Safe Port device and click its Device Policy button.
- c. On the **Device Policy** page, enable the **Sample Collection** toggle and select one of the following collection scope options:
 - **All items** (malware and unscannable items)
 - **Malware only**
 - **Unscannable items only**

Collect Sample

Follow the steps below to download collected samples from Safe Port scan results:

1. From the left navigation menu, select **Logs > Safe Port Scans**.
2. Locate the target **Safe Port** device and click it to open the **Scan Result** page.
3. Click **Download Sample** in the upper-right corner to download the collected sample files.

Delete Safe Port Scan Logs


Allow deletion of Safe Port scan logs.



Note:

Please note this action cannot be rolled back; take careful consideration before confirming.

- 1. Tick the checkbox(es) to select the logs to delete.

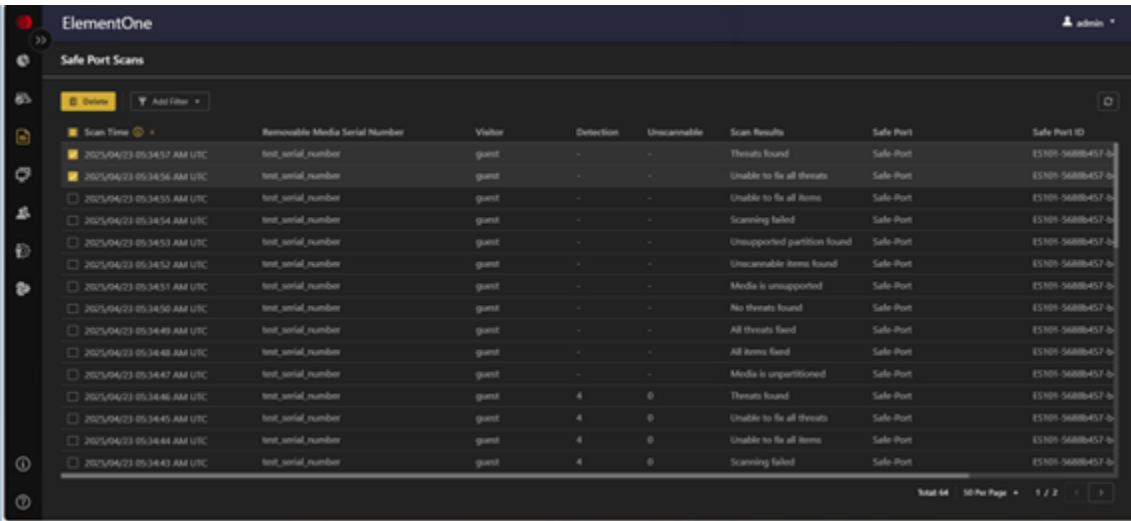

- 2. Click the “Delete” button, and “Confirm”.

Audit Logs Page


This page allows users to browse audit logs and system logs on ElementOne.



Note:

Only masteradmin and admins can browse this page.

1. Log in with either a master admin, admin, or group member user account, and navigate to the “Logs” icon on the menu.
2. Click “Audit Logs” to browse the Audit Logs page.

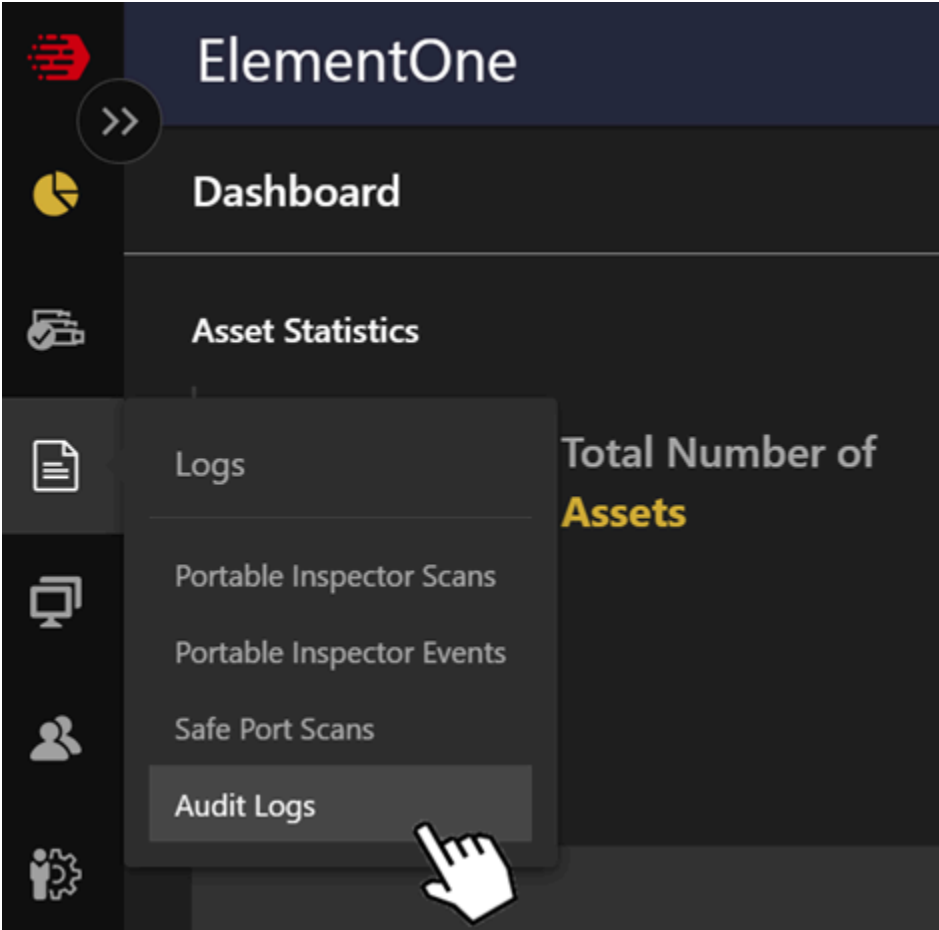

Column Name	Definition	Example
Time	The time when the activity occurred	2023/10/18 09:28:06 AM GMT+8
Severity	The severity level of the log	When the result is “Succeeded”: Info
		When the result is “Failed”: Error

Column Name	Definition	Example
User ID	The user account associated with the log	When the log represents the activity of the logged-in user: admin
		When the log represents the activity of system: -
Client IP	The client IPv4 address associated with the log	When the log represents the activity of a specific user: 192.168.3.101
		When the log represents system activity: -
Result	The action result of the log	When the activity is completed: Succeeded
		When the activity fails: Failed
Message	The detail message of the log	The user attempted to log in to the system. The user attempted to enable proxy (host: 1.2.3.4; port: 80).

Filters and Sorting

Sorting

On the Device List page, Scan Logs page, Portable Inspector Events page, Audit Logs page, and Assets page, users can sort data by clicking on the column header to sort the data in ascending or descending order.



Note:

Not all columns can be sorted.

This is an example on the Device List page:

1. On the Device List page, navigate to the group that contains the sub-groups and devices you want to browse.

The default sort column is the “Name” column, displayed in ascending order, and you will see the arrow icon facing up on the right side of the column.

When displayed in descending order, you will see the arrow icon facing down on the right side of the column.

Sort the “Name” column in ascending order.

Name	Device ID	Device Policy	Lock Policies	Last Sync Time	Last Update Time
Group1	-	Inherited	-	-	-
Group2	-	Inherited	-	-	-
Pi Pro (renamed)	220	Inherited	-	-	-

Clicking the “Name” column allows you to toggle the sorting order between ascending and descending.

2. After updating the policy of Group1 from Inherited to Custom, click the “Device Policy” to sort by Device Policy.

Sort the “Device Policy” column in ascending order.

Name	Device ID	Device Policy	Lock Policies	Last Sync Time	Last Update Time
Group1	-	Custom	-	-	-
PI Pro (renamed)	220	Inherited	-	-	-
Group2	-	Inherited	-	-	-

Filters


On the Device List page, Scan Logs page, Portable Inspector Events page, Audit Logs page, and Assets page, filters are provided to help users filter specific items.

This is an example on the Device List page:


1. On the Device List page, navigate to the group that contains the sub-groups and devices you want to browse.

Click “Add Filter”.


2. Select the filter you want to apply.

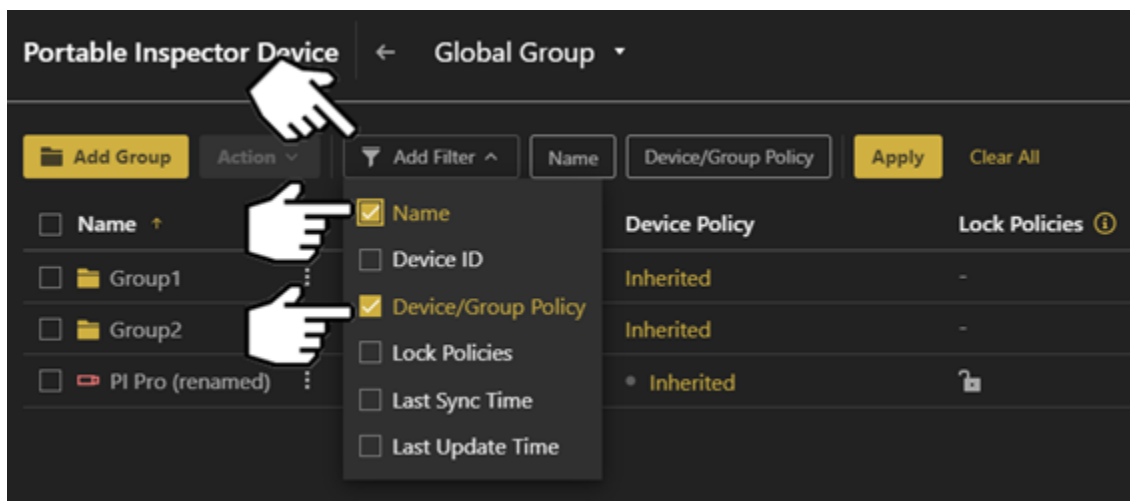

3. Click the filter.
4. Input the name you want to filter.
5. Click the “Magnifier” icon to save.

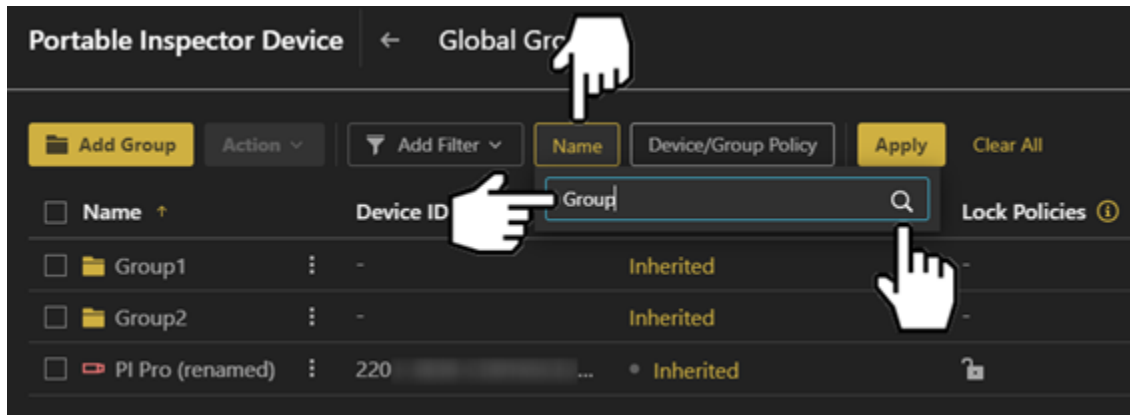

6. Click the filter.
7. Select the value you want to filter.
8. Click “Apply” to apply the filter.

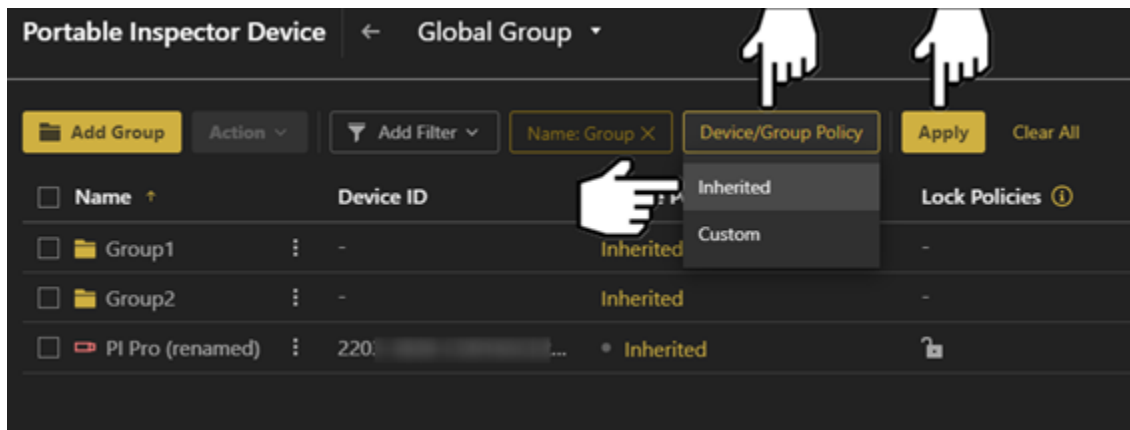

9. After applying the filter, the sub-groups or devices that match the filter criteria will be displayed on the page.
10. Click “Clear All” to clear the applied filter.
11. After “Clear All” is clicked, the applied filter will be removed and all sub-groups and devices under the current group will be displayed.

Assets

The **Assets** page provides centralized visibility into scanned endpoints and their security status. It allows users to review asset information collected by Portable Inspector and Virtual Portable Inspector, analyze vulnerability assessment results provided by the Vulnerability Detection Service (VDS), and track changes across scan logs over time, and monitor vPI seat usage.

From this page, users can:

- Review asset details and vulnerability results
- Compare scan logs using baseline or default comparison
- View historical scan records
- View vPI seat usage
- Export Equipment Security Inspection Reports
- Manage asset names and synchronization settings
- Remove assets when necessary

**Note:**

The current vPI seat usage is displayed in the upper-right corner of the page. vPI seat usage is calculated based on the number of unique assets scanned by vPI devices. When 80% of the licensed vPI seats have been used, a warning message is displayed. If the number of used seats exceeds the licensed limit, a warning banner is displayed at the top of the page. In addition, some asset information and scan results may not be displayed for assets scanned after the seat limit is reached.

Role Permissions

- **Administrators / Group Supervisors:** Can view asset details, compare scan logs, export reports, rename assets, synchronize asset names from the Portable Inspector console, and remove assets from ElementOne.
- **Group Viewers:** Can view asset details, compare scan logs, and export reports for assets within their assigned groups.

Vulnerability Detection Service

The Vulnerability Detection Service (VDS) is a feature of ElementOne that provides automated vulnerability detection for assets.

After a Portable Inspector uploads asset information to ElementOne, VDS analyzes the collected data to identify known vulnerabilities associated with the asset. By leveraging VDS, users can proactively detect and address security risks, helping ensure that assets remain protected against potential threats.

View and Analyze Assets

This section describes how to view and analyze scanned assets on the **Assets** page. It focuses on browsing asset information, reviewing vulnerability assessment results, and comparing scan logs over time.

Asset data is collected by Portable Inspector and Virtual Portable Inspector, and uploaded to ElementOne. Vulnerability analysis is performed by the Vulnerability Detection Service (VDS).

From this section, you will learn how to:

- Browse assets using the left-pane asset list
- Filter and locate specific assets
- Review asset details under the Overview tab
- Compare scan logs using default or baseline comparison
- View the latest scan results
- Review historical scan logs under the History tab

The Assets page uses a two-pane layout:

- The **left pane** displays the asset list.
- The **right pane** displays detailed information for the selected asset.

Asset List Pane (Left)

The **left pane** lists all scanned assets within the current group scope.

- The **total number of assets** is displayed at the top of the list.
- Assets are listed by **alias name** (if configured) or by their system identifier.
- Click an asset to load its details in the right pane.

Asset Identification Display

When an asset is selected:

- The **asset alias name** is shown at the top of the right pane.
- The **hostname** appears next to the alias name.
- If the asset was scanned by a Virtual Portable Inspector (vPI) device, a **Collected by vPI** icon is displayed next to the hostname.
- If no alias name is configured, a hyphen (-) is displayed.

Asset Filtering

To narrow the displayed assets:

1. Click **Add Filter** above the asset list.
2. Select one or more filter conditions.
3. Click **Apply**.
4. The asset list updates to display only matching assets.
5. Click **Clear All** to remove all applied filters and return to the full list.

Asset Timestamps

Two key timestamps are shown below the asset name:

• Last Asset Info Collection Time

The date and time when asset information was last collected on the endpoint and uploaded by Portable Inspector.

This timestamp reflects the **asset's local system time**.

• Latest Vulnerability Assessment Time

The date and time when ElementOne most recently analyzed the uploaded asset data against the vulnerability database.

This assessment is performed by the Vulnerability Detection Service (VDS) and may occur after data collection.

Asset Overview Pane (Right)

When an asset is selected, its details are displayed in the **Overview** tab by default.

**Note:**

Click the **Refresh** icon in the upper-right corner to refresh the page and display the latest information.

**Note:**

The current vPI seat usage is displayed in the upper-right corner of the page. vPI seat usage is calculated based on the number of unique assets scanned by vPI devices. If the number of used seats exceeds the licensed limit, asset details for assets scanned after the seat limit is reached are not displayed.

Overview – Comparison View

The **Overview** tab opens in **View Comparison** mode by default. This mode compares scan logs to highlight changes over time.

By default:

- If **no baseline log** is set, ElementOne compares the **two most recent scan logs**.
- If a **baseline log** is set, ElementOne compares the **baseline log** with the **latest scan log**.

Users can switch view modes using the **Select View** button:

- **View Comparison** (default)
- **View Latest Log**
- **View Baseline Log**

This section focuses on **View Comparison**.

Comparison Summary Panel

The summary panel displays counts for four categories:

- **New Vulnerabilities**
- **Asset Changes**

- **App Changes**
- **Detections**

Selecting a category opens its corresponding detail tab.



Note:

If no scan log or only one scan log exists for an asset, the Comparison view cannot perform a comparison.

- The **New Vulnerabilities**, **Asset Changes**, and **App Changes** tabs will display **empty data**, and the total number shown for each tab will be **0**.
- The **Detections** tab behaves differently. Because it does not represent changes between scan logs, detected threats and their total number will still be displayed if any detections are found.

New Vulnerabilities

New Vulnerabilities tab displays vulnerabilities newly identified by Vulnerabilities Detection Service (VDS) between the compared scan logs.

- If no baseline is set, the comparison is between the two most recent logs.
- If a baseline is set, the comparison is between the baseline and the latest log.

Col- umn	Description	Example
Vul- nera- bilities	The common identifier for publicly known infor- mation security vulnerabilities.	CVE-2022-30133
CVSS 3	The Common Vulnerability Scoring System (CVSS) 3.0 score of the vulnerability.	9.8
Ap- plica- tion / OS	The name of the application or operating system that the vulnerability affects.	Windows 7 for x64-based System Service Pack 1

Col- umn	Description	Example
Af- fected Ver- sion	The affected product version range.	Older than 8.44
Reme- dia- tion	Recommended actions when vulnerabilities are detected. Remediation may be listed in one of these formats: • KB with a Microsoft Update Catalog link • Fixed Version • KB link and Fixed Version • Use any version except the affected ones • Contact the application vendor	Update to Version 10.0.19043.1880 or install the required update from the Microsoft Update Catalog.

Asset Changes

Asset Changes Tab displays configuration and system attribute differences between compared scan logs.

If any item differs:

- Two columns are shown: **Baseline** and **Differences from Baseline**
- Differences are highlighted in **bold yellow text** with a "*" indicator

Below are the fields included in the Asset Changes comparison:

Field	Description	Example
Log Received Time	The time when ElementOne received the scan log	2023/10/18 09:28:06 AM GMT+8
Device Name	User-friendly name of the device.	Portable Inspector 1
Device ID	The ID of the device that scanned the asset.	2203-3839-BE0107001CDB1B2000001
Hostname	The hostname of the asset.	Arizona-1
Domain Name	The domain name of the asset.	ball-montes.com

Field	Description	Example
MAC/IP Address	MAC and IP addresses of all installed interfaces.	5F:C9:EE:85:0B:F3 / 192.168.1.230
Operating System	Detailed operating system description of the asset.	Microsoft Windows 7 Enterprise Edition Service Pack 1 (build 7601), 64-bit
OS Type	Operating system type.	Windows Linux
OS Version and Build	Operating system version/build number.	Microsoft Windows 7 (6.1.7601)
OS Service Pack	Service pack information (if applicable).	-
OS Product ID	OS product identifier (if applicable).	00331-20300-00000-AA449
OS Language	Operating system language.	en-US
OS Installed Date	OS install date.	2022/09/30 11:58:11 PM GMT+8
Vendor Name	Asset hardware vendor name.	Dell Inc.
HW Model	Hardware model.	OptiPlex 9020
HW Serial Number	Hardware serial number.	CD1WJ82
BIOS Version	BIOS version of the asset.	American Megatrends Inc. 8922050A.05, 2/19/2019
BIOS Type	BIOS type.	UEFI
Secure Boot	Secure Boot configuration.	Disabled
CPU	CPU name.	Intel(R) Xeon(R) CPU E5-2690 v4 @ 2.60GHz
CPU Architecture	CPU architecture.	X64
Processors	Total number of processors.	4
Cores	Total number of CPU cores.	4

Field	Description	Example
Physical Memory	Total visible physical memory.	8388608 KB
Available Memory	Free physical memory during scanning.	3345679 KB
Windows Directory	Directory where Windows is installed.	C:\WINDOWS
System Directory	Directory where Windows system files are located.	C:\WINDOWS\system32
System Drive Capacity	Capacity of the drive where the OS is located.	120 GB
System Drive Free Space	Free space on the system drive.	101 GB
Boot Drive	Drive containing the operating system.	\Device\HarddiskVolume2
Time Zone	Time zone of the asset.	UTC +08:00
Asset Info Collection Time	System date/time collected from the asset (RFC 3339 format).	2023-11-02T00:29:31Z
Logged-in Account	Logged-in user name during scanning.	tester-0001
Logged-in Domain	Logged-in domain during scanning.	DomainName.Chennai-B.org
IE Version and Build	Internet Explorer version/build (if applicable).	11.789.19041.0
IE Service Pack	Internet Explorer service pack (if applicable).	KB4018271
IE Update Version	Internet Explorer update version (if applicable).	11.0.1000

App Changes

The **App Changes** tab displays application-level differences detected between the compared scan logs. It highlights **newly installed applications** and **removed applications**, helping users understand software changes on the asset over time.

- If no baseline log is set, ElementOne compares the **two most recent scan logs**.
- If a baseline log is set, ElementOne compares the **baseline log** with the **latest scan log**.
- The **total number of new apps and removed apps** is shown above the table.

Column Name	Description	Example
Name	The application name detected on the asset	Microsoft OneDrive
Version	The application version	25.031.0217.0003
Installed Date	The date and time when the application was installed on the asset	2025/03/18 12:00:00 AM

Detections

The **Detections** tab differs from the other tabs in the Comparison view. Instead of showing differences between scan logs, it displays **threats detected on the asset** during scanning.

Column Name	Description	Example
Threat Name	The name of the detected threat	Eicar
File Path	The full path of the file where the threat was detected	C:\Program Files (x86)\Intel\ecar.txt
Result	The action taken or scan result for the detected threat	Fixed
SHA-256	The SHA-256 hash value of the detected file	275A021BBFB6489E54D471899F7D-B9D1663FC695EC2FE2A2C4538AABF651FD0F

Reset to Default Comparison

If a baseline log has been set and comparison results are currently shown against that baseline, you can reset the comparison to the system default.

By default, ElementOne compares the **two most recent scan logs** of the selected asset.

You can reset to the default comparison using one of the following methods:

- **Path 1:**

Click **Reset to Default Comparison** under the **Overview** tab on the **Assets** page.

- **Path 2:**

Click the **Set latest record as baseline** icon in the upper-right corner under the **Overview** tab.

- **Path 3:**

Under the **History** tab, the baseline log is pinned at the top of the log list.

Click the **Reset to Default Comparison** icon in the pinned log row to clear the current baseline setting and restore the default comparison (the two most recent scan logs).

This action clears the custom baseline comparison and restores the default behavior of comparing the two most recent logs.

Overview – Latest Log View

Click the **Select View** icon in the upper-right corner of the **Assets** page under the **Overview** tab, and select **View Latest Log** to switch from the default **Comparison** view to the **Latest Log** view.

In **Latest Log view**, the overview pane displays the results from the **most recent scan log** of the selected asset. The information is organized into four tabs:

- **Vulnerabilities**

- **Asset Changes**

- **App Changes**

- **Detections**

The total count for each result is displayed below the corresponding tab label.

Unlike the Comparison view, this view shows the **current state of the asset** based on the latest scan only and does not compare results against a baseline or previous scan logs.

Vulnerabilities

The **Vulnerabilities** tab displays all vulnerabilities identified on the selected asset by the Vulnerability Detection Service (VDS) based on the most recent scan log.

Vulnerabilities are organized by severity level into four expandable sections:

- **Critical Severity**
- **High Severity**
- **Medium Severity**
- **Low Severity**

The total number of vulnerabilities in each severity level is displayed next to the severity label (for example, *Critical Severity: 5*).

Each severity section contains a table. The column definitions in each table are the same as those described in the [New Vulnerabilities \(on page 120\)](#) section.

Assets

The **Assets** tab displays the full configuration and system attributes of the selected asset based on the most recent scan log.

This tab presents detailed asset information in a structured **Asset Details** panel, including device identification, operating system information, hardware specifications, system configuration, and environment details.

The definitions of the fields shown in this tab are consistent with those described in the [Asset Changes \(on page 121\)](#) section.

Apps

The **Apps** tab displays all applications installed on the selected asset based on the most recent scan log.

Column Name	Definition	Example
Name	The name of the application installed on the asset.	Microsoft SQL Server 2008 Browser
Publisher	The publisher or vendor of the application.	Microsoft Corporation
Size	The total size of the application installed on the asset.	8138 KB
Version	The version number of the installed application.	10.0.1600.22
Installed Date	The date and time when the application was installed on the asset.	2023/10/18 09:28:06 AM

Detections

The **Detections** tab displays threats detected on the asset during the most recent scan.

Column Name	Description	Example
Threat Name	The name of the detected threat	Eicar
File Path	The full path of the file where the threat was detected	C:\Program Files (x86)\Intel\eicar.txt
Result	The action taken or scan result for the detected threat	Fixed
SHA-256	The SHA-256 hash value of the detected file	275A021BBFB6489E54D471899F7D-B9D1663FC695EC2FE2A2C4538AABF651FD0F

Overview – Baseline Log View

If a scan log has been set as the baseline, you can click the **Select View** icon in the upper-right corner of the **Assets** page under the **Overview** tab, and select **View Baseline Log** to view the baseline scan results.

**Note:**

- If no baseline log has been set, the system automatically uses the latest scan log as the default baseline.
- In this case, the **View Baseline Log** option is not available.

In **Baseline Log View**, the Overview pane displays the scan results of the selected baseline log.

The information is organized into four tabs:

- **Vulnerabilities**
- **Asset Changes**
- **App Changes**
- **Detections**

The total number of results for each category is displayed below the corresponding tab label.

The structure and column definitions of the four tabs are the same as described in [Overview – Latest Log View \(on page 125\)](#).

Unlike Comparison View, **Baseline Log View**:

- Displays data from a single scan log (the selected baseline log)
- Does not compare results against another scan log
- Reflects the asset state at the time the baseline scan was performed

History – View Historical Scan Logs

Click the **History** tab in the upper-right corner of the **Assets** page to switch from the Overview tab to the History view.

The History tab displays all historical scan logs for the selected asset (selected from the left pane). Each row represents one scan record and provides detailed scan and vulnerability assessment results.

Column Name	Definition	Example
Asset Info Collection Time	The date and time when asset information was collected from the endpoint. The timestamp is displayed in RFC 3339 format and reflects the asset's local system time.	2025/12/22 04:42:18 PM
Scan Result	The scan outcome reported by Portable Inspector. Possible results include: • No threats found • 1 threat found • Scan suspended	No threats found
Installed Apps / Packages	The total number of applications (Windows) or packages (Linux) detected during the scan.	3
Installed Updates (Windows)	The total number of installed Windows updates detected during the scan. (Windows only)	25
Last Assessment	The date and time when ElementOne last analyzed the asset's uploaded data against the vulnerability database. This assessment is performed by the Vulnerability Detection Service (VDS).	2026/02/10 04:42:18 PM
Critical Vulnerabilities	The total number of critical vulnerabilities identified on the asset. According to NVD, a vulnerability is considered Critical when its CVSS 3.0 score is higher than 8.9. (Provided by VDS.)	2
High Vulnerabilities	The total number of high-severity vulnerabilities identified on the asset. (Provided by VDS.)	3
Medium Vulnerabilities	The total number of medium-severity vulnerabilities identified on the asset. (Provided by VDS.)	5
Low Vulnerabilities	The total number of low-severity vulnerabilities identified on the asset. (Provided by VDS.)	8

Customize Table View

You can customize the table to control which columns are displayed and their order.

Click **Customize Table** in the upper-right corner of the **History** tab to display or hide specific columns..

- **Select Columns**

- Select the checkboxes for the columns you want to display.
- Clear the checkboxes to hide columns.
- Click **Confirm** to save changes.
- Click **Back to default** to restore the default table layout.

- **Rearrange Columns**

- Click and hold a column row.
- Drag it to the desired position.
- Click **Confirm** to save changes.
- Click **Back to default** to restore the default order.



Note:

- By default, the table view includes all columns **except** *Medium Vulnerabilities* and *Low Vulnerabilities*.
- Click a column header to sort the logs in ascending or descending order based on that column.

View Log Details

In the **History** tab, click a scan log to review detailed scan information.

The log details page contains the following tabs:

- **Vulnerabilities**
- **Asset Details**

- **App Info**
- **Update Info**

For column definitions and examples in the following tabs, refer to the corresponding sections:

- **Vulnerabilities:** Refer to the table in [New Vulnerabilities \(on page 120\)](#).
- **Asset Details:** Refer to the table in [Asset Changes \(on page 121\)](#).
- **App Info:** Refer to the table in [Apps \(on page 126\)](#).

Update Info Tab

The **Update Info** tab displays installed updates on the asset.

Column Name	Definition	Example
Update Name	The name of the update installed on the asset.	Service Pack 2 for SQL Server 2016 (KB4052908) (64-bit)
Program	The name of the program affected by the update.	Microsoft SQL Server 2016 (64-bit)
Version	The version number of the program associated with the update.	13.2.5026.0
Publisher	The publisher of the update.	Microsoft Corporation
Installed Date	The date and time when the update was installed. This timestamp reflects the local time of the asset.	2022/01/19 12:00:00 AM



Note:

- Click **Export** in the upper-right corner to export the report.
- Click **X** in the upper-left corner to exit the log details page.

Scan Result

In the **Scan Result** column under the **History** tab, you can click the scan result link to open the result detail page.

The Scan Result page provides comprehensive information about the selected scan record, including scan metadata, device information, asset information, scan configuration, and scan outcome.

Refer to [Portable Inspector Scans > Views \(on page 81\)](#) for detailed definitions of all fields and examples shown on the Scan Result page.

**Note:**

- Click **Export** in the upper-right corner to export the report of Scan Result.
- Click **Close** to exit the Scan Result Detail page.

Export Report

To export a report for one or more scan logs:

1. In the **History** tab, select the checkbox next to the desired log entry.
2. The **Export** icon appears in the upper-right corner.
3. Click the **Export** icon to generate the report.

You can select multiple logs to export multiple reports at the same time.

The total number of selected logs is displayed when you select the checkboxes.

You can uncheck the selected log(s) or click the **X** next to the total number of selected logs to cancel the export selection.

History – Set a Log as Baseline

You can select a historical scan log as the baseline for comparison.

Steps:

1. Switch to the **History** tab in the upper-right corner of the Assets page.
2. Select an asset from the left pane.

3. Hover over the desired log. The **Set as Baseline** icon appears.
4. Click the **Set as Baseline** icon.
5. Click **Confirm** in the confirmation dialog box.
6. The selected log is pinned at the top of the log list as the baseline.
7. Switch to the **Overview** tab in the upper-right corner of the Assets page to review comparison results based on the selected baseline.

**Note:**

- To revert to the default comparison (which compares the two most recent logs), refer to [Reset to Default Comparison \(on page 125\)](#).
- If a baseline log is already set and you want to select a different log as the baseline, first reset to the default comparison, then select the new log as the baseline.

Export Equipment Security Inspection Report

This function allows users to generate an Equipment Security Inspection Report from the Assets page. Reports can be exported from either the **Overview** tab or the **History** tab, depending on whether you want to generate a report based on the asset's **current** state or a specific **historical** scan log.

1. Export the Current Report of a Single Asset (Overview Tab)

- **Path 1:**

1. From the left asset list, select the desired asset.
2. Click the **Export** icon that appears above the asset list.
3. An **Export Equipment Security Inspection Report** window appears, allowing you to select the file format (**PDF** or **CSV**) and choose additional content, beyond the basic information, to include in the report.

The available additional content options include:

- **Asset Details**
- **Apps Info**
- **Update Info**

- **Vulnerabilities**

- **Last Scan Result**

4. After selecting the desired format and content, click **Export** to generate the report.

- **Path 2:**

1. From the left asset list, select the desired asset.
2. Click the **Export** icon in the upper-right corner of the Assets page.
3. An **Export Equipment Security Inspection Report** window appears, allowing you to select the file format (**PDF** or **CSV**) and choose additional content, beyond the basic information, to include in the report.

The available additional content options include:

- **Asset Details**

- **Apps Info**

- **Update Info**

- **Vulnerabilities**

- **Last Scan Result**

4. After selecting the desired format and content, click **Export** to generate the report.

2. Export Current Reports of Multiple Assets (Overview Tab)

1. From the left asset list, select multiple assets.
2. The total number of selected assets and an **Export** icon will appear above the asset list.
3. Click the **Export** icon.
4. An **Export Equipment Security Inspection Report** window appears, allowing you to select the file format (**PDF** or **CSV**) and choose additional content, beyond the basic information, to include in the report.

The available additional content options include:

- **Asset Details**

- **Apps Info**

- **Update Info**
- **Vulnerabilities**
- **Last Scan Result**

5. After selecting the desired format and content, click **Export** to generate the report.



Note:

- When at least one asset is selected, a **Select All** option appears. Click **Select All** to export reports for all listed assets.
- To cancel selection, uncheck the selected assets or click the **X** next to the total number of selected items.

3. Export a Historical Log Report of a Single Asset (History Tab)

• **Path 1:**

1. From the left asset list, select the desired asset.
2. In the historical log list, click the desired log row to open the log details page.
3. Click the **Export** button in the upper-right corner.
4. An **Export Equipment Security Inspection Report** window appears, allowing you to select the file format (**PDF** or **CSV**) and choose additional content, beyond the basic information, to include in the report.

The available additional content options include:

- **Asset Details**
- **Apps Info**
- **Update Info**
- **Vulnerabilities**
- **Last Scan Result**

5. After selecting the desired format and content, click **Export** to generate the report.

• **Path 2:**

1. From the left asset list, select the desired asset.
2. In the historical log list, select the checkbox next to the desired log.
3. Click the **Export** icon in the upper-right corner.
4. An **Export Equipment Security Inspection Report** window appears, allowing you to select the file format (**PDF** or **CSV**) and choose additional content, beyond the basic information, to include in the report.

The available additional content options include:

- **Asset Details**
- **Apps Info**
- **Update Info**
- **Vulnerabilities**
- **Last Scan Result**

5. After selecting the desired format and content, click **Export** to generate the report.

4. Export Reports of Multiple Historical Logs (History Tab)

1. From the left asset list, select the desired asset.
2. In the historical log list, select the checkboxes of the desired logs.
3. The total number of selected logs and an **Export** icon will appear in the upper-right corner.
4. Click the **Export** icon.
5. An **Export Equipment Security Inspection Report** window appears, allowing you to select the file format (**PDF** or **CSV**) and choose additional content, beyond the basic information, to include in the report.

The available additional content options include:

- **Asset Details**
- **Apps Info**

- **Update Info**
- **Vulnerabilities**
- **Last Scan Result**

6. After selecting the desired format and content, click **Export** to generate the report.

**Note:**

To cancel selection, uncheck the selected assets or click the **X** next to the total number of selected items.

Rename Asset

**Note:**

Only **Admin** and **Group Supervisor** roles can perform this action.

In the asset list (left pane of the **Assets** page), each asset displays a **Sync Asset Name from PI** status (Enabled or Disabled).

- **Disabled:** You can rename the asset directly in ElementOne. Changes made in the Portable Inspector console will **not** be synchronized to ElementOne.
- **Enabled:** The asset name in ElementOne will automatically synchronize with the name configured in the Portable Inspector console.

Rename an Asset in ElementOne

Use this method when the **Sync Asset Name from PI** function is **disabled**.

1. In the asset list (left pane), hover over the desired asset.
2. Click the **pencil icon** that appears.
3. Enter the new asset name.
4. Click **Confirm**.
5. The updated name is applied immediately in ElementOne.

Rename an Asset through the Portable Inspector Console

Use this method when the **Sync Asset Name from PI** function is **enabled**.

1. In the asset list, verify that the **Sync Asset Name from PI** icon shows **Enabled**.

**Note:**

If it is disabled, click the icon to enable synchronization.

2. Rename the asset from the Portable Inspector console.

**Note:**

Refer to the *Portable Inspector User's Guide* for detailed steps.

3. After synchronization, the updated asset name will automatically appear in ElementOne.

Enable Sync Asset Name from Portable Inspector (Bulk Update)

If you want to change the **Sync Asset Name from Portable Inspector** status for multiple assets at the same time:

1. In the asset list (left pane), select the checkbox(es) next to the desired assets.

The total number of selected assets and the **Sync Asset Name from PI** icon will appear at the top of the list.

2. Click the **Sync Asset Name from PI** icon and select **Enable**.
3. The **Enabled** status will be displayed next to the selected assets in the list.

Remove Asset

**Note:**

- Only **Admin** and **Group Supervisor** roles can perform this action.
- Removing an asset cannot be undone. Make sure you no longer need the asset or its scan history before proceeding.

This action deletes the selected asset(s) and their associated scan logs from ElementOne.

Steps:

1. In the asset list (left pane), select the checkbox(es) next to the asset(s) you want to remove.

The total number of selected assets and the **Remove** icon appear at the top of the list.

2. Click the **Remove** icon.
3. Click **Confirm** in the confirmation dialog box.

User Account Management

This page allows users to browse and manage user accounts on ElementOne.

**Note:**

Only masteradmin and admins can browse this page.

Log in with either a master admin or admin user account, navigate to the “Account Management” icon on the menu, and then click to browse the Account Management page.



ElementOne User Account Role

Masteradmin and Admins

A master admin is the default admin of ElementOne and is provided with the following privileges. (The privileges below are also granted to admin user accounts.)

- ElementOne Management:
 - Configuring system settings.
 - Generating password for device activation.
- Account Management
 - Creating/modifying/deleting user accounts.
- Log Management
 - Importing/viewing Scan Logs, Portable Inspector Events, Asset Logs, and Audit Logs.
- Asset Risk Assessment
 - Dashboard access.
- Device/Group Management
 - Managing device group members.
 - Managing device/group policy.
 - Creating/moving/ungrouping groups.
 - Moving devices.

Group Member

Group members are provided with the following privileges.


- The privilege of viewing Scan Logs and Portable Inspector Events of the groups assigned to them and the devices within the groups.
- The privilege of being appointed as group supervisors/viewers of device groups:
 - Group Supervisors:
 - Manage groups assigned to them.
 - Manage devices within those groups.
 - Group Viewers:
 - View groups assigned to them.
 - View devices within those groups.

Add User Account

This function allows users to add new user accounts with admin or group member roles. Factory owners, managers, and operators can use these user accounts to browse or manage the devices and scan logs on ElementOne.

Add a Single Account

1. On the Accounts Management page, click “Add”.

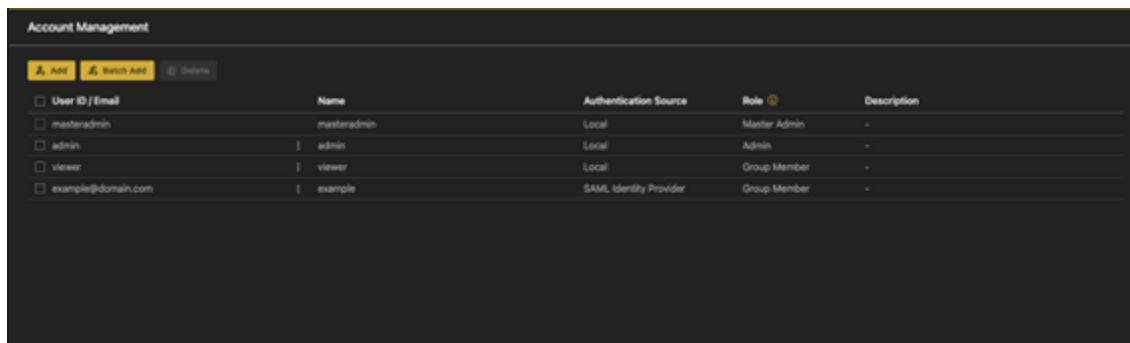

2. Select “SAML Identity Provider” and input the email address to create an SSO profile.



Note:

The user ID must be all lowercase, between 1 and 64 characters in length, cannot contain commas, and cannot be identical to any existing user.

3. Type in the user’s name.
4. Select a role.
5. Input description.



Note:

The description must be between 0 and 256 characters in length.

6. Click “Confirm”.
7. (For Local authentication) After successfully adding the user, you need to send the user account ID and temporary password to the user.

Clicking the “copy” icon in front of the password will copy the temporary password to the clipboard.

8. Click “OK” to close this window.


Add Batch Multiple SSO Profiles

1. Click "Batch Add".
2. Type or paste a comma-separated list of emails into the corresponding fields based on the assigned role, then click "Confirm".

Edit User Account

This function allows users to edit existing user accounts to change roles and modify the description.

1. On the Account Management page, find the user that you want to modify, click the "Menu" icon.
2. Click "Edit".

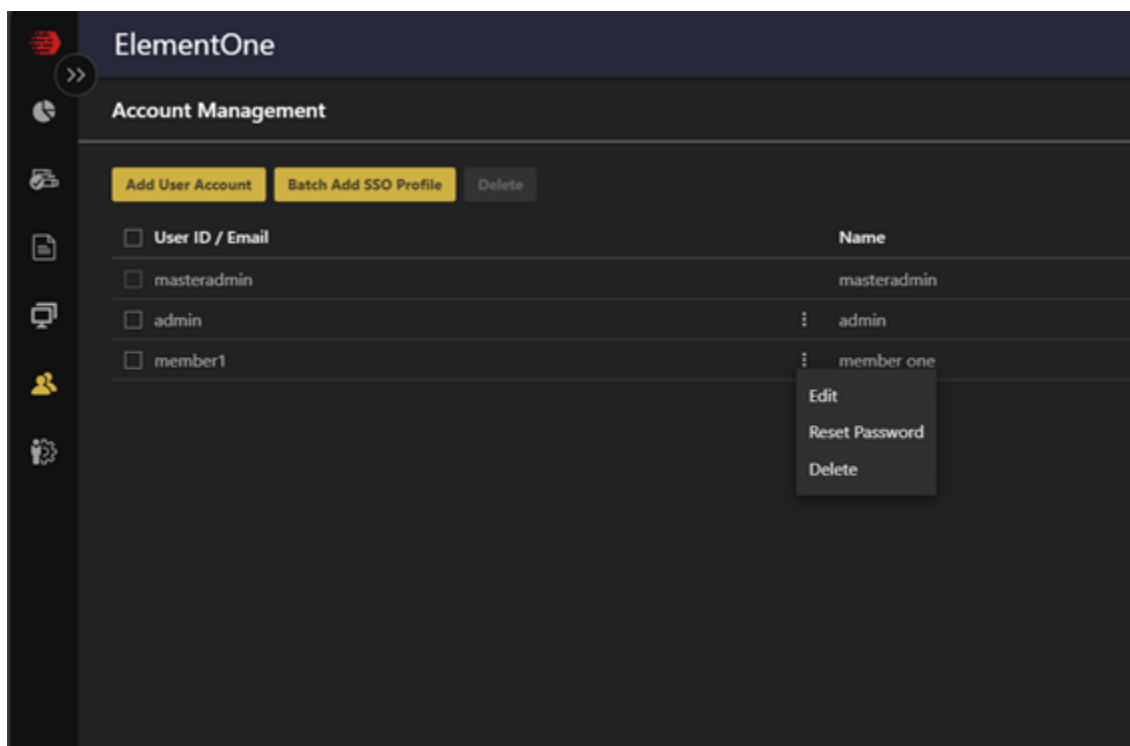

3. Modify the account details.

**Note:**

The description must be between 0 and 256 characters in length.

4. Click "Confirm".
5. After "Confirm" is clicked, ElementOne will display a notification indicating that the user account has been successfully updated.


**Note:**

- The user account will be logged out after the user account has been successfully edited.
- Master admin user account cannot be edited.

Change Password

This function allows users to change their password.

1. On ElementOne, click your user account name located at the top right corner of the browser.
2. Click "Change Password".

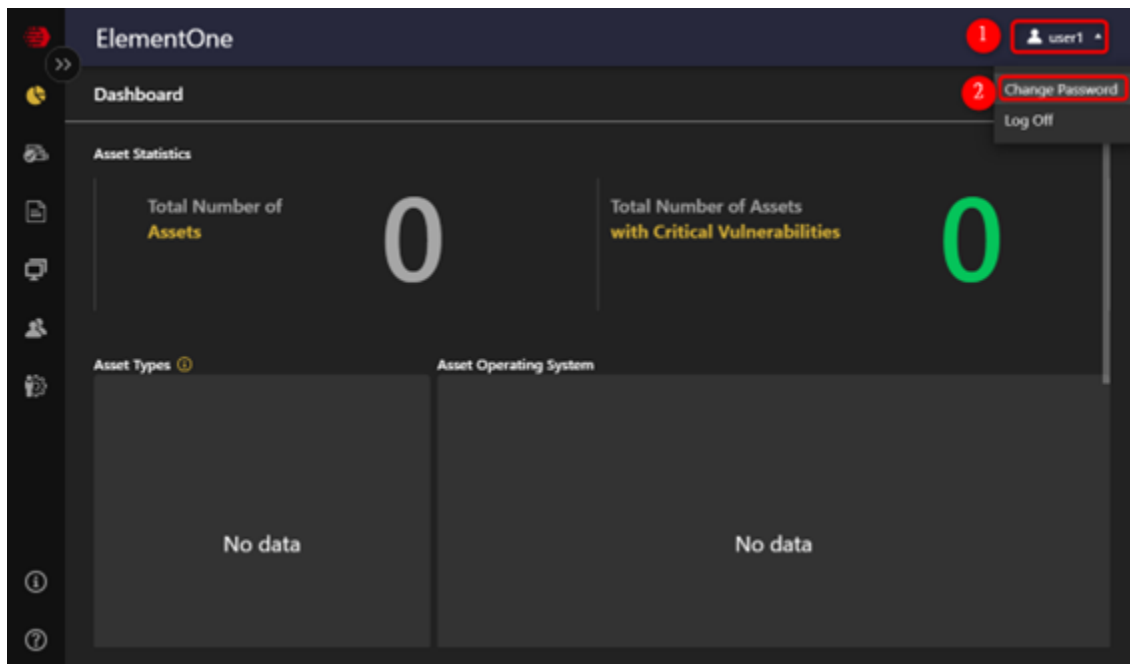

3. Input current password, new password, and confirm password.

**Note:**


The new password must be between 8 and 64 characters in length and cannot be identical to the current password.

4. Click "Confirm".
5. After "Confirm" is clicked, you will be logged out from ElementOne. This confirms that your password has been successfully changed. You will then need to log in again using your new password.

Reset Password

This function allows users to reset an existing user account's password. When someone forgets their password, other admins can use this function to reset and generate a new temporary password.

1. On the Account Management page, find the user that you want to reset, and click the "Menu" icon.
2. Click "Reset Password".

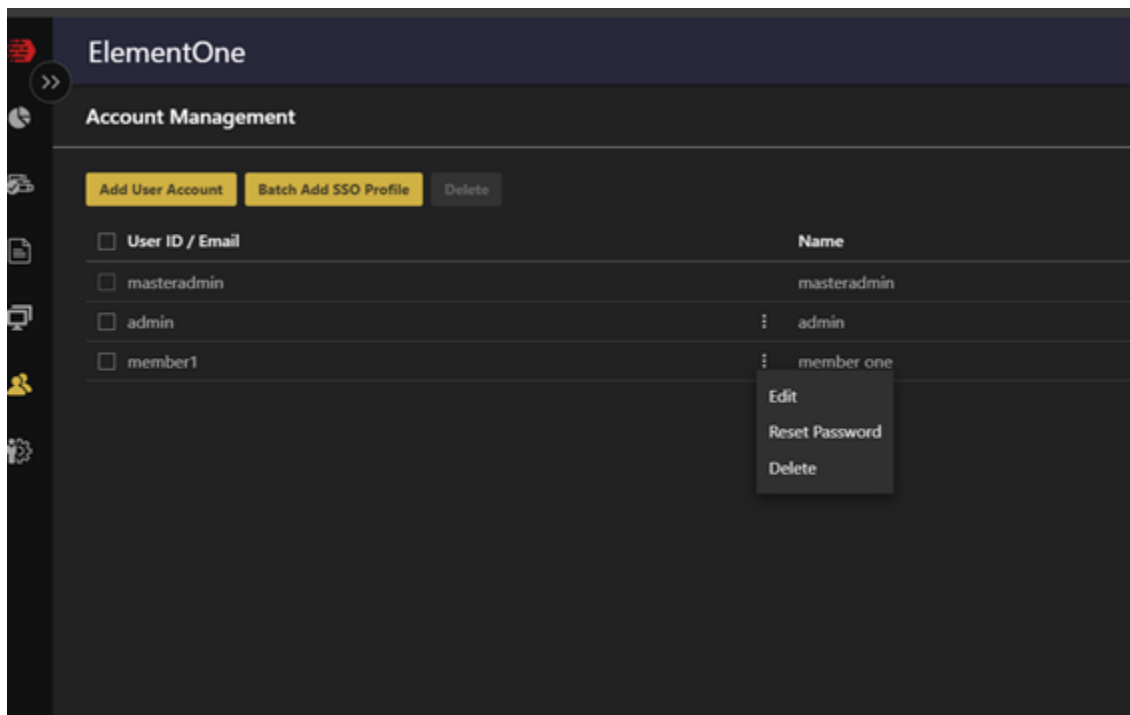

3. Check that the user account is the correct one whose password you want to reset, and then click "Confirm".
4. After successfully resetting the user account's password, you need to send the temporary password to the real user.

5. Clicking the “Copy” icon will copy the temporary password to the clipboard. Click “OK” to close this window.


**Note:**

The user account will be logged out after the password has been successfully reset.

Delete User Account

This function allows users to delete an existing user.

1. On the Account Management page, find the user that you want to delete, and click the “Menu” icon.
2. Click “Delete”.

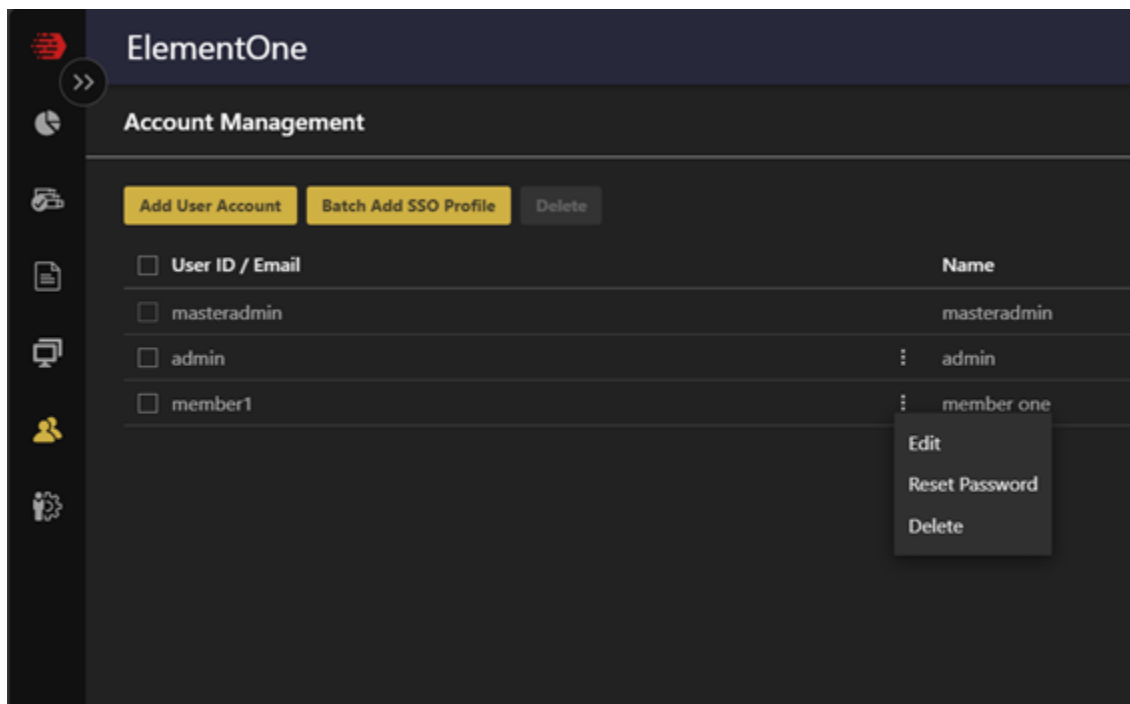

3. Make sure the user ID is correct, input “DELETE” in the field.
4. Click “Confirm”.
5. After “Confirm” is clicked, ElementOne will display a notification indicating that the user account has been successfully deleted.


**Note:**

- The user account will be logged out after the user account has been successfully deleted.
- Master admin user account cannot be deleted.

Additional Capabilities

You can perform bulk delete to delete multiple user accounts.

1. On the Account Management page, find the users that you want to delete, and select them with the checkboxes.
2. Click "Delete".

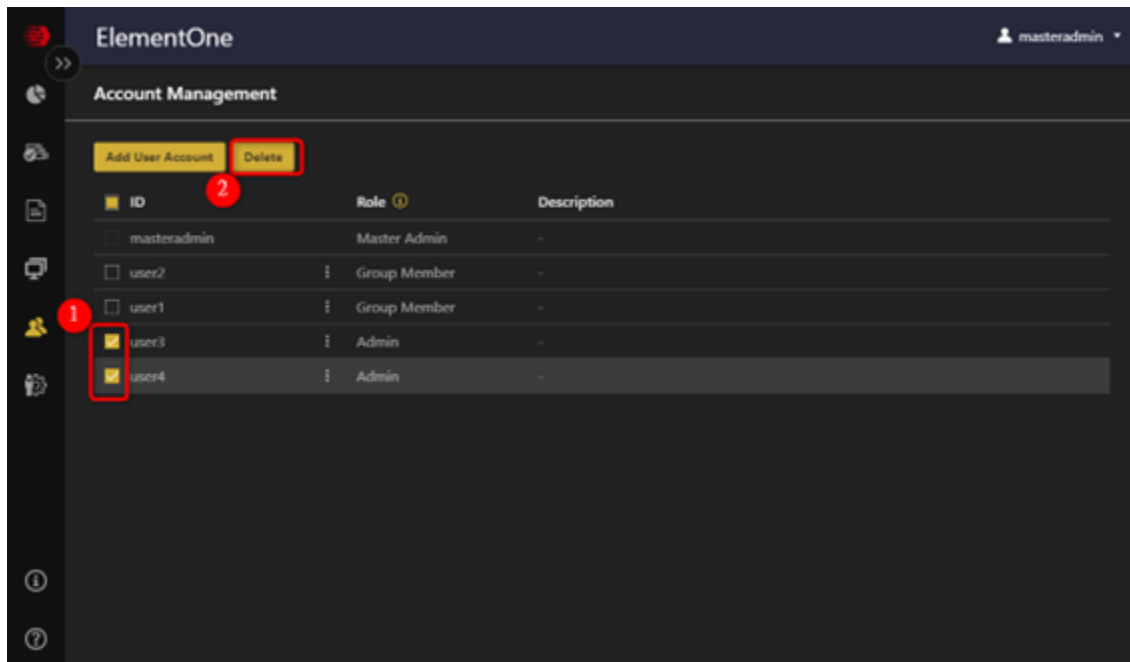


3. Make sure the user IDs are correct, input "DELETE" in the column.
4. Click "Confirm".
5. After "Confirm" is clicked, ElementOne will display a notification indicating that the user account has been successfully deleted.

Administration

API Management

The **API Management** page allows users to create or delete an API key. From the page, you can see the following information of the API keys.

Item	Description	Example
Name	The API key name you entered when creating the key.	Test 1
API key	The key that is automatically generated when the API key is created.	v1_606b816a*****
Description	An optional description you can enter when creating the API key.	Test 1
Create Time	The time the API key was created.	2025/06/28 03:13:39 PM UTC
Last Access Time	The last time the API key was used.	2025/06/28 03:13:39 PM UTC

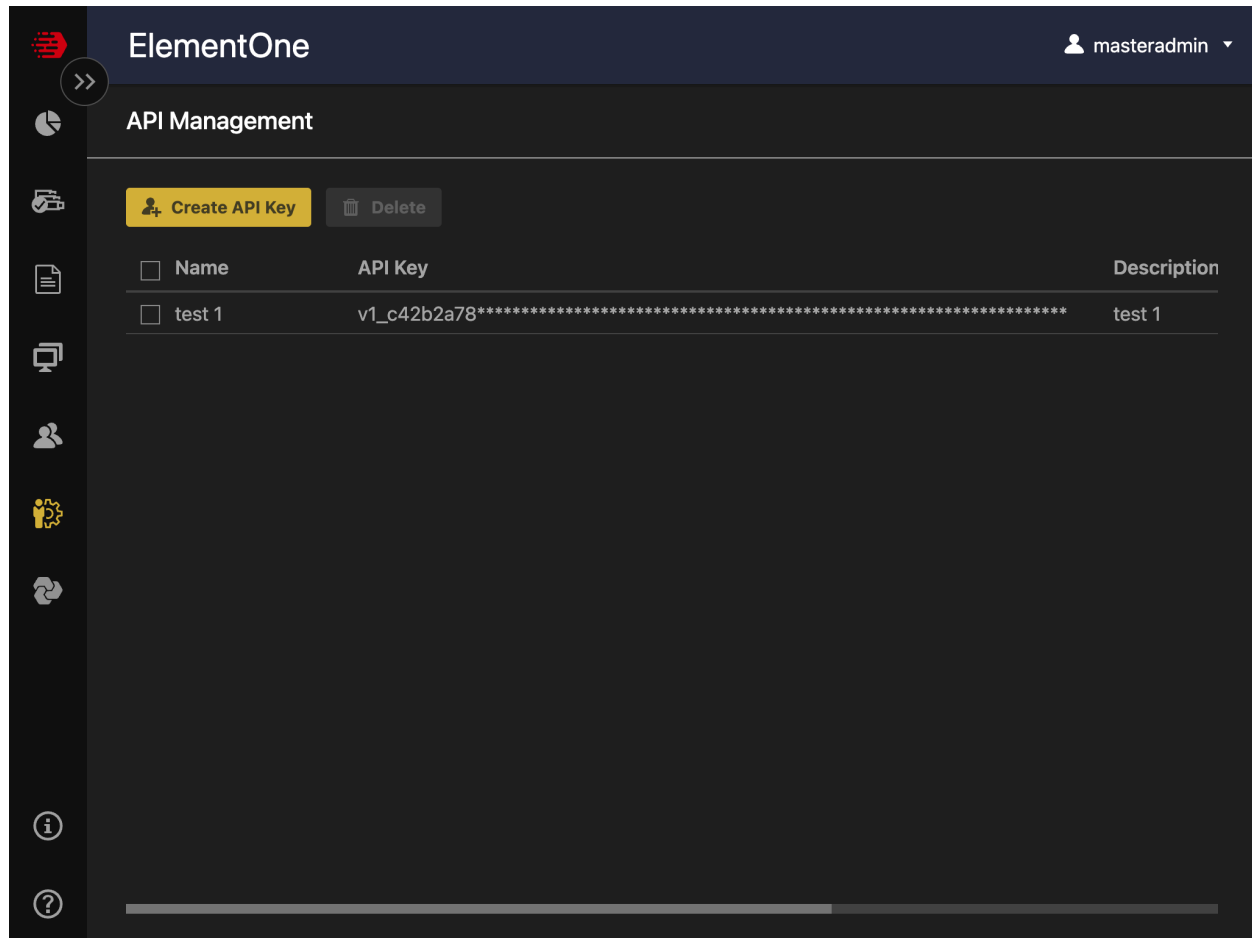

Create an API Key

1. On the **API Management** page, click the **Create API key** button to create an API key.
2. In the Create API Client window, enter an API key name and a description, then click on **Generate**.

**Note:**

An API key name is required; a description is optional.

3. After an API key is created successfully, on the **Copy your API Key** page, click on the **Copy** icon to copy the API key, save the API key in a secure location, then click **OK**.

**Note:**

Make sure to copy and save the generated API key in a secure location, you won't be able to view it again after closing the window.



You will see an error message if you skip clicking on the Copy icon to copy the API key.

4. See the generated API key on the **API management** page.

Delete an API Key

1. On the **API Management** page, select an API key to be deleted, then click **Delete**.
2. See a confirmation message box pop out, then click on **Delete** to proceed.
3. See a message showing the deletion is successful and the key is removed from the list on the **API Management** page.

Query Logs Using ElementOne's OpenAPI

For detailed instructions, please refer to the **ElementOne OpenAPI User's Guide**.


Corporate Identity

This feature allows businesses to apply custom logos across user interfaces and reports to reinforce a consistent corporate identity.

1. Log in with either a master admin or admin user account and navigate to the "Administration" icon on the menu.
2. Click "Corporate Identity".

Set Custom Logo on Screen

Select the **Screen Logo** tab to set a custom logo shown on the user interface of Safe Port device. You can set a logo on the Safe Port's Home Page and Scanning Page.

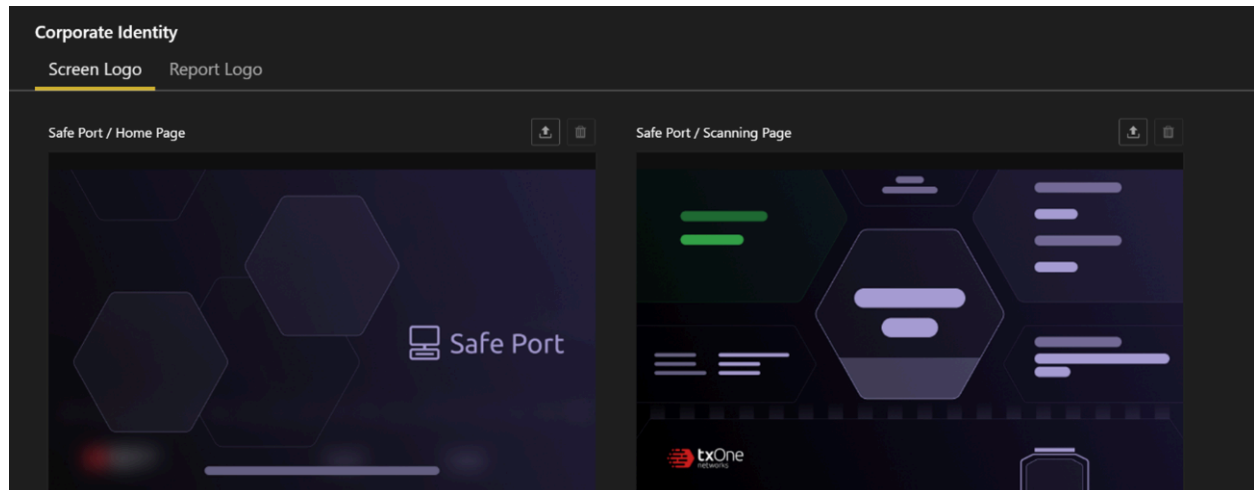

- **Set Custom Logo on Safe Port's Home Page or Scanning Page**

1. Under the **Screen Logo** tab, go to the setting field **Safe Port/Home Page** or the **Safe Port/ Scanning Page** depending on where you want to display the custom logo.
2. Click on the **Upload** icon.
3. Click on **Select File** to upload a PNG file for the custom logo.
4. In the page preview, adjust the logo size to ensure it fits within the highlighted area, where the logo will be displayed.

**Note:**

Snap to Edge is enabled by default. This feature helps you position the logo by automatically snapping it to the edges of the highlighted area, making alignment quicker and more precise.

5. Click on **Confirm**.

- **Remove Custom Logo from Safe Port's Home Page or Scanning Page**

**Note:**

If there is no custom logo set, the button will be disabled.

1. Under the **Screen Logo** tab, go to the setting field **Safe Port/Home Page** or the **Safe Port/Scanning Page** depending on where the custom logo is set.
2. Click on the **Delete** icon.

Set Custom Logo on Report

Select the **Report Logo** tab to set a custom logo shown in a report.

• Set Custom Logo on a report

1. Under the **Report Logo** tab, click on the **Upload** icon.
2. Click on **Select File** to upload a PNG file for the custom logo.
3. In the report preview, adjust the logo size to ensure it fits within the highlighted area, where the logo will be displayed.



Note:

Snap to Edge is enabled by default. This feature helps you position the logo by automatically snapping it to the edges of the highlighted area, making alignment quicker and more precise.

4. Click on **Confirm**.

• Remove Custom Logo from a report



Note:

If there is no custom logo set, the button will be disabled.

Under the **Report Logo** tab, click on the Delete icon to remove the custom logo from the report.

License


This page allows users to browse and manage activated licenses on ElementOne.




Note:

Only masteradmin and admins can browse this page.

1. Log in with either a masteradmin or admin user account, navigate to the “Administration” icon on the menu, and click “License” to browse the License page.
2. On **License** page, choose either **License Key** or **License File** for license activation. If you select **License Key**, enter the license key in the box, then click **Activate**. If you select **License File**, click on **Browse** to upload the license file downloaded from MyTXOne portal, then click **Activate**.

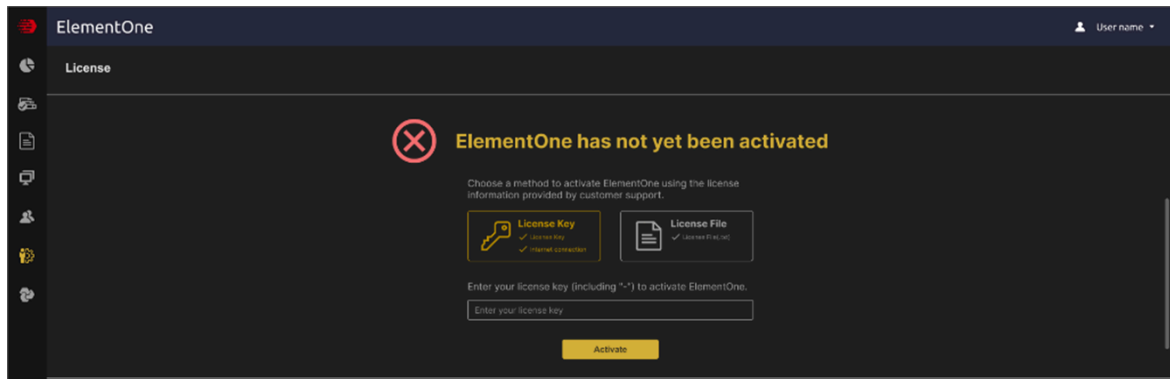

3. Once you have activated ElementOne, Portable Inspector, or Portable Inspector Pro, you can view license status and expiration date on this page.

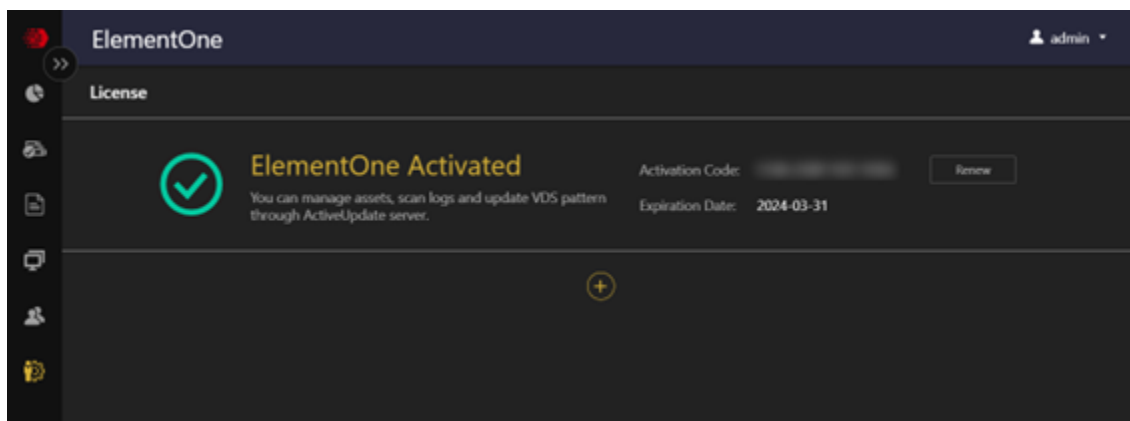**Note:**

- ElementOne will present a global notification and status update on the License page 60 days before the license is set to expire.
- ElementOne will display a global notification and status on the License page when the license expires.

**Note:**

To prevent service interruptions during license renewal through your contact window, ElementOne provides a 30-day grace period. During this period, the license status will show as “Expired”, but you can still use related features. The features will be unavailable afterward.

License Introduction

There are 2 (two) major license types that can be activated on ElementOne.

ElementOne License

After activating ElementOne license on ElementOne, users are allowed to activate one Portable Inspector license, one Portable Inspector Pro license, one Virtual Portable Inspector (vPI) license, and one Safe Port license regardless of whether the ElementOne license is valid or expired.

When the ElementOne license is valid, users are allowed to perform Vulnerability Detection Service pattern updates on ElementOne.

Device License

There are four device licenses that can be activated on ElementOne.

1. Portable Inspector
2. Portable Inspector Pro
3. Virtual Portable Inspector
4. Safe Port

• Portable Inspector and Portable Inspector Pro Licenses

Once a Portable Inspector license is activated on ElementOne, the PI and PI Pro devices can be registered to ElementOne.

After the registration, the devices can be activated and managed by ElementOne. This allows for synchronization of policies, logs, and component updates.

Feature on ElementOne	Portable Inspector Licenses	
	PI	PI Pro

Register PI Device	0	X
Register PI Pro Device	X	0

**Note:**

Features requiring license activation will be unavailable when it expires.

However, after the ElementOne license has expired, you can still activate and renew all other device licenses.

• Virtual Portable Inspector License

After a Virtual Portable Inspector (vPI) license is activated in ElementOne, you can register Virtual Portable Inspector devices to ElementOne.

Once registered, vPI devices can be managed through ElementOne. ElementOne synchronizes device policies and component updates, and collects logs and asset information uploaded from vPI devices.

When a vPI license is activated, you can view license information on the **License** page, including the activation code, expiration date, total vPI seats, and used vPI seats. One vPI seat is consumed for each unique asset scanned by a vPI device.

If the number of used seats reaches the licensed limit, contact your vendor to purchase additional seats.

**Note:**

vPI seat usage is calculated based on the number of unique assets scanned by vPI devices, not the number of registered vPI devices. For example, if one vPI device scans 100 assets, or 10 vPI devices scan the same 100 assets, 100 vPI seats are used.

• Safe Port License

Once a Safe Port license is activated on ElementOne, the Safe Port devices can be registered into ElementOne.

After the registration, the device can be activated by ElementOne. This allows for synchronization of logs.

Activate ElementOne License

This function allows users to activate ElementOne license through online activation. Ensure that ElementOne has access to the Internet. You can either use License Key or License File to activate ElementOne license.

Activate ElementOne License using License Key

1. On the **License** page, select **License Key**, and input the ElementOne license key in the box.

**Note:**

The ElementOne activation code is a combination of upper-case characters and dashes.

2. Click **Activate**.
3. Now the ElementOne license has been successfully activated.


Activate ElementOne License using License File

1. Go to [TXOne Networks | MyTXOne Portal](#).
2. Click **Product Licensing** then select the **+License Registration** button.
3. Enter your license key in the box then click on **Next**.

**Note:**

Make sure the license key you entered is valid. If the license key has expired, an error message will appear.

4. See the information about the license key then click on **Submit**.
5. See your license shown in the list then click on the **Download** icon.

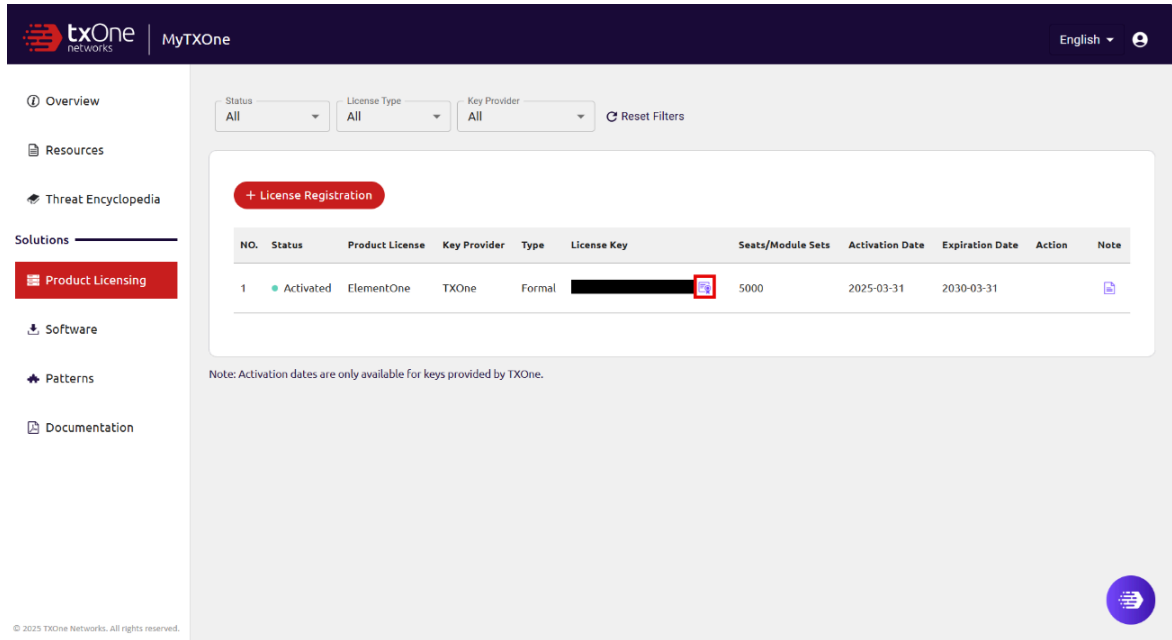

© 2025 TXOne Networks. All rights reserved.


6. Enter the serial number of ElementOne in the box then click on **Download** to download the license file.



Note:

You can click on the **i** icon next to the **Product Serial Number** box showing how to check the product serial number on the ElementOne console.

7. Go to the ElementOne console, select **Administration > License**.
8. On the **License** page, select **License File**.
9. Click on **Browse** to upload the license file.
10. Click **Activate**.

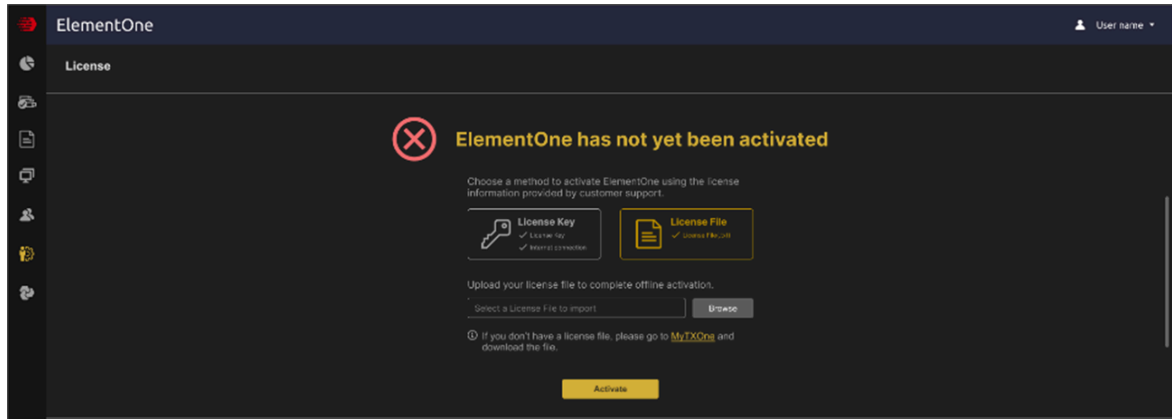

11. Now the ElementOne license has been successfully activated.



Note:

ElementOne licenses cannot be activated prior to the license's start date.

Activate Portable Inspector and Portable Inspector Pro License

This function allows users to activate Portable Inspector license and Portable Inspector Pro license through online activation. Ensure that ElementOne has access to the Internet.

1. On the License page, click the + icon.
2. Use license key or license file to activate a license.
 - a. Refer to [Activate ElementOne License using License Key \(on page 155\)](#) to activate a license with a license key.



Note:

Both Portable Inspector and Portable Inspector Pro activation codes have a combination of uppercase characters and dashes of their own.

- b. Refer to [Activate ElementOne License using License File \(on page 155\)](#) to activate a license with a license file.
3. Now the Portable Inspector license has been successfully activated.



Note:

Portable Inspector and Portable Inspector Pro licenses cannot be activated prior to their respective license's start date.

Activate Virtual Portable Inspector License

This function allows users to activate Virtual Portable Inspector license through online activation. Ensure that ElementOne has access to the Internet.

1. On the License page, click the + icon.
2. Use license key or license file to activate a license.
 - a. Refer to [Activate ElementOne License using License Key \(on page 155\)](#) to activate a license with a license key.



Note:

An activation code consists of uppercase letters and hyphens.

- b. Refer to [Activate ElementOne License using License File \(on page 155\)](#) to activate a license with a license file.
3. Now the Virtual Portable Inspector license has been successfully activated.



Note:

A Virtual Portable Inspector license cannot be activated before its start date.

Activate Safe Port License

This function allows users to activate Safe Port license through online activation. Ensure ElementOne has access to the Internet.

1. On the License page, click the + icon.
2. Use license key or license file to activate a license.

- a. Refer to [Activate ElementOne License using License Key \(on page 155\)](#) to activate a license with a license key.

**Note:**

The code is a combination of upper-case characters and dashes.

- b. Refer to [Activate ElementOne License using License File \(on page 155\)](#) to activate a license with a license file.
3. Now the Safe Port license has been successfully activated.

**Note:**

Safe Port licenses cannot be activated prior to the license's start date.

Renew License


This function allows users to renew or replace existing licenses on ElementOne.

When your license expires, you need to get in touch with your contact window to renew the license. After the license is renewed, you can use this function to update the license information on ElementOne.

**Note:**

ElementOne will automatically renew the licenses every day at UTC+0 3:00.

1. On the License page, click **Renew** on the license that needs renewal.

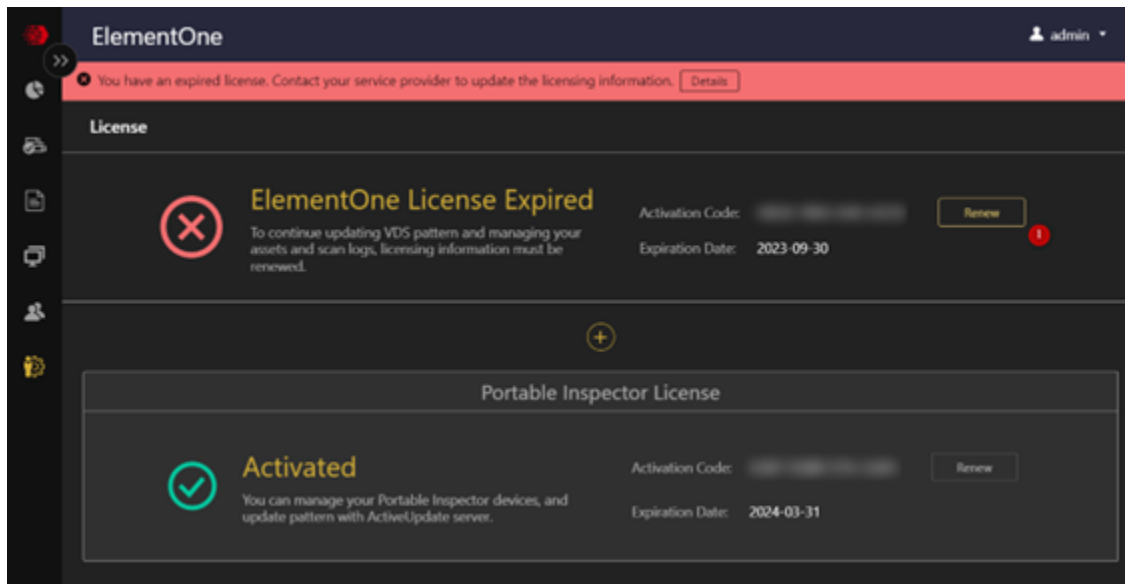

2. Use License Key or License File to renew a license. Go to **Step a** to renew a license with a license key; go to **Step b** to renew a license with a license file.
 - a. Select **License Key**, enter the license key in the box, then click **Renew**.
 - b. Select **License File**, click **Browse** to upload the license file, then click **Renew**.

**Note:**

Refer to [Activate ElementOne License using License File \(on page 155\)](#) to download the license file from MyTXOne portal.

3. Now your license has been successfully renewed.

Log Purge

Overview

ElementOne generates and stores multiple types of logs and asset information, including Portable Inspector scan logs, Safe Port scan logs, and asset data. Over time, these records can consume a significant amount of storage space and may affect system performance.

The **Log Purge** feature allows administrators to automatically delete old Portable Inspector logs, Safe Port logs, and asset information after a configured retention period. This helps reduce storage usage and maintain system performance without requiring manual cleanup.

Log Purge applies to the following data:

- Portable Inspector scan logs
- Portable Inspector asset information
- Safe Port scan logs
- Safe Port collected malware samples

The retention period is calculated based on the time ElementOne receives the log or asset information.



Note:

- Audit logs, Portable Inspector Event Logs, and Virtual Portable Inspector scan logs are not affected by Log Purge.
- Any asset configured as a baseline is also deleted when the corresponding asset information is purged.
- Log Purge is disabled by default.

Configure Log Purge

Steps:

1. From the left navigation bar, select **Administration > Log Purge**.
2. Select a retention period from the drop-down list.

Available options include:

- No limit
- 1 month
- 2 months
- 3 months
- 6 months
- 12 months
- 24 months
- 36 months
- 48 months
- 60 months

3. Click **Save**.

When a retention period is configured, ElementOne automatically removes Portable Inspector logs, Safe Port logs, and asset information that exceed the specified retention period.

To disable automatic log purging, select **No limit** and click **Save**.

How Log Purge Affects Existing Data

The retention period is calculated from the time ElementOne receives the data.

The following pages may display fewer records after Log Purge removes expired data:

- **Portable Inspector Scan Logs**
- **Safe Port Scans**
- **Assets**



Note:

Deleted logs, asset information, and collected malware samples cannot be recovered after they are purged.

Proxy

This page allows users to configure the proxy settings on ElementOne.

Once enabled, ElementOne will perform license and component updates through the proxy based on these settings.



Note:

Only masteradmin and admins can browse this page.

Enable Proxy

1. Log in with either a master admin or admin user account and navigate to the "Administration" icon on the menu.
2. Click "Proxy" to browse the Proxy page.
3. Click the "Enable" switch to Enable proxy.
4. Input the proxy address.

5. Input the proxy port.
6. Input the User Name of the proxy.
7. Input the Password of the proxy.
8. Click "Save".

ElementOne

>>

Proxy

☒ Use a proxy server when connecting to TXOne Networks servers for pattern, device firmware, and license updates

Input the Proxy server setting values in the following fields.

Server Address:* 192.168.3.250

Port:* 8080

If your Proxy server requires credentials, provide them below. Otherwise, leave the following fields blank.

User Name: proxyuser

Password: *****

Save Cancel

9. After "Save" is clicked, the proxy is enabled and the settings are saved.

ElementOne will perform license activations and component updates through the proxy with the settings.

Disable Proxy

1. Click the "Enable" switch again to disable the proxy.
2. Click "Save".

ElementOne

Proxy

☐ Use a proxy server when connecting to TXOne Networks servers for pattern, device firmware, and license updates.

Input the Proxy server setting values in the following fields.

Server Address:* 192.168.3.250

Port:* 8080

If your Proxy server requires credentials, provide them below. Otherwise, leave the following fields blank.

User Name: proxyuser

Password: *****

Save Cancel

3. The proxy is disabled, and the settings saved.



Note:

The username and password will be purged when the proxy is disabled.

SenninOne Integration

Use the **SenninOne Integration** page to configure the connection between ElementOne and SenninOne.

SenninOne Integration Settings

Field	Definition	Example
Connection Status	Shows whether ElementOne is connected to SenninOne.	Connected
Refresh	Refreshes the connection status.	N/A
Last Data Sent Time	Shows the last time ElementOne sent data to SenninOne.	2026/06/16 04:38:37 PM GMT+8
SenninOne Address	Specifies the IP address or domain name of the SenninOne server. This field is required.	senninone.txone-.com

Field	Definition	Example
API Key	Specifies the API key generated in SenninOne and required for ElementOne to connect to SenninOne. This field is required.	eyRGJlvkpbfg-ETE0GTKfdbd-fkbpdbkbs
Test Connection	Tests the connection between ElementOne and SenninOne.	N/A
Reset API Key	Clears the current API key so that a new API key can be entered.	N/A
Save	Saves and applies the settings.	N/A
Cancel	Discards unsaved changes and leaves the page.	N/A

Configure the Connection between ElementOne and SenninOne

1. Go to **Administration > SenninOne Integration**.
2. In **SenninOne Address**, enter the IP address or domain name of the SenninOne server.



Note:

SenninOne Address cannot be empty.

3. In **API Key**, paste the API key generated from SenninOne.



Note:

API Key cannot be empty.

4. Click **Test Connection** to verify the connection settings.
5. Confirm that the connection test is successful.
6. Click **Save** to save and apply the settings.

Reset the SenninOne API Key


Use this procedure to replace the current API key with a new one.

1. Go to **Administration > SenninOne Integration**.
2. Click **Reset API Key**.
3. In the confirmation message, click **Confirm**.
4. In **SenninOne Address**, enter the IP address or domain name of the SenninOne server.

5. Paste the new API key into **API Key**.
6. Click **Test Connection** to verify the connection settings.
7. Click **Save** to save and apply the settings.

Single Sign-On

1. Click "Download" to prepare the ElementOne metadata file.
2. Upload it to the IdP. Once the IdP configuration is complete, download the IdP metadata file to continue with the ElementOne configuration.
3. Click "Upload" and select the IdP metadata file.
4. Single Sign-On set up is complete, and the current SAML configuration details are displayed.

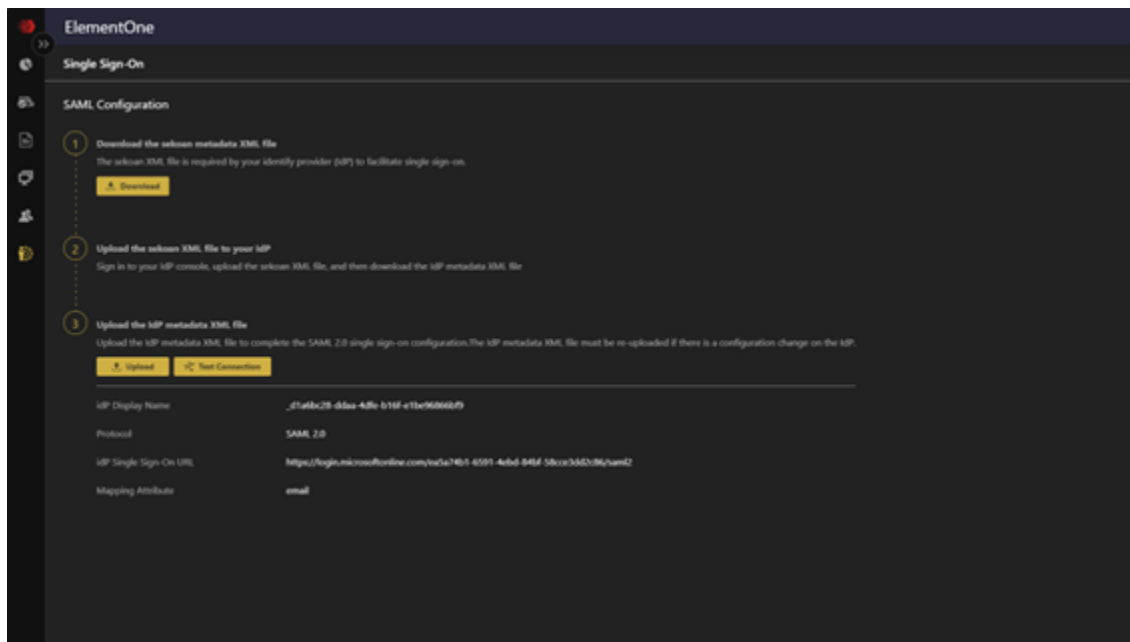

SSL Certificate

After the OOB process, ElementOne will generate two self-signed SSL certificates - one for the web console and one for device communication.

This page allows users to browse and manage the SSL certificates used by ElementOne web console.


1. Log in with either a master admin or admin user account and navigate to the "Administration" icon on the menu.
2. Click "SSL Certificate" to browse the SSL Certificate page.

Upload Certificate

This function allows users to upload SSL Certificate into ElementOne.

When your organization has its own certificate, you can upload it into ElementOne to dismiss the certification warning on the browser.

1. On the SSL Certificate page, click "Upload Certificate".

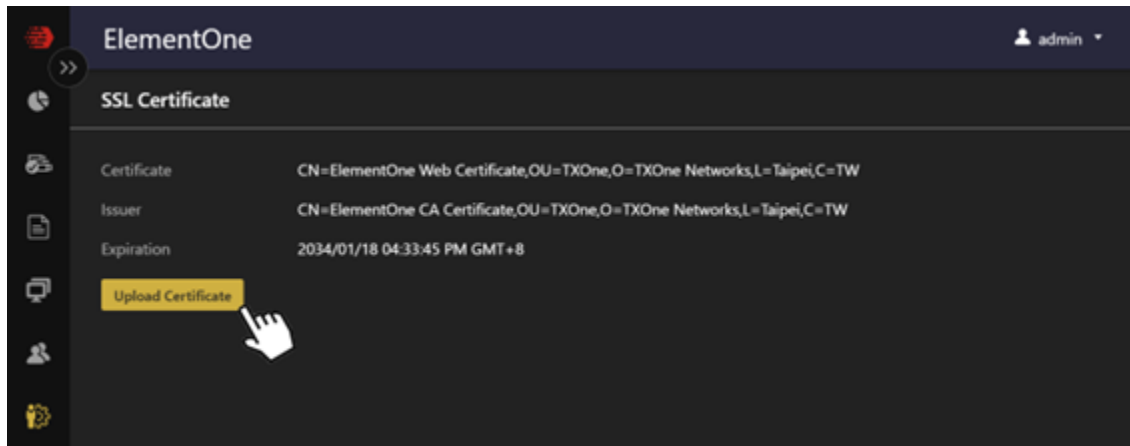

2. Click "Select File" on the right side of Certificate.
3. Select the certificate file to upload.



Note:

ElementOne accepts certificates exclusively in PEM format, which is identified by its content rather than the file extension.

4. Click "Open".
5. Click "Select File" on the right side of Private Key.

Note: To upload a certificate, you must upload it in PEM format and restart the virtual instance. After uploading a certificate, you must close the current web page, reopen the browser, and access the ElementOne system again.

Certificate*

example-web.crt Select file

Private Key*

Select file

Passphrase

Upload and Restart Cancel

6. Select the private key file to upload.

**Note:**

ElementOne supports private key only in PKCS#1 and PKCS#8 format.

7. Click "Open".
8. (Optional) Input the Passphrase of Private Key file.
9. Click "Upload and Restart".
10. After "Upload and Restart" is clicked, wait for 30 seconds and then refresh the browser.
11. The below screen appears after you refresh the browser.

ElementOne admin

SSL Certificate

Certificate	CN=Example Web Certificate,OU=Example,O=For,L=Taipei,C=TW
Issuer	CN=Example CA Certificate,OU=Example,O=For,L=Taipei,C=TW
Expiration	2034/01/19 04:51:15 PM GMT+8

Upload Certificate

12. Check the certificate information on the browser.

Certificate Viewer: Example Web Certificate

General

Details

Issued To

Common Name (CN)

Example Web Certificate

Organization (O)

For

Organizational Unit (OU)

Example

Issued By

Common Name (CN)

Example CA Certificate

Organization (O)

For

Organizational Unit (OU)

Example

Validity Period

Issued On

Monday, January 22, 2024 at 4:51:15 PM

Expires On

Thursday, January 19, 2034 at 4:51:15 PM

SHA-256 Fingerprints

Certificate

5f702afe98300f44cb5dba1e5e7b83869328a0ae876bf8566e9491b8ee014bcc

Public Key

22242a549d628cedafc2a1447df2369726eca49a021d54cc9249d84186e45784

Syslog Forwarding

This topic will guide you how to setup syslog forwarding and direct you to related sections in the manual.

**Note:**

- This topic will guide you how to setup syslog forwarding and direct you to related sections in the manual.
- Only TCP transmission is supported.

Manage Configuration

This section describes how to set up syslog forwarding on Syslog page.

Task	Link
Send raw syslog via TCP	Sending Syslog via TCP (on page 171)
Send syslog via HTTPS to Splunk HTTP Event Collector (Splunk HEC)	Sending Syslog to Splunk HEC (on page 172)

The Syslog Sent by ElementOne

This section describes the data sent by ElementOne.

Task	Link
What do you send via TCP?	LEEF Log Definition (on page 175)
What do you send to Splunk HEC?	Data Input to Splunk HEC (on page 173)
What is event log composed of?	LEEF Log Definition (on page 175)

Third-party Support

This section provides instructions on using third-party services.

Task	Link
How to setup Splunk HTTP Event Collector (Splunk HEC) to receive ElementOne syslog in Splunk Web?	Setup Splunk HTTP Event Collector (Splunk HEC) to Receive ElementOne Syslog in Splunk Web (on page 242)

Sending Syslog via TCP

This function allows users to enable and configure the destination host and port for Syslog transmission. Please ensure ElementOne has access to the internet.

1. Log in with either a master admin or admin user account and navigate to the administration icon on the menu.
2. Click "Syslog Forwarding" to view the Syslog page.
3. Click the "Enable" switch to enable Syslog.
4. On the Syslog Forwarding page, input the destination host and port.

**Note:**

The "Address" field supports both IPv4 addresses and hostnames.

5. Click "Save".

**Note:**

- Once Syslog is re-enabled, all syslog entries will be resent.
- If Syslog was previously configured as "Splunk HTTP Event Collector (HEC)" and changed to "Syslog Server", it will retransmit all the logs.

6. Syslog is enabled, and the settings saved. ElementOne will send Syslog to the destination server.

Sending Syslog to Splunk HTTP Event Collector

This function allows users to enable and configure the destination host, port, and token to send syslogs to Splunk HTTP Event Collector. Ensure ElementOne has access to the Internet.

**Note:**

Since ElementOne uses HTTPS for transmission, SPLUNK HTTP Event Collector needs to enable SSL.

1. Log in with either a master admin or admin user account and navigate to the administration icon on the menu.
2. Click "Syslog Forwarding" to view the Syslog page.
3. Slide the switch to the Enabled position to enable Syslog.
4. Then select "Splunk HTTP Event Collector (HEC)" by clicking its radio button.
5. Enter the destination host, port, and token fields.

**Note:**

- The "Address" field supports both IPv4 addresses and hostnames.
- Each token has a unique value, which is a 128-bit number represented by 32-character globally unique identifier (GUID).

6. Click on the "Save" button for your changes to take effect.

**Note:**


- Once Syslog is re-enabled, all syslog entries will be resent.
- If Syslog was previously configured as "Syslog Server" and changed to "Splunk HTTP Event Collector (HEC)", it will retransmit all the logs.

7. Syslog is now enabled, and its settings saved. ElementOne will start sending Syslog to the destination server.



Note:

After storing the Splunk HTTP Event Collector token, it will be protected in a way similar to a password, with only the first four characters exposed.

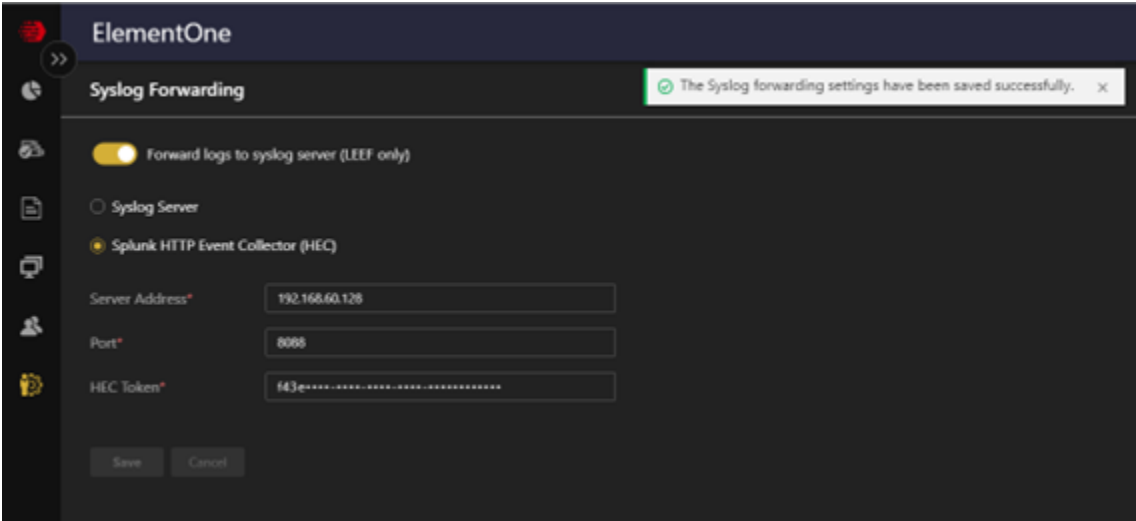

Data Input to Splunk HTTP Event Collector

This section describes the data sent to Splunk HTTP Event Collector(HEC), which consists of a header and a body.

Header

The header includes authorization that is used to let logging agents and HTTP clients connect to the HEC input.

Setting	Example
Authorization: Splunk <token>	Authorization: Splunk B5A79AAD-D822-46CC-80D1-819F80D7BFB0

Body

The body includes event logs and configurations that are used to control how Splunk stores this data.

Table 25. Configurations

Setting	Description	Default
time = <epoch time>	Sets the host field to a static value for this stanza. Also sets the host key initial value. Splunk Enterprise uses this key during parsing and indexing, in particular to set the host field. It also uses the host field at search time.	The epoch time format of “dev-Time”(refer to LEEF Log Definition (on page 175)).
host = <string>	Sets the index where Splunk Enterprise stores events from this input.	elementone
source = <string>	Sets the source field for events from this input.	TXOne:ElementOne
index = <string>	Sets the index where Splunk Enterprise stores events from this input.	- scannedlog - detectedlog - assetinfo - applicationinfo - updateinfo - vulnerabilityinfo - vulnerabilitysummary - spscansummary - spinfectedfile - spunscannablefile - spunlockfile

Table 26. Event logs

Setting	Default
event = <string>	Refer to LEEF Log Definition (on page 175) for more details.

LEEF Log Definition

Definition

- Official LEEF Format definition: <https://www.ibm.com/docs/en/dsm?topic=overview-leef-event-components>

```
<162>2022-08-25T10:20:51Z elementone LEEF:2.0|TXOne|ElementOne|1.0.0|1010|devTime=2022-08-25T10:20:50Z
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX sev=2 logID=E3873398-88FB-4450-9232-D2F0A0C856BD logVersion=3.0 ...
```

```
<Priority>Sent time Hostname LEEF Header|LEEF Predefined AttributestabEvent attributes
```



Note:

The **Sent time**, **Hostname**, and **LEEF Header** are separated by spaces.

- **Priority**

- 1 - 3 digits enclosed in angle brackets
- Calculate by Facility and Severity. (Priority = 20 * 8 + Severity)

- **Sent time**

Timestamp in ISO8601 format, which pertains to the time ElementOne sent the log.

- **Hostname**

The ElementOne server's hostname

- **LEEF Header**

Composed by **<LEEF Version>**|**<Company Name>**|**Product Name**|**Product Version**|**Event ID**|, and separated by pipe characters |

- **LEEF Predefined Attributes**

Key=value pairs, which are separated by **tabs**

- **Event attributes**

Key=value pairs, which are separated by **tabs**

LEEF Log

LEEF Header

Header	Description
LEEF:version	The LEEF version information is an integer value that identifies the major and minor version of the LEEF format used for the event. ElementOne uses <code>LEEF:2.0</code> .
Vendor or manufacturer name	Vendor is a text string that identifies the vendor or manufacturer of the device that sends the syslog events in LEEF format. ElementOne uses <code>TXOne</code> .
Product name	The product name field is a text string that identifies the product. ElementOne uses <code>ElementOne</code> .
Product version	This field is a string that identifies the version of the product. For example: <code>1.0.0</code> .
EventID	EventID is a unique identifier for an event in the LEEF header.

Log Samples

```
<162>2022-08-01T06:01:34Z test.host LEEF:2.0|TXOne|ElementOne|1.0.1000|1002|
sev=2 cat=1 devTime=2022-08-01T06:01:34Z devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX
scanningToolVersion=1.61.1174 startTimeWithTZ=2022-08-01T06:01:34Z logVersion=3.0
logID=9d00c8dc-6535-49ca-a40d-5bb3ef820fb2 exclusionPath= endTime=Aug 01
2022 06:01:35 userName=tester scannedFiles=18 exclusionExtension=
deviceVid=2203 devicePid=3839 hostDomain=DESKTOP-CQUJVFT exclusionFile=
scanningToolId=2203-3839-BE0107001CDB1A200916
```

Severity Level

Severity	Description
10	Critical

Severity	Description
8	High
6	Medium
4	Low
2	Information

Log Categories Overview

Log Type	Cat	Splunk Index	Event ID Range	Severity Levels	Description
Scanned Log	1	scannedlog	1000 - 1023	Info (2)	Logs of scans
Detected Log	2	detectedlog	2000 - 2026	Low (4) - High (8)	Logs of detected threats
Asset Info	3	assetinfo	3000	Info (2)	Information about assets
Application Info	4	application-info	3000	Info (2)	Information about applications
Update Info	5	updateinfo	3000	Info (2)	Information about updates
Vulnerability Info	6	vulnerability-info	4000	Info (2) - Critical (10)	Information about vulnerabilities
Vulnerability Summary	7	vulnerability-summary	5000	Info (2) - Critical (10)	Summary of vulnerabilities
Safe Port Scan Summary	101	spscansummary	101000 - 101001	Info (2) - High (8)	Summary of Safe Port scans
Safe Port Infected File	102	spinfectd-file	102000	Info (2) / High (8)	Logs of infected files
Safe Port Unscannable File	103	spun-scannable-file	103000 - 103007	Info (2) - High (8)	Logs of unscannable files
Safe Port Suspicious File Unlock	104	spunlockfile	104000 - 104001	Info (2) / High (8)	Logs of suspicious file unlocks

Log Type	Cat	Splunk Index	Event ID Range	Severity Levels	Description
Safe Port Wipe Log	105	spwipinghistory	105000	Info (2)	Logs of file wiping events
Safe Port Media Check Log	106	spmedi- achecklog	106000	Info (2) - Low (4)	Logs of media scan events
Safe Port Connect/Disconnect Event	107	spevent	107000-107001	Info (2) /  Low (6)	Logs of connect or disconnect events
ElementOne Start/Shutdown Event	200	elementoneevent	200000-200001	Info (2)	Logs of ElementOne start or shutdown events

Column Mapping

Scanned Log

Table 27. LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=1
devTime	Event Start Time	devTime=2022-08-25T10:20:50Z
devTimeFormat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'H-H:mm:ssXXX
sev	Severity • Informational: 2 • Low: 4 • Medium: 6 • High: 8 • Critical: 10	sev=2

Table 28. Custom Keys

Key	Description	Example
logID	Log ID (Unique Key)	logID=A125CB7E-6A6B-4E8C
logVersion	Log Version	logVersion=3.0
startTime	Event Start Time (format: MM dd yyyy HH:mm:ss)	startTime=Jul 10 2020 17:03:42
endTime	Event End Time (format: MM dd yyyy HH:mm:ss)	endTime=Jul 10 2020 17:03:42
deviceID	Device ID	deviceID=868057F8-ADD-C-49AB-934CB5B88E704521
deviceName	Device Name	deviceName=PI
deviceVid	Device USB Vendor ID	deviceVid=2203
devicePid	Device USB Product ID	devicePid=3838
deviceSid	Device USB Serial ID	deviceSid=B-D0107089A38A920BD25
scannerVersion	Scanner Version	scannerVersion=1.61.1162
scanEngineVersion	Virus Scan Engine Version	scanEngineVersion=12.0.1008
patternVersion	Virus Pattern Version	patternVersion=14.557.0
hostID	Host ID	hostID=554328661
hostName	Host Name	hostName=DESKTOP-2EOANGR
hostDomain	Host Domain	hostDomain=NT AUTHORITY
userName	Host Login User Name	userName=admin
hostIP	Host IPV4 Address	hostIP=192.168.137.129
hostMac	Host MAC Address	hostMac=00:0C:29:7A:88:6C
hostOS	Host OS	hostOS=Microsoft Windows 10 Enterprise Edition (build 16299), 64-bit

Table 28. Custom Keys (continued)

Key	Description	Example
scannedStatus	Result Status • None • Scan completed • Scan canceled • Scan suspended	scannedStatus=Scan completed
scannedFiles	Result Scanned Files	scannedFiles=23
infectedFiles	# Of Infected Files	infectedFiles=0
fixedFiles	# Of Fixed Files	fixedFiles=0
scanTarget	Option Scan Target • Null • All • Quick • Specified • IntelliScan	scanTarget=Specified
exclusionPath	Excluded Paths, separated by comma if there are multiple entries	exclusionPath=c:\users\admin\downloads\
exclusionFile	Excluded Files, separated by comma if there are multiple entries	exclusionFile=c:\users\admin\downloads\test.txt
exclusionExtension	Excluded Extensions, separated by comma if there are multiple entries	exclusionExtension=txt
comment	Result Comments	comment=No threats found

Table 28. Custom Keys (continued)

Key	Description	Example
scanningToolId	Device USB ID	scanningTool- Id=2203-3838-BD0107089A38A920B- D25
scanningToolVersion	Program Version	scanningToolVersion=3.0.5074
startTimeWithTZ	Event start time with timezone (ISO 8601)	startTimeWith- TZ=2022-08-25T10:20:50Z
endTimeWithTZ	Event end time with timezone (ISO 8601)	endTimeWith- TZ=2022-08-25T10:20:50Z
receivedTime	Log receipt time	received- Time=2022-08-25T10:20:50Z
scanFolders	Scanned folders, separated by comma if there are multiple values	scanFolders=c:\my\folder\1,c: \my\folder\2
assetLogID	Asset log ID	assetLog- ID=f21cf34b-2987-4aa9-9b29-cc
lastUpdateCheckSucceededAt- WithTZ	Last successful pattern update check time with timezone in ISO 8601 format. Changes after a successful pattern update check, even if all patterns are already up to date.	lastUpdateCheck- SucceededAtWith- TZ=2022-08-25T10:20:50+08:00
updateFreshnessStatus	Pattern update freshness status.0: Normal. The pattern update time is within the configured scan restriction scope.1: Overdue. The pattern update time is outside the configured scan restriction scope.2: Abnormal. The system time may be incorrect, so	updateFreshnessStatus=1

Table 28. Custom Keys (continued)

Key	Description	Example
	the freshness status may be inaccurate.	

Table 29. Event ID and Severity

Event ID	scannedStatus	Description	Severity
1000	Scan completed	No threats found (threat count == 0)	2
1001	Scan completed	Fixed all (threat count != 0, threat_count == fixed_count)	2
1002	Scan completed	Partially fixed (threat count != 0, threat_count != fixed_count)	2
1003	Scan completed	Ignored all (threat count != 0, fixed_count == 0)	2
1010	Scan canceled	Any	2
1020	Scan suspended	No threat found (threat count == 0)	2
1021	Scan suspended	Fixed all (threat count != 0, threat_count == fixed_count)	2
1022	Scan suspended	Partially fixed (threat count != 0, threat_count != fixed_count)	2
1023	Scan suspended	Ignored all (threat count != 0, fixed_count == 0)	2

• Log Sample

```
<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|1003|devTime=2023-04-21T07:08:43Z
startTime=Apr 21 2023 07:08:43 hostIP=192.168.244.134 hostOS=Linux 3.10.0-1062.el7.x86_64 #1 SMP Wed Aug
7 18:08:02 UTC 2019 scannedStatus=Scan completed devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX deviceVid=2203
scannerVersion= startTimeWithTZ=2023-04-21T07:08:43Z deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91
fixedFiles=0 devicePid=3838 hostDomain= exclusionPath= exclusionExtension= comment=Unable to fix
some files receivedTime=2023-05-03T08:50:23Z cat=1 logID=ffd6a23d-6398-4589-9e75-26666b5e9d19
infectedFiles=1 exclusionFile= logVersion=3.0 sev=2 scannedFiles=1 scanTarget=Specified
endTimeWithTZ=2023-04-21T07:08:43Z userName=tester hostMac=00:0c:29:a7:03:50 endTime=Apr 21 2023
07:08:43 deviceName=PI deviceSid=BD0107000B9808647005 scanEngineVersion=12.5.1004 patternVersion=18.373.0
hostName=localhost.localdomain scanningToolId=2203-3838-BD0107000B9808647005 scanFolders=C:\test
scanningToolVersion=1.0.1000 hostID=554328661

<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|1000|endTimeWithTZ=2023-04-21T07:07:26Z
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91 hostIP=192.168.244.134
scanTarget=Specified deviceSid=BD0107000B9808647005 logID=7811417f-cb4c-4ff5-a5ae-23b2ddf44ad9 deviceVid=2203
hostOS=Linux 3.10.0-1062.el7.x86_64 #1 SMP Wed Aug 7 18:08:02 UTC 2019 receivedTime=2023-05-03T08:50:23Z
scanEngineVersion=12.5.1004 scannedFiles=0 fixedFiles=0 comment=No threats found patternVersion=18.373.0
userName=tester exclusionPath= exclusionExtension= devTime=2023-04-21T07:07:26Z sev=2 devicePid=3838
scannerVersion= scanningToolVersion=1.0.1000 startTimeWithTZ=2023-04-21T07:07:26Z endTime=Apr
21 2023 07:07:26 hostMac=00:0c:29:a7:03:50 scannedStatus=Scan completed infectedFiles=0
exclusionFile= scanningToolId=2203-3838-BD0107000B9808647005 cat=1 startTime=Apr 21 2023 07:07:26
hostName=localhost.localdomain hostDomain= scanFolders=C:\test logVersion=3.0 deviceName=PI hostID=554328661

<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|1010|scannerVersion=1.61.1174
userName=tester exclusionPath= exclusionExtension= startTimeWithTZ=2023-04-21T06:55:58Z
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX hostOS=Microsoft Windows 7 Enterprise Edition (build 7600),
64-bit fixedFiles=0 comment=No threats found receivedTime=2023-05-03T08:50:23Z hostIP=192.168.244.163
devTime=2023-04-21T06:55:58Z deviceVid=2203 hostDomain=WIN-IBRQ048NUE1 infectedFiles=0
exclusionFile= endTimeWithTZ=2023-04-21T06:57:48Z cat=1 devicePid=3838 endTime=Apr 21 2023 06:57:48
deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91 deviceName=PI scannedFiles=651 logVersion=3.0
hostMac=00:0c:29:13:53:c3 startTime=Apr 21 2023 06:55:58 patternVersion=18.373.0 scannedStatus=Scan
canceled scanTarget=Quick sev=2 deviceSid=BD0107000B9808647005 scanEngineVersion=21.6.1006
hostName=WIN-IBRQ048NUE1 scanningToolId=2203-3838-BD0107000B9808647005 scanningToolVersion=1.0.1000
scanFolders= logID=ff1978f8-51d9-4b03-b166-191fbaf95ffc hostID=554328661
```

```

<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|1002|fixedFiles=5
exclusionFile= receivedTime=2023-05-03T08:50:23Z logID=a42218c3-5600-421c-b2eb-568face9d8bb
patternVersion=18.373.0 hostIP=192.168.244.163 infectedFiles=6 hostOS=Microsoft Windows 7
Enterprise Edition (build 7600), 64-bit scannedFiles=17 exclusionPath= exclusionExtension= sev=2
endTime=Apr 21 2023 06:55:23 scanEngineVersion=21.6.1006 hostDomain=WIN-IBRQ048NUE1 logVersion=3.0
scannedStatus=Scan completed scanTarget=Specified endTimeWithTZ=2023-04-21T06:55:23Z deviceName=PI
scannerVersion=1.61.1174 hostMac=00:0c:29:13:53:c3 comment=Partially fixed startTime=Apr 21
2023 06:55:20 deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91 deviceSid=BD0107000B9808647005
userName=tester scanningToolVersion=1.0.1000 cat=1 deviceVid=2203 hostName=WIN-IBRQ048NUE1
scanningToolId=2203-3838-BD0107000B9808647005 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX
devTime=2023-04-21T06:55:20Z devicePid=3838 scanFolders=C:\test startTimeWithTZ=2023-04-21T06:55:20Z
hostID=554328661

<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|1002|endTimeWithTZ=2023-04-21T06:53:21Z
deviceName=PI scanTarget=Specified deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91
deviceSid=BD0107000B9808647005 startTimeWithTZ=2023-04-21T06:53:19Z logVersion=3.0 startTime=Apr
21 2023 06:53:19 exclusionPath= comment=Partially fixed scanningToolVersion=1.0.1000
logID=e9144f62-0b2d-44c2-b365-8e8e5025c455 scannedStatus=Scan completed patternVersion=18.373.0
userName=tester fixedFiles=1 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX devTime=2023-04-21T06:53:19Z
exclusionExtension= scanningToolId=2203-3838-BD0107000B9808647005 receivedTime=2023-05-03T08:50:23Z
scannerVersion=1.61.1174 exclusionFile= hostName=WIN-G04T0F1B300 hostOS=Microsoft Windows 8 Enterprise
Edition (build 9200), 32-bit cat=1 sev=2 devicePid=3838 hostIP=192.168.244.135 hostMac=00:0c:29:7e:3b:5a
infectedFiles=2 endTime=Apr 21 2023 06:53:21 deviceVid=2203 scannedFiles=14 scanEngineVersion=21.6.1006
scanFolders=C:\test hostDomain=WIN-G04T0F1B300 hostID=554328661

<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|1001|devTime=2023-04-21T06:41:05Z
endTime=Apr 21 2023 06:41:06 scanEngineVersion=21.6.1006 comment=Fixed all receivedTime=2023-05-03T08:50:23Z
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX scannerVersion=1.61.1174 hostName=DESKTOP-I0IVD35 exclusionFile=
scanningToolVersion=1.0.1000 endTimeWithTZ=2023-04-21T06:41:06Z logID=6c9ea243-028e-46f4-bb87-0d8fe211cfb4
hostDomain=NT AUTHORITY hostMac=00:0c:29:e6:fa:4d hostOS=Microsoft Windows 10 Professional (build
19045), 64-bit infectedFiles=1 startTimeWithTZ=2023-04-21T06:41:05Z scanTarget=Specified logVersion=3.0
sev=2 startTime=Apr 21 2023 06:41:05 deviceVid=2203 scannedFiles=3 fixedFiles=1 cat=1 deviceName=PI
devicePid=3838 userName=SYSTEM deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91 deviceSid=BD0107000B9808647005
hostIP=192.168.60.156 exclusionPath= scanningToolId=2203-3838-BD0107000B9808647005 patternVersion=18.373.0
scannedStatus=Scan completed exclusionExtension= scanFolders=C:\test hostID=554328661

<162>2023-05-05T03:21:33Z elementone
LEEf:2.0|TXOne|ElementOne|1.8.2|1010|logID=8b26ee61-7fea-4ff6-821a-cd0af1e62418

```

```
deviceSid=BD0107000B9808647005 scanEngineVersion=21.6.1006 hostMac=00:0c:29:a9:12:ba comment=No
threats found startTime=Dec 21 2022 00:37:37 deviceName=PI deviceVid=2203 userName=tester
exclusionExtension=bmp,txt scanningToolVersion=1.0.1000 sev=2 devicePid=3838 scannerVersion=1.61.1174
hostIP=192.168.244.132 scannedFiles=32079 scanTarget=All devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX
scanningToolId=2203-3838-BD0107000B9808647005 startTimeWithTZ=2022-12-21T00:37:37Z
patternVersion=18.373.0 hostDomain=LH-IR63U9R6LPUC hostOS=Microsoft Windows Vista Enterprise
Edition (build 6000), 64-bit exclusionPath=c:\program files\msn,c:\users\tester\desktop\vpsagent
exclusionFile=c:\users\tester\desktop\vpsagent\launcher.exe,c:\users\tester\desktop\vpsagent\vpsconfig
endTimeWithTZ=2022-12-21T00:39:46Z infectedFiles=0 receivedTime=2023-05-03T08:50:23Z cat=1 logVersion=3.0
devTime=2022-12-21T00:37:37Z deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91 hostName=LH-IR63U9R6LPUC
scannedStatus=Scan canceled endTime=Dec 21 2022 00:39:46 fixedFiles=0 scanFolders= hostID=554328661
```

Detected Log

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=2
devTime	Event Start Time	devTime=2022-08-25T10:20:50Z
devTimeFor- mat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'HH:mm:ss- XXX
sev	Severity • Informational: 2 • Low: 4 • Medium: 6 • High: 8 • Critical: 10	sev=2

Custom Keys

Key	Description	Example
logID	Log ID (Not Unique Key)	log- ID=29FD789F-CA78-48FD-92B9E598F1187C2E

Key	Description	Example
	The log ID is inherited from the related scanned log.	
logVersion	Log Version	logVersion=3.0
startTime	Event Start Time (format: MM dd yyyy HH:m-m:ss)	startTime=Jul 10 2020 17:09:04
endTime	Event End Time (format: MM dd yyyy HH:m-m:ss)	endTime=Jul 10 2020 17:09:05
deviceId	Device ID	deviceId=868057F8-ADD-C-49AB-934CB5B88E704521
device-Name	Device Name	deviceName=PI
deviceVid	Device USB Vendor ID	deviceVid=2203
devicePid	Device USB Product ID	devicePid=3838
deviceSid	Device USB Serial ID	deviceSid=BD0107089A38A920BD25
hostID	Host ID	hostID=554328661
hostName	Host Name	hostName=WIN-JBFCTUNF08S
hostDo-main	Host Domain	hostDomain=NT AUTHORITY
userName	Host Login User Name	userName=james_chang
hostIP	Host IPV4 Address	hostIP=192.168.137.251
hostMac	Host MAC Address	hostMac=00:0C:29:6C:12:C3
hostOS	Host OS	hostOS=Microsoft Windows 7 Enterprise Edition Service Pack 1 (build 7601), 32-bit
aggressiveLevel	Aggressive Level	aggressiveLevel=0
threat-Name	Threat Name	threatName=FILE_ADS

Key	Description	Example
threatType	Threat Type • None • Malicious • Virus • Worm • Rootkits • Trojan • Generic • Spyware • Joke • Other • RogueProgram	threatType=Other
threatRisk	Threat Risk Level • 0: Low • 1: Medium • 2: High	threatRisk=2
takenAct	Action Type • Clean • Pass	takenAct=Clean
takenAct-Result	Action Result • Fixed • Unable to fix • Fixed at restart • Ignored	takenActResult=Fixed

Key	Description	Example
threatHash	Threat Hash	threat-Hash=c0839455963609be3363f52397d3
threatPath	Threat Path	threatPath=C:\Users\james_chang\Desktop\test.zip
scanning-ToolId	Device USB ID	scanningToolId=2203-3838-BD0107089A38A9
startTime-WithTZ	Event start time with timezone (ISO 8601)	startTimeWithTZ=2022-08-25T10:20:50Z
endTime-WithTZ	Event end time with timezone (ISO 8601)	endTimeWithTZ=2022-08-25T10:20:50Z
received-Time	Log receipt time	receivedTime=2022-08-25T10:20:50Z
lastUpdateCheck-SucceededAtWithTZ	Last successful pattern update check time with timezone in ISO 8601 format. Changes after a successful pattern update check, even if all patterns are already up to date.	lastUpdateCheckSucceededAtWithTZ=2022-08-25T10:20:50+08:00
update-Freshness-Status	Pattern update freshness status. 0: Normal. The pattern update time is within the configured scan restriction scope. 1: Overdue. The pattern update time is outside the configured scan restriction scope. 2: Abnormal. The system time may be incorrect, so the freshness status may be inaccurate.	updateFreshnessStatus=1

takenActResult Mapping

DB (scan_logs: threat: action_type)	DB (scan_logs: threat: action_result)	takenActResult
Fix (1)	Null (0)	Null
Fix (1)	Yet (1)	Ignored
Fix (1)	Success (2)	Fixed
Fix (1)	Fail (3)	Unable to fix

DB (scan_logs: threat: action_type)	DB (scan_logs: threat: action_result)	takenActResult
Fix (1)	Reboot (4)	Fixed at restart
Ignore (2)	Any (0,1,2,3,or 4)	Ignored
else	Null (0)	Null

Event ID and Severity

Event ID	takenActResult	threat-Type	Severity
2000	Fixed	Virus	2
2001	Fixed	Worm	2
2002	Fixed	Rootkits	2
2003	Fixed	Trojan	2
2004	Fixed	Generic	2
2005	Fixed	Spyware	2
2006	Fixed	Joke	2
2007	Fixed	Rogue	2
2008	Fixed	Other	2
2009	Unable to fix or Fixed at restart	Virus	6
2010	Unable to fix or Fixed at restart	Worm	8
2011	Unable to fix or Fixed at restart	Rootkits	8
2012	Unable to fix or Fixed at restart	Trojan	8
2013	Unable to fix or Fixed at restart	Generic	6
2014	Unable to fix or Fixed at restart	Spyware	4
2015	Unable to fix or Fixed at restart	Joke	4
2016	Unable to fix or Fixed at restart	Rogue	4
2017	Unable to fix or Fixed at restart	Other	6
2018	Ignored	Virus	6

Event ID	takenActResult	threat-Type	Severity
2019	Ignored	Worm	8
2020	Ignored	Rootkits	8
2021	Ignored	Trojan	8
2022	Ignored	Generic	6
2023	Ignored	Spyware	4
2024	Ignored	Joke	4
2025	Ignored	Rogue	4
2026	Ignored	Other	6

Log Sample

```
<166>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|2018|devicePid=3838 aggressiveLevel=0
threatType=Virus threatRisk=1 devTime=2023-04-21T07:08:43Z logID=ffd6a23d-6398-4589-9e75-26666b5e9d19 startTime=Apr
21 2023 07:08:43 deviceVid=2203 threatPath=/home/tester/Downloads/eicar.exe endTimeWithTZ=2023-04-21T07:08:43Z
hostName=localhost.localdomain takenAct=Pass cat=2 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX
receivedTime=2023-05-03T08:50:23Z sev=6 hostMac=00:0c:29:a7:03:50 scanningToolId=2203-3838-BD0107000B9808647005
takenActResult=Ignored logVersion=3.0 deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91 deviceName=PI
hostDomain= hostOS=Linux 3.10.0-1062.el7.x86_64 #1 SMP Wed Aug 7 18:08:02 UTC 2019 threatName=Eicar_test_file
userName=tester hostIP=192.168.244.134 endTime=Apr 21 2023 07:08:43 deviceSid=BD0107000B9808647005
threatHash=131f95c51cc819465fa1797f6ccacf9d494aaaff46fa3eac73ae63ffbd8267 startTimeWithTZ=2023-04-21T07:08:43Z
hostID=554328661

<164>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|2014|devTime=2023-04-21T06:55:20Z
deviceSid=BD0107000B9808647005 hostDomain=WIN-IBRQ048NUE1 userName=tester hostMac=00:0c:29:13:53:c3
threatType=Spyware threatRisk=1 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX devicePid=3838 hostIP=192.168.244.163
aggressiveLevel=0 threatHash=ec08e8b2e70ce207945903a8182605d6c6f24614040c6c568f9c2269dad481fd deviceName=PI
logID=a42218c3-5600-421c-b2eb-568face9d8bb hostOS=Microsoft Windows 7 Enterprise Edition (build 7600), 64-bit
threatName=CrackingApps_Test_File deviceVid=2203 takenAct=Clean cat=2 sev=4 startTime=Apr 21 2023 06:55:20
deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91 receivedTime=2023-05-03T08:50:23Z endTime=Apr 21 2023 06:55:23
hostName=WIN-IBRQ048NUE1 threatPath=C:\Users\tester\Desktop\virus_backup_zip\TMSpywareSample\CRCK_Test_File.exe
logVersion=3.0 takenActResult=Fixed at restart scanningToolId=2203-3838-BD0107000B9808647005
startTimeWithTZ=2023-04-21T06:55:20Z endTimeWithTZ=2023-04-21T06:55:23Z hostID=554328661

<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|2005|deviceName=PI userName=tester
hostOS=Microsoft Windows 7 Enterprise Edition (build 7600), 64-bit threatRisk=1 startTimeWithTZ=2023-04-21T06:55:20Z
```

```

cat=2 endTime=Apr 21 2023 06:55:23 deviceSid=BD0107000B9808647005 hostIP=192.168.244.163

hostMac=00:0c:29:13:53:c3 logID=a42218c3-5600-421c-b2eb-568face9d8bb threatName=Dialer_Test_File takenAct=Clean

devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX threatHash=245320339f60abda13d28630676b6a397bf7c14019ef1c0085a2da9126106bf4

scanningToolId=2203-3838-BD0107000B9808647005 receivedTime=2023-05-03T08:50:23Z

logVersion=3.0 devTime=2023-04-21T06:55:20Z hostDomain=WIN-IBRQ048NUE1 takenActResult=Fixed

endTimeWithTZ=2023-04-21T06:55:23Z deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91 devicePid=3838 aggressiveLevel=0

threatPath=C:\Users\tester\Desktop\virus_backup_zip\TMSpywareSample\DIAL_Test_File.exe deviceVid=2203

threatType=Spyware sev=2 startTime=Apr 21 2023 06:55:20 hostName=WIN-IBRQ048NUE1 hostID=554328661

<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|2005|deviceSid=BD0107000B9808647005

threatPath=C:\Users\tester\Desktop\virus_backup_zip\TMSpywareSample\HKTL_Test_File.exe

startTimeWithTZ=2023-04-21T06:55:20Z cat=2 sev=2 endTimeWithTZ=2023-04-21T06:55:23Z

devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX deviceVid=2203 devicePid=3838 hostDomain=WIN-IBRQ048NUE1 endTime=Apr

21 2023 06:55:23 hostOS=Microsoft Windows 7 Enterprise Edition (build 7600), 64-bit logVersion=3.0

deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91 aggressiveLevel=0 startTime=Apr 21 2023 06:55:20

threatRisk=1 takenAct=Clean devTime=2023-04-21T06:55:20Z logID=a42218c3-5600-421c-b2eb-568face9d8bb

deviceName=PI hostName=WIN-IBRQ048NUE1 userName=tester hostIP=192.168.244.163 hostMac=00:0c:29:13:53:c3

threatHash=1644feaf67af5275934b2b2768ef2e2681120d1a43e234414f26386a6b415187 threatName=HKTL_TEST_FILE

threatType=Spyware takenActResult=Fixed scanningToolId=2203-3838-BD0107000B9808647005

receivedTime=2023-05-03T08:50:23Z hostID=554328661

<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|2005|devTime=2023-04-21T06:55:20Z

hostOS=Microsoft Windows 7 Enterprise Edition (build 7600), 64-bit takenActResult=Fixed

threatHash=d2c88e70de6da17cb9f4feaad874921c3144f1894e6916bb5671cc90d8d150cb takenAct=Clean

endTimeWithTZ=2023-04-21T06:55:23Z startTime=Apr 21 2023 06:55:20 deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91

deviceName=PI devicePid=3838 hostName=WIN-IBRQ048NUE1 hostDomain=WIN-IBRQ048NUE1

hostMac=00:0c:29:13:53:c3 cat=2 logVersion=3.0 sev=2 aggressiveLevel=0 threatName=JokePrograms_Test_File

scanningToolId=2203-3838-BD0107000B9808647005 endTime=Apr 21 2023 06:55:23 deviceVid=2203

threatPath=C:\Users\tester\Desktop\virus_backup_zip\TMSpywareSample\JOKE_Test_File.exe

logID=a42218c3-5600-421c-b2eb-568face9d8bb deviceSid=BD0107000B9808647005 threatType=Spyware

startTimeWithTZ=2023-04-21T06:55:20Z receivedTime=2023-05-03T08:50:23Z devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX

hostIP=192.168.244.163 userName=tester threatRisk=1 hostID=554328661

<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|2005|endTimeWithTZ=2023-04-21T06:55:23Z

endTime=Apr 21 2023 06:55:23 hostDomain=WIN-IBRQ048NUE1 hostIP=192.168.244.163 threatType=Spyware

threatHash=ac072677500e677405bff4e1f697116dc727d3b87e97543418c20563f6e4c75b receivedTime=2023-05-03T08:50:23Z

hostOS=Microsoft Windows 7 Enterprise Edition (build 7600), 64-bit threatName=Spyware_Test_File

takenActResult=Fixed logVersion=3.0 deviceName=PI deviceSid=BD0107000B9808647005 hostName=WIN-IBRQ048NUE1

startTimeWithTZ=2023-04-21T06:55:20Z sev=2 deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91 threatRisk=1

scanningToolId=2203-3838-BD0107000B9808647005 deviceVid=2203 devicePid=3838 hostMac=00:0c:29:13:53:c3

```

```

userName=tester takenAct=Clean cat=2 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX devTime=2023-04-21T06:55:20Z
logID=a42218c3-5600-421c-b2eb-568face9d8bb startTime=Apr 21 2023 06:55:20 aggressiveLevel=0
threatPath=C:\Users\tester\Desktop\virus_backup_zip\TMSpywareSample\SPYW_Test_File.exe hostID=554328661
<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|2005|logVersion=3.0 endTime=Apr 21
2023 06:55:23 devicePid=3838 userName=tester hostOS=Microsoft Windows 7 Enterprise Edition (build 7600),
64-bit devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX sev=2 threatRisk=1 aggressiveLevel=0 threatType=Spyware
takenAct=Clean receivedTime=2023-05-03T08:50:23Z devTime=2023-04-21T06:55:20Z hostMac=00:0c:29:13:53:c3
takenActResult=Fixed threatPath=C:\Users\tester\Desktop\virus_backup_zip\TMSpywareSample\ADW_Test_File.exe
deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91 hostName=WIN-IBRQ048NUE1 threatName=Adware_Test_File
endTimeWithTZ=2023-04-21T06:55:23Z logID=a42218c3-5600-421c-b2eb-568face9d8bb cat=2 startTime=Apr 21 2023 06:55:20
deviceName=PI deviceSid=BD0107000B9808647005 hostIP=192.168.244.163 scanningToolId=2203-3838-BD0107000B9808647005
deviceVid=2203 hostDomain=WIN-IBRQ048NUE1 threatHash=cf1a5bd81285401a7ed8b92bd7e1d2704510b73ee26901993c3c643415572686
startTimeWithTZ=2023-04-21T06:55:20Z hostID=554328661
<166>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|2009|endTime=Apr 21 2023
06:53:21 deviceName=PI threatPath=C:\Users\tester\Desktop\virus_backup_zip\TMDCTSample\tsctestr.exe
scanningToolId=2203-3838-BD0107000B9808647005 devTime=2023-04-21T06:53:19Z
deviceSid=BD0107000B9808647005 hostMac=00:0c:29:7e:3b:5a aggressiveLevel=0 threatType=Virus threatRisk=1
threatHash=b410692222eb22ff801e31ef36a9f7b40c6d24a7dc0d29dcda3b8599bce1dea4 userName=tester threatName=TSCTESTFILE
takenAct=Clean endTimeWithTZ=2023-04-21T06:53:21Z receivedTime=2023-05-03T08:50:23Z cat=2 sev=6
hostName=WIN-G04T0F1B300 hostIP=192.168.244.135 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX logVersion=3.0
logID=e9144f62-0b2d-44c2-b365-8e8e5025c455 deviceVid=2203 devicePid=3838 hostDomain=WIN-G04T0F1B300
hostOS=Microsoft Windows 8 Enterprise Edition (build 9200), 32-bit startTime=Apr 21 2023 06:53:19
deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91 takenActResult=Fixed at restart startTimeWithTZ=2023-04-21T06:53:19Z
hostID=554328661
<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|2000|devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX
startTime=Apr 21 2023 06:53:19 aggressiveLevel=0 threatName=Eicar_test_file takenActResult=Fixed
logVersion=3.0 devicePid=3838 threatRisk=1 endTimeWithTZ=2023-04-21T06:53:21Z receivedTime=2023-05-03T08:50:23Z
devTime=2023-04-21T06:53:19Z userName=tester hostOS=Microsoft Windows 8 Enterprise
Edition (build 9200), 32-bit threatType=Virus takenAct=Clean cat=2 hostIP=192.168.244.135
threatHash=275a021bbfb6489e54d471899f7db9d1663fc695ec2fe2a2c4538aabf651fd0f sev=2
logID=e9144f62-0b2d-44c2-b365-8e8e5025c455 endTime=Apr 21 2023 06:53:21 deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91
deviceVid=2203 deviceName=PI hostName=WIN-G04T0F1B300 hostDomain=WIN-G04T0F1B300 hostMac=00:0c:29:7e:3b:5a
startTimeWithTZ=2023-04-21T06:53:19Z deviceSid=BD0107000B9808647005 scanningToolId=2203-3838-BD0107000B9808647005
threatPath=C:\Users\tester\Desktop\virus_backup_zip\TMCLOUDVirusAgentPattern\eicar.com hostID=554328661
<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|2000|sev=2 endTime=Apr 21 2023 06:41:06
hostOS=Microsoft Windows 10 Professional (build 19045), 64-bit threatPath=C:\Users\tester\Desktop\export_csv\eicar.txt
scanningToolId=2203-3838-BD0107000B9808647005 startTimeWithTZ=2023-04-21T06:41:05Z startTime=Apr 21

```

```

2023 06:41:05 deviceVid=2203 takenActResult=Fixed receivedTime=2023-05-03T08:50:23Z logVersion=3.0
deviceID=6589f1e1-9104-4d36-adc4-663d4135ca91 deviceName=PI hostDomain=NT AUTHORITY hostMac=00:0c:29:e6:fa:4d
threatName=Eicar_test_file devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX hostName=DESKTOP-I0IVD35 threatType=Virus
threatRisk=1 threatHash=275a021bbfb6489e54d471899f7db9d1663fc695ec2fe2a2c4538aabf651fd0f devTime=2023-04-21T06:41:05Z
deviceSid=BD0107000B9808647005 userName=SYSTEM aggressiveLevel=0 cat=2 hostIP=192.168.60.156
logID=6c9ea243-028e-46f4-bb87-0d8fe211cfb4 takenAct=Clean endTimeWithTZ=2023-04-21T06:41:06Z devicePid=3838
hostID=554328661

```

Asset Info

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=3
devTime	System Time	devTime=2022-08-25T10:20:50Z
devTimeFormat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'HH:mm:ss-XXX
sev	Severity • Informational: 2 • Low: 4 • Medium: 6 • High: 8 • Critical: 10	sev=2

Custom Keys

Key	Description	Example
hostID	Host ID	hostID=554328661
hostName	Host Name	hostName=DESKTOP-DQVS8QS
domain	Domain	domain=DESKTOP-DQVS8QS
Mac	MAC Address	Mac=00:0C:29:DC:07:3A
IP	IPV4 Address	IP=192.168.137.235

Key	Description	Example
OS	OS	OS=Microsoft Windows 10 Enterprise Edition (build 19041), 32-bit
OSType	The asset's OS type • Windows • Linux	OSType=Windows
vendor-Name	Vendor Name	vendorName=VMware, Inc.
hwModel	Hardware Model	hwModel=VMware Virtual Platform
hwSerial-Num	Hardware Serial Number	hwSerialNum=VMware-56 4d 7e 74 92 98 22 24-39 26 f9 86 65 dc 07 3a
biosVersionAndDate	BIOS Version and Date	biosVersionAndDate={INTEL - 6040000, PhoenixBIOS 4.0 Release 6.0 }(Release Date: 2017-05-19 00:00:00.000)
biosType	BIOS type	biosType=UEFI
secureBoot	secure boot	secureBoot=False
CPU	CPU	CPU=Intel(R) Core(TM) i7-9700 CPU @ 3.00GHz
CPUArchitecture	CPU architecture	CPUArchitecture=X64
numOfLogicalProcessors	Number of logical processors	numOfLogicalProcessors=1
numOfCores	Number of CPU cores	numOfCores=2
physicalMemory	Physical Memory	physicalMemory=2096628KB
availableMemory	Available Memory	availableMemory=929560KB

Key	Description	Example
OSVersion-AndBuild	OS version and build	OSVersionAndBuild=Microsoft Windows 10 Enterprise 10.0.19041
OSService-Pack	OS service pack	OSServicePack=1.0
OSProductID	OS product id	OSProductID=00328-90000-00000-AAOEM
OSLanguage	OS language	OSLanguage=en-US
OSInstalled-DateAnd-Time	OS installed date and time	OSInstalledDateAndTime=05032020 11:18:20
IEVersion-AndBuild	IE version and build	IEVersionAndBuild=11.329.19041.0
IEService-Pack	IE service pack	IEServicePack=KB4561603
IEUpdateVersion	IE update version	IEUpdateVersion=11.0.195
windows-Directory	Windows directory	windowsDirectory=C:\Windows
systemDirectory	system directory	systemDirectory=C:\Windows\system32
systemDriveSize	system drive size	systemDriveSize=39GB
systemDriveAvailableSize	system drive available size	systemDriveAvailableSize=24GB
bootDrive	boot drive	bootDrive=\Device\HarddiskVolume1
timezone	timezone	timezone=UTC Z

Key	Description	Example
system-DateAnd-Time	system date and time	systemDateAndTime=10072020 11:41:21
loggedin-Account	logged in account	loggedinAccount=abc
loggedin-Domain	logged in domain	loggedinDomain=DESKTOP-DQVS8QS
scanning-ToolId	Device USB ID	scanningToolId=2203-3838-BD0107089A38A920BD25
system-DateAnd-TimeWith-TZ	system date and time with timezone (ISO 8601)	systemDateAndTimeWith-TZ=2022-08-25T10:20:50Z
OSIn-stalled-DateAnd-TimeWith-TZ	OS installed date and time with timezone (ISO8601)	OSInstalledDateAndTimeWith-TZ=2022-08-25T10:20:50Z
received-Time	Log receipt time	receivedTime=2022-08-25T10:20:50Z
IPs	IPs of all network interfaces, separated by comma	IPs=10.0.0.1,10.0.0.2
Macs	MAC addresses of all network interfaces, separated by comma. It won't include the interfaces that do not have an IP assigned.	Macs=00:0c:29:dc:07:3a,00:0c:29:dc:07:3b
numOfC-DR0M	Number of CD-ROM devices. If the information is unavailable, then the value will be 0.	numOfCDROM=1
numOfConnUSB	Number of connected USB devices. If the information is unavailable, then the value will be 0.	numOfConnUSB=1
assetLogID	Asset log ID	assetLog-ID=f21cf34b-2987-4aa9-9b29-cc85f95aa593

Event ID and Severity

Event ID	Description	Severity
3000	No threats found	2

Log Sample

```
<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|3000|physicalMemory=0KB availableMemory=0KB
scanningToolId=2203-3838-BD0107000B9808647005 systemDirectory= OSInstalledDateAndTimeWithTZ= IP=192.168.244.134
OS=Linux 3.10.0-1062.el7.x86_64 #1 SMP Wed Aug 7 18:08:02 UTC 2019 CPUArchitecture= OSServicePack= OSProductID=
IEVersionAndBuild= bootDrive= timezone= biosVersionAndDate= numOfLogicalProcessors=0 OSVersionAndBuild=
loggedinAccount= domain= OSLanguage= systemDateAndTime=01019999 00:00:00 sev=2 biosType= OSInstalledDateAndTime=
hwModel= windowsDirectory= systemDriveAvailableSize=0GB receivedTime=2023-05-03T08:50:23Z devTime=9999-01-01T00:00:00Z
hostName=localhost.localdomain vendorName= OStype=Linux IEServicePack= systemDriveSize=0GB loggedinDomain=
cat=3 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX hostID=1574832979 CPU= numOfCores=0 IEUpdateVersion=
systemDateAndTimeWithTZ=9999-01-01T00:00:00Z Mac=00:0c:29:a7:03:50 hwSerialNum= secureBoot=false IPs=192.168.244.134
Macs=00:0c:29:a7:03:50 numOfCDROM=1 numOfConnUSB=1

<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|3000|vendorName=VMware,
Inc. OSInstalledDateAndTime=04072022 01:54:33 cat=3 domain=WIN-IBRQ048NUE1 Mac=00:0c:29:13:53:c3
systemDirectory=C:\Windows\system32 loggedinAccount=tester scanningToolId=2203-3838-BD0107000B9808647005
hostName=WIN-IBRQ048NUE1 biosType=UEFI numOfCores=1 IEVersionAndBuild=8.0.7600.16385 hwModel=VMware7,1
hwSerialNum=VMware-56 4d 90 a2 a4 a9 77 7e-36 c2 2b 69 33 13 53 c3 numOfLogicalProcessors=1
systemDriveAvailableSize=30GB devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX OSVersionAndBuild=Microsoft Windows
7 Enterprise 6.1.7600 systemDriveSize=59GB secureBoot=false CPUArchitecture=X64 physicalMemory=2096152KB
availableMemory=1486916KB OSLanguage=en-US sev=2 devTime=2023-04-21T06:54:49Z OStype=Windows IEUpdateVersion=
OSInstalledDateAndTimeWithTZ=2022-07-04T01:54:33Z loggedinDomain=WIN-IBRQ048NUE1 biosVersionAndDate={INTEL
- 6040000}(Release Date: 2021-08-09 00:00:00.000) windowsDirectory=C:\Windows systemDateAndTime=21042023
06:54:49 IEServicePack= bootDrive=\Device\HarddiskVolume1 systemDateAndTimeWithTZ=2023-04-21T06:54:49Z
receivedTime=2023-05-03T08:50:23Z CPU=Intel(R) Core(TM) i7-10700 CPU @ 2.90GHz OSServicePack=
OSProductID=00392-918-5000002-85411 timezone=UTC Z hostID=2600281759 IP=192.168.244.163 OS=Microsoft Windows 7
Enterprise Edition (build 7600), 64-bit IPs=192.168.244.163 Macs=00:0c:29:13:53:c3 numOfCDROM=1 numOfConnUSB=1

<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|3000|biosType=UEFI CPU=Intel(R) Core(TM) i7-10700
CPU @ 2.90GHz loggedinAccount=tester biosVersionAndDate={INTEL - 6040000, VMW71.00V.18452719.B32.2108091906,
VMware, Inc. - 10000}(Release Date: 2021-08-09 00:00:00.000) availableMemory=1205356KB OSVersionAndBuild=Microsoft
Windows 8 Enterprise 6.2.9200 IEVersionAndBuild=10.0.9200.16384 systemDriveSize=59GB secureBoot=false
OSInstalledDateAndTime=27062022 03:59:56 windowsDirectory=C:\Windows receivedTime=2023-05-03T08:50:23Z
CPUArchitecture=X64 physicalMemory=2096128KB OSServicePack= sev=2 hostName=WIN-G04T0F1B300 OS=Microsoft Windows 8
```

```

Enterprise Edition (build 9200), 32-bit vendorName=VMware, Inc. hwModel=VMware7,1 OSProductID=00178-90000-00011-AA126
OSLanguage=en-US IEUpdateVersion=RTM systemDateAndTime=21042023 06:52:36 systemDateAndTimeWithTZ=2023-04-21T06:52:36Z
domain=WIN-G04T0F1B300 IP=192.168.244.135 bootDrive=\Device\HarddiskVolume1 loggedinDomain=WIN-G04T0F1B300
timezone=UTC -7:00 devTime=2023-04-21T06:52:36Z Mac=00:0c:29:7e:3b:5a numOfLogicalProcessors=1 IEServicePack=KB2718695
systemDirectory=C:\Windows\system32 hostID=3394376507 OStype=Windows systemDriveAvailableSize=50GB
OSInstalledDateAndTimeWithTZ=2022-06-27T03:59:56Z cat=3 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX hwSerialNum=VMware-56
4d c6 f4 03 bb dd 94-97 c6 bb 12 97 7e 3b 5a numOfCores=1 scanningToolId=2203-3838-BD0107000B9808647005
IPs=192.168.244.135 Macs=00:0c:29:7e:3b:5a numOfCDROM=1 numOfConnUSB=1
<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|3000|devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX
IP=192.168.60.156 OS=Microsoft Windows 10 Professional (build 19045), 64-bit secureBoot=false OSProductID=
OSInstalledDateAndTime= IEServicePack= OSLanguage= IEUpdateVersion= systemDirectory= loggedinDomain= cat=3
domain=NT AUTHORITY hwSerialNum= systemDriveAvailableSize=0GB systemDateAndTime=01019999 00:00:00 sev=2
devTime=9999-01-01T00:00:00Z OStype=Windows vendorName= CPU= numOfLogicalProcessors=0 physicalMemory=0KB
receivedTime=2023-05-03T08:50:23Z hostID=391445145 systemDriveSize=0GB systemDateAndTimeWithTZ=9999-01-01T00:00:00Z
hostName=DESKTOP-I0IVD35 biosVersionAndDate= CPUArchitecture= numOfCores=0 bootDrive= loggedinAccount=
OSVersionAndBuild= OSServicePack= windowsDirectory= scanningToolId=2203-3838-BD0107000B9808647005
OSInstalledDateAndTimeWithTZ= Mac=00:0c:29:e6:fa:4d hwModel= biosType= availableMemory=0KB IESVersionAndBuild=
timezone= IPs=192.168.60.156 Macs=00:0c:29:e6:fa:4d numOfCDROM=1 numOfConnUSB=1
<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|3000|systemDateAndTime=21122022 00:36:43
receivedTime=2023-05-03T08:50:23Z IP=192.168.244.132 biosVersionAndDate={INTEL - 6040000, PhoenixBIOS 4.0 Release
6.0 }(Release Date: 2020-11-12 00:00:00.000) OSVersionAndBuild=Microsoft® Windows Vista™ Enterprise 6.0.6000
IESVersionAndBuild=7.0.6000.16386 bootDrive=\Device\HarddiskVolume1 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX
devTime=2022-12-21T00:36:43Z domain=LH-IR63U9R6LPUC CPU=Intel(R) Core(TM) i7-10700 CPU @ 2.90GHz
OSInstalledDateAndTimeWithTZ=2022-12-20T17:41:24Z vendorName=VMware, Inc. hwModel=VMware Virtual Platform
OSInstalledDateAndTime=20122022 17:41:24 IEServicePack= systemDirectory=C:\Windows\system32 timezone=UTC
Z cat=3 hostName=LH-IR63U9R6LPUC OStype=Windows OSServicePack= OSProductID=89586-236-0200203-71700
hostID=4032625316 secureBoot=false scanningToolId=2203-3838-BD0107000B9808647005 windowsDirectory=C:\Windows
Mac=00:0c:29:a9:12:ba OS=Microsoft Windows Vista Enterprise Edition (build 6000), 64-bit biosType=Legacy
CPUArchitecture=X64 availableMemory=1311540KB numOfLogicalProcessors=1 physicalMemory=2096000KB
systemDriveSize=39GB systemDriveAvailableSize=27GB loggedinAccount=tester loggedinDomain=LH-IR63U9R6LPUC sev=2
hwSerialNum=VMware-56 4d b7 a1 f4 89 57 08-e4 77 32 5d d5 a9 12 ba numOfCores=1 OSLanguage=en-US IEUpdateVersion=
systemDateAndTimeWithTZ=2022-12-21T00:36:43Z IPs=192.168.244.132 Macs=00:0c:29:a9:12:ba numOfCDROM=1 numOfConnUSB=1

```

Application Info

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=4
devTime	Asset's System Time	devTime=2022-08-25T10:20:50Z
devTimeFormat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'HH:mm:ss-XXX
sev	Severity • Informational: 2 • Low: 4 • Medium: 6 • High: 8 • Critical: 10	sev=2

Custom Keys

Key	Description	Example
hostID	Host ID	hostID=554328661
hostName	Host Name	hostName=DESKTOP-DQVS8QS
name	Application Name	name=7-Zip 19.00
publisher	Publisher	publisher=Igor Pavlov
installedDate	Date of Installation	installedDate=22062020
size	File Size	size=3772KB
version	Application Version	version=19.00
installPath	Application Install Path	installPath=C:\Program Files\7-Zip\
installedDate-WithTZ	Date of Installation with time zone (ISO 8601)	installedDateWith-TZ=2022-08-25T10:20:50Z

Key	Description	Example
assetLogID	Asset log ID	assetLog- ID=f21cf34b-2987-4aa9-9b29-cc85f95aa593

Event ID and Severity

Event ID	Description	Severity
3000	Every log of assetinfo, applicationinfo, updateinfo	2

Log Sample

```
<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|3000|devTime=2023-04-21T06:54:49Z
hostID=2600281759 hostName=DESKTOP-I0IVD35 version=21.05 installPath=C:\Program Files\7-Zip\ publisher=Igor Pavlov
installedDate= size=5418KB installedDateWithTZ= cat=4 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX sev=2 name=7-Zip 21.05
(x64)
<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|3000|cat=4 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX
devTime=2023-04-21T06:52:36Z publisher=Igor Pavlov size=4002KB installPath=C:\Program Files\7-Zip\
installedDateWithTZ= sev=2 hostID=3394376507 hostName=DESKTOP-I0IVD35 name=7-Zip 21.05 installedDate= version=21.05
<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|3000|version=14.28.29913.0 sev=2
devTime=2023-04-21T06:52:36Z publisher=Microsoft Corporation size=21559KB installedDate= installPath=
installedDateWithTZ= cat=4 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX hostID=3394376507 hostName=DESKTOP-I0IVD35
name=Microsoft Visual C++ 2015-2019 Redistributable (x86) - 14.28.29913
<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|3000|devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX sev=2
devTime=2023-04-21T06:52:36Z name=VMware Tools installedDate=26062022 cat=4 publisher=VMware, Inc. size=58972KB
version=11.3.5.18557794 installPath=C:\Program Files\VMware\VMware Tools\ installedDateWithTZ=2022-06-26T07:00:00Z
hostID=3394376507 hostName=DESKTOP-I0IVD35
```

Update Info

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=5
devTime	Asset's System Time	devTime=2022-08-25T10:20:50Z

Key	Description	Example
devTimeFormat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'HH:mm:ss-XXX
sev	Severity • Informational: 2 • Low: 4 • Medium: 6 • High: 8 • Critical: 10	sev=2

Custom Keys

Key	Description	Example
hostID	Host ID	hostID=554328661
hostName	Host Name	hostName=DESKTOP-DQVS8QS
name	Update Program Name	name=Service Pack 2 for SQL Server 2014 (KB3171021)
program	Program Name	program=Microsoft SQL Server 2014
version	Program Version	version=12.2.5000.0
publisher	Publisher	publisher=Microsoft Corporation
installedDate	Installed Date	installedDate=16062020
installedDate-WithTZ	Date installed with time zone (ISO 8601)	installedDateWithTZ=2022-08-25T10:20:50Z
assetLogID	Asset log ID	assetLog - ID=f21cf34b-2987-4aa9-9b29-cc85f95aa593

Event ID and Severity

Event ID	Description	Severity
3000	Every log of assetinfo, applicationinfo, updateinfo	2

Log Sample

```
<162>2023-05-05T03:21:33Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|3000|name=Update for Microsoft Windows (KB2999226)
publisher=Microsoft Corporation installedDate=27062022 installedDateWithTZ=2022-06-27T07:00:00Z cat=5 sev=2
devTime=2023-04-21T06:52:36Z hostID=3394376507 hostName=DESKTOP-I0IVD35 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX
program=Microsoft Windows version=
```

Vulnerability Info

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=6
devTime	The last time ElementOne investigated the asset's vulnerability	devTime=2022-08-25T10:20:50Z
devTimeFormat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'H-H:mm:ssXXX
sev	Severity • Informational: 2 • Low: 4 • Medium: 6 • High: 8 • Critical: 10	sev=2

Custom Keys

Key	Description	Example	Comment
vulnScanID	Vulnerability scan ID, which can be used to find the related vulnerability summary and vulnerability info logs.	vulnScan-ID=495e6b41-886e-4b-fa-b9d0-214ee1a4107e	Generated randomly by log sender
hostID	Host ID	hostID=554328661	
hostName	Host Name	hostName=DESKTOP-DQVS8QS	

Key	Description	Example	Comment
cveID	CVE ID	cveID=CVE-2022-34691	
CVSS3Score	CVSS 3 Score	CVSS3Score=8.8	
productName	Installed product name	productName=Windows 10 Version 21H1 for x64-based Systems	
fixedVersion	The product version that resolves the vulnerability	fixedVersion=10.0.19043-.2728	
windowsUpdates	The KB ID of Windows Updates that resolve the vulnerability. Multiple IDs are separated by comma.	windowsUpdates=KB5023696	
lastInvestTime	The last time ElementOne investigated the asset's vulnerability	lastInvestTime=2023-05-12T03:04:50Z	
impactedVersion	The impacted product versions	impactedVersion=[4.1.0,4.18.8)	• Reference: https://maven.apache.org/enforcer/enforcer-rules/version-ranges.html • There are two special formats: ◦ [*] which means ALL ◦ [-] which means N/A

Log Sample

```
<168>2023-05-16T10:10:58Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|4000|productName=Windows 10 Version 21H1
for x64-based Systems fixedVersion=10.0.19043.2728 windowsUpdates=KB5023696 cat=6 sev=8 hostID=1379288904
hostName=DESKTOP-I0IVD35 cveID=CVE-2022-44678 CVSS3Score=7.8 lastInvestTime=2023-05-16T10:10:49Z
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX impactedVersion= devTime=2023-05-16T10:10:49Z
```

```
<166>2023-05-16T10:10:58Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|4000|cat=6 lastInvestTime=2023-05-16T10:10:49Z
CVSS3Score=6.5 productName=Windows 10 Version 21H1 for x64-based Systems fixedVersion=10.0.19043.2728
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX devTime=2023-05-16T10:10:49Z sev=6 hostID=1379288904 hostName=DESKTOP-I0IVD35
cveID=CVE-2022-44679 windowsUpdates=KB5023696 impactedVersion=

<168>2023-05-16T10:10:58Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|4000|CVSS3Score=7.8 fixedVersion=10.0.19043.2728
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX devTime=2023-05-16T10:10:49Z sev=8 productName=Windows 10 Version 21H1
for x64-based Systems windowsUpdates=KB5023696 lastInvestTime=2023-05-16T10:10:49Z cat=6 hostID=1379288904
hostName=DESKTOP-I0IVD35 cveID=CVE-2022-44680 impactedVersion=

<168>2024-08-23T02:24:36Z host LEEF:2.0|vendor|product|1.0|4000|cat=6 fixedVersion= windowsUpdates=
impactedVersion=[4.1.0,4.16.8) hostName=hostname CVSS3Score=7.0 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX
devTime=2020-01-02T00:00:00Z sev=8 lastInvestTime=2020-01-02T00:00:00Z vulnScanID=vulnid hostID=12345678
cveID=CVE-2020-1234 productName=product
```

Vulnerability Summary

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=7
devTime	The last time ElementOne investigated the asset's vulnerability	devTime=2022-08-25T10:20:50Z
devTimeFormat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'H-H:mm:ssXXX
sev	Severity • Informational: 2 • Low: 4 • Medium: 6 • High: 8 • Critical: 10	sev=2

Custom Keys

Key	Description	Example
vulnScan-ID	Vulnerability scan ID, which can be used to find the related vulnerability info logs.	vulnScanID=495e6b41-886e-4b-fa-b9d0-214ee1a4107e
hostID	Host ID	hostID=554328661
host-Name	Host Name	hostName=DESKTOP-DQVS8QS
numOf-Critical	The number of critical vulnerabilities	numOfCritical=3
numOf-High	The number of high vulnerabilities	numOfHigh=3
numOf-Medium	The number of medium vulnerabilities	numOfMedium=3
numOf-Low	The number of low vulnerabilities	numOfLow=3
lastInvestTime	The last time ElementOne investigated the asset's vulnerability	lastInvestTime=2023-05-12T03:04:50Z
asset-LogID	Asset log ID	assetLog-ID=f21cf34b-2987-4aa9-9b29-cc

Log Sample

```
<170>2023-07-13T07:44:58Z elementone LEEF:2.0|TXOne|ElementOne|1.8.2|5000|numOfCritical=4 numOfHigh=161
devTime=2023-06-27T07:03:25Z hostID=1379288904 sev=10 vulnScanID=bfd5b288-88e5-4edd-b784-a44cec1ba9bd
hostName=DESKTOP-CQUJVFT numOfMedium=43 numOfLow=1 lastInvestTime=2023-06-27T07:03:25Z cat=7
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX
```

Safe Port Scan Summary

Event ID

Event ID	Description
101000	Scan finished.

Event ID	Description
101001	Scan interrupted.

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=101
devTime	Event Start Time	devTime=2022-08-25T10:20:50Z
devTimeFormat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'HH:mm:ss-XXX
sev	Severity • Informational: 2 • Low: 4 • Medium: 6 • High: 8 • Critical: 10	sev=2

Custom Keys

Key	Description	Example
scanTaskID	Scan Task ID	scanTaskID=495e6b41-886e-4b-fa-b9d0-214ee1a4107e
sourceID	Safe Port ID	source-ID=ES101-76CB6E9B-4795-4AE6-8F-BB-424AA897A618
sourceName	Safe Port Name	sourceName=Safe Port
sourceVersion	Safe Port Version	sourceVersion=1.0.0
scanAction	Safe Port Scan Action Policy	scanAction=Log only

Key	Description	Example
	• Log only • Delete • Lock • Confirm	
scanStatus	Scan Status • Finished • Interrupted	scanStatus=Finished
scanResult	Scan Result	scanResult=No threats found
startTime	Scan Start Time	startTime=2022-08-25T10:20:50Z
endTime	Scan End Time	endTime=2022-08-25T10:20:50Z
numOfScannedFiles	Number of Scanned Files	numOfScannedFiles=100
numOfCleanedFiles	Number of Cleaned Files	numOfCleanedFiles=100
numOfInfectedFiles	Number of Infected Files	numOfInfectedFiles=100
numOfUnscannableFiles	Number of Unscannable Files	numOfUnscannableFiles=100
removableMediaSN	Removable Device Serial Number	deviceSN=MYDEVICE1234567890
removableMediaName	Removable Media Name	removableMediaName=Kingston DataTraveler 3.0 USB Device
user	A JSON string contains user information, or an empty string if the userType is Anonymous	user={"ver":1,"user_name":"User_123"}
userType	User Type	userType=Anonymous

Key	Description	Example
	• Anonymous • Guest • Employee	
scanEngine-Version	Scan Engine Version	scanEngineVersion=1.0.0
virusPattern-Version	Virus Pattern Version	virusPatternVersion=1.0.0
spywarePatternVersion	Spyware Pattern Version	spywarePatternVersion=1.0.0

Severity Mapping

- High
 - Has threats that can't be handled by the action.
 - Has unscannable files that can't be locked.
- Low
 - Has unscannable files, and the action is not Lock.
- Informational
 - No threats, or all threats/unscannable files are handled by the action.

Log Sample

```
<168>2023-11-15T07:33:47Z elementone LEEF: 2.0|TX0ne|ElementOne|1.8.2|101000|sev=8
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX devTime=2023-11-15T00:00:00Z startTime=2023-11-15T00:00:00Z
numOfUnscannableFiles=1 userType=Anonymous scanTaskID=4064b5ee-842e-438d-a349-8e04867b9e28
sourceID=ES101-AC961C47-5A0F-4DB9-9716-04550DF70396 sourceName=Safe Port scanAction=Log only scanStatus=Finished
scanResult=Threats found endTime=2023-11-15T00:01:00Z removableMediaSN=DEVICE-SN-1234 removableMediaName=Kingston
DataTraveler 3.0 USB Device cat=101 numOfScannedFiles=2 numOfCleanedFiles=0 numOfInfectedFiles=1 user=
scanEngineVersion=1.0.0 virusPatternVersion=1.0.0 spywarePatternVersion=1.0.0 sourceVersion=1.0.0
```

Safe Port Infected File

Event ID

Event ID	Description
102000	Infected file

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=102
devTime	Event Start Time	devTime=2022-08-25T10:20:50Z
devTimeFormat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'HH:mm:ss-XXX
sev	Severity • Informational: 2 • Low: 4 • Medium: 6 • High: 8 • Critical: 10	sev=2

Custom Keys

Key	Description	Example
scanTaskID	Scan Task ID	scanTaskID=495e6b41-886e-4bfa-b9d0-214ee1a4107e
threatName	Threat Name	threatName=EICAR_TEST
filePath	File Path	filePath=E:\test.zip
fileHash	File Hash	fileHash=c0839455963609be3363f52397d3353743697d504518d-ca639c77062b42a3a8c
lastModifiedTime	Last Modified Time	lastModifiedTime=2022-08-25T10:20:50Z

Key	Description	Example
action	Action • Log only • Delete • Lock	action=Log only
actionResult	Action Result • Succeeded • Failed	actionResult=Succeeded
actionErr-Reason	The action failure reason	actionErrReason=Permission denied.
actionErr-Type	The action failure type • Windows • ATSE • Libzip • Safe Port	actionErrType=Windows
actionErr-Code	The action failure code	actionErrCode=5

Severity Mapping

- High
 - The threat action result is **Failed**.
- Informational
 - The threat action result is **Succeeded**.

Log Sample

```
<168>2023-11-15T07:33:47Z elementone LEEF:

2.0|TXOne|ElementOne|1.8.2|102000|fileHash=9f86d081884c7d659a2feaa0c55ad015a3bf4f1b2b0b822cd15d6c15b0f00a08

cat=102 devTime=2023-11-15T00:00:00Z scanTaskID=4064b5ee-842e-438d-a349-8e04867b9e28 threatName=EICAR_TEST

filePath=E:\eicar.txt devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX sev=8 lastModifiedTime=2023-11-14T00:00:00Z action=Log

only actionResult=Succeeded actionErrReason=Permission denied. actionErrType=Windows actionErrCode=5
```

Safe Port Unscannable File

Event ID

Event ID	Description
103000	Reason: Undetermined.
103001	Reason: Directory/File permission forbids scan engine from opening the file.
103002	Reason: The media drive was removed during a file scan.
103003	Reason: Media drive not ready or there is a hidden partition in this drive.
103004	Reason: File compression exceeded layer limit of 20.
103005	Reason: The file is password-protected.
103006	Reason: Directory/File permission forbids scan engine from opening the file.
103007	Reason: The file is corrupted.

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=103
devTime	Event Start Time	devTime=2022-08-25T10:20:50Z
devTimeFormat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'HH:mm:ss-XXX
sev	Severity	sev=2

Key	Description	Example
	• Informational: 2 • Low: 4 • Medium: 6 • High: 8 • Critical: 10	

Custom Keys

Key	Description	Example
scanTask-ID	Scan Task ID	scanTaskID=495e6b41-886e-4b-fa-b9d0-214ee1a4107e
filePath	File Path	filePath=E:\test.zip
reason	Reason • Unknown reason. • Directory/File permission forbids scan engine from opening the file. • The media drive was removed during a file scan. • Media drive not ready or there is a hidden partition in this drive. • File compression exceeded layer limit of 20. • The file is protected by password. • Directory/File permission forbids scan engine from opening the file.	reason=Unknown reason.
errType	Scan Error Type • Windows • ATSE	errType=Windows
errCode	Scan Error Code	errCode=5

Key	Description	Example
action	Action • Log only • Lock • Delete • Approve	action=Lock
actionResult	Action Result • Succeeded • Failed	actionResult=Succeeded
actionErrReason	The action failure reason	actionErrReason=Permission denied.
actionErrType	The action failure type • Windows • ATSE • Libzip • Safe Port	actionErrType=Windows
actionErrCode	The action failure code	actionErrCode=5

Severity Mapping

- High
 - The action is Lock, and the actionResult is Failed.
- Low
 - The action is not Lock.
- Information
 - The action is Lock, and the actionResult is Succeeded.

Log Sample

```
<164>2023-11-15T07:33:47Z elementone LEEF: 2.0|TX0ne|ElementOne|1.8.2|103001|reason=Directory/File permission  
forbids scan engine from opening the file. filePath=E:\noperm devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX  
devTime=2023-11-15T00:00:00Z sev=4 scanTaskID=4064b5ee-842e-438d-a349-8e04867b9e28 errType=Windows errCode=5 cat=103  
action=Lock actionResult=Failed actionErrReason=Permission denied. actionErrType=Windows actionErrCode=5
```

Safe Port Suspicious File Unlock History

Event ID

Event ID	Description
104000	Unlock file succeeded.
104001	Unlock file failed.

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=104
devTime	Start Time	devTime=2022-08-25T10:20:50Z
devTimeFor- mat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'HH:mm:ss- XXX
sev	Severity Informational: 2 Low: 4 Medium: 6 High: 8 Critical: 10	sev=2

Custom Keys

Key	Description	Example
scanTaskID	Scan task ID	scanTaskID=495e6b41-886e-4b-fa-b9d0-214ee1a4107e
unlockTaskID	Unlock task ID	unlockTask-ID=36fc813e-7f9b-4fde-9927-efde4f3836fe
sourceID	Safe Port ID	source-ID=ES101-76CB6E9B-4795-4AE6-8FB-B-424AA897A618
sourceName	Safe Port Name	sourceName=Safe Port
startTime	Unlock task start time	startTime=2022-08-25T10:20:50Z
endTime	Unlock task end time	endTime=2022-08-25T10:20:50Z
removable-MediaSN	Removable Media Serial Number	removableMediaSN=MYDE-VICE1234567890
removable-MediaName	Removable Media Name	removableMediaName=Kingston DataTraveler 3.0 USB Device
unlockResult	Unlock Result • Succeeded • Failed	unlockResult=Succeeded
filePath	The original file path	filePath=E:\test.zip
unlockedFile-Path	The file path after unlocked, the value is provided only if the result is Succeeded	unlockedFilePath=E:\Safe_Port_Unlocked\test.zip
unlockErr-Reason	The unlock failure reason, the value is provided only if the result is Failed	unlockErrReason=Permission denied.
unlockErr-Type	The unlock failure type, the value is provided only if the result is Failed	unlockErrType=Windows

Key	Description	Example
	• Windows • ATSE • Libzip • Safe Port	
unlockErr-Code	The unlock failure code, the value is provided only if the result is Failed	unlockErrCode=5

Severity Mapping

- High
 - Unlock failed.
- Information
 - Unlock succeeded.

Log Sample

```
<162>2024-04-29T10:05:48Z elementone LEEF: 2.0|TX0ne|ElementOne|1.9.0|104000|unlockErrCode=0 sev=2
scanTaskID=60511657-1fa0-491e-92b7-f6d2a0652913 unlockTaskID=f883ffdf-d522-4492-ae0f-1ca8db152fdb
removableMediaName=Kingston DataTraveler 3.0 USB Device
unlockedFilePath=E:\Safe_Port_Unlocked\20240422_174923_67042cc1-1f80-4e4b-96c3-141294de8de3\note.7z
unlockErrReason=Unknown reason devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX sourceName=Safe Port
startTime=2023-11-07T07:12:36Z removableMediaSN=09511666E0D55E6CE77CF761A9B614EF unlockErrType=
sourceID=ES101-B2373498-AE46-4FB5-B2D7-28E107574E12 endTime=2023-11-07T07:12:36Z filePath=C:\note.7z cat=104
devTime=2023-11-07T07:12:36Z unlockResult=Succeeded
```

Safe Port Wipe Log

Event ID

Event ID	Description
105000	Wiping log event

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=105
devTime	Start Time	devTime=2022-08-25T10:20:50Z
devTimeFormat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'HH:mm:ss-XXX
sev	Severity Informational: 2 Low: 4 Medium: 6 High: 8 Critical: 10	sev=2

Custom Keys

Key	Description	Example
sourceID	Safe Port ID	source-ID=ES101-76CB6E9B-4795-4AE6-8F-BB-424AA897A618
source-Name	Safe Port Name	sourceName=Safe Port
startTime	Wiping task start time	startTime=2022-08-25T10:20:50Z
removable-MediaSN	Removable Media Serial Number	removableMediaSN=MYDEVICE1234567890
user	A JSON string contains user information, or an empty string if the userType is Anonymous	user={"ver":1,"user_name":"User_123"}
userType	User Type	userType=Anonymous

Key	Description	Example
	• Anonymous • Guest • Employee	
wipingResult	The results of the wiping • Succeeded • Failed	wipingResult=Succeeded

Wiping Result Mapping

- Succeeded
 - DB(qyawan_wipe_logs.error_type) is NULL
- Failed
 - DB(qyawan_wipe_logs.error_type) is not NULL

Log Sample

```
<162>2024-04-29T10:05:48Z elementone LEEF: 2.0|TXOne|ElementOne|1.9.0|105000|sev=2
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX sourceName=Safe Port startTime=2023-11-07T07:12:36Z
removableMediaSN=09511666E0D55E6CE77CF761A9B614EF sourceID=ES101-B2373498-AE46-4FB5-B2D7-28E107574E12
user={"ver":1,"user_name":"User_123"} userType=Guest cat=105 devTime=2023-11-07T07:12:36Z wipingResult=Succeeded
```

Safe Port Media Check Log

Event ID

Event ID	Description
106000	Media Check log event

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=106

Key	Description	Example
devTime	Event Start Time	devTime=2025-01-20T10:20:50Z
devTimeFormat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'HH:mm:ss-XXX
sev	Severity Informational: 2 Low: 4	sev=4

Custom Keys

Key	Description	Example
media-CheckID	Media Check Log ID	mediaCheckID=A125CB7E-6A6B-4E8C-8D7317CD67773CBE
startTime	Check Start Time	startTime=2025-01-20T10:20:50Z
sourceID	Safe Port ID	sourceID=ES101-76CB6E9B-4795-4AE6-8FB-B-424AA897A618
source-Name	Safe Port Name	sourceName=Safe Port
remov-ableMediaName	Removable Media Name	removableMediaName=Kingston DataTraveler 3.0 USB media
remov-ableMediaSN	Removable Media SN	removableMedia-SN=09511666E0D55E6CE77CF761A9B614EF
user	User	user={"ver":1,"user_name":"User_123"}
userType	User Type • Anonymous • Guest • Employee	userType=Guest

Key	Description	Example
mediaStatus	Media Check Result • All scanned storage space(1) • Unsupported storage space found(2) • No scanned storage space & media is unpartitioned(3) • No scanned storage space & media is unsupported(4)	mediaStatus=1
storage-Media-Type	Storage Media Type • Disk(1) • CDROM(2)	storageMediaType=1
storageSpaceInfo	Storage Space Information • storage_space_type ◦ Scanned storage space(1) ◦ Unsupported storage space(2) ◦ Unallocated space(3)	storageSpaceInfo=[{"storage_space_type":1,"size":10737418240,"drive_letter":"J","volume_name":"MyUSB","file_system":"NTFS"}]
unallocatedSpaceSize	Unallocated Space Size	unallocatedSpaceSize=10737418240

Severity Mapping

- Informational (2)
 - mediaStatus == 1 # All scanned storage space
 - mediaStatus == 3 # No scanned storage space & media is unpartitioned
- Low (4)
 - mediaStatus == 2 # Unsupported storage space found
 - mediaStatus == 4 # No scanned storage space & media is unsupported

Log Sample

```
<164>2025-01-20T10:20:50Z elementone LEEF:2.0|TXOne|ElementOne|1.18.0|106000|devTime=2025-01-20T10:20:50Z  
  
mediaCheckID=A125CB7E-6A6B-4E8C-8D7317CD67773CBE sev=4 devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX  
  
cat=106 sourceID=ES101-76CB6E9B-4795-4AE6-8FBB-424AA897A618 sourceName=Safe Port  
  
user={"ver":1,"user_name":"User_123"} userType=Guest removableMediaName=Kingston DataTraveler 3.0 USB media  
  
removableMediaSN=09511666E0D55E6CE77CF761A9B614EF startTime=2025-01-20T10:20:50Z mediaStatus=1 storageMediaType=1  
  
storageSpaceInfo=[{"storage_space_type":1,"size":10737418240,"drive_letter":"J","volume_name":"MyUSB","file_system":"N  
TFS"}] unallocatedSpaceSize=10737418240
```

Safe Port Event

Event ID

Event ID	Description
107000	Safe Port connected event
107001	Safe Port disconnected event

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=107
devTime	Event Start Time	devTime=2025-01-20T10:20:50Z
devTimeFor- mat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'HH:mm:ss- XXX
sev	Severity	sev=4

Key	Description	Example
	Informational: 2 Low: 4	

Custom Keys

Key	Description	Example
device-Name	Device Name	Safe Port 3310
hostName	Hostname	DESKTOP-BP231
deviceId	Device ID	ES101-4C4C4544-0030-3110-804D-B1C04F433433
ips_macs	MAC and IP Address	[{"mac": "10:FA:10:60:14:00", "ip": "192.168.0.111"}]

Severity Mapping

- Informational (2)
 - Safe Port connected to ElementOne.
- Medium (6)
 - Safe Port disconnected.

Sample Log

```
<162>2025-01-20T10:20:50Z elementone LEEF:2.0|TXOne|ElementOne|1.19.0|107000|devTime=2025-01-20T10:30:50Z
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX sev=2 cat=107 deviceName=Safe Port 3310 hostName=DESKTOP-BP231
deviceId=ES101-4C4C4544-0030-3110-804D-B1C04F433433 ips_macs=[{"mac": "10:FA:10:60:14:00", "ip": "192.168.0.111"}]
<166>2025-01-20T10:20:50Z elementone LEEF:2.0|TXOne|ElementOne|1.19.0|107001|devTime=2025-01-20T10:20:50Z
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX sev=6 cat=107 deviceName=Safe Port 3310 hostName=DESKTOP-BP231
deviceId=ES101-4C4C4544-0030-3110-804D-B1C04F433433 ips_macs=[{"mac": "10:FA:10:60:14:00", "ip": "192.168.0.111"}]
```

ElementOne Event

Event ID

Event ID	Description
200000	ElementOne start event
200001	ElementOne shutdown event

LEEF Predefined Attributes

Key	Description	Example
cat	Log type	cat=200
devTime	Event Start Time	devTime=2025-01-20T10:20:50Z
devTimeFormat	Date & Time format	devTimeFormat=yyyy-MM-dd'T'HH:mm:ss-XXX
sev	Severity Informational: 2	sev=2

Custom Keys

Key	Description	Example
hostName	Hostname	elementone
elementOneUUID	ElementOne UUID	32546bfd-c6ad-d04d-c8c0-7e1be276d582
ips_macs	MAC and IP Address	[{"mac": "10:FA:10:60:14:00", "ip": "192.168.0.111"}]

Log Sample

```
<162>2025-01-20T10:20:50Z elementone LEEF:2.0|TXOne|ElementOne|1.19.0|200000|devTime=2025-01-20T10:30:50Z
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX sev=2 cat=200 hostName=elementone
elementOneUUID=32546bfd-c6ad-d04d-c8c0-7e1be276d582 ips_macs=[{"mac": "10:FA:10:60:14:00", "ip": "192.168.0.111"}]
<162>2025-01-20T10:20:50Z elementone LEEF:2.0|TXOne|ElementOne|1.19.0|200001|devTime=2025-01-20T10:30:50Z
devTimeFormat=yyyy-MM-dd'T'HH:mm:ssXXX sev=2 cat=200 hostName=elementone
elementOneUUID=32546bfd-c6ad-d04d-c8c0-7e1be276d582 ips_macs=[{"mac": "10:FA:10:60:14:00", "ip": "192.168.0.111"}]
```

Updates

This page allows users to browse and update:

- ElementOne firmware
- Vulnerability Detection Service (VDS) pattern
- Portable Inspector firmware
- Virtual Portable Inspector firmware
- Safe Port firmware
- Scan components of Portable Inspector, Virtual Portable Inspector, and Safe Port (such as engines and patterns)



Note:

Only masteradmin and admins can browse this page.

1. Log in with either a master admin or admin user account and navigate to the “Administration” icon on the menu.
2. Click “Updates” to browse the Updates page.

Updates > ElementOne

This page allows users to browse and update ElementOne firmware, as well as Vulnerability Detection Service pattern.

Upload ElementOne Firmware

Once the ElementOne license has been activated, users can upload and install the ElementOne firmware.



Note:

- You can click “MyTXOne” to get the latest firmware to install.
- You should not change the file name of the ElementOne firmware. ElementOne will check the name and block any invalid file name before uploading.
- The version of the uploaded file must be newer than the current version.

On the **Updates > Tab ElementOne**,

1. Click the **Upload** button to upload the ElementOne firmware.
2. Select the firmware to be installed.
3. Click the **Open** button.
4. After **Open** is clicked, the upload will start, and the progress bar will simultaneously be displayed.
5. Once the upload is finished, the pre-installation details of the identified firmware update file will be displayed for comparison purposes.

You can validate the version and the release date, and then decide whether to install the firmware or abort the installation.

Install ElementOne Firmware

This function allows users to decide whether to install the firmware or abort the installation.

- If the detected firmware update file is not the firmware to be installed,
 1. Click **Abort** button.
 2. Click **Confirm** button to abort the installation and remove the uploaded firmware file.
- If you are sure to install the detected firmware update of the ElementOne,
 1. Click the **Install Now** button to start the installation.
 2. After **Install Now** is clicked, the page will jump to Installation in Progress page.



Note:

- Before installing the ElementOne firmware, make sure no other users are working with ElementOne during the installation.
- After installation complete, the display will jump to Updates > ElementOne page for those who initiated installation to review the update.
- When the installation starts, all other logged in users will see "The site can't be reached". After the installation complete, the page will return to the login page for them to re-login.
- When upgrading firmware, the VDS engine is also updated if a newer version is available.

Update Vulnerability Detection Service Pattern

Once the ElementOne license has been activated and not expired, users can perform Vulnerability Detection Service (VDS) pattern updates on ElementOne. After the update, ElementOne will rescan all assets with the latest pattern.

To perform VDS pattern updates, you can either click on the **Check for Update** button to run an automatic update (refer to **Check for Update on VDS Pattern**) or click on the **Upload** button to manually upload the latest VDS pattern file downloaded from **MyTXOne** portal and saved in your computer (refer to **Upload VDS Pattern**).



Note:

ElementOne will automatically update the Vulnerability Detection Service pattern every day at UTC +0 2:00.

• **Check for Update on VDS Pattern**

1. Go to **Administration > Updates > Tab ElementOne > Section Vulnerability Detection Service (VDS) pattern**, click the **Check for Update** button to perform Vulnerability Detection Service pattern update.
2. After updating, you will see the new **Last Update Time**.

If a new pattern has been applied, you will also see the new **Current Version** and **Release Date**.

• **Upload VDS Pattern**

1. Download the latest VDS pattern from MyTXOne portal and save the file in your computer.
2. Go to **Administration > Updates > Tab ElementOne**.
3. Under the tab **ElementOne**, go to the section **Vulnerability Detection Service (VDS) pattern** and click on **Upload**.
4. Select the VDS pattern saved in your computer.
5. Click on **Open**.
6. If the VDS pattern version you uploaded is older than the current one, you'll a confirmation message box. Click on **Replace** to use the older VDS pattern version you uploaded; click on **Cancel** to use the existing VDS pattern version.
7. After updating, you will see the new **Last Update Time**.

If a new pattern has been applied, you will also see the new **Current Version** and **Release Date**.

Updates > Portable Inspector

This page allows to browse and update the Portable Inspector firmware, as well as its components such as engines and patterns, within ElementOne.

Upload Portable Inspector Firmware

Once either one of the device licenses has been activated on ElementOne and not expired, users are able to update the components within ElementOne.

Device Licenses
Portable Inspector
Portable Inspector Pro



Note:

- You can click MyTXOne to get the latest firmware to install.
- You should not change the file name of the Portable Inspector firmware. ElementOne will check the name and block any invalid file name before commencing with the upload.

1. Click the **Upload** button to upload the Portable Inspector firmware.
2. Select the firmware to be installed.
3. Click the **Open** button.
4. After **Open** is clicked, the upload will immediately start, and the progress bar will simultaneously be displayed.
5. Once the progress bar reaches 100%, ElementOne starts replacing the firmware and the **Cancel** button will be disabled.
6. Wait until the upload is complete.

Upload Earlier or The Same Version of Portable Inspector

Once either one of the device licenses has been activated on ElementOne and not expired, users are able to upload the Portable Inspector/Portable Inspector Pro firmware onto ElementOne.

Device Licenses
Portable Inspector
Portable Inspector Pro

**Note:**

- You can click MyTXOne to get the latest firmware to install.
- You should not change the file name of the Portable Inspector firmware. ElementOne will check the name and block any invalid file name before commencing with the upload.
- The version of the uploaded file can be earlier than the current version.

On the **Updates > Tab Portable Inspector**,

1. Click on **Upload**.
2. Select the earlier or the same version Portable Inspector firmware to use.
3. Click **Open**.
4. "**Previous Update Version Detected**" will pop out and ask for confirmation.
5. Click **Confirm** to perform upload of the earlier firmware version.
6. After **Confirm** is clicked, the upload will immediately start, and the progress bar will simultaneously be displayed.
7. When the progress bar reaches 100%, ElementOne starts replacing the firmware and the **Cancel** button will be disabled.
8. After ElementOne is done reverting to the earlier firmware version, the Portable Inspector Version/ Portable Inspector Pro Version are also made up-to-date.

Update Components

Once either one of the device licenses has been activated on ElementOne and not expired, users are able to update the components on ElementOne. This also allows devices to update their components using ElementOne.

You can either click on the **Check for Update** button to run an automatic update (refer to **Check for Update on Anti-Virus Pattern**) or click on the **Upload** button to manually upload the latest anti-virus pattern file downloaded from **MyTXOne** portal and saved in your computer (refer to **Upload Anti-Virus Pattern**).

Device Licenses
Portable Inspector
Portable Inspector Pro

Device Licenses
Safe Port

**Note:**

- ElementOne will automatically update the components at UTC+0 1:00 every day.
- This process will not update the scanning tool program. The scanning tool program will be updated along with the new version of ElementOne.

- **Check for Update on Anti-Virus Pattern**

1. On the **Updates** > Tab **Portable Inspector**, click the **Check for Update** button to perform component update.
2. If the update is successful, you will see the new **Last Update Time**, **Current Version** and **Release Date**. Click the collapse arrowhead beside **Pattern Version** to check the updated engines and patterns.

- **Upload Anti-Virus Pattern**

1. Download the latest Anti-Virus pattern from MyTXOne portal and save the file in your computer.
2. Go to **Administration** > **Updates** > Tab **Portable Inspector**.
3. Under the tab **Portable Inspector**, go to the section **Scan Component** and click on **Upload**.
4. Select the anti-virus pattern saved in your computer.
5. Click on **Open**.
6. If the update is successful, you will see the new **Last Update Time**, **Current Version** and **Release Date**. Click the collapse arrowhead beside **Pattern Version** to check the updated engines and patterns.

Updates > Virtual Portable Inspector

This page allows to browse and update the Virtual Portable Inspector firmware, as well as its components such as engines and patterns, within ElementOne.

**Note:**

If the Firmware Current Version and Release Date columns under the Updates > Virtual Portable Inspector tab are empty, download the latest vPI firmware from MyTXOne Portal, and then follow the steps below to upload it to ElementOne.

Upload Virtual Portable Inspector Firmware to ElementOne

On the Updates > Tab Virtual Portable Inspector:

1. Click the **Upload** button to upload the Virtual Portable Inspector firmware.
2. Select the firmware to be installed.
3. Click the **Open** button.
4. After **Open** is clicked, the upload will immediately start, and the progress bar will simultaneously be displayed.
5. Once the progress bar reaches 100%, ElementOne starts replacing the firmware and the **Cancel** button will be disabled.
6. Wait until the upload is complete.

**Note:**

- You can click “MyTXOne” to get the latest firmware to install.
- You should not change the file name of the Virtual Portable Inspector firmware.
ElementOne will check the name and block any invalid file name before uploading.
- The version of the uploaded file must be newer than the current version.

Update Components

Once the Virtual Portable Inspector license has been activated on ElementOne and not expired, users are able to update the components on ElementOne. This also allows devices to update their components using ElementOne.

You can either click on the **Check for Update** button to run an automatic update (refer to **Check for Update on Anti-Virus Pattern**) or click on the **Upload** button to manually upload the latest anti-virus pattern file downloaded from **MyTXOne** portal and saved in your computer (refer to **Upload Anti-Virus Pattern**).

**Note:**

- ElementOne will automatically update the components at UTC+0 1:00 every day.
- This process will not update the scanning tool program. The scanning tool program will be updated along with the new version of ElementOne.

- **Check for Update on Anti-Virus Pattern**

1. On the **Updates** > Tab **Virtual Portable Inspector**, click the **Check for Update** button to perform component update.
2. If the update is successful, you will see the new **Last Update Time**, **Current Version** and **Release Date**. Click the collapse arrowhead beside **Pattern Version** to check the updated engines and patterns.

- **Upload Anti-Virus Pattern**

1. Download the latest Anti-Virus pattern from MyTXOne portal and save the file in your computer.
2. Go to **Administration** > **Updates** > Tab **Virtual Portable Inspector**.
3. Under the tab **Virtual Portable Inspector**, go to the section **Scan Component** and click on **Upload**.
4. Select the anti-virus pattern saved in your computer.
5. Click on **Open**.
6. If the update is successful, you will see the new **Last Update Time**, **Current Version** and **Release Date**. Click the collapse arrowhead beside **Pattern Version** to check the updated engines and patterns.

Updates > Safe Port

This page allows to browse and update the Safe Port firmware and pattern within ElementOne.

Upload Safe Port Firmware to ElementOne

On the Updates > Tab Safe Port:

1. Click the **Upload** button to upload the firmware.
2. Select the firmware file, then click **Open**.
3. Progress is shown.

**Note:**

- You can click “MyTXOne” to get the latest firmware to install.
- You should not change the file name of the Safe Port firmware. ElementOne will check the name and block any invalid file name before uploading.
- The version of the uploaded file must be newer than the current version.

Deploy Safe Port Firmware from ElementOne

On the Updates > Safe Port page:

1. Click the **Install** button.
2. Select at least one device to be updated or select **All** to update every available device.
3. Click **Install** to initiate the update.
4. Monitor the device table to track the update progress.

Safe Port Update Status Icon	Description
	Firmware update complete.
	Firmware update fail.
	Firmware update under-way.
	Firmware update initiated.
-	Device not selected.

Update Safe Port Pattern

Once either one of the device licenses has been activated on ElementOne and not expired, users are able to update the components on ElementOne. This also allows devices to update their components using ElementOne.

You can either click on the **Check for Update** button to run an automatic update or click on the **Upload** button to manually upload the latest anti-virus pattern file downloaded from **MyTXOne** portal and saved in your computer.

1. Go to **Administration > Updates > Tab Safe Port**.
2. To perform an automatic update, refer to [Check for Update on Anti-Virus Pattern \(on page 226\)](#).
3. To upload the anti-virus pattern manually, refer to [Upload Anti-Virus Pattern \(on page 226\)](#).
4. If the update is successful, you will see the new **Last Update Time**, **Current Version** and **Release Date**. Click the collapse arrowhead beside **Pattern Version** to check the updated engines and patterns.



Note:

ElementOne will automatically update the components at UTC+0 1:00 every day.

Secure Distribute

Overview

The **Secure Distribute** feature allows users to securely distribute files to **Portable Inspector** devices through **ElementOne**. With malware scanning performed by ElementOne, this feature helps ensure that only safe and verified files are delivered to target devices.

Secure Distribute also provides centralized file management and activity tracking within ElementOne, enabling users to manage files for distribution and monitor file-related actions throughout the distribution process.

Prepare

Before using the Secure Distribute feature, make sure the following requirements are met.

1. **Ensure the ElementConnect Disk is installed.**

Make sure the **ElementConnect** disk is installed and added successfully.

Follow the steps below to add the ElementConnect disk to ElementOne:

- a. Shut down ElementOne.
- b. Create a disk with a minimum capacity of **200 GB** and attach it to ElementOne.
- c. Boot up ElementOne.

- d. Log in to the ElementOne vShell.
- e. Enter the following command to stop ElementOne:

```
$ elementone service stop
```

- f. Enter the following command to set up the ElementConnect local disk:

```
$ elementone elementconnect local setup
```

- g. Select the target disk and proceed with the setup.

```
Select a disk from the list below to designate it as the Element Connect disk:

1. /dev/sdc - 200.0 GB (available)
[-] /dev/sda - 100.0 GB (system disk)
[-] /dev/sdb - 20.0 GB (data disk)

Enter the number corresponding to your choice: 1

The disk "/dev/sdc" will be formatted and assigned to Element Connect disk. Proceed (y/n)? y

Device name: /dev/sdc
Element Connect disk status: mount
Disk capacity: 200.0 GB
Allocated space: 200.0 GB
Unallocated free space: 0.0 GB
```

- h. After the setup is complete, enter the following command to start ElementOne:

```
$ elementone service start
```


For the detailed disk installation instructions, refer to the **ElementOne Installation Guide** available on the MyTXOne Portal.

2. a. **Configure Storage Allocation Mode.**

Ensure that the **Distribute** mode is selected for the Portable Inspector device.

- i. From the left navigation menu, select **Device List > Portable Inspector**.
- ii. Locate the target Portable Inspector device and click its **Device Policy** button.
- iii. On the **Device Policy** page, go to the **Storage Allocation** section and select **Distribute** mode.
- iv. Click **Save** to apply the changes.

Secure Distribute: Functions and Operations

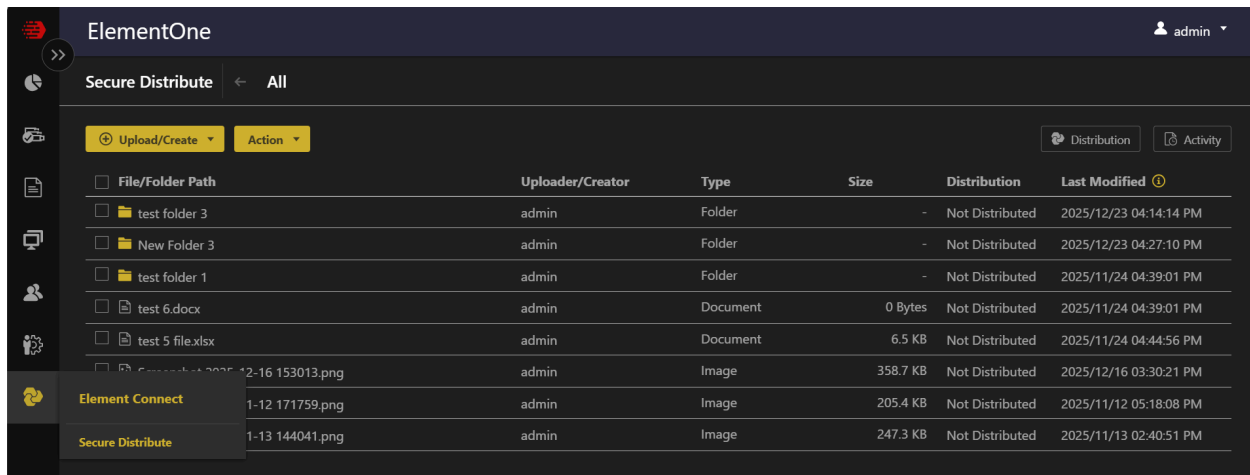

File/Folder Path	Uploader/Creator	Type	Size	Distribution	Last Modified
test folder 3	admin	Folder	-	Not Distributed	2025/12/23 04:14:14 PM
New Folder 3	admin	Folder	-	Not Distributed	2025/12/23 04:27:10 PM
test folder 1	admin	Folder	-	Not Distributed	2025/11/24 04:39:01 PM
test 6.docx	admin	Document	0 Bytes	Not Distributed	2025/11/24 04:39:01 PM
test 5 file.xlsx	admin	Document	6.5 KB	Not Distributed	2025/11/24 04:44:56 PM
1-12 153013.png	admin	Image	358.7 KB	Not Distributed	2025/12/16 03:30:21 PM
1-12 171759.png	admin	Image	205.4 KB	Not Distributed	2025/11/12 05:18:08 PM
1-13 144041.png	admin	Image	247.3 KB	Not Distributed	2025/11/13 02:40:51 PM

Upload Files and Folders

The **Upload** function allows users to upload files and folders from a local device to ElementOne for distribution to Portable Inspector devices.

• Upload Files

1. Click **Upload/Create** in the upper-left corner and select **Upload File**.
2. Select one or more files from your local device and click **Open**.



Note:

Multiple files can be selected at the same time.

• Upload Folders

1. Click **Upload/Create** in the upper-left corner and select **Upload Folder**.
2. Select a folder from your local device and click **Open**.



Note:

Only one folder can be uploaded at a time. Repeat the procedure to upload additional folders.

**Note:**

Ensure that the target PI Pro device has sufficient storage and that uploaded files or folders do not use duplicate names. Upload will fail if duplicate names are detected.

Create Folder

The **Create Folder** function allows users to organize files and folders by creating custom directories within Secure Distribute.

1. Click **Upload/Create** in the upper-left corner and select **Create Folder**.
2. Enter a folder name and click **Create**.

**Note:**

Folder names must be unique. Duplicate folder names are not allowed.

Edit Files and Folders

The **Edit** function allows users to **rename**, **move**, or **delete** uploaded files and folders.

• Rename

Users can change the name of an uploaded file or folder.

◦ Method 1

1. Select the checkbox next to the file or folder.
2. Click **Action > Rename**.
3. Enter a new name and click **Confirm**.

◦ Method 2

1. Hover over the file or folder and click the **Edit** icon.
2. Select **Rename**.
3. Enter a new name and click **Confirm**.

• Move

Users can move files or folders into another folder using one of the following methods.

- **Method 1**

1. Select one or more files or folders.
2. Click **Action > Move**.
3. Select a destination folder and click **Move here**.

- **Method 2**

1. Hover over a file or folder and click the **Edit** icon.
2. Click **Move**.
3. Select a destination folder and click **Move here**.

- **Method 3**

1. Click and hold a file or folder.
2. Drag it to the destination folder.



Note:

If you move files or folders with duplicate names, a move failed message will appear. You must choose **Replace** or **Keep Both** to continue. Hover over **[Number] item(s)** to view the duplicated items.

- **Delete**

Users can delete uploaded files and folders.

- **Method 1**

1. Select one or more files or folders.
2. Click **Action > Delete**.
3. Confirm the deletion.

- **Method 2**

1. Hover over a file or folder and click the **Edit** icon.
2. Click **Delete** and confirm.

Distribute Files and Folders

The **Distribute** function allows users to assign uploaded files or folders to specific **Portable Inspector** groups or devices.

- **Distribute a File or Folder**

1. Locate the file or folder and click **Not Distributed**.
2. Select the **Group** or **Device** tab based on the distribution target.
3. Enter a group or device name in the search box.
4. Select the target group or device.

**Note:**

- Click the **Delete** icon to remove a selected group or device, if needed.
- If a PI Pro device has insufficient storage for distribution, a warning icon will appear next to the device name.

5. Click **Close**.

6. The **Not Distributed** button changes to **Distributed** after assignment.

• **Distribute Current Folder**

Users can distribute all contents of a folder at once.

1. Select an uploaded folder.
2. Click the folder name and select **Distribute Current Folder**.
3. Select the **Group** or **Device** tab based on the distribution target.
4. Enter a group or device name in the search box.
5. Select the target group or device.

**Note:**

- Click the **Delete** icon to remove a selected group or device, if needed.
- If a PI Pro device has insufficient storage for distribution, a warning icon will appear next to the device name.

6. Click **Close**.

7. The **Not Distributed** button changes to **Distributed** after assignment.

• **Editing Distributed Files and Folders**

After files or folders are distributed, you can continue to manage the assigned content if needed. You can upload new files or folders to an assigned folder, move files or folders into an assigned folder, remove files or folders from an assigned folder, or remove the assigned folder itself. Follow the same procedures described in the **Upload**, **Move**, and **Delete** sections.

- If you upload files or folders to an assigned folder, the changes will be synchronized to the assigned Portable Inspector group or device.
- If you move files or folders to a different assigned folder, they will stop inheriting the original folder's distribution and instead inherit the new folder's distribution.
- If you delete files or folders from an assigned folder, the corresponding files or folders will also be deleted from the assigned Portable Inspector group or device.

• Distribution Changes from Group or Device Management

Distribution assignments are also updated automatically when group or device relationships change.

- If you ungroup an assigned Portable Inspector group, its devices and subgroups will be placed into the parent group, and the distribution changes will be synchronized to the affected groups or devices.
- If you move a Portable Inspector group or device, the distribution changes will be synchronized to the new group or device to which the files are distributed.

View Distribution

The **Distribution** view displays distribution across all PI Pro devices.

1. Click **Distribution** to view available PI Pro devices and distributed items.
2. Select a device to view its distributed files.



Note:

- Click **Refresh** to update the distribution status.
- If a PI Pro device has insufficient storage, the **Distribution** button turns red.
- Only administrators can view **Global Groups**. Supervisors can view only **My Assigned Group**.
- If a PI Pro device has insufficient storage for distribution, a warning icon will appear next to the device name.

View Activity

The **Activity** function provides an audit trail of all file and folder actions, including upload, creation, move, rename, deletion, and distribution. It records the user name, action performed, file or folder name, and the action time.



Note:

The **Activity** button and the Activity history tracking panel are available starting from ElementOne version 1.27.0.

1. Click **Activity** to view operation history.
2. Use the search bar to filter by user name or file/folder name.
3. Click the **Switch** icon to enable or disable **Full Activity** view.
4. In Full Activity View, select **User Name** or **File/Folder Name**, then enter a keyword to search.



Note:


- Activities are displayed from the most recent to the oldest.
- You can click the file or folder name to navigate to its location.

Chapter 5. About ElementOne

On the about page, you can find important information about ElementOne, including ElementOne version, product serial number, copyright, EULA, privacy policy, and third-party license information.

On the ElementOne dashboard, click the 'About' icon to view the About page.

If ElementOne has not been activated yet, you are limited to see only version, product serial number, copyright, and third-party license information on the About page.

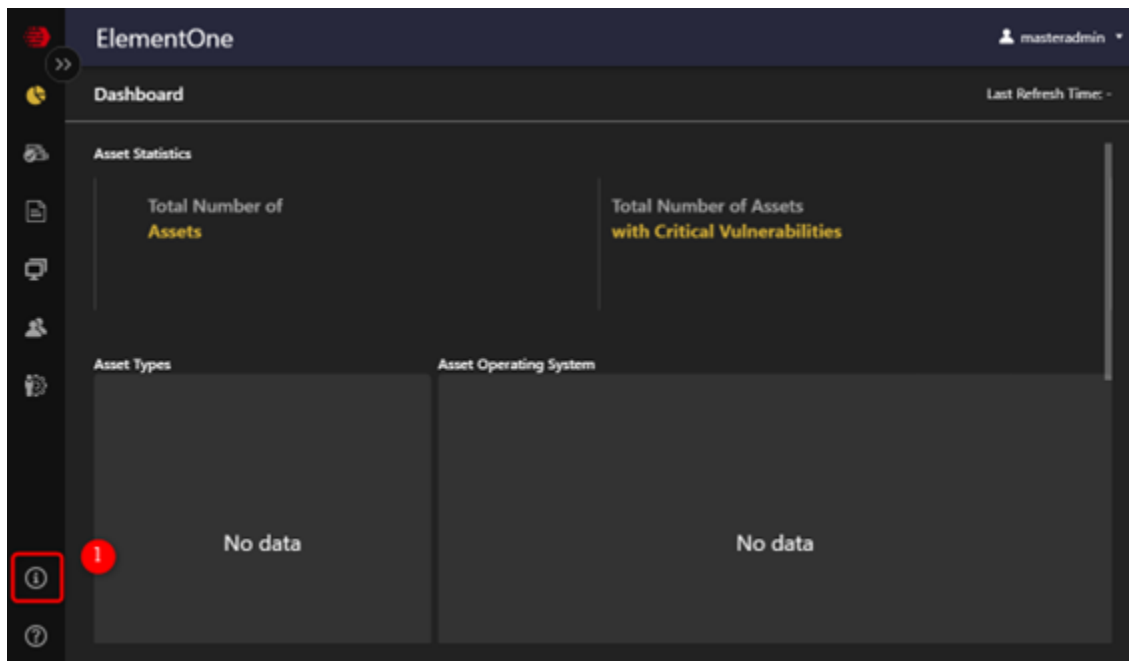

Browse EULA and Privacy by TXOne

After ElementOne has been activated with a TXOne license, you can see the EULA and the privacy policy on the About page.

Clicking on “EULA” or “Privacy Policy” will create a new tab and open the respective website in the browser.

Chapter 6. Appendix


Setup Splunk HTTP Event Collector (Splunk HEC) to Receive ElementOne Syslog in Splunk Web

In this section, you will learn the step-by-step procedure of configuring Splunk Enterprise to receive syslog data from ElementOne. Note that this document provides instructions for users of Splunk Enterprise.

• Create the Index

Create an index to determine the data's destination. On the Splunk Enterprise web console,

1. Click on “Settings” from the top menu.
2. Click on “Indexes”.

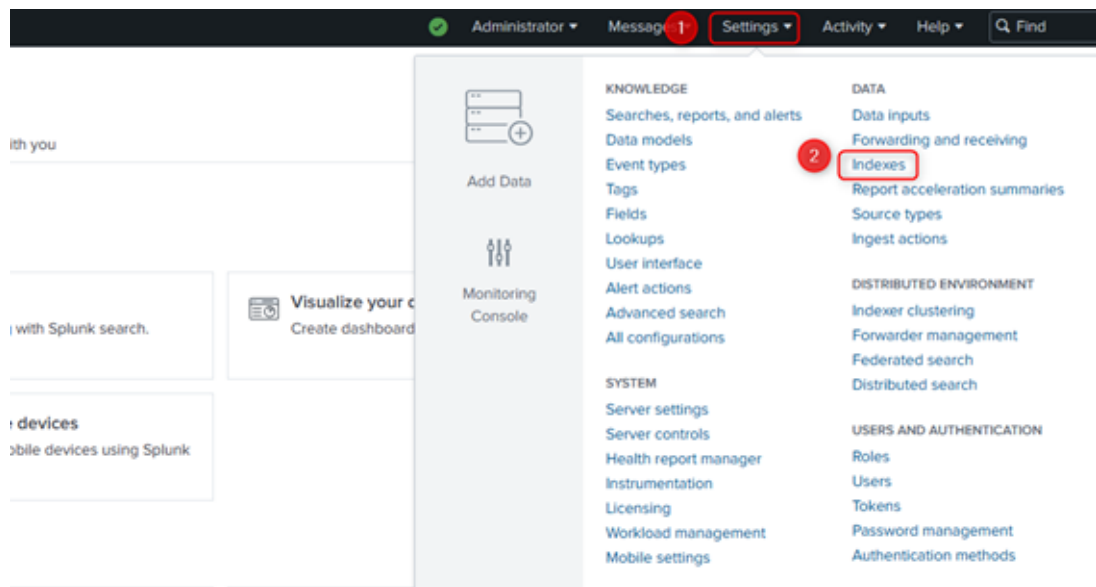


3. Select and click on the “New Index” button.
4. Enter the index of the log type to “Index Name”. Note that, the table of indexes is listed below.
5. Click the “Save” button for your changes to take effect.
6. Repeat step 1~5 to create all the indexes listed in the above table.

Set Up HTTP Event Collector

The HTTP Event Collector (HEC) lets you send data and application events to a Splunk deployment over the HTTP and Secure HTTP (HTTPS) protocols. Here are the steps to set up HEC:

1. Click on "Settings" from the top menu.
2. Click on "Data inputs".

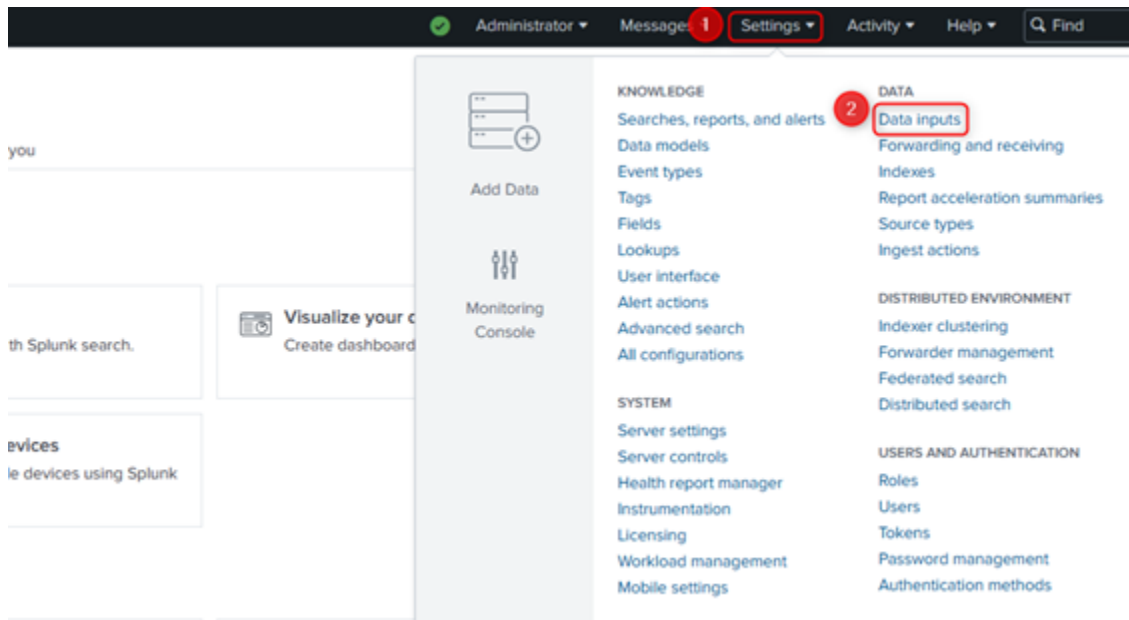

3. On the HTTP Event Collector, click on the "+ Add new" action.
4. Choose and click on the "HTTP Event Collector".
5. Enter a name for the HTTP Event Collector. Note that the name doesn't need to be "ElementOne".
6. Click on the "Next >" button.
7. Select all the indexes used by ElementOne.
8. Click on the "Review >" button.
9. Review the summary of changes made then click on the "Submit >" button.
10. Copy and preserve the "Token Value" to your clipboard. You will need to enter it later on the token field.

Configure HTTP Event Collector Token


On the Splunk Enterprise web console,

1. Click on "Settings" from the top menu.
2. Click on "Data inputs".
3. Choose and click on the "HTTP Event Collector".
4. Click the Enabled button from the All Tokens selection.
5. Tick the box of the Enable SSL.
6. Enter the HTTP Port Number.
7. Click on the "Save" button to apply your changes.

Search the Event Data

On the Splunk Enterprise web console,

1. From the Apps pane, select and click on "Search & Reporting".

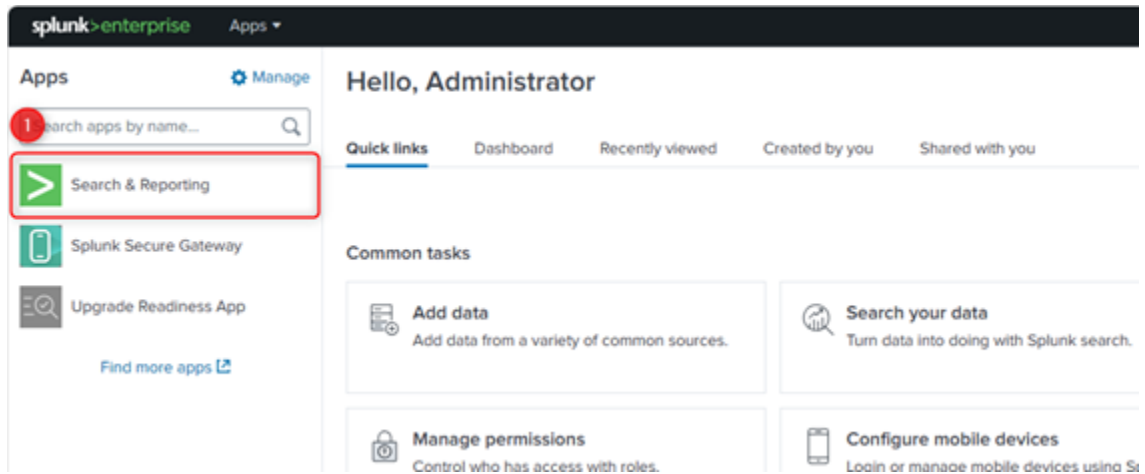

2. Enter a new search query, for example, `index = "scannedLog"`.
3. Set the time range filter.
4. Click the search button.
5. Check the result.

Chapter 7. Contact Us

For support and additional information, visit the following websites:

- Worldwide support offices: <https://www.txone.com/contact/>
- TXOne Networks product documentation: <https://help.txone.com/docs>
- MyTXOne: <https://my.txone.com>