


Construction drawings

Rotated opening and mirrored corner detail | Design 94b17114795a | Build afbc7e8f


opening.elevation

1:30 · imperial

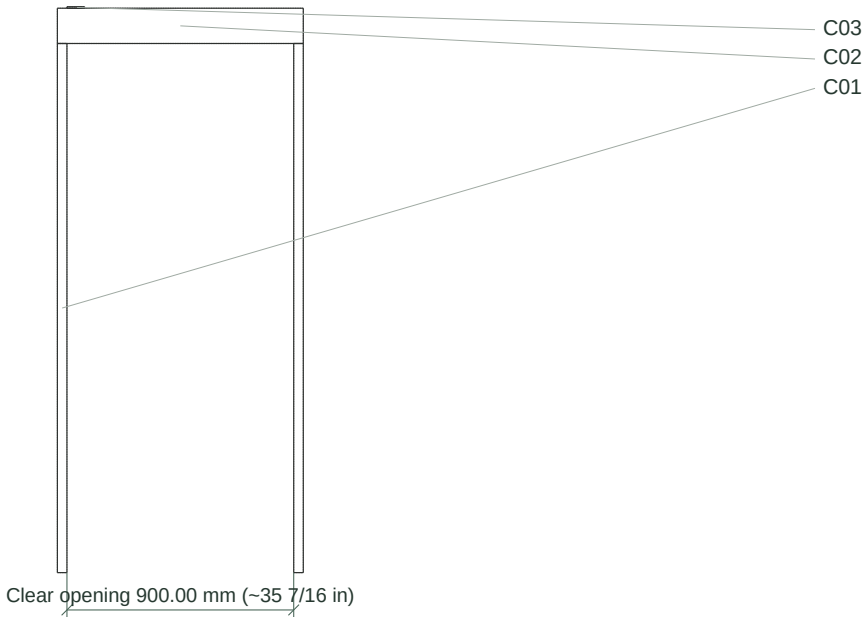

Corner sample: profile and bore

1:2 · imperial · detail of sheet 1

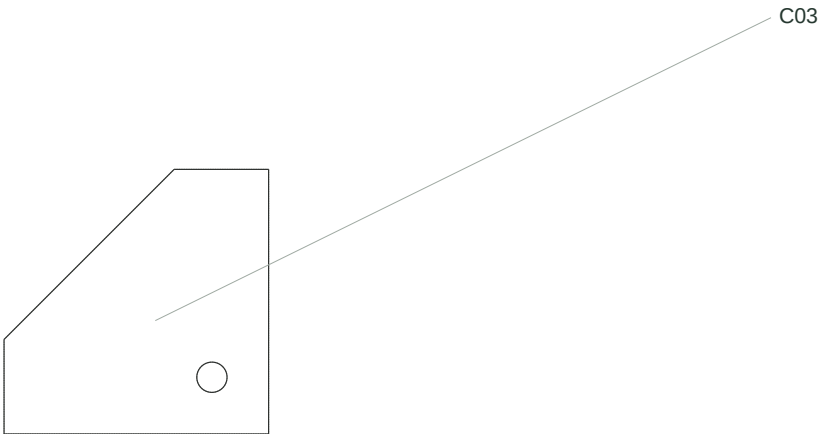

Scale check: this line is exactly 100 mm (3.937 in) on the page.

Print at 100% / Actual size. Do not fit to page.

Cut schedule

Rotated opening and mirrored corner detail | Design 94b17114795a | Build afbc7e8f

C-labels identify identical finished parts and cut recipes. Counts include every physical part. Member identities and original marks are in parts.csv. All blank dimensions use the part's local stock frame.

Cut types

Cut / stock	Qty	Typical part	Starting blank	Cut
C01/M01	2	opening.left_jamb	38.00 mm (~1 1/2 in) × 89.00 mm (~3 1/2 in) × 2100.00 mm (~82 11/16 in)	Square cut
C02/M02	1	opening.header	976.00 mm (~38 7/16 in) × 89.00 mm (~3 1/2 in) × 140.00 mm (~5 1/2 in)	Square cut
C03/M03	1	opening.corner_detail	70.00 mm (~2 3/4 in) × 70.00 mm (~2 3/4 in) × 6.00 mm (~1/4 in)	D01

Special cutting instructions

Detail	Instructions
D01	Cut the closed outline on the local blank face. Join coordinates (70.00 mm (~2 3/4 in), 0 in); (0 in, 0 in); (0 in, 25.00 mm (~1 in)); (45.00 mm (~1 3/4 in), 70.00 mm (~2 3/4 in)); (70.00 mm (~2 3/4 in), 70.00 mm (~2 3/4 in)). Bore 8.00 mm (~5/16 in) diameter through. Center 55.00 mm (~2 3/16 in), 15.00 mm (~9/16 in) from the local blank corner. Drill through the local Z direction.

Material purchases

Purchase	Quantity	Unit price	Saved quote	Amount
M01 · lumber 38x89 · softwood · 2400.00 mm (~94 1/2 in) · 38.00 mm (~1 1/2 in) × 89.00 mm (~3 1/2 in)	2 board	Missing		Missing
M04 · screws 5x80 · wood · diameter: 5.00 mm (~3/16 in) · length: 80.00 mm (~3 1/8 in)	1 pack / 50 each	Missing		Missing
M02 · lumber 89x140 · softwood · 2400.00 mm (~94 1/2 in) · 89.00 mm (~3 1/2 in) × 140.00 mm (~5 1/2 in)	1 board	Missing		Missing
M03 · steel plate 70x70x6 · steel · size: [70, 70, 6]	1 each	Missing		Missing

Known subtotal USD 0.00; tax 0.00; contingency 0.00. Total incomplete: missing quantities/prices are not zero.

Board cutting plan — repeat each row for its quantity

Plan	Qty	Stock section × length	Cuts in order; allow saw kerf	Reusable offcut
B01	2	M01 · 38.00 mm (~1 1/2 in) × 89.00 mm (~3 1/2 in) × 2400.00 mm (~94 1/2 in)	C01 (2100.00 mm (~82 11/16 in)); kerf 3.00 mm (~1/8 in)	297.00 mm (~11 11/16 in)
B02	1	M02 · 89.00 mm (~3 1/2 in) × 140.00 mm (~5 1/2 in) × 2400.00 mm (~94 1/2 in)	C02 (976.00 mm (~38 7/16 in)); kerf 3.00 mm (~1/8 in)	1421.00 mm (~55 15/16 in)

Cut lengths are blank lengths. Kerf between cuts and before offcuts is included in the saved allocation. Do not substitute a smaller stock section. Allowances and purchase overrides are separate from the required cut counts.

Scale check: this line is exactly 100 mm (3.937 in) on the page.

Assembly sequence

Rotated opening and mirrored corner detail | Design 94b17114795a | Build afbc7e8f

1. Cut the jambs and header to the listed lengths, label them, and assemble the opening on a flat surface.

Cut types C01, C02. Drawings on sheet 1.

Seat the header on both jamb ends. Clamp square and fasten with two 5 x 80 mm screws into each jamb.

Hardware: 4 × screws.5x80.

2. Cut and bore the separate mirrored corner sample using its local blank dimensions; this sample is not a specified structural connector.

Cut types C03. After step 1. Drawings on sheet 1.

Review — Prices or quantities are incomplete; missing values are not zero.

Saved estimate c630cbf4a4d04b85ee78ff535908ec8610e9aef80135df1222302ff6b734fb3d. Price basis a64d7d110be337029515a9ac4b4ccb3461cfd362a5e02d51cebd0ede411667a9.

Sheet index

Sheet	Contents
1	opening.elevation; Corner sample: profile and bore
2	Cut schedule
3	Assembly sequence