


Construction drawings

Sloped rafter with a flat bearing seat | Design 811673554c0a | Build 30bfe6f4

REVIEW PACKET - SEE FINDINGS

roof_joint.detail

1:5 · imperial

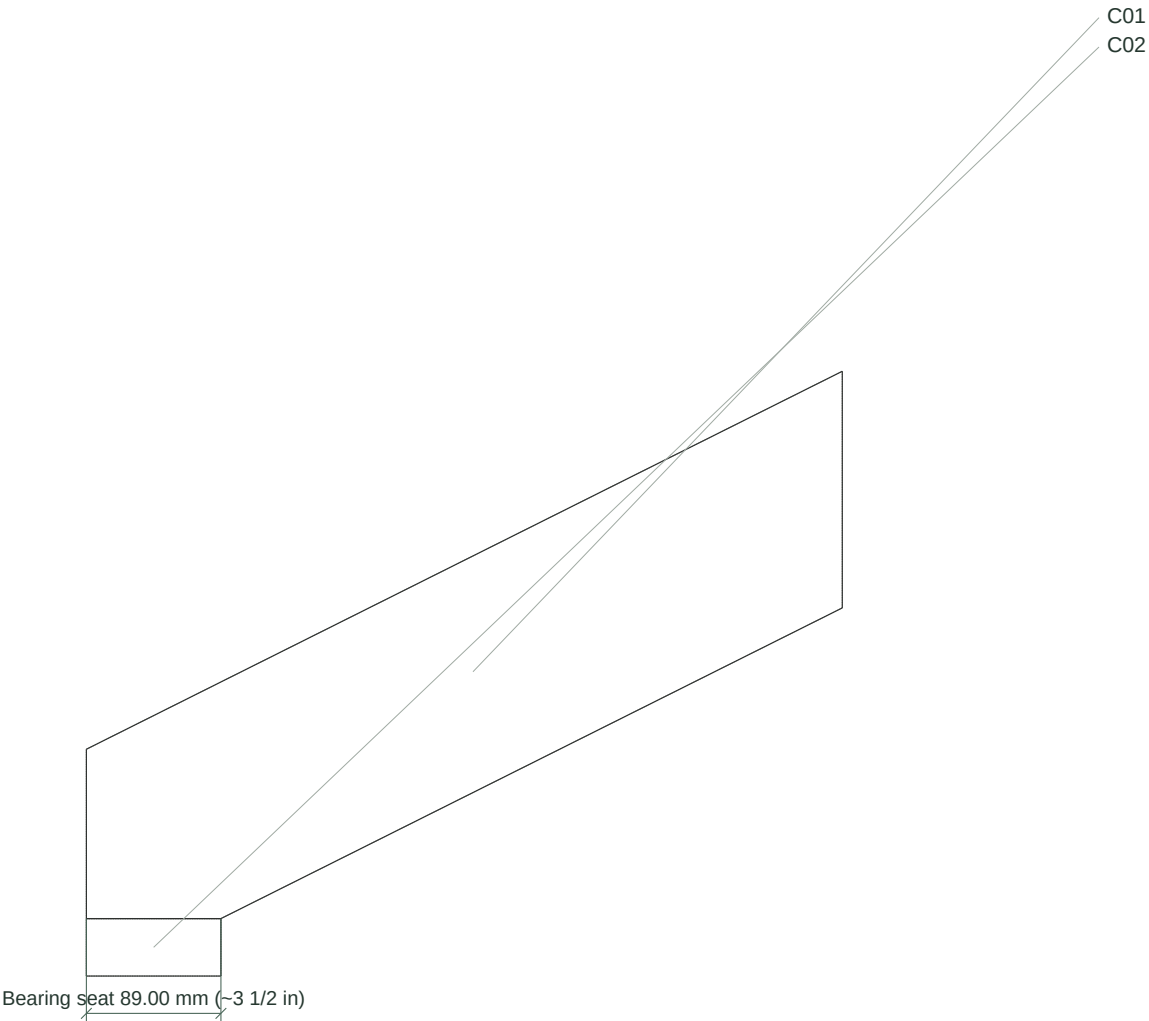

Scale check: this line is exactly 100 mm (3.937 in) on the page.

Print at 100% / Actual size. Do not fit to page.

Cut schedule

Sloped rafter with a flat bearing seat | Design 811673554c0a | Build 30bfe6f4

REVIEW PACKET - SEE FINDINGS

C-labels identify identical finished parts and cut recipes. Counts include every physical part. Member identities and original marks are in parts.csv. All blank dimensions use the part's local stock frame.

Cut types

Cut / stock	Qty	Typical part	Starting blank	Cut
C01/M01	1	roof_joint.rafter	38.00 mm (~1 1/2 in) × 629.02 mm (~24 3/4 in) × 140.00 mm (~5 1/2 in)	D01
C02/M02	1	roof_joint.plate	38.00 mm (~1 1/2 in) × 89.00 mm (~3 1/2 in) × 38.00 mm (~1 1/2 in); finish length 38.00 mm (~1 1/2 in)	Square cut

Special cutting instructions

Detail	Instructions
D01	Cut both ends plumb at rise/run 0.5; horizontal run 500.00 mm (~19 11/16 in). The listed blank length includes the angled end cuts. Mark the seat line on the rectangular blank Y-Z face between (Y 19.90 mm (~13/16 in), Z 39.80 mm (~1 9/16 in)) and (Y 99.51 mm (~3 15/16 in), Z 0 in). Cut the seat between these marks; its assembled horizontal width is 89.00 mm (~3 1/2 in).

Material purchases

Purchase	Quantity	Unit price	Saved quote	Amount
M02 · lumber 38x89 · softwood · 2400.00 mm (~94 1/2 in) · 38.00 mm (~1 1/2 in) × 89.00 mm (~3 1/2 in)	1 board	Missing		Missing
M01 · lumber 38x140 · softwood · 2400.00 mm (~94 1/2 in) · 38.00 mm (~1 1/2 in) × 140.00 mm (~5 1/2 in)	1 board	Missing		Missing

Known subtotal USD 0.00; tax 0.00; contingency 0.00. Total incomplete: missing quantities/prices are not zero.

Board cutting plan — repeat each row for its quantity

Plan	Qty	Stock section × length	Cuts in order; allow saw kerf	Reusable offcut
B01	1	M02 · 38.00 mm (~1 1/2 in) × 89.00 mm (~3 1/2 in) × 2400.00 mm (~94 1/2 in)	C02 (38.00 mm (~1 1/2 in)); kerf 3.00 mm (~1/8 in)	2359.00 mm (~92 7/8 in)
B02	1	M01 · 38.00 mm (~1 1/2 in) × 140.00 mm (~5 1/2 in) × 2400.00 mm (~94 1/2 in)	C01 (629.02 mm (~24 3/4 in)); kerf 3.00 mm (~1/8 in)	1767.98 mm (~69 5/8 in)

Cut lengths are blank lengths. Kerf between cuts and before offcuts is included in the saved allocation. Do not substitute a smaller stock section. Allowances and purchase overrides are separate from the required cut counts.

Scale check: this line is exactly 100 mm (3.937 in) on the page.

Assembly sequence

Sloped rafter with a flat bearing seat | Design 811673554c0a | Build 30bfe6f4

REVIEW PACKET - SEE FINDINGS

1. Mark the rafter in its 38 x 140 mm rectangular blank, cut both plumb ends, and make the birdsmouth. Check the full bearing face against the plate.

Cut types C01, C02. Drawings on sheet 1.

Cut the plumb ends and flat seat shown, then seat the rafter fully against the plate. This isolated bearing sample does not specify uplift or lateral restraint.

Review — A complete roof needs a separately specified uplift and lateral connection. (roof_joint.seat_joint)

Review — Prices or quantities are incomplete; missing values are not zero.

Saved estimate 393c08d24a9f0a1e87b8cf6dc03d32b79466064a7f21de5966b28e40880e293a. Price basis a64d7d110be337029515a9ac4b4ccb3461cfd362a5e02d51cebd0ede411667a9.

Sheet index

Sheet	Contents
1	roof_joint.detail
2	Cut schedule
3	Assembly sequence

Scale check: this line is exactly 100 mm (3.937 in) on the page.