


Construction drawings

Garage workbench | Design b02f7a113317 | Build 2bf6b2ff


Workbench - front elevation

1:30 · imperial

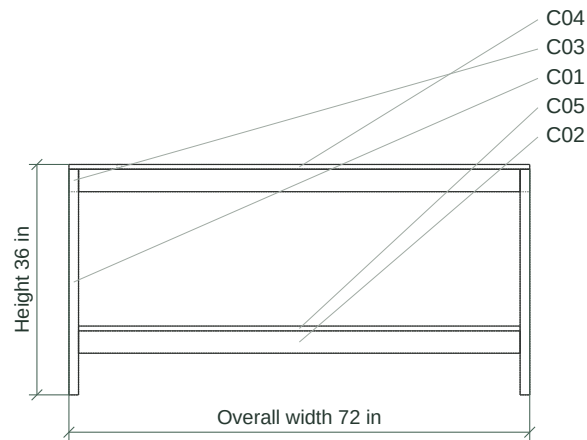


Workbench - top plan

1:30 · imperial

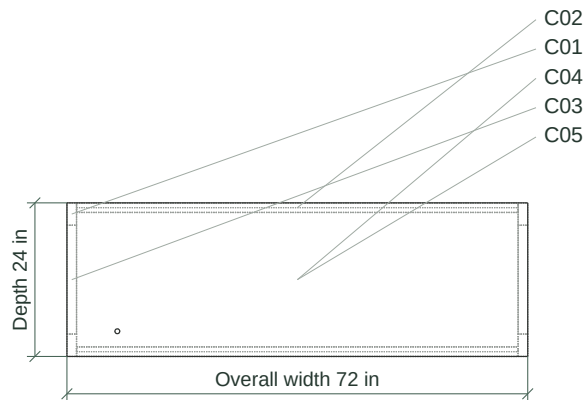

Workbench - center section

1:15 · imperial

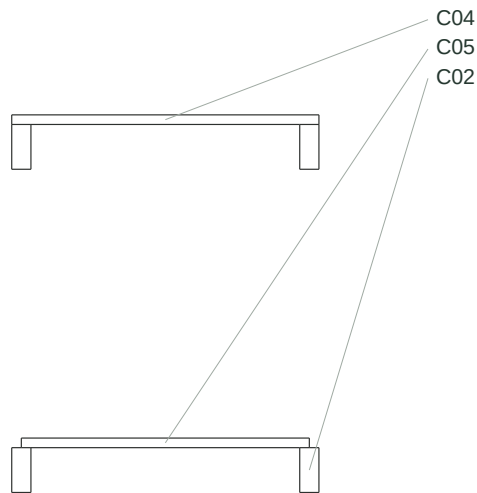

Scale check: this line is exactly 100 mm (3.937 in) on the page.

Print at 100% / Actual size. Do not fit to page.

Cut schedule

Garage workbench | Design b02f7a113317 | Build 2bf6b2ff

C-labels identify identical finished parts and cut recipes. Counts include every physical part. Member identities and original marks are in parts.csv. All blank dimensions use the part's local stock frame.

Cut types

Cut / stock	Qty	Typical part	Starting blank	Cut
C01/M01	4	Leg Left Front	1 1/2 in × 3 1/2 in × 35 1/4 in	Square cut
C02/M01	4	Rail Upper Front	69 in × 1 1/2 in × 3 1/2 in	Square cut
C03/M01	2	Rail Upper Left	1 1/2 in × 17 in × 3 1/2 in	Square cut
C04/M02	1	Worktop	72 in × 24 in × 3/4 in	D01
C05/M02	1	Shelf	69 in × 22 1/2 in × 3/4 in	Panel cut

Special cutting instructions

Detail	Instructions
D01	Bore 3/4 in diameter through. Center 200.00 mm (~7 7/8 in), 100.00 mm (~3 15/16 in) from the local blank corner.

Material purchases

Purchase	Quantity	Unit price	Saved quote	Amount
M03 · screws 5x80 · wood · diameter: 5.00 mm (~3/16 in) · length: 80.00 mm (~3 1/8 in)	1 pack / 50 each	Missing		Missing
M02 · panel plywood · plywood · 3/4 in thick · 96 in × 48 in sheet	1 sheet	Missing		Missing
M01 · lumber 2x4 · softwood · construction · 96 in · 1 1/2 in × 3 1/2 in	6 board	Missing		Missing
M04 · screws 4x40 · countersunk wood · diameter: 4.00 mm (~3/16 in) · length: 40.00 mm (~1 9/16 in)	1 pack / 50 each	Missing		Missing

Known subtotal USD 0.00; tax 0.00; contingency 0.00. Total incomplete: missing quantities/prices are not zero.

Board cutting plan — repeat each row for its quantity

Plan	Qty	Stock section × length	Cuts in order; allow saw kerf	Reusable offcut
B01	4	M01 · 1 1/2 in × 3 1/2 in × 96 in	C02 (69 in); kerf 3.00 mm (~1/8 in)	682.80 mm (~26 7/8 in)
B02	2	M01 · 1 1/2 in × 3 1/2 in × 96 in	C01 (35 1/4 in) + C01 (35 1/4 in) + C03 (17 in); kerf 3.00 mm (~1/8 in)	206.90 mm (~8 1/8 in)

Cut lengths are blank lengths. Kerf between cuts and before offcuts is included in the saved allocation. Do not substitute a smaller stock section. Allowances and purchase overrides are separate from the required cut counts.


Scale check: this line is exactly 100 mm (3.937 in) on the page.

Sheet cutting layouts

Garage workbench | Design b02f7a113317 | Build 2bf6b2ff

Repeat each layout for its quantity. C-labels refer to the cut schedule; special cuts use the D-details. Dashed outlines are blanks, solid lines are finished edges. Preserve the specified kerf.

S01/M02 · 1 sheet(s) · 19.05 mm

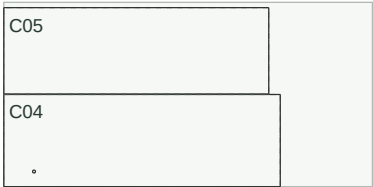

96 in × 48 in · 1:50
Kerf 3 mm

Scale check: this line is exactly 100 mm (3.937 in) on the page.

Assembly sequence

Garage workbench | Design b02f7a113317 | Build 2bf6b2ff

1. Cut and label the frame members and panels. Bore the worktop dog hole at the specified offset.

Cut types C01, C02, C03, C04, C05. Drawings on sheet 1.

2. Assemble the two leg pairs and rails on a flat surface. Check diagonals before tightening screws.

Cut types C01, C02, C03. After step 1. Drawings on sheet 1.

Clamp the frame square; predrill and drive two 5 x 80 mm wood screws at each rail end.

Hardware: 24 × screws.5x80.


3. Fit the shelf, then the worktop. Confirm the overhangs and screw only into the named supporting rails.

Cut types C02, C03, C04, C05. After step 2. Drawings on sheet 1.

Predrill and fasten panels to the supporting rails with 4 x 40 mm countersunk wood screws.

Hardware: 24 × screws.4x40.

Exploded: bench.panels

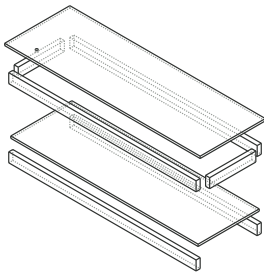

Review — Prices or quantities are incomplete; missing values are not zero.

Saved estimate 476ba10589218b0316e440f421c85addbc0f34702932c452f2ac24648118668a. Price basis a64d7d110be337029515a9ac4b4ccb3461cfd362a5e02d51cebd0ede411667a9.

Sheet index

Sheet	Contents
1	Workbench - front elevation; Workbench - top plan; Workbench - center section
2	Cut schedule
3	Sheet cutting layouts
4	Assembly sequence

Scale check: this line is exactly 100 mm (3.937 in) on the page.