


Construction drawings

Sloped rafter with a flat bearing seat | Design f8e71b97bd4e | Build a62b6a12

REVIEW PACKET - SEE FINDINGS

roof_joint.detail
1:5 · imperial

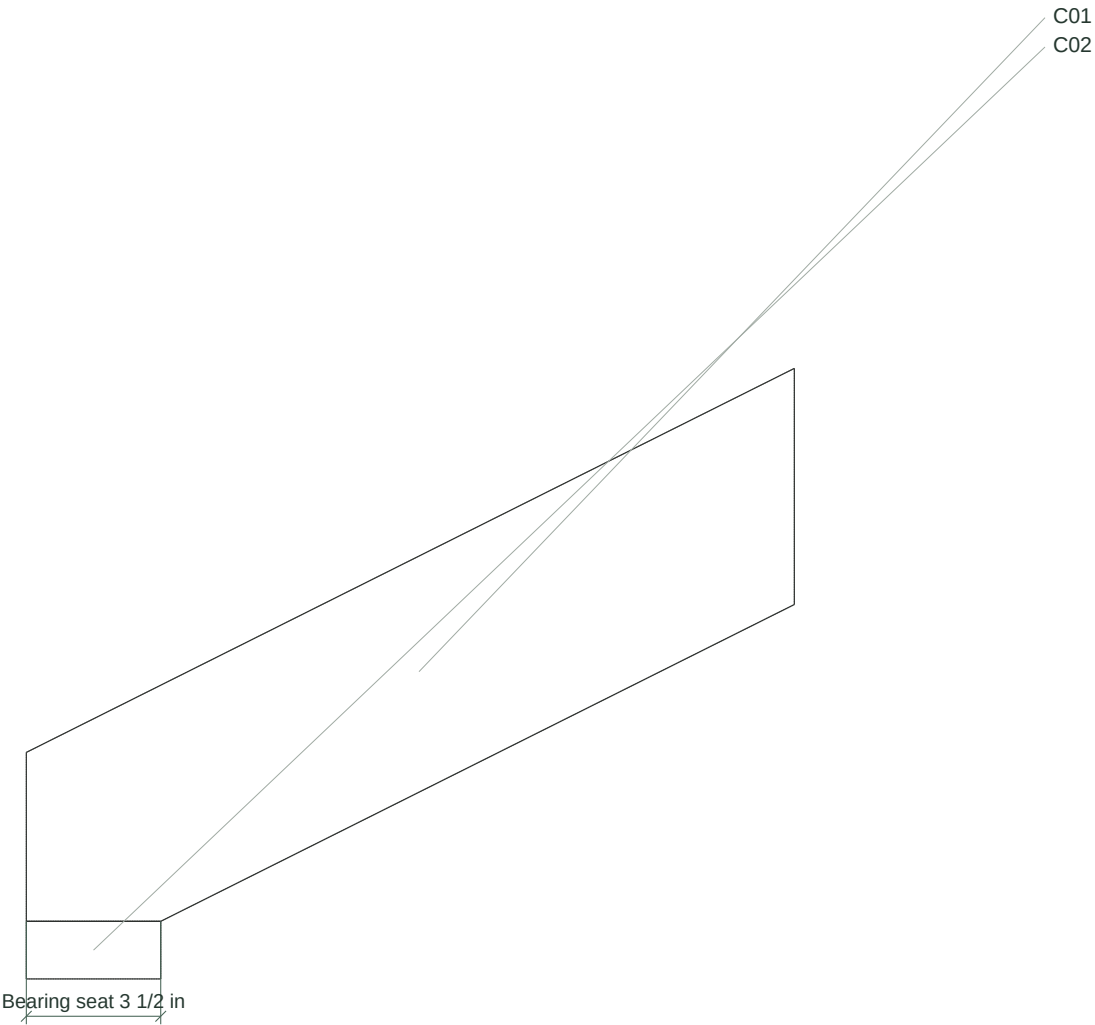

Scale check: this line is exactly 4 in on the page.

Print at 100% / Actual size. Do not fit to page.

Cut schedule

Sloped rafter with a flat bearing seat | Design f8e71b97bd4e | Build a62b6a12

REVIEW PACKET - SEE FINDINGS

C-labels identify identical finished parts and cut recipes. Counts include every physical part. Member identities and original marks are in parts.csv. All blank dimensions use the part's local stock frame.

Cut types

Cut / stock	Qty	Typical part	Starting blank	Cut
C01/M01	1	roof_joint.rafter	1 1/2 in × 25.1107 in × 5 1/2 in	D01
C02/M02	1	roof_joint.plate	1 1/2 in × 3 1/2 in × 1 1/2 in; finish length 1 1/2 in	Square cut

Special cutting instructions

Detail	Instructions
D01	Cut both ends plumb at rise/run 0.5; horizontal run 20 in. The listed blank length includes the angled end cuts. Mark the seat line on the rectangular blank Y-Z face between (Y 0.7826 in, Z 1.5652 in) and (Y 3.9131 in, Z 0 in). Cut the seat between these marks; its assembled horizontal width is 3 1/2 in.

Material purchases

Purchase	Quantity	Unit price	Saved quote	Amount
M01 · lumber 1 5x5 5 · softwood · 96 in · 1 1/2 in × 5 1/2 in	1 board	Missing		Missing
M02 · lumber 1 5x3 5 · softwood · 96 in · 1 1/2 in × 3 1/2 in	1 board	Missing		Missing

Known subtotal USD 0.00; tax 0.00; contingency 0.00. Total incomplete: missing quantities/prices are not zero.

Board cutting plan — repeat each row for its quantity

Plan	Qty	Stock section × length	Cuts in order; allow saw kerf	Reusable offcut
B01	1	M01 · 1 1/2 in × 5 1/2 in × 96 in	C01 (25.1107 in); kerf 1/8 in	70.7643 in
B02	1	M02 · 1 1/2 in × 3 1/2 in × 96 in	C02 (1 1/2 in); kerf 1/8 in	94 3/8 in

Cut lengths are blank lengths. Kerf between cuts and before offcuts is included in the saved allocation. Do not substitute a smaller stock section. Allowances and purchase overrides are separate from the required cut counts.

Scale check: this line is exactly 4 in on the page.

Assembly sequence

Sloped rafter with a flat bearing seat | Design f8e71b97bd4e | Build a62b6a12

REVIEW PACKET - SEE FINDINGS

1. Mark the rafter in its 1 1/2 x 5 1/2 in rectangular blank, cut both plumb ends, and make the birdsmouth. Check the full bearing face against the plate.

Cut types C01, C02. Drawings on sheet 1.

Cut the plumb ends and flat seat shown, then seat the rafter fully against the plate. This isolated bearing sample does not specify uplift or lateral restraint.

Review — A complete roof needs a separately specified uplift and lateral connection. (roof_joint.seat_joint)

Review — Prices or quantities are incomplete; missing values are not zero.

Saved estimate a5143f243da9f7d19a78e5d5738cffe0bbdaa78aa65706cf24a4f383bf21a480. Price basis 91f8389ee47ce7b5173db427f2e18d307eeb27033c8ee66e61b98c1caed8ed39.

Sheet index

Sheet	Contents
1	roof_joint.detail
2	Cut schedule
3	Assembly sequence

Scale check: this line is exactly 4 in on the page.