


Construction drawings

Garage workbench | Design 540026723064 | Build 57e6ec83


Workbench - front elevation

1:30 · imperial

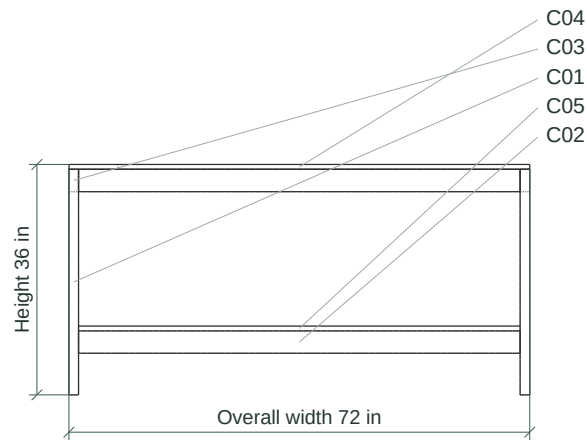


Workbench - top plan

1:30 · imperial

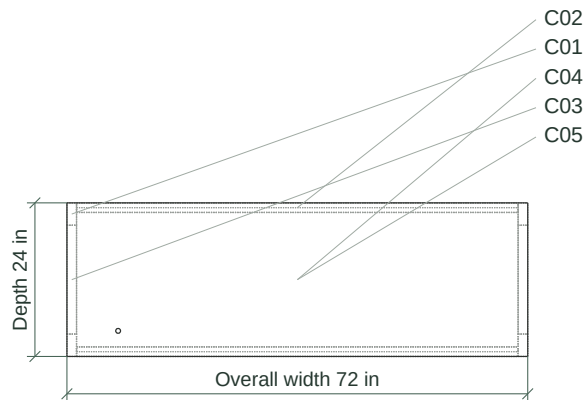

Workbench - center section

1:15 · imperial

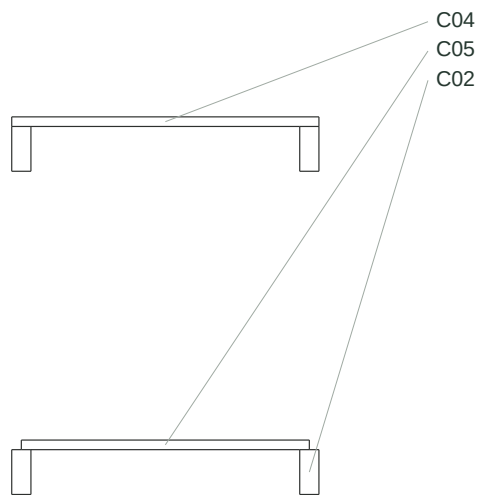

Scale check: this line is exactly 4 in on the page.

Cut schedule

Garage workbench | Design 540026723064 | Build 57e6ec83

C-labels identify identical finished parts and cut recipes. Counts include every physical part. Member identities and original marks are in parts.csv. All blank dimensions use the part's local stock frame.

Cut types

Cut / stock	Qty	Typical part	Starting blank	Cut
C01/M01	4	Leg Left Front	1 1/2 in × 3 1/2 in × 35 1/4 in	Square cut
C02/M01	4	Rail Upper Front	69 in × 1 1/2 in × 3 1/2 in	Square cut
C03/M01	2	Rail Upper Left	1 1/2 in × 17 in × 3 1/2 in	Square cut
C04/M02	1	Worktop	72 in × 24 in × 3/4 in	D01
C05/M02	1	Shelf	69 in × 22 1/2 in × 3/4 in	Panel cut

Special cutting instructions

Detail	Instructions
D01	Bore 3/4 in diameter through. Center 8 in, 4 in from the local blank corner.

Material purchases

Purchase	Quantity	Unit price	Saved quote	Amount
M04 · screws no8x1_5 · countersunk wood · gauge: #8 · length: 1 1/2 in	1 pack / 50 each	Missing		Missing
M03 · screws no10x3 · wood · gauge: #10 · length: 3 in	1 pack / 50 each	Missing		Missing
M01 · lumber 2x4 · softwood · construction · 96 in · 1 1/2 in × 3 1/2 in	6 board	Missing		Missing
M02 · panel plywood · plywood · 3/4 in thick · 96 in × 48 in sheet	1 sheet	Missing		Missing

Known subtotal USD 0.00; tax 0.00; contingency 0.00. Total incomplete: missing quantities/prices are not zero.

Board cutting plan — repeat each row for its quantity

Plan	Qty	Stock section × length	Cuts in order; allow saw kerf	Reusable offcut
B01	4	M01 · 1 1/2 in × 3 1/2 in × 96 in	C02 (69 in); kerf 1/8 in	26 7/8 in
B02	2	M01 · 1 1/2 in × 3 1/2 in × 96 in	C01 (35 1/4 in) + C01 (35 1/4 in) + C03 (17 in); kerf 1/8 in	8 1/8 in

Cut lengths are blank lengths. Kerf between cuts and before offcuts is included in the saved allocation. Do not substitute a smaller stock section. Allowances and purchase overrides are separate from the required cut counts.


Scale check: this line is exactly 4 in on the page.

Sheet cutting layouts

Garage workbench | Design 540026723064 | Build 57e6ec83

Repeat each layout for its quantity. C-labels refer to the cut schedule; special cuts use the D-details. Dashed outlines are blanks, solid lines are finished edges. Preserve the specified kerf.

S01/M02 · 1 sheet(s) · 3/4 in

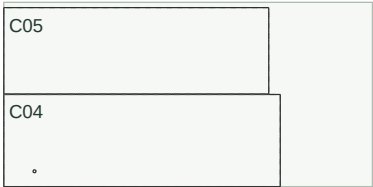

96 in × 48 in · 1:50
Kerf 1/8 in

Scale check: this line is exactly 4 in on the page.

Assembly sequence

Garage workbench | Design 540026723064 | Build 57e6ec83

1. Cut and label the frame members and panels. Bore the worktop dog hole at the specified offset.

Cut types C01, C02, C03, C04, C05. Drawings on sheet 1.

2. Assemble the two leg pairs and rails on a flat surface. Check diagonals before tightening screws.

Cut types C01, C02, C03. After step 1. Drawings on sheet 1.

Clamp the frame square; predrill and drive two #10 x 3 in wood screws at each rail end.

Hardware: 24 × screws.no10x3.


3. Fit the shelf, then the worktop. Confirm the overhangs and screw only into the named supporting rails.

Cut types C02, C03, C04, C05. After step 2. Drawings on sheet 1.

Predrill and fasten panels to the supporting rails with #8 x 1 1/2 in countersunk wood screws.

Hardware: 24 × screws.no8x1_5.

Exploded: bench.panels

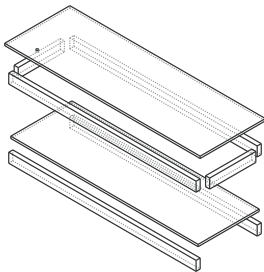

Review — Prices or quantities are incomplete; missing values are not zero.

Saved estimate b828364cbb8b471536c19333ce473d1188c457c10a3911ed626899e15fc95b15. Price basis 91f8389ee47ce7b5173db427f2e18d307eeb27033c8ee66e61b98c1caed8ed39.

Sheet index

Sheet	Contents
1	Workbench - front elevation; Workbench - top plan; Workbench - center section
2	Cut schedule
3	Sheet cutting layouts
4	Assembly sequence

Scale check: this line is exactly 4 in on the page.