

## TFRAS Functional Testing

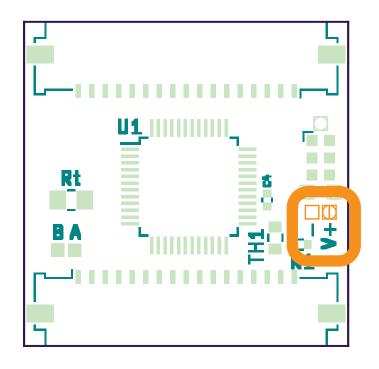

1. Apply 12VDC to "V+" and 0V/GND to "-"

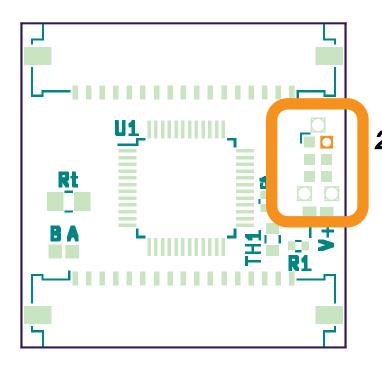

2. Measure voltage on topright pad, and measure current from 12V supply

Thank you for your help!