


VOR RWY 13

533731N 0774215W VAR 16°W

		RADIO – 122.3		MF*	
SAFE ALT 100 NM	VOR YGL	APCH CRS	LDA		
2900	112.2	137°	6487		8.0

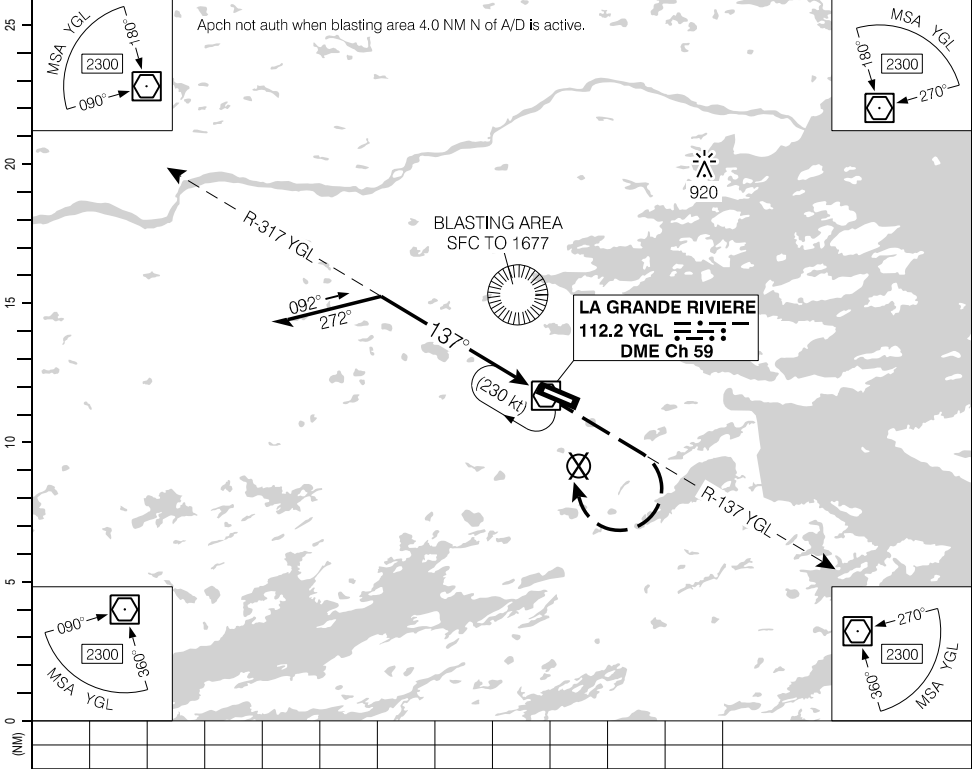

The diagram illustrates a missed approach procedure. A horizontal line at the top left is labeled '2000'. From this line, a solid line extends to the right at an angle of 317°, ending at a point labeled 'YGL' VOR. A second horizontal line extends from the '2000' line to the right, then turns down at an angle of 137° to meet the vertical line of the 'YGL' VOR. A dashed line continues from the 137° turn point, extending further to the right. Below the horizontal lines is a grey rectangular area labeled 'MDA'. To the right of the 'YGL' VOR, text reads: 'MISSED APPROACH Climb to 2300 on R-137. Then RIGHT turn direct to YGL VOR.' At the bottom right, two values are listed: 'ELEV 640' and 'TDZE 610'.

2000

Procedure turn LEFT within 10 NM of "YGL" VOR.

MDA

317°

137°

"YGL" VOR

MISSED APPROACH
Climb to **2300** on **R-137**.
Then **RIGHT** turn direct to "YGL" VOR.

ELEV 640
TDZE 610

			CATEGORY	A	B	C	D
			VOR	1240	(630)	2	
			CIRCLING	1240	(600)	2	
Knots	ft/min	Min:Sec					
70							
90							
110							
130							
150							

VOR RWY 13

CYGL

EFF 7 AUG 25

Source of Canadian Civil Aeronautical Data: © 2026 NAV CANADA All rights reserved