

LOW VISIBILITY TAXI CHART

(RVR LESS THAN 1200 TO 600 FT)



MONTRÉAL/PIERRE-ELLIOTT-TRUDEAU INTL, QC

CYUL

ATIS - 133.7 (En) 127.5 (Fr)	CLNC DEL - 125.6 APRON - 122.27 (W) 122.07 (E) GND - 121.0 (W) 121.9 (E) 275.8	TWR - 119.3 119.9 124.3 267.1
------------------------------	--	-------------------------------

LEGEND

- ... STOP BARS
- RUNWAY GUARD LIGHTS
- TAXIWAY CENTRELINE LIGHTS (BIDIRECTIONAL)
- DIRECTION OF AIRCRAFT MOVEMENTS

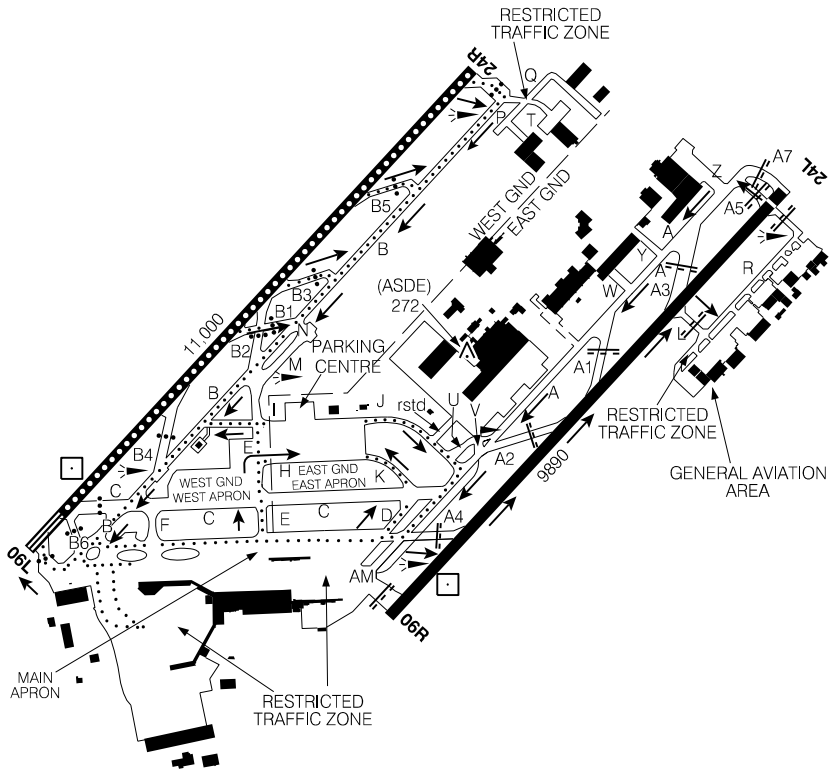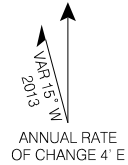

Multilateration:
Keep transponder on
at all times when taxiing.

(RVR LESS THAN 1200 TO 600 FT)
LOW VISIBILITY TAXI CHART