


PARKING CENTRE AREAS AND DE-ICING POSITIONS AND PROCEDURES CYUL

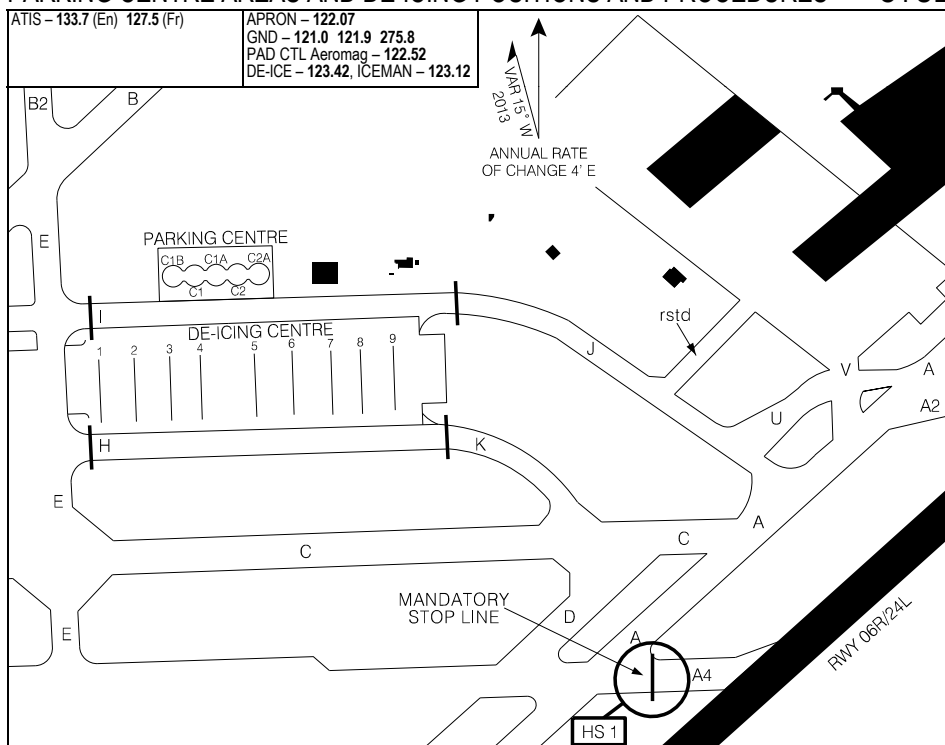

Source of Canadian Civil Aeronautical Data: © 2026 NAV CANADA All rights reserved

DE-ICING CENTRE, Oct 1 - Apr 30

1. Contact MONTREAL DE-ICE on 123.425, no later than 30 min prior push-back, with de-icing type.
2. On Twys J or K, hold short of the de-icing pad and contact AEROMAG PAD CONTROL 122.525.
3. On Twy E hold short of H or I and contact AEROMAG PAD CONTROL on 122.525.
4. Follow AEROMAG PAD CONTROL instructions and guiding lines to the assigned de-icing bay and confirm "brakes set" when in position.
5. On AEROMAG PAD CONTROL instructions, contact ICEMAN on 123.125 & confirm aircraft configured for de-icing and engines at idle.
6. When de-icing is completed and on ICEMAN instructions only, contact AEROMAG PAD CONTROL on 122.525 before moving aircraft.
7. Exiting de-icing pad on AEROMAG PAD CONTROL instructions contact ground control:
 - on Twy J, holding short of Twy U,
 - on Twy K, holding short of Twy C,
 - on Twy H or I holding short of Twy E.

De-Icing bays capacity:

- | | |
|-----------|--------------------------------|
| 1 & 3: | Maximum wingspan 36m (118'); |
| 2: | Maximum wingspan 80m (262'); |
| 4, 5 & 9: | Maximum wingspan 65m (213'); |
| 6 & 8: | Maximum wingspan 36m (118'); |
| 7: | Maximum wingspan 45.8m (150'); |

Note: May 1 - Sep 30 DE-ICING CENTRE used as apron area ctc 122.075.

PARKING CENTRE AREAS AND DE-ICING POSITIONS AND PROCEDURES CYUL

EFF 12 JUN 25