

CYXX / YXX
ABBOTSFORD

GE Aviation

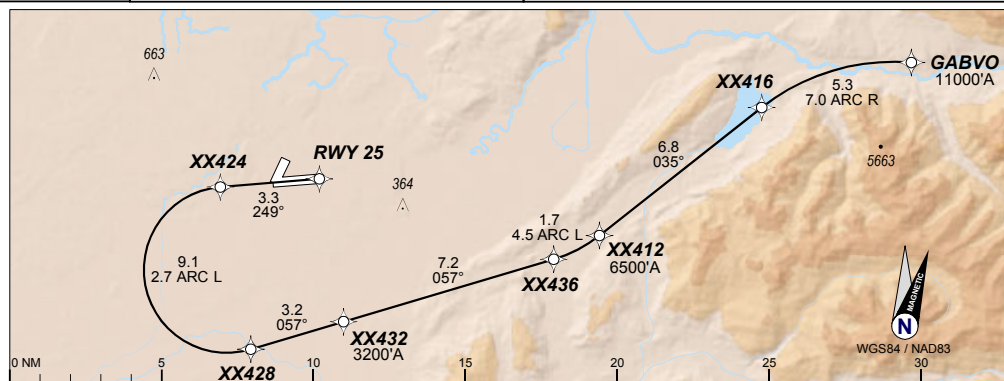
MVD
(B737-NG)10-3X
04 MAR 14
EFF: 03 APR 14

WESTJET ABBOTSFORD WESTJET ONE DEPARTURE

ABBOTSFORD, BC

GE PROPRIETARY INFORMATION

Apt Elev 194'	Trans ALT 18000'	VICTORIA Terminal Control 132.7	SPECIAL AIRCREW AUTHORIZATION REQUIRED														
ABBOTSFORD WESTJET ONE RNAV (RNP) DEPARTURE RNP 0.30 (WSTJT1) RWY 25			Requires weather minima of 1/4 mile visibility.			Refer to Noise Abatement Procedures for additional requirements.											
			This departure requires a minimum climb gradient of 500' per NM to 11,000'.														
			For a climb rate of 500' per NM														
			<table><tr><td>Gnd speed (kts)</td><td>100</td><td>150</td><td>200</td><td>250</td><td>300</td></tr><tr><td>Climb (ft/min)</td><td>833</td><td>1250</td><td>1667</td><td>2083</td><td>2500</td></tr></table>						Gnd speed (kts)	100	150	200	250	300	Climb (ft/min)	833	1250
Gnd speed (kts)	100	150	200	250	300												
Climb (ft/min)	833	1250	1667	2083	2500												
TAKE-OFF: NADP 1 REQUIRED RWY 25: Climb to 11000' via the RNAV (RNP) track to GABVO. Cross XX432 at or above 3200', XX412 at or above 6500' and GABVO at or above 11000'. Pilots must remain on SID routing until GABVO or 11000'A unless otherwise cleared by ATC. Do not exceed 325 kts groundspeed until turn is complete at XX428. Contact Victoria terminal passing 1500' unless instructed otherwise by ATC.																	

12,800'
ESA ARP**REQUIRED EQUIPMENT:**

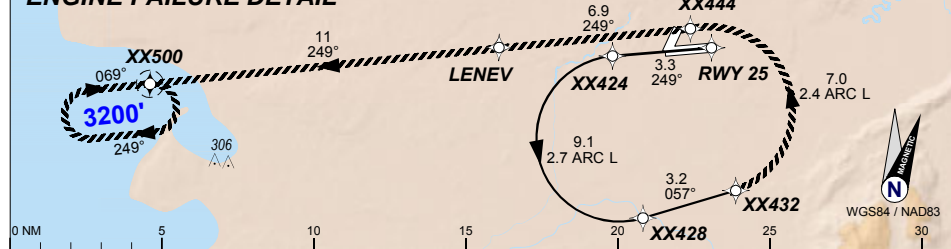
EGPWS
 (2) FMCS
 (2) IRS in NAV Mode
 (2) PFD/ND Displays
 (2) GPS
 (2) Flight Director Displays in LNAV
 (1) Radio Altimeter operating with associated Flight Director

SET-UP:

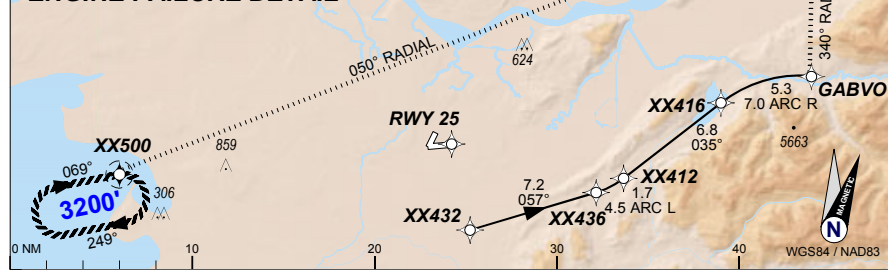
Set TERR
 Fix page 1 EO Branch point (XX432).
 Fix page 2 **GABVO 340°** Radial.
 Fix page 3 **XX500 050°** Radial.

LOST COMMUNICATIONS:

Maintain **12,800'** or last assigned altitude for **5 minutes** prior to climbing to filed cruise altitude.

ENGINE FAILURE DETAIL**RNAV (RNP) ENGINE FAILURE
prior to XX432
RWY 25**For engine failure prior to **XX432**:

1. EXECute ENG OUT SID MOD
2. Fly RNAV (RNP) track to **XX500**.
3. Do not exceed **260 kts** ground speed until **XX444**.
4. Hold as published. Maintain at or above **3200'**. Maximum holding speed **230 KIAS**.

ENGINE FAILURE DETAIL**RNAV (RNP) ENGINE FAILURE
after XX432 and prior to GABVO
RWY 25**For engine failure after **XX432** and prior to **GABVO**:

1. Fly RNAV (RNP) track to **GABVO** until reaching **4200'**.
2. At or above **4200'** turn **LEFT** direct to **XX500**.
3. Remain West of the **GABVO 340°** Radial and South of the **XX500 050°** Radial.
4. Hold as published. Maximum holding speed **230 KIAS**.

201403041621 COPYRIGHT 2014 NAVERUS, INC., USA

Revision: MagVar change to 17°E. Magnetic course updated. FMS procedure name updated. XX500 holding pattern updated.

EFF 31 MAR 16

OBS.3

RESTRICTED

RESTRICTED