Preface

Complex Numbers

Definition of Complex Numbers

A complex number z can be written in rectangular form (also called Cartesian form)

$$z = x + jy, (P-1)$$

where x, y are real numbers and $j = \sqrt{-1}$ is the *imaginary unit*.

On its own, x is called the *real part* of z, and y is called the *imaginary part* of z. This can be written as

$$Re(z) = x$$
 (P-2)

$$Im(z) = y. (P-3)$$

Alternatively, z can be written in polar form

$$z = |z|e^{i\theta} = |z|\underline{\theta},\tag{P-4}$$

where

$$|z| = \sqrt{x^2 + y^2} \tag{P-5}$$

is the magnitude of z, and

$$\theta = \arg(z) = \arg(x + jy) = \operatorname{atan2}(y, x) = \begin{cases} \arctan\left(\frac{y}{x}\right), & x > 0\\ \arctan\left(\frac{y}{x}\right) \pm \pi, & x < 0\\ \operatorname{sgn}(y) \cdot \frac{\pi}{2}, & x = 0 \text{ and } y \neq 0\\ \operatorname{undefined}, & x = 0 \text{ and } y = 0 \end{cases}$$
(P-6)

is its phase angle, calculated from the four-quadrant inverse tangent function atan2.

From Euler's formula,


$$e^{j\theta} = \cos\theta + j\sin\theta. \tag{P-7}$$

Combining Eqs. (1), (4), and (7), it also then follows that

$$x = |z|\cos(\theta),\tag{P-8}$$

$$y = |z|\sin(\theta). \tag{P-9}$$

Graphically, a complex number z_0 can be drawn on the *complex plane* as a vector from the origin to point (x_0, y_0) , with x = Re(z) as the horizontal axis and y = Im(z) as the vertical axis.

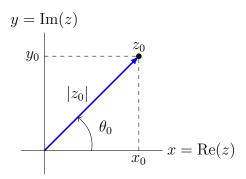

Operations with Complex Numbers

The $complex \ conjugate \ of \ z$ is given by

$$z^* = (x + jy)^* = x - jy. (P-10)$$

This is achieved by substituting $j \leftarrow (-j)$ and can be written as

$$z^* = [z|_{j \leftarrow (-j)} = [x + jy|_{j \leftarrow (-j)} = x - jy.$$
 (P-11)

It then follows that the norm of z is

$$|z| = \sqrt{zz^*} = \sqrt{x^2 + y^2}.$$
 (P-12)

Some operations between two complex numbers

$$z_1 = x_1 + jy_1 = |z_1|e^{j\theta_1}$$

 $z_2 = x_2 + jy_2 = |z_2|e^{j\theta_2}$

are defined in the following list:

- Addition/subtraction: $z_1 \pm z_2 = (x_1 \pm x_2) + j(y_1 \pm y_2)$
- Multiplication: $z_1 z_2 = |z_1||z_2|e^{j(\theta_1+\theta_2)}$
- Division: $\frac{z_1}{z_2} = \frac{|z_1|}{|z_2|} e^{j(\theta_1 \theta_2)}$

Recall from Euler's formula that $e^{j\theta} = \cos \theta + j \sin \theta$. The sinusoids can be rewritten such that

$$\cos \theta = \frac{e^{j\theta} + e^{-j\theta}}{2} \tag{P-13}$$

$$\sin \theta = \frac{e^{j\theta} - e^{-j\theta}}{j2}.$$
 (P-14)

Generalizing Euler's formula, exponentiation of a complex number gives

$$e^z = e^{x+jy} = e^x e^{jy} = e^x (\cos y + j \sin y).$$
 (P-15)

De Moivre's formula defines the n^{th} power of a complex number z, for n is a positive integer:

$$z^{n} = [|z|(\cos\theta + j\sin\theta)]^{n} = |z|^{n}[\cos(n\theta) + j\sin(n\theta)]. \tag{P-16}$$

In a similar vein, the n^{th} root of a complex number z (for n is a positive integer) is

$$z^{1/n} = [|z|(\cos\theta + j\sin\theta)]^{1/n}$$

$$= |z|^{1/n} \left[\cos\left(\frac{\theta + 2k\pi}{n}\right) + j\sin\left(\frac{\theta + 2k\pi}{n}\right)\right], \text{ for } k = 0, 1, 2, ..., n - 1.$$
(P-17)

Solutions to the equation $z^n = 1$ are called n^{th} roots of unity and are defined as

$$z = \cos\left(\frac{2k\pi}{n}\right) + j\sin\left(\frac{2k\pi}{n}\right) = e^{j2k\pi/n}, \text{ for } k = 0, 1, 2, ..., n - 1.$$
 (P-18)

The following are common equivalences for powers of imaginary unit j:

$$j = \sqrt{-1} = e^{j\pi/2}$$
 (P-19)

$$j^2 = -1 = e^{-j\pi} (P-20)$$

$$j^3 = -j = e^{-j\pi/2} (P-21)$$

$$j^4 = 1 \tag{P-22}$$

$$\sqrt{j} = \pm e^{j\pi/4} = \pm \frac{(1+j)}{\sqrt{2}}$$
 (P-23)

$$\sqrt{-j} = \pm e^{-j\pi/4} = \pm \frac{(1-j)}{\sqrt{2}}$$
 (P-24)

Regions in the Complex Plane

Let z be a complex variable and $z_0 = x_0 + jy_0$ be a complex number. Then

$$|z - z_0| = r \tag{P-25}$$

graphically represents a circle of radius r centered at (x_0, y_0) . In the inequality form,

$$|z - z_0| < r \tag{P-26}$$

represents the interior of the circle, whereas

$$|z - z_0| > r \tag{P-27}$$

represents the entire region of the complex plane outside of the circle.

$$y = \operatorname{Im}(z)$$


$$z_0 \quad r$$

$$|z - z_0| = r$$

This can be proven by plugging in z = x + jy and $z_0 = x_0 + jy_0$ to get the rectangular equation of a circle

$$\sqrt{(x-x_0)^2 + (y-y_0)^2} = r \Longrightarrow (x-x_0)^2 + (y-y_0)^2 = r^2.$$
 (P-28)

 $\operatorname{Re}(z_0)$ represents a vertical line at $x=x_0$, and $\operatorname{Im}(z_0)$ represents a horizontal line at $y=y_0$. The inequality forms are evident in the rectangular form.

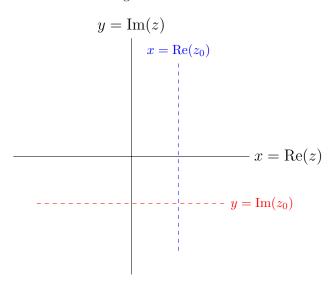

In general, any region described by a complex equation or inequality can be identified by solving in rectangular form and using candidate values of z to test the regions of validity.

Complex Functions of Time

Just as with complex numbers and complex variables, complex functions of time z(t) also follow many of the same properties. In rectangular form,

$$z(t) = x(t) + jy(t) \tag{P-29}$$

$$Re[z(t)] = x(t) \tag{P-30}$$

$$Im[z(t)] = y(t). (P-31)$$

In polar form,

$$z(t) = |z(t)| \exp[j\theta(t)] \tag{P-32}$$

$$|z(t)| = \sqrt{x^2(t) + y^2(t)}$$
 (P-33)

$$\theta(t) = \arg[x(t) + jy(t)]. \tag{P-34}$$

Here, while the Steinmetz phasor notation $\underline{/\theta(t)}$ can be used as an equivalent notation for $\exp[j\theta(t)]$, it can sometimes be used as a phase operator, where

$$\underline{/z(t)} = \arg[z(t)] = \theta(t). \tag{P-35}$$

The phase operator can also be extended to complex numbers and variables, with $\underline{z} = \arg(z) = \theta$.

Just as before, x(t), y(t), |z(t)|, and $\arg[z(t)]$ are all real-valued functions of time.

The complex conjugate function $z^*(t)$ has the following properties:

$$z^*(t) = [z(t)|_{i \leftarrow (-i)} \tag{P-36}$$

$$= [x(t) + jy(t)|_{j \leftarrow (-j)} = x(t) - jy(t)$$
(P-37)

$$|z(t)|^2 = z(t)z^*(t) = z^*(t)z(t).$$
 (P-38)

While Euler's and De Moivre's formulas also apply to complex functions of time, we are not particularly interested in their applications. Often, the polar form of complex functions of time are the only complex equations of interest.

Operations as Functions

Here, we introduce some functions that do not necessarily represent signals, but rather they serve as mathematical operations for analysis.

The indicator function, also called the characteristic function, is a Boolean function given by

$$\mathbb{1}_{A}(a) = \begin{cases} 1, & a \in A \\ 0, & otherwise \end{cases}$$
 (P-39)

The signum (or sign) function captures the sign of the value a:

$$\operatorname{sgn}(a) = \begin{cases} -1, & a < 1 \\ 0, & a = 0 \\ 1, & a > 1 \end{cases}$$
 (P-40)

The floor function lowers the value of a to the nearest integer below a:

$$floor(a) = \begin{cases} a, & a \in \mathbb{Z} \\ RoundDown(a), & otherwise \end{cases}$$
 (P-41)

The *ceiling function* raises the value of a to the nearest integer above a:

$$ceil(a) = \begin{cases} a, & a \in \mathbb{Z} \\ RoundUp(a), & otherwise \end{cases}$$
 (P-42)

Note that

$$floor(a) \le a \le ceil(a).$$
 (P-43)

The remainder function returns the remainder of division a/b and is borrowed from the integer modulo operation:

$$\operatorname{mod}(a, b) = (a \mod b) = a - b \cdot \operatorname{floor}(a/b).$$
 (P-44)