


Network Infrastructures

Access Control

Modern communication networks are structured into distinct functional layers that work together to transport data from end-users to global destinations. Understanding this architecture requires examining three primary components: the **Access Network**, the **Core Network**, and the **Network Edge**.

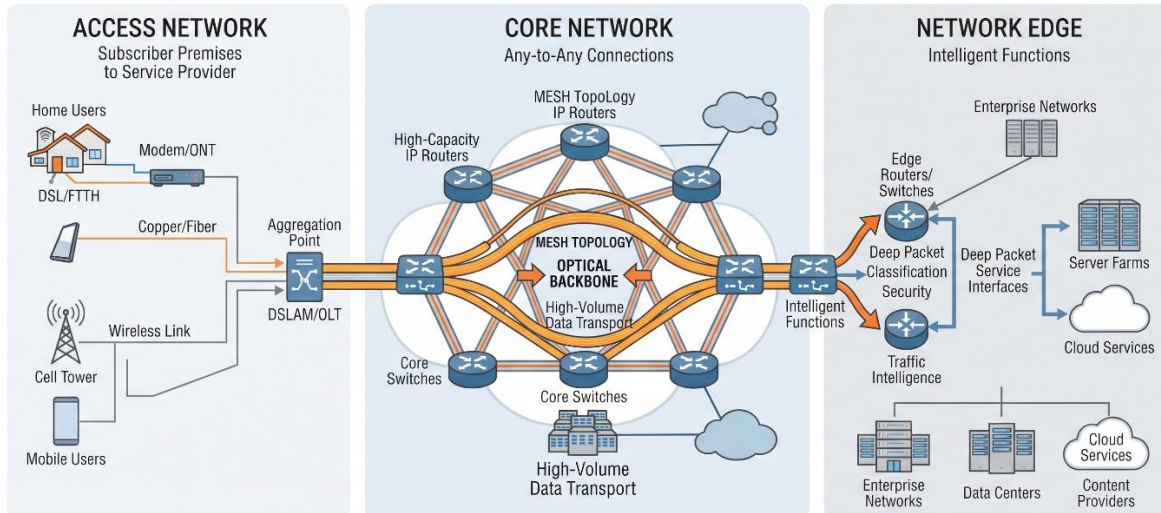

Access Network

The **access network** is the foundational segment of a communications infrastructure that **physically connects end-user devices to their immediate service provider** (also known as the Internet Service Provider or local carrier).

Historically, telecommunication carriers relied primarily on traditional copper lines (twisted-pair telephone wires) designed for analog voice telephony. Today, these same physical lines—along with hybrid coaxial-fiber setups—are utilized to deliver high-speed **broadband internet** alongside traditional telephony signals. Due to the exponential growth in bandwidth demand, carriers are heavily investing in **optical fiber** deployments, which offer high data rates, immunity to electromagnetic interference, and stable performance over long distances.

Core Networks

The **core network** functions as the **high-capacity backbone of the telecommunications infrastructure**. It is typically structured in a mesh topology to guarantee robust, any-to-any connectivity (? A mesh layout provides multiple redundant paths between nodes. If one link or router fails, traffic can be dynamically rerouted through alternative paths, ensuring high availability and fault tolerance).

The core consists of high-performance IP routers and core switches interconnected by a high-speed optical backbone. By leveraging fiber optics at the core level, carriers can transport massive aggregates of data traffic across cities, countries, and continents with minimal latency and packet loss.

The Network Edge

The **network edge** refers to the **boundary where end systems (hosts, servers, enterprise networks) interface with the core network**. The edge may perform intelligent functions that are not performed inside the core network. In this scenario we divide:

- **Edge Devices (Switches/Routers):** These devices perform deep packet inspection or examine packet headers to classify traffic, apply security policies, shape traffic, and make initial routing decisions based on specific packet properties.

- **Core Devices:** Once the edge has processed and directed the traffic onto a chosen path, the core network focuses exclusively on high-speed, high-volume packet switching and forwarding without performing complex inspections.

This functional separation significantly enhances overall network performance. By keeping the core lightweight and focused entirely on rapid forwarding, bottlenecks are minimized, allowing the network to scale effectively to handle massive traffic volumes.

Types of Access

Wired: This category uses physical metallic or glass cables to establish a connection to the network. It guarantees high reliability, stable performance, and fast transmission speeds.

- **Powerline Access:** This technology uses existing electrical wiring within a building for network connectivity. It offers an easy setup without requiring new cables, making it useful for home networking and extending Wi-Fi coverage. However, it offers the least stable and lowest-performing connection quality among wired options.
- **DSL (Digital Subscriber Line) Access:** leverages traditional copper telephone lines to transmit digital data alongside voice signals. While constrained by distance from the telephone exchange, it offers the advantages of widespread availability and cost-effectiveness, making it historically popular for home internet and small businesses.
- **Cable Access:** Cable access utilizes coaxial cables—originally deployed for television broadcasting—to deliver bundled internet and TV services. It relies on a shared infrastructure among local subscribers to provide high-speed residential broadband.
- **Fiber-Optic Access:** Utilizing thin glass or plastic fibers to transmit data via light pulses, fiber-optic access delivers exceptional performance. Its primary advantages are high bandwidth, low latency, and high security, making it the standard for high-speed internet backbones and data centers.

Wireless: Wireless technologies use radio signals to connect devices to the network. Their key advantages include user mobility, architectural flexibility, and quick deployment. Typical examples range from local Wi-Fi networks to short-range Bluetooth connections.

- **Satellite Access:** connects remote terminals to communication satellites orbiting the Earth. Although it provides unmatched geographic coverage for remote and rural areas, traditional satellite links suffer from inherently high propagation latency (due to the vast distance to space) and environmental susceptibility.
- **Cellular Access:** Connecting via mobile network base stations, cellular access ensures continuous mobility, flexibility, and on-the-go connectivity. It is predominantly utilized by smartphones and mobile devices for wide-area cellular data, but struggle with bandwidth limitations and variable signal strength depending on user location and cell tower congestion.
- **5G Access:** Representing the fifth generation of mobile networks, 5G offers dramatically enhanced performance with ultra-high speeds and ultra-low latency. Beyond human-centric communications, it supports massive machine-type communications for the Internet of Things (IoT) and immersive technologies like Augmented/Virtual Reality (AR/VR), making it foundational for smart cities.

Wired Access

Copper Access

The copper access network was historically developed to support voice communications, but then evolved to meet both traditional telephone services and high-speed broadband.

To achieve this, operators implement digital subscriber line standards such as ADSL (Asymmetric Digital Subscriber Line) and VDSL (Very-high-bit-rate Digital Subscriber Line), which separate the transmission medium into discrete frequency bands. In addition, the major advantage of this network is its widespread availability and the use of existing infrastructure.

However, existing copper-based networks have gradually been expanded during several decades and their architectures are not optimized with regard to use of current technologies. If an entirely new network were to be built today, it would not be based on use of copper-based technologies (in favor of optical media), and the design would therefore be very different from those of today's copper-based networks.

One problem is that networks are designed mainly for carrying POTS, while a growing share of the traffic is based on IP or other data communication protocols, and in some areas, there are problems with capacity and quality of service.

Optical Access

Optical access systems deliver ultra-high speeds with high reliability, making them the primary choice for fixed access networks. Unlike copper, optical transmission eliminates distance-related attenuation and electromagnetic interference. The main technology types used depend on the deployment scenario:

- **GE-PON (Gigabit Ethernet Passive Optical Network):** mainly adopted for **individual** residential users.
- **G-PON (Gigabit Passive Optical Network):** typically deployed for **enterprise** and business customers.
- **CDM (Code Division Multiplexing over Fiber):** used to cover **long-distance** transmissions.

FTTx (Fiber-to-the-x)


While technologies like PON define *how* data is transmitted, FTTx (Fiber-to-the-x) describes the physical deployment architecture—specifically, how close the optical fiber gets to the end user before switching to legacy copper wiring or terminating directly at the subscriber. These architectures replace traditional copper infrastructure by running fiber from a network element, such as the central office or local exchange, directly to a target destination denoted by x:

- **FTTH (Home):** The fiber runs all the way into the individual residence.
- **FTTP (Premise) / FTTU (User):** The fiber extends directly to the specific property or user.
- **FTTB (Building / Business):** The fiber reaches the boundary of the building (usually a basement or telecom room), while internal cabling handles distribution.
- **FTTO (Office) / FTTD (Desk):** The fiber reaches deep inside commercial environments, down to individual office rooms or desks.
- **FTTC (Curb):** The fiber reaches a street cabinet near the pavement/curb, with existing copper covering the final short distance.
- **FTTN (Node / Neighborhood) / FTTZ (Zone):** The fiber terminates at a shared distribution node serving a larger neighborhood or zone.

FTTx Elements

An FTTx deployment relies on four standard building blocks to transmit data between the service provider and the customer:


- **OLT (Optical Line Terminal):** The endpoint located at the service provider's Central Office (CO). It controls the bidirectional flow of information across the optical network and connects to the core IP network.
- **ODN (Optical Distribution Network):** The physical transmission path connecting the OLT to the ONUs, consisting of fiber cables, connectors, and splitters.
- **ONU (Optical Network Unit):** The device placed near or at customer premises that converts optical signals into electrical signals for end-user equipment.
- **ONT (Optical Network Termination):** A specific type of ONU deployed directly at the customer premises to serve as the local network termination point.

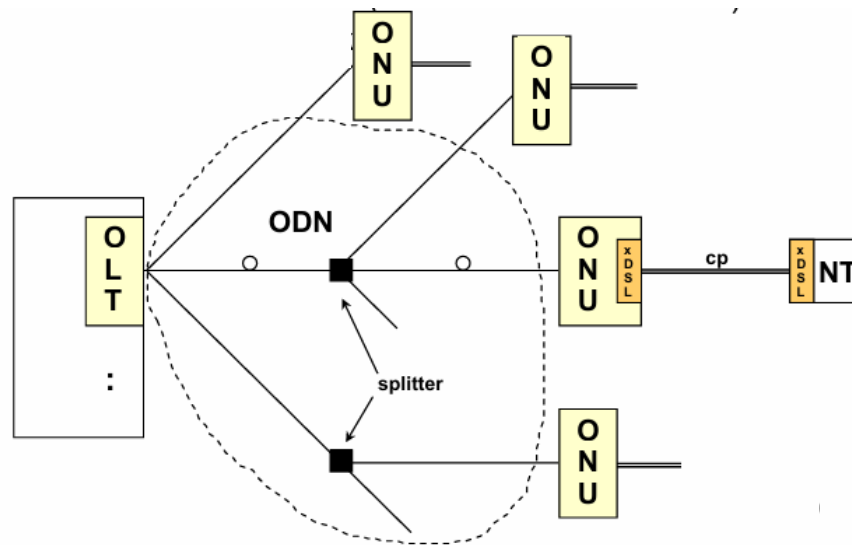


FTTx Architectures

FTTx networks are deployed using three main architectural models based on how the transmission medium is shared and managed:


- **AON (Active Optical Network):** Also known as Point-to-Point (P2P), this setup provides a dedicated optical fiber directly from the central office switch to each individual subscriber, ensuring the highest network performance. However, this method costs too much to be really used in a normal scenario. As we can see in the picture (a) it requires a specific dig for each user (3 users => 3 digs) increasing the cost. So, this method costs so much due to the high cost of digging, (about 70 euros per meter, while the actual cost of fiber is extremely low, around 0.5 cents per meter.

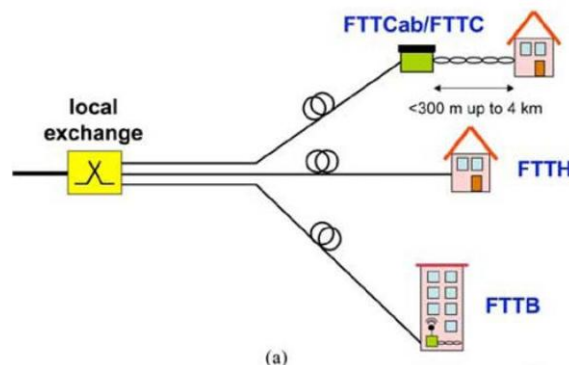


An intermediate solution (b) relies on electrically powered switching (the active node) that receives the light from the fiber, convert it into electricity, operates as a “router” and then retransmits light to the users. However, this method removes the advantage of dedicated fiber lines (the line from the local exchange to the active node it’s shared with the neighbourhood) and introduces operational drawbacks: the active nodes require electrical power, hardware maintenance, dedicated physical space, and represent potential single points of failure. Furthermore, dedicated runs increase deployment costs significantly (e.g., 3 endpoints require 3 separate fibers and potentially 3 trenching digs).

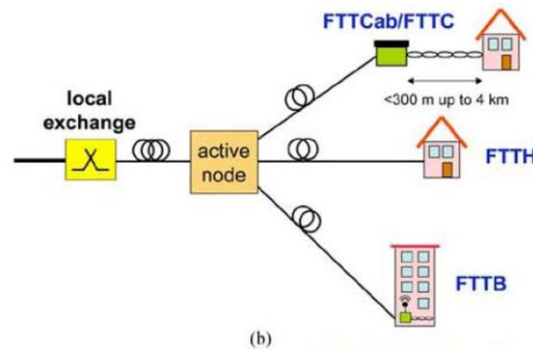

- PON (Passive Optical Network):** It’s the most used architecture. It’s a point-to-multipoint architecture based on a **tree topology**. Instead of dedicated fiber or powered intermediate switches, it uses unpowered **optical splitters** to passively divide a single optical signal from the OLT among multiple end users. This drastically reduces cabling requirements and maintenance costs since it doesn’t need electricity or space (no more active node, no switching, routing, no light->electricity->light, etc...). Practically, the splitter is a simple piece of fiber (usually made of glass) fused with the other fiber cables. In terms of performances modern PON standards deliver high speeds (from 1 Gbps up to 10 Gbps shared), easily meeting typical residential and business needs. However, individual performance can fluctuate slightly during peak traffic hours because users share the aggregate optical channel.

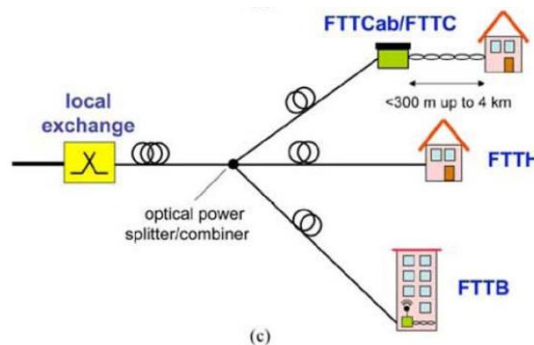

- Fiber to the Exchange:** A hybrid legacy model where optical fiber extends only as far as the Central Office (CO). The connection from the Central Office to the end customer is completed entirely over existing copper lines using digital subscriber technologies like ADSL. The primary disadvantage here is the copper local loop itself, which severely limits bandwidth, increases attenuation over distance, and suffers from electromagnetic interference. It’s the worst in term of performances: Signal attenuation increases sharply over distance, drastically reducing speeds as the subscriber gets farther from the exchange. Speeds are low and highly asymmetrical compared to all-optical solutions.

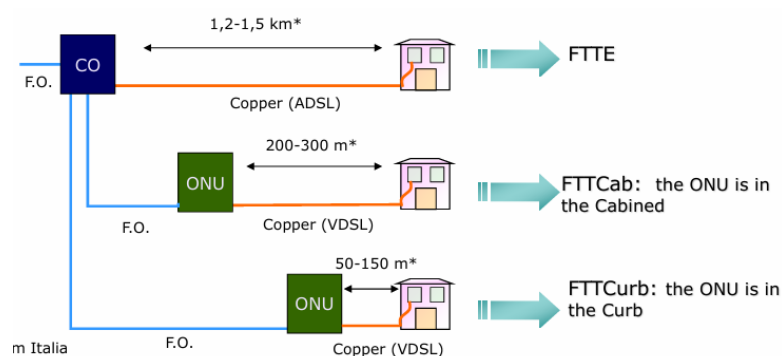

Wireless Access

The wireless access domain represents the sector holding the greatest promise for realizing the concept of ubiquitous networking. Its primary objective is to ensure communications without interruptions (*seamless*) and high-speed broadband connectivity by integrating both fixed and mobile access into a single architecture.

Talking about wireless access solution we must distinguish between:

- **Fixed Wireless Access:** instead of having cables interconnecting users and providers, FWA uses antennas. So, we have an antenna on the customer's building (e.g., a house or school) that communicates directly with the central provider antenna, located at a fixed base site.
- **Cellular:** A more complex infrastructure designed to provide connectivity to moving users over large geographic areas by distributing the coverage across adjacent radio cells.

Cellular Networks

Cellular networks are designed to provide wireless connectivity across **broad geographical regions** while actively managing **user mobility** and dedicated radio resources.

Even if these systems are named "Wireless Access" **the wireless segment is actually very small:**

- Only the radio hop between the end user and the base station is wireless.
- The rest of the infrastructure, connecting the base station antennas back to the core network, also known as the **backhaul** is completely wired.

Historically, the backhaul relied on copper lines (E1/T1 links up to 2G/3G), but it has since evolved to high-speed optical fiber to support growing data rates.


Characteristics

Cellular networks rely on two critical network operations:

1. **Dedicated Bandwidth Management:** Unlike Wi-Fi, which operates on a shared contention-based, in a Cellular Network the transmission resources (time, frequency, or codes) are allocated individually to each active user, ensuring strict quality of service and throughput management.
2. **Mobility Management:** Because cellular users can move freely (e.g., walking or traveling on a train), the network must support continuous connectivity through:
 - **Localization:** The network continuously tracks where the user terminal is located (Wi-Fi only associates a client with a local Access Point and does not know its wider location).
 - **Handover:** The connection must actively "follow" the user switching active data sessions from one antenna to another without dropping the service.

2G and 3G Architecture

In early cellular generations (2G and 3G, as well as 4G), the network divides the territory into geographical areas called **cells** (the name “Cellular” derives exactly from this. Cells => Cellular). Each cell is served by a Base Station (the physical antenna site).

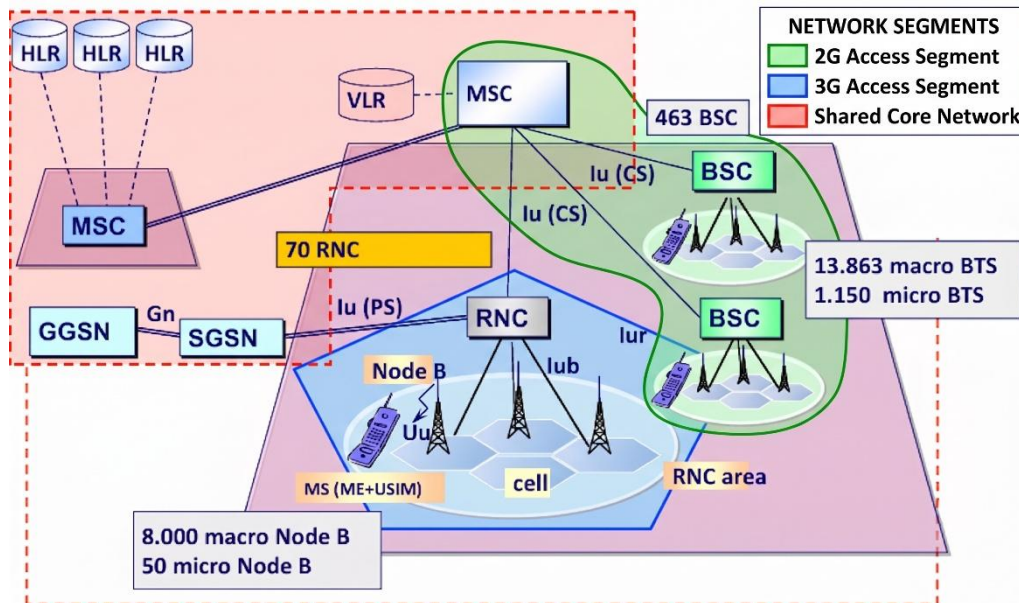

- **2G Access Segment:** The mobile terminal communicates via radio with a base station known as a BTS (Base Transceiver Station). Multiple BTS units are aggregated and controlled by a hierarchical controller called a BSC (Base Station Controller).
- **3G Access Segment:** The user device (referred to as an MS - Mobile Station) connects via the Uu radio interface to the 3G base station, known as a Node B. Node Bs are managed and coordinated by an RNC (Radio Network Controller) via the Iub interface. Additionally, multiple RNCs can communicate directly with one another through the Iur interface to manage mobility and handovers.
- **Shared Core Network:** Both generations connect to a core network divided into two functional domains:
 - **Circuit-Switched (CS) Domain:** Dedicated primarily to traditional voice traffic, it centers on the MSC (Mobile Switching Center), supported by the HLR (Home Location Register) and VLR (Visitor Location Register) databases for location and user profiles. Both the BSC (2G) and the RNC (3G) interface with the MSC via dedicated links (the Iu(CS) interface for 3G).
 - **Packet-Switched (PS) Domain:** Dedicated to data traffic and Internet access; introduced with GPRS/EDGE and consolidated in 3G. The RNC connects via the Iu(PS) interface to the SGSN (Serving GPRS Support Node), which communicates via the internal Gn interface with the GGSN (Gateway GPRS Support Node) to route packets to external IP networks.

5G Architecture

In fifth-generation (5G) networks, the architecture is significantly simplified and modernized into a **Service-Based Architecture (SBA)** which clearly separates the control plane from the data transport plane. Like the older generations, the only wireless link remains the connection between the end user and the antenna, while the internal network interfaces (e.g., N2, N3, N4, N6) are high-speed wired links (usually fiber).




The key components include:

- **UE (User Equipment):** The end-user device (such as a smartphone, laptop, or IoT sensor) requesting network connectivity.
- **gNB (next-generation Node B):** The 5G base station antenna that manages the radio interface directly with the UE.
- **AMF (Access and Mobility Management Function):** responsible for authenticating the UE, handling network registration, and managing user mobility between gNB antennas.
- **SMF (Session Management Function):** A control entity that works alongside the AMF to allocate resources to each session.
- **UPF (User Plane Function):** It processes and routes data packets between the 5G radio access network and the external data network (Internet/Data Network). It's the part in which the packets are switched through the network to reach the end user.

Wi-Fi Evolution

The IEEE 802.11 family has progressively evolved over the past decades to address rising bandwidth demands, higher client densities, and media-rich services. To simplify technical nomenclature, the Wi-Fi Alliance retrospectively introduced user-friendly generation names (Wi-Fi 1 through Wi-Fi 6).

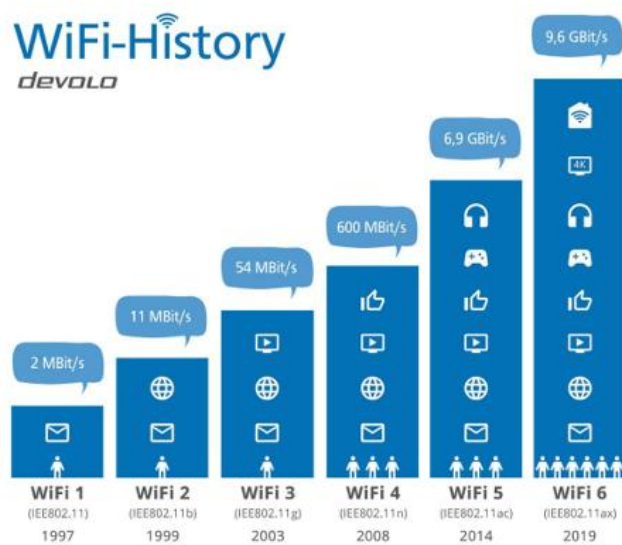

- **Wi-Fi 1 (IEEE 802.11 – 1997):** The legacy baseline standard offering a peak throughput of **2 Mbit/s**. It was primarily suited for basic, low-bandwidth text transmission like email.
- **Wi-Fi 2 (IEEE 802.11b – 1999):** Raised the maximum data rate to **11 Mbit/s** over the 2.4 GHz band. This standard enabled the early expansion of wireless home networking and general web browsing.
- **Wi-Fi 3 (IEEE 802.11g – 2003):** Introduced OFDM (Orthogonal Frequency-Division Multiplexing) in the 2.4 GHz band, increasing peak theoretical speed to **54 Mbit/s**. This allowed users to support standard video streaming along with browsing and email.
- **Wi-Fi 4 (IEEE 802.11n – 2008):** A major evolutionary step reaching up to **600 Mbit/s**. It introduced MIMO (Multiple-Input Multiple-Output) antenna technology and dual-band operation (2.4 GHz and 5 GHz), enabling multi-user environments, social media use, and higher-resolution video streaming.
- **Wi-Fi 5 (IEEE 802.11ac – 2014):** Focused heavily on the 5 GHz band, leveraging wider channels and MU-MIMO to push maximum throughput up to **6.9 Gbit/s**. This bandwidth headroom unlocked reliable online gaming, high-fidelity audio, and dense multi-device connectivity.
- **Wi-Fi 6 (IEEE 802.11ax – 2019):** Designed to deliver up to **9.6 Gbit/s**. Beyond raw speed, its main improvement is spectral efficiency in crowded environments using OFDMA (Orthogonal Frequency-Division Multiple Access), making it capable of supporting 4K/8K media streams and high client densities simultaneously. It also allows us to make calls on the mobile network (e.g., if you are abroad and have no roaming active).

GEO Satellites Access

GEO (Geostationary Orbit) is a type of access that relies on satellites which orbit at an altitude of approximately **35,786 km** directly above the Earth's equator. At this specific distance, their orbital speed matches the rotation of the Earth, which means a GEO satellite appears completely stationary in the sky from the perspective of a ground observer.

Because they are positioned so high, just **three satellites** are mathematically sufficient to provide near-global coverage and ground antennas do not need to track them across the sky (since the satellites seem stationary from Earth, the antennas simply “point at a fixed location in the sky”).

However, this massive distance introduces an inevitable physical delay with a transmission latency of **500 ms or more**, making GEO unusable for today’s real-time interactive traffic (like voice calls, online gaming, or rapid two-way communication).

LEO Satellites Access

LEO (Low Earth Orbit) solves the latency problems of GEO by relying on much closer satellites, which orbit at an altitude of approximately **500 to 2000 km** above Earth (15-20 times closer than GEO).

However, due to their proximity to the surface, they have a short orbital period of roughly **90 to 120 minutes** per orbit, meaning a single satellite cannot provide persistent local service. To solve this problem and guarantee continuous global coverage LEO requires **large satellite constellations** and specific algorithms that move clients from a satellite to another without connection loss.

- **Advantages:**

- **Low Latency:** Round-trip transmission time is roughly **20–40 ms**, which is comparable to terrestrial broadband and drastically lower than legacy satellite links.
- **High Bandwidth Potential:** Proximity enables strong signal reception and higher throughput capacity.
- **Global Reach:** Delivers reliable coverage to remote, rural, and maritime areas underserved by fiber or mobile networks.


- **Challenges:**

- **Constellation Size:** Thousands of active satellites are required to ensure continuous handovers without dropped connections.
- **High Deployment and Maintenance Costs:** Launching, managing, and replenishing a massive constellation involves major capital investment.
- **Short Lifespan and Space Debris:** Operating in low orbit subjects spacecraft to atmospheric drag, resulting in a short operational lifespan of only **5 to 7 years** and increasing orbital debris risks.

LEO vs. GEO

Feature	LEO (Low Earth Orbit)	GEO (Geostationary Orbit)
Altitude	~500–2,000 km	~35,786 km
Latency	Low (~20–40 ms)	High (~500+ ms)
Coverage Mechanism	Requires thousands of satellites in a constellation	A single satellite covers roughly 1/3 of the Earth
Lifespan	Shorter (~5–7 years)	Long (~15 years)

Example: Starlink

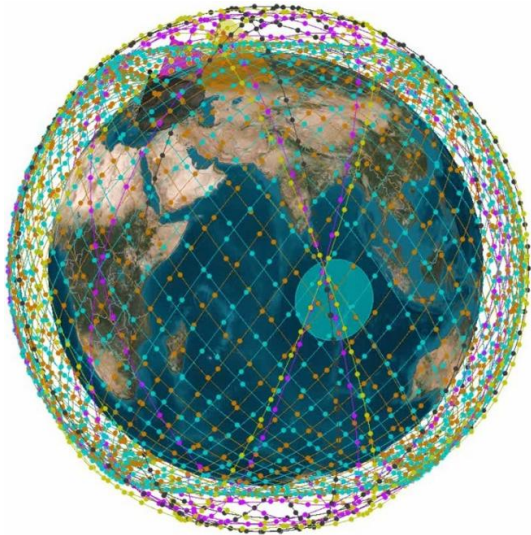

Developed by SpaceX, **Starlink** represents the most prominent commercial deployment of a broadband LEO mega-constellation:

- **Scale and Purpose:** Over 5,000 satellites deployed to deliver global broadband coverage to residential users, enterprises, and mobility sectors (such as aircraft and maritime vessels).
- **Terminal and Performance:** End users connect via a compact, phased-array antenna terminal ("Dishy"), achieving typical round-trip latencies of **20–40 ms**.

Backbone Networks

A telecommunications backbone is split into two distinct architectural views:

- **Logical Topology:** which describes how IP traffic and routing protocols see the network).
- **Physical Topology:** the underlying level that actually contains fiber optics and transmission equipment in the ground.

Logical Topology: The Optical Packet Backbone (OPB)

The Optical Packet Backbone (OPB) represents the packet-switched routing layer consisting of 32 Points of Presence (PoPs) distributed across the country. It is organized in a hierarchical, two-tier star/mesh structure to aggregate and forward IP traffic efficiently:

- **Inner Core (4 PoPs):** The central transit backbone consists of 4 high-capacity PoPs: 2 located in Rome and 2 in Milan. These main nodes are interconnected with heavy trunk links operating at 10 Gbit/s (STM-64).
- **Outer Core (28 PoPs):** The remaining 28 regional PoPs aggregate local traffic and connect back to the Inner Core. Depending on local traffic demand, these links utilize different transmission rates:
 - 10 Gbit/s (STM-64) for high-volume secondary nodes.
 - 2.5 Gbit/s (STM-16) for intermediate regional nodes.
 - 155 Mbit/s (STM-1) for lower-demand peripheral links.
- **Dimensioning Rule (50% Link Utilization):** Core links are intentionally engineered to operate at an average load of 50% capacity. This ensures adequate headroom to absorb traffic spikes and allows immediate failover rerouting without congestion if an alternate link goes down.

Physical Topology: The Optical Transport Network (OTN)

The logical OPB does not run on dedicated end-to-end dark fiber for every single logical link; instead, it is built directly on top of an underlying physical Optical Transport Network (OTN).

- **Physical Nodes (ODXC):** Physical transmission sites house ODXC (Optical Digital Cross-Connect) equipment. These devices switch high-capacity lightpaths and groom optical wavelengths directly at the physical layer without needing packet inspection.
- **Multiplexed Transmission (DWDM):** Long-distance physical spans use DWDM (Dense Wavelength Division Multiplexing) over optical fiber. DWDM allows many individual optical channels (lambdas) to travel down a single physical pair of fibers simultaneously.
- **Logical to Physical Independence:** The logical map looks like a direct, simplified tree/star radiating from Rome and Milan. However, the physical map reveals a heavily meshed ring topology connecting physical cities (e.g., Turin, Genoa, Florence, Bologna, Naples, Palermo). If a physical optical link is severed, the DWDM/ODXC layer can automatically reroute the optical channel through an alternate geographic path while the logical IP layer above remains completely unaware of the physical fault.

DSL

Def. DSL represents a family of technologies designed to provide **digital data transmission over the wires of a local telephone network** (twisted-pair copper wires).

Historically, the acronym stood for **Digital Subscriber Loop**, but it was later rebranded as **Digital Subscriber Line** for marketing purposes.

(A "subscriber line" refers to the physical telephone connection that links an end customer, the subscriber holding a service contract with a network operator, directly to the operator's central office).

The xDSL Family

Over time, several variants of DSL were developed to meet different performance requirements and line conditions:

- **IDSL (ISDN Digital Subscriber Line):** Deployed to provide digital access on very old telephone lines.
- **HDSL (High Data Rate Digital Subscriber Line):** An early high-speed variant offering symmetrical transmission.
- **SDSL (Symmetric Digital Subscriber Line):** A standardized, single-pair evolution of HDSL delivering identical upstream and downstream speeds.
- **ADSL (Asymmetric Digital Subscriber Line):** Configured with higher download speeds and lower upload speeds to match typical consumer internet habits; it became the dominant commercial standard of its era.
- **ADSL "lite" (or G.lite):** A simplified, lower-speed version of ADSL that eliminated the need for a splitter installed at the subscriber's premises.
- **RADSL (Rate-Adaptive Digital Subscriber Line):** A dynamic variant that automatically adjusts its transmission rate based on the physical quality and length of the copper line.
- **VDSL (Very High Speed Digital Subscriber Line):** Designed to deliver substantially higher bitrates over shorter physical distances.
- **VDSL2 (Very High Speed Digital Subscriber Line 2):** An improved, wider-bandwidth extension of VDSL that became widely adopted alongside fiber-to-the-cabinet (FTTC) deployments.

Motivation

Globally, telecommunications infrastructure includes more than 600 million copper wire connections, spanning hundreds of millions of kilometers. This vast network was initially built strictly for analog voice communication, in which a continuous electrical waveform represents acoustic sound.

The transition from analog voice to digital data transmission, encoding information as bits rather than electricity, was driven by several market and technical factors:

- **Surging Data Demand:** The rapid expansion of personal computing created a massive requirement for high-speed access to packet-switched IP networks, that analog systems could not provide.
- **Competition and Deregulation:** The liberalization of national telecommunication markets allowed third-party operators to compete with historical incumbents, driving the commercial rollout of broadband services.
- **Global Telephony Demands:** Ongoing requirements to expand basic POTS (Plain Old Telephone Service) connectivity in developing regions, where physical copper lines remained the primary telecommunications asset.

Analog Dial-up Modems

Before DSL, transmitting digital data over the telephone network required an **analog modem**.

- **Dial-up Mechanism:** The user's computer connected to a local modem, which converted digital data into audible analog audio tones. The signal traveled over the UTP line through the Central Office switch and traversed the circuit-switched PSTN to reach another modem and router operated by the ISP (Internet Service Provider).
- **Line Occupancy:** Because it utilized the standard voice channel, a dial-up connection occupied the line completely, preventing simultaneous voice calls.

Physical Limits: Shannon Channel Capacity

The maximum achievable bit rate of an ordinary analog telephone line is strictly bounded by the Shannon-Hartley theorem:

$$C = B \log_2(1 + \text{SNR})$$

Example: In a standard analog voice circuit, low-pass filters inside the telephone network restrict the available bandwidth to narrow voice frequencies:

- **Bandwidth (B or W):** Approximately 3.4 kHz (3400 Hz).
- **Signal-to-Noise Ratio (SNR):** Typically around 10,000, which corresponds to:

$$10 \log_{10}(10000) = 40 \text{ dB}$$


Applying the formula:

$$C = 3400 \cdot \log_2(1 + 10000) \approx 44,800 \text{ bits/second}$$

So, 44.8 kbps is the upper theoretical capacity of a traditional analog voice channel...

It explains why dial-up analog modems could not exceed speeds of roughly 33.6 kbps to 56 kbps, as long as the data was forced to pass through the voice-band filters of the PSTN. And this is also why we should move beyond this technology.

Pre-DSL Wiring Schematic

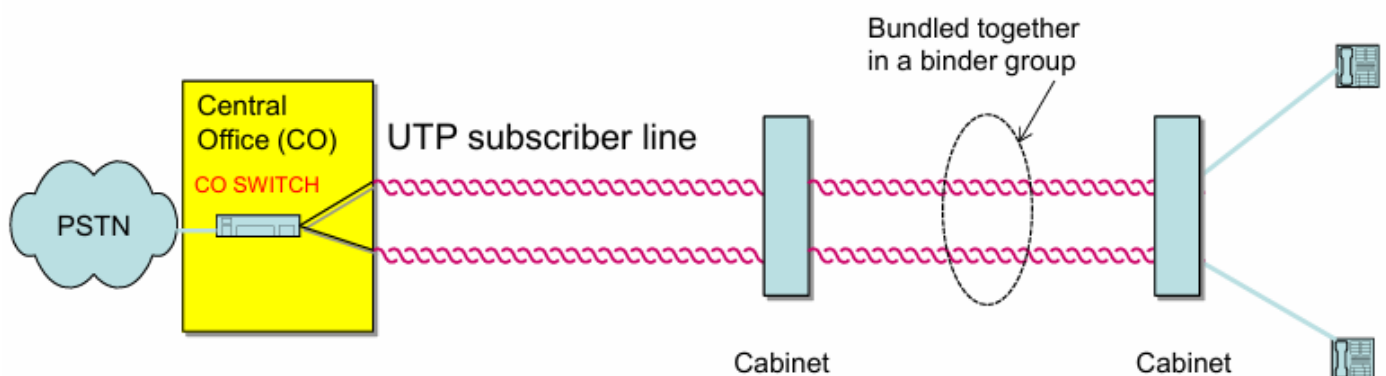

Before the introduction of digital subscriber line (DSL) technologies, the local loop was deployed exclusively to connect end-user telephones to the circuit-switched telephone network:

- **UTP Subscriber Line:** The connection from the customer premises to the Central Office (CO) consists of an unshielded twisted-pair (UTP) subscriber line.

- **Cabinets and Binder Groups:** Along the transmission route, subscriber lines pass through intermediate street cabinets where individual copper pairs are bundled together into large binder groups. Because multiple pairs are packed closely within the same cable binder, electromagnetic interference (crosstalk) becomes a significant physical constraint.
- **Core Connection:** At the Central Office, all incoming subscriber lines terminate at the **CO switch**, which directly routes calls into the legacy **PSTN** (Public Switched Telephone Network).

Asymmetric DSL

L'**ADSL (Asymmetric Digital Subscriber Line)** è stata concepita originariamente con l'obiettivo di distribuire contenuti di video on demand (VoD), anche se questo target iniziale non ha avuto successo commerciale. Il punto di forza dell'ADSL risiede nel fatto che il doppino in rame (il local loop) è a **uso esclusivo del singolo abbonato**, senza alcuna contesa di banda sul segmento di accesso fisico. Inoltre, la tecnologia garantisce la trasmissione passiva del servizio telefonico analogico tradizionale (**POTS**), consentendo l'uso contemporaneo di voce e dati sulla stessa linea.

La caratteristica distintiva dell'ADSL rispetto alle altre varianti DSL è l'asimmetria del flusso di dati:


Il volume e la velocità di trasmissione sono nettamente maggiori in una direzione rispetto all'altra.

Questo soddisfa a pieno le esigenze dell'utente medio: **throughput elevato in download** (navigazione sul web, streaming video, download di pagine HTML, etc...) ma **capacità ridotta in upload** (non dovendo ospitare server o trasmettere flussi continui verso la rete).

ADSL Frequency Bands

A frequenze elevate il rumore e l'attenuazione aumentano drasticamente. Per gestire in modo efficiente la trasmissione bidirezionale senza che i flussi collidano sullo stesso mezzo, lo spettro viene suddiviso in canali a frequenze separate (**FDD - Frequency Division Duplexing**):


1. **Canale Fonico (POTS):** Mantiene la banda base analogica (0 – 4 kHz) per le chiamate vocali.
2. **Upstream Band:** Copre la banda da **25.875 kHz a 138 kHz**, riservata alla trasmissione dall'utente verso la centrale telefonica (Central Office).
3. **Downstream Band:** Parte da frequenze superiori a 138 kHz e si estende verso l'alto; occupando un intervallo spettrale molto più ampio rispetto all'upstream, garantisce una velocità di download nettamente superiore.

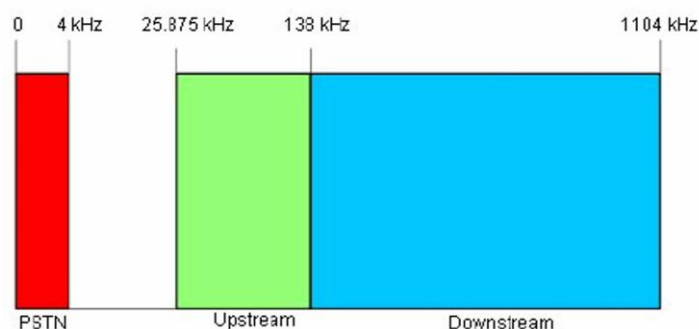

Cross-talks

Uno dei problemi principali dell'ADSL riguarda le Cross-Talks causate dai doppini in rame.

Infatti, i doppini di rame non viaggiano isolati, ma sono solitamente raggruppati in “**binder groups**” posati nelle stesse canaline sotterranee. Tuttavia, quando più coppie fisiche condividono lo stesso cavo e utilizzano bande di frequenza sovrapposte, il campo elettromagnetico generato da un segnale si accavalla con gli altri doppini di rame, generando cross-talk (interferenza).

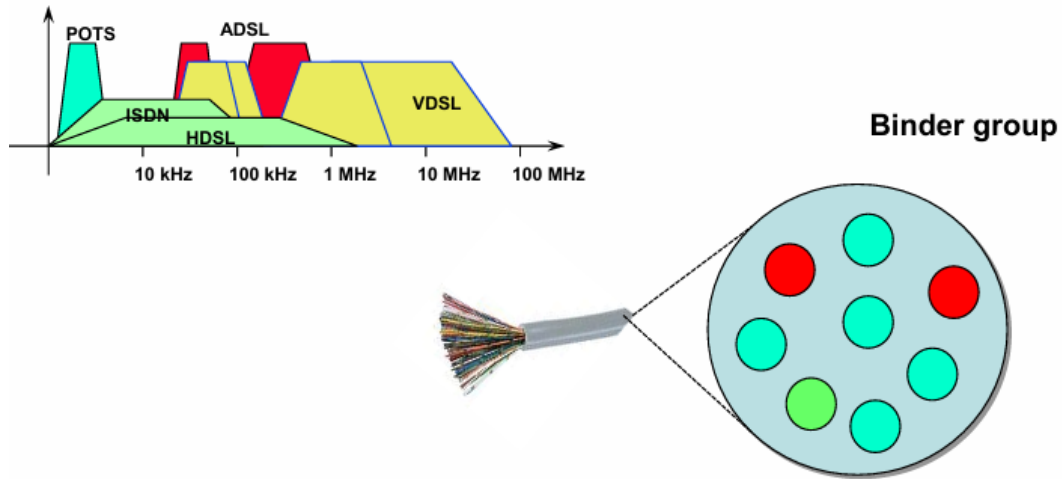


Il crosstalk cresce significativamente all'aumentare della frequenza e dipende da tre fattori principali:

- La densità spettrale di potenza (PSD) del segnale trasmesso.
- Il numero di coppie ritorte presenti all'interno del medesimo cavo.
- Il grado di sovrapposizione tra le bande di frequenza del segnale utile e di quelli interferenti.

FEXT (Far-End Cross-Talk)

FEXT è un tipo di Cross Talk che si verifica tra un trasmettitore e un ricevitore posti su estremità opposte del cavo. Tipicamente il segnale interferente percorre l'intera lunghezza del canale perdendo potenza lungo il tragitto, prima di causare interferenze vere.

Pertanto, il FEXT tipicamente non è un problema nelle reti abbastanza lunghe, ma può essere fastidioso su reti ADSL relativamente brevi. Per limitare questo fenomeno, la dimensione dei fasci viene regolata limitando il numero di coppie per condotto (di solito non più di 12 doppini di rame).

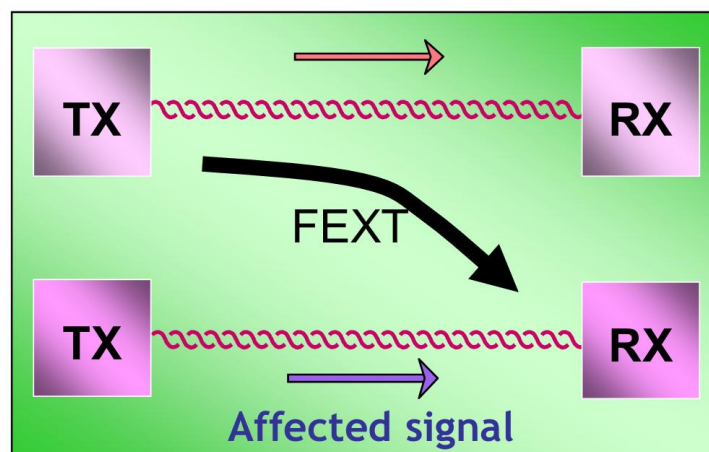


NEXT (Near-End Cross-Talk)

NEXT è un tipo di Cross Talk che si verifica tra un trasmettitore e un ricevitore posti sullo stesso lato del cavo.


L'idea è che il segnale ricevuto dal ricevitore, provenendo da lontano, giunge al ricevitore con un livello di potenza già molto basso (a causa del lungo percorso). Al contrario, il trasmettitore, che si trova sullo stesso lato del ricevitore, trasmette un segnale alla massima potenza, coprendo il già debole segnale del ricevente. Per questo motivo, **il NEXT è molto più distruttivo del FEXT**.

NEXT is one of the reason of the frequency division for upstream and downstream in ADSL.

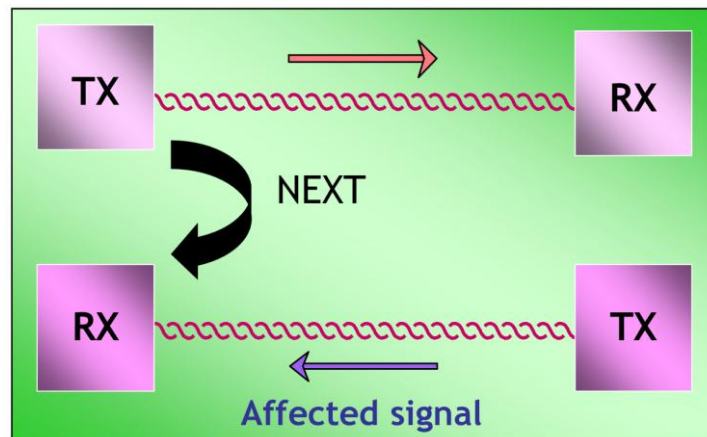


La separazione rigida in frequenza tra upstream e downstream nelle implementazioni ADSL standard è progettata proprio per **eliminare il NEXT**:

- Se tutti i trasmettitori posti allo stesso terminale (ad esempio tutti i modem degli utenti o tutte le porte del DSLAM in centrale) trasmettono solo su determinate bande e ascoltano solo su bande differenti, il NEXT non può manifestarsi perché il ricevitore filtra via le frequenze usate dai trasmettitori locali.

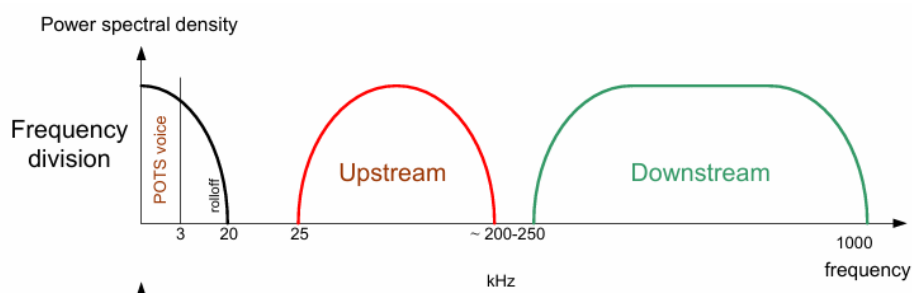

- Caso critico (Sovrapposizione di banda):** Se si adotta una configurazione in cui la banda di downstream viene estesa verso il basso per aumentare ulteriormente il bitrate, andandosi a sovrapporre allo spettro di upstream dei clienti vicini nello stesso binder group, il NEXT torna a manifestarsi: il forte segnale downstream uscente dalla centrale o dai modem interferisce direttamente con i ricevitori adiacenti posizionati sulla medesima terminazione.

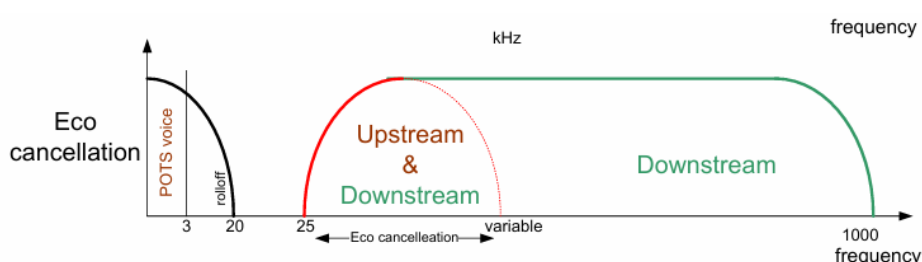

ADSL Filtering


Because POTS and ADSL share the same physical copper pair across different frequency bands, appropriate frequency filters must be installed at the customer's premises to prevent high-frequency DSL signals from causing audible noise and interference on the telephone equipment:

- **Central Splitter:** A single device installed directly where the telephone line enters the building. It splits the incoming line into two dedicated paths before connecting to hardware: a low-pass path for the telephone and a high-pass path for the DSL modem.
- **Distributed Microfilters:** If a central splitter is not installed, an individual microfilter must be plugged into every telephone wall jack that has a phone connected. The microfilter blocks the high-frequency signals from entering the analog phone.

Echo Cancellation

In standard ADSL upstream and downstream use completely separated frequency bands to avoid interference. However, some ADSL configurations attempt to maximize downstream transmission rates by extending the downstream spectrum over the upstream band, accepting the risk that it could cause overlaps.


- **NEXT Problems:** as we've already seen, when upstream transmission and downstream reception share the same frequency band on nearby lines within the same cable binder, NEXT occurs. The strong local upstream transmit signal couples directly into the sensitive receiver circuit listening for incoming downstream traffic.
- **Local Echo:** In addition to interfering with neighboring pairs via NEXT, transmitting and receiving in the same frequency band causes the modem's own transmit signal to bleed into its receiver.
 - **Solution: Echo Cancellation.** To operate under this overlapping band configuration, modems must implement Echo Cancellation. Echo cancellation uses digital signal processing to subtract a the transmitted signal from the combined incoming signal, allowing the receiver to recover the weaker incoming downstream data even in the presence of spectral overlap.

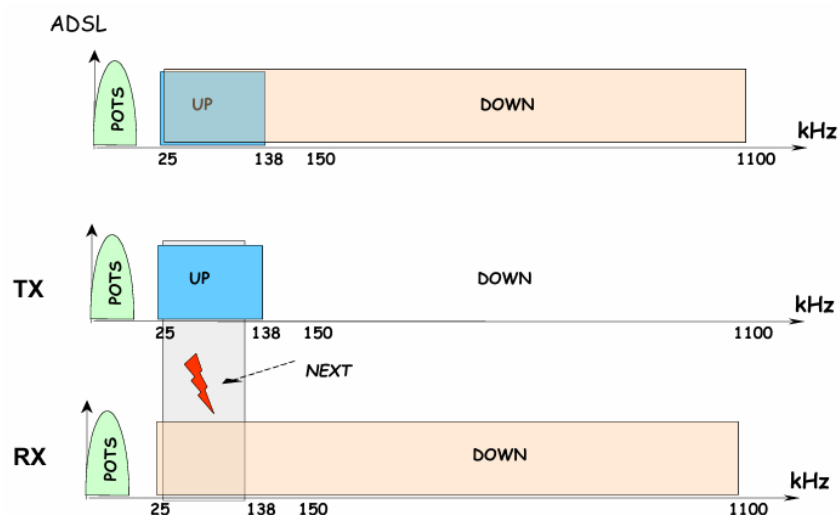

ADSL Modulations


Ideally, we would always like to have a flat frequency response because it guarantees uniform transmission characteristics across the entire spectrum, making signal detection and equalization simple.

However, in copper lines signal attenuation and noise vary sharply across frequencies. So, when the bandwidth is large (such as in the ADSL case) the channel is not flat, causing severe signal distortion and complex equalization requirements.

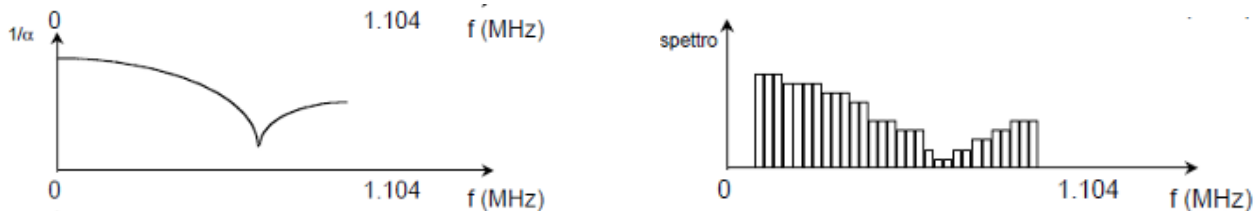

To address this issue **Discrete Multi-Tone Modulation (DMT)** was introduced. This technique divides the total operational bandwidth into multiple independent sub-channels:

- **Flat Response Approximation:** Because each sub-band is extremely narrow, the channel behaviour in each sub-band it's almost flat, simplifying equalization and detection.
- **Per-Tone Modulation:** Each tone is centered around a discrete carrier and independently modulated. If a sub-channel experiences severe external interference, the system can disable it entirely (like the white ones in the image).
- **Dynamic Adaptation:** DMT continuously monitors line conditions and dynamically shifts bit allocation across sub-channels to maximize throughput without dropping the physical connection.

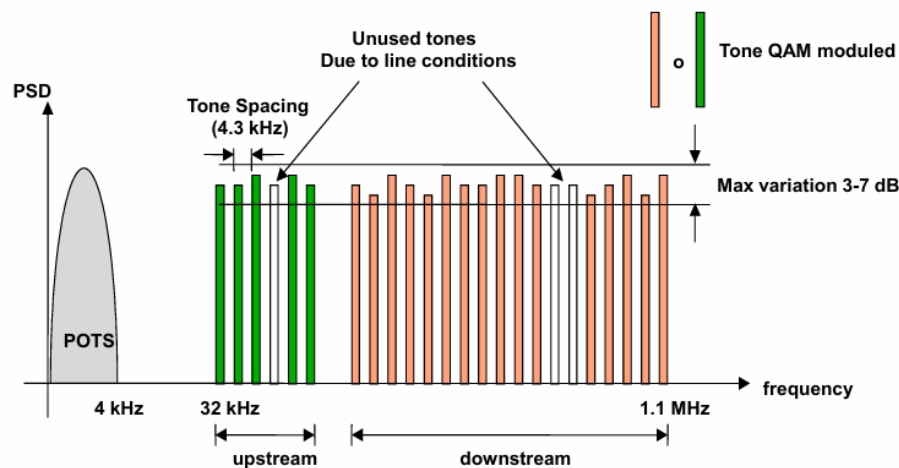

ADSL Theoretical Capacity

However, we must calculate the **maximum theoretical capacity** for each sub-channel using the Shannon capacity formula (studied some paragrapher ago):

$$C_t = B_t * \log_2(1 + \text{SNR}_t)$$

Where:

- C_t = Bit Rate of the tone t
- B_t = Bandwidth of the tone t
- SNR_t = Signal-Noise Ration of the tone t

In DMT, even if each tone has the exact same bandwidth B_t , the SNR_t varies substantially across different frequencies, resulting in different bitrates for each tone.

However, assuming a theoretical maximum spectral efficiency of 15 bit/s/Hz per sub-channel, we obtain:


- **Upstream:** Using 25 allocated sub-channels:

$$\text{Bitrate}_{\text{up}} = 25 \text{ channels} \times 15 \text{ bit/s/Hz/channel} \times 4 \text{ kHz} \approx 1.5 \text{ Mbit/s}$$

- **Downstream:** Using 249 allocated sub-channels.

$$\text{Bitrate}_{\text{down}} = 249 \text{ channels} \times 15 \text{ bit/s/Hz/channel} \times 4 \text{ kHz} \approx 14.9 \text{ Mbit/s}$$

Water-Filling

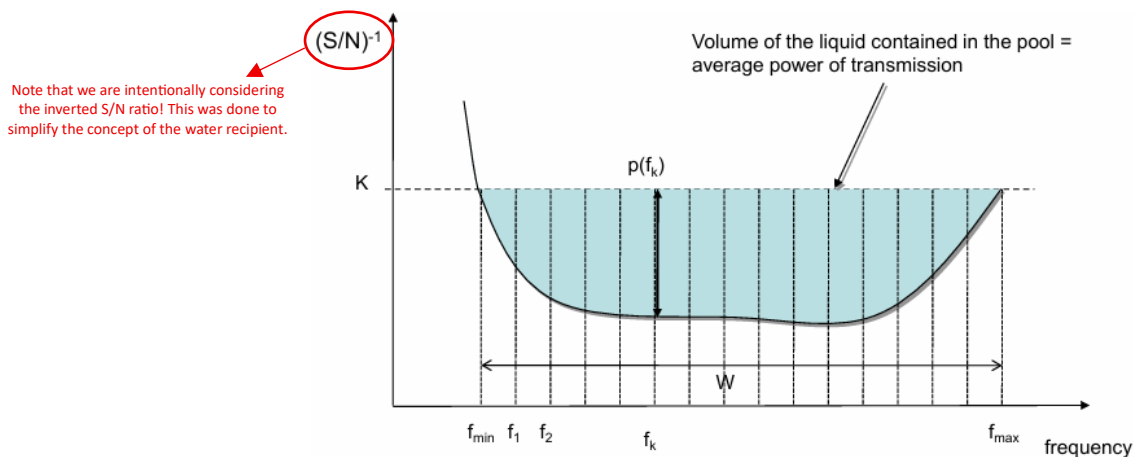


To optimize overall data rates across differing sub-bands, DMT implements an algorithm known as **Water-Filling**. The idea is that the signal transmission power across the spectrum is modeled like pouring water into a container. The bottom represents the noise level at each frequency f_k .

- **Frequencies with low noise (deep water)** receive higher transmission power, encoding more bits per symbol.
- **Frequencies with excessive noise (shallow water)** receive fewer bits or are left unused.

ADSL Architecture

The end-to-end ADSL architecture defines how user equipment interfaces with the copper local loop and connects back to the core transport network. The infrastructure is partitioned into the **Customer Premises** and the **Central Office (CO)**, linked by legacy **twisted-pair** cabling.

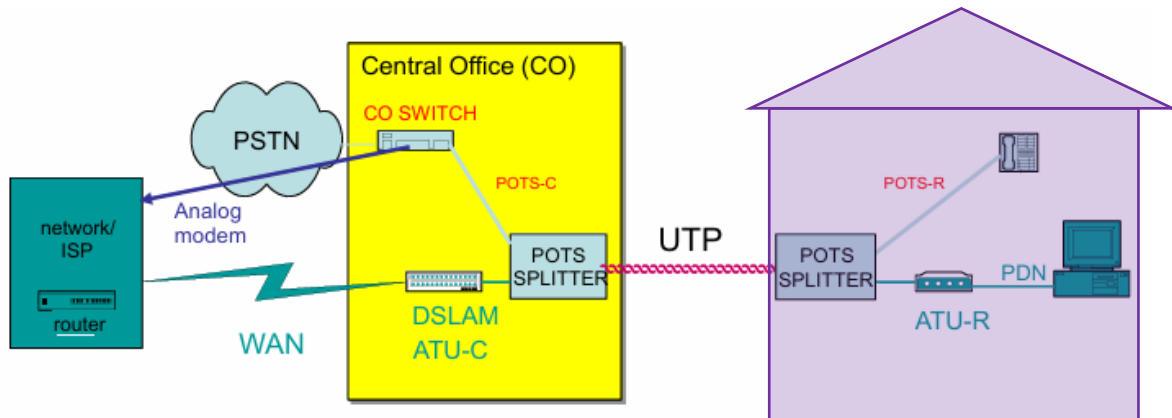


We have:

- **POTS Splitter:** Even though POTS and ADSL occupy distinct frequency ranges, telephone equipment can generate electrical interferences that leak into high frequencies (overlapping the digital ones). The splitter acts like a sort of filter to prevent these cross-band interferences.
- **ATU-R (ADSL Termination Unit – Remote):** Commonly referred to as the ADSL modem, it's located at the customer house. It terminates the digital subscriber line, executes Discrete Multi-Tone (DMT) modulation/demodulation, rate adaption, frequency allocation, echo cancellation, water-filling, and delivers IP traffic to the user's LAN.
- **UTP (Unshielded Twisted Pair):** The pre-existing copper cable plant originally installed for the telephone network. Each subscriber connects to the Central Office over a dedicated, unshared physical copper twisted pair.
- **Central Office (CO):** marks the boundary between the local access network and the provider's core network. It mirrors the subscriber-side hardware with carrier-grade equivalents:
- **POTS Splitter (CO Splitter):** Performs the reverse operation of the customer splitter. It separates low-frequency voice traffic and directs it into the traditional circuit-switched telephone network (PSTN/CO Switch), while high-frequency data is passed to the digital equipment.
- **ATU-C (ADSL Termination Unit – Central Office):** The central office counterpart to the ATU-R. It performs the same modem functions of before (modulation, tone negotiation, equalization).
- **DSLAM (Digital Subscriber Line Access Multiplexer):** Aggregates a large set of ATU-C interfaces, terminating up to several hundred subscriber lines in a single system. It multiplexes user traffic toward the core network/Internet (and demultiplexes incoming traffic back to individual lines), providing a centralized point for configuration, line diagnostics, and operator monitoring.

NOTE: Since ADSL was built upon the old telephone line, the central office architecture was not always like this. To adapt it for ADSL, modems (at both the central office and the user's home) and splitters were installed. However, the installation in the user's house is not a problem... but the installation in the Central Office of course is! It was necessary find space and installs hundreds of modems (1 for each user) in a space that was not designed for that!

ADSL Network Protocol - PPP

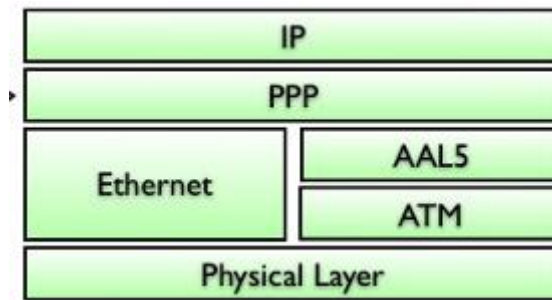


PPP (Point-to-Point Protocol) is a data link layer protocol designed for simple point-to-point links to transport packets between two direct peers. In the context of ADSL, it handles communication between the end user's modem/router and the ISP's Central Office equipment.

It's designed as a simplified version of the Ethernet protocol. However, unlike Ethernet (which was designed for multi-access local area networks), PPP was specifically built for dedicated links. It is used alongside ADSL because it provides critical carrier-grade access features:

- **Multiplexing:** PPP encapsulation allows multiple network-layer protocols (e.g., IPv4, IPv6) to run simultaneously over the same physical transmission link.
- **Access Control:** It supports essential subscriber-management operations, including user authentication (using protocols like PAP or CHAP), authorization, dynamic network parameter configuration, and integration with addressing mechanisms such as DHCP.

PPP Components

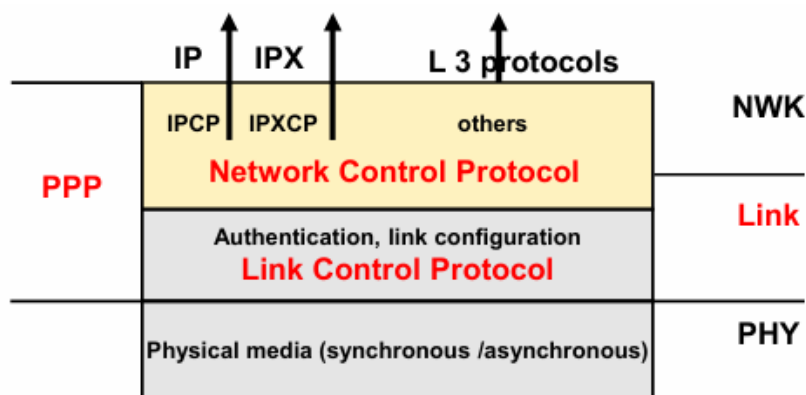


PPP relies on two main protocol sub-layers to set up and manage communication:

1. **LCP (Link Control Protocol):** Responsible for the **establishment, testing, configuration, and termination** of the point-to-point link. It negotiates physical and data link parameters, such as the maximum receive unit (MRU), encapsulation formats, link quality monitoring, and the choice of authentication method.
2. **NCP (Network Control Protocol):** Configures and manages the network-layer parameters once the physical link is established.

Because ADSL underlying transport networks evolved through different technologies, PPP frames can be encapsulated over ATM (and we name it as **PPoA**) or directly inside standard Ethernet frames (**PPoE**)


PPP Frame Structure

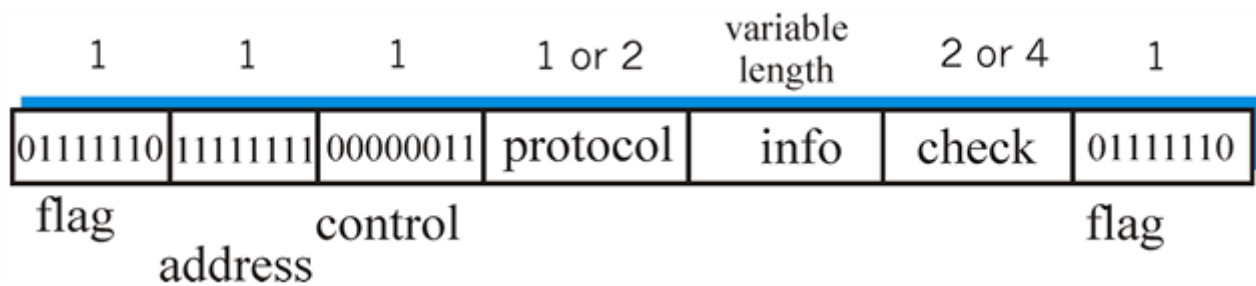

A standard PPP frame consists of several distinct fields arranged in order:


- **Flag (1 byte):** A well-known bit sequence placed at both the beginning and the end of the frame. It acts as a delimiter, allowing the receiver to recognize exactly where a frame starts and terminates.
- **Address (1 byte):** In the PPP case it is a dummy field, fixed to a sequence of all 1s. It happens because internet is a protocol designed to work in a network with several clients. PPP instead is used between 2 peers. We don't need to address anybody.
- **Control (1 byte):** Another legacy field typically set to 0x03 (indicating unnumbered information frames), ensuring compatibility with older HDLC standards.
- **Protocol (1 or 2 bytes):** Identifies the specific higher-layer protocol encapsulated inside the Information payload field. For example, it specifies whether the payload contains an IPv4 packet, an IPv6 packet, an LCP control packet, or an NCP management packet.
- **Information (Variable length):** Contains the actual datagram being transported across the link.
 - Its size can range from zero up to the **MRU (Maximum Receive Unit)**.
 - The standard default MRU value is **1500 octets (bytes)**, which matches the default MTU of standard Ethernet.
 - The exact MRU can be dynamically renegotiated using LCP during link initialization.
 - If the data is shorter than required by the underlying physical layer, the Information field may be padded with extra bytes up to the agreed MRU size.
- **Checksum / FCS (Frame Check Sequence, 2 or 4 bytes):** A cyclic redundancy check (CRC) used by the receiving peer to detect transmission errors. If the calculated checksum does not match the received value, the corrupted frame is discarded.

PPP States

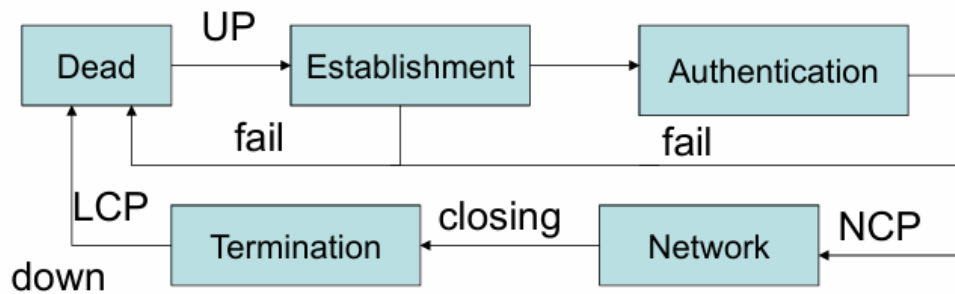


The operation of PPP follows a state-machine lifecycle divided into five sequential phases:

1. **Dead Phase:** The initial non-operational state of the link.
2. **Establishment Phase (LCP):** During this phase, the Link Control Protocol (LCP) sets up and configures the data link layer between the two peers. It negotiates frame sizes, compression, and error detection. The negotiation process consists of 2 messages:
 - **Configure-Request:** The initiating peer sends a message containing the desired operational parameters.
 - **ACK:** If the receiving peer accepts all parameters
 - **NAK:** If any parameter is unacceptable, suggesting alternative values to continue negotiation until an agreement is reached.
3. **Authentication Phase:** Once LCP completes link configuration, the connection moves to user verification before granting access to network resources. The authentication method depends on what was agreed upon during the Establishment phase:
 - **PAP (Password Authentication Protocol):** A basic two-way handshake where the client sends the username and password in clear text over the link. It is vulnerable to eavesdropping.

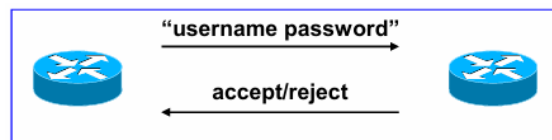

- **CHAP (Challenge Handshake Authentication Protocol):** A more secure three-way handshake that avoids sending passwords in plain text (The authenticator sends a random string, named "challenge", to the user; The user calculates a hash using a one-way hashing function based on the shared secret password and the challenge string. The resulting hash is returned to the authenticator, which verifies the match. Because the password is never transmitted across the wire, CHAP is significantly more secure than PAP).

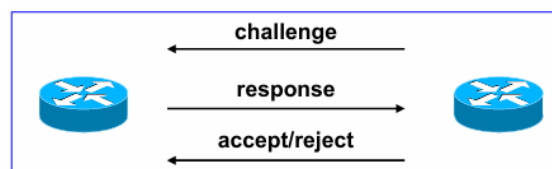

4. **Network Phase (NCP):** Configures the network parameters. The relevant Network Control Protocol (NCP) negotiates IP Addresses, DNS, gateway, etc...
5. **Termination Phase (and return to Dead):** The link is torn down. It could happen by user request, administrative disconnection by the ISP or physical loss/carrier failure.

VDSL (Very High-Speed Digital Subscriber Line)

To overcome the physical throughput limitations of ADSL, the copper access architecture evolved into VDSL (and VDSL2). The primary objective of VDSL is to achieve significantly higher bitrates over copper by altering two fundamental parameters:

1. **Shortening the Copper Loop:** In ADSL, the copper pair runs all the way from the Central Office to the user's home, often stretching several kilometers and causing high signal attenuation.


VDSL mitigates this by shortening the copper loop: optical fiber is run from the Central Office to a street cabinet—an Optical Network Unit (ONU) or MSAN (Multi-Service Access Node)—installed close to the user premises. Only the final drop from the cabinet to the customer remains copper (this architecture is named FTTC – Fiber to the Cabinet).

2. **Expanding the Operational Bandwidth:** According to Shannon's Capacity theorem, increasing the bandwidth directly raises the bit rate. So, VDSL uses much higher frequency plans to achieve an higher bit rate.


FDD vs. TDD

VDSL aims to maximize the bit rate. However, higher frequencies cause higher noise and interferences. So, to handle bidirectional transmission efficiently, VDSL can employ two duplexing methods:

- **FDD (Frequency Division Duplexing):** Upstream and downstream traffic are assigned to completely distinct frequency bands. Instead of having just one single band for upload and one for download (as in ADSL), VDSL commonly interleaves multiple upstream and downstream sub-bands across the spectrum to balance power spectral density and minimize crosstalk.

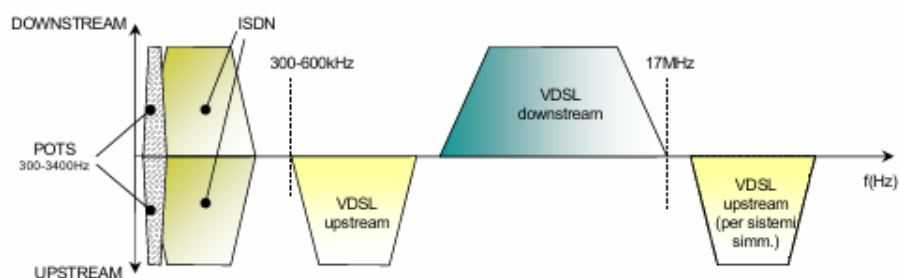


- **TDD (Time Division Duplexing):** Upstream and downstream share the exact same frequency band, but transmission time is sliced into distinct alternating time slots. The transmitter and receiver alternate their turns to send data, eliminating frequency fragmentation.

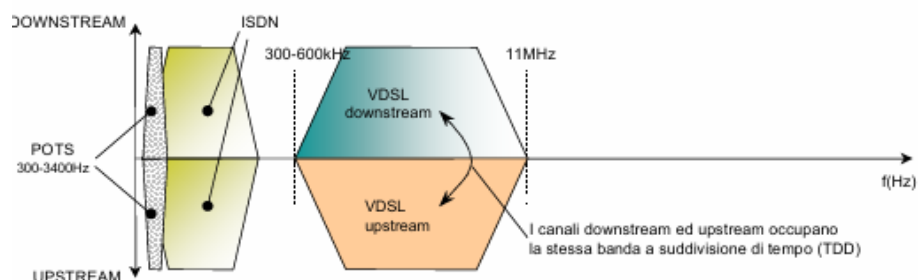

VDSL Vectoring

While shortening the copper loop reduces attenuation and enables high frequencies, bundling numerous active high-frequency lines into the same street cabinet binder causes severe electromagnetic coupling (crosstalk, especially FEXT). At VDSL frequencies, crosstalk becomes the single largest bottleneck limiting subscriber speeds.

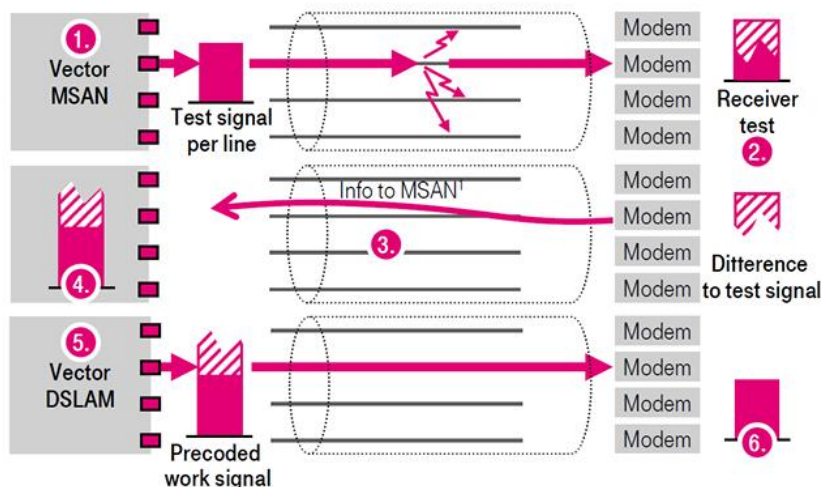

To cancel this crosstalk, VDSL implementations use Vectoring, which operates essentially like advanced noise cancellation across all lines in a binder:

1. **Interference Measurement (Pilot Signals):** The cabinet equipment (MSAN/DSLAM) sends known test signals (pilot sequences) across the lines.
2. **Feedback Loop:** The remote customer modems measure the error vectors and mutual crosstalk. Then sends these error reports back to the central unit.
3. **Pre-compensation (Anti-Noise Generation):** The vectoring processor inside the DSLAM calculates the complete crosstalk matrix of the binder. When transmitting downstream, it generates a precisely calculated "anti-phase" signal (anti-noise) and adds it to the transmitted data.
4. **Cancellation at Destination:** As the signals travel down the copper bundle, the physical crosstalk naturally cancels out the added anti-noise components. By the time the electrical waveform arrives at the end user's modem, the mutual interference is neutralized, leaving a clean, high-SNR signal that enables maximum bitrates.