

INSTALLATION
INSTRUCTIONS
Touchless Faucet

NOTE BEFORE INSTALLATION

安装之前

1. Please read the instructions carefully

2. The sketch map is only for reference. Product appearance and accessories may differ from illustrations in manual.

3. Although the installation is simple, it should be done by a licensed plumber.

4. The following are needed for proper installations: wrench,screwdriver,sealing tape,pliers, etc.
- 1、请详细阅读本说明书。

2、产品外形及所包含的配件以实物为准，示意图仅供参考。

3、建议客户请专业的安装人士安装。

4、准备以下工具:活动扳手，螺丝刀，密封胶带，钳子等。

PREPARATION BEFORE INSTALLATION

安装准备工作

1. Please note that tap water is required. If water is not clean it may require a filter to avoid damage to the solenoid or other parts.

2. Unit's infrared sensor may not work properly if unit is installed near a reflective surface or if it is facing bright lights .

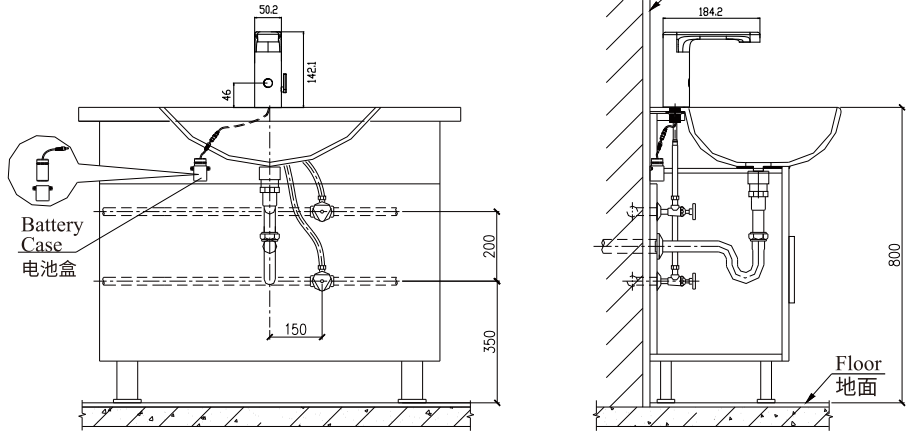
3. When the water pressure is below 0.05MPa, a pressure boosting device should be installed to prevent a decrease in flushing effect.

4. When the water pressure is higher than 0.7MPa, a pressure reducing device should be installed to avoid damage to the machine.
- 1、本机器应使用自来水，不得使用未经过滤和处理的污水不然将可能对机器电磁阀造成损坏。

2、选择安装位置时，应避开阳光或强烈灯光会直接照射到感应窗的位置以免机器性能下降。

3、在水压低于0.05MPa使用时，应加装升压装置，以免冲洗效果下降。

4、在水压高于0.7MPa使用时，应加装减压装置，以免对机器造成破坏。



FAUCET INSTALLATION

龙头安装

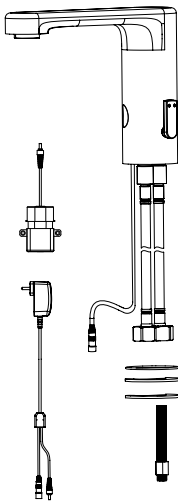
1. Step 1: Screw and fix two flexible hoses at the bottom of the faucet.

Note: Make sure the cold and hot flexible hose are installed correctly according to instruction.

2. Step 2: Install gasket, nut and screw in sequence showed in the sketch map and fix the assembled faucet onto the basin.

3. Step 3: Fix battery case foundation onto the wall underneath the basin. Make sure battery case wire and faucet wire can connect with each other.

4. Put 4AA alkaline batteries into the battery case. Make sure the batteries are installed correctly (“+” positive and “-” negative charge). Put the battery case into the foundation.Connect battery case wire and faucet wire correctly. This installation process is now complete and the sensor faucet is ready to use.



- 1、第一步:

如图所示，将两条4分软管对准龙头体底部的进水孔旋入并拧紧。

注意:请按进水孔冷热指示正确接入冷、热水软管。

2、第二步:

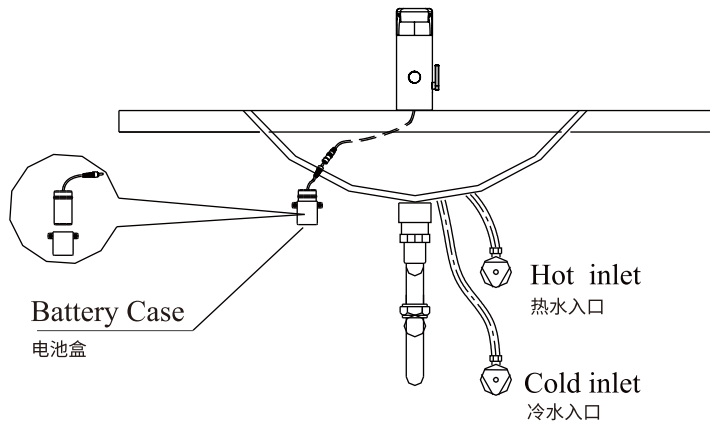
将垫片、螺母、螺丝按图示顺序组装好，再将装好的龙头体锁固在面盆上。/3、第三步:

将电池盒底座固定在盆下面的墙上。确保电池盒电线和龙头电线可以相互连接。

4、将4枚AA碱性电池放入电池盒中。确保电池正确安装(“+”为正极“-”为负极)。

将电池盒放入底座中。正确连接电池盒电线和极，水龙头电线。完成安装

安装与使用说明书
感应水龙头



FUNCTIONS

产品功能

1. Automatic on/off: Infrared sensor faucet automatically turns on and off.

2. Cold & hot water: There is a mixer within the faucet to adjust water temperature.

3.Time Limit: Washing time is set for 60 seconds.

4. Low power indication: This may indicate it is time to replace existing batteries with new ones or there is not enough power going to unit.
- 1.自动冲洗:红外线感应自动开启和关闭。

2.冷热可调:手动调节调温手柄，冷热温度随意调节。

3.限时工作:当洗涤时间超过60s时，自动关闭水源，避免因异物长时间感应出水造成资源浪费。

4.无电提示:当电池电能不足以提供机器正常工作时，自动提示更换新电池。

FEATURES OF THE PRODUCT

产品特点

1. Convenience: When sensor is activated the water begins to flow automatically. To stop flow, simply remove your hands from the sensing range.

2.Hygiene: Touch-less design provides hands-free and germ-free operation.

3. Water saving: Water efficient faucet reduces overall water usage without sacrificing water pressure.

4. Energy saving: Battery shall last approximately 3000 times/month for one year.
- 1.方便:开启和关闭水源均由机器自动完成，无需人为操作。

2.卫生:不需接触任何开关和部件，使您身心健康得以保证。

3.节水:伸手开水，收手停水，即感应即动作，有效节水。

4.省电:使用4节5号碱性电池，以3000次/月的使用频率，约1年不需要更换电池。

TECHNICAL STATISTICS

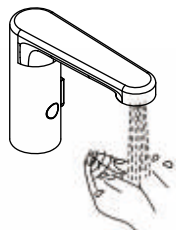
技术参数

Working power	DC 6V OR AC110-240V	The water pressure hereby refers to the pressure under which the machine normally functions,Taking washing effect into consideration,it is preferred that the machine works under a water pressure of 0.05-0.7MPa.
Average static power consumption	<50uA	
Instant dynamic power consumption	<2.5W	
Working water pressure	0.05-0.7MPa	
Sensing distance	0-23cm	
Error detection time	<0.6 second	
Maximum washing period	60 seconds	
Environment temperature	1~40℃	此水压只是指机器可正常工作的水压，考虑洗涤的效果，建议在 0.05~0.7MPa 水压下使用
Medium temperature	0~65℃	
Inlet diameter	G1/2	
Outlet diameter	G1/2	

工作电源	DC 6V OR AC110-240V	此水压只是指机器可正常工作的水压，考虑洗涤的效果，建议在 0.05~0.7MPa 水压下使用
平均静态功耗	<50uA	
瞬间动态功耗	<2.5W	
工作水压	0.05-0.7MPa	
感应距离	0-23cm	
辩误时间	<0.6 秒	
最长洗涤时间	60 秒	
环境温度	1~40℃	
介质温度	0~65℃	
进水管径	G1/2	
出水管径	G1/2	

INSTRUCTIONS

使用说明

- 

1. Faucet automatically supplies water as soon as hands are within the sensing range.

1、当手伸到感应范围时，龙头自动出水。
- 

2. Faucet automatically stops supplying water when hands are out of sensing range.

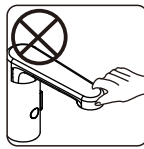
2、当手离开感应范围时，龙头自动关水。

MAINTENANCE

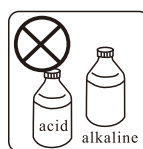
使用注意事项

- 

1.Always keep faucet surface clean and dry. Do Not immerse faucet in water. Please use damp towel or cotton cloth to wipe gently.

1、请不要用水擦洗，应使用洁净的干软布清洁。
- 

2.Please avoid any rocking or violent motion.

2、当手离开感应范围时，龙头自动关水。
- 

3.Please Do Not use acid/alkaline detergents for cleaning.

3、不能用酸碱一类强洗涤剂擦洗。

BATTERY INSTALLTION

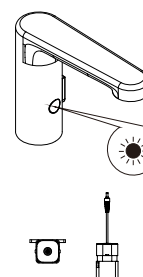
电池安装与更换

1. Low-voltage reminder: When the working voltage is $\leq(4.6-4.9V)\pm0.1V$, it enters a low-voltage alarm, the indicator flashes when using, and it continues to flash 5 times when leaving the sensing, indicating that the battery need to be replaced. The faucet is normally turn on and off.

2. Under-voltage protection: When the working voltage is $\leq4.5\pm0.1V$, it enters the under-voltage protection,The LED indicator flashes when using, leaving the sensor to continue to flash 10 times, prompting that the battery need to be replaced immediately. At this time, the sensor faucet is forcibly turn off.

Step 1: Pull out the battery case and remove old battery.

Step 2: Replace with 4 new AA alkaline batteries and install them back.

Note: The positive and negative polarity of the battery must be correct, and batteries of new and old or different brands can't be mixed.
- 

- 1.低电压提醒:当工作电压为 $\leq(4.6-4.9V)\pm0.1V$ 时，它会进入低电压警报状态，使用时指示灯闪烁，离开感应时继续闪烁5次，表示需要更换电池。水龙头可以正常工作。

2.欠压保护:当工作电压 $\leq4.5\pm0.1V$ 时，进入欠压保护状态，使用时LED指示灯闪烁，传感器继续闪烁10次，提示需要立即更换电池。此时，水龙头无法正常工作。

- 步骤1:

取出电池壳并移除旧电池。

步骤 2:

用4节新的AA碱性电池替换并重新安装:注意:电池的极性必须正确，新旧电池或不同品牌的电池不能混用。

TROUBLESHOOTING

常见问题处理

Problem	Possible Reason	Suggested Solution
No water flow	Batteries run out	Replace batteries
	Dirt on sensor case	Clean the sensor case
	Main water supply is shut o	Turn main water supply on
	Dirt on water filter net	To clean the water filter net
	Water pressure is not applicable	Refer to technical parameters
Have a continuous water flow problem	Low water pressure	Refer to technical parameters
Have a leakage after turning o faucet	Low water pressure	Refer to technical parameters
	Dirt on water filter net	Clean the water filter net
Low water flow	Low water pressure	Refer to technical parameters
	Dirt on water filter net	Clean the water filter net
Short battery life span	Bad/old batteries	Replace batteries
Undetected	Batteries run out	Replace batteries

异常现象	可能原因	排除方法
不冲水	电池电能耗尽	更换新电池
	感应窗有污垢	排除污垢
	停水	等待来水
	过滤网造成淤堵	清洗过滤网
	水压不在适用范围	参考产品规格表
不关水	水压不在适用范围	参考产品规格表
关水后还有少量流水	水压太低	参考产品规格表
	过滤网太脏	清洗过滤网
水量小	水压太低	参考产品规格表
	过滤网太脏	清洗过滤网
电池使用时间短	使用不正规电池	更换规定电池
不感应	电池电能耗尽	更换新电池

ONE-YEAR WARRANTY

保修条款

1. The faucet has a limited ONE year warranty if the faucet is properly installed and used. The following quality problems are EXCLUDED from:

- 1) Incorrect installation, replacement, repair, and similar improper actions.
- 2) Industrial use and commercial use will not be guaranteed.
- 3) Misuse, abuse, carelessness or use of accessories not provided by the manufacturer.

2. Original receipt is required for proof of purchase as warranty is one year from date of original purchase. Warranty is valid if 1-3 are determined to be reason for defect.

我司对产品的最终客户有广泛的质量保证, 我司产品在被证明正常安装和使用的请提下, 保修期为1年。在保修期内对有质量问题的产品免费维修。

*对于在以下行为中产生质量问题的不包括在此保证范围内

- 1)因非正常安装, 替换, 修理及类似的行为中产生的质量问题的不包括在此保证范围内
- 2)对于工业和商业用途的产品不包括在此保证范围内, 但会自动延续到此用途的客户手中
- 3)对于误用, 滥用, 疏忽和使用非我司配件所产生的质量问题不包括在此保证范围内

*请妥善保管购买产品时的发票, 以便我们能更好的为您服务

*公司保留维修时使用最新配件的权利

FAUCET STRUCTURE AND ACCESSORIES

产品部件图

