

INSTALLATION INSTRUCTIONS


Sensor faucet

NOTE BEFORE INSTALLATION

1. Please read this instructions carefully before installation.
2. After installation, please give the instructions to the user.
3. The appearance of the product and accessories are subject to the actual product, the drawing is for reference only
4. It is recommended to ask a professional installer to install
5. Prepare the following tools: wrench, screwdriver, sealing tape and pliers.


PREPARATION BEFORE INSTALLATION

1. This product must not use unfiltered and treated sewage, otherwise it may damage the solenoid valve.
2. The installation position of the product should avoid sunlight or strong lights directly irradiating the sensor to avoid affecting the use.
3. Pls install a booster device when the water pressure is lower than 0.05Mpa.
4. Pls install a depressuring device when the water pressure is higher than 0.8Mpa.

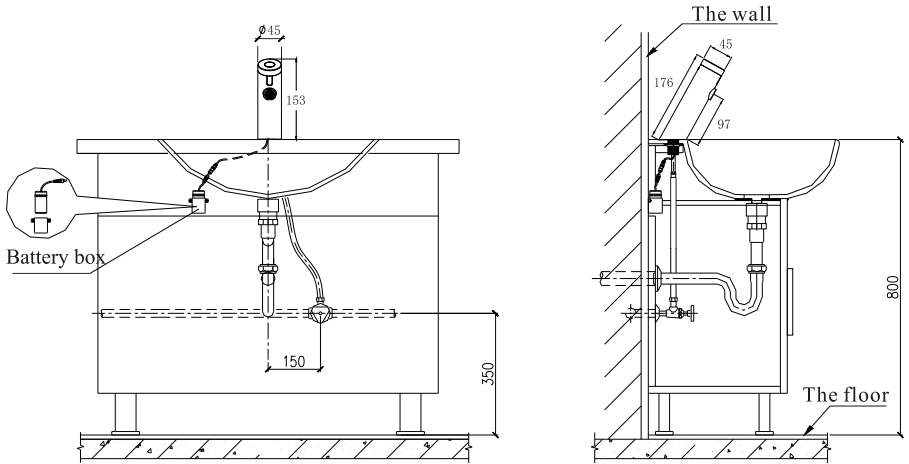

INSTALLATION

1. Screw the hose on the bottom of faucet as the picture.
Note: Please connect the water hose correctly according to the instructions of the water inlet.
2. Install the rubber gasket and nut, and tighten the nut to lock the faucet body on the basin.
- 3.1 Paste the holder of the battery box on the wall under the basin, and ensure that the wires of the battery box can be connected to the wires of sensor.
- 3.2 Install the batteries in the battery box according to the requirements of positive and negative poles; and place the battery box on the holder of the battery box.
- 3.3 Connect the wire of the battery box and the wire of the sensor tightly, and the automatic faucet is installed.

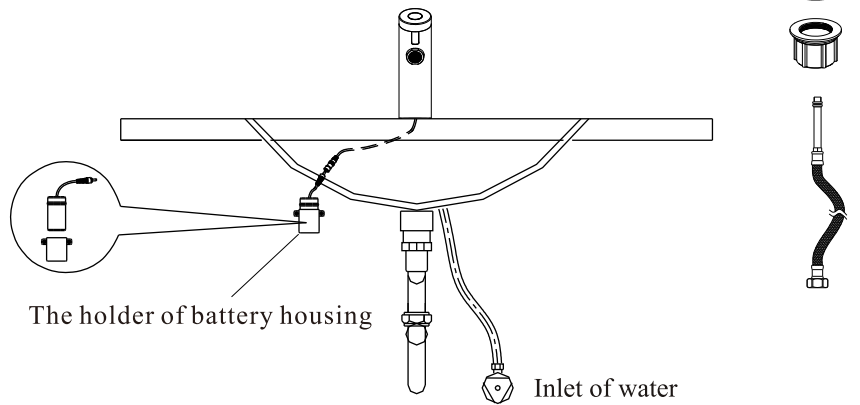

PRODUCT FEATURES

1. Daul sensor

- 1.1. Constant water flowing: Inducting once to turn on, and inducting again to turn off.
- 1.2. Instant water flowing: Automatically turn on & turn off when washing hands.
- 1.3. Auto Turn off after 180 ± 10 seconds of 1.1, and auto turn off after 60 ± 5 of 1.2 .

2. Single sensor with LED light. (The LED light was optional)

Automatically turn on when using, and the LED light will be lighted once.
And self-closing when finish using, meanwhile the LED light will be lighted once.
It will be self-closing after using 60 ± 5 seconds.

PRODUCT ADVANTAGES


1. Convenient: Automatically opening and closing by the sensor, without manual operation
2. Hygiene: Touchless use, effectively preventing cross-infection.
3. Water saving: automatically and quickly turn on and off, effectively saving water.
4. Power saving: using 4 AA alkaline batteries, there is no need to replace the batteries for about 1 year at a frequency of 3000 times/month.

PRODUCT TECHNICAL PARAMETER

Power supply	DC 6V(4 pcs AA batteries)/AC100-240V	1. The water pressure refers to the water pressure at which the machine can work normally. Considering the effect of washing, it is recommended to use it under a water pressure of 0.05-0.8mPa 2. The sensing distance can be adjusted by the optional remote control 3. If the induction time is less than 0.6 s, the faucet will not turn on to supply water.. This function is mainly used to avoid wrong actions caused by other accidents.
Static power	<45 uA	
Working water pressure	0. 05-0. 8MPa	
Sensing distance	Front: 10-130mm Upper: 10-50mm	
Response time	<0.6 second	
The time of over time Protection	The front sensor 60 ± 5 seconds The upper sensor 180 ± 10 seconds	
Working temperature	0-55 °C	
Water temperature	< 75 °C	
Inlet connetor	G1/2"	


INSTRUCTION OF USAGE

The front sensor

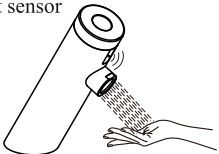

The faucet turn on automatically when hands into the sensing arrange.
The faucet turn off automatically when hands leave the sensing arrange.

The upper sensor

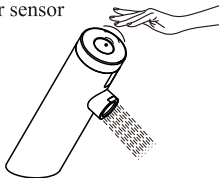


Induct the upper sensor once to turn on, and induct it again to turn off the faucet.


PRECAUTIONS OF USAGE



1. Please do not use roug or iron sand for cleaning

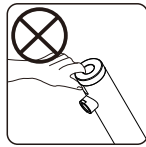


2.Please don't shake the faucet, It will easily cause malfunction

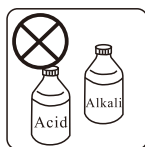

3. Please do not scrub with acid or alkali detergent

BATTERY INSTALLATION AND REPLACEMENT

1. Low-voltage reminder: When the working voltage is less than or equal to $(4.6-4.9V) \pm 0.1V$, it enters a low-voltage alarm, the indicator flashes when using, and it continues to flash 5 times when leaving the sensing, indicating that the battery is insufficient and the battery needs to be replaced. The faucet is normally turn on and off.
2. Under-voltage protection: When the working voltage is less than or equal to $4.5 \pm 0.1V$, it enters the under-voltage protection, The LED indicator flashes when using, leaving the sensor to continue to flash 10 times, prompting that the battery needs to be replaced immediately under voltage
At this time, the induction faucet is forcibly turn off.
Step 1: Pull out the battery box and remove the battery.
Step 2: Replace with four new AA alkaline batteries, and install them back.
Note: The positive and negative polarity of the battery must be correct, and batteries of different new and old or different brands cannot be mixed.

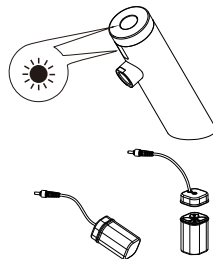

COMMEN FAULTS AND SOLUTIONS

If an abnormal situation is found during use, please refer to the table below to solve it.
If you still have any questions, please call the dealer's service phone to solve the problem.

FUALTS	POSSIBLE CAUSES	SOLUTIONS
No water	Battery drained	Replace with new battery
	The sensor eye is dirty	Clean the sensor eye
	Water/power outage	Waiting for water, waiting for electricity(AC Type)
	The filter is dirty causing clogging	Clean the filter
	Water pressure is not applicable	Refer to product specification sheet
Can't turn off	The filter is dirty causing clogging	Clean the filter
	Water pressure is not applicable	Refer to product specification sheet
Small flow After turn off	Water pressure is too low	Refer to product specification sheet
	The filter is dirty	Clean the filter
Small water flow	Water pressure is too low	Refer to product specification sheet
	The filter is dirty	Clean the filter
Battery life is short	Use poor quality batteries	Replace high-quality alkaline batteries
Sensor not working	Battery exhausted / power outage	Replace new battery/waiting for electricity(AC Type)

WARRANTY

- 1.Our company has a wide range of quality guarantees for the final customers of the products.
The products are guaranteed to be installed and used normally, and the warranty period is 1 year.
- 2.The quality problems arising from the following actions are not covered by the warranty.
2.1 Quality problems caused by abnormal installation, replacement, repair and similar actions.
2.2 Products for industrial use are not included in the warranty.
2.3 For misuse, abuse, negligence and quality problems caused by the use of non-our accessories.
3. Please keep the invoice at the time of purchase properly so that we can better serve you.
4. The company reserves the right to use the latest accessories when repairing

PRODUCT PARTS DIAGRAM

