


SUPER NINTENDO

USB-C KIT

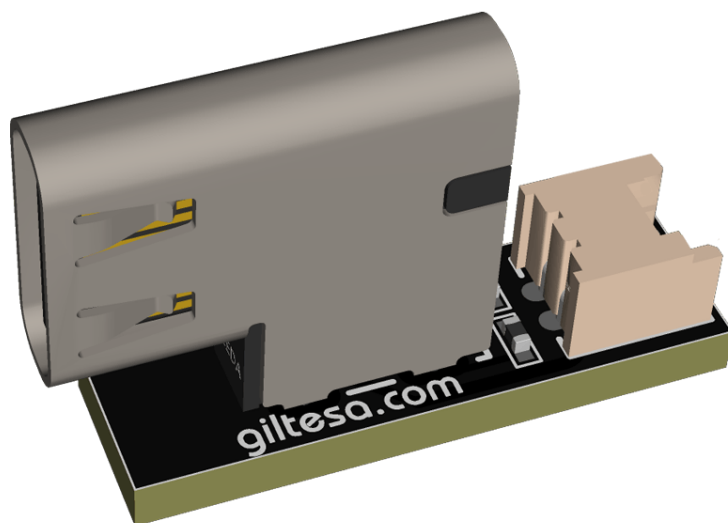

PRODUCT

[HTTPS://SHOP.GILTESA.COM/PRODUCT/SUPER-NINTENDO-USB-C-KIT](https://shop.giltesa.com/product/super-nintendo-usb-c-kit)

**PLEASE READ THROUGH THESE INSTRUCTIONS
ENTIRELY BEFORE ATTEMPTING TO INSTALL**

**WARNING: IF YOU ARE NOT COMFORTABLE WITH
SOLDERING, OR PERFORMING ANY STEP IN THIS
GUIDE, DO NOT PERFORM THE INSTALL YOURSELF.
FIND SOMEONE WHO IS COMFORTABLE TO DO IT FOR
YOU.**

INDEX

DESCRIPTION	4
FEATURES	4
INCLUDED	4
RECOMMENDED / REQUIRED [NOT INCLUDED]	4
BOARD DETAILS.....	5
INSTALLATION STEPS	6
PRE INSTALLATION STEPS.....	6
1. DISASSEMBLY THE SUPER NINTENDO.....	6
INSTALLATION STEPS.....	12
1. REMOVE UNNECESSARY COMPONENTS.....	12
2. CABLE INSTALLATION.....	14
3. REMOVE THE CONNECTOR	16
4. MODIFY THE PLASTIC	16
5. DONE!	20
FREQUENTLY ASKED QUESTIONS - FAQ.....	21

DESCRIPTION

The **Super Nintendo: USB-C Kit** is a board that allows to replace the original power connector for a modern and standard USB-C.

If your original connector is too old or damaged and you need a new one, or if you would like to power up your Super Nintendo with a standard USB-C charger, such as the charger for your Nintendo Switch, phone, or laptop, you can do so with this kit.

Moreover, with this board, you can remove the original, old, and inefficient power converter. Since the console operates at 5V, you only need the power from USB-C and a regular charger.

FEATURES

- Exact shape for Super Nintendo / Super Famicom.
- External power through USB-C. ⁽¹⁾

⁽¹⁾ The USB-C requires trimming of the shell.

INCLUDED


- 1 USB-C board.
- 1 Power cable.
- 1 Plastic cap for the USB-C board.

RECOMMENDED / REQUIRED [NOT INCLUDED]

- [4.5mm gamebit](#) and phillips screwdrivers.
- [Cutting plier](#).
- [Cutter](#).
- Tin soldering iron.
- Tin.
- Flux.
- Isopropyl alcohol.

BOARD DETAILS

There are 2 pads to solder the included cable. The following explains what each pad is for.

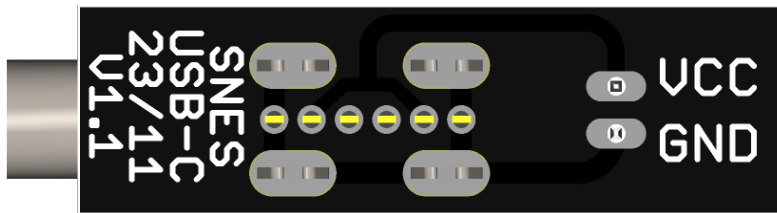

- **VCC:** The +5V line output to power the SNES main board.
- **GND:** The ground pad.

NOTE: In versions prior to 1.2, there was a connector for attaching the cable; however, it seemed to be somewhat fragile and caused some issues. Now, instead of a connector, larger pads are included where the cable can be soldered directly.

INSTALLATION STEPS

Please, carefully read the following steps for a successful installation.

PRE INSTALLATION STEPS

Before the installation, your SNES may need some extra steps to have it ready for the kit.

1. DISASSEMBLY THE SUPER NINTENDO

Nintendo products in general use two kind of screws. The first one called **gamebit** to close the shell, and the second one called **phillips** to hold the main board to the shell.




Gamebit screwdriver


Use the 4.5mm **gamebit** screwdriver to open the shell and remove the 6 **gamebit** screws.




Now remove the plastic that allows you to eject the game cartridges. Be careful not to lose the spring.

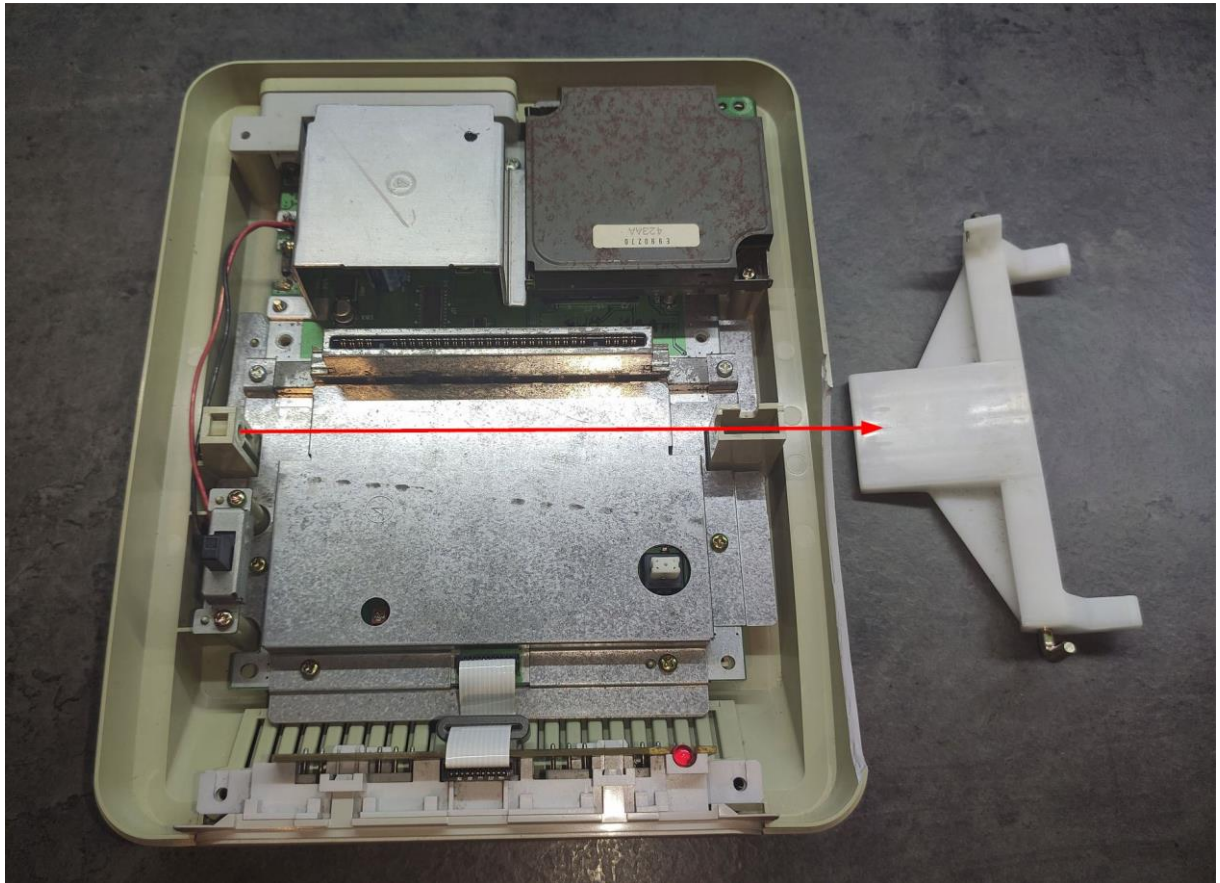


Disconnect the front panel where the game controls are connected.

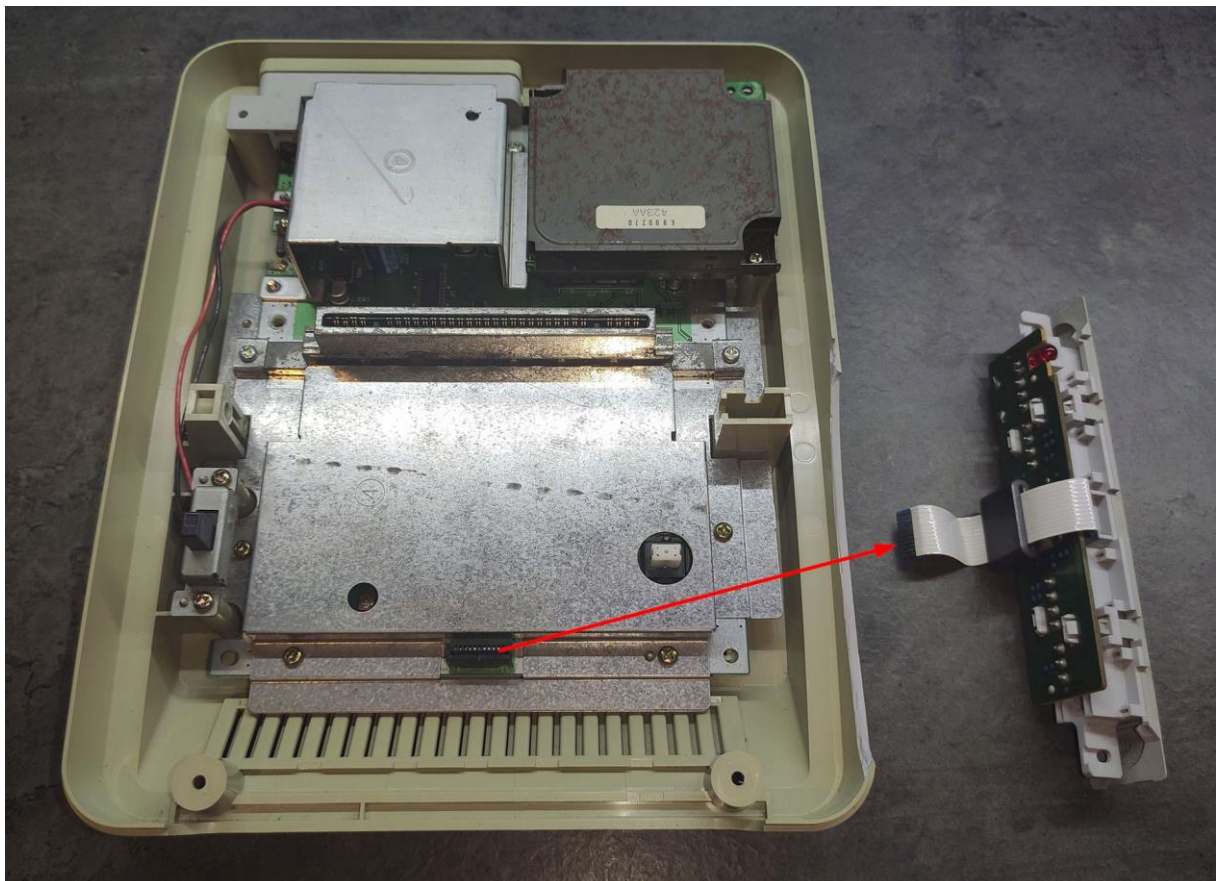


Disconnect the power switch cable of the SNES, remove the screws, and set the switch aside as well.

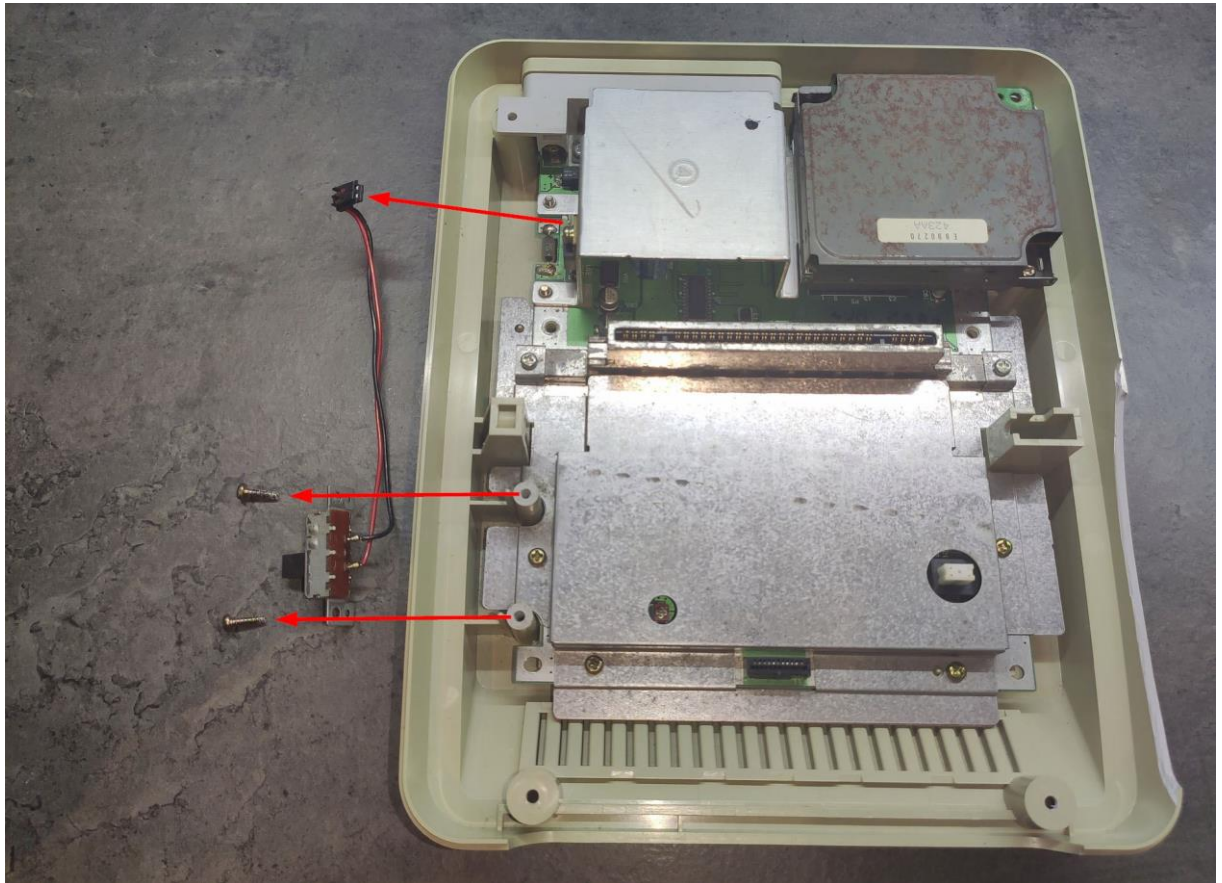


The next step is to remove the metal covering the motherboard; remove the six screws to do so.

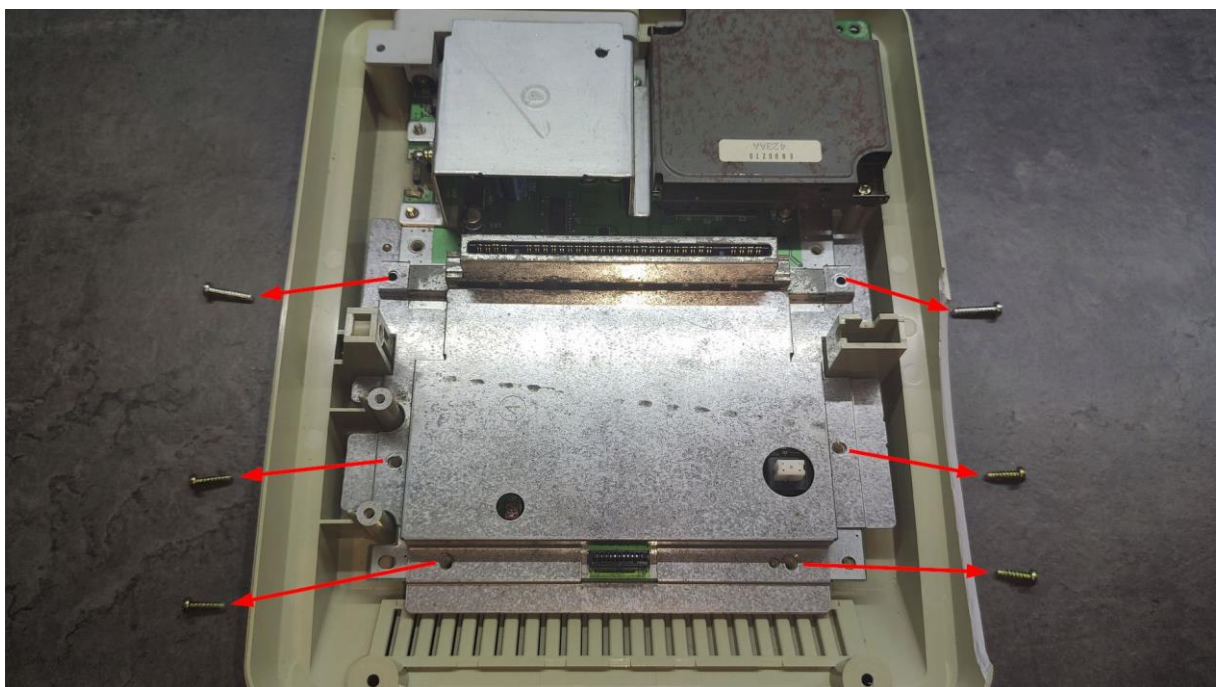

Now, the metal cover can be removed.


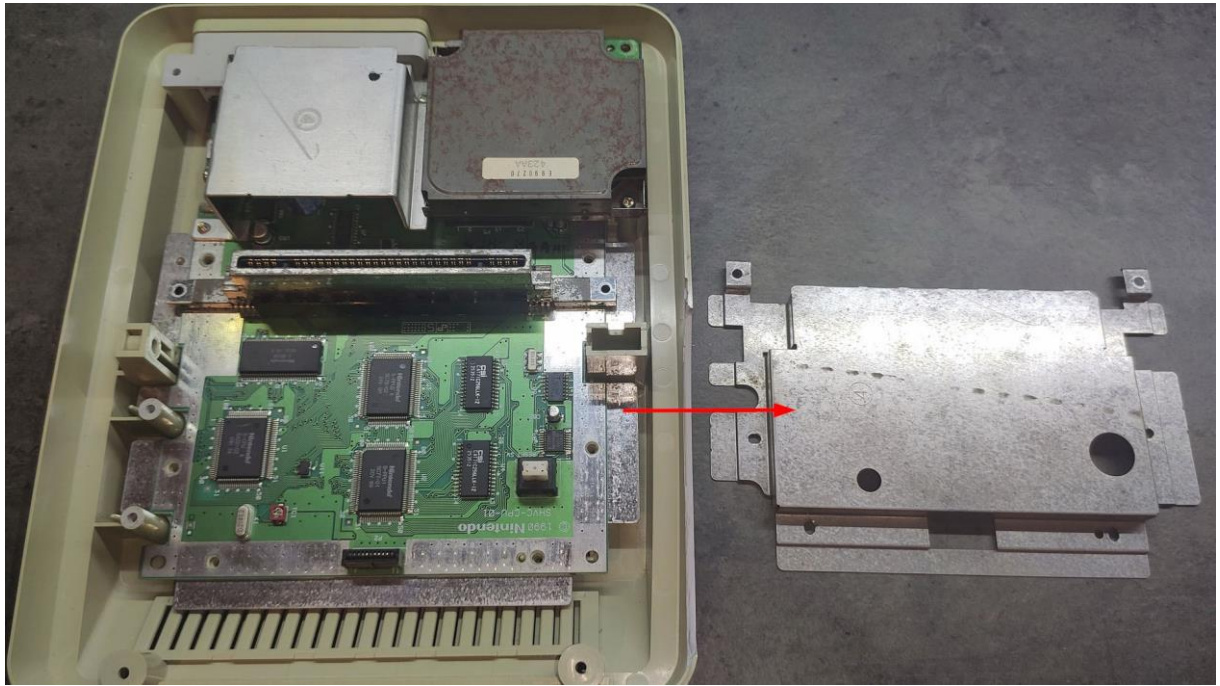


Remove the last 3 screws holding the motherboard to the lower plastic shell.

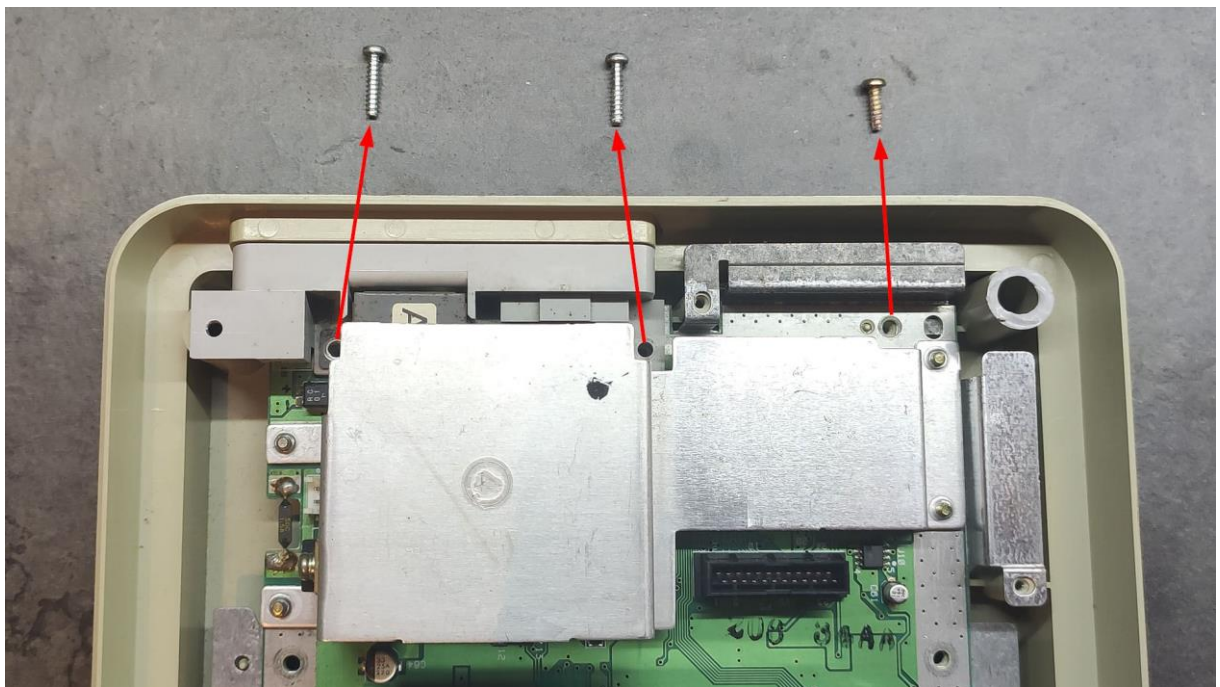


As the voltage regulator included in the console is going to be removed, this allows us to also remove the aluminium heatsink.

After finishing the installation, do not reinstall this part or the screws marked with the red arrow, it's not necessary! (But you must reinstall the screw marked in **blue**).

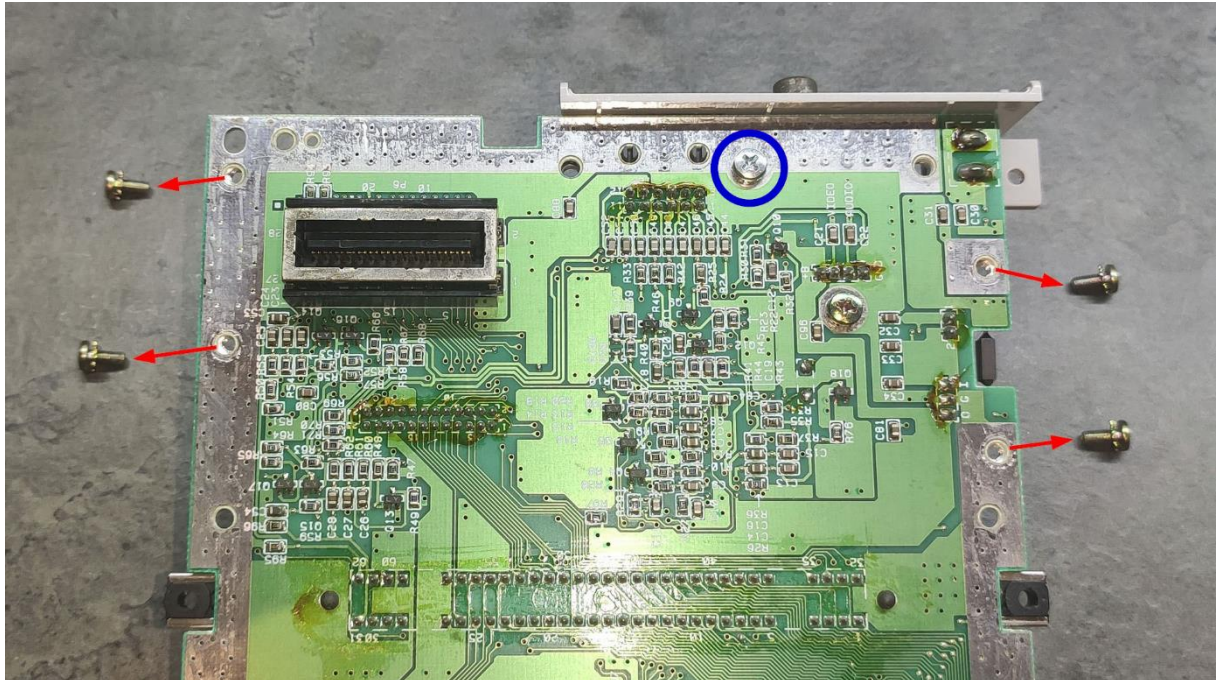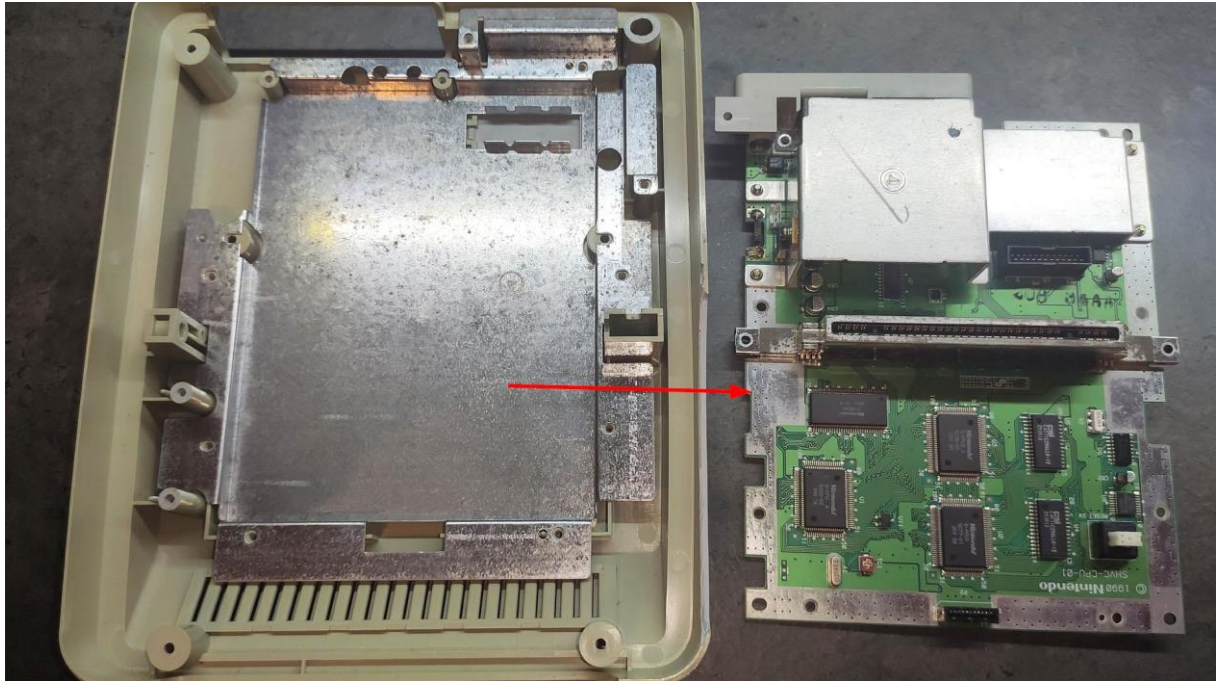

There is one more screw on the left side; this screw makes the voltage regulator make contact with the heat sink. Remove the screw.

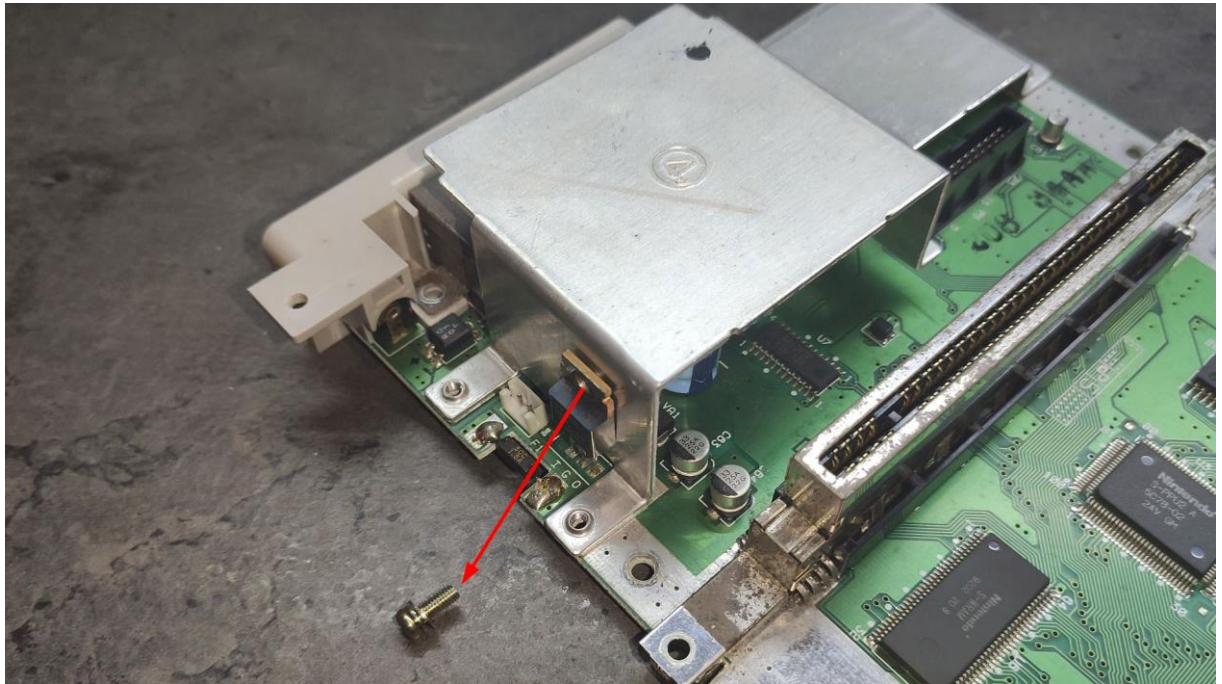


INSTALLATION STEPS


1. REMOVE UNNECESSARY COMPONENTS

You will need to remove the rear plastic where the power and image connection connectors are located. This plastic has the power connector integrated, which means that it cannot be removed until we desolder the connector.



When you unsolder the connector, be very careful, as doing so may cause the plastic to start melting.

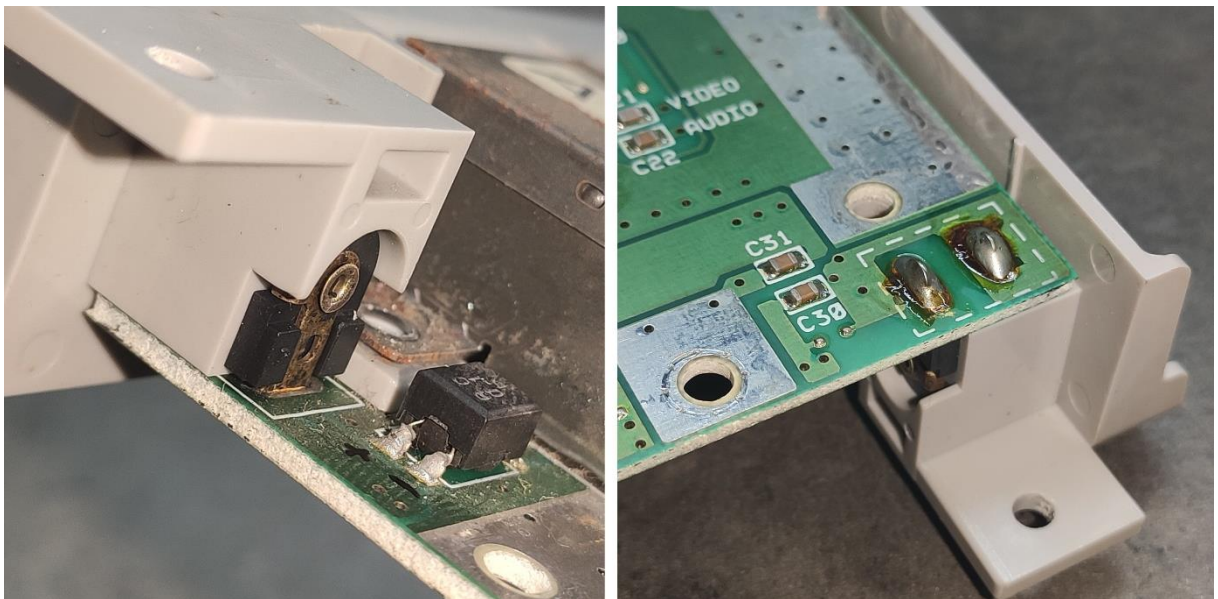

After removing the connector, clean the board with alcohol.

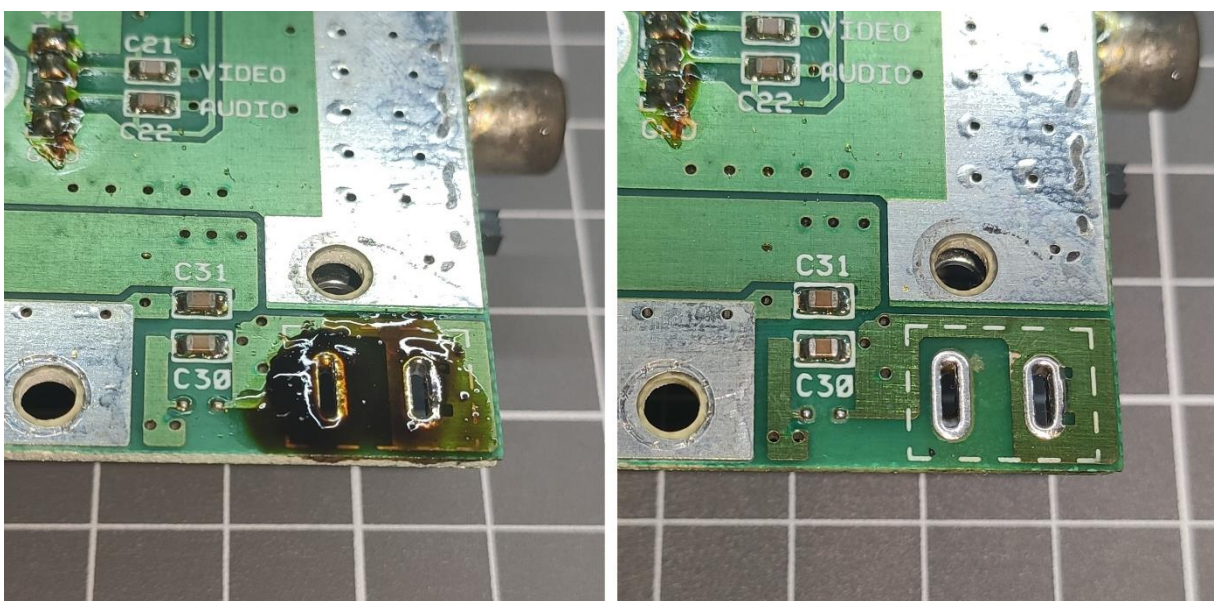


You will also need to remove the voltage regulator.

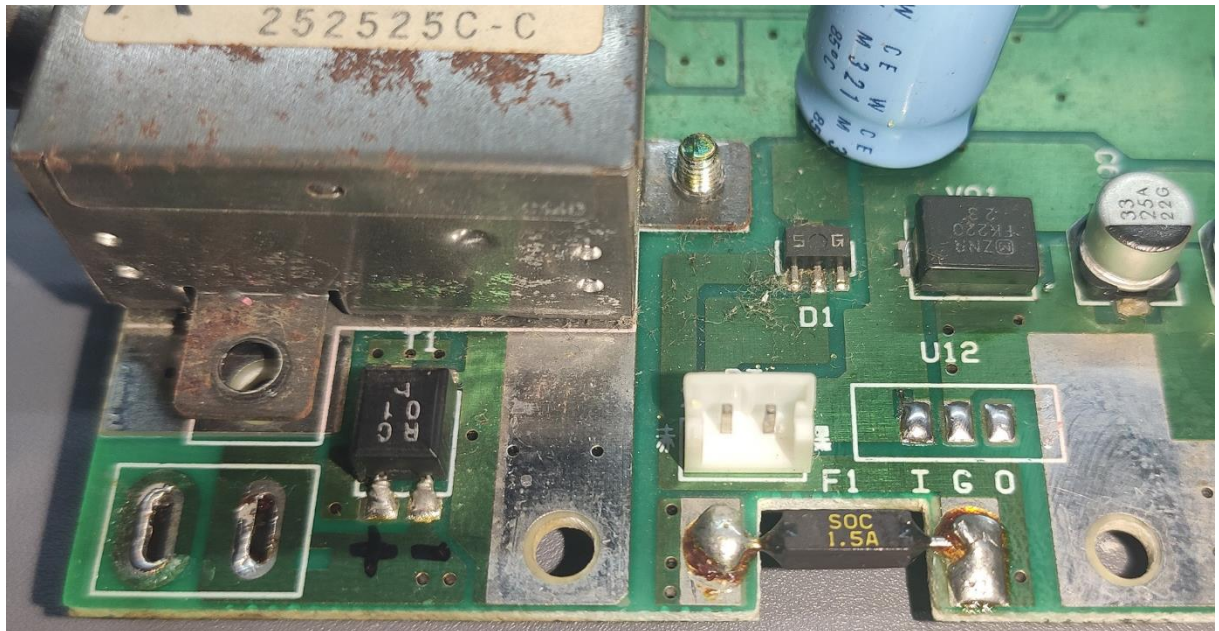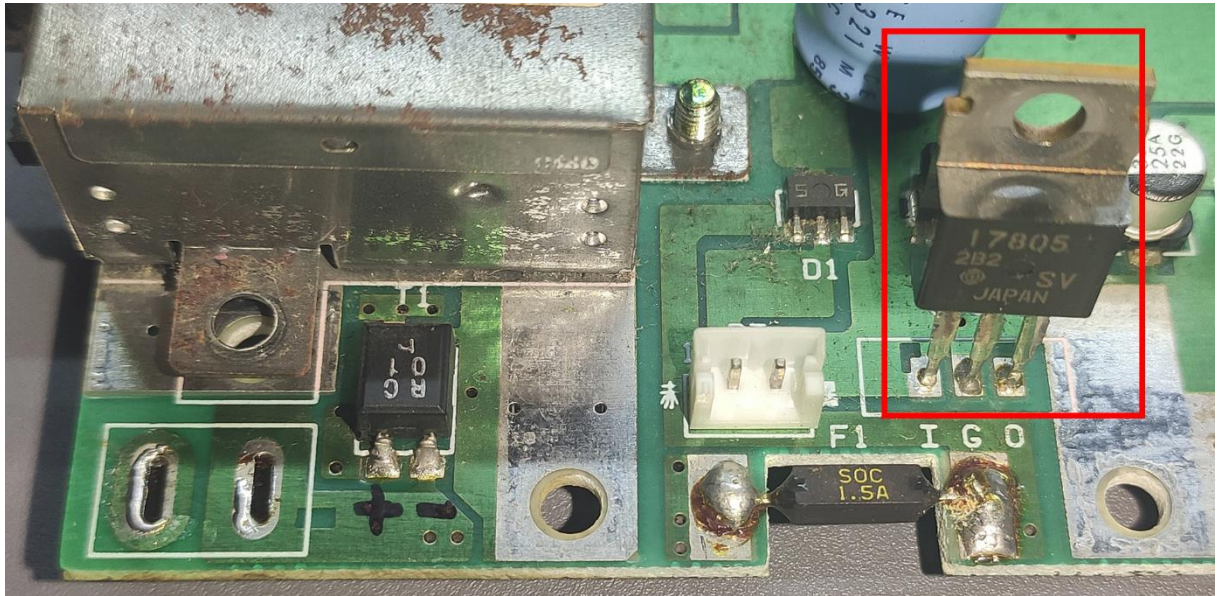


2. CABLE INSTALLATION

You can now solder the provided cable to both the USB-C board and the SNES mainboard. The best place to solder it is where shown in this image:

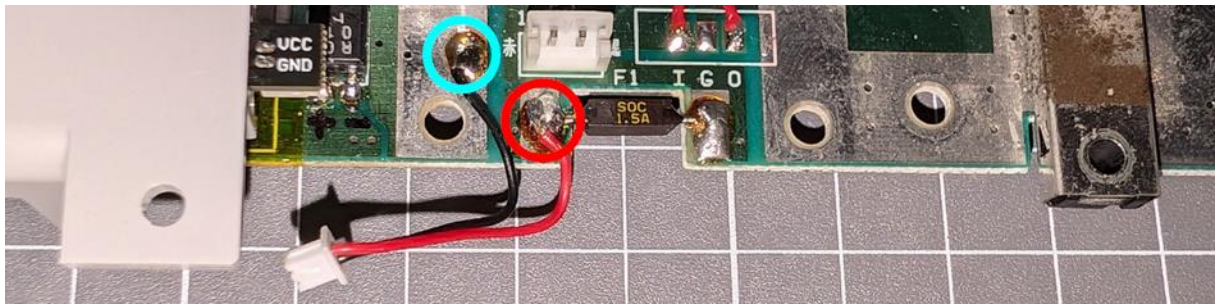


Note that an additional wire has also been added to bridge the Input and Output pins of the voltage regulator that was removed in previous steps.

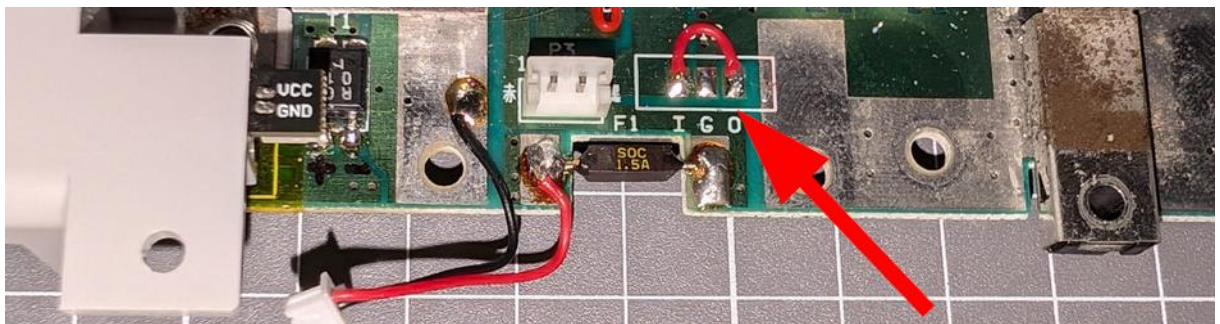

Finally, if your motherboard has the D1 component, you can also bridge it:



If, on the other hand, your mainboard is the SNSP-CPU-01 or SNSP-CPU-02 model, you can confirm it by checking for the presence of the **DB1** component. In this case, **you'll need to add one more wire, connecting the two points marked in pink.**

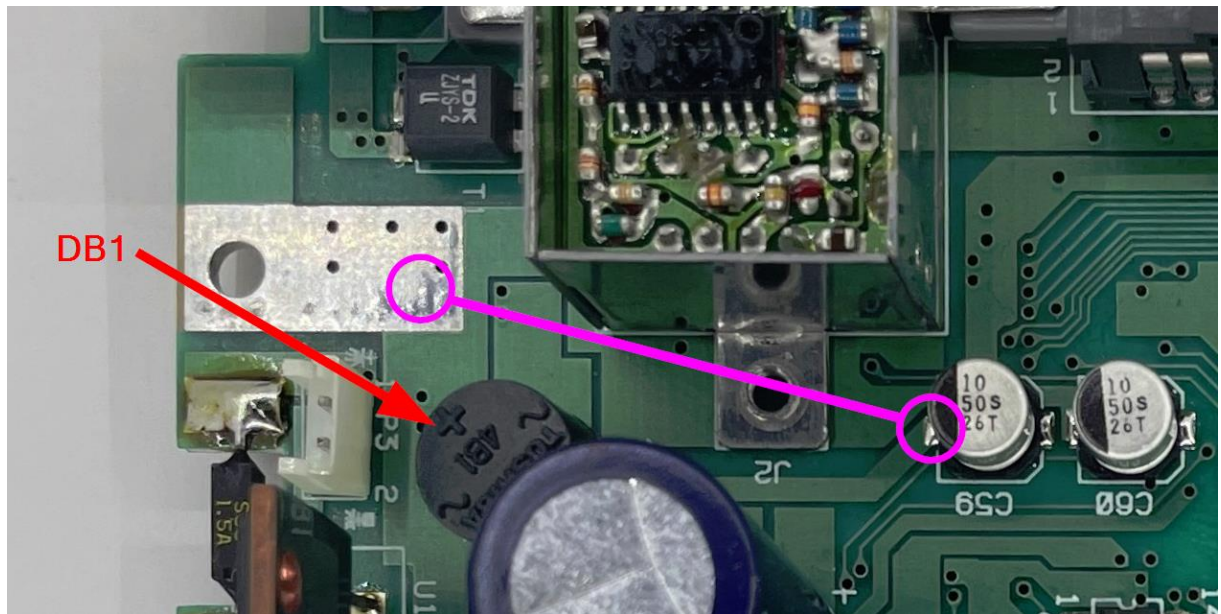

At that point, if you want, you can connect the USB-C board and test that the console works.

3. REMOVE THE CONNECTOR

In my case, I overheated it, and the plastic melted. This is not a problem because we will have to trim certain parts to make space for the new connector.


Remove the connector parts using cutting pliers.



4. MODIFY THE PLASTIC



Now we need to start modifying the plastic in order to install the new connector. First, remove the plastic from the sides to make it look just as shown in these images.

Don't worry if it's not perfect, this part can't be seen from the outside.

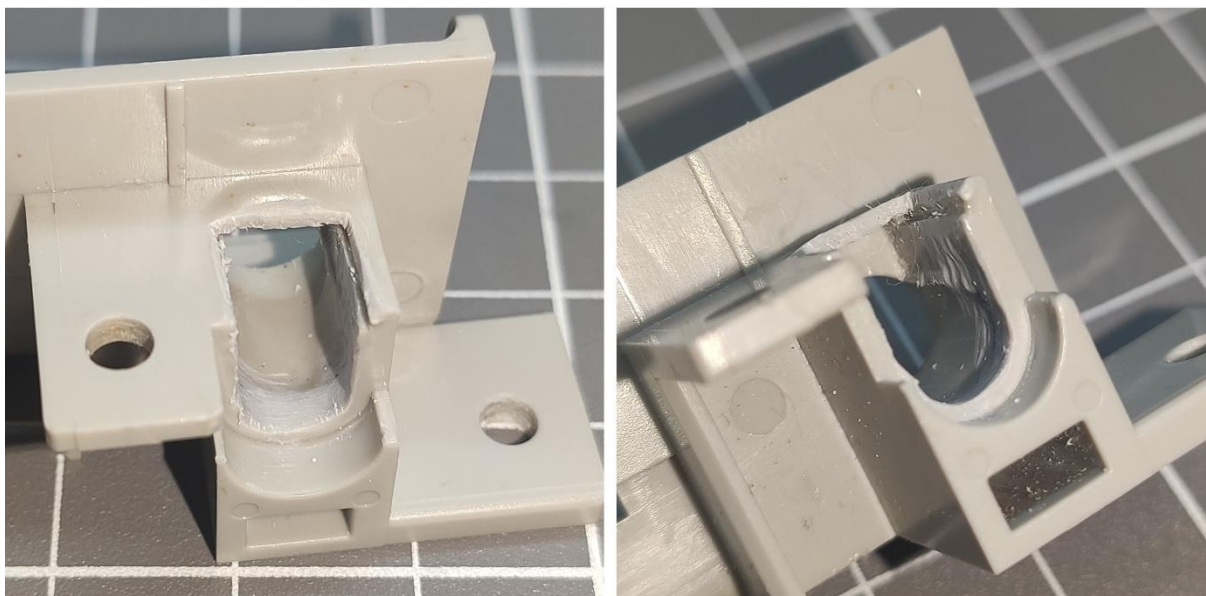

Afterward, a groove needs to be made that connects the main hole of the connector with the rectangular hole located just above it. This groove should be made in the center and should have a width of about 3.3mm.

This will allow placing the board circuit inside the rectangular hole and for the USB-C to descend into the connector hole.

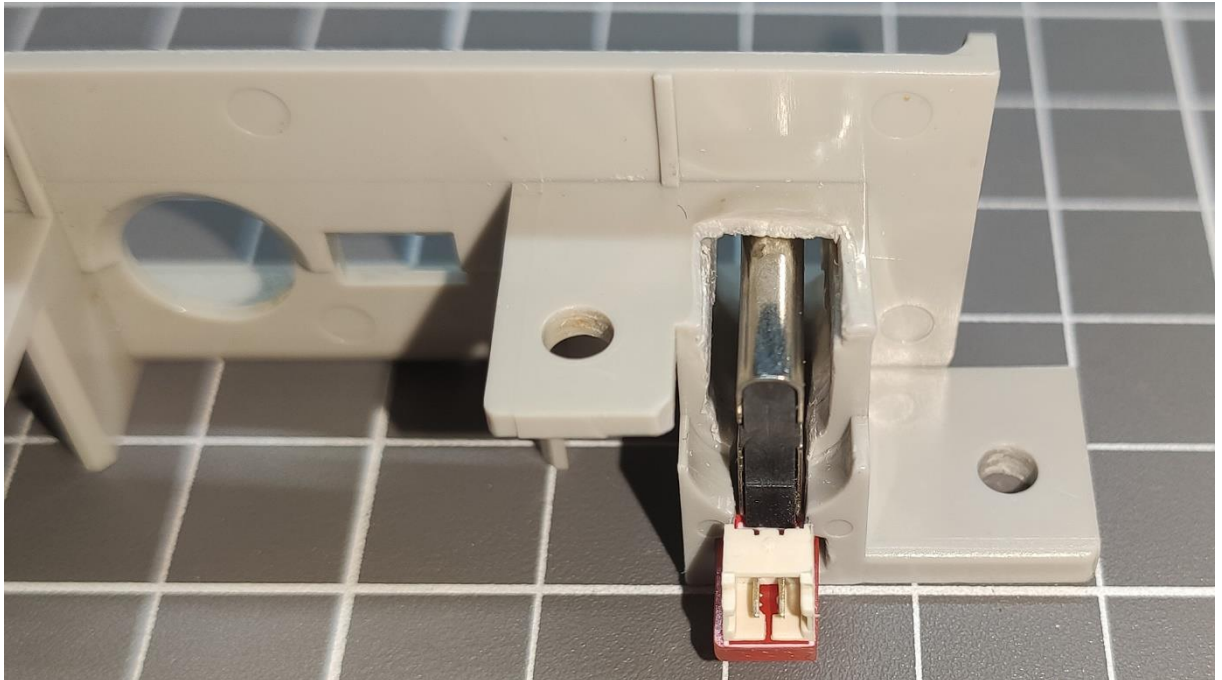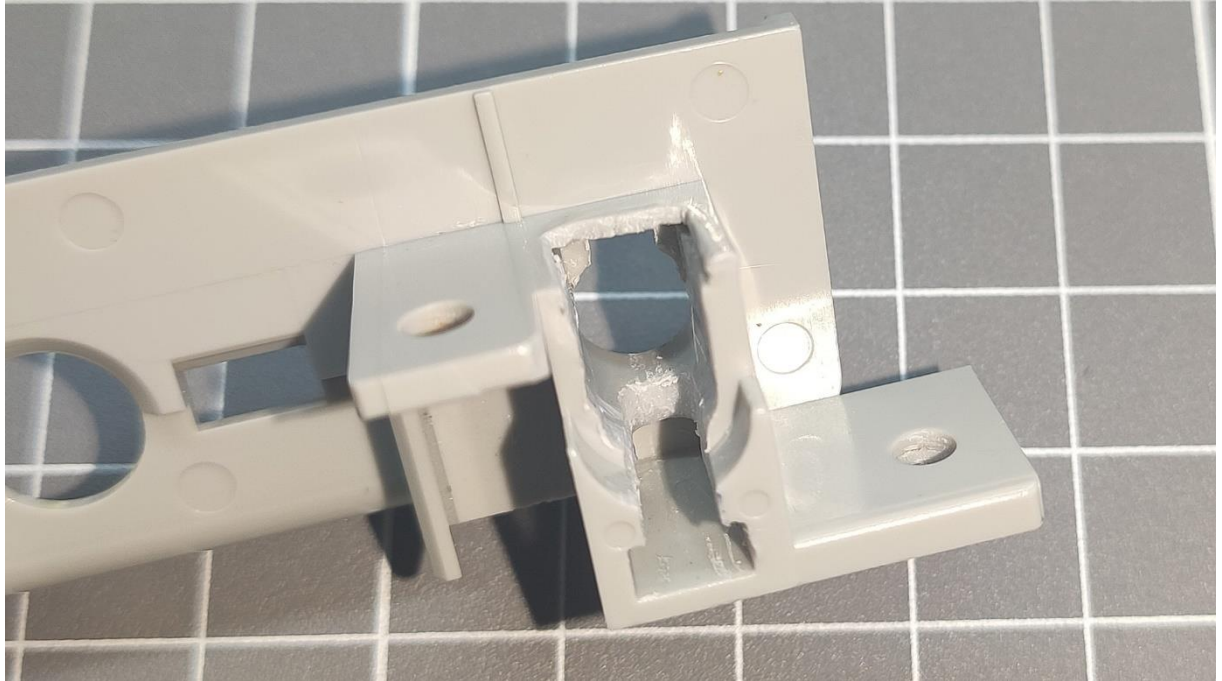

Finally, enlarge the front hole so that the USB-C can protrude. Place the board in its position, and you'll notice that the hole is not large enough. Gradually file the plastic and test with the board until it is large enough.



Don't forget to place the plastic cap to cover the hole and achieve a perfect finish:




Once all the pieces fall into place, it is recommended to apply glue under the board to securely attach the board to the plastic. To do this, remove the board, apply the glue, and then put back the board and its plastic cap. Once the glue has dried, this part of the installation is complete.



5. DONE!

Follow the steps backward, placing each thing in its place, and the installation will be complete!

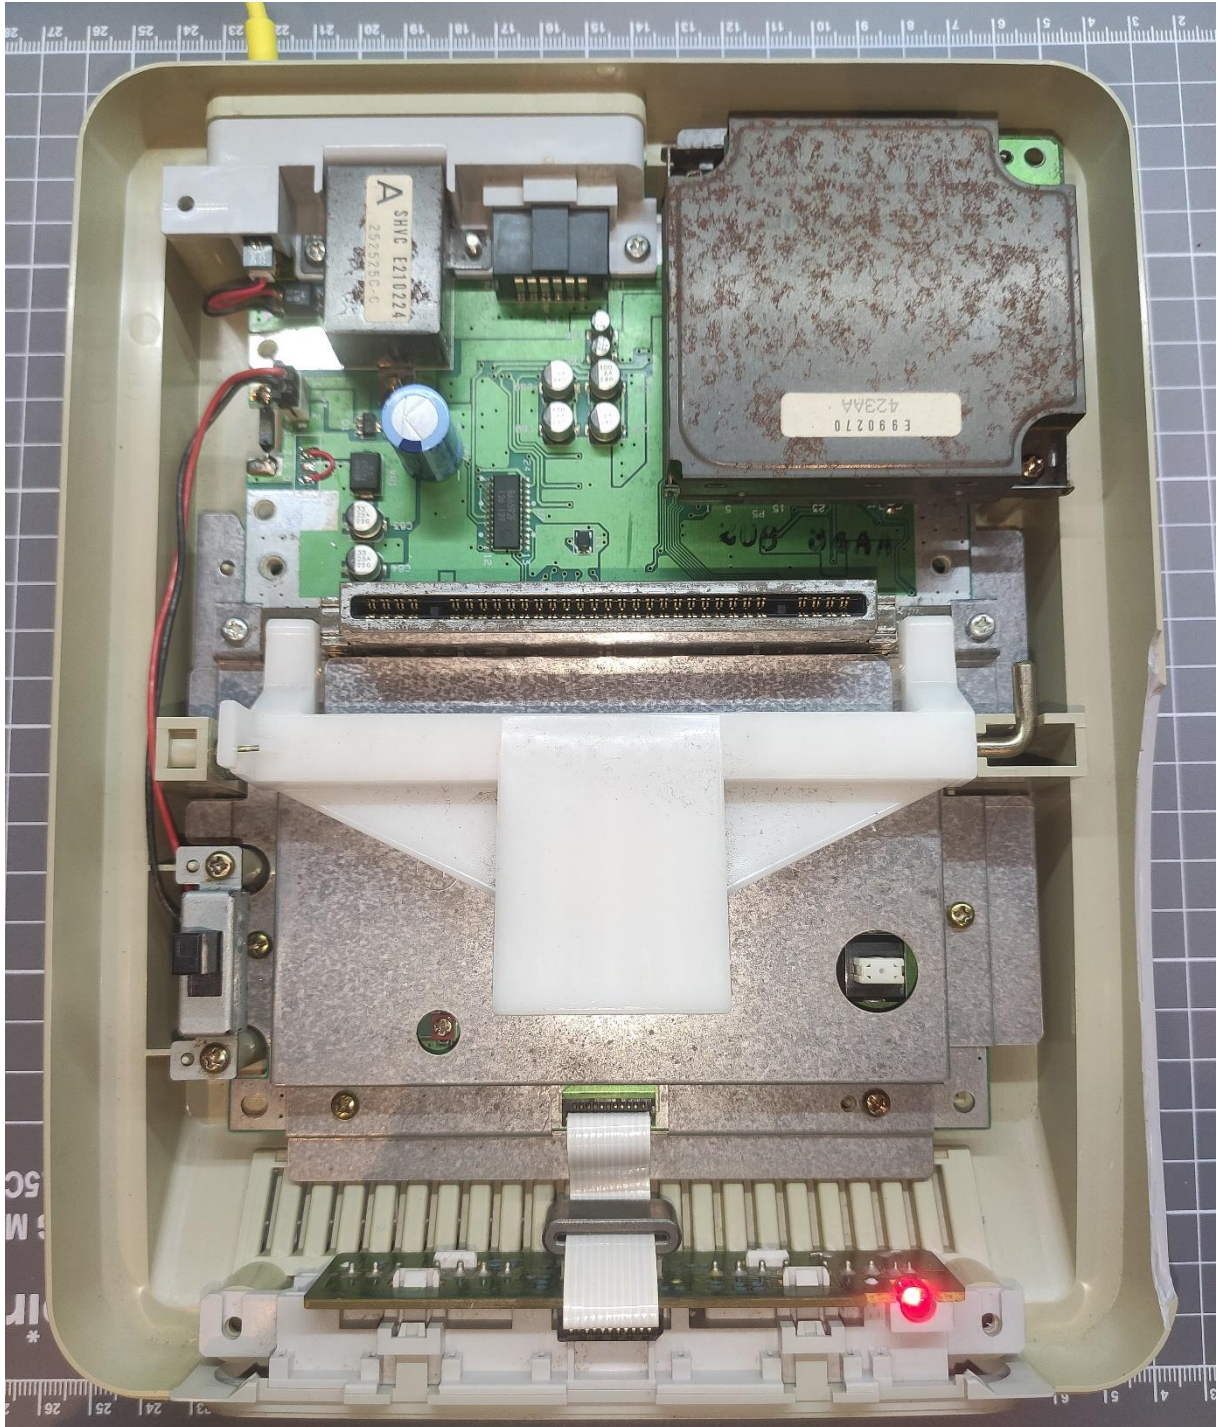

FREQUENTLY ASKED QUESTIONS - FAQ

WHAT CHARGER CAN BE USED?

You can use any standard charger for mobile phones, computers, etc., with 5V 1A. It doesn't need to be a Power Delivery charger since this feature is not used. Of course, if you want to use a Power Delivery charger, there's no problem or risk.

Technical data for curious minds:

Power Delivery chargers can supply a wide range of voltages: 5V, 9V, 12V, 15V, and 20V. However, for this to happen, the device must communicate with the charger to explicitly request the desired voltage. Without this communication, the charger will never supply more than 5V. That's one of the advantages of USB-C, as it can be used with both old and modern devices.