

 giriprakashm14-eng / 3.-Design-and-Simulation-of-half-wave-rectifier-controlled-by-a-thyristor

[Code](#) [Pull requests](#) [Actions](#) [Projects](#) [Wiki](#) [Security and quality](#) [Insights](#) [Settings](#)

 Watch 0

 Fork 0



☆ 0 stars  0 forks  0 watching  1 branch  0 tags  ActivityPublic repository · Forked from [Rajalingam1985/3.-Design-and-Simulation-of-half-wave-rectifier-controlled-by-a-thyristor](#)

  1 Branch  0 Tags  





[Code](#) 

This branch is up to date with

Rajalingam1985/3.-Design-and-Simulation-of-half-wave-rectifier-controlled-by-a-thyristor:main .

 Contribute

 Sync fork

 **Rajalingam1985** Update README.md693b932 · last year 

 README.md

Update README.md

last year

README

3.-Design-and-Simulation-of-half-wave-rectifier-controlled-by-a-thyristor

AIM


To design, simulate and analyse a half wave controlled rectifier using one thyristor in MATLAB Simulink.

APPARATUS REQUIRED

- MATLAB


PROCEDURE

1. Open MATLAB and click on the icon for SIMULINK as shown below

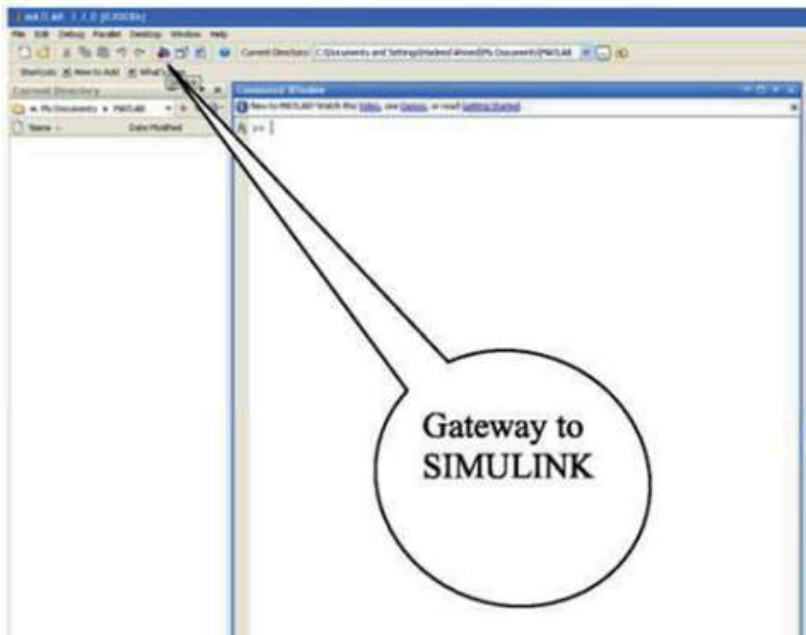


Another way is to open is through START icon of MATLAB Start ⇒ Simulink ⇒ Library browser.

2. Click on NEW MODEL or go to FILE ⇒ NEW ⇒ MODEL and a new blank model is created as shown below

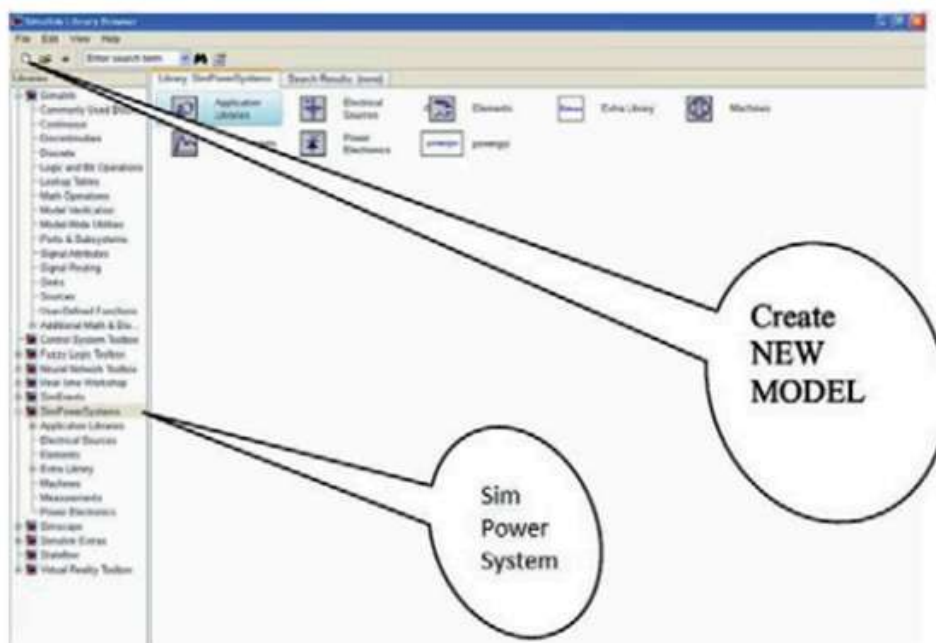


3. After creating a blank model you need to open the SIMULINK component storeroom/library by going to View ⇒ Library Browser. Select SIMPOWER SYSTEMS then select Power Electronics library and by right clicking on Thyristor and click on add to the model will add the Thyristor in the blank model. Alternatively you can drag the component directly in the model page as shown below

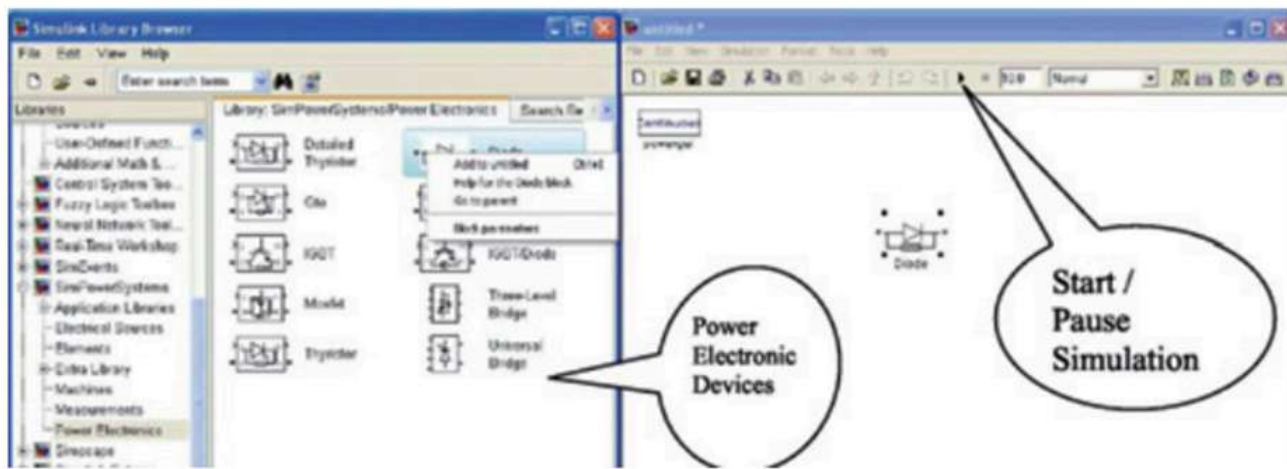


4. Similarly go to ELECTRICAL SOURCES $\Rightarrow$ AC Voltage Source and add it to the model. Select Elements and select "SERIES RLC BRANCH" and add it to the model. Simulink do not perform simulation unless and until a measurement block is present in a system. Since we need to measure the input and output voltages and the load current. To add them select Measurement in SIMPOWER SYSTEMS and then add current measurement and voltage measurement blocks to the model. Oscilloscope is not included in SIMPOWER SYSTEMS and is present in the top most block of the left column that is SIMULINK $\Rightarrow$ Sinks $\Rightarrow$ Scope. We can join various blocks by clicking on their edges and then drag the wire till the other connection terminal.


5. Construct the circuit by joining them together in the form as given below

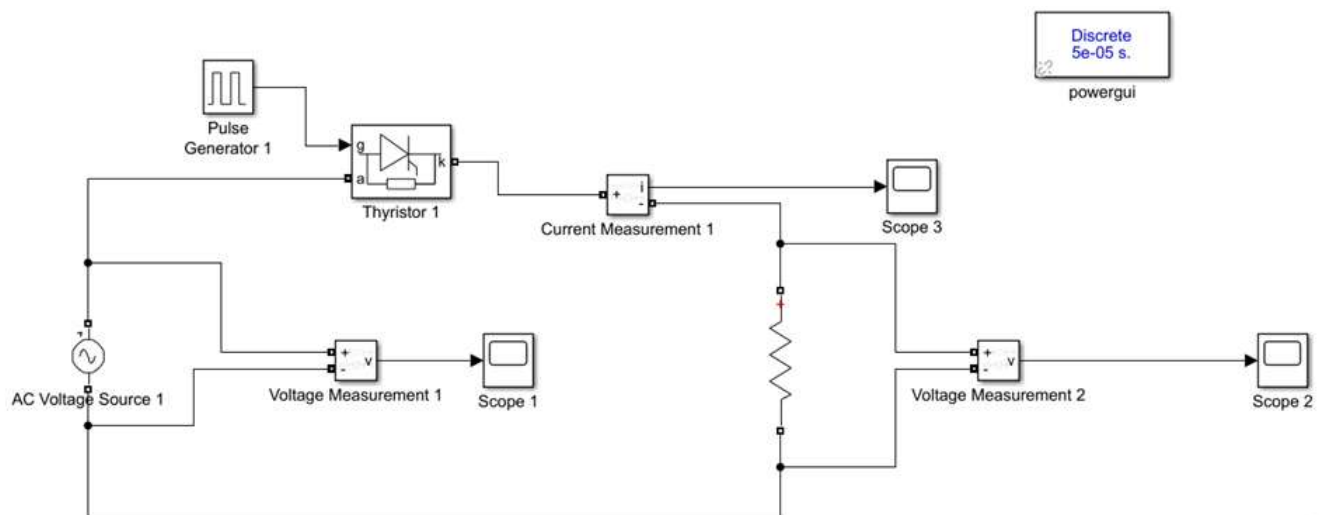

6. Now double click the voltage block to set the values of voltage and frequency.

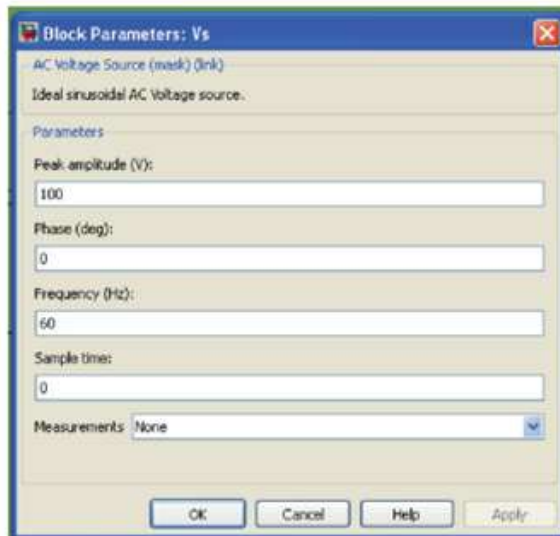


7. Double click on Thyristor and you can set various parameters for Thyristor according to the specific data sheet.
8. Double click on series RLC branch, Select the Branch type as R and set the values for R.
9. In the Scope menu ">" is shown which can only be connected to the inverse icon "<" in the measurement blocks.
10. Double click on SCOPE and then click on parameter icon as shown

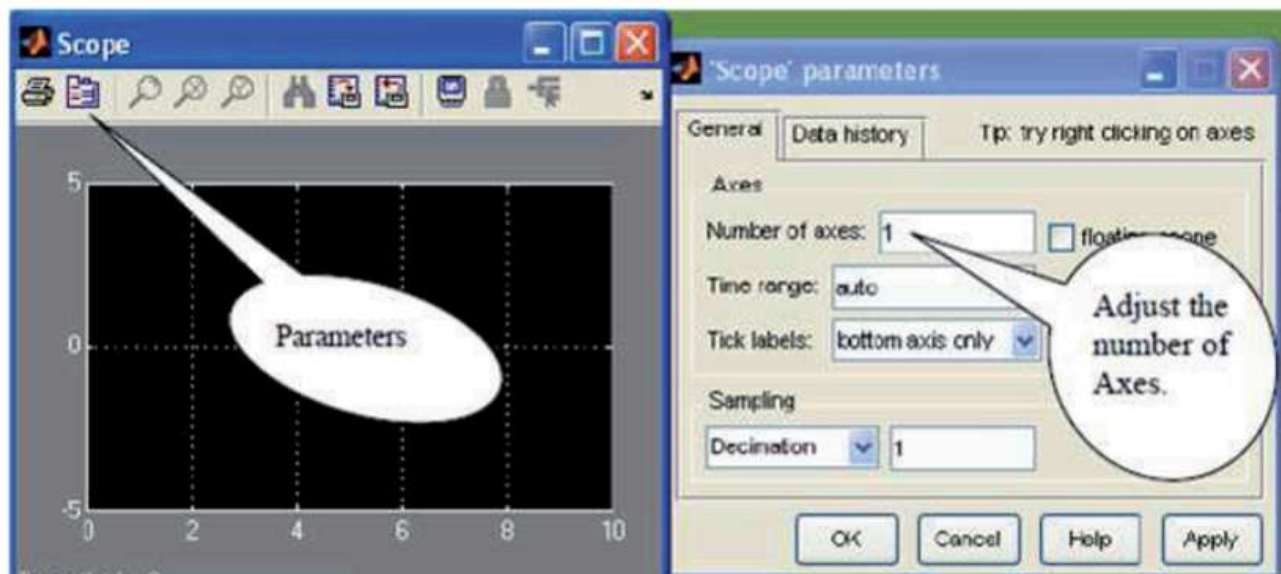


11. Make the number of axes as required.
12. Before simulation also adjust the data history of scope by following



13. Before running the simulation, we have to configure the parameters. Go to Simulation ⇒ Configuration parameters as shown

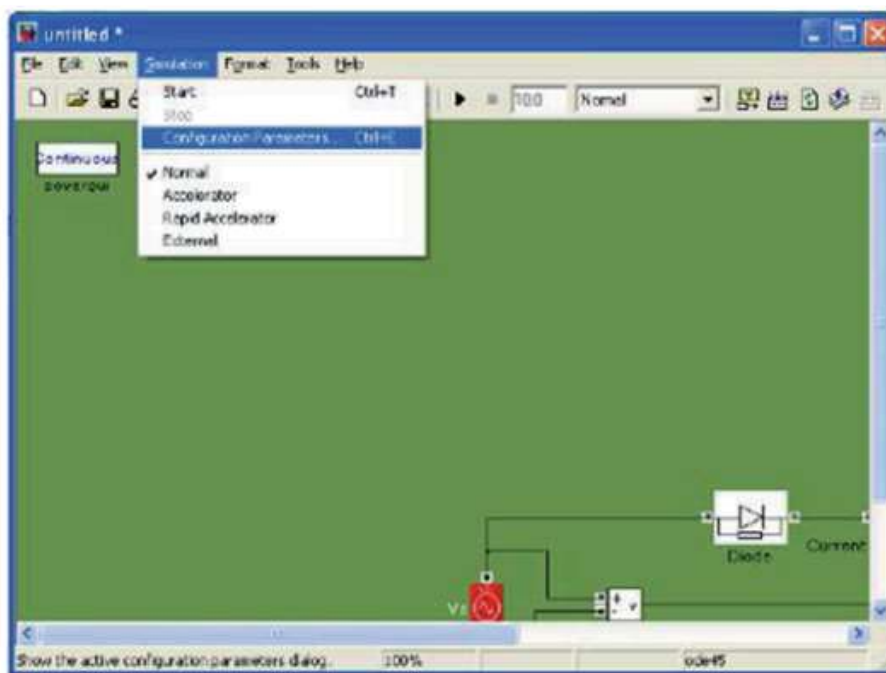

14. Select the ode23tb (Stiff/TR-BDF2) or ode15s (Stiff/NDS) or any suitable solver as shown below

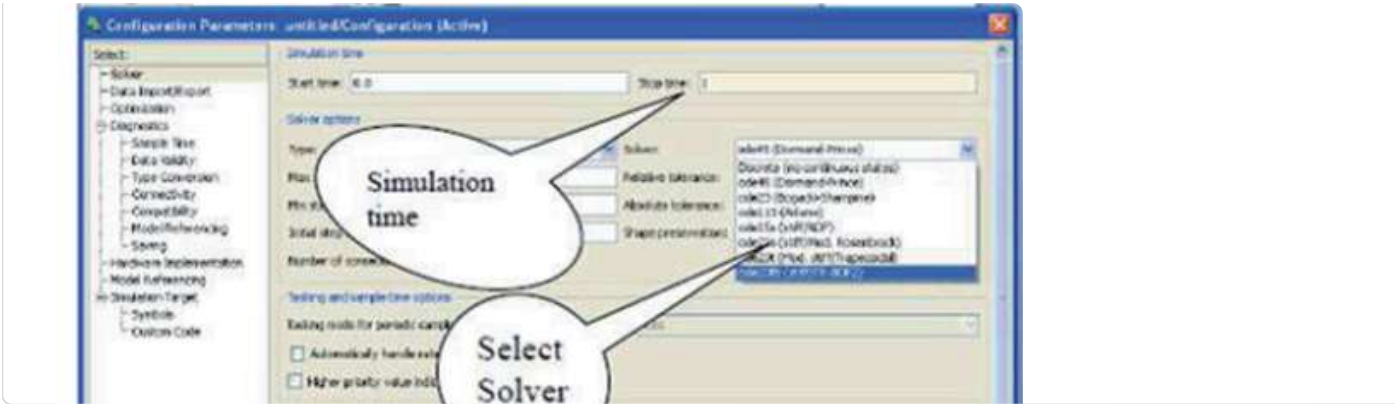

Releases

No releases published

[Create a new release](#)

Packages

No packages published

[Publish your first package](#)

Contributors

No contributors