
Inside View of Case

Switch and LED Wiring

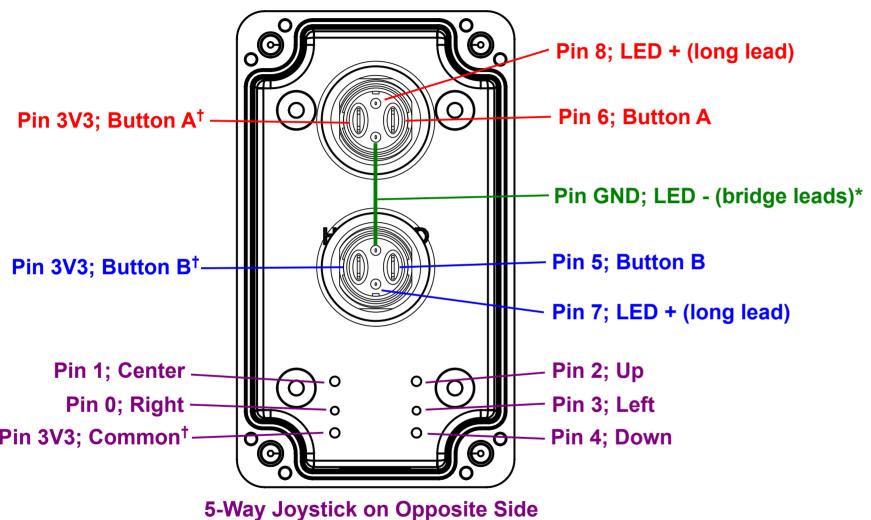

[†]Twist the three 3V3 (power) wires together and solder to the back of the 3V3 pad

*Bend short leads inward and solder together by bridging to the ground wire

