



IT-Onboard Training 2020





IT-Onboard Training 2020




Agenda

1. Communication and Email Systems Onboard
2. Main Server Systems and Computers Onboard
3. Network System Onboard
4. IT and OT of Cyber security Onboard and Antivirus
5. Backup Systems
6. NS Enterprise Replication Monitoring
7. NS Enterprise Tips and Tricks





IT-Onboard Training 2020

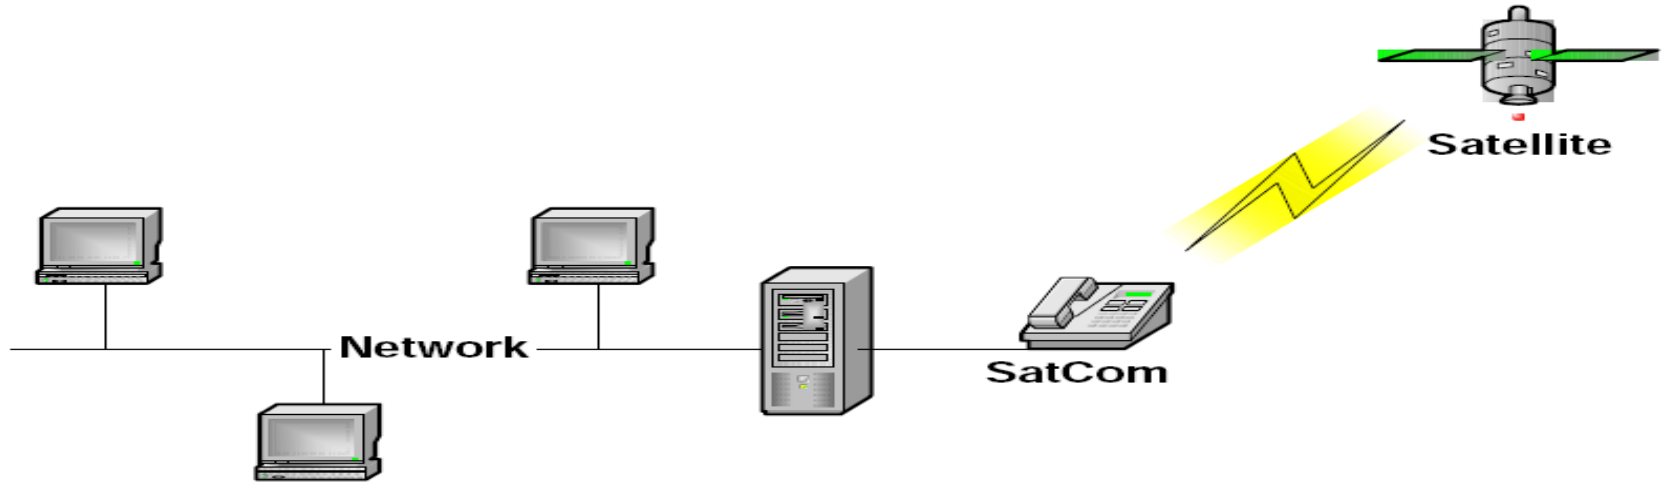

Communication Network Diagrams



IT-Onboard Training 2020



1. Communication and Email Systems Onboard

Inmarsat fleet broadband



JRC



M.V. Thor Friendship JRC FB500
M.V. Thor Fortune JRC FB500
M.V. Thor Brave JRC FB500
M.V. Thor Breeze JRC FB500
M.V. Thor Future JRC FB250

M.V. Thor Achiever
M.V. Thor Caliber
M.V. Thor Chaiyo
M.V. Thor Confidence
M.V. Thor Courage
M.V. Thor Fearless
M.V. Thor Independence
M.V. Thor Infinity

M.V. Thor Insuvi
M.V. Thor Integrity
M.V. Thor Madoc
M.V. Thor Magnhild
M.V. Thor Maximus
M.V. Thor Menelaus
M.V. Thor Mercury
M.V. Thor Monadic

Sailor T&T 250





IT-Onboard Training 2020



SAILOR 500 FleetBroadband and **SAILOR 250 FleetBroadband** are maritime broadband systems, providing simultaneous high-speed data and voice communication via satellite through the BGAN (Broadband Global Area Network).




The SAILOR FleetBroadband System offers the following features and interfaces:

- Simultaneous voice and data communication over BGAN
- Full duplex, single or multi-user, up to:
SAILOR 500 FleetBroadband: 492 kbps
SAILOR 250 FleetBroadband: 284 kbps
- Support for streaming IP at:
SAILOR 500 FleetBroadband: 8, 16, 32, 64, 128 and 256 kbps
SAILOR 250 FleetBroadband: 8, 16, 32, 64 and 128 kbps
- ISDN (Integrated Services Digital Network) service, only
SAILOR 500 FleetBroadband: 64 kbps
- Voice: Standard Voice (4 kbps) or 3.1 kHz Audio





IT-Onboard Training 2020

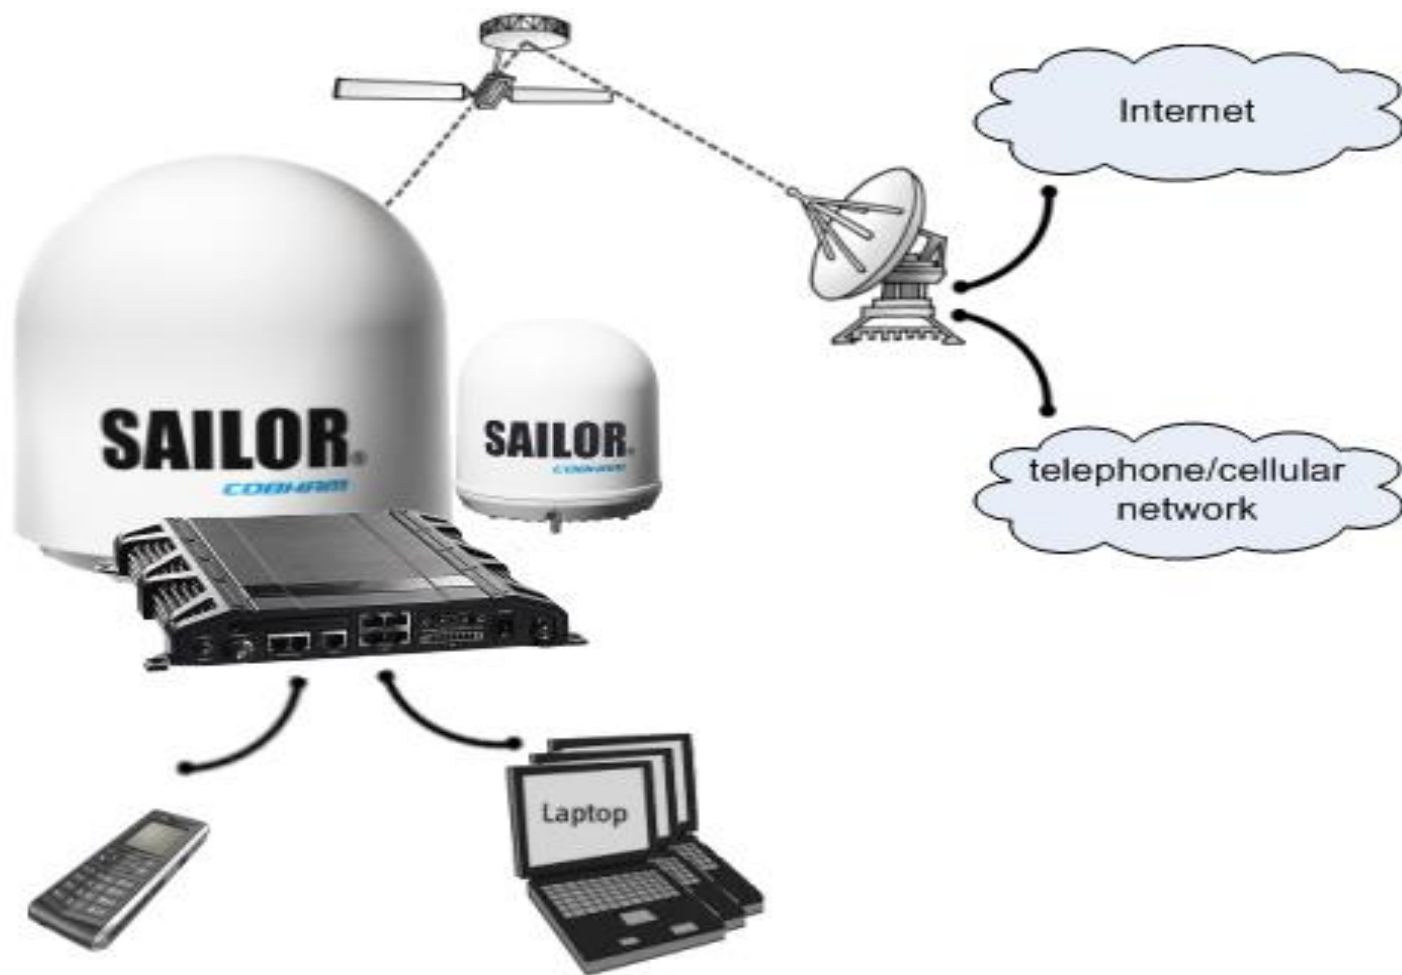



IT-Onboard Training 2020

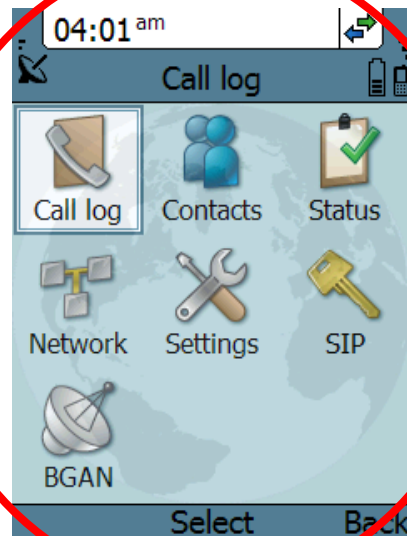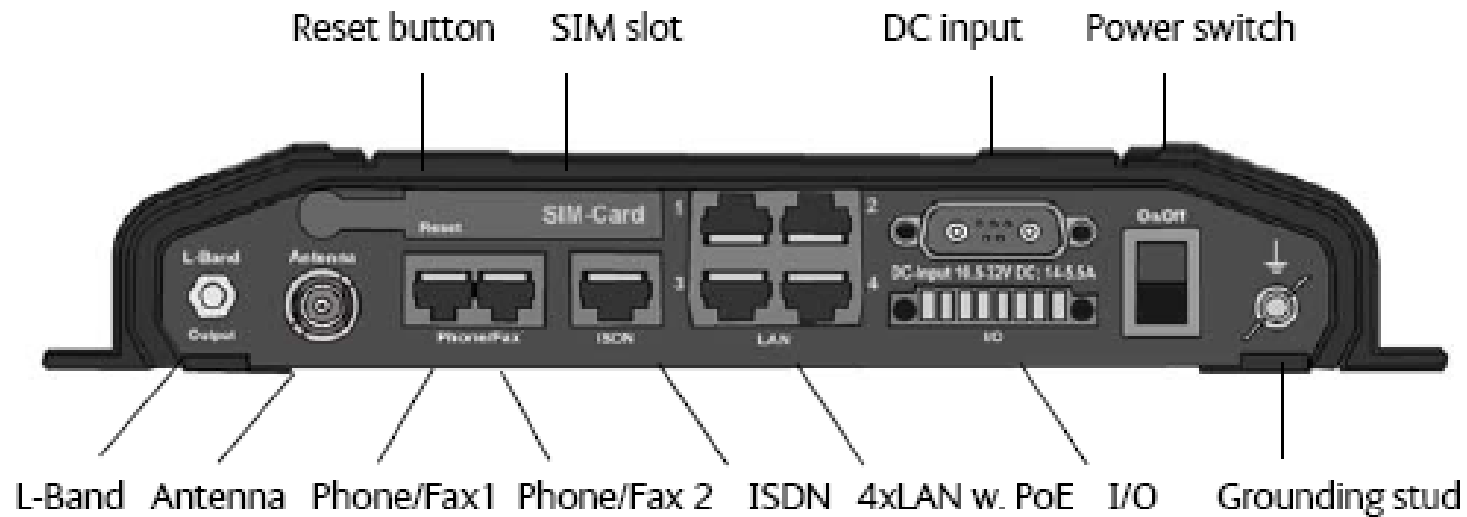




IT-Onboard Training 2020




JRC FB500/FB250 terminal JUE-501/JUE-251


Front view

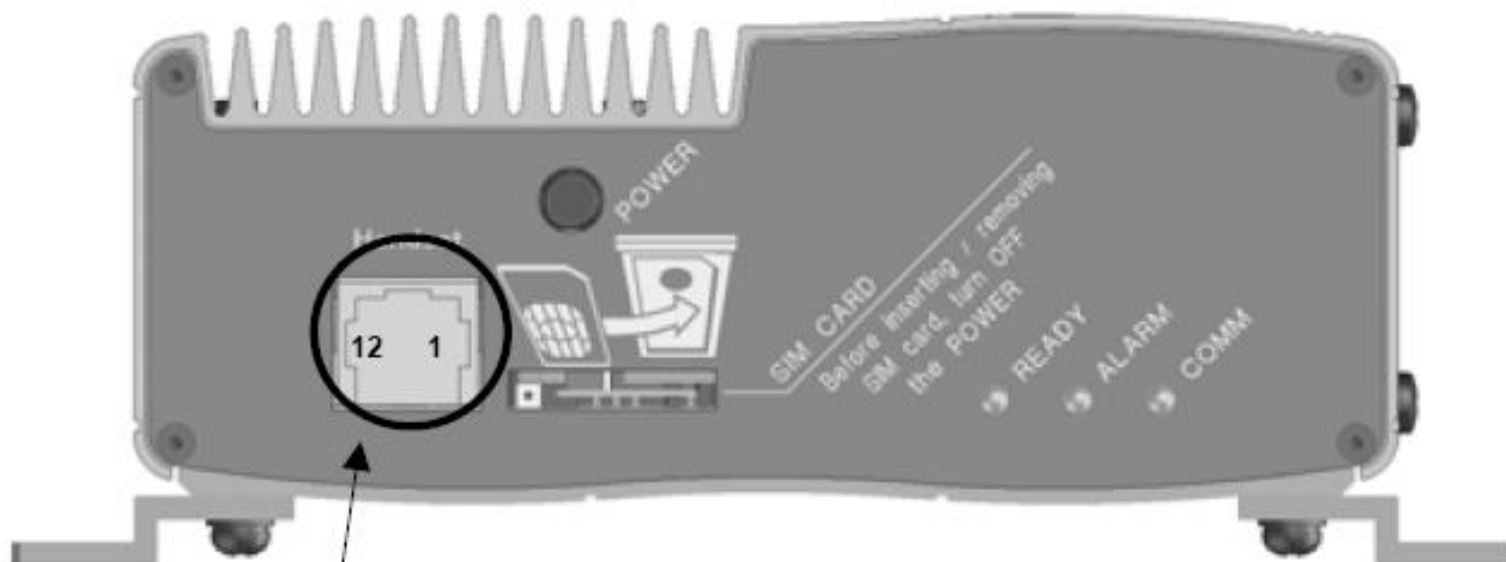

5. Handset connector

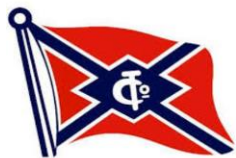

IT-Onboard Training 2020

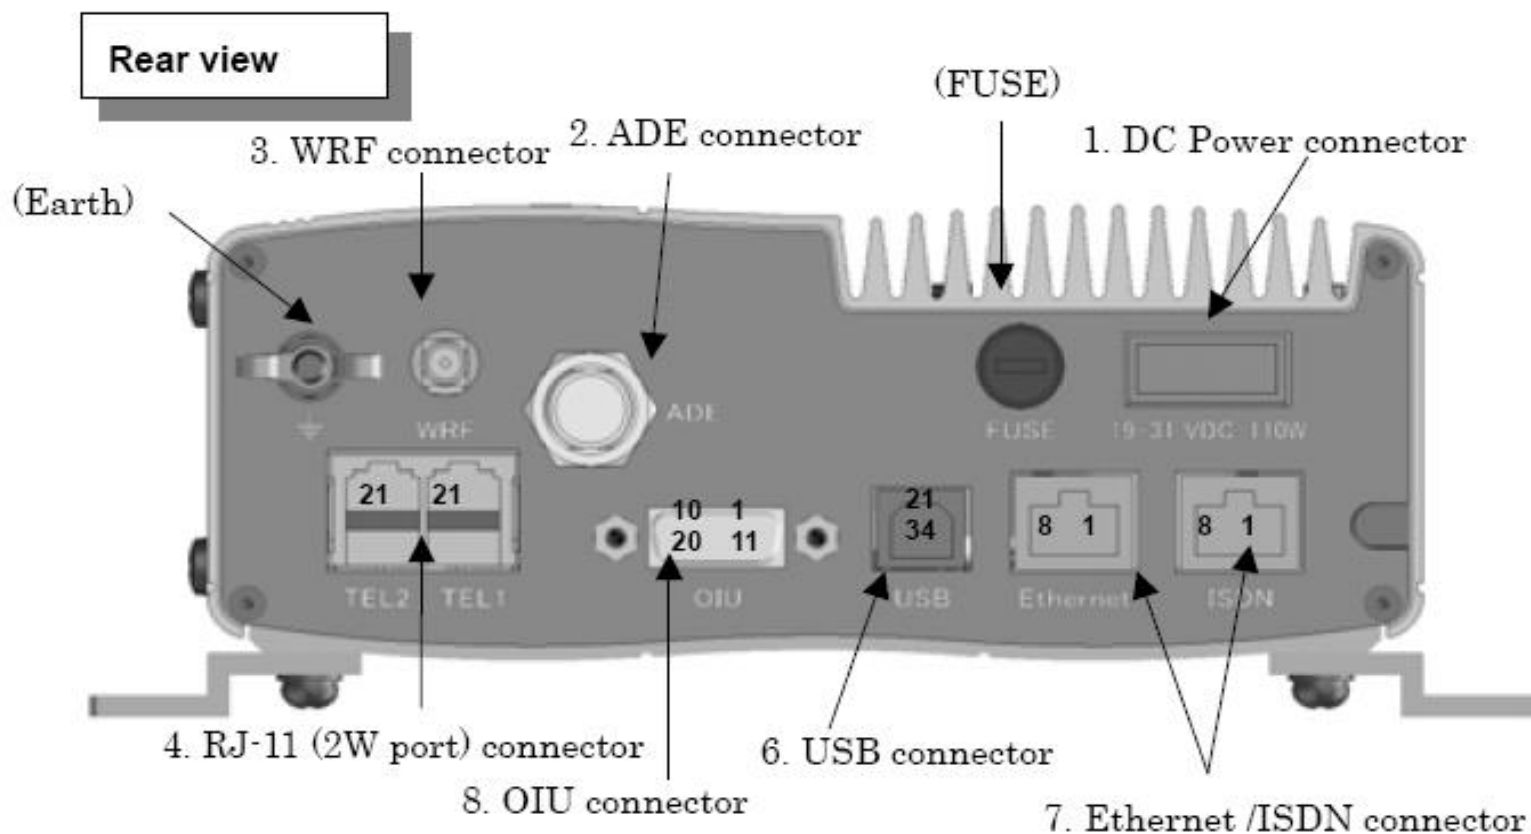



IT-Onboard Training 2020





IT-Onboard Training 2020



What Is a Very Small Aperture Terminal (VSAT)?

A very small aperture terminal (VSAT) is a two-way ground station that transmits and receives data from satellites. A VSAT is less than three meters tall and is capable of both narrow and broadband data to satellites in orbit in real-time. The data can then be redirected to other remote terminals or hubs around the planet.



IT-Onboard Training 2020



KEY TAKEAWAYS

- Very small aperture terminal (VSAT) is a data transmission technology used for many types of data management and in high-frequency trading.
- VSAT can be used in place of a large physical network as it bounces the signal from satellites instead of being transported through physical means like an ethernet connection.
- Because the signal needs to bounce, there can be a latency issue that wouldn't exist with a physical network. However, most users feel this is the price you pay for remote access and less infrastructure, and consider it a fair trade.
- Weather can adversely impact the efficacy of a VSAT network.




IT-Onboard Training 2020




IPsignature incase cannot send/receive email outlook.

- Satcom \ IP signature

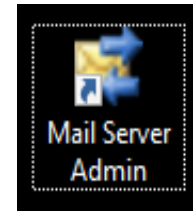


M.V. Thor Achiever
M.V. Thor Friendship
M.V. Thor Fortune
M.V. Thor Brave
M.V. Thor Breeze
M.V. Thor Fearless
M.V. Thor Independence
M.V. Thor Infinity
M.V. Thor Insuvi
M.V. Thor Integrity
M.V. Thor Madoc
M.V. Thor Magnhild
M.V. Thor Maximus
M.V. Thor Menelaus
M.V. Thor Mercury
M.V. Thor Monadic

IPSignature Mail Server - localhost

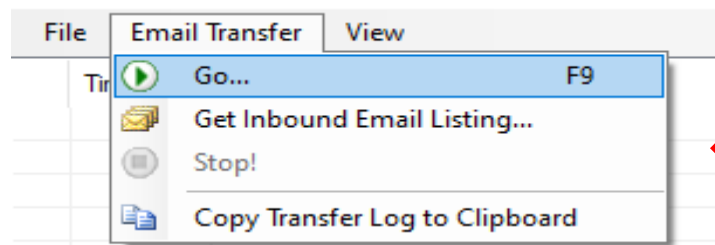


Send\ Received
Email

IPSignature Mail Server - localhost

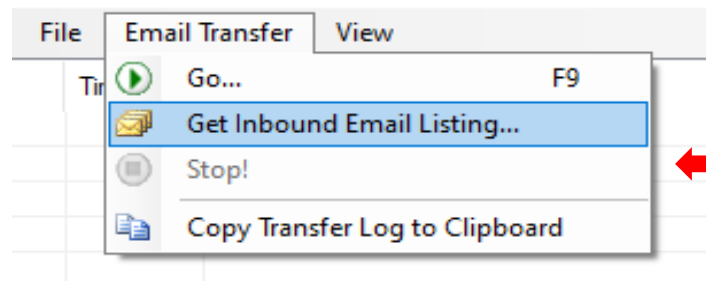

Check Incoming
Email

IPSignature Mail Server - localhost

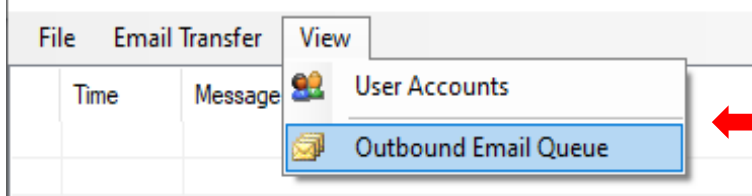

Check Outgoing
Email




IT-Onboard Training 2020



Click **Start**→**All Programs**→**AND Group plc**→**Mail Server Options**

Vessel Installation ID

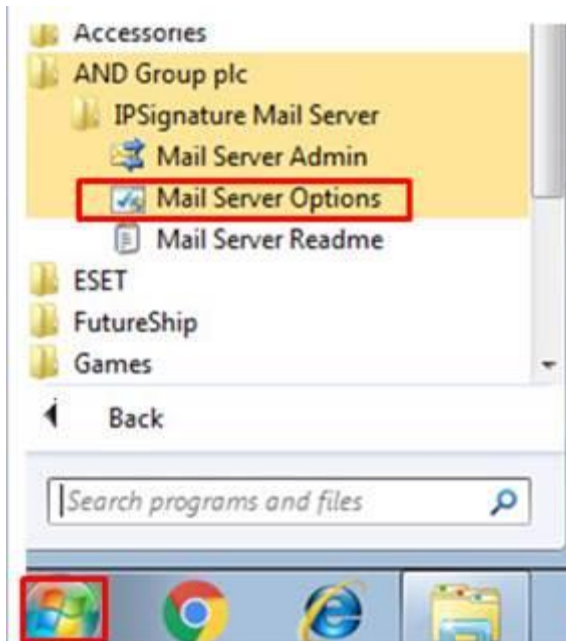

IPSignature Mail Server - Options

General Satellite Files / Data Clear Cache

Installation Identifier

Installation ID 00000000-0000-0000-0000-000000000000

If you do not have an Installation Identifier please contact support@and-group.net

Email Server

SMTP Service Port 25 Reset

POP3 Service Port 110

Note: These ports must be opened on your firewall for LAN access to the mail server.

Timed Transfers


Transfer Times

Note: Transfers will start automatically at these times. Example: 08:30,12:30,16:30,18:30
All times are GMT (aka UTC) in 24 hour clock format (HH:MM)
Multiple transfer times should be separated by commas (,)

Reset Save All & Exit Save Change(s) Cancel




IT-Onboard Training 2020

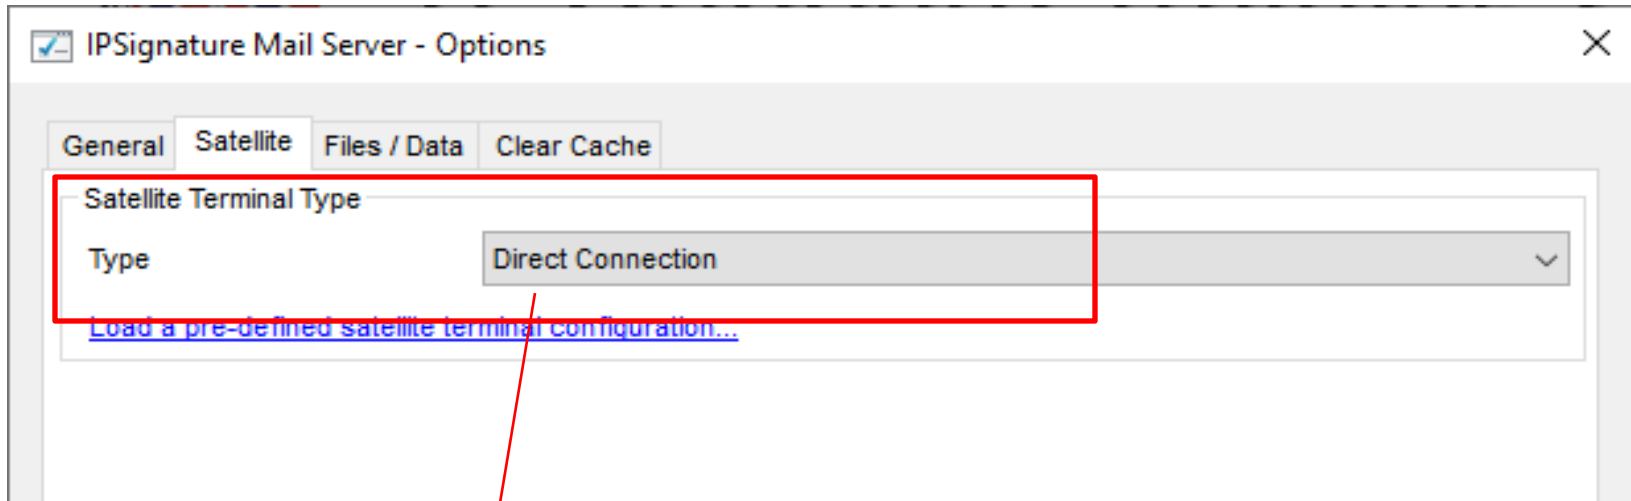

Satellite Terminal select



IT-Onboard Training 2020

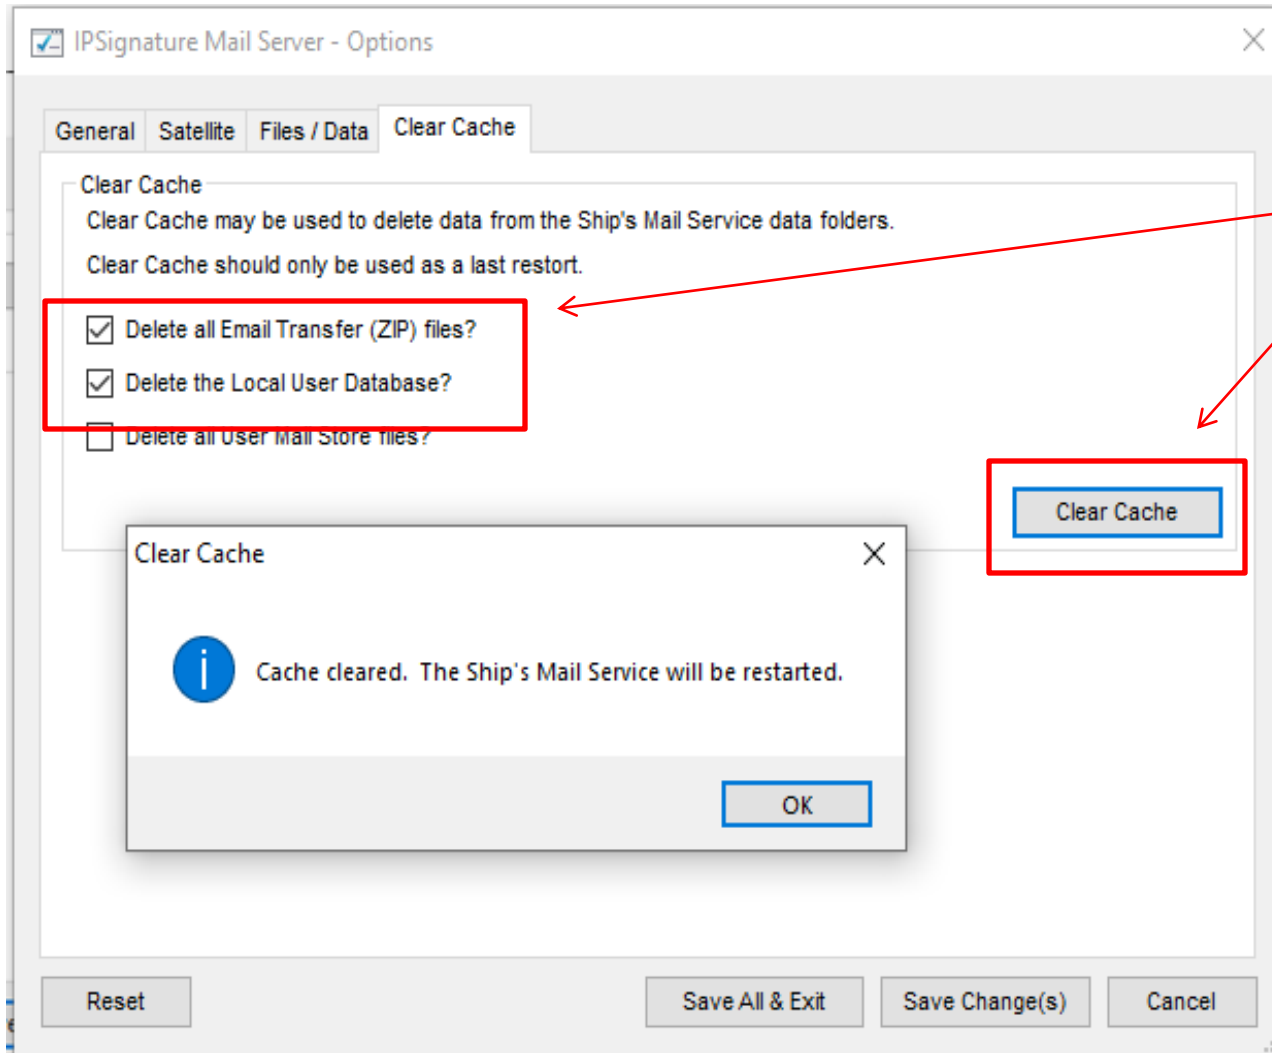


How to Clear Cache
for IPsignature



IT-Onboard Training 2020



Speedcast : Incase cannot send/receive email outlook.

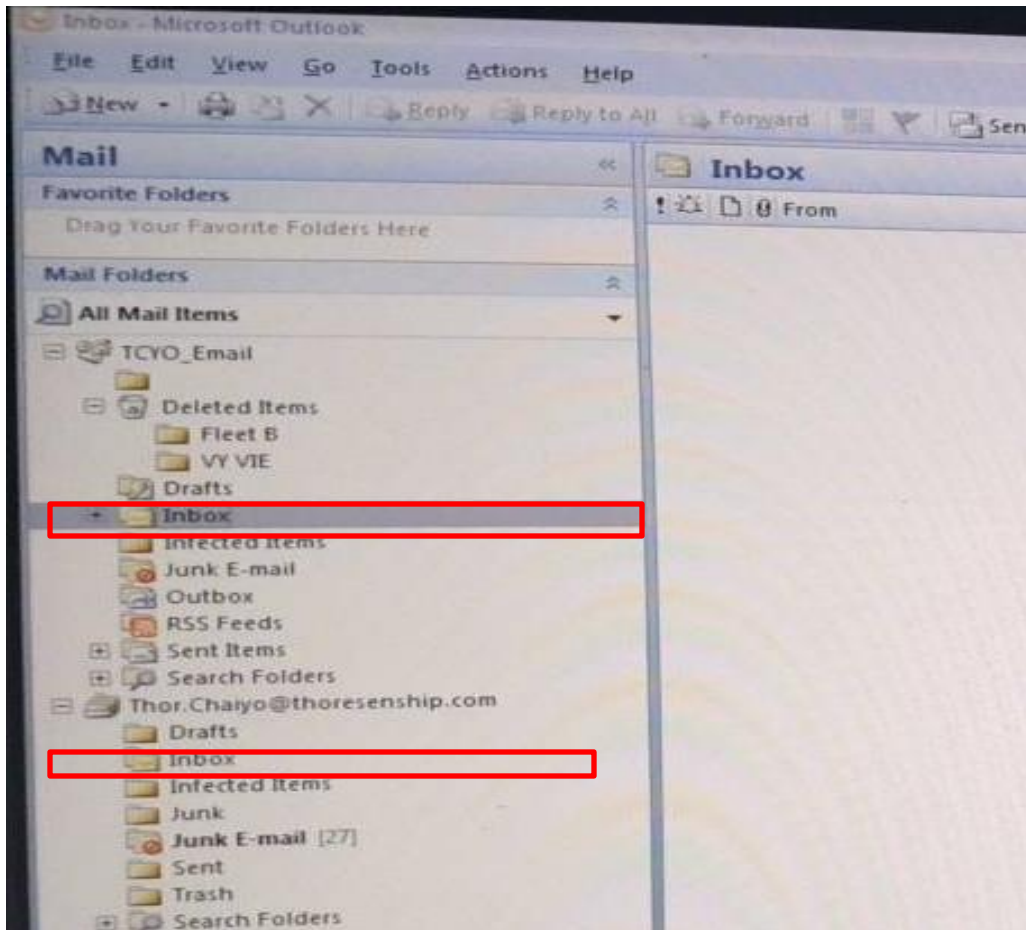

Incase do not received an email on inbox PST and NIMBUS "Inbox"

1. Both "INBOX" no MSG showing or update in outlook.




IT-Onboard Training 2020



How to create rule outlook

1. Click “Tools” and “Rules and Alerts”

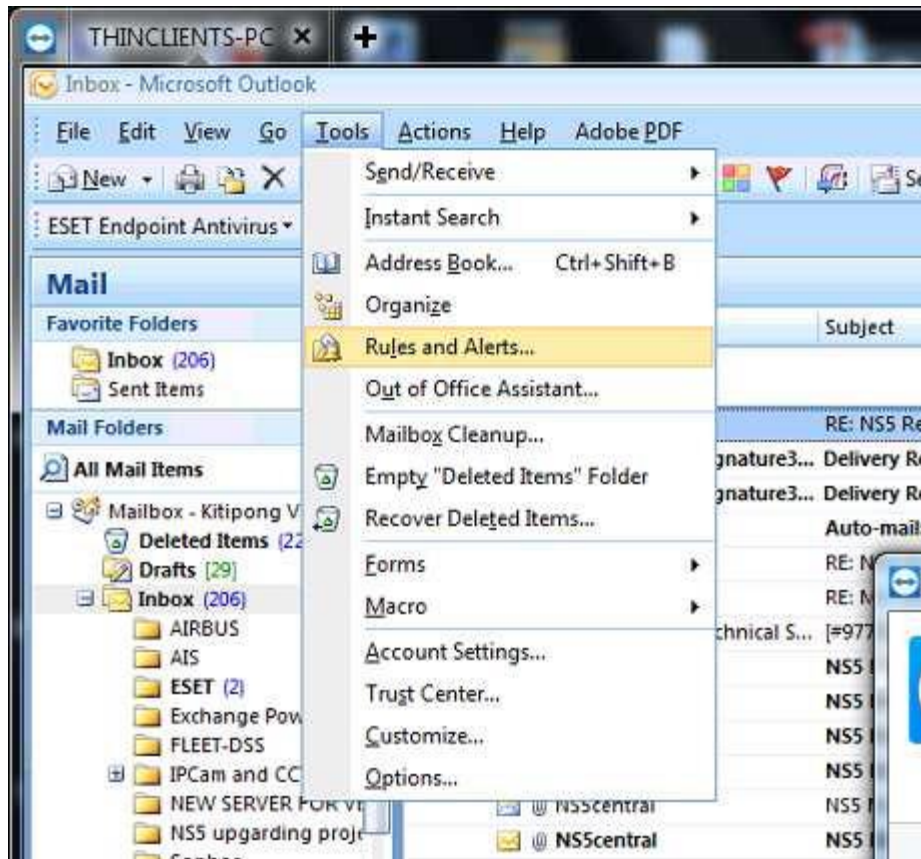




IT-Onboard Training 2020



2. Click to “New Rule”

3. Highlight on “Check messages when they arrive” and click “Next”

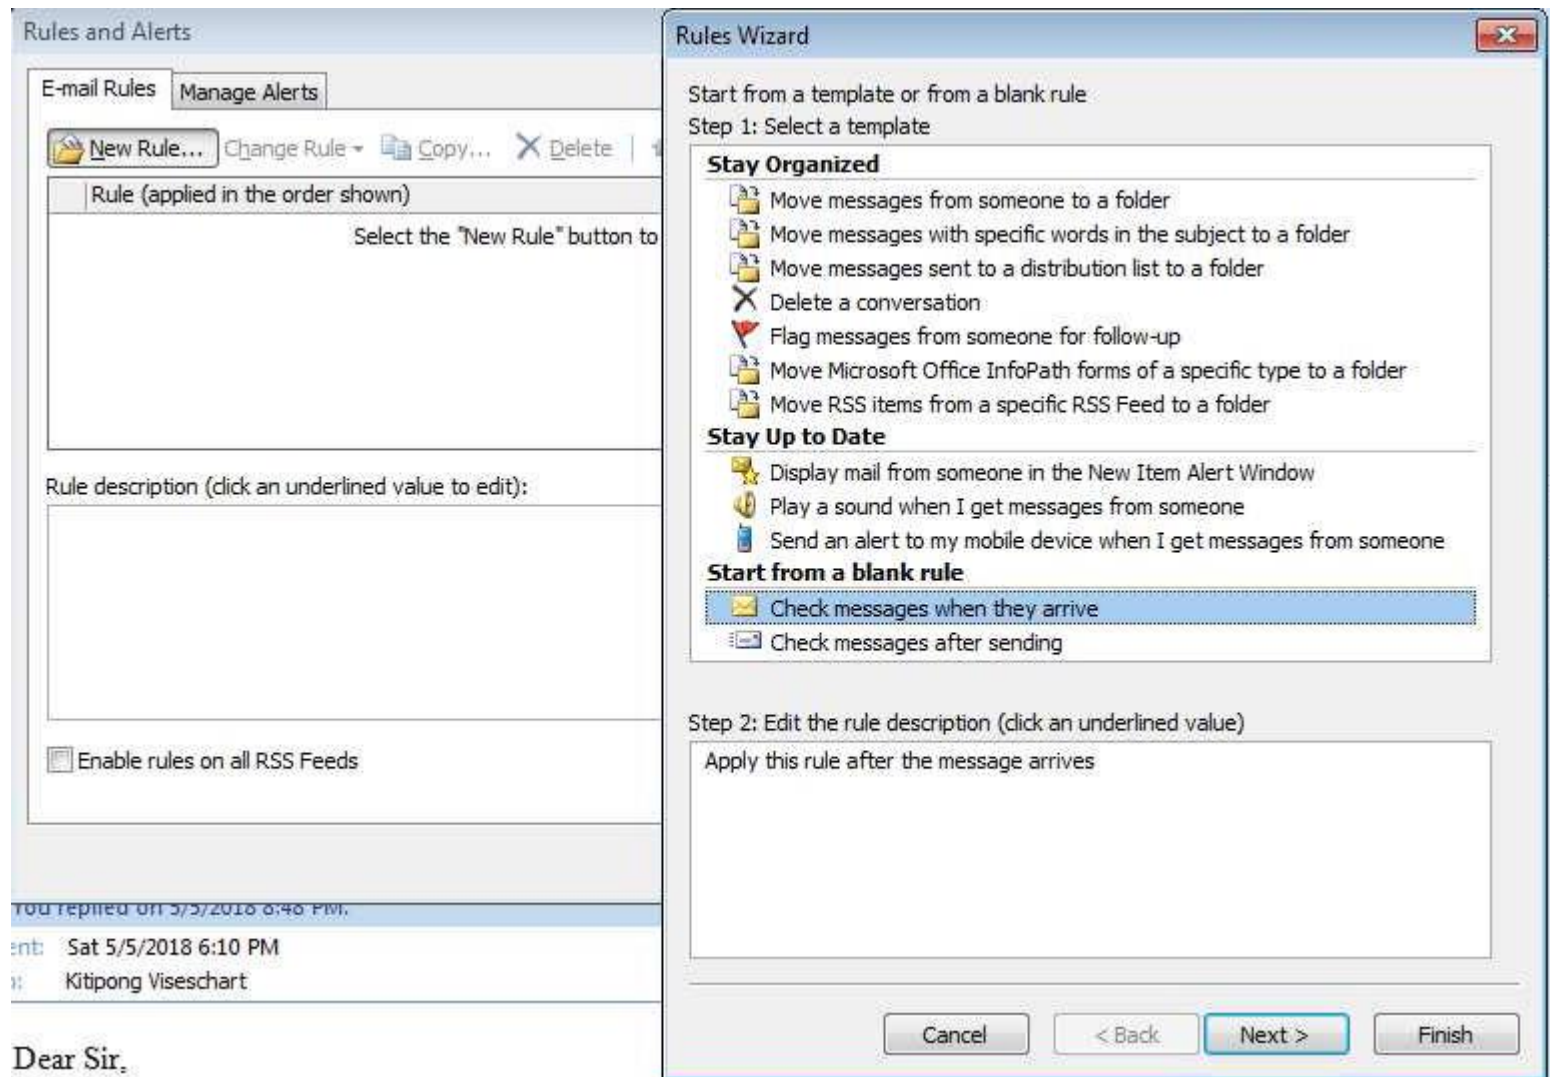



IT-Onboard Training 2020



4. Select to “on this machine only” and click Next

The screenshot shows the 'Rules and Alerts' window in Outlook. The 'E-mail Rules' tab is active, showing a list of rules (currently empty) and a 'New Rule...' button. Below the list is a 'Rule description' field. At the bottom, there is a checkbox for 'Enable rules on all RSS Feeds'.

Overlaid on the right is the 'Rules Wizard' dialog box. It asks 'Which condition(s) do you want to check?' and shows 'Step 1: Select condition(s)'. The conditions listed are:

- ☐ with specific words in the subject or body
- ☐ with specific words in the message header
- ☐ with specific words in the recipient's address
- ☐ with specific words in the sender's address
- ☐ assigned to category category
- ☐ assigned to any category
- ☐ which is an Out of Office message
- ☐ which has an attachment
- ☐ with a size in a specific range
- ☐ received in a specific date span
- ☐ uses the form name form
- ☐ with selected properties of documents or forms
- ☐ sender is in specified Address Book
- ☐ which is a meeting invitation or update
- ☐ from RSS Feeds with specified text in the title
- ☐ from any RSS Feed
- ☐ of the specific form type
- ☒ on this machine only

'Step 2: Edit the rule description (click an underlined value)' shows the text: 'Apply this rule after the message arrives on this machine only'.

At the bottom of the 'Rules Wizard' are buttons: 'Cancel', '< Back', 'Next >', and 'Finish'.

Below the 'Rules and Alerts' window, an email preview is visible:

You replied on 5/5/2018 8:48 PM.
ent: Sat 5/5/2018 6:10 PM
o: Kitipong Vischart

Dear Sir,



IT-Onboard Training 2020



5. Select “move it to the specified folder”
6. Click to “specified” on below Rules Wizard windows.
7. On the Rules and Alerts please highlight on the Top “Inbox” and OK

The screenshot shows the Outlook interface with two windows open. The 'Rules Wizard' window is in the foreground, displaying 'Step 1: Select action(s)'. The 'move it to the specified folder' option is selected. Below the list of actions, 'Step 2: Edit the rule description (click an underlined value)' is shown with the text 'Apply this rule after the message arrives on this machine only move it to the specified folder'. The 'Rules and Alerts' dialog box is also open, showing a list of folders under 'Mailbox - Kitipong Vischart'. The 'Inbox (206)' folder is highlighted. The 'OK' button is visible. In the background, a list of received emails is partially visible, showing dates and times like '5/5/2018 6:28 PM'.

Rules Wizard

What do you want to do with the message?

Step 1: Select action(s)

- ☒ move it to the specified folder
- ☐ assign it to the category
- ☐ delete it
- ☐ permanently delete it
- ☐ move a copy to the specified folder
- ☐ forward it to people or distribution list
- ☐ forward it to people or distribution list as an attachment
- ☐ redirect it to people or distribution list
- ☐ have server reply using a specific message
- ☐ reply using a specific template
- ☐ flag message for follow up at this time
- ☐ clear the Message Flag
- ☐ clear message's categories
- ☐ mark it as importance
- ☐ print it
- ☐ play a sound
- ☐ start application
- ☐ mark it as read

Step 2: Edit the rule description (click an underlined value)

Apply this rule after the message arrives
on this machine only
move it to the specified folder

Rules and Alerts

Choose a folder:

- Mailbox - Kitipong Vischart
 - Calendar
 - Contacts
 - Deleted Items (22)
 - Drafts [29]
 - Inbox (206)**
 - Infected Items
 - Journal
 - Junk E-Mail
 - Notes
 - Outbox
 - RSS Feeds
 - Sent Items

OK Cancel New...

To-Do Bar

Mon 10:00 AM: Shipp...


Today: 1 Tasks



IT-Onboard Training 2020



8. Click to “Next”

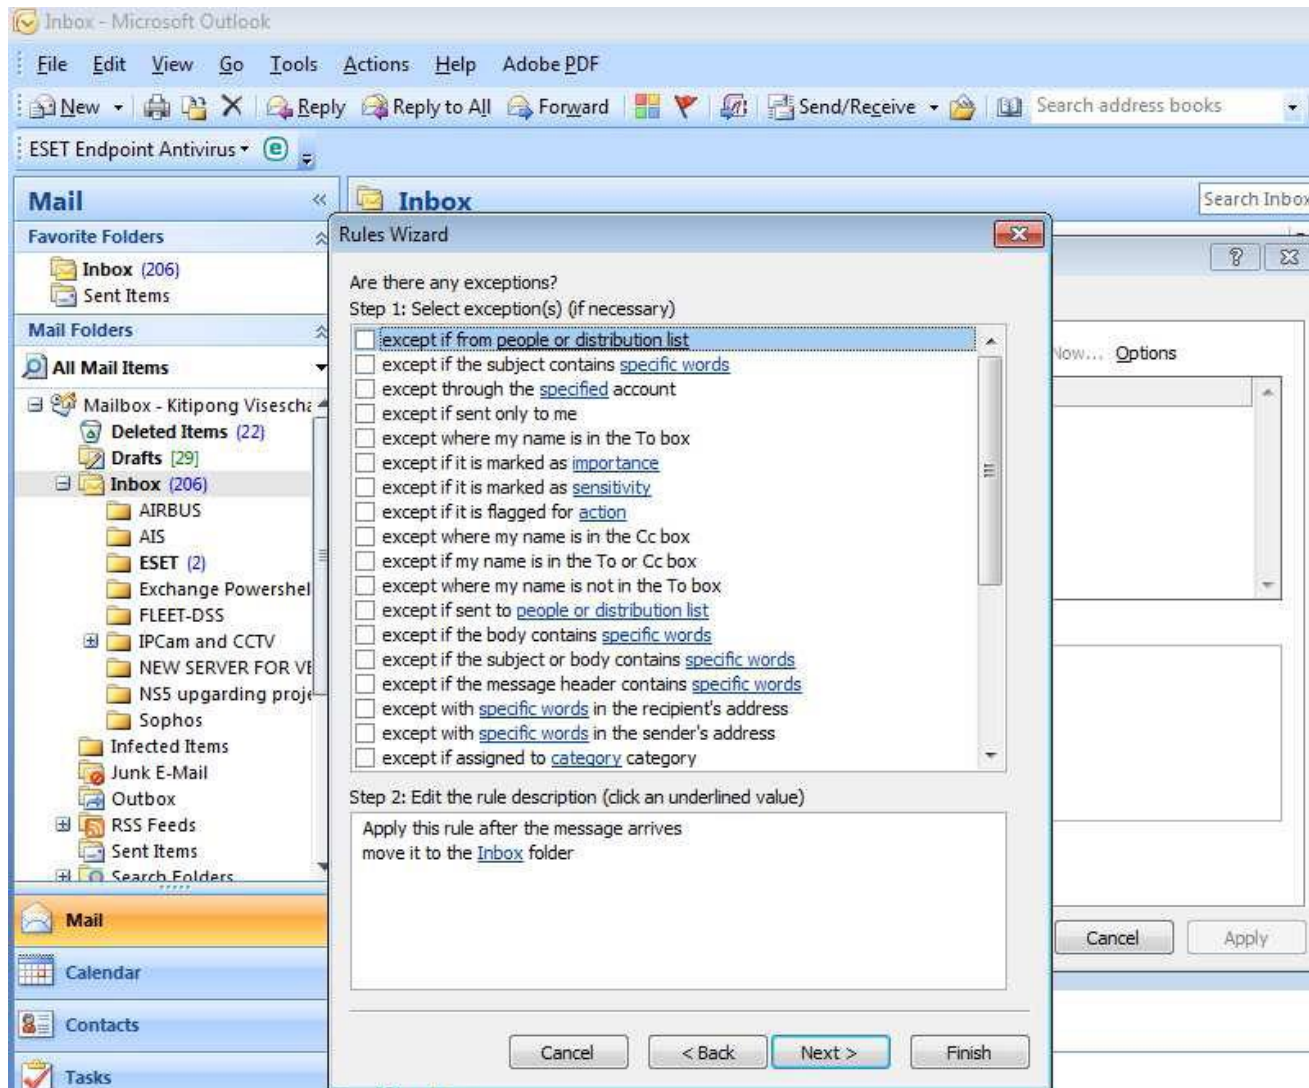



IT-Onboard Training 2020



9. Click to “Next”

Rules Wizard

Are there any exceptions?

Step 1: Select exception(s) (if necessary)

- ☐ except if from people or distribution list
- ☐ except if the subject contains specific words
- ☐ except through the specified account
- ☐ except if sent only to me
- ☐ except where my name is in the To box
- ☐ except if it is marked as importance
- ☐ except if it is marked as sensitivity
- ☐ except if it is flagged for action
- ☐ except where my name is in the Cc box
- ☐ except if my name is in the To or Cc box
- ☐ except where my name is not in the To box
- ☐ except if sent to people or distribution list
- ☐ except if the body contains specific words
- ☐ except if the subject or body contains specific words
- ☐ except if the message header contains specific words
- ☐ except with specific words in the recipient's address
- ☐ except with specific words in the sender's address
- ☐ except if assigned to category category

Step 2: Edit the rule description (click an underlined value)

Apply this rule after the message arrives
move it to the Inbox folder

Cancel < Back Next > Finish

Dear Sir



IT-Onboard Training 2020



10. Enter "TCYO-INBOX" on Step 1.
11. Select "Turn on the rule"
12. Click to Finish.

Rules Wizard

Finish rule setup.

Step 1: Specify a name for this rule

TCYO-INBOX

Step 2: Setup rule options

☐ Run this rule now on messages already in "Sent Items"

☒ Turn on this rule

☐ Create this rule on all accounts

Step 3: Review rule description (click an underlined value to edit)

Apply this rule after the message arrives
move it to the Inbox folder

Cancel < Back Next > Finish



IT-Onboard Training 2020



Thrane & Thrane - SAILOR 500 FleetBroadband - Windows Internet Explorer

http://10.200.1.250/

Thrane & Thrane

SIGNAL: [Signal strength indicator]

<http://10.200.1.100>

DASHBOARD	PROPERTIES	SESSIONS TOTAL
PHONE BOOK	Airtime provider SatCom Global	Standard voice inbound 00:00:03
MESSAGES	GPS position N 1°17', E 103°51'	Standard voice outbound 00:02:43
CALLS	Status Ready	3.1 kHz audio inbound 00:00:37
SETTINGS	Satellite selection Auto	3.1 kHz audio outbound 00:11:16
ADMINISTRATION	Unit serial number 07441400	Standard data 0.80 MB
HELPDESK	Software version 1.05, build 3	Streaming 32 kbps 00:00:17
SITE MAP	Local IP address 10.200.1.250	Streaming 64 kbps 00:00:00
	IMEI number 35162402-000585-8	Streaming 128 kbps 00:00:00
	MAC address 00:11:CF:01:5E:0A	Streaming 256 kbps 00:00:00
	Antenna status Tracking	
	ONGOING DATA SESSIONS	ONGOING CALLS
	(No active data sessions)	(No active calls)
	PROFILES ON LAN (DEFAULT GROUP)	
	Start Standard	
	Refresh	

Done Internet 100%



IT-Onboard Training 2020



Thrane & Thrane

SIGNAL:

DASHBOARD
PHONE BOOK
MESSAGES
CALLS
SETTINGS
ADMINISTRATION
HELPDESK
SITE MAP

PROPERTIES
Airtime provider SatCom Global
GPS position N 1°17', E 103°51'
Status Data active
Satellite selection Auto
Unit serial number 07441400
Software version 1.05, build 3
Local IP address 192.168.0.1
IMEI number 35162402-000585-8
MAC address 00:11:CF:01:5E:0A
Antenna status Tracking

SESSIONS TOTAL
Standard voice inbound 00:00:03
Standard voice outbound 00:02:43
3.1 kHz audio inbound 00:00:37
3.1 kHz audio outbound 00:11:16
Standard data 0.80 MB
Streaming 32 kbps 00:00:17
Streaming 64 kbps 00:00:00
Streaming 128 kbps 00:00:00
Streaming 256 kbps 00:00:00

ONGOING DATA SESSIONS
Standard data (161.30.180.71)
PROFILES ON LAN (DEFAULT GROUP)
[Start Standard](#)

ONGOING CALLS
(No active calls)



IT-Onboard Training 2020



Fleet Broadband JUE-251/501 - Windows Internet Explorer

http://192.168.128.100/cgi-bin/jrc_broadband.cgi?auth=1364880749153

File Edit View Favorites Tools Help

★ Favorites Fleet Broadband JUE-251/501

JRC Fleet Broadband JUE-251/501

Signal  CS  PS 

User: ADMIN
Level: Admin **Log out**

Software Update

Update File

Browse...

Upload Start

Please do not operate Web browser until the result of software updating is printed.

Copyright©2012 Japan Radio Co., Ltd. All R

Done Internet 100%

Navigation Menu:

- ▼ GUEST
 - Dashboard
 - ▶ Data Connection
 - ▶ SMS
 - ▶ Phonebook
 - ▶ Call Log
 - ▶ System Log
- ▼ ADMIN
 - ▶ Terminal
 - ▶ Telephony
 - ▶ Port
 - ▶ User Control
 - ▶ Network
 - ▶ Auto Disconnect
 - ▶ SIM
 - ▶ Export / Import
 - ▶ Factory Default
 - Software Update**
 - ▶ Diagnostic




IT-Onboard Training 2020



Configure of Speedcast


Open Web Browser and URL Enter **10.200.1.200** Or **192.168.2.1**

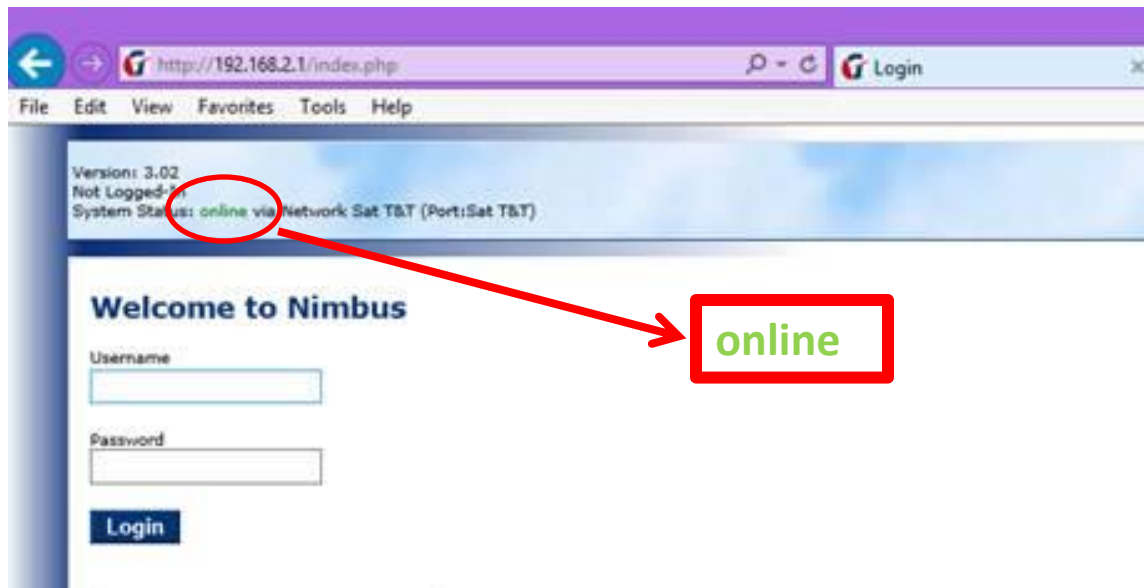

*** Incase Outlook do not receive an email please access Nimbus web and ensure that is "Online" Status.



IT-Onboard Training 2020



This page can't be displayed

- Make sure the web address <http://192.168.2.1> is correct.
- Look for the page with your search engine.
- Refresh the page in a few minutes.

[Fix connection problems](#)

Incase a Nimbus web it can't to be displayed please recheck below.

1. Check Power of Nimbus box.
2. Ensure that LAN cable between Nimbus to FBB Terminal is connecting or not.
3. Restart FBB Terminal and then restart Nimbus.



IT-Onboard Training 2020



Satcom

- Satcom: In case vessel cannot send\received emails \ and cannot access URL: 10.200.1.100 to [FBB Dashboard] please check status LAN Connection \ Power Connection on “Mikrotik Route Board”





IT-Onboard Training 2020



Speedcast



- Speedcast: In case vessel cannot send\received emails \ and cannot access URL: 10.200.1.200 to [Nimbus Dashboard] please check status LAN Connection \ Power Connection.




IT-Onboard Training 2020



Example: How to solve PST file error and cannot open "Outlook"

1. Record error path Errors have been detected in the file

<\\10.200.1.2\\Outlook\\Mail\\Outlook1.pst>

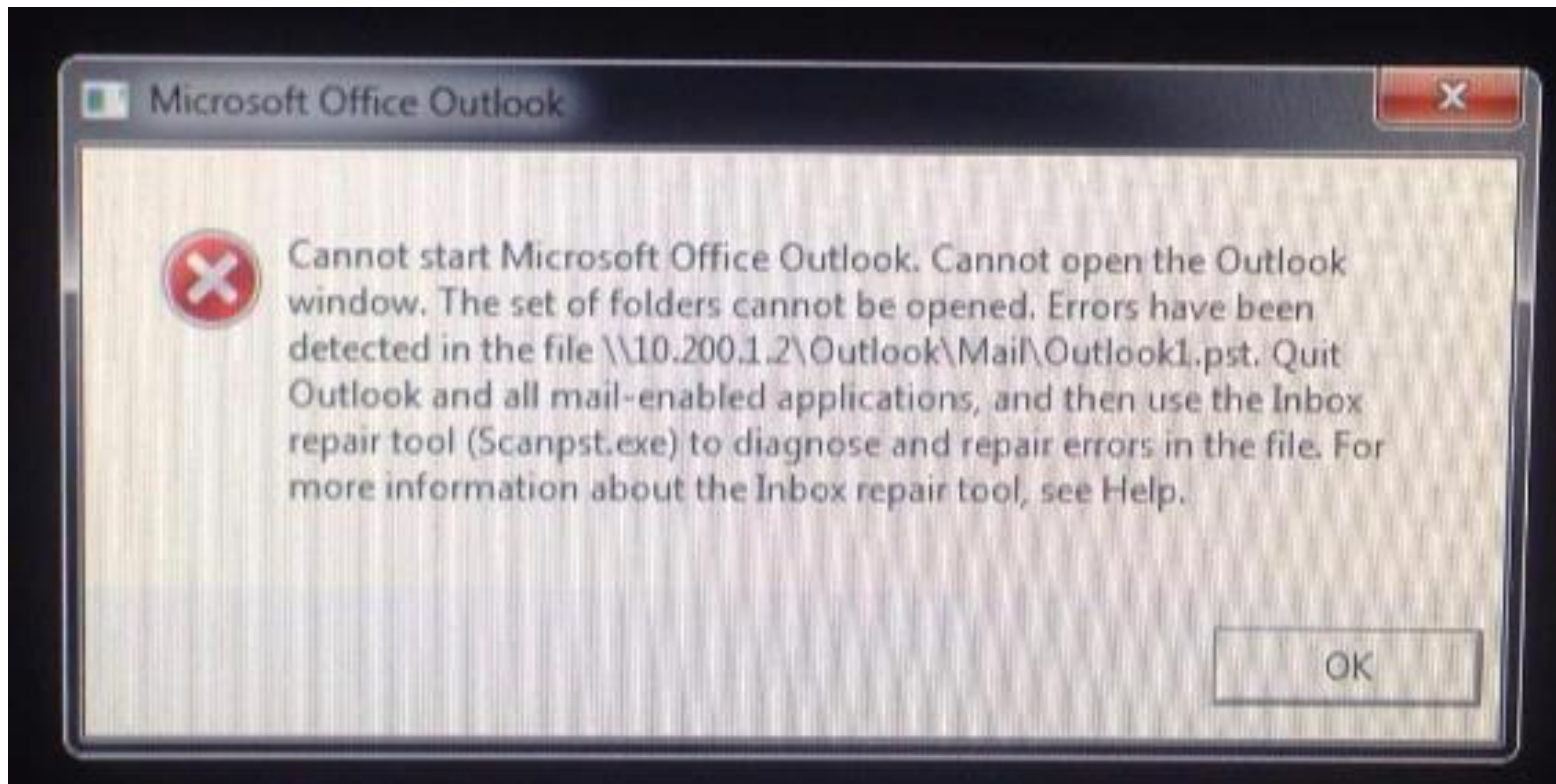




IT-Onboard Training 2020



1. Go to **C:\Program Files (x86)\Microsoft Office\Office14**
2. Double click “SCANPST.EXE”

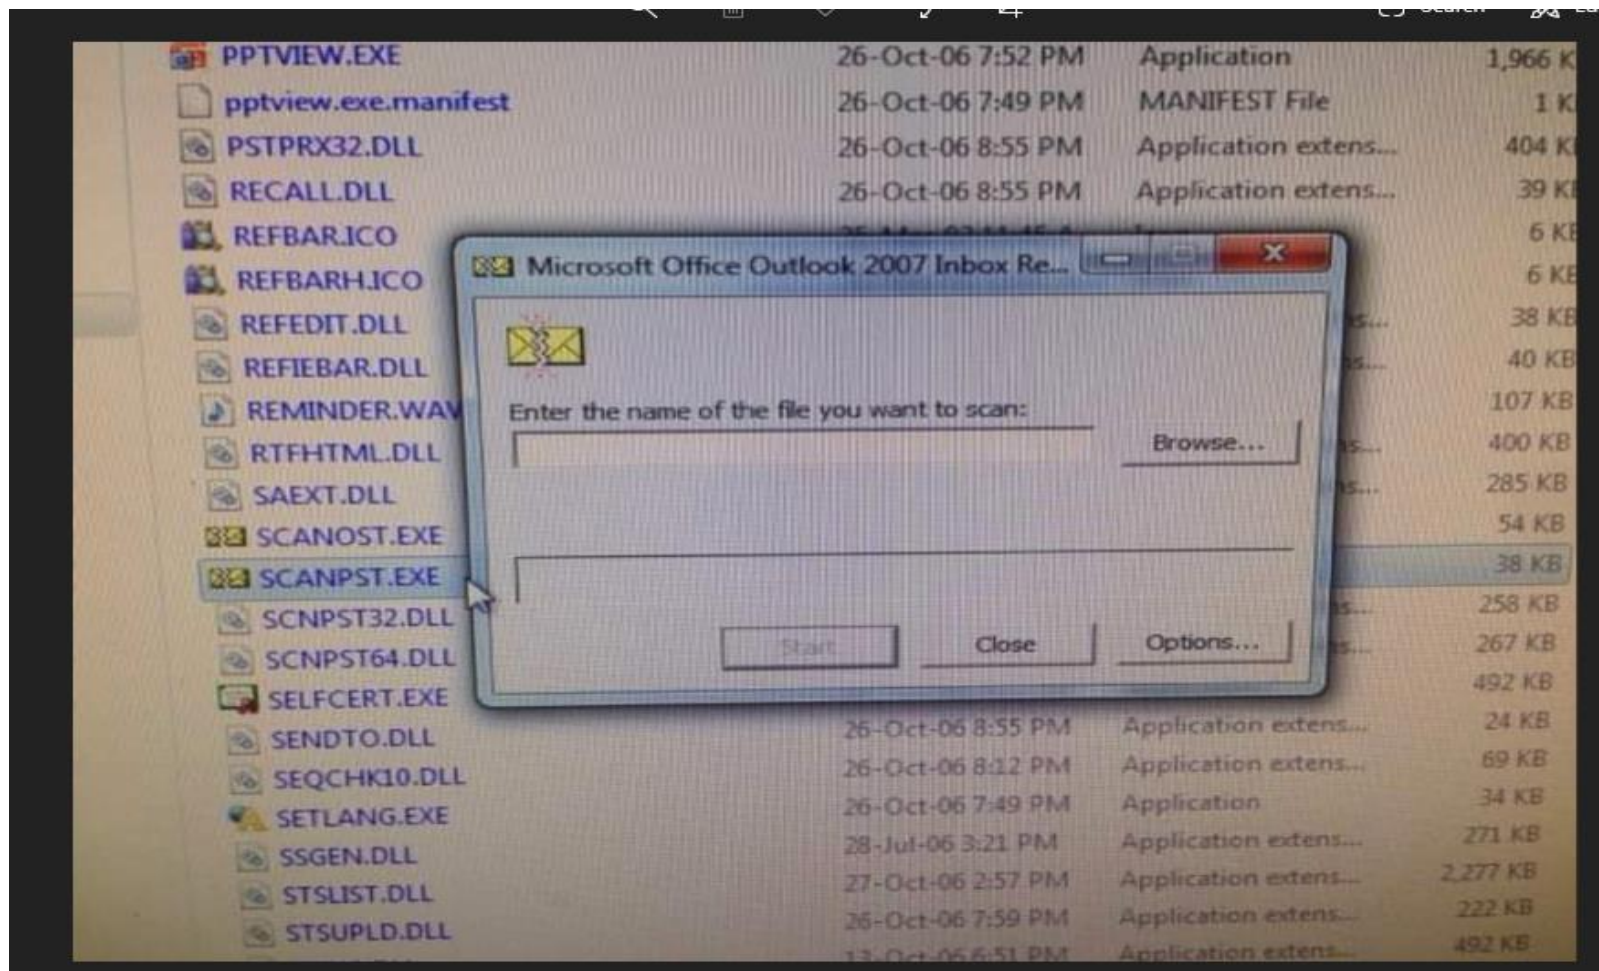




IT-Onboard Training 2020




1. Click Browse and Enter:
<\\10.200.1.2\Outlook\Mail\Outlook1.pst>
2. Click to **“Start”**

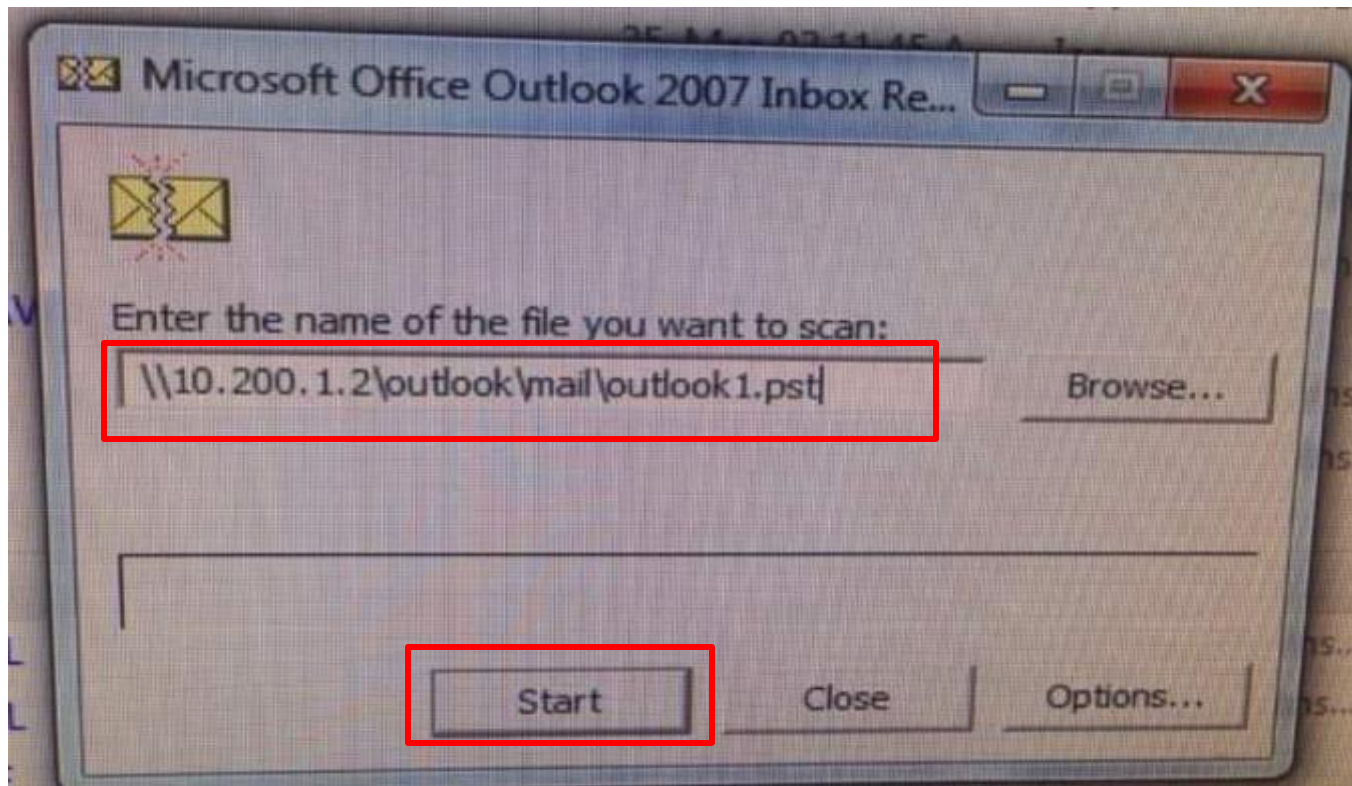



IT-Onboard Training 2020

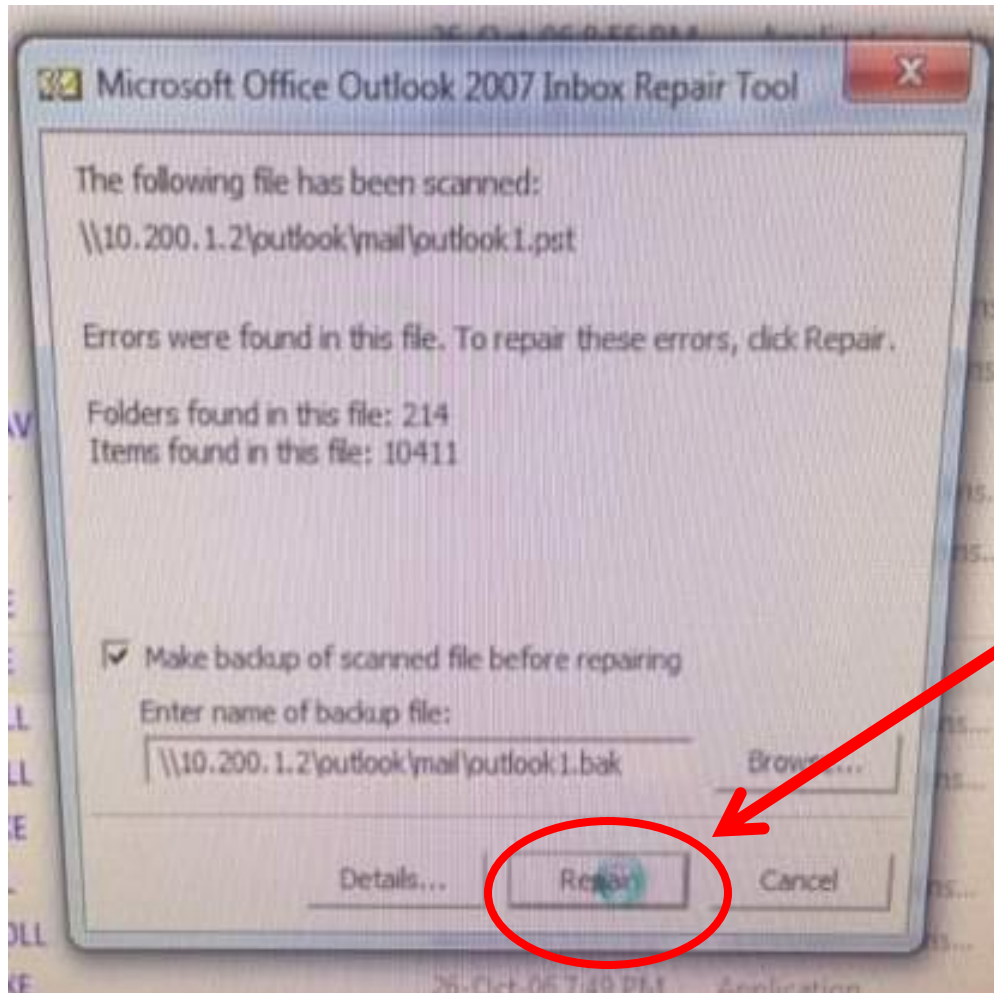

Click to “Repair” and waiting about 1 hour



IT-Onboard Training 2020



Main Server Systems and Computers Onboard

1. MainServer type "Rack 2U"



2. MainServer type "Tower"





IT-Onboard Training 2020




Thinclient's PC on vessel.

1. HP Thin Client on Captain Cabin, CE, Bridge, Shipoffice.
2. Standalone PC for Email Backup 1 Set on Captain Cabin





IT-Onboard Training 2020

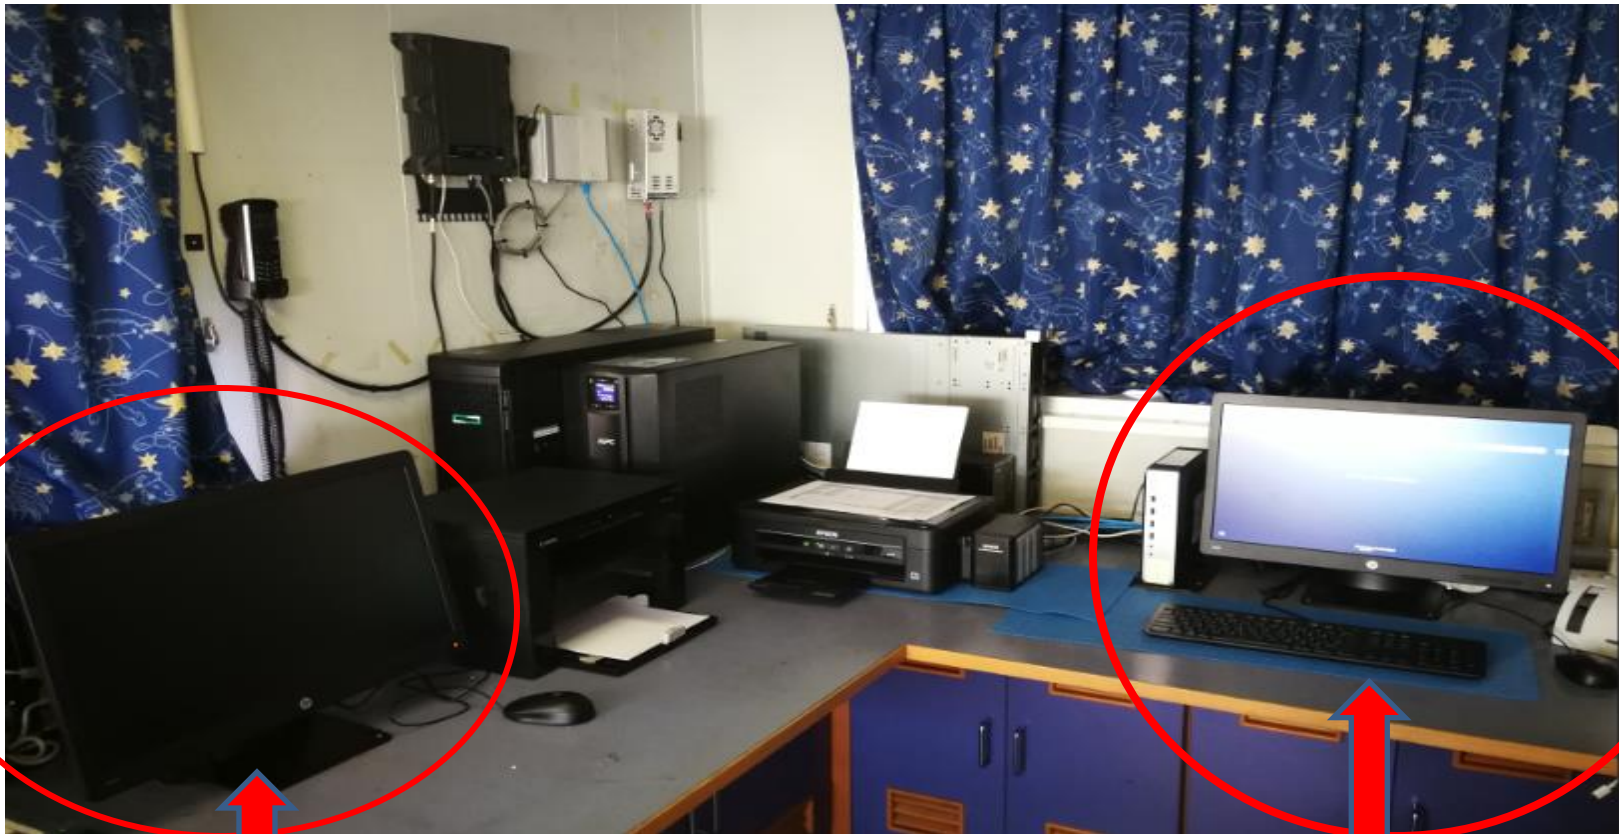

Novoco PC

HP Thin Client on Bridge Control




IT-Onboard Training 2020



Infrastructure Configuration

The following information is a Technical configuration for Infrastructure on Thoresen Vessel.

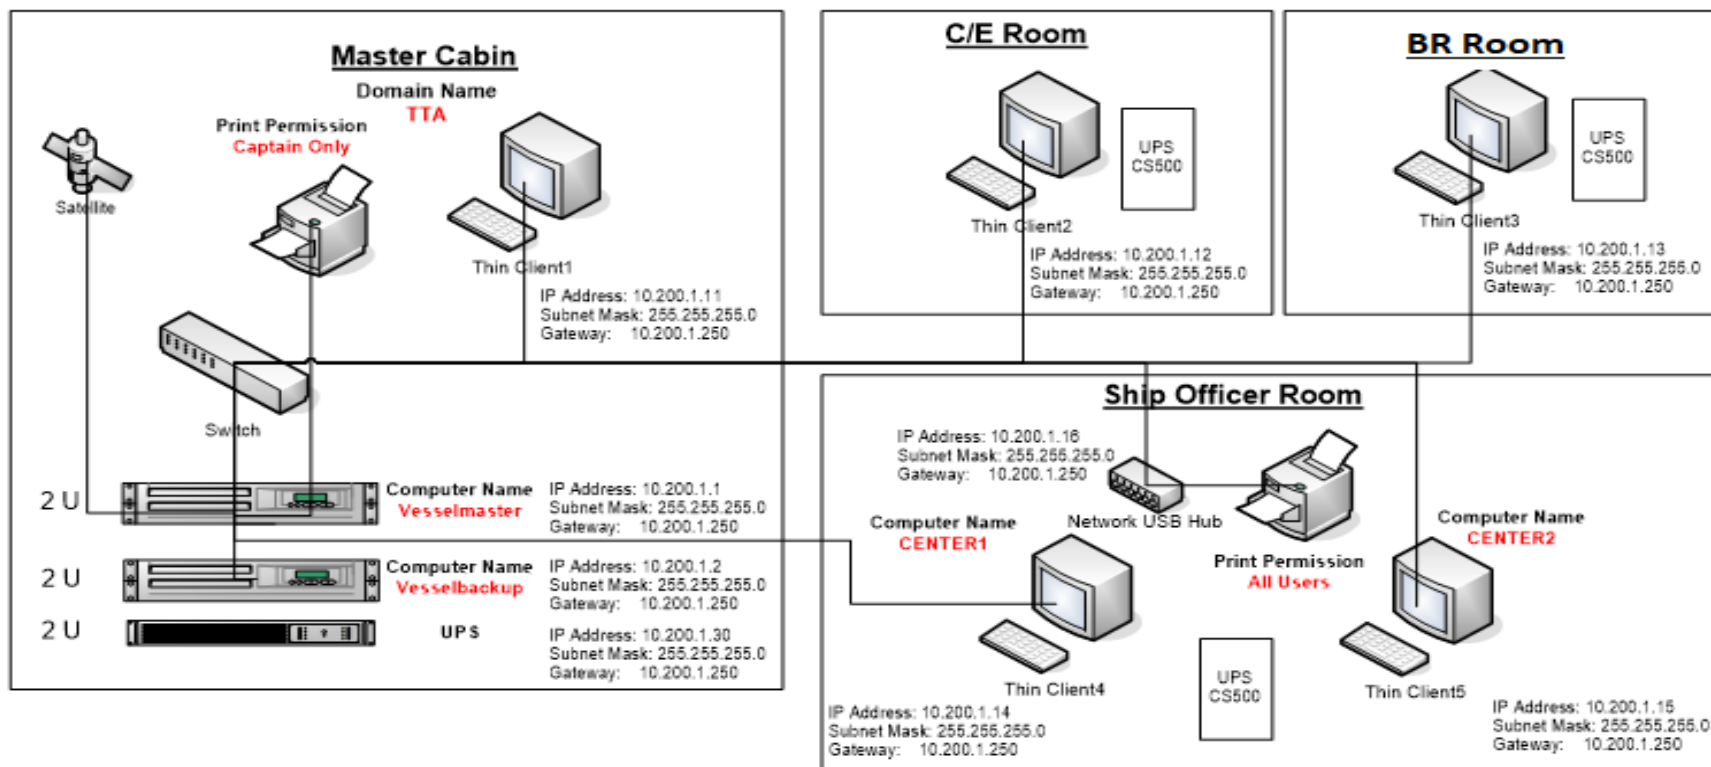

Remark: All User Names for use at Computer Room

User Name: CAPTAIN	for Captain	User Name: CH_ENGR	for Chief Engineer
User Name: CH_OFFR	for Chief Officer	User Name: 2ND_OFFR	for Second Officer
User Name: 3RD_OFFR	for Third Officer	User Name: SAO_OFFR	for Security & Admin Officer
User Name: 2ND_ENGR	for Second Engineer	User Name: 3RD_ENGR	for Third Engineer
User Name: 4TH_ENGR	for Forth Engineer	User Name: E_ENGR	for Electrician Engineer



IT-Onboard Training 2020



Server Configuration

Configuration	Active Server	Active Server
Model Hardware	VM ware on HP and DELL SR	VM ware on HP and DELL SR
Processor	Intel Xeon	Intel Xeon
Memory	16 GB	16 GB
Hard Disk	1 TB x 4 RAID5	1 TB x 4 RAID5
- System	C: 100 GB NTFS	C: 100 GB NTFS
- Data	D: 250 GB NTFS	D: 250 GB NTFS
- Backup	E: 1000 GB NTFS	E: 1000 GB NTFS
Computer Name	<u>Vesselmaster_AD</u>	<u>VesselMaster_APP</u>
Administrator Account	administrator	administrator
Administrator Password	P@ssw0rd	P@ssw0rd
Domain Name	TTA	TTA
IP Address	10.200.1.1	10.200.1.2
Subnet Mask	255.255.255.0	255.255.255.0
Default Gateway	10.200.1.100	10.200.1.100
Preferred DNS Server	10.200.1.1	10.200.1.1
Operating System	Windows2003 R2 Service1	Windows2012 R2 Service1
User Account	- CAPTAIN - CH_ENGR - CH_OFFR - 2ND_OFFR - 3RD_OFFR - SAO_OFFR - 2ND_ENGR - 3RD_ENGR - 4TH_ENGR - E_ENGR - Backup	-
User Password	password (this is default password)	




IT-Onboard Training 2020



Reset crew computer password. Every 90 Days the system will be forced to reset the logon password.

Remote Desktop by stand-alone pc to 10.200.1.1 to reset password

Go to Standalone PC and Enter “mstsc” on Search box and click to enter.

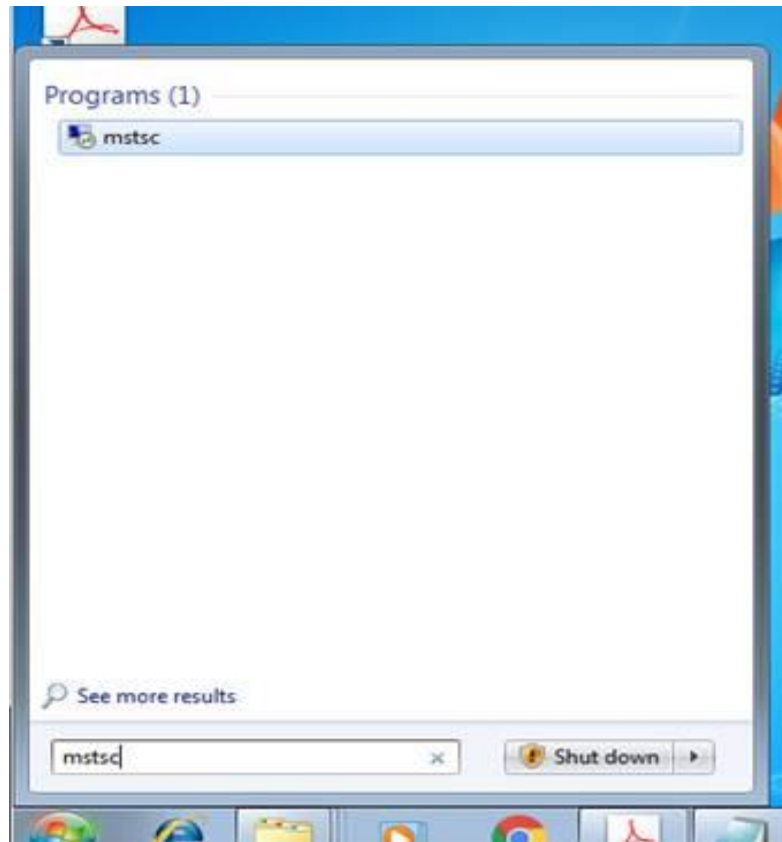



IT-Onboard Training 2020



Enter 10.200.1.1 and click to “Connect”





IT-Onboard Training 2020



Logon User: **Captain** and Password: **[As your current password]**

Log On to Windows

Microsoft
Windows Server 2003 R2
Standard Edition

Copyright © 2005 Microsoft Corporation

Microsoft

User name: captain

Password: •••••••

OK Cancel Options >>



IT-Onboard Training 2020



Press **Change Password...** **** if the system is not require to change a new password please direct to No.5***

Old Password : Input your old password

New Password : input your new password

Confirm New password : Input your new password again for confirmation.

After that, click **OK**.

The screenshot shows the 'Change Password' dialog box in Windows Server 2003. The title bar reads 'Change Password'. The header area features the Microsoft logo, 'Windows Server 2003 Standard Edition', and 'Copyright © 1985-2003 Microsoft Corporation'. The dialog contains the following fields and controls:

- User name:** A text box containing 'Captain'.
- Log on to:** A dropdown menu showing 'TTA'.
- Old Password:** A password input field.
- New Password:** A password input field.
- Confirm New Password:** A password input field.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom right, and a small 'EN' button at the bottom left.




IT-Onboard Training 2020



When windows logon already please go to On Remote desktop by click to Start → **Administrative tools**

Open [**Active Directory Users and Computers**]

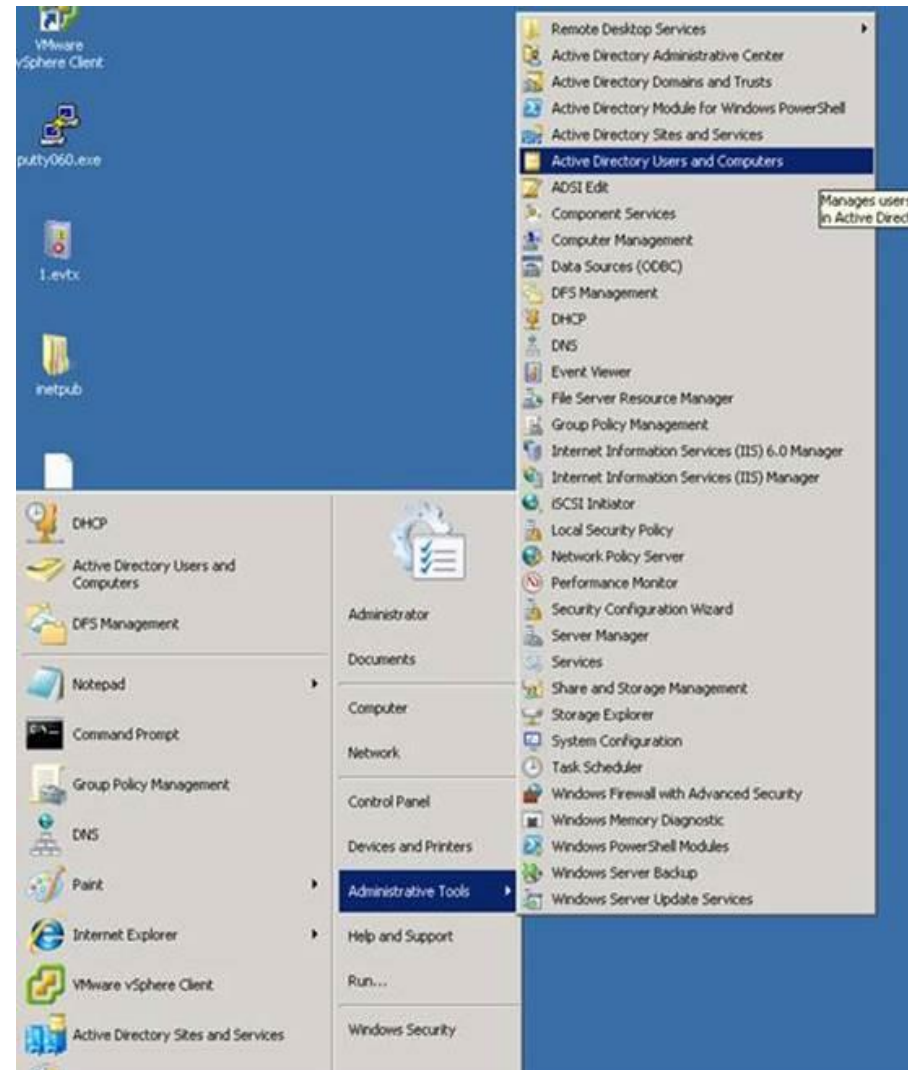




IT-Onboard Training 2020



At Active Directory Users and Computers windows. Go to the left pane and select **TTA → Ship User**

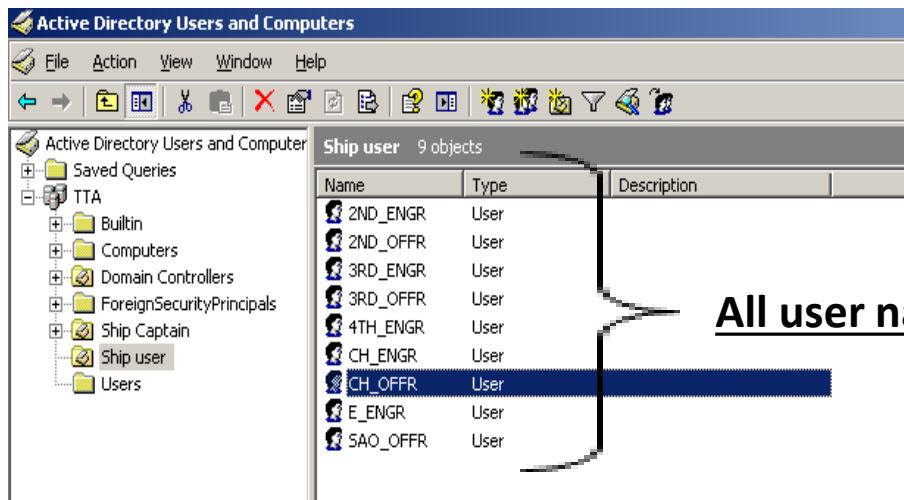


All user names in this system



IT-Onboard Training 2020



Select User name that you need to reset password. Right click and select **Reset Password**.

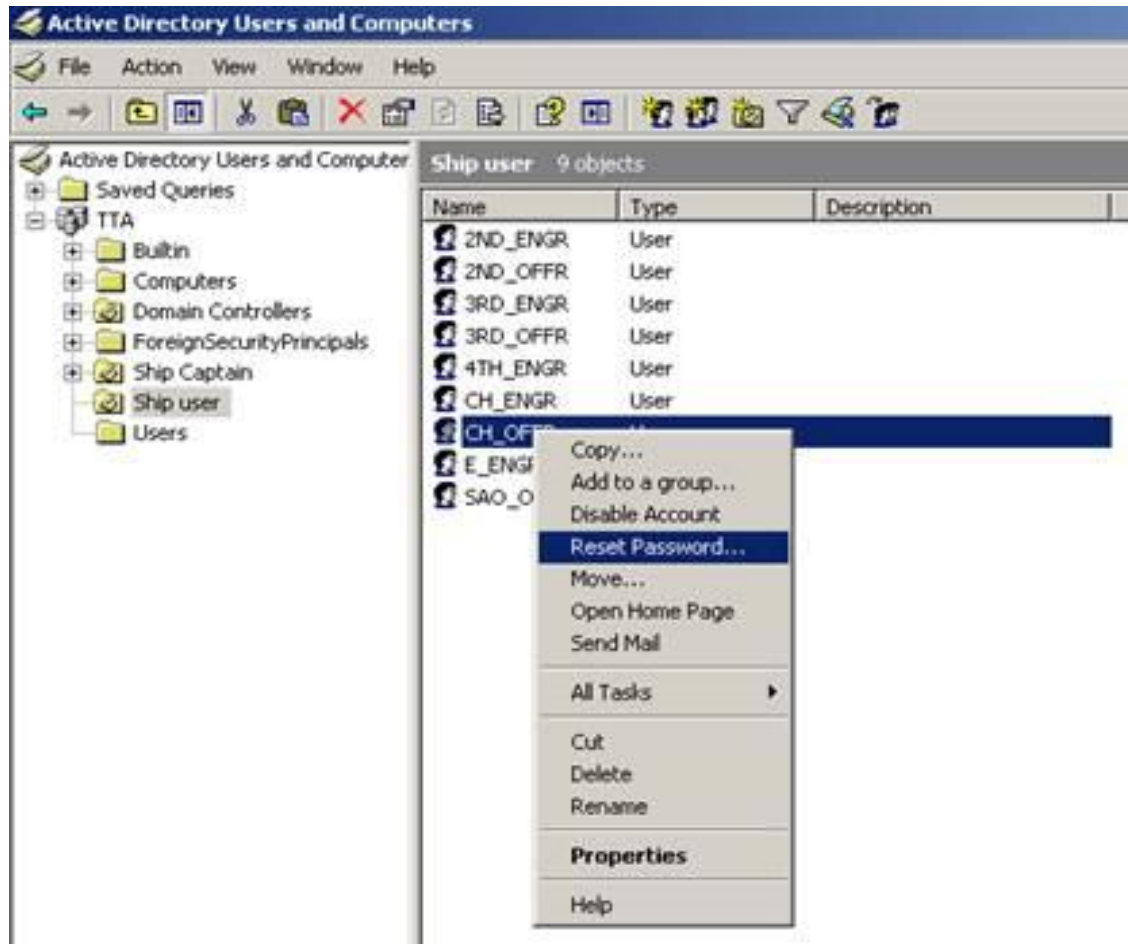



IT-Onboard Training 2020



Input new password, click **OK**.

Reset Password

New password:

Confirm password:

☐ User must change password at next logon

The user must logoff and then logon again for the change to take effect.

OK Cancel

After change password already. It will have popup **“The Password for has been changed.” Message**, click **OK** and exit from this window for finish resetting password. Try to Logon on Thinclient PC.




IT-Onboard Training 2020



Thinclient Setup

1. Power-on Thinclient and log-off profile “User”
2. Logon Thinclient by **User:** administrator / **Pw:** Administrator
3. Double click “HP Write Filter Configuration” and click to “General” Tab and choose to “Disable all Write Filters”

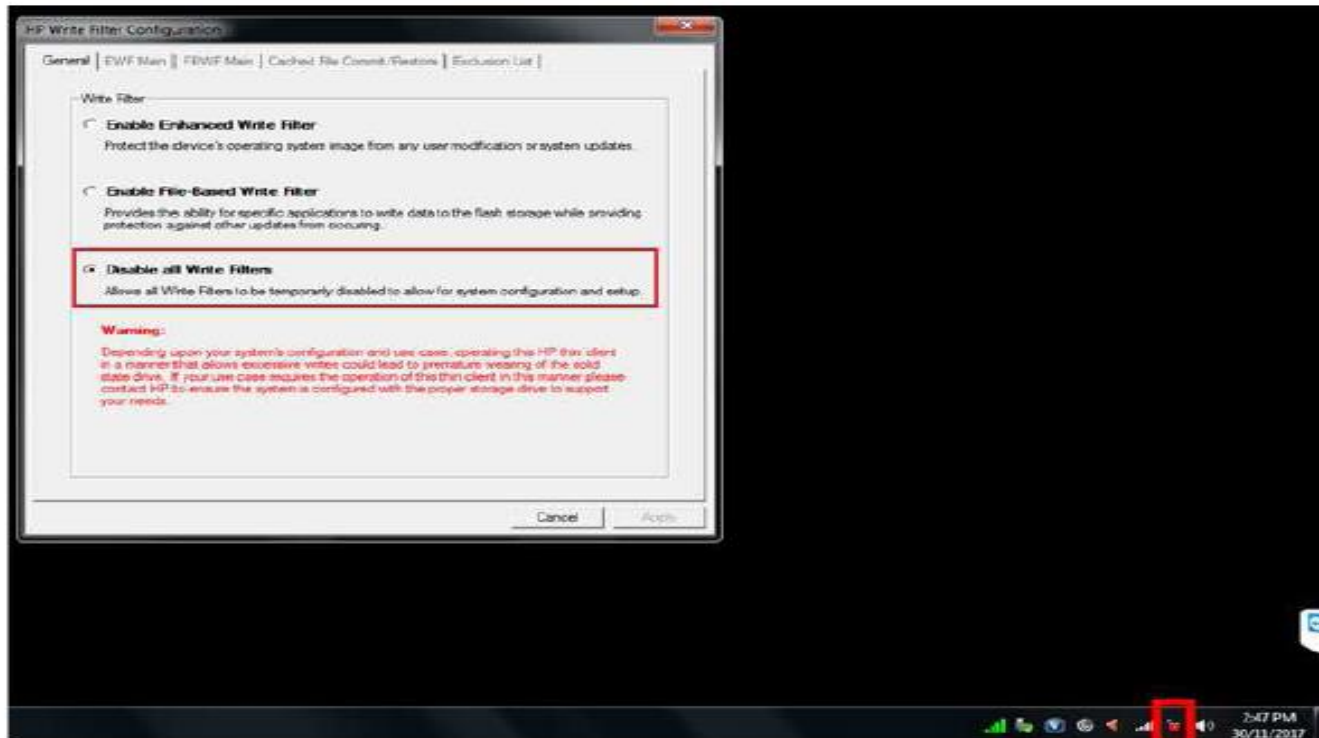




IT-Onboard Training 2020



4. Click to “Apply” and “Restart Now”
5. Thinclient will be automatic logon to “User”. Then please log-off profile “User”
6. Logon Thinclient by User: administrator / Pw: Administrator
7. Click to “Start” and Right Click on “Computer” and Choose to “Manage”

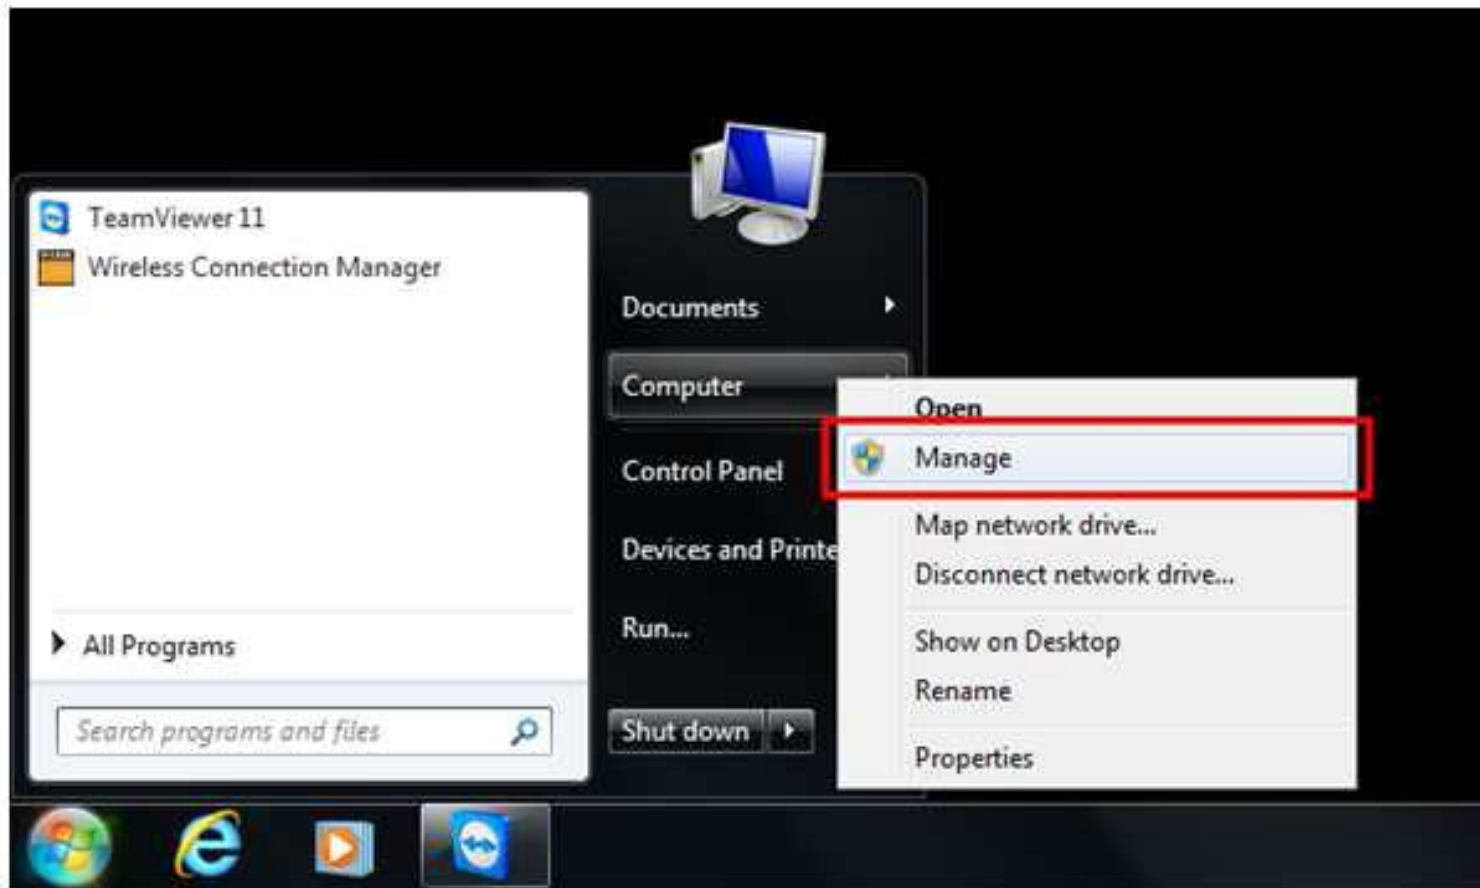




IT-Onboard Training 2020



8. Choose to “Local Users and Groups” and Select “Users”
9. Right click to “Administrator” and Select “Set Password” and click to *Proceed*

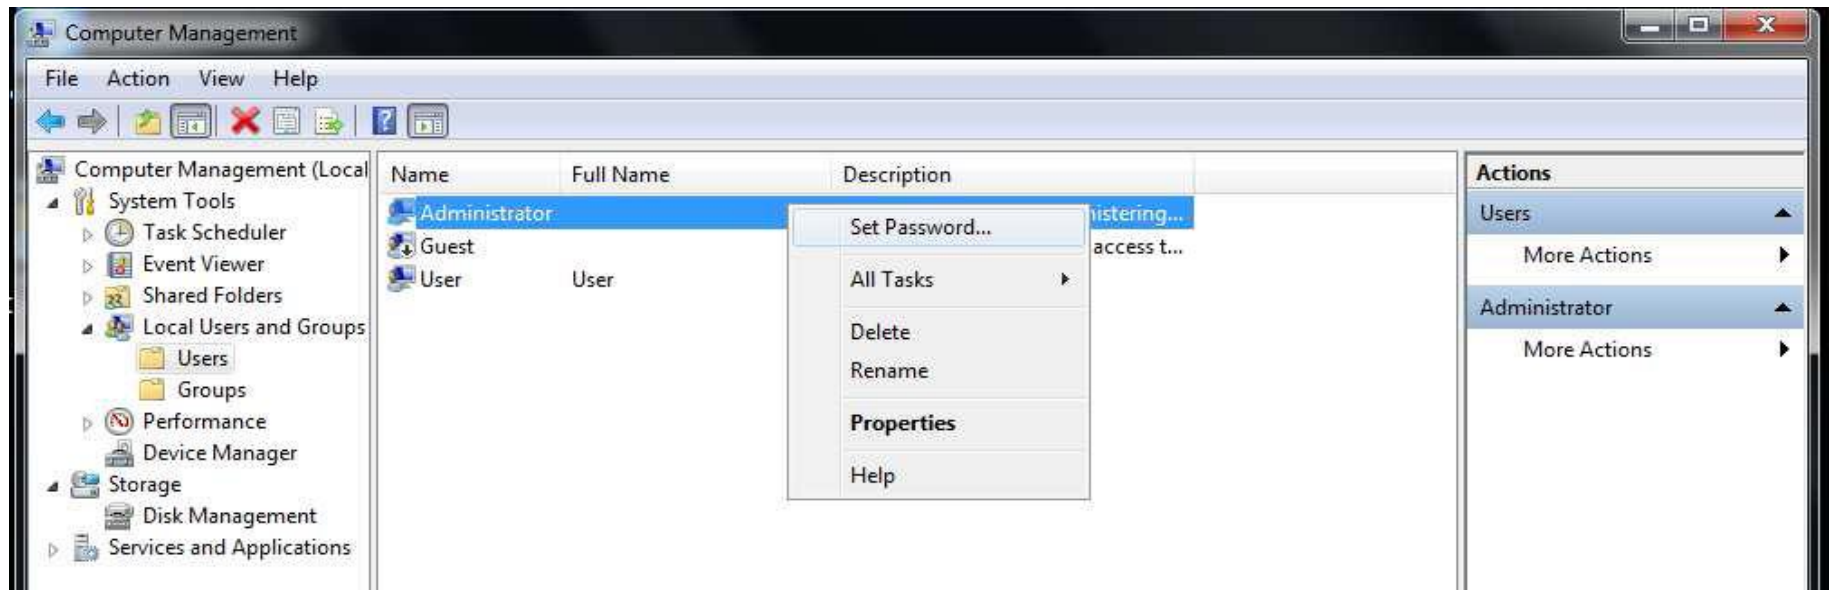




IT-Onboard Training 2020



10. Enter the NEW Password: *P@ssw0rd* [*** 0 = Zero]
11. Enter the Confirm Password: *P@ssw0rd* [*** 0 = Zero]
12. Click “OK” to done the Reset password.

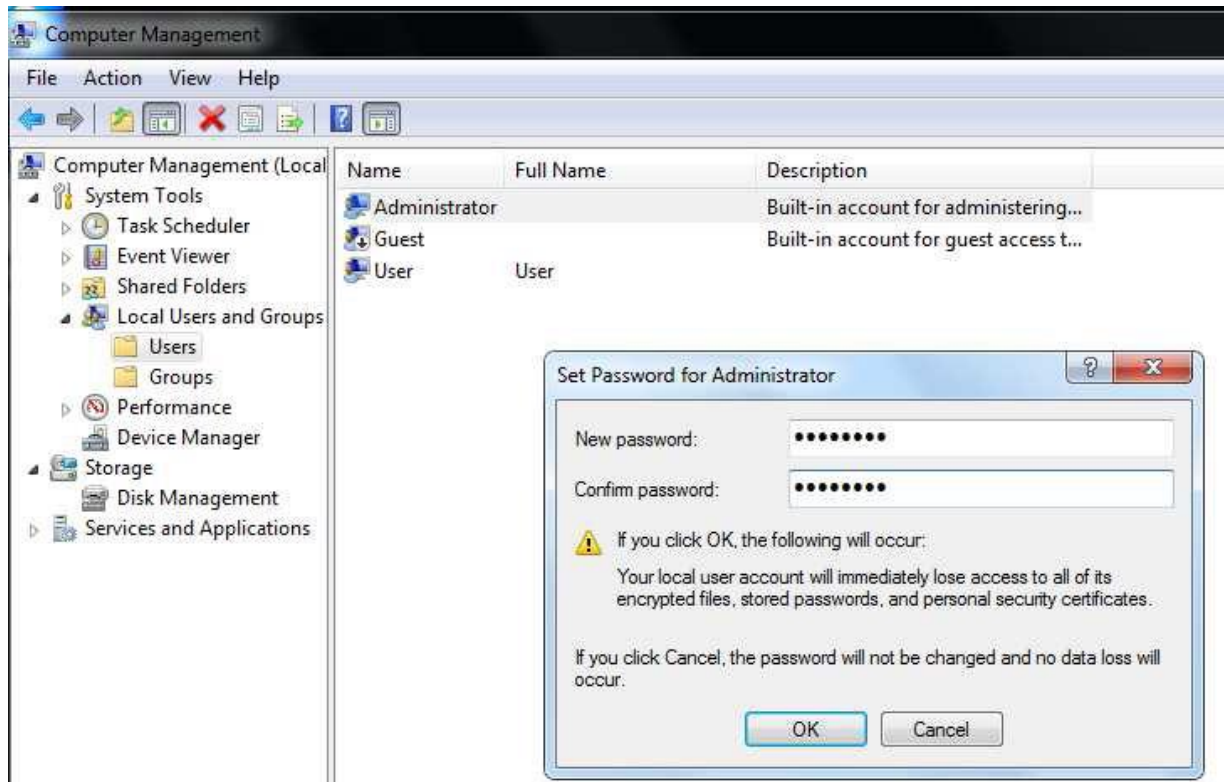




IT-Onboard Training 2020



13. Right click to “User” and choose to “Delete” and Click “Yes”

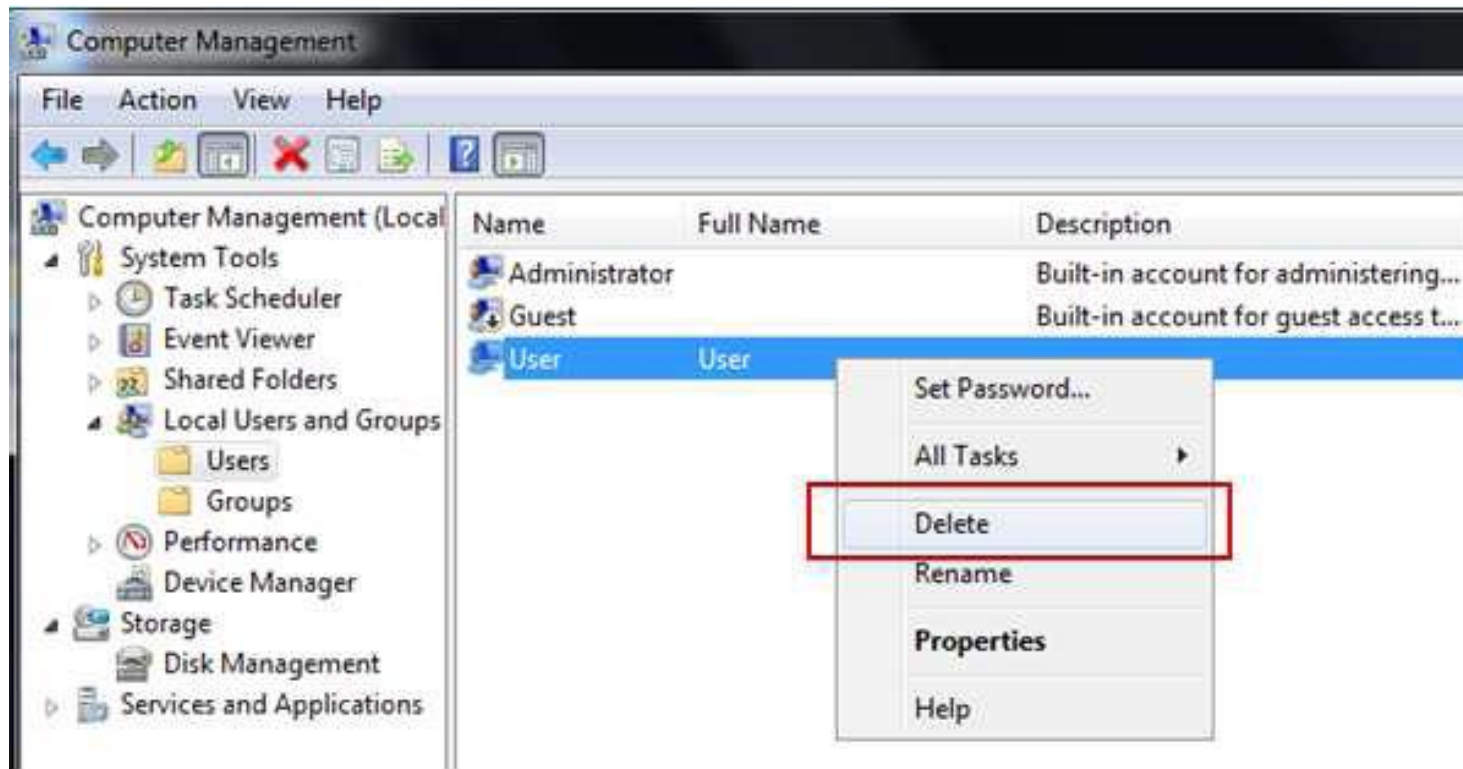



IT-Onboard Training 2020



The screenshot shows the Windows 'Computer Management' console. In the left-hand tree view, 'Local Users and Groups' is expanded, showing 'Users' and 'Groups'. The main pane displays a list of local users:

Name	Full Name	Description
Administrator		Built-in account for administering...
Guest		Built-in account for guest access t...
User	User	

A 'Local Users and Groups' dialog box is open in the foreground. It contains a yellow warning icon and the following text:

Each user account has a unique identifier in addition to their user name. Deleting a user account deletes this identifier and it cannot be restored, even if you create a new account with an identical user name. This can prevent the user from accessing resources they currently have permission to access.

Are you sure you want to delete the user User?


At the bottom right of the dialog, there are two buttons: 'Yes' and 'No'. The 'Yes' button is highlighted with a red rectangular box.



IT-Onboard Training 2020



14. Go to Start Right Click on “Computer” and choose to “Show on Desktop”

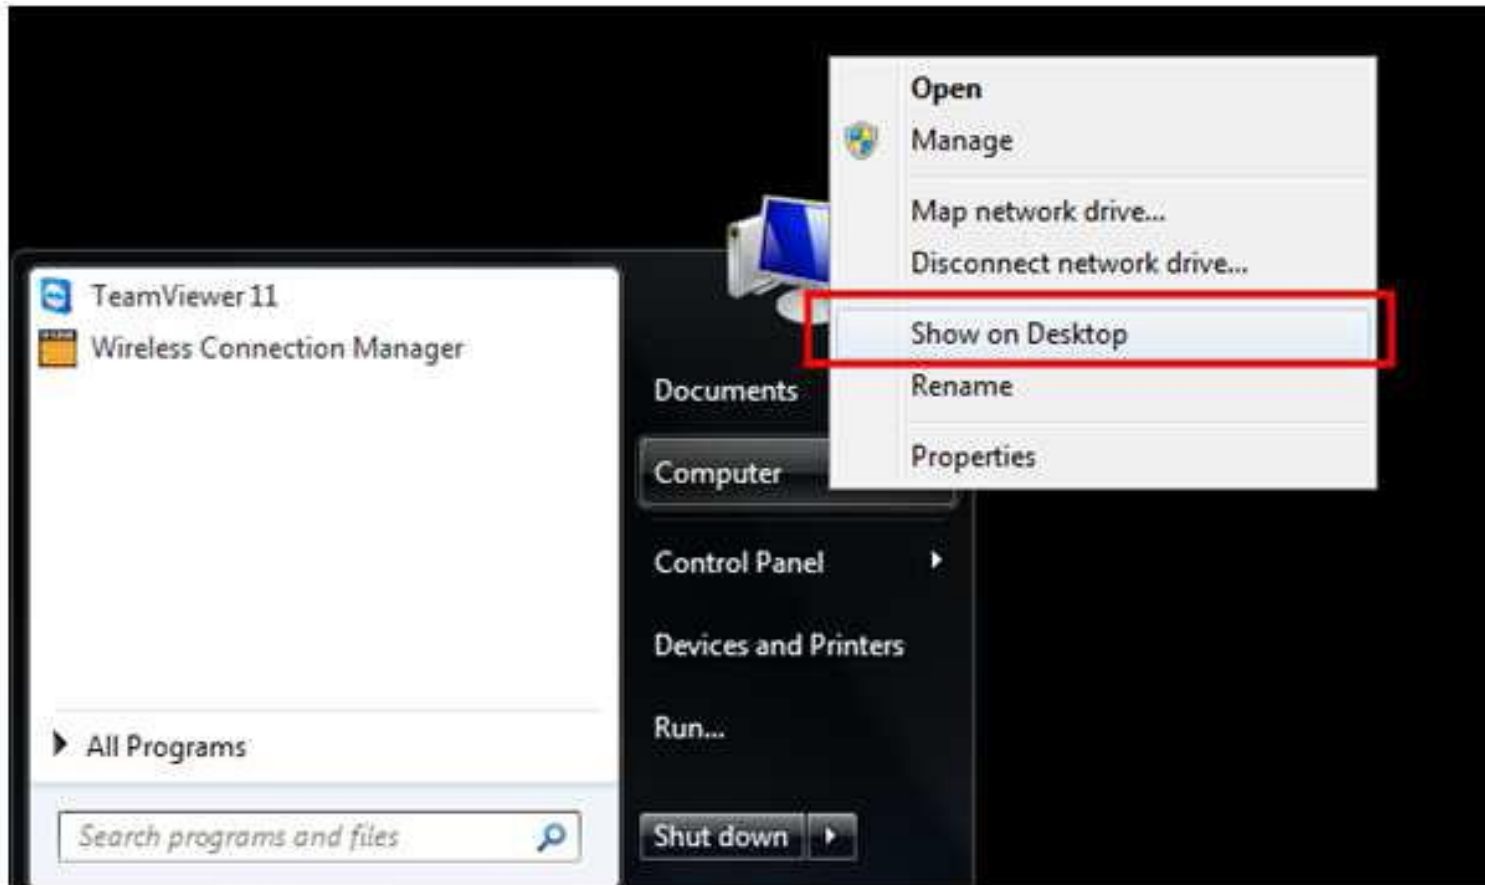



IT-Onboard Training 2020



15. Install Programs

15.1 D-Link Aircard

15.2 ESET Antivirus [Update Database
Signature / Licensing file]

15.3 TeamViewer_Setup [Lasted Version]

15.4 Adobe Acrobat 8 Professional


15.5 MS Office Enterprise 2007

15.6 Thai Dict V.7

15.7 Winrar 3.7

15.8 FSResizerSetup36

15.9 IPSignature

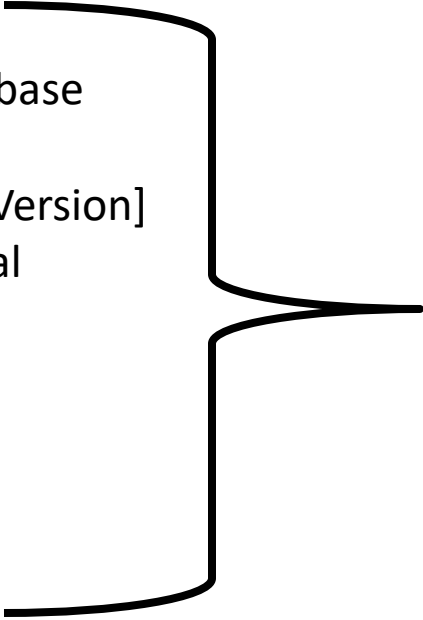

Y:\Software



IT-Onboard Training 2020



16. Right Click “Computer” and select “Properties”






IT-Onboard Training 2020



17. Go to “Computer Name” and “Change”

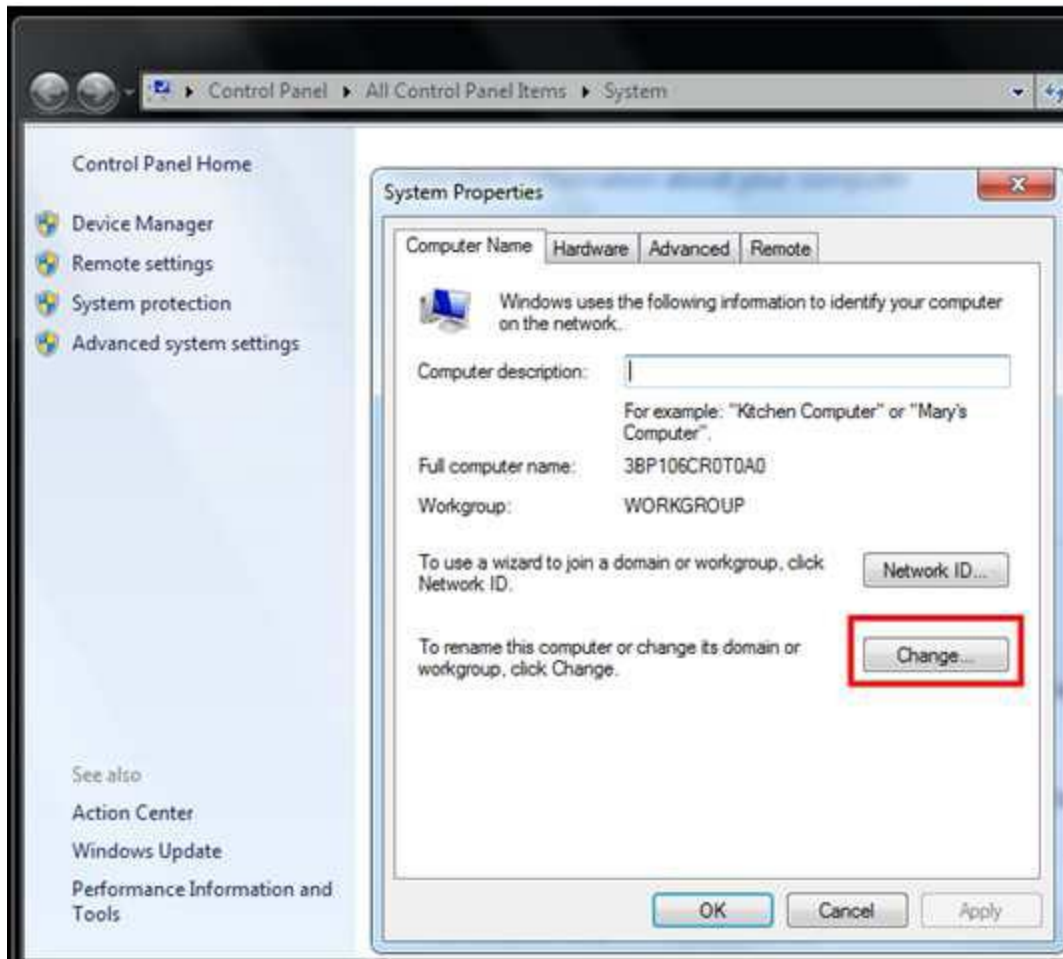



IT-Onboard Training 2020



18. Change the Computer Name to TXXX-CAPTAIN; TXXX-CE; TXXX-CO; TXXX-2E; TXXX-BR; TXXX-SHIPOFFICE01; TXXX-SHIPOFFICE02 and TXXX-ER

P.S. TXXX is the Example of Name Vessel Code.

19. Click “OK” and Restart Thinclient






IT-Onboard Training 2020



20. Logon Thinclient by User: administrator / Pw: Administrator

21. Start Control Panel and Network and Sharing Center.

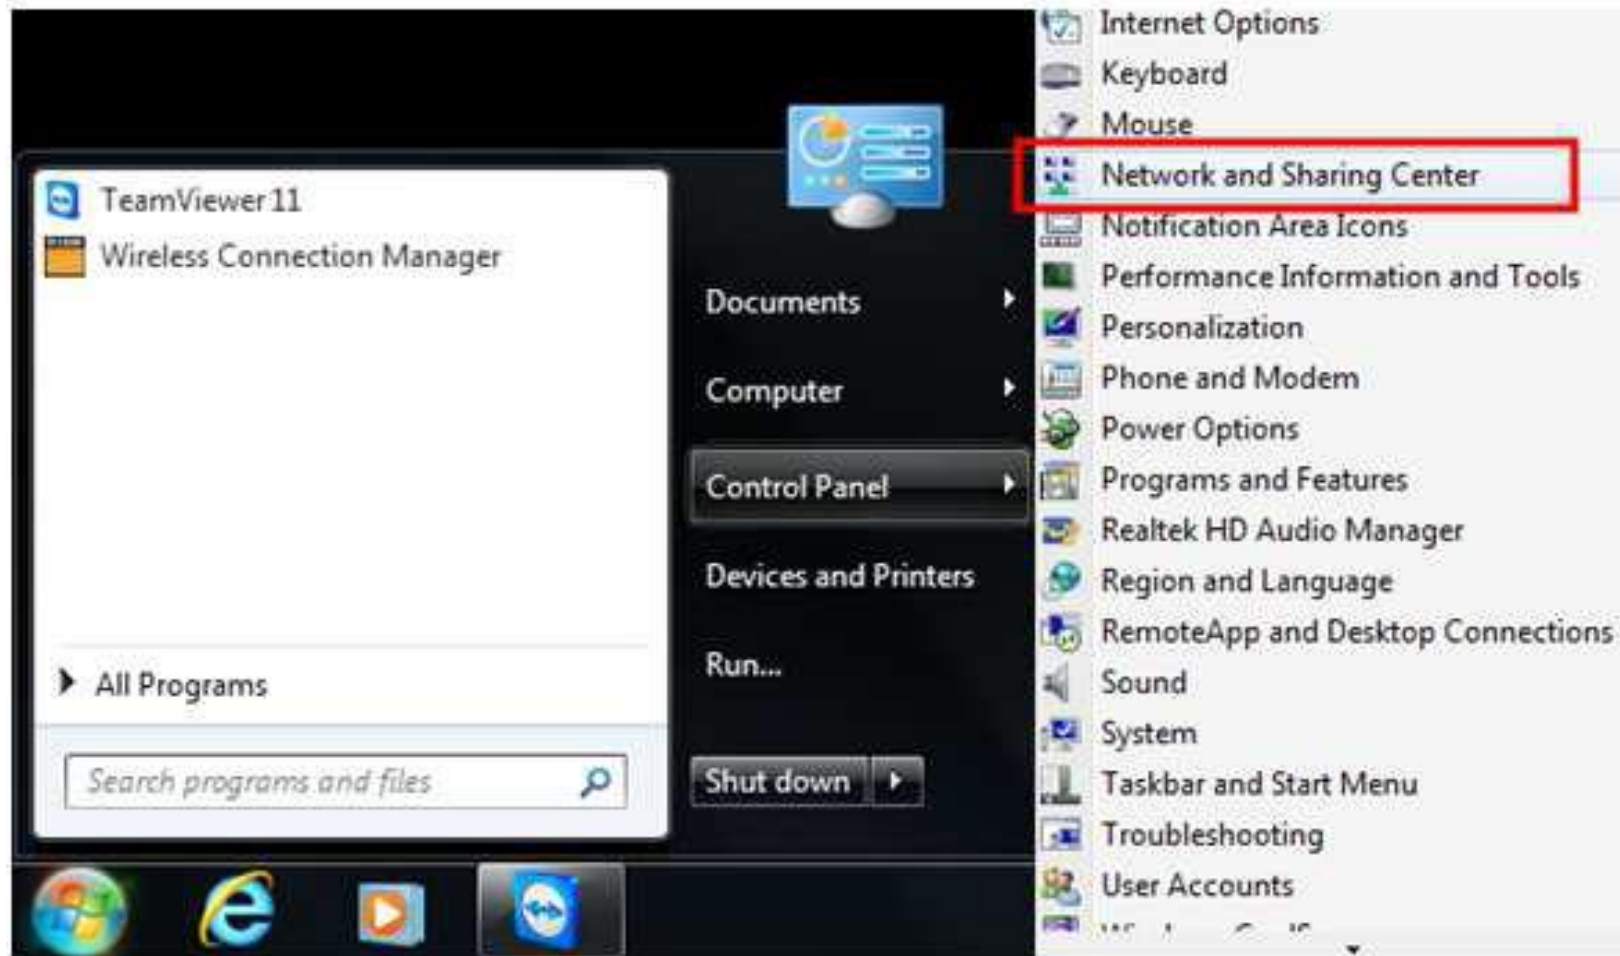




IT-Onboard Training 2020



22. Click to “Change adapter setting”

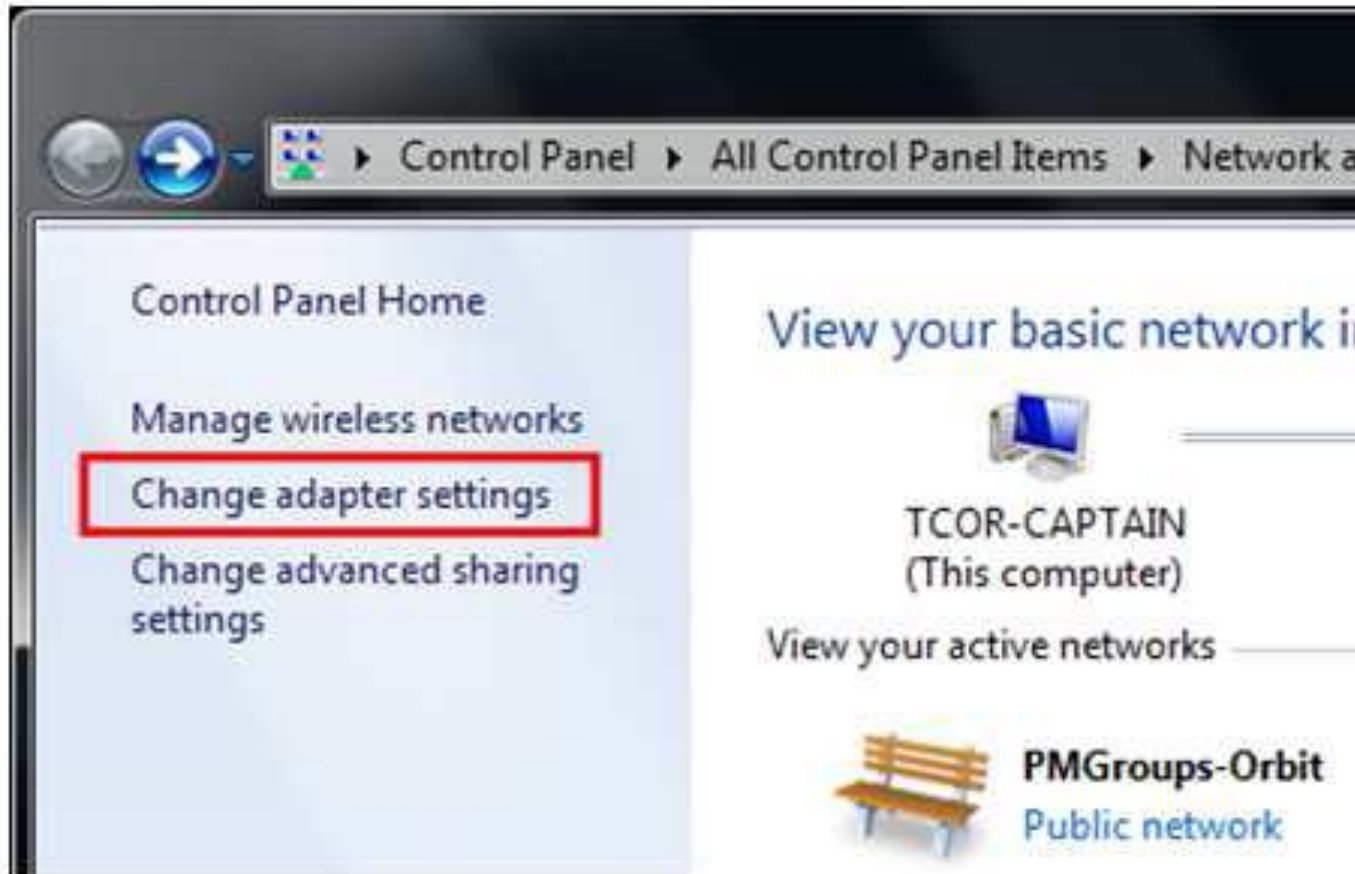




IT-Onboard Training 2020



23. Right Click to “Local Area Connection” and choose to “Properties”

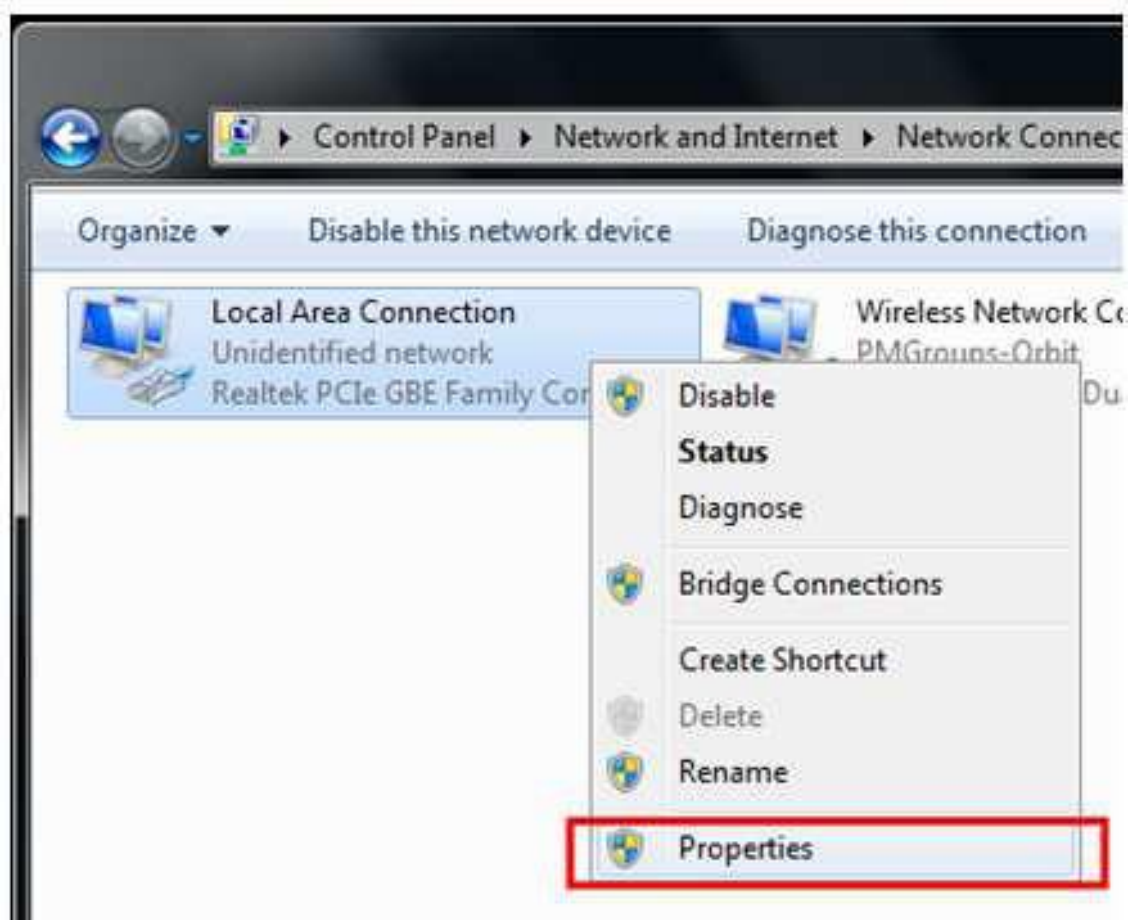




IT-Onboard Training 2020



24. Highlight “Internet Protocol Version4 [TCP/IPv4]” and Click to “Properties”

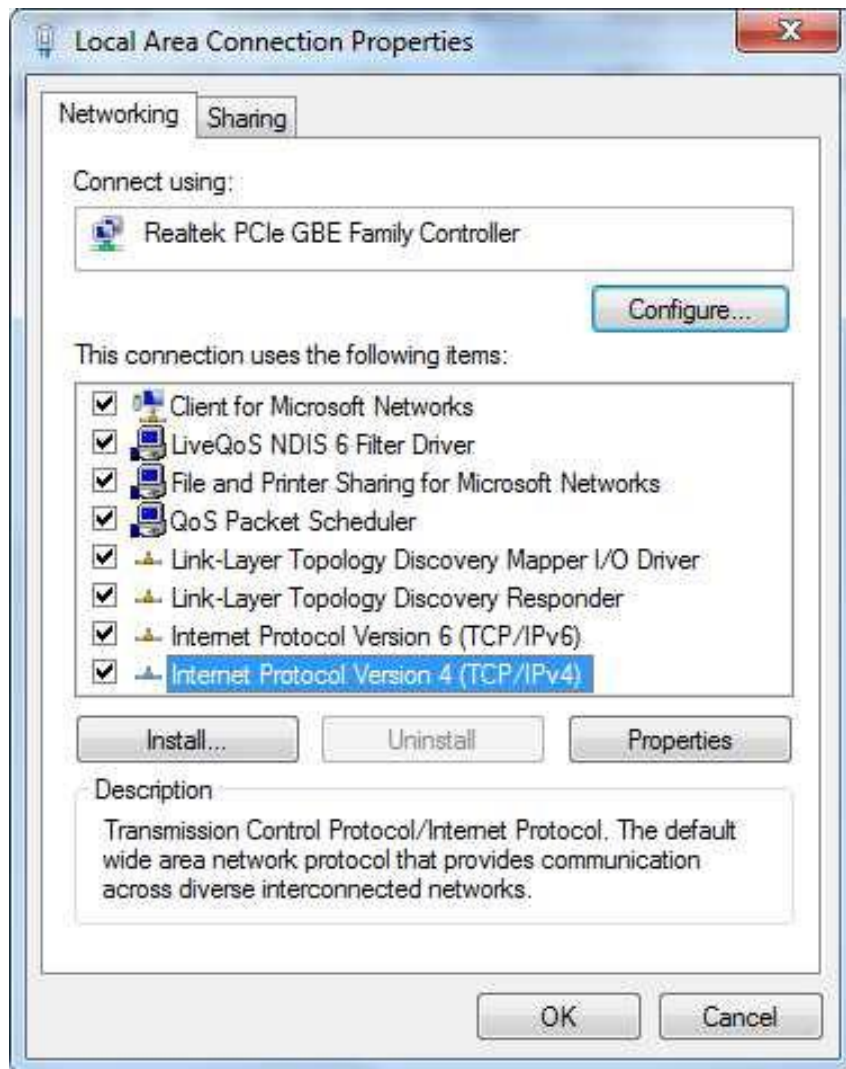



IT-Onboard Training 2020



25. Enter the IP Address as following.

25.1 TXXX-CAPTAIN: 10.200.1.11

- Set up profile : CAPTAIN

25.2 TXXX-CE: 10.200.1.12

- Set up profile : CAPTAIN, CH_ENGR

25.3 TXXX-CO: 10.200.1.13

- Set up profile : CAPTAIN, CH_OFFR

25.4 TXXX-2E: 10.200.1.14

- Set up profile : CAPTAIN, 2ND_ENGR

25.5 TXXX-SHIPOFFICE01: 10.200.1.15

- Set up profile : CAPTAIN, CH_ENGR, CH_OFFR, 2ND_OFFR, 3RD_OFFR, 2ND_ENGR, 3RD_ENGR, 4TH_ENGR, E_ENGR

25.6 TXXX-SHIPOFFICE02: 10.200.1.16

- Set up profile : CAPTAIN, CH_ENGR, CH_OFFR, 2ND_OFFR, 3RD_OFFR, 2ND_ENGR, 3RD_ENGR, 4TH_ENGR, E_ENGR

25.7 TXXX-BR: 10.200.1.17

- Set up profile : CAPTAIN, CH_OFFR, 2ND_OFFR, 3RD_OFFR

25.8 TXXX-ER: 10.200.1.18

- Set up profile : CAPTAIN, CH_ENGR, 2ND_ENGR, 3RD_ENGR, 4TH_ENGR, E_ENGR,



IT-Onboard Training 2020



Subnet mask: **255.255.255.0**

Default gateway: **10.200.1.200** [for Speedcast]

Default gateway: **10.200.1.100** [for Satcom]

Preferred DNS server: **10.200.1.1**

Add Click “OK”

Internet Protocol Version 4 (TCP/IPv4) Properties

General

You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.

☐ Obtain an IP address automatically

☒ Use the following IP address:

IP address: 10 . 200 . 1 . 11

Subnet mask: 255 . 255 . 255 . 0

Default gateway: 10 . 200 . 1 . 200

☐ Obtain DNS server address automatically

☒ Use the following DNS server addresses:

Preferred DNS server: 10 . 200 . 1 . 1

Alternate DNS server: | . . .

☐ Validate settings upon exit

Advanced...

OK Cancel



IT-Onboard Training 2020



26. Right Click “Computer” and select “Properties”
27. Click to “Advanced system settings”
28. Go to “Computer Name” Tab and click to “Change”
29. Select “Domain” Enter “TTA” and Click to “OK”

Computer Name/Domain Changes

You can change the name and the membership of this computer. Changes might affect access to network resources.
[More information](#)

Computer name:
TXXX-CAPTAIN

Full computer name:
TXXX-CAPTAIN

More...

Member of

☒ Domain:
TTA

☐ Workgroup:
WORKGROUP

OK Cancel



IT-Onboard Training 2020



30. Enter the ID: administrator and Password: P@ssw0rd and Click to “OK”

The screenshot shows a Windows Security dialog box titled "Computer Name/Domain Changes". The text inside reads: "Enter the name and password of an account with permission to join the domain." Below this text is a light blue rectangular area containing a small computer icon on the left. To the right of the icon are two text input fields. The first field contains the text "administrator". The second field contains a series of dots, representing a password. Below these fields, the text "Domain: TTA" is displayed. At the bottom right of the dialog box are two buttons: "OK" and "Cancel".




IT-Onboard Training 2020



31. Click to “OK”



32. Click to “OK” and then Restart the Thinclient PC.

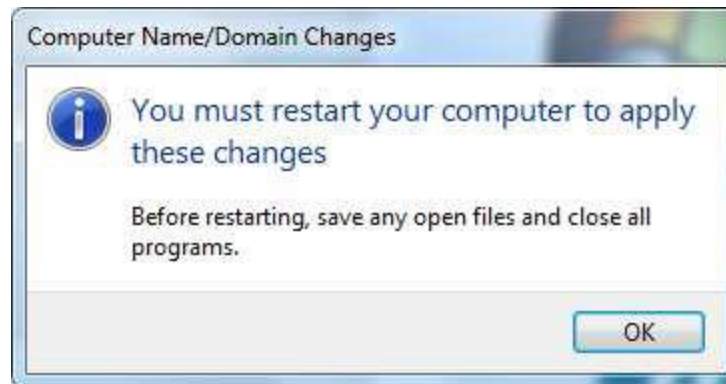



IT-Onboard Training 2020



33. Click to “Switch User” and Click to “Other User”





IT-Onboard Training 2020



34. Logon by ID: Captain and Password: 12345 For All Thin clients.






IT-Onboard Training 2020



35. Click to “Start” Right Click on “Computer” and choose to “Show on Desktop”

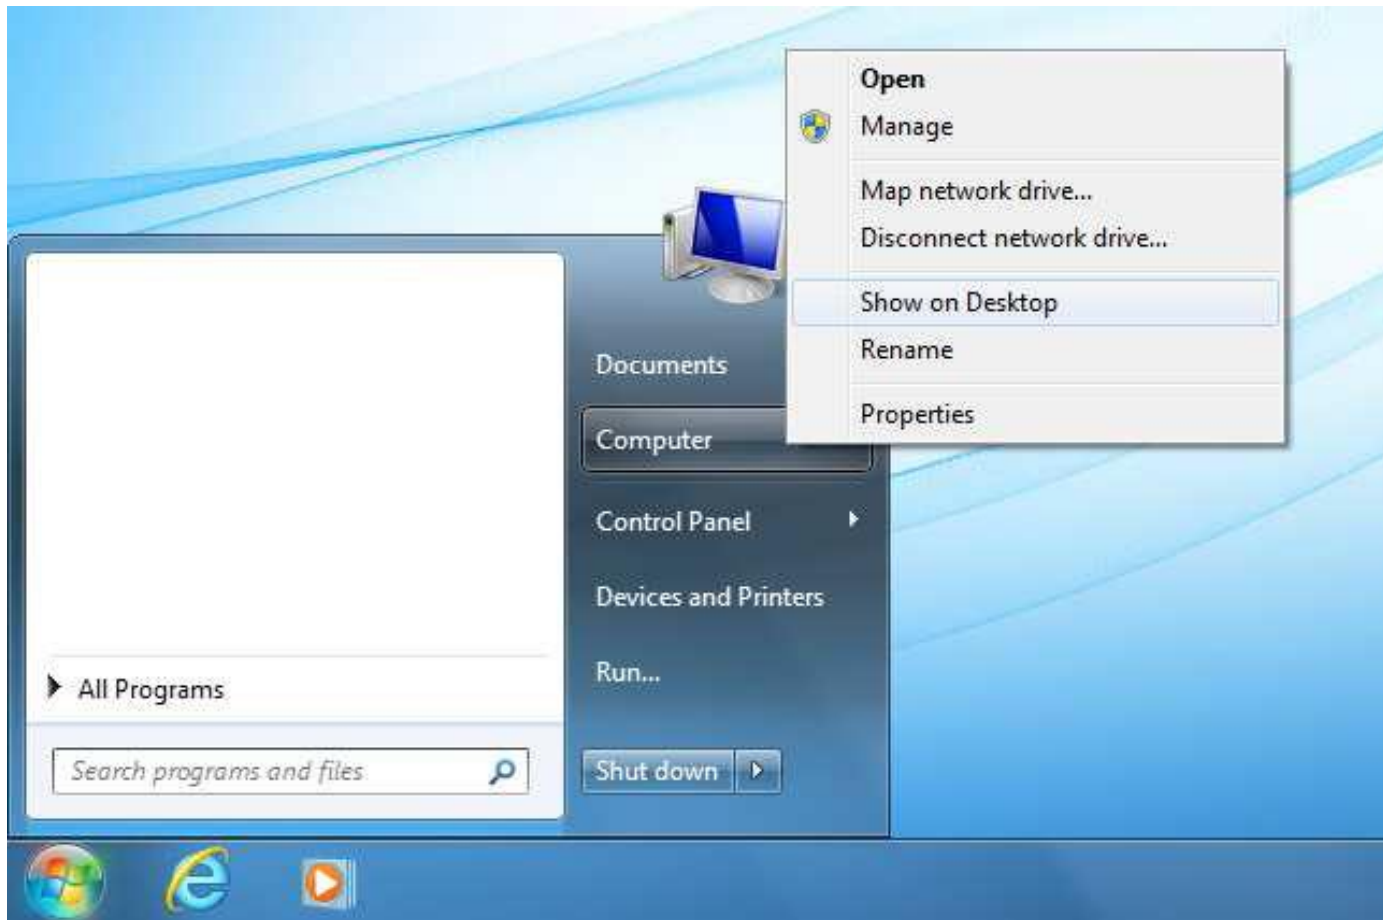




IT-Onboard Training 2020



36. Open “Computer” icon and go to C:\Windows\Users\Captain

37. Right click to “Desktop” and “Properties”


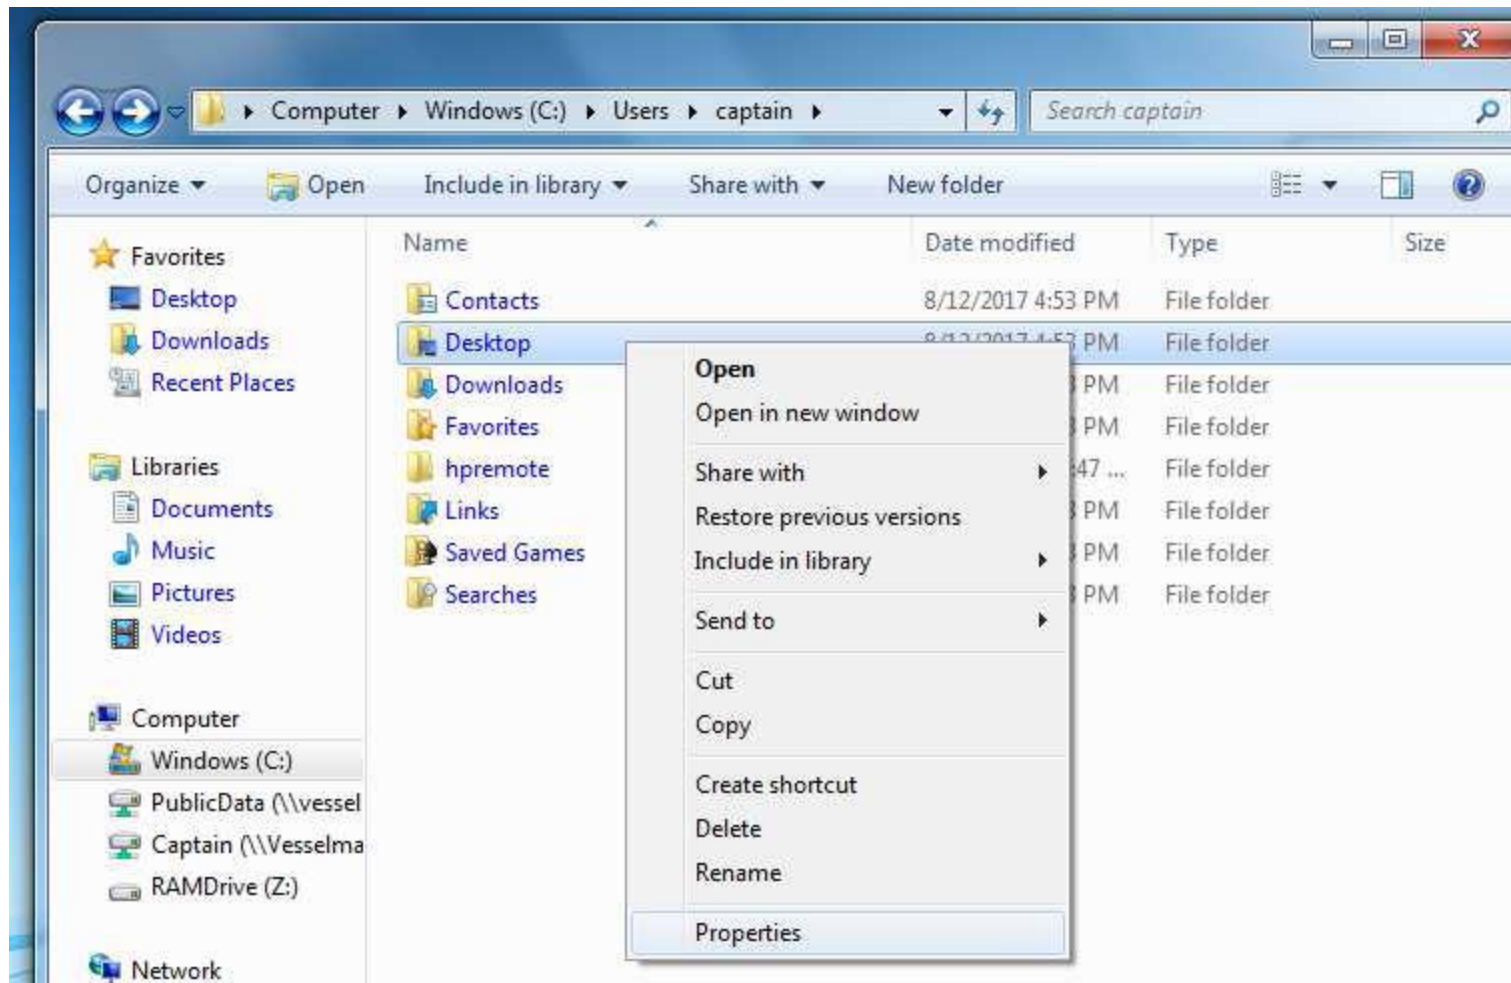




IT-Onboard Training 2020



38. On “Desktop Properties” please go to “Location” Tab and change the Target location to “T:\Desktop” and Click to “OK” and “YES” in Move Folder and DONE.

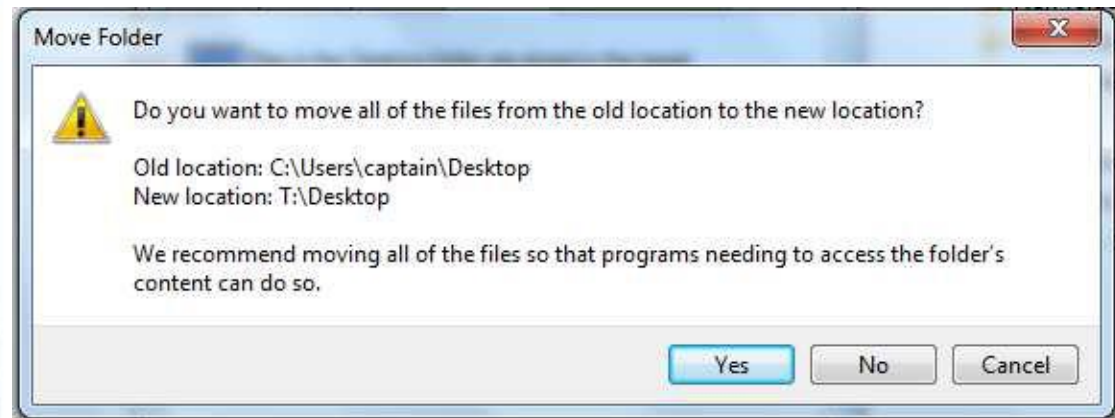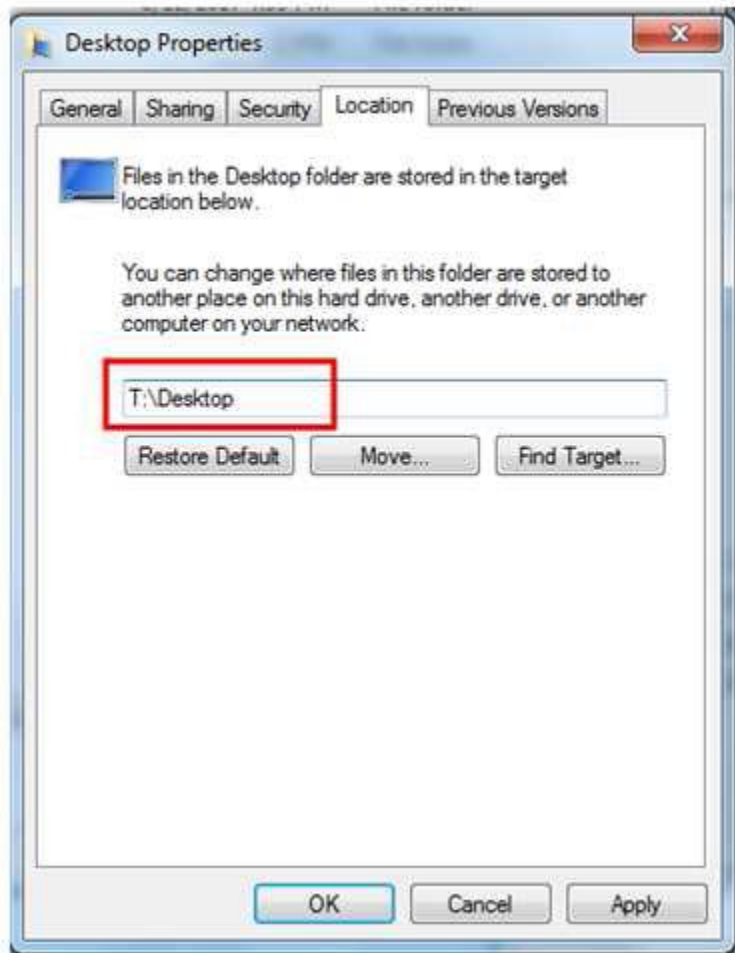





IT-Onboard Training 2020



Vmware: How to Restart\ Power-off the MainServer

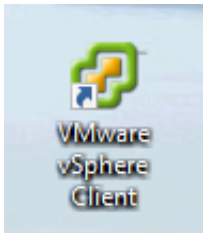

1. Open VMWare
2. Logon VMWare Vspere
Client IP: 10.200.1.201
User: root
Password: P@sswOrd

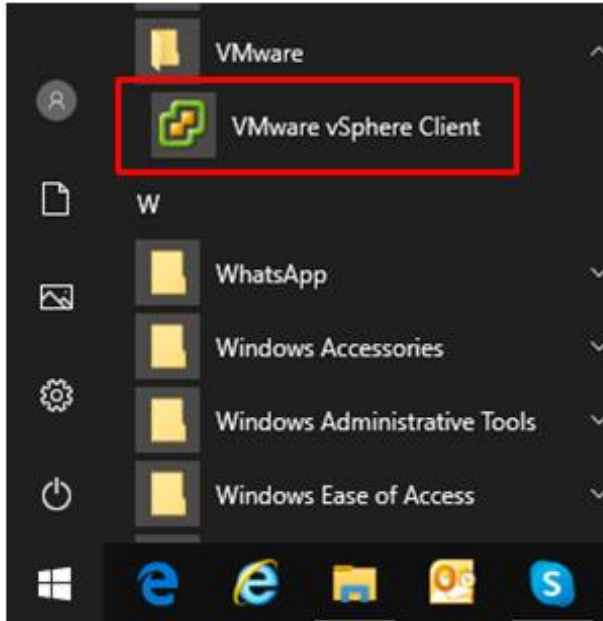

VMware vSphere Client

vmware

VMware vSphere™ Client

All vSphere features introduced in vSphere 5.5 and beyond are available only through the vSphere Web Client. The traditional vSphere Client will continue to operate, supporting the same feature set as vSphere 5.0.

To directly manage a single host, enter the IP address or host name.
To manage multiple hosts, enter the IP address or name of a vCenter Server.

IP address / Name: 10.200.1.201

User name: root

Password: *****

☐ Use Windows session credentials

Login Close




IT-Onboard Training 2020



Incase to Power Mainserver

1. Right click on 10.200.1.201 and click to “Shut Down”

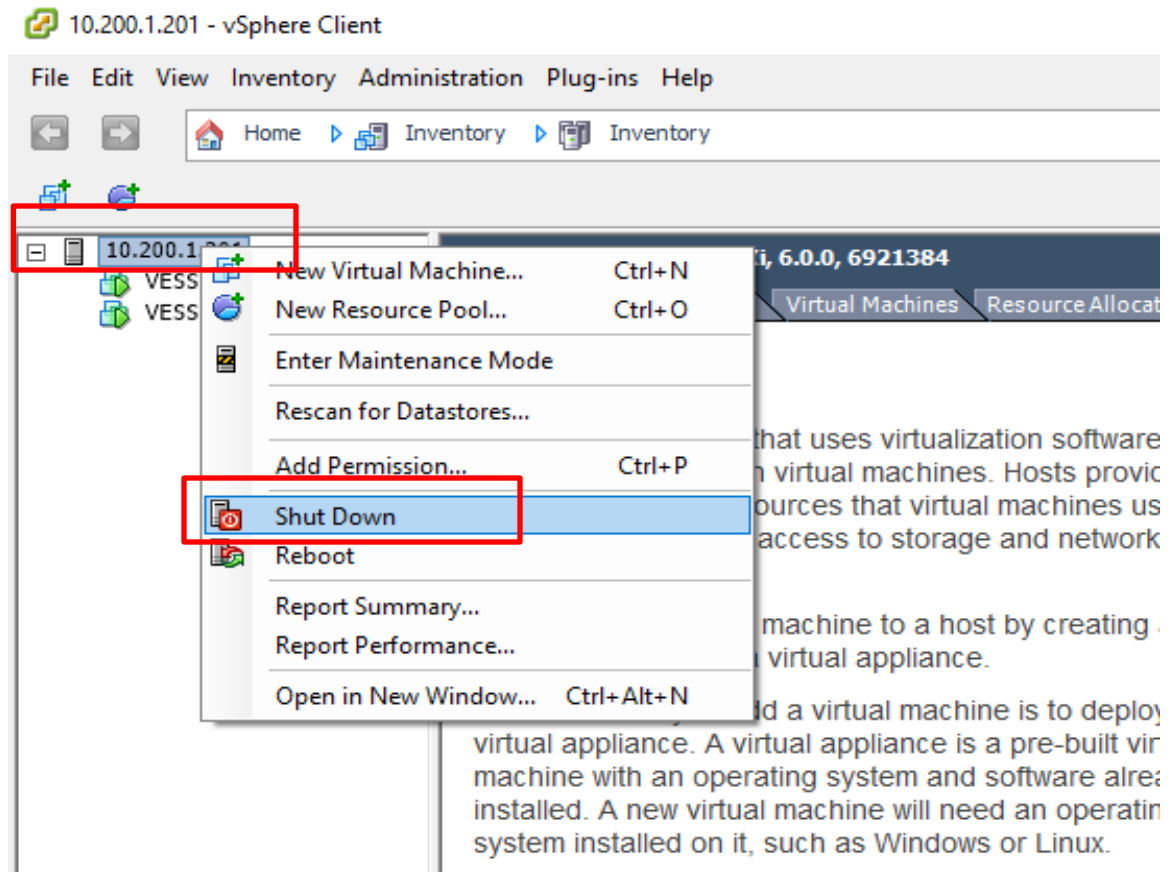




IT-Onboard Training 2020



Restart VESSELMASTER_AD

1. Right click on VESSELMASTER_AD and Restart Guest

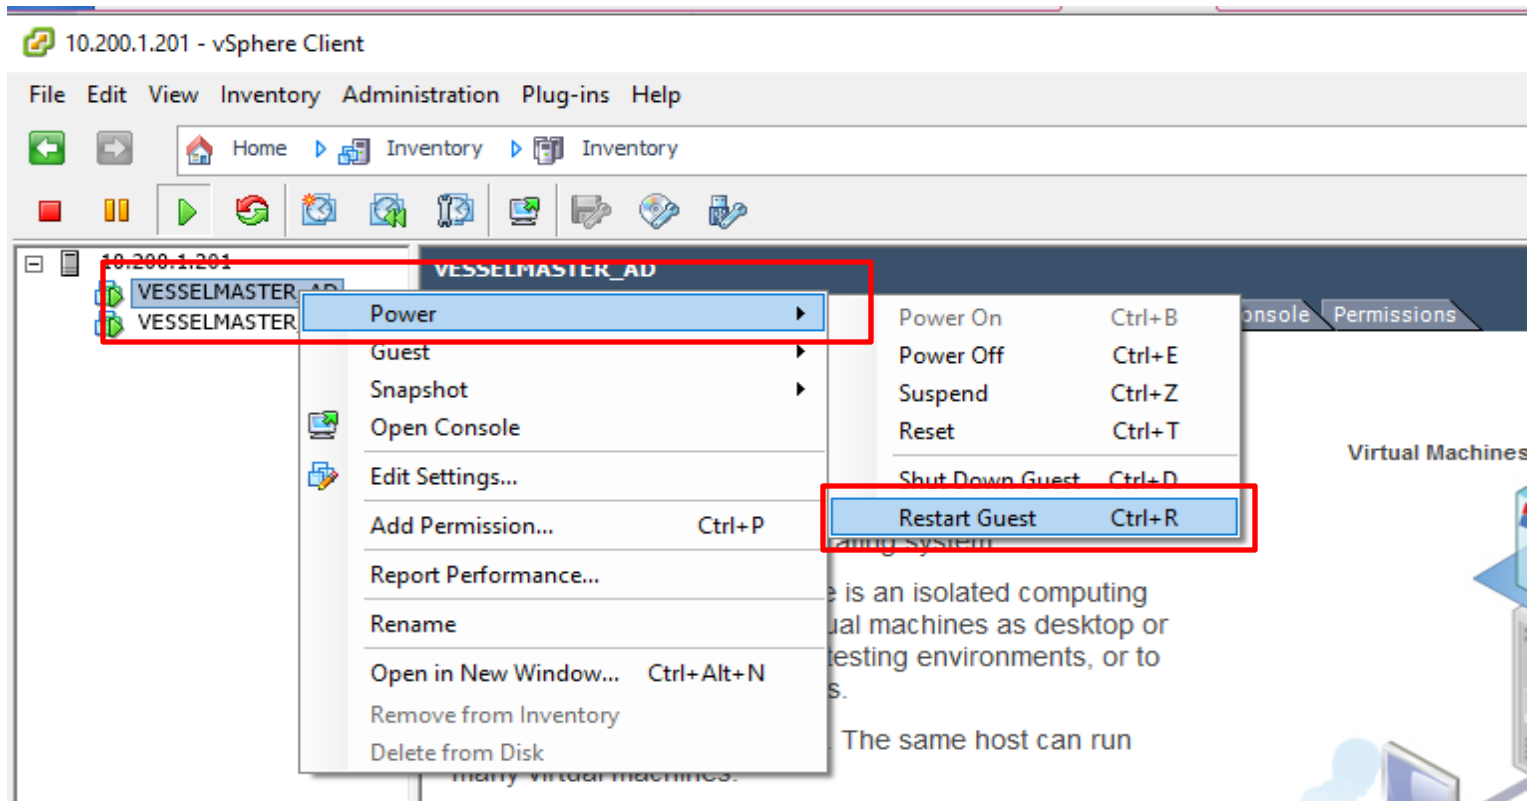




IT-Onboard Training 2020



Restart VESSELMASTER_APP

1. Right click on VESSELMASTER_APP and Restart Guest

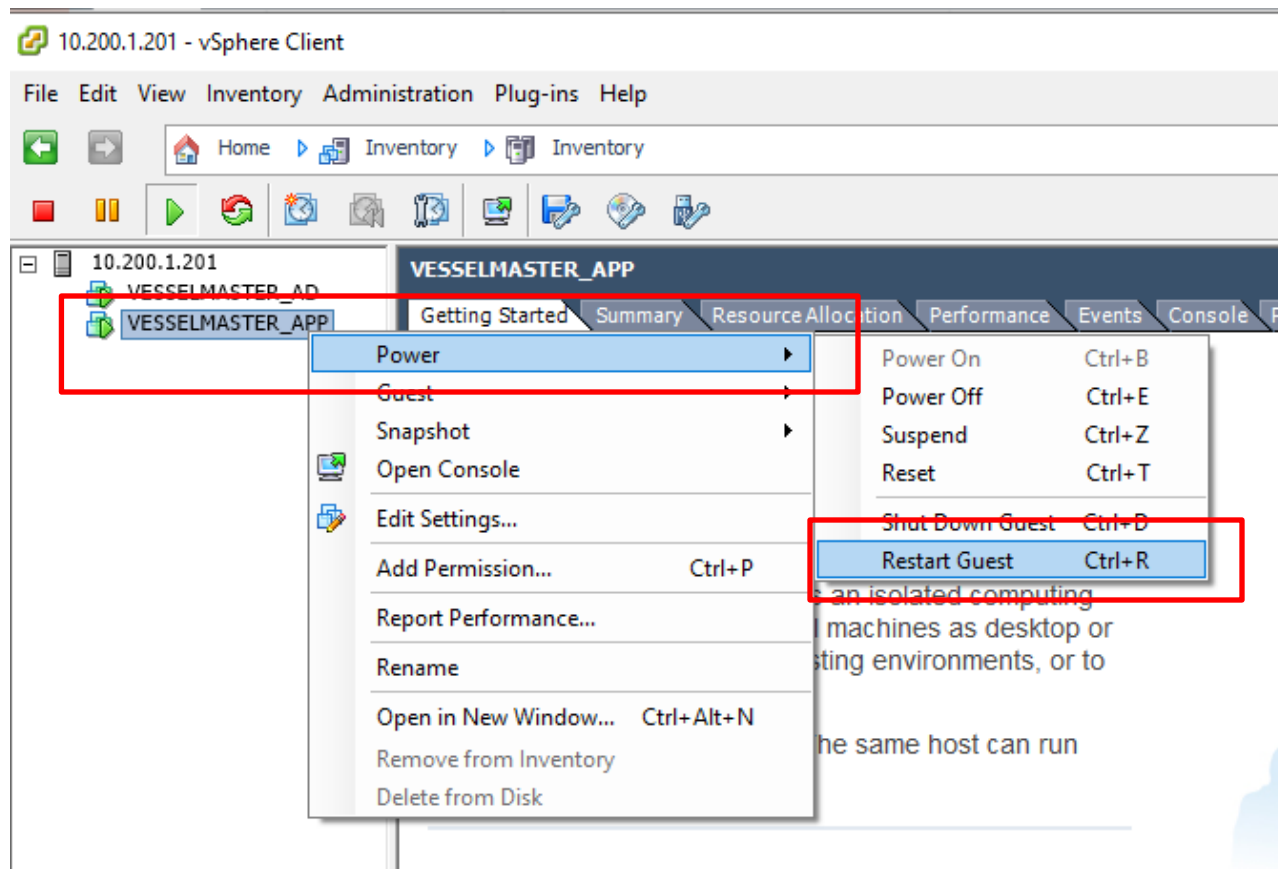




IT-Onboard Training 2020




Open windows screen VESSELMASTER_AD

1. Right click on VESSELMASTER_AD and Open Console

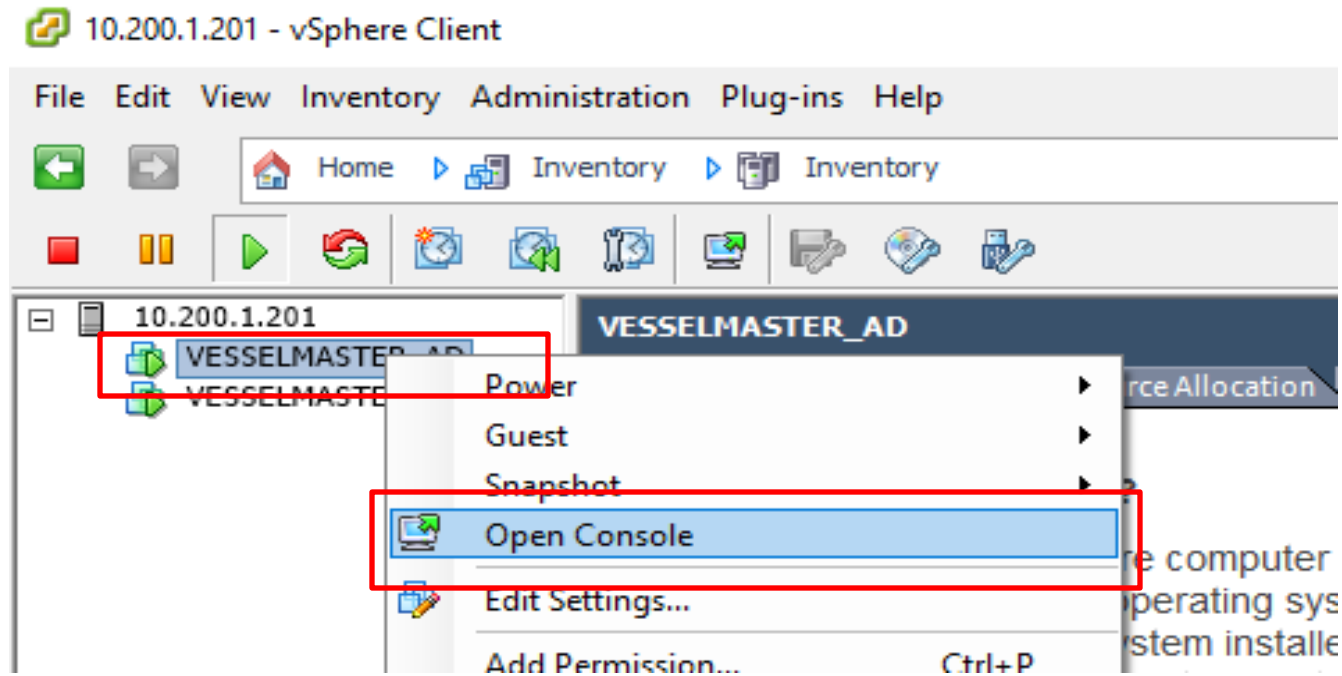



IT-Onboard Training 2020

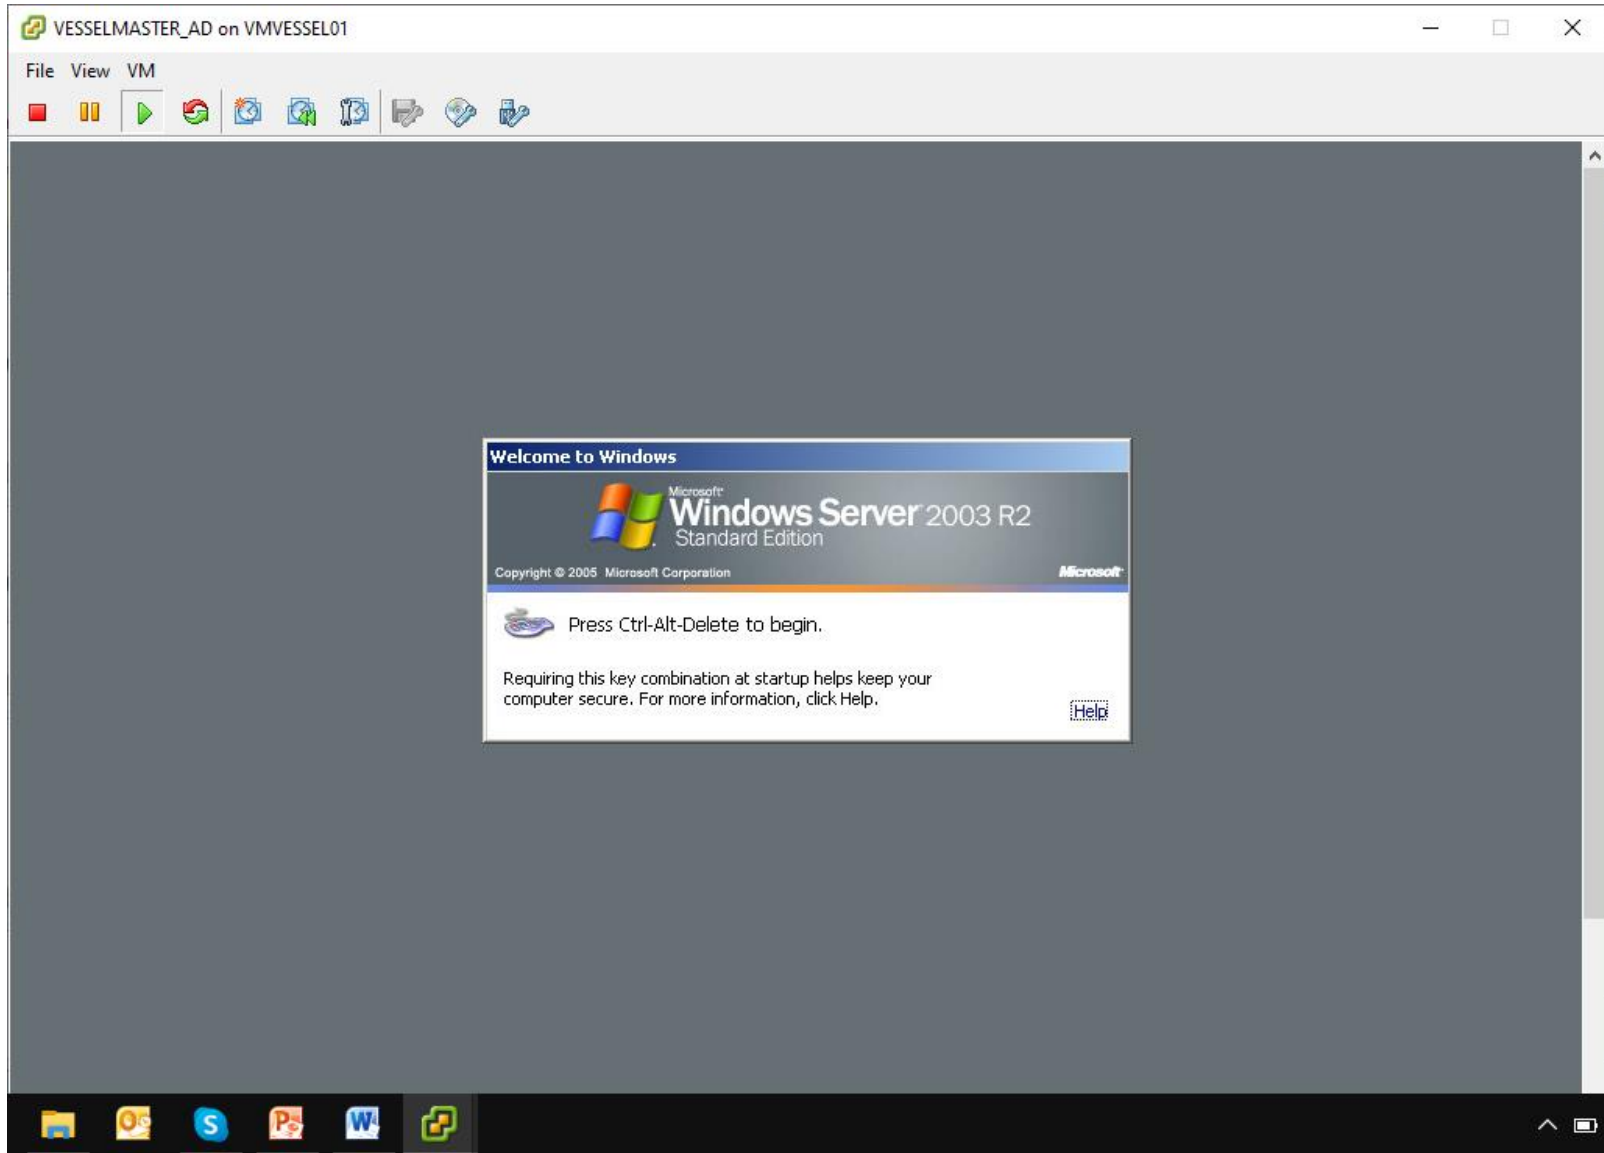




IT-Onboard Training 2020




Open windows screen VESSELMASTER_APP

1. Right click on VESSELMASTER_APP and Open Console

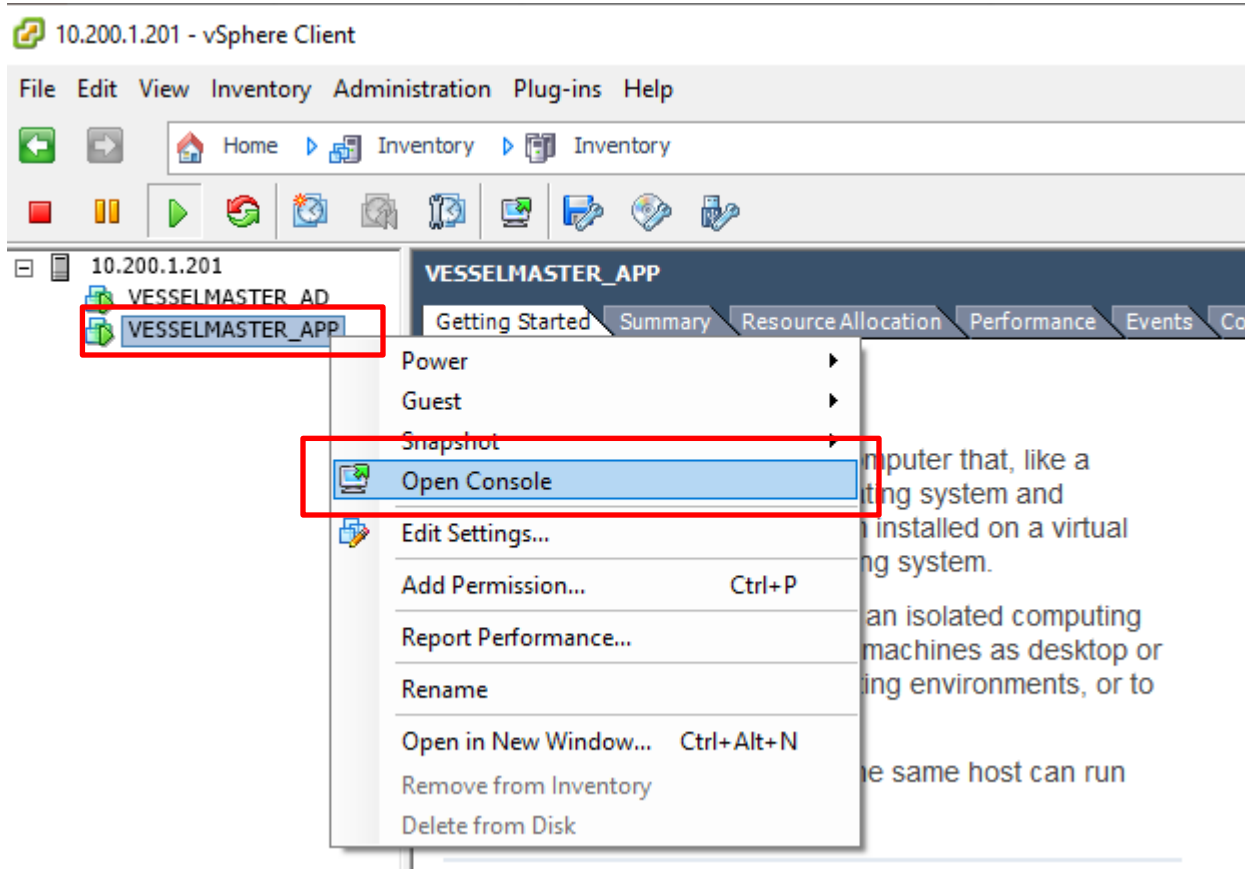



IT-Onboard Training 2020

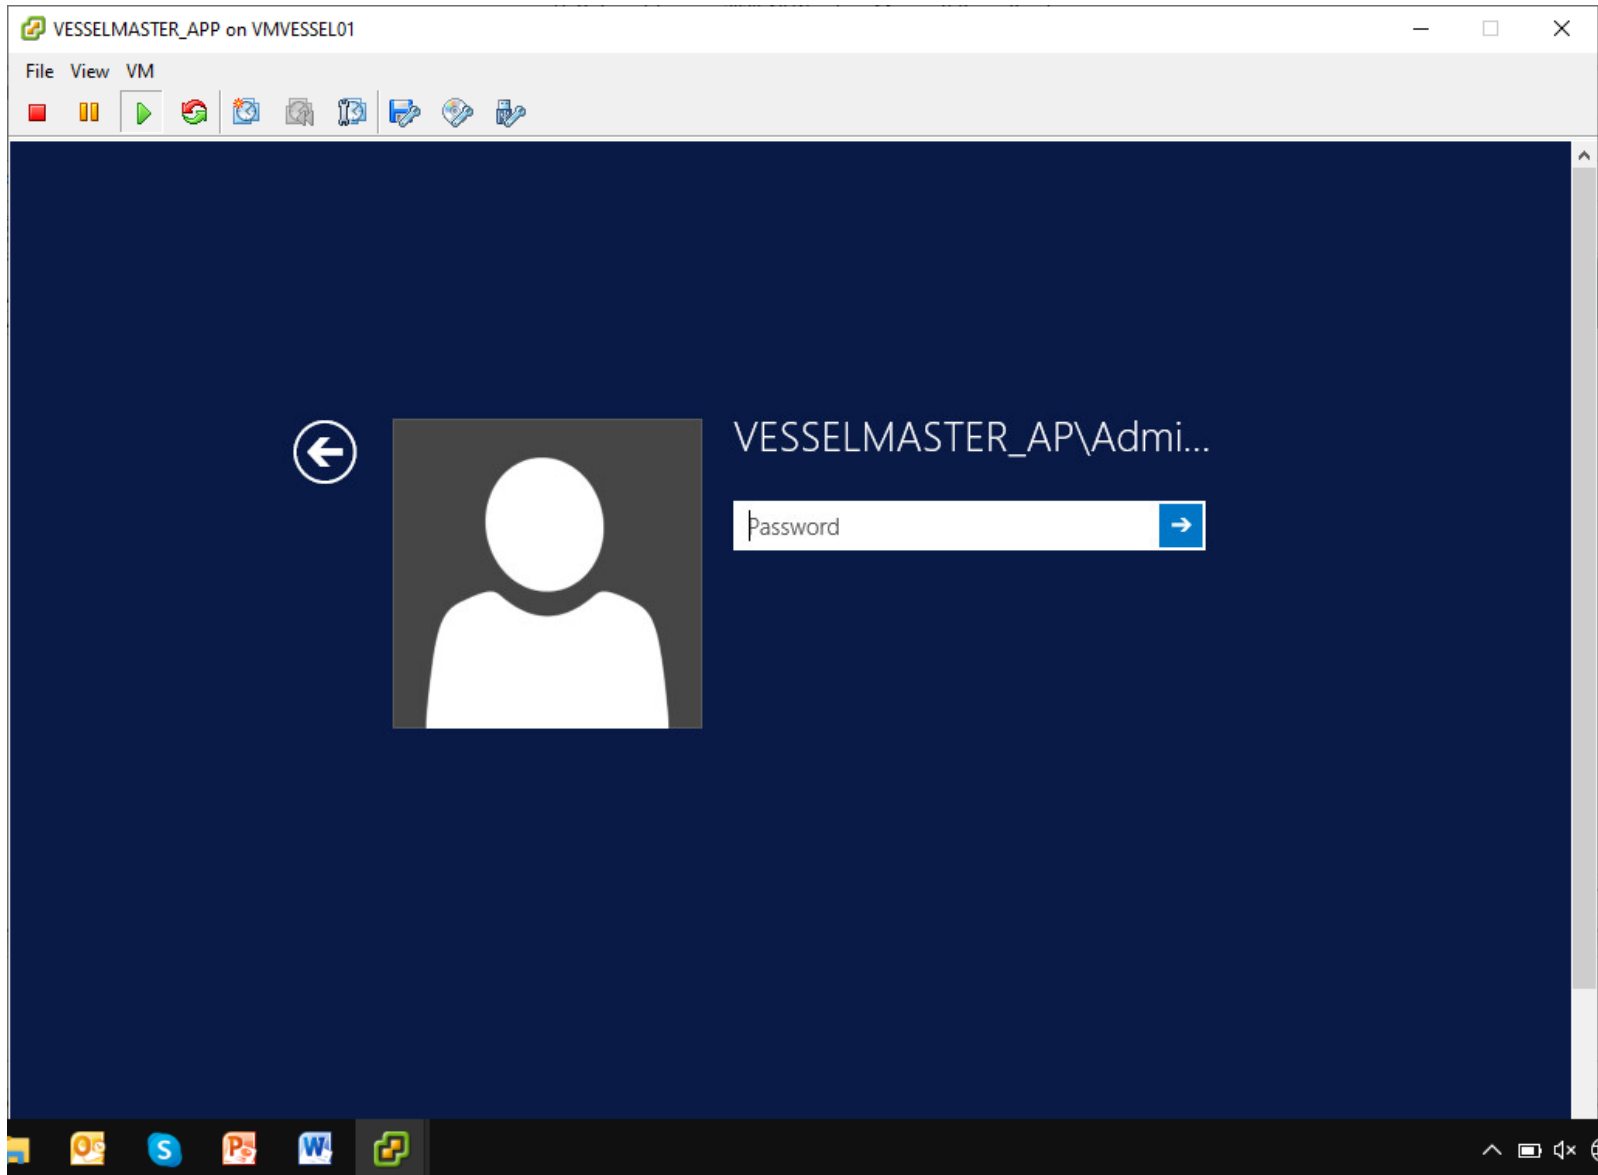



IT-Onboard Training 2020



Network System Onboard

Network

- Enable IP
- IP Address for Mainserver
- IP Standalone PC
- IP NAS Backup
- IP Address Thinclients
- IP FBB
- IP NIMBUS
- Subnet Mask
- Gateway
- Primary DNS Server
- Secondary DNS Server
- VLAN Tag
- Ethernet Mode

Disable

10.200.1.1-2
10.200.1.3
10.200.1.4
10.200.1.11-15
10.200.1.100
10.200.1.200
255.255.255.0
10.200.1.100\200
10.200.1.1
0.0.0.0
0
Auto




IT-Onboard Training 2020



IT and OT of Cyber security Onboard and Anti-Virus Update

ESET UPDATE

1. Please save as the attached file and UnZip into P:\ESET

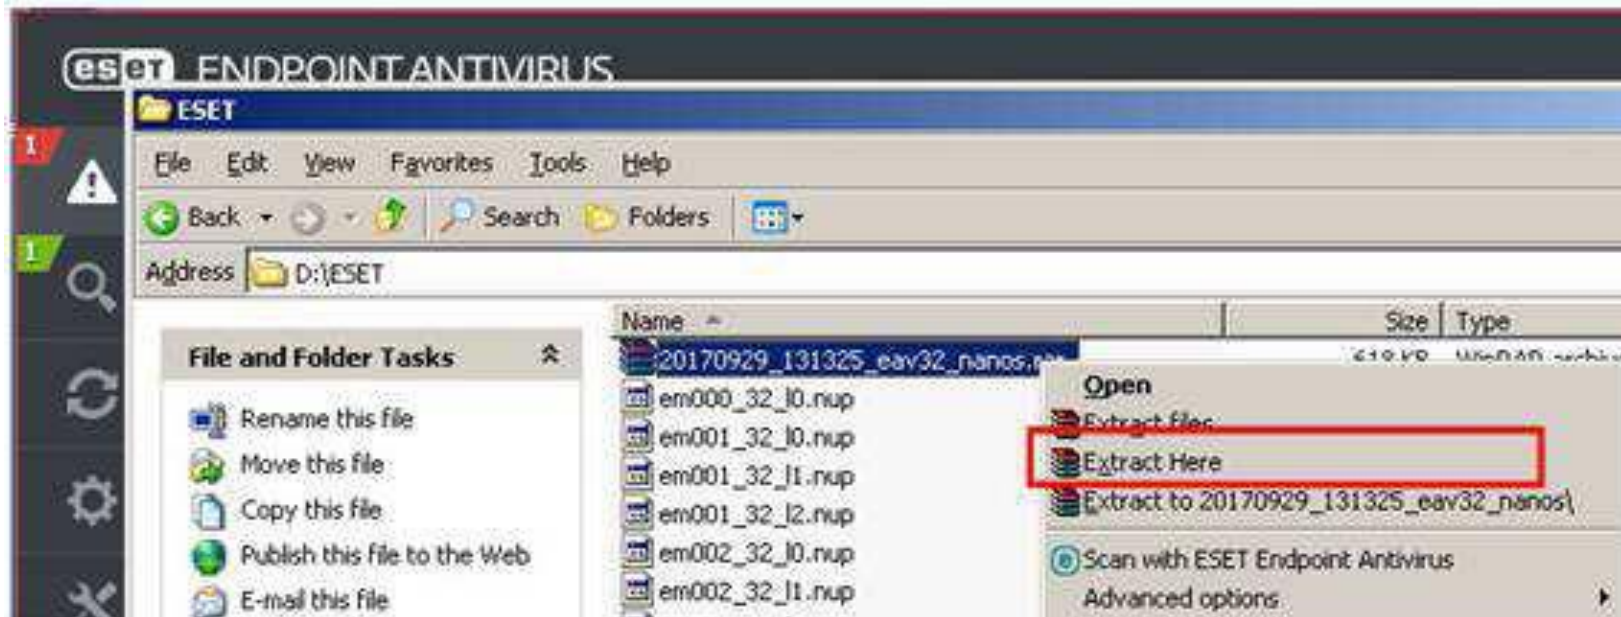




IT-Onboard Training 2020



2. Click “**Yes to All**” [To be Confirmed the file replaced]

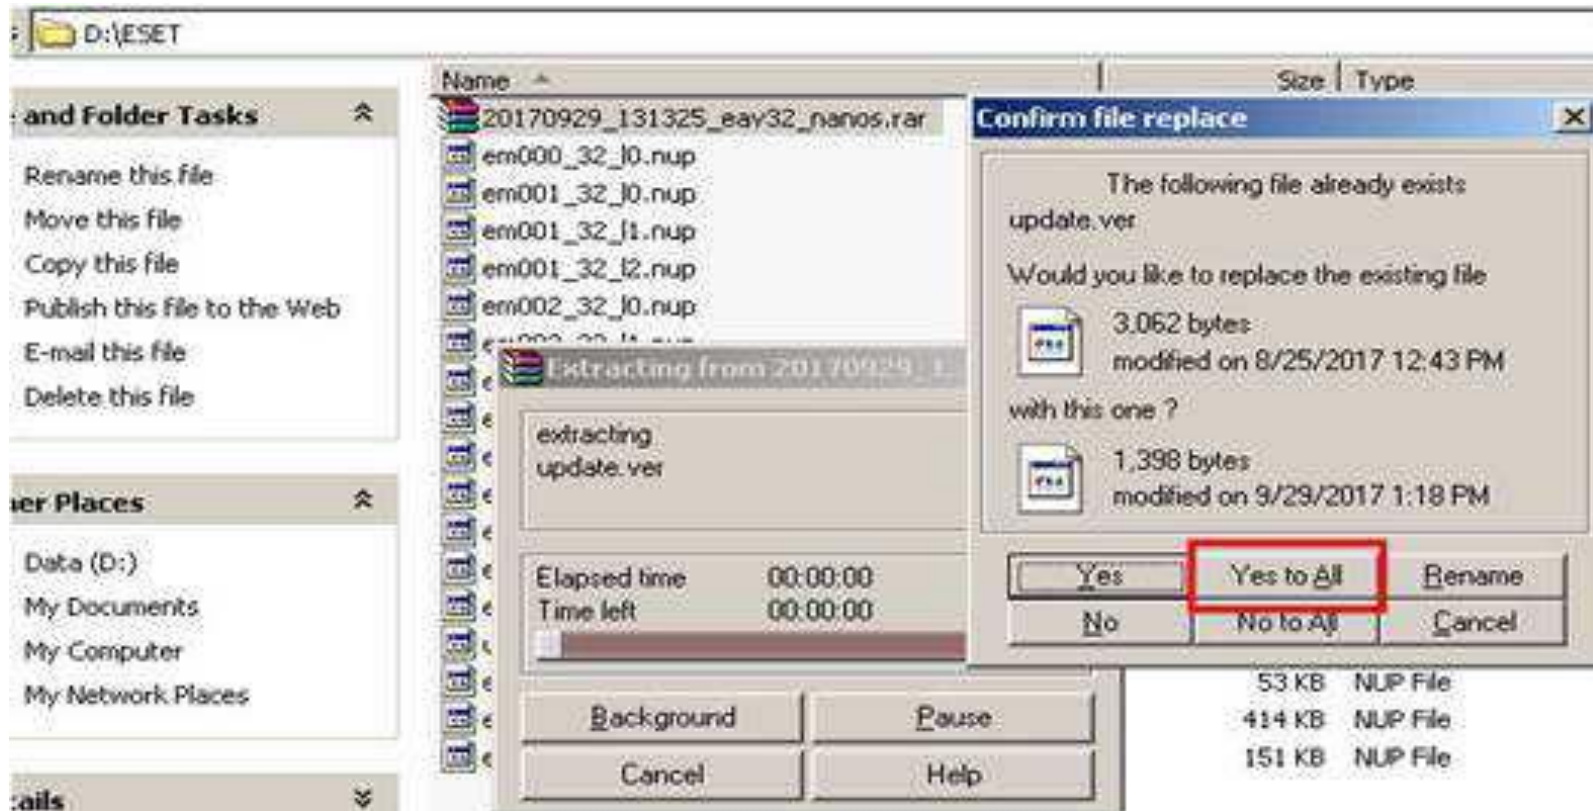




IT-Onboard Training 2020



3. Please be done on 5 Thinclients on BR, ER, Captain, CE, and 2 Ship office
4. Start → All Programs ESET → ESET Endpoint Antivirus → ESET Endpoint Antivirus

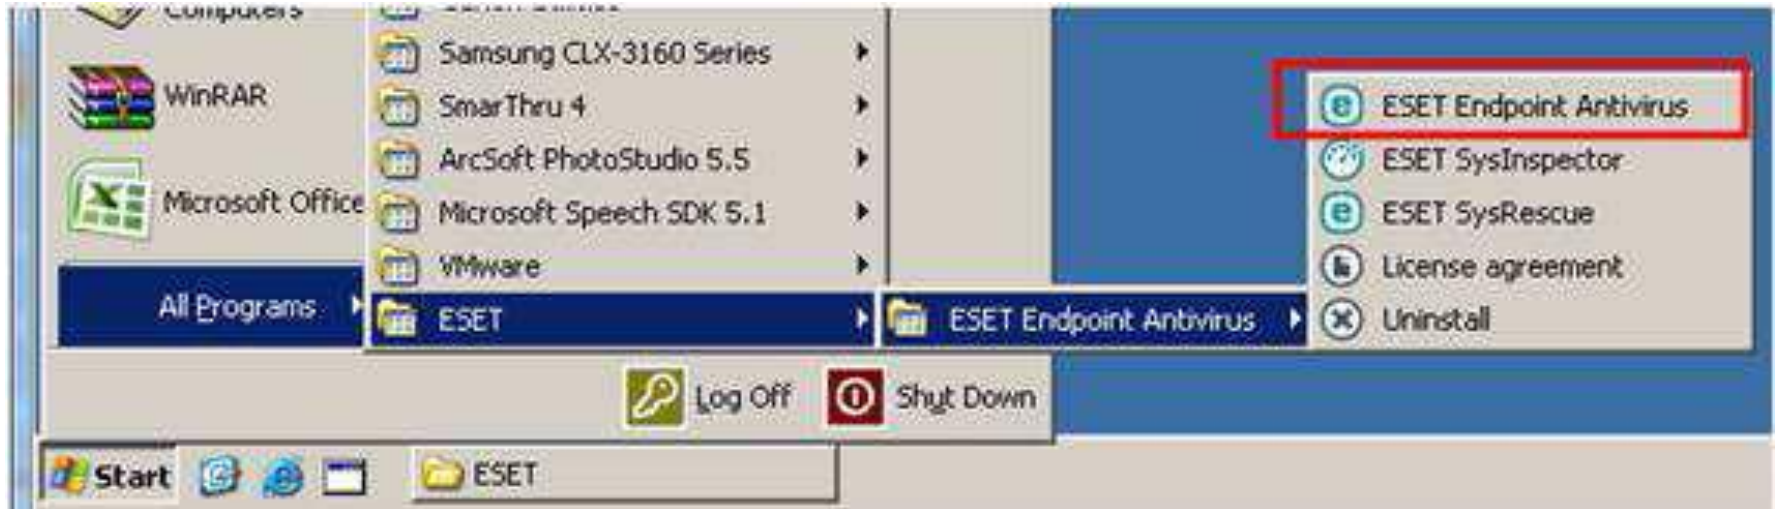



IT-Onboard Training 2020



5. Go to “ **UPDATE** ” and Click to “ **Update now** ”






IT-Onboard Training 2020



6. Update signature in progress.

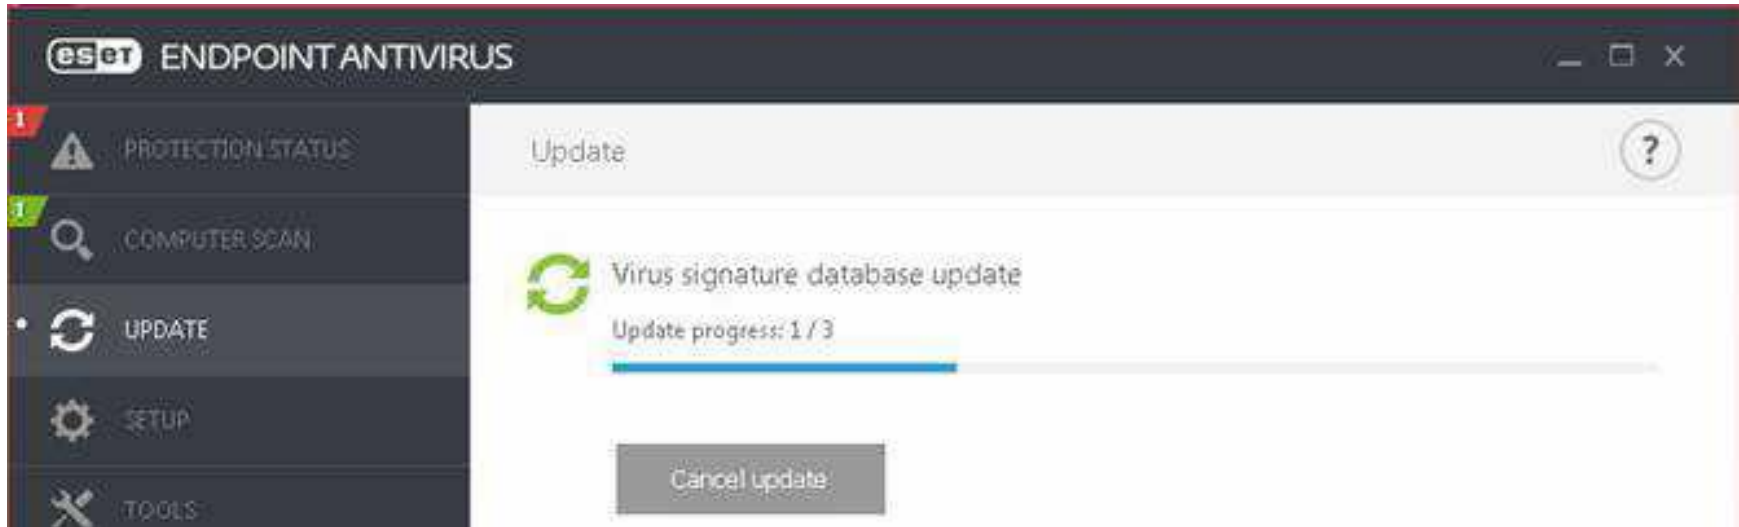




IT-Onboard Training 2020



7. And Please print a capture screen to sent us the below picture to ensure that *ESET Antivirus onboard is up to DATE.*

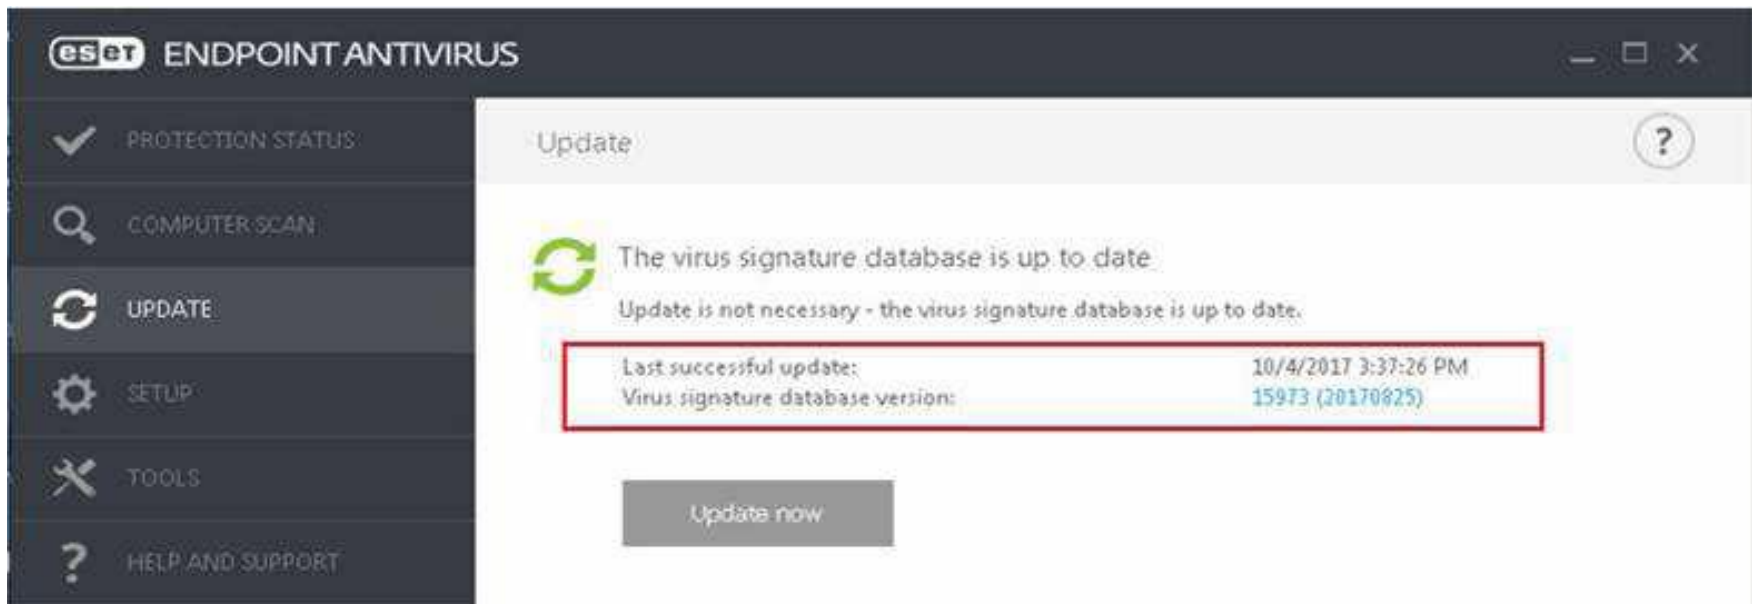




IT-Onboard Training 2020



Backup System

Following below steps show the creating recovery point by second backup image job on Vessel master machine.

Go to Start > Programs > Symantec > Backup Exec System Recovery > **Backup Exec System Recovery**

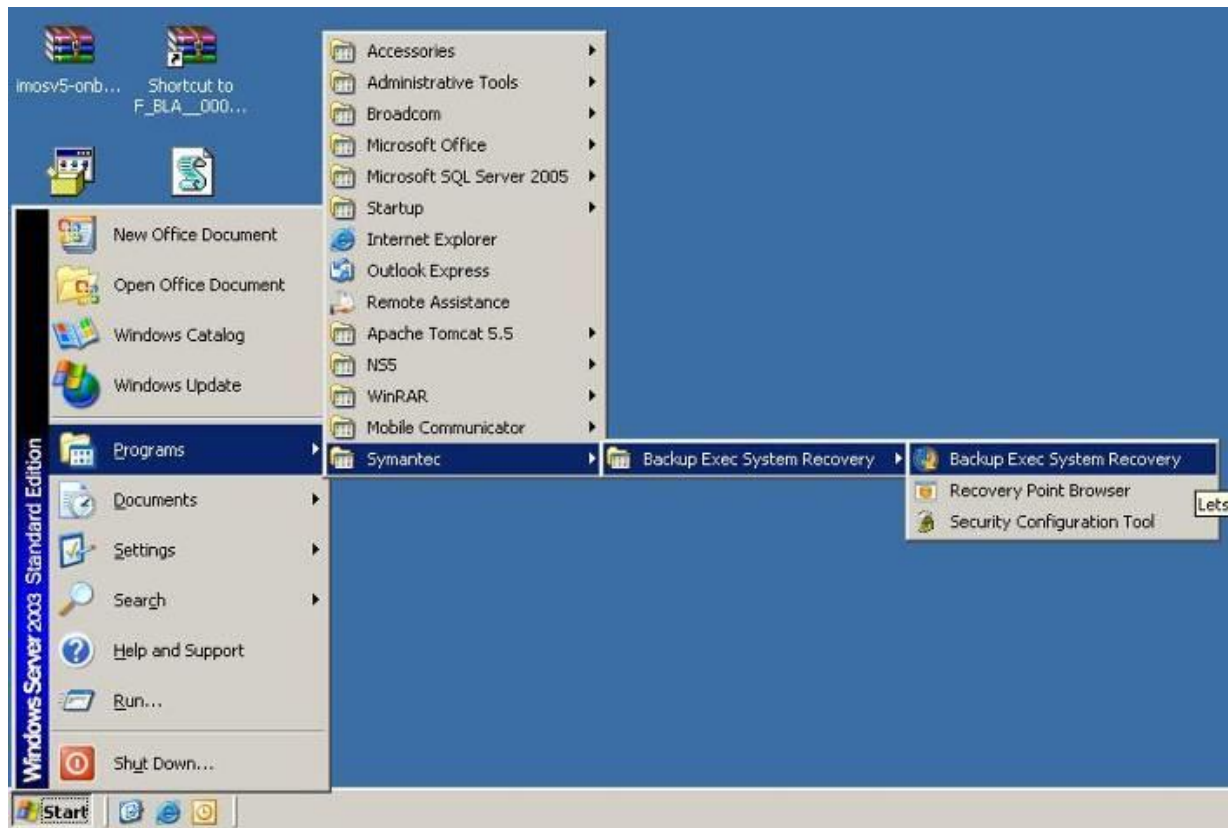




IT-Onboard Training 2020



The console of Symantec Backup Exec System Recovery will be appeared
And then click **Run or Manage Backups**.

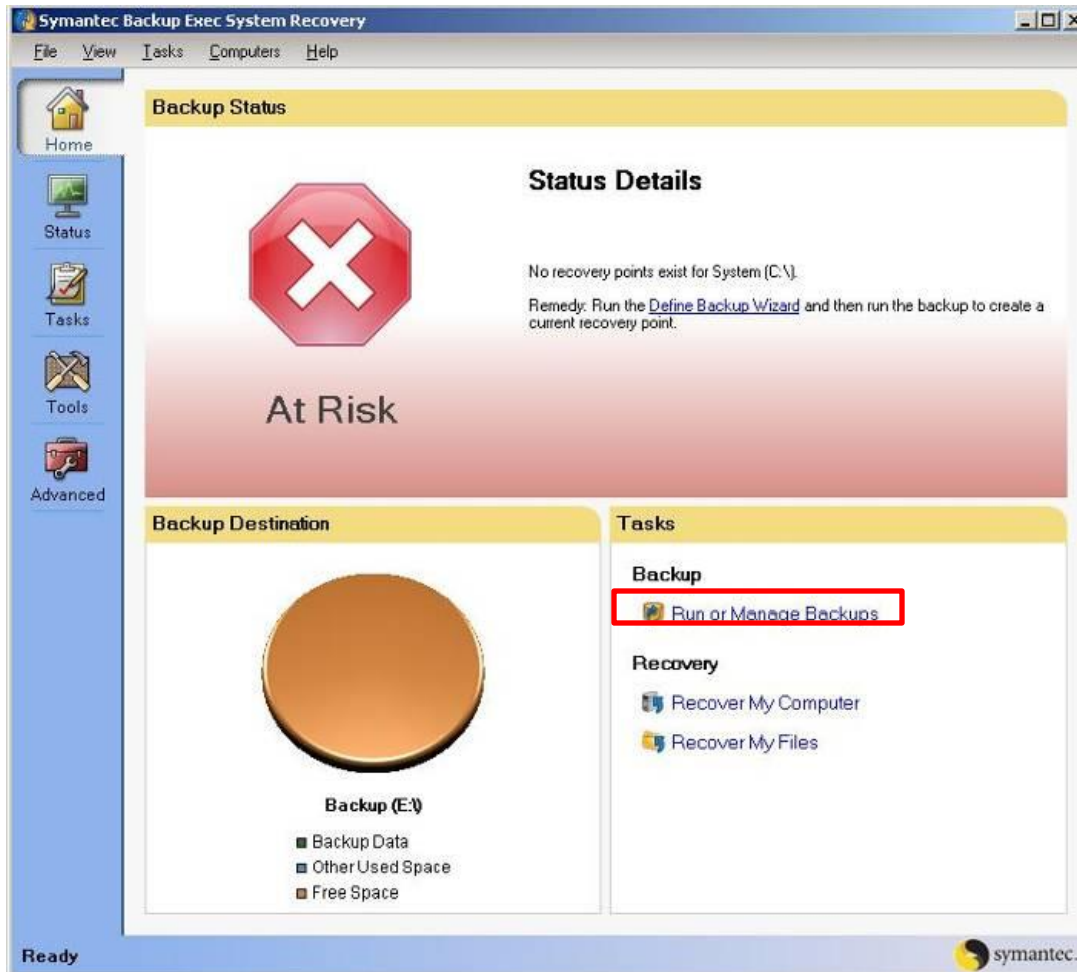



IT-Onboard Training 2020



The console of Symantec Backup Exec System Recovery will be appeared At Tasks click **Recovery My Computer**

Symantec Backup Exec System Recovery

File View Tasks Computers Help

Home Status Tasks Tools Advanced

Backup Status

Status Details

The backup destination on Backup (E:\) is unavailable.
Remedy: If this destination is an external device, make sure the device is connected and turned on. If this destination is over a network, make sure you are logged in.

Attention Needed

Backup Destination

BACKUP (E:)

- Backup Data
- Other Used Space
- Free Space

Tasks

Backup

- Run or Manage Backups

Recovery

- Recover My Computer**
- Recover My Files

Ready

symantec.



IT-Onboard Training 2020




NS Enterprise Replication Monitoring

New NS EEnterprise Infrastructure

Thor NS Training

ThorNS Office

ThorNS Central

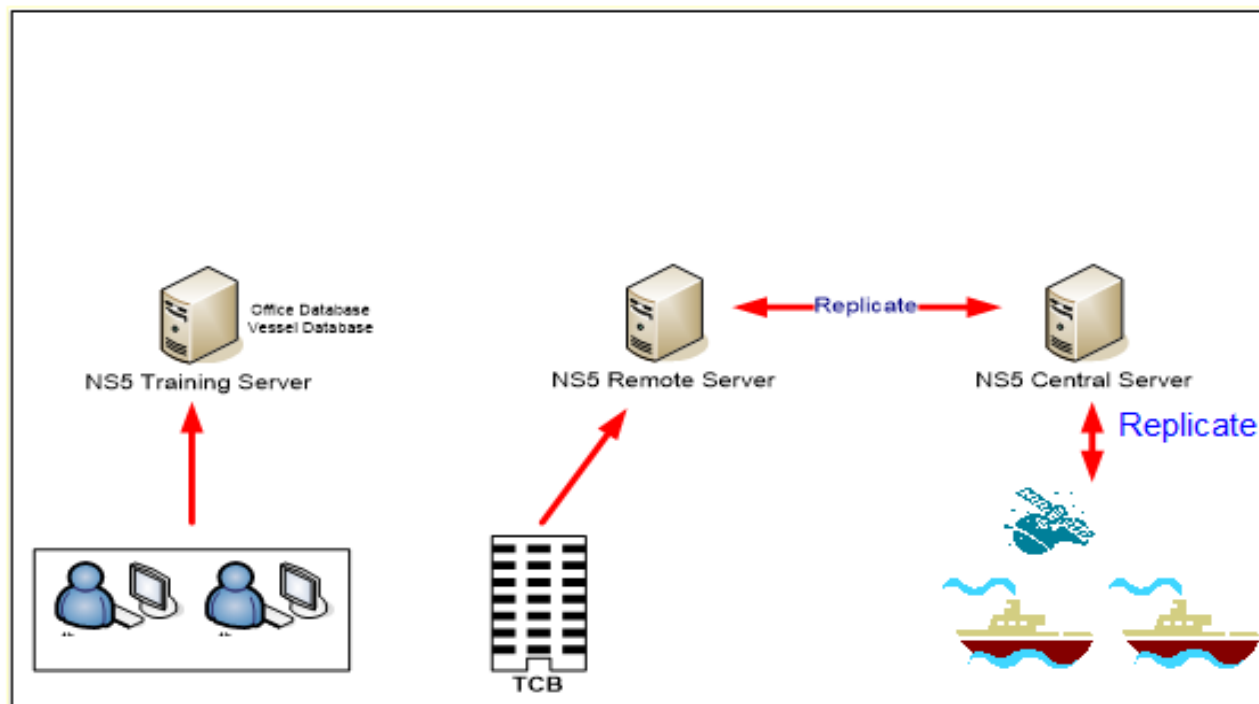



IT-Onboard Training 2020



How to check a replication conditions onboard and Manual DUMP.

On PC Standalone or PC Backup.

- Manual DUMP NS ENT.
- Remote to Desktop 10.200.1.2. by use On PC Standalone or PC Backup.
- Click to “Start” and type “mstsc” on Search box and click Enter.





IT-Onboard Training 2020



Enter “10.200.1.2” and click to “Connect” for Remote Desktop.






IT-Onboard Training 2020




Login User: administrator **and Password:** P@ssw0rd

- Double click Desktop icon “Task Scheduler” or go to [Control Panel\All Control items\Administrative Tools] and double “Task Scheduler”

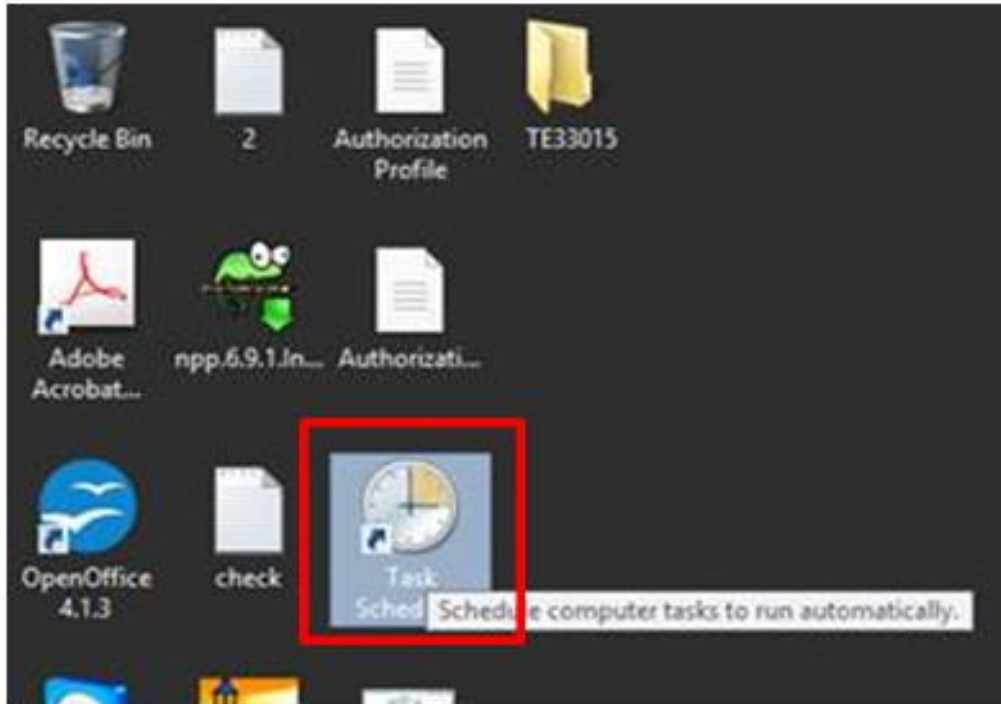



IT-Onboard Training 2020

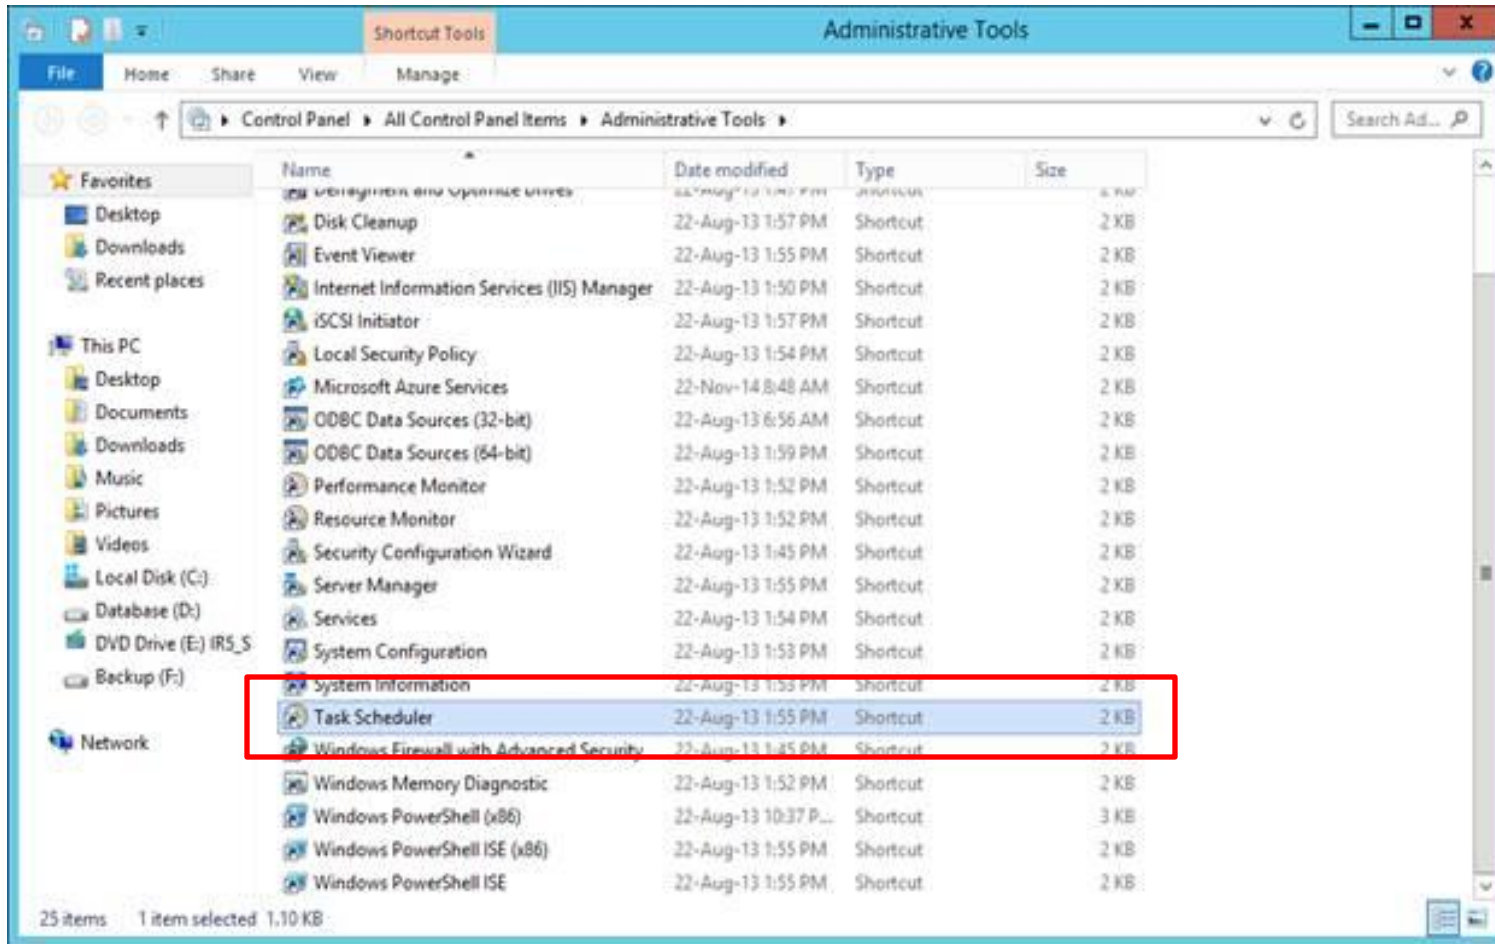




IT-Onboard Training 2020



- Click on “Task Scheduler Library”

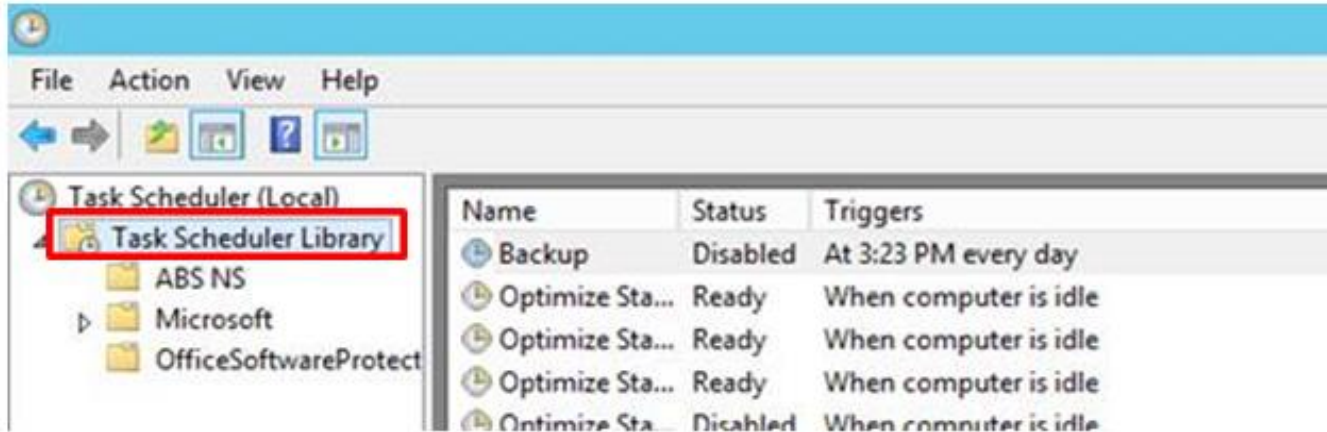




IT-Onboard Training 2020



- Right click on Overday 1PM and click to RUN.

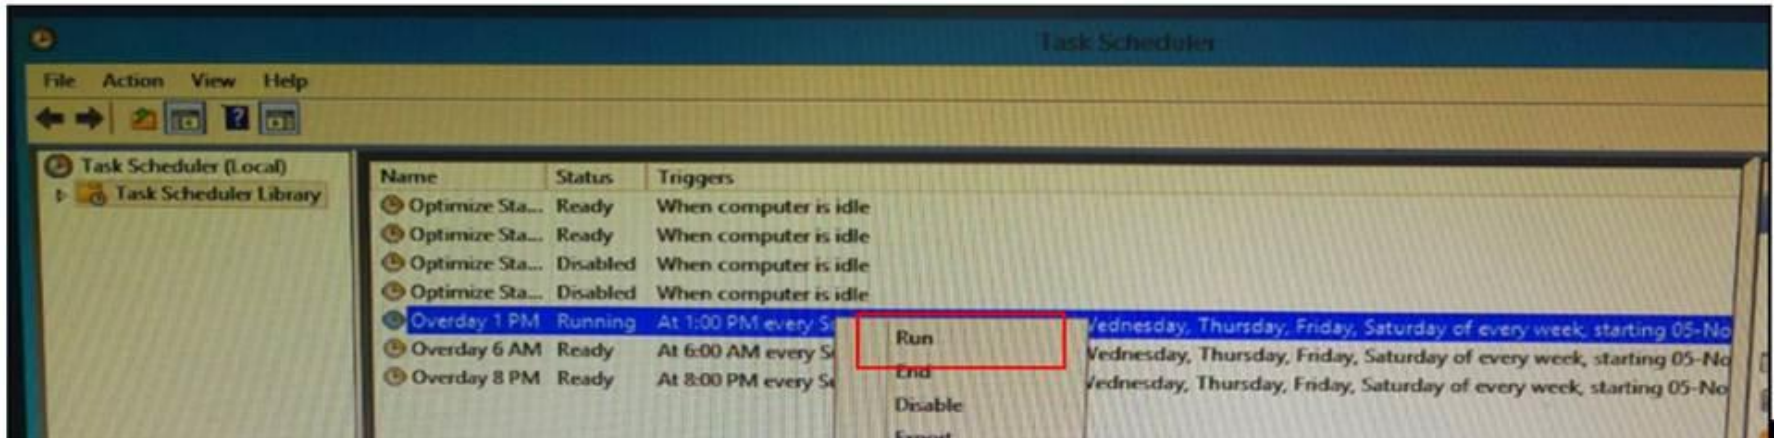



IT-Onboard Training 2020



- Will be got the command prompt ** if not showing please got to D:\NS\Production\Enterprise\Script and Double click “OverDay_NS6_IPSIG.cmd” or “OverDay_NS6_Nimbus.cmd”

The screenshot shows a Windows desktop environment. In the foreground, a command prompt window titled 'taskeng.exe' is open, displaying the following text:

```
A subdirectory or file log already exists.  
A duplicate file name exists, or the file  
cannot be found.  
Receive Replication files  
Load Replication data
```

Behind the command prompt, a large advertisement for ABS Nautical Systems Fleet Management Software is displayed. The ad features the ABS logo (a stylized anchor and compass) and the text 'ABS Nautical Systems FLEET MANAGEMENT SOFTWARE'. Below this, there is a collage of software interface elements, including a pie chart, a bar chart, and various data tables. At the bottom of the ad, it says 'POWERFUL. SIMPLE. RELIABLE.'.

At the top of the desktop, a navigation bar is visible with tabs for 'Reporting', 'Replication', 'Interfaces', and 'General Data'. The 'Replication' tab is currently selected.

In the bottom-left corner of the desktop, there are icons for 'Tools' and 'Windows'.



IT-Onboard Training 2020



- Waiting until a command prompt windows is close. And Please ensure that all replication files on D:\NS\Production\Enterprise\inbox will be moved to D:\NS\Production\Enterprise\inbox\backup

On Master Thinclient PC

- Please print screen capture all NS ENT files in there folder.

L:\Production\Enterprise\Inbox

L:\Production\Enterprise\Outbox [***For Speedcast system]

L:\Production\Enterprise\Outbox\Outbox_sent [***For Satcom system]

- What's the last NS ENT file number in there folder.

L:\Production\Enterprise\Inbox\Backup

L:\Production\Enterprise\Sent



IT-Onboard Training 2020



NS Enterprise Tips and Tricks

1. INSTALLATION GUIDE NS ENTERPRISE on 10.200.1.2
2. Tips and Tricks



IT-Onboard Training 2020



Questions & Answers