


G D N C R E A T I O N S

Smart Meteo Station

User Manual

Initial setup and everyday use of the touch weather station, the Internet radio and the personal calendar.

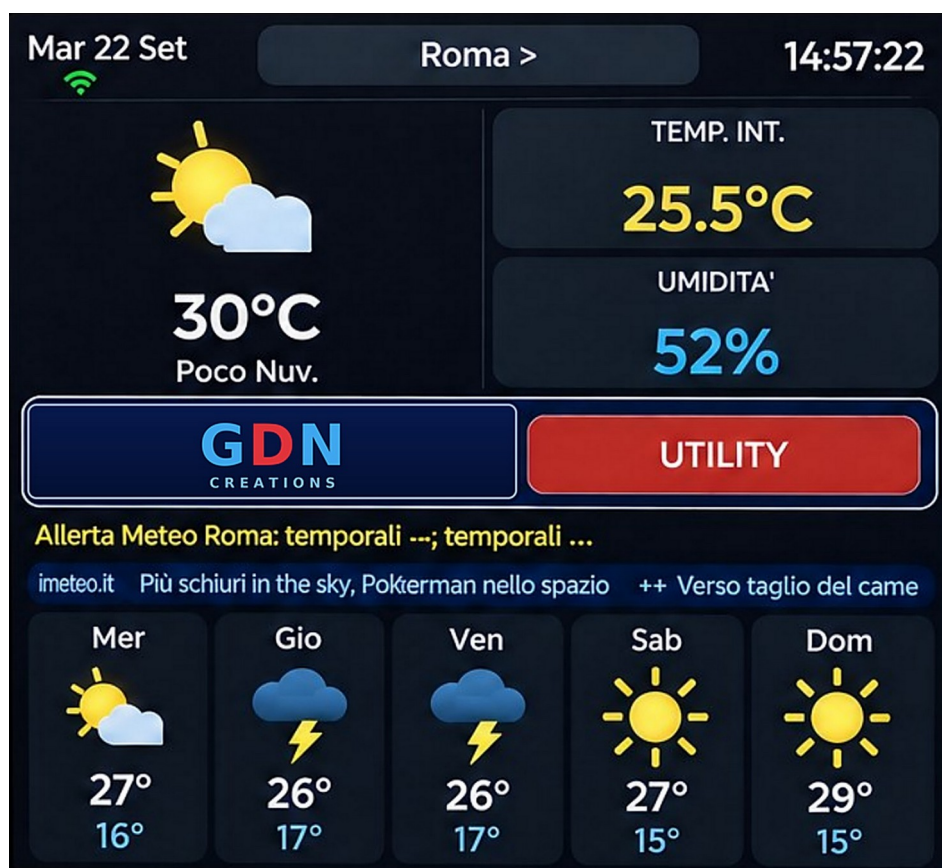

The station's home screen.

NOTE

Appointments are supported through the private iCal link of **Google Calendar**. The station reads events only and does not access your mailbox. Outlook/Microsoft 365 links are not accepted directly.

English edition • 28 September 2026

Applies to the current firmware. To identify the version of your unit, open UTILITY and then INFO.

Feature overview

Smart Meteo Station is a desktop weather station with a colour touch display and Wi-Fi connectivity. A single screen brings together the weather for your city, the indoor climate of your home, Internet radio and your appointment calendar. Everything is controlled by touch; settings can also be managed from a phone or computer.

Real-time weather

Current conditions and 5-day forecast for the chosen location, with hourly charts for temperature, pressure, humidity, wind and rain.

Indoor climate

Room temperature and humidity from the built-in sensor, with a 24-hour history.

Air quality and sun

UV index, AQI, PM2.5, sunrise and sunset, feels-like temperature and dew point.

Weather alerts

On-screen warning for forecast severe conditions and an archive of recent alerts.

Rain radar

Animated map of observed precipitation, with zoom and refresh.

Flight radar

Aircraft within a 10 to 100 km radius with altitude, speed, heading and route.

Internet Radio

Thousands of stations searchable by country and genre, six presets and volume control.

Personal calendar

Monthly view and daily appointments synchronised from Google Calendar.

News and calculator

Up-to-date headlines in the selected language and an on-screen calculator.

Web panel

Setup and monitoring from a phone or PC on your home network.

NOTE

The interface is available in **Italian, English, German, French, Spanish and Ukrainian**. All you need to get started is power and a 2.4 GHz Wi-Fi network with Internet access: chapter 1 guides you step by step through first power-on.

Contents

For first power-on, follow chapters 1 and 2 (pages 4 and 5). Procedures use the English button names; if another language is selected, the same commands appear translated.

01	First power-on and Wi-Fi.....	4
02	Language, location and time.....	5
03	Home screen and menu.....	6
04	Weather and indoor climate.....	7
05	Radar, news and alerts.....	8
06	Listening to the radio.....	9
07	Radio search and presets.....	10
08	Web panel and settings.....	11
09	Using the monthly calendar.....	12
10	Reading appointments.....	13
11	Connecting Google Calendar.....	14
12	Outlook and email programs.....	15
13	Calendar updates and limits.....	16
14	Calendar troubleshooting.....	17
15	Common problems and firmware information.....	18
16	Final check and sources.....	19
•	Contacts and support.....	20

How to read these instructions

Tap means briefly pressing the display. **Scroll** means dragging your finger to reach content that is out of view. The **Back** button at the top returns to the previous screen; in the radio search, Back and Next instead change the page of results.

The images show a real unit: date, city, volume, station names and favourites are examples. **INFO** identifies the firmware; the company logo opens a different page dedicated to the brand details.

CHAPTER 1

First power-on and Wi-Fi

Preparing the station

Place the station on a stable surface, away from water, direct sunlight and heat sources. Keep the sensor clear: heat from a computer or the power supply can affect the indoor reading. Use the power supply and connection intended for the unit supplied; check the electrical ratings on the accessories rather than inferring them from the connector.

NOTE

A **2.4 GHz** Wi-Fi network with Internet access is required: the station operates on this band only, and a 5 GHz-only network will not be detected. The screen handles the network name and password; it does not provide a browser for hotel portals or fields for advanced corporate credentials.

- 1 Connect the power and wait for the start-up screens. The logo and sequence depend on the customisation.
- 2 If the language selection appears, tap **English**. A previously saved language and network may take you straight to the home page.
- 3 In the Wi-Fi setup screen press **SCAN**, wait for the search and open the list of networks.
- 4 Select your network and press **Next** >.
- 5 Enter the password on the display. **a/A** switches between upper and lower case; **123**, **#+=** and **ABC** change the key page; **SPACE** inserts a space and **DEL** deletes.
- 6 Press **OK** and wait for the connection. If a connection error appears, check the network, upper/lower case, symbols and password.
- 7 When the home screen appears, check the Wi-Fi indicator and wait for the time and weather data. Then select your location as explained on page 5.

Changing network

From the home page tap the Wi-Fi indicator. The page shows the connected network and the IP address.

FORGET NETWORK deletes the saved network and drops the connection: use it to change network, not as a first attempt at fixing a temporary fault. Repeat **SCAN** and the procedure above.

If the signal is missing, temporarily move the station closer to the router. The radio and online updates need an active connection; power alone does not provide Internet access.

CHAPTER 2

Language, location and time

Choosing the language

Italian, English, German, French, Spanish and Ukrainian are available. The language is chosen at start-up when prompted, or from the web panel in the **Display and sensor** section. Saving from the web panel restarts the station if the language changes. With Ukrainian, the city search also offers a Cyrillic keyboard with І, Є, І and Ї.

Setting the location on the display

- 1 Tap the city name at the top of the home page.
- 2 Type the name in the city search field and press **SEARCH**. The search requires Internet access.
- 3 Wait for the results and choose the one with the correct region and country. For identical names, check these details, not just the name.
- 4 Wait for the conditions to update and check that the displayed city is the one you want.

The web panel offers an equivalent search in **Weather location**. Enter the city, press the search button, choose the result and save. Latitude, longitude and country must match the location: only edit them manually if you know the correct values.

How the time is set

The clock synchronises over the Internet and shows the time of the selected location. The interface does not allow the time to be set manually. After connecting, wait for synchronisation; until a valid time is available, the calendar may show a waiting message and the Today button is unavailable.

If the time is wrong, first check Wi-Fi, Internet access and location. The date shown below the calendar must be consistent with the city. Appointments with a supported time zone are converted for display; time-zone limitations are described on page 16.


NOTE

Changing the language is not the same as changing the city or time zone. A correct calendar with appointments shifted by one hour calls for checking the event's time zone and daylight saving time, not for adjusting the clock manually.

CHAPTER 3

Home screen and menu

The home page brings together date and time, location, outdoor conditions, indoor temperature and humidity, forecast and news. Tap **UTILITY** to open the functions menu.

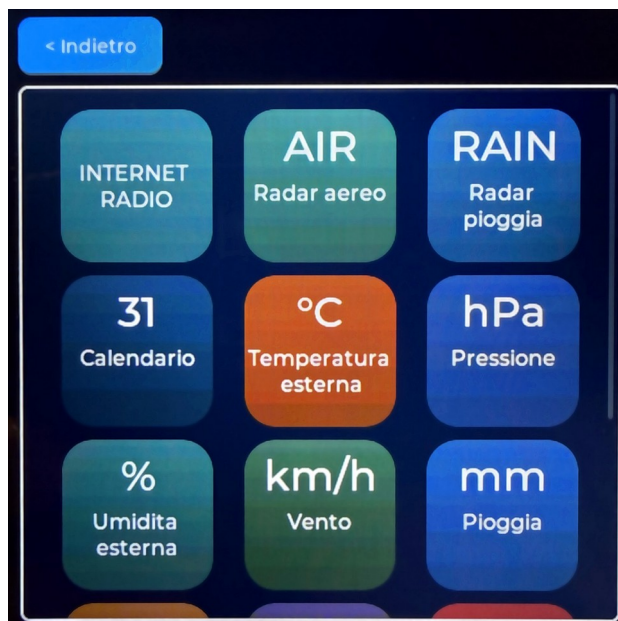

UTILITY menu (Italian interface shown): the first row contains Internet Radio, Flight radar and Rain radar; Calendar is at the start of the second row.

Tap or gesture	Result
Wi-Fi indicator	Connected network, IP address and connection setup.
City name	Search for a new location.
Indoor values	Room temperature and humidity history.
Day in the forecast	Hourly details for the selected day.
UTILITY and scrolling	Access to the weather pages, calculator, latest alerts and INFO.
Customer logo	Company information page of the customisation.

The menu continues below the edge: scroll to see all the icons. **INFO** contains the firmware name and build date/time, which are useful when requesting support.

CHAPTER 4

Weather and indoor climate

Telling the measurements apart

Indoor temperature and humidity come from the station's sensor. Outdoor temperature, pressure, wind, rain and forecast come from online services for the selected location. The station does not directly measure wind, rain or outdoor air quality.

Page	What to read
Outdoor temperature	Current value and hourly chart with the period's minimum and maximum.
Pressure	Pressure in hPa and forecast trend.
Outdoor humidity	Humidity percentage and hourly trend.
Wind	Speed in km/h, gusts, direction and wind rose; scroll for the chart.
Rain	Amount in millimetres and probability as a percentage: these are different quantities.
UV / Air / Sun	UV, AQI, PM2.5, sunrise, sunset, feels-like temperature and dew point.

Viewing a single day

- 1 Tap one of the days in the forecast strip on the home page.
- 2 Open the temperature, **Wind** or **Rain %** tabs available in the day view.
- 3 Read times, minimums and maximums together with the chart. Return with **Back**.

Using the indoor history

Tap the indoor values panel. The history covers the last 24 hours with one sample every five minutes; if no samples are available yet, you need to wait. The page may automatically return to the home screen after a few seconds: you can reopen it to continue viewing.

To correct the indoor temperature, use **Display and sensor** in the web panel. Compare the station with a reliable instrument in the same position, after letting the readings stabilise. Do not apply a correction to make the indoor and outdoor temperatures match.

NOTE

A value that is still displayed is not necessarily freshly updated. If in doubt, check the network, loading messages and the time of the last update shown.

CHAPTER 5

Radar, news and alerts

Flight radar

- 1 Open **UTILITY** and **Flight radar**.
- 2 Choose a radius of 10, 25, 50 or 100 km and wait for the data.
- 3 Tap an aircraft or an available entry to view its call sign, altitude, speed, heading, distance and coordinates.
- 4 The route is shown only when the service provides it: an empty field does not indicate a display fault.

The view shows up to eight nearby aircraft, depending on service coverage. It is not a tool for navigation or air traffic control.

Rain radar

Open **Rain radar**. Use zoom, the play/pause control, **Next image** and **Refresh** according to the buttons shown. In the web panel the corresponding controls are Animation, Next image and Refresh rain radar. Always check the time of the frame.

The radar shows observed precipitation, not a forecast of how it will develop. An uncoloured area may indicate no precipitation, or missing coverage or data. On first load, wait for the images to download.

News and calculator

Tap the news strip to read the headlines on the dedicated page; use Back to return. Headlines come from online feeds associated with the language. The calculator opens from **UTILITY** and allows basic calculations using the on-screen keys.

Weather alerts and history

A red screen draws attention to conditions detected in the forecast. Tap the screen to close it. The same alert is acknowledged, but a change or a new condition may make it reappear. **Latest alerts** lists the date, location and phenomenon of stored alerts.

WARNING

The station's alerts are not official bulletins or an emergency system. For safety decisions, consult the competent authorities.

CHAPTER 6

Listening to the radio

Open **UTILITY** and **INTERNET RADIO**. An active Internet connection and the audio output provided with your unit are required. The radio keeps playing when you leave its page.



Radio page with six presets and controls. The stations shown are examples saved on the unit.

Control	Use
Presets at the top	A tap on an occupied preset starts the corresponding station.
PLAY	Starts or reopens the last selected station. It does not resume from a recorded point: it is a live stream.
STOP	Stops the stream. It also allows the calendar to synchronise.
MUTE	Turns silent mode on or off; it is not the same as STOP.
Volume slider	Drag to adjust the level; start from a moderate value.

A message saying that the station provides no track title is normal when the stream does not transmit the song name. On its own it does not indicate an audio problem.

CHAPTER 7

Radio search and presets

Finding a new station

- 1 On the radio page scroll down to the filters.
- 2 Select **Country** and **Music genre**. For a broader search, use All countries and a less restrictive genre.
- 3 For a tag not in the list, open **Custom genre**, type the tag and confirm with OK. Back closes without saving the tag.
- 4 Press **Search radio** and wait for results from the Radio Browser online directory.
- 5 Select a result and press **PLAY**. The Back and Next buttons next to the results change the search page, not the home screen.

Saving and recalling a station

- 1 Select and start the station you want to store.
- 2 Scroll to **SAVE TO PRESETS** and tap it.
- 3 Check for the confirmation that the station has been added to the presets. The preset appears among the buttons at the top and is kept for subsequent start-ups.
- 4 To recall it, briefly tap the corresponding preset.

Six presets are available. If a message says that the presets are full (limit of 6 stations), free a preset before adding a new one. A station that is already saved is not added a second time.

WARNING

A **long press** on a preset deletes it. Use a short tap to listen; press and hold only when you want to delete the preset.

If the stream does not start

Check Wi-Fi, MUTE and volume. Press STOP, wait a few seconds and try PLAY again; then try another station. The directory does not guarantee that every stream is reachable at any given moment. Some formats are excluded from the search and track titles depend on the source.

If a memory or audio (I2S) error appears, note the exact message and the INFO data. Do not change firmware parameters by trial and error. See also page 18.

CHAPTER 8

Web panel and settings

Opening the panel from a phone or PC

- 1 Connect the phone or PC to the same local network as the station.
- 2 Tap the station's Wi-Fi indicator and read the IP address shown.
- 3 In the browser type **http://** followed by that IP address, without spaces. Do not use the public GDN website as your station's address.
- 4 When prompted, sign in with the panel credentials supplied with your unit. If they are not available, request them from the supplier.
- 5 Wait for the page to load. If it does not open, check the current IP and whether device isolation is enabled on a guest network.

Section	Operation
Station display	Choose a view and press Open on display; Show current screen requests an image of the screen.
Outdoor weather and history	View values, charts, indoor data and available updates.
Air traffic and Rain radar	Refresh the views and use the related controls.
Display and sensor	Set language, brightness, indoor temperature correction and radar radius.
Weather location	Search for the city, select a result and save.
Personal calendar	Save the iCal link, request an update or disconnect the calendar.

General settings are confirmed with **Save** (restart if the language changes). Wait for any restart and reload the page. Brightness can be adjusted from 10% to 100%; the permitted temperature correction ranges from -10 to +10 °C.

While the radio is playing, some heavy panel responses may be reduced to protect the audio. For full access or to synchronise the calendar, press STOP on the radio.

WARNING

Use the panel on a trusted local network. The page is served over HTTP: do not expose it to the Internet through port forwarding. Treat the private calendar link as a read-access credential.

CHAPTER 9

Using the monthly calendar

Open **UTILITY** and tap **Calendar** in the second row. The month view is available even without connecting a personal calendar; appointments, however, require the setup described on page 14.




Month view (Italian interface shown): the current day is highlighted. Location and date are shown at the bottom.

- 1 Use < and > to move to the previous or next month.
- 2 Tap **Today** to return to the current month and date of the configured location.
- 3 Tap a day to open its appointments.
- 4 In the day view, tap **Calendar** to return to the month. Back at the top leaves the page.

A marker on the day indicates loaded events. Browsing through months does not automatically extend the range of downloaded appointments: the available window is described on page 16.

CHAPTER 10

Reading appointments

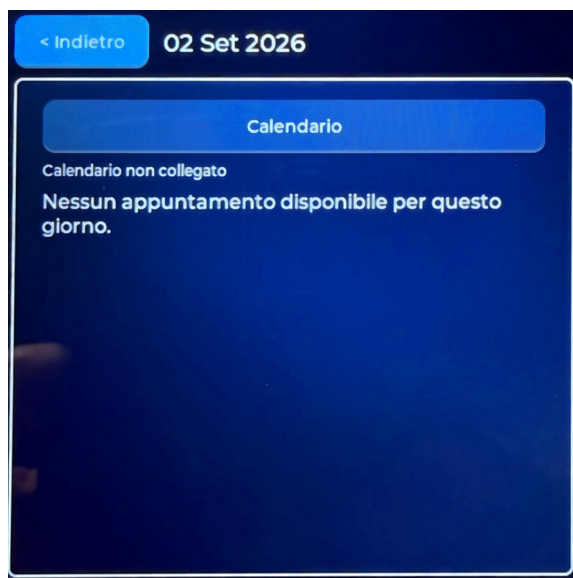

Day detail with no calendar connected (Italian interface shown): the image does not mean that a personal calendar has been synchronised.

Understanding the status

Calendar not connected means that no valid link has been configured. First connect the calendar from the web panel. The message that no appointments are available for the day may also appear in this case: on its own it does not prove that the remote calendar is empty.

After a successful synchronisation, the detail lists times, title and location when available. Events without a time are shown as **All day**. Scroll if there are several appointments; extended descriptions, attachments and event sound alerts are not shown.

Changing an appointment

Create, edit or delete the event in Google Calendar or in the application that actually manages that calendar. The station is read-only. Then, with the radio stopped, use **Update now** in the web panel or wait for the automatic cycle.

NOTE

Always check the status and the last update before relying on the list. The station does not provide appointment reminders and does not replace your main calendar.

CHAPTER 11

Connecting Google Calendar

Preparing the link on a computer

Use the Google calendar that contains the events to be shown; a dedicated calendar can help limit the data exposed. The link is used to read appointments, not the messages in Gmail or any other mailbox.

- 1 Open Google Calendar in a computer browser with the account that manages the calendar.
- 2 Open **Settings** and select the desired calendar in the section listing your calendars.
- 3 Open **Integrate calendar** and copy the **Secret address in iCal format** [1]. Do not choose the web page link or the public address.
- 4 If the option does not appear, check the calendar's owner and permissions. For a work or school account, ask the administrator whether the feature is allowed.

Saving the link on the station

- 1 Open the station's web panel from the same local network, as on page 11.
- 2 Scroll to **Personal calendar** and paste the full link into the **Private iCal link** field.
- 3 Press **Save and sync**. The link is not shown again: an empty field after saving does not mean it has been lost.
- 4 Press **STOP** on the radio if it is playing. Wait for the calendar updated status and check the number of appointments and the last update.
- 5 On the display, open Calendar and tap a day with a known event, within the supported range.

The firmware accepts the private HTTPS address on the calendar.google.com domain, in the calendar/ical path, with the private- segment and ending in /basic.ics. A webcal link, a shortened URL, an attached file or an HTML link are not equivalent.

WARNING

Do not send the secret link in a photo or a public document. If it has been exposed, reset it in the Google settings and save the new link on the station [1]. To remove it from the station only, use **Disconnect calendar**.

CHAPTER 12

Outlook and email programs

What matters is where the calendar lives

Outlook is both a program and a service: it can display calendars from different sources. If your appointments belong to Google Calendar and you also view them in Outlook, connect that Google calendar directly to the station. There is no need to provide your email password.

A native Outlook.com, Exchange or Microsoft 365 calendar cannot be connected directly with the current firmware. The Microsoft ICS link is rejected even when it works correctly in a browser.

Getting a link or a copy from Microsoft

In Outlook on the web open the Calendar settings and **Shared calendars**. If **Publish a calendar** is available, choose the calendar and the level of detail, publish it and use the ICS link, not the HTML one. Publishing may be disabled by the organisation; it does not make the link compatible with the station [2].

Alternative: a copy in Google Calendar

- 1 Obtain an .ics copy of the Microsoft calendar by exporting it or downloading the published calendar, depending on the features available for the account.
- 2 In Google Calendar on a computer open **Settings, Import & export** and import the .ics file into a dedicated calendar [3].
- 3 Check dates and appointments in the imported Google calendar.
- 4 Connect the private iCal address of that Google calendar to the station following page 14.

NOTE

Importing a file creates a copy: on its own it does not stay linked to the original Outlook events. Later changes and deletions must be handled separately; repeated imports may create duplicates. This is neither two-way synchronisation nor a continuous Outlook-to-station update.

Import versus subscription

An ICS file contains events at a given moment; a subscription to a URL can receive updates from the provider [2]. The station only performs its own periodic reading of the accepted Google feed. It does not assume that an external calendar subscribed in Google can be republished, and it offers no access to email, contacts or tasks.

CHAPTER 13

Calendar updates and limits

When events are read

The station attempts an update every 15 minutes, provided Internet access and a valid time are available. The PC can be switched off: the link is stored on the station. While the radio is connecting or playing, synchronisation is put on hold; **MUTE does not release it, STOP is required**. Update now requests a new attempt, not an instant response.

The link remains saved after a restart, but downloaded appointments are held in volatile memory and must be read again. If an update fails after a previous success, the last available data are kept: check the timestamp, as they may be out of date.

Limit	Practical consequence
One calendar, feed up to 1 MB	Use a dedicated calendar if the file is too large; OAuth sign-in and login pages are not supported.
Maximum 160 appointments	A very busy calendar may be incomplete. Check the omitted-events notice in the web panel.
From 31 days past to 366 days ahead	A month displayed outside this window may have no appointments loaded.
Fields displayed	Times, title and location. Long titles and locations may be shortened; descriptions, attachments and reminders are not shown.
Simple recurrences	Daily, weekly, monthly and yearly; advanced rules or unsupported fields may be omitted.

Time zones and daylight saving time

UTC and the Europe/Rome, Berlin, Paris, Madrid, Amsterdam, Brussels, Zurich, Vienna and London time zones are supported. Each city name is understood with the Europe/ prefix. Recognised time zones handle the European daylight saving changeover; unrecognised time zones may cause omissions.

Events without a time zone use the location's offset; all-day events keep their date. For locations outside Italy, the conversion of the displayed day uses the city's current offset: double-check the times of future events that cross a daylight saving change.

Exceptions and cancellations handled by the parser are supported; ordinal rules such as "last Monday of the month" and other advanced recurrences should not be assumed to be supported. Use a single test event to tell a connection problem apart from a recurrence limitation.

CHAPTER 14

Calendar troubleshooting

First stop the radio, check Internet access and open **Personal calendar** in the web panel. Read the status, last update, number of appointments and any omissions.

Symptom	Check and action
Calendar not connected	Save the correct private Google address with Save and sync. The monthly calendar alone does not prove that the feed is configured.
Link rejected	Copy the full secret address again from the Google calendar. Do not use Outlook, HTML, public, webcal, shortened URLs or URLs with added parameters.
Synchronisation on hold	Press STOP, not MUTE. Check Wi-Fi and correct time; then Update now. Wait for the request to finish before repeating it.
No appointments on the day	Check the calendar updated status, selected date, source calendar and the 31 days past / 366 days ahead range. Try a recent single event in Europe/Rome.
Some events omitted	Check the 160-event limit, advanced recurrences and time zone. The omission counter is a parser notice, not always a one-to-one count of missing appointments.
Wrong time or day	Compare the station's city, date/time, event time zone and source calendar settings. Distinguish All day from a timed event.
Link unreachable or HTTPS failure	Check network, date/time and link validity. If Google has reset it, save the new one. A managed account may have sharing restrictions.
Calendar over 1 MB	Use a dedicated calendar with less data. The station cannot download the full history beyond this limit.
Invalid iCal format or incomplete download	Copy the link again, retry with a stable network and a simple calendar. The response must be an ICS feed, not a web page or a login request.
Events gone after restart	The feed remains configured but data in memory are lost. Wait for the next synchronisation with the radio stopped.

WARNING

For support, send the error text and the INFO data. Do not send the secret iCal address, passwords or photos showing personal appointment details.

CHAPTER 15

Common problems and firmware information

Problem	Recommended procedure
Network does not appear	Use SCAN near the router. Check that the 2.4 GHz band is enabled and that the network name is visible.
Wi-Fi connection failed	Check network name and password, upper/lower case and symbols. For a changed network use FORGET NETWORK and set it up again.
Web panel unreachable	Read the IP on the display again. Connect the phone/PC to the same network; check guest network isolation and local access.
Weather or radar not updating	Check Internet and location, wait for loading. Missing data from a service does not imply a fault in the indoor sensor.
Radio with no sound	Turn off MUTE, raise the volume moderately, press STOP and PLAY and try another station. Leaving the page does not stop the radio.
Decoder not created or audio memory error	Note the full error and open INFO. Stop the radio, try a restart and contact support if it happens again. It does not indicate a wrong radio password.
Implausible indoor values	Move the station away from heat and sun, let the sensor stabilise and compare readings before correcting the temperature.
Controls out of view	Scroll the page; on the radio page, the filters and SAVE TO PRESETS are below the initial controls.

Identifying the version

Open **UTILITY**, scroll to **INFO** and note the firmware name and build date/time. The build date is not the station's current time. Also report which function was open and the steps leading up to the problem.

Restarting and care

If a restart is needed, stop the radio first and wait for any save to complete. Disconnect and reconnect the power supply intended for the unit. Do not disconnect during a firmware update carried out by support. Clean the display with a soft cloth, keeping liquids away from the connectors.

NOTE

Firmware updates require the procedure provided by the supplier: this manual does not ask you to compile or upload any code. Do not change the device's internal settings to resolve a message on the display.

CHAPTER 16

Final check and sources

Checklist after setup

- ✓ The location is correct and the time and date are consistent.
- ✓ The station is connected to Wi-Fi and the web panel opens from the local network.
- ✓ Indoor values are plausible and the outdoor weather is updating.
- ✓ A chosen radio station plays; after STOP, PLAY reopens the stream.
- ✓ With the radio stopped, the calendar shows the updated status and a known single appointment on the correct day.
- ✓ After a restart, once the network and synchronisation are back, the calendar is read again.

Official sources for external services

Service names and options may change or depend on account permissions. References consulted on 28 September 2026:

[1] **Google Calendar – Sync Google Calendar with other calendar apps.** Secret iCal address, availability and link management.

<https://support.google.com/calendar/answer/37648?hl=en>

[2] **Microsoft – Share your calendar in Outlook on the web.** Publishing, ICS link, read-only access and organisation-imposed limits.

<https://support.microsoft.com/en-us/outlook/share-your-calendar-in-outlook-on-the-web>

[3] **Google Calendar – Import events.** Importing ICS files and how this differs from automatic updates.

<https://support.google.com/calendar/answer/37118?hl=en>

Scope of this edition

The features and limits described apply to the firmware current as of 28 September 2026. The images were taken from the device. For a GDN or customer customisation, check the firmware name in INFO and use the controls available on your unit.

Contacts and support

For product information, support requests or customisations, please contact GDN creations.

G D N C R E A T I O N S

Smart Meteo Station

E M A I L

info@gdncreations.com

Before contacting support

For a faster reply, please include in your message:

- ✓ the firmware name and build date/time, found in **UTILITY → INFO**;
- ✓ the function that was open and the steps leading up to the problem;
- ✓ the exact text of any error messages shown on the display.

WARNING

Do not send the secret iCal address of your calendar, passwords or photos showing personal appointment details.