




PORSCHE

**Porsche AG, Cayenne S Hybrid (92A)
SUV
from Model Year 2011**

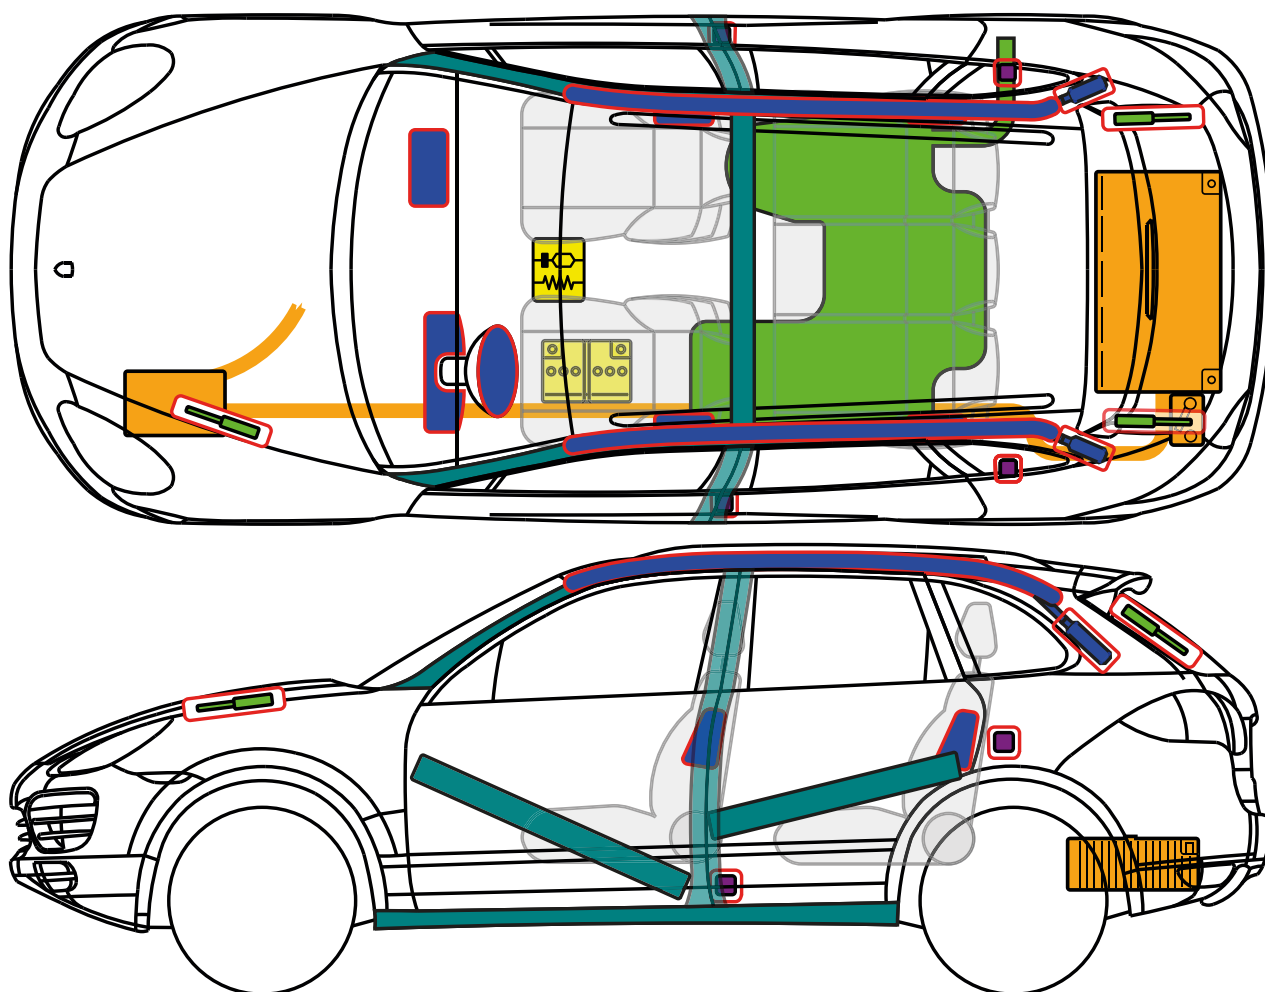


	Airbag		Body reinforcement		SRS-Control unit		High voltage battery
	Gas generator		Gas strut		12-volt Battery		High voltage cable / component
	Seat belt pretensioner		Pedestrian protection system		Fuse box		High voltage cut-off
	Fuel tank		Roll-over protection		Condenser		

Vehicle identification and marking


Cayenne S Hybrid identification features



“Hybrid” logo on the engine cover

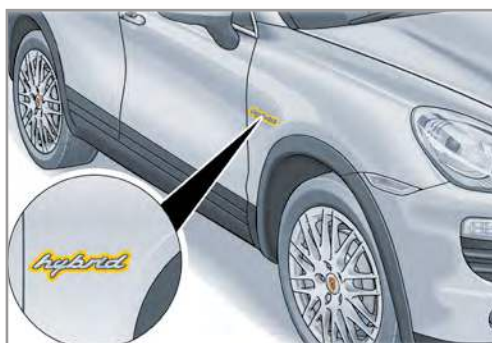

“Hybrid” logo on the left and right fenders

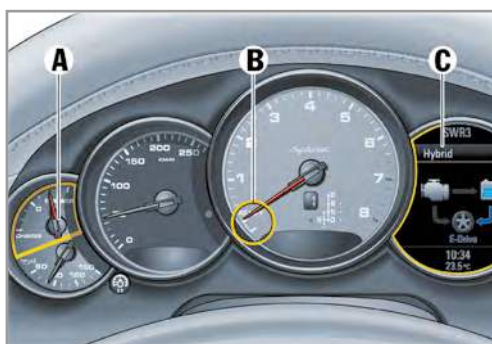

On the **instrument cluster**

A = E-Power meter,
B = READY indicator,
C = energy flow in the multifunction display

Marking of the hybrid components



All high-voltage components are clearly marked with warning labels.



Warning on the lockable plastic cover in the engine compartment.

All high-voltage cables have orange insulation.

Safety information about the hybrid system

Undamaged plugs, cables and sockets in the on-board high-voltage system are safe to touch.

DANGER

Risk of serious or fatal injury from electric shock if handled incorrectly!

If high-voltage components are not handled correctly, there is a risk of fatal injury.

- Do not touch high-voltage components that are in operation.
- Do not damage the orange high-voltage cables in the on-board high-voltage system.
- There may still be voltage in the high-voltage battery even after the on-board high-voltage system has been switched off. The high-voltage battery must not be damaged or opened.

Switching off the passive safety system and high-voltage system

WARNING

The electric motor is silent when stationary!

You cannot always tell from the operating noise whether the car is ready to start because the electric motor is silent when stationary.

- The vehicle may be ready to start even when no engine noises can be heard.
- The combustion engine may start automatically when the transmission is in “P” or “N” depending on the level of charge of the high-voltage battery.

NOTE

In the event of an accident where the airbags and seat belt pre-tensioners are activated

The high-voltage system switches off automatically in accidents where the airbags and seat belt pre-tensioners are activated.

NOTE

In the event of an accident where the airbags and seat belt pre-tensioners are not activated

The following steps should be taken to make sure that the engine and safety systems are switched off:

1. Switch ignition key to “OFF”.
2. Disconnect the 12-volt battery beneath the driver’s seat.


If neither the ignition nor the 12-volt battery is accessible:

1. Unplug the 12-volt connector in the luggage compartment.

Other deactivation methods as described in the manual (e.g. pulling out the service plug) may only be performed by appropriately qualified personnel.

Switching off the ignition


The method of switching off the high-voltage system described below applies to both vehicles with a conventional key and those with Porsche Entry & Drive.

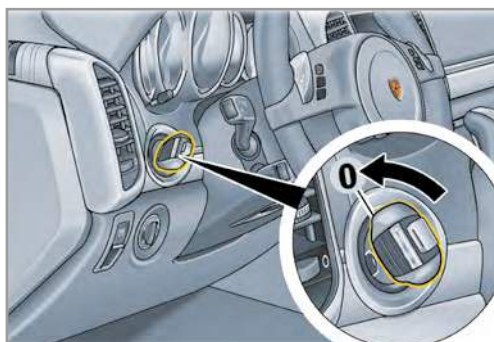


1. Turn the ignition key to “OFF” (0 position).

- There is no voltage in the high-voltage system once it has been switched off.
- The passive safety systems, such as airbags and seat belt pre-tensioners, are still supplied with voltage from the on-board 12-volt battery.

Disconnecting the 12-volt battery

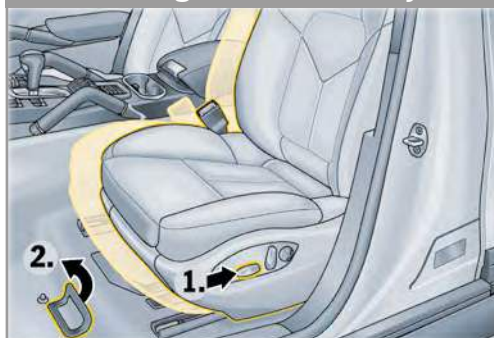

1. If possible, move the driver's seat back to the furthest position (-1-).
2. Remove the section of carpet (-2-).

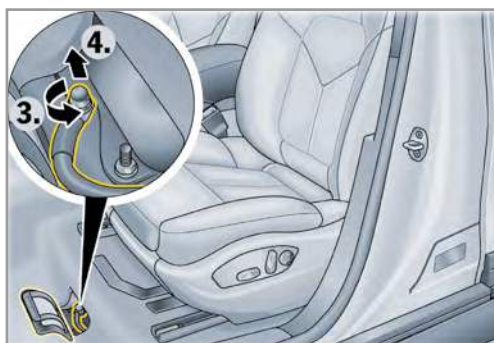

3. Disconnect the 12-volt battery's ground cable from the screw terminal (-3-).

- The passive safety systems (airbags and belt tensioners) are deactivated.

No access to the ignition or 12-volt battery

Unplugging the 12-volt connector in the luggage compartment



1. Open the luggage compartment cover.
The 12-volt connector to be unplugged is on the left-hand side of the high-voltage battery.
2. Unplug the 12-volt connector.

- There is no voltage in the high-voltage system once it has been switched off.
- The passive safety systems (airbags and seat belt pre-tensioners) are still supplied with voltage from the on-board 12-volt battery.

Other accident situations

Vehicle in water

There is no risk that the car body will be live. Once the vehicle has been recovered:

1. Allow the water to run out of the interior.
2. Begin switching off the high-voltage system.

Vehicle fire

Suitable extinguishing agent:

water (H₂O)

Battery fire

Suitable extinguishing agent for a battery fire:

dry sand, carbon dioxide (CO₂)

⚠ WARNING

Battery modules explode when hot!

Battery modules might explode if the high-voltage battery becomes too hot.

- Keep to the required safety distances when fighting the fire.