




Porsche AG, Taycan Cross Turismo / Sport Turismo  
4, 4S, Turbo, Turbo S, GTS  
Stationwagon (Y1A), as from model year 2021



PORSCHE

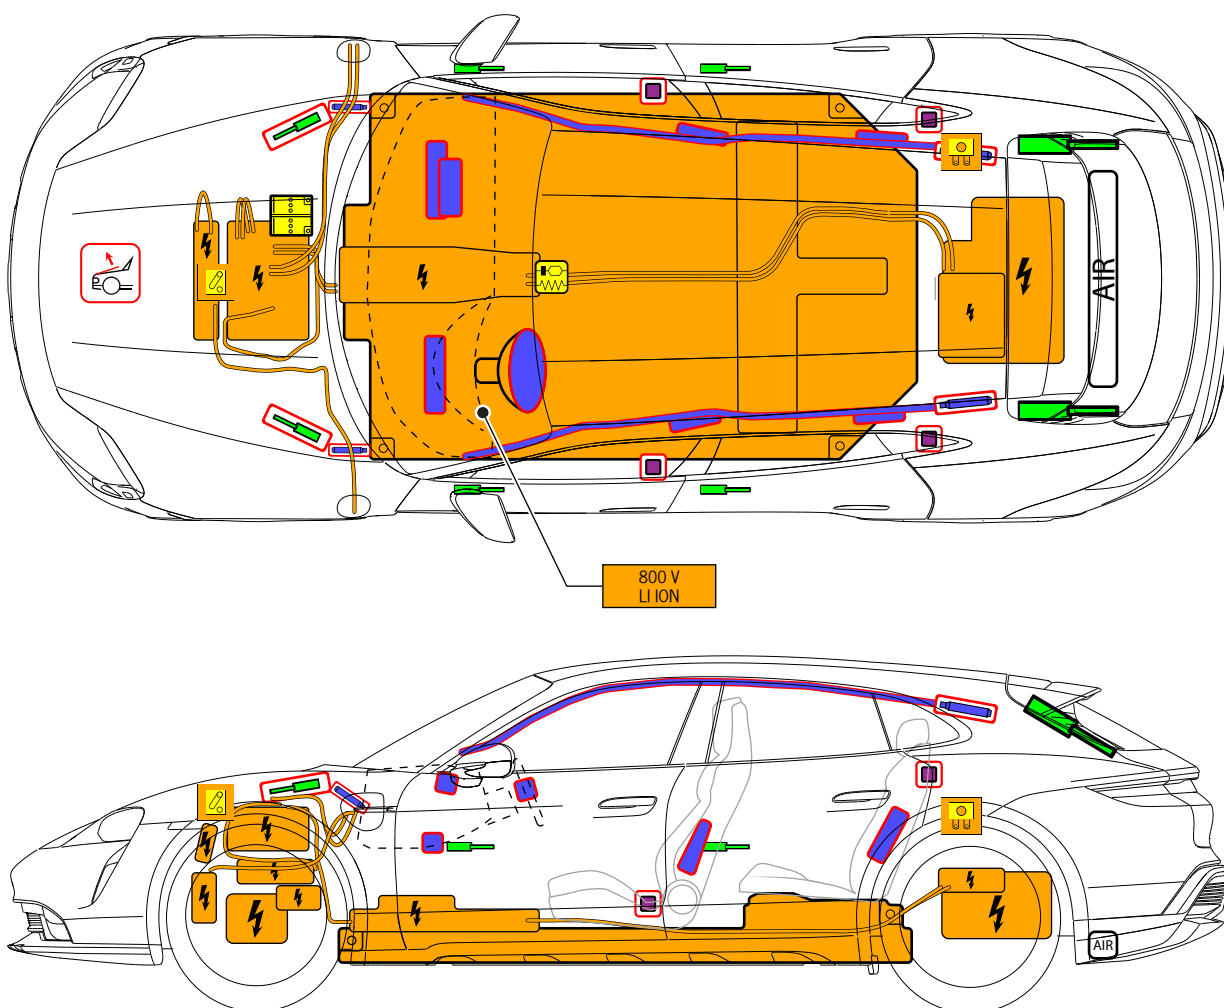

**Note:** The maximum possible equipment is shown.

|  |                     |  |                              |  |                          |  |                                                  |  |                                     |
|--|---------------------|--|------------------------------|--|--------------------------|--|--------------------------------------------------|--|-------------------------------------|
|  | Airbag              |  | Stored gas inflator          |  | Seat belt pretensioner   |  | SRS control unit                                 |  | Pedestrian protection active system |
|  |                     |  | Gas strut / Preloaded spring |  | High strength zone       |  |                                                  |  |                                     |
|  | Battery low voltage |  | High-voltage battery         |  | High-voltage power cable |  | Low voltage device that disconnects high voltage |  | Fuse box disabling high voltage     |
|  | Air tank            |  | High voltage component       |  |                          |  |                                                  |  |                                     |




# Porsche AG, Taycan Cross Turismo / Sport Turismo 4, 4S, Turbo, Turbo S, GT5 Stationwagon (Y1A), as from model year 2021

PORSCHE

## 1. Identification / recognition



The lack of engine noise does not mean that the vehicle is turned off.  
Restart is possible until the vehicle is decommissioned.

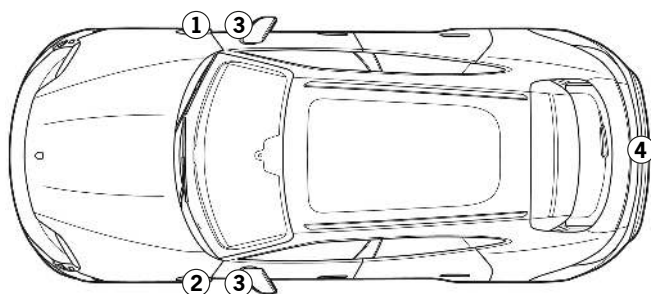

Equipment-dependent



Equipment-dependent


## 2. Immobilization / stabilisation / lifting

### Immobilizing the vehicle

Actuate electric parking brake



Lifting points

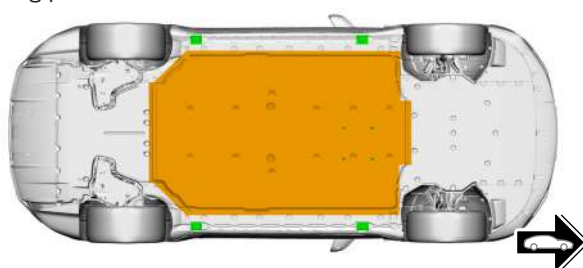


Suitable lifting points

High-voltage battery

### Switching off ignition

Press "Start-Stop" button on the instrument panel

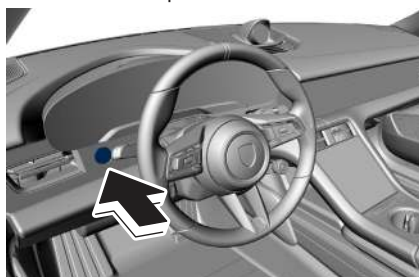


## 3. Disable direct hazards / safety regulations

The high-voltage system is automatically disabled in the event of accidents in which the airbag is triggered. The high-voltage system is de-energised approx. 20 seconds after the disabling.

### Disabling high-voltage system

Option 1: from the engine compartment

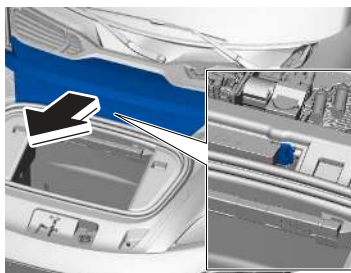






# Porsche AG, Taycan Cross Turismo / Sport Turismo 4, 4S, Turbo, Turbo S, GTS Stationwagon (Y1A), as from model year 2021


PORSCHE



Option 2: from the vehicle rear

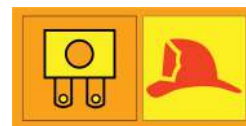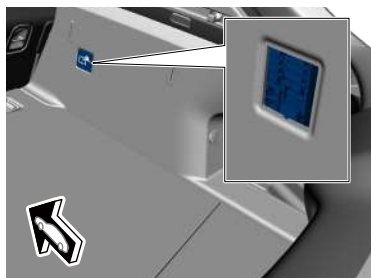


Do not touch, cut or open high-voltage components and high-voltage battery!  
Wear appropriate protective equipment!




## Disconnecting 12-volt battery

Disconnect negative terminal from the body contact point

## Disconnecting from charging station (emergency release), left and right

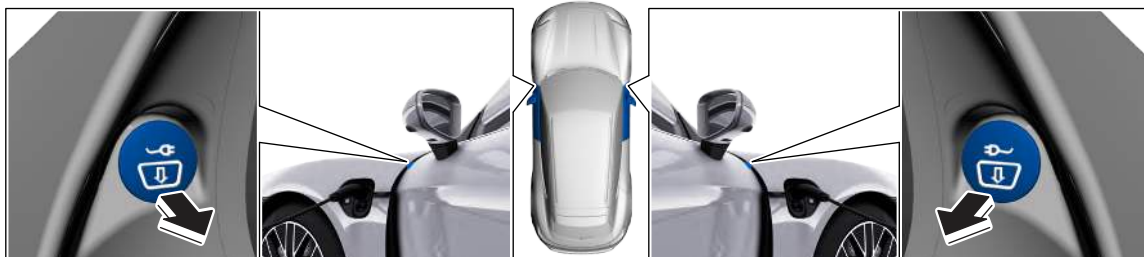


## 4. Access to the occupants

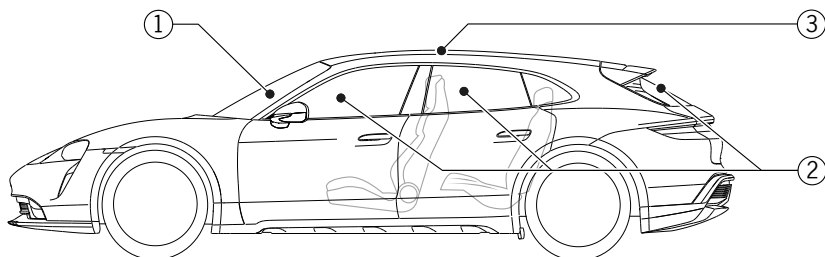


### Glass types

- ① Laminated safety glass
- ② Equipment-dependent: Single-pane safety glass or laminated safety glass
- ③ Equipment-dependent: laminated safety glass

## 5. Stored energy / liquids / gases / solids

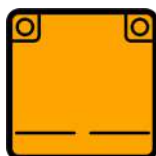

LI ION  
800 V



12 V



# Porsche AG, Taycan Cross Turismo / Sport Turismo 4, 4S, Turbo, Turbo S, GTS Stationwagon (Y1A), as from model year 2021

PORSCHE



If coolant is leaking from the battery cooling system, there is the risk of a thermal reaction in the high-voltage battery.  
Monitor high-voltage battery temperature.



## 6. In case of fire



Lithium-ion batteries may self-ignite or re-ignite after the fire has been extinguished!  
Wear appropriate protective equipment!



## 7. In case of submersion

After recovering the vehicle from the water, disable the high-voltage system (see section 3) and allow the water to drain. Wear appropriate protective equipment!


## 8. Towing / transportation / storage



Lithium-ion batteries may self-ignite or re-ignite after the fire has been extinguished!  
Wear appropriate protective equipment!



In the case of vehicles involved in an accident or if the HV battery is damaged or unusual: disable high-voltage system (see section 3). Park vehicle a safe distance from buildings and other vehicles (quarantine area).



Do not tow a vehicle involved in an accident on its drive axles.



## 9. Important additional information

You can find further information on assistance in the event of an accident and recovery of vehicles with high-voltage systems at:  
<https://www.vda.de/de/themen/automobilindustrie/standards-und-normung/retten-und-bergen>

## 10. Explanation of pictograms used



Electric Vehicle



General warning sign



Warning, Electricity



Flammable



Explosive



Corrosives



Hazardous to the human health




Environmental hazard



Bonnet



Boot



Remove smart key



Use thermal Infrared camera



Dangerous voltage



Use water to extinguish the fire