




▶

Audi Q5 hybrid quattro

2011 – 2016

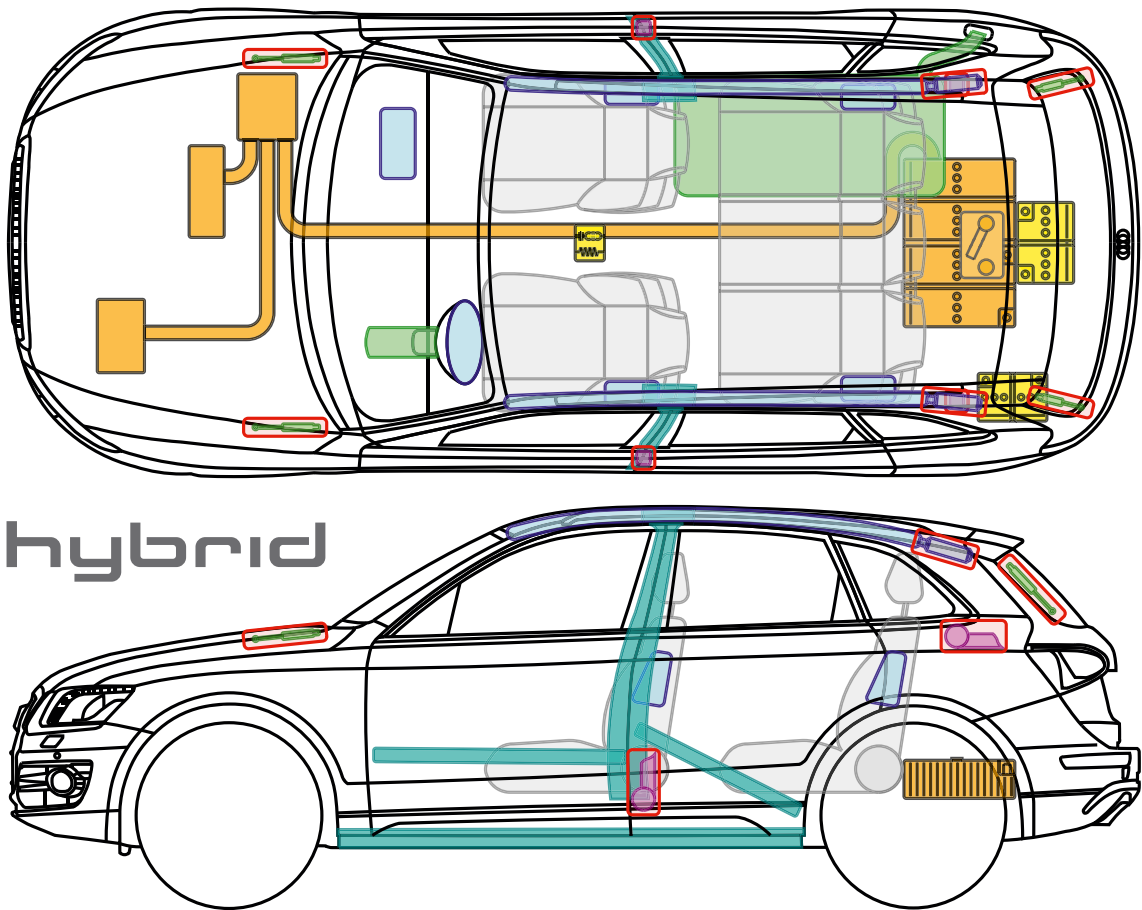

Legend

	Airbag		Reinforcement		Control module		High-voltage battery
	Gas generator		Rollover protection		12 V battery		High-voltage leads/components
	Pretensioner		Gas-pressure damper		Fuel tank		High-voltage emergency disconnect





► Audi Q5 hybrid quattro

2011 – 2016

Identifying feature

The Audi Q5 hybrid quattro can be identified by means of the „hybrid“ logo.



Engine compartment



Instrument cluster



Wing



Door sill trim strip

Hints



In the case of accidents in which the airbags are deployed, the high-voltage system is deactivated.

In the case of accidents with deployed/undeployed airbags

- Place Vehicle in Park and set parking brake
- Switch off the ignition
- Disconnect the negative terminals of the 12 V battery if needed

Independently therefrom the high-voltage system can be deactivated by the Service-Disconnect. For this open the cover in the middle of the cargo floor in the trunk:

Step 1: Pull lever



Step 2: Turn lever up and pull out plug




Switch off the ignition



With the ignition switched on and the key in the ignition:

Switch off the ignition by pressing the key into the ignition lock **without** depressing brake pedal. Pull out the key.

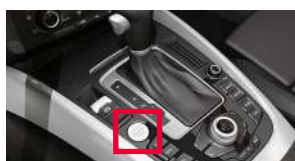

With the ignition switched on and the key not in the ignition (possible with the convenience key):

Press START ENGINE STOP button **without** depressing brake pedal. If possible, take the convenience key outside the transmission range of the vehicle (5 meter).



Risk of Injury: By pressing the key / the START ENGINE STOP button with depressing brake pedal, the engine starts!



► Audi Q5 hybrid quattro

2011 – 2016



Disconnect the negative terminals of the 12 V batteries

Option A:

Release the luggage compartment floor by means of the screws indicated by the arrows (screwdriver in the car tool kit) Disconnect the ground cables from both 12V batteries (picture on right)

Option B:

Lever up the luggage compartment floor by inserting a crowbar at the points indicated. Lift up the luggage compartment floor. Disconnect the ground cables from both 12V batteries (picture on right)

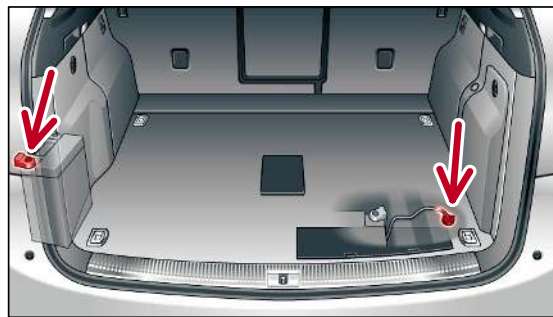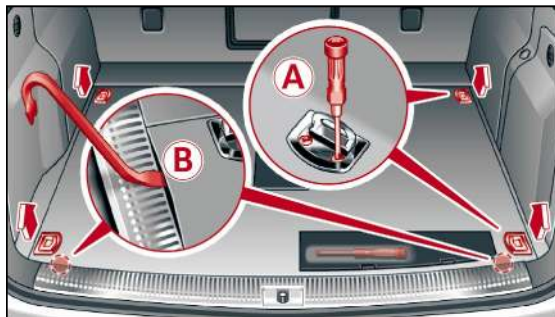

Identification of the high-voltage components

Identification of the high-voltage battery



Identification of the
The high-voltage
battery is located
under the luggage
compartment floor.

It is a Lithium-ion
battery.

Identification of the remaining high-voltage components



All the high-voltage leads and the
high-voltage connections are provided
with orange insulation. These items
must not be disconnected or damaged.