


AUTOCAR E-ACTT™ RESCUE SHEET (FIRST RESPONDERS)

Parsed from: First Responders Manual AWE 00424

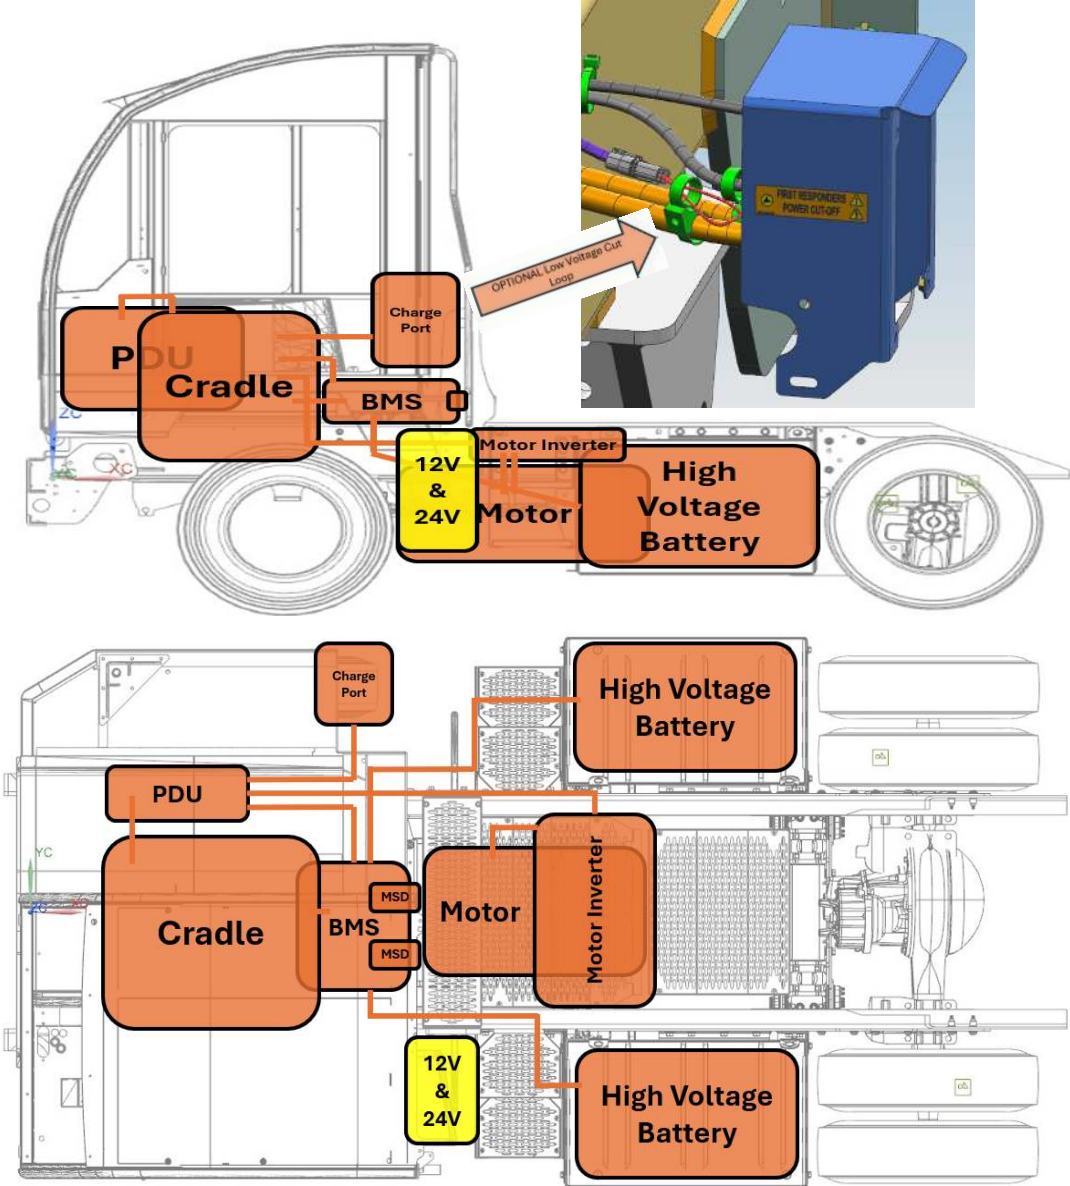

Key identification / component locations

- EV identification: “E-ACTT” model; no fuel tank; no exhaust; unique high-voltage warning labels; VIN has an “N” in the 7th position; large rectangular HV battery boxes on LH and RH sides behind cab.
 - High voltage (HV) cabling is **orange**; never cut, breach, or touch HV components/cables.
 - HV component overview: LH & RH battery packs; SBOX; MSD plugs; traction motor and motor inverter (see diagrams).
- Low-voltage (LV) shutdown: ignition OFF and remove key; if equipped turn LV cutoff OFF. Access LV batteries/circuit breaker—press red button on 24V breaker; alternate: cut three 12V cables if terminals inaccessible.
- HV shutdown caution: wait at least **15 minutes** for capacitor discharge; shutdown disables downstream HV components—**HV batteries remain energized**.

This rescue sheet is a quick-reference aid. Follow local procedures and the Autocar E-ACTT First Responders Manual for full details.

1. Identification / Recognition

- BEV (battery electric vehicle); lack of noise does not indicate vehicle is OFF.
- Look for high-voltage warning labels and orange HV cables.

2. Immobilize / Stabilize

- Chock/Block wheels.
- Set parking brake.
- Place vehicle into NEUTRAL

3. Disable Direct Hazards (Primary)

- If the vehicle is on, turn the ignition off. Remove the key. (SKIP THIS STEP IF IGNITION SWITCH IS NOT ACCESSIBLE)
- Locate the 12V battery and disconnect the ring terminals and secure away from the battery. Alternatively cut the wires leading from the terminals in two places.
- Locate the two manual service disconnect plugs on HV battery energy storage system. The plugs are located under the rear cab step. Lift the handle and pull the plugs all the way out and remove from the vehicle. Ensure both are fully removed.
- If manual service disconnect (MSD) plugs are not accessible, locate the cut loop behind the charge port bracket (refer to label on charge port) and cut at the marked location to disable low voltage power to the S-Box.

4. Fire / Off-Gassing

- Wear full PPE, CLASS 0 HV gloves and Self Contained Breathing Apparatus; establish a secure perimeter.
- Use large, sustained amounts of water to cool Li-ion batteries
- Do NOT penetrate HV battery/casing to apply water.
- Watch for delayed re-ignition until battery energy is depleted.

5. Water Submersion

- Treat submerged vehicle/water around it as energized.
- Do not contact without proper HV PPE; avoid orange cables/components.
- Water intrusion can damage electrical components even if not obvious.

6. Towing / Transportation / Storage

- Preferred tow method is to tow with rear wheels lifted.
- Emergency extraction acceptable less 3 mph for 98 ft max.
- If towed with wheel on ground, driveshaft must be removed.
- Damaged vehicles: isolate outdoors, 50 ft (15m) from structures/combustibles.