

INFORMATION FOR FIRST AND SECOND RESPONDERS

EMERGENCY RESPONSE GUIDE



KIA EV3 Electric

Li-ion Battery

Li-ion



Introduction

The ERG (Emergency Response Guide) provided by Kia describes emergency response operations, warnings and precautions related to the vehicle. This publication is intended to provide necessary information for vehicle accident rescue operations and for the training and further education of first and second responders.

It is not intended for retailers, end consumers, or any other readers not mentioned in the preceding sentence. Please note that the guide may be updated by Kia on an ongoing basis. The provided guide applies only to the Kia EV3 and includes information about the location and description of the high-voltage parts and the vehicle's structure. However, it does not cover every scenario in emergencies.

Failure to follow the recommended procedures during emergency response may result in death or other serious injuries. It is important to read the guide in advance as it contains necessary information about the vehicle's features and other contents in the event of an accident.

IMPORTANT INFORMATION

 DANGER

A DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

 WARNING

A WARNING indicates a hazardous situation which, if not avoided, may result in death or serious injury.

 CAUTION

A CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTE

A NOTE indicates a hazardous situation which, if not avoided, could result in vehicle damage.



Contents

0. Rescue sheet(s)	1
1. Identification / recognition	2~4
2. Immobilization / stabilization / lifting	5~6
3. Disable direct hazards / safety regulations	7~8
4. Access to the occupants	9~10
5. Stored energy / liquids / gases / solids	11~12
6. In case of fire	13~17
7. In case of submersion	18
8. Towing / transportation / storage	19~21
9. Important additional information	22~25
10. Explanation of pictograms used	26

0. Rescue Sheet



Kia EV3
MPV, 5 Doors
From June 2026

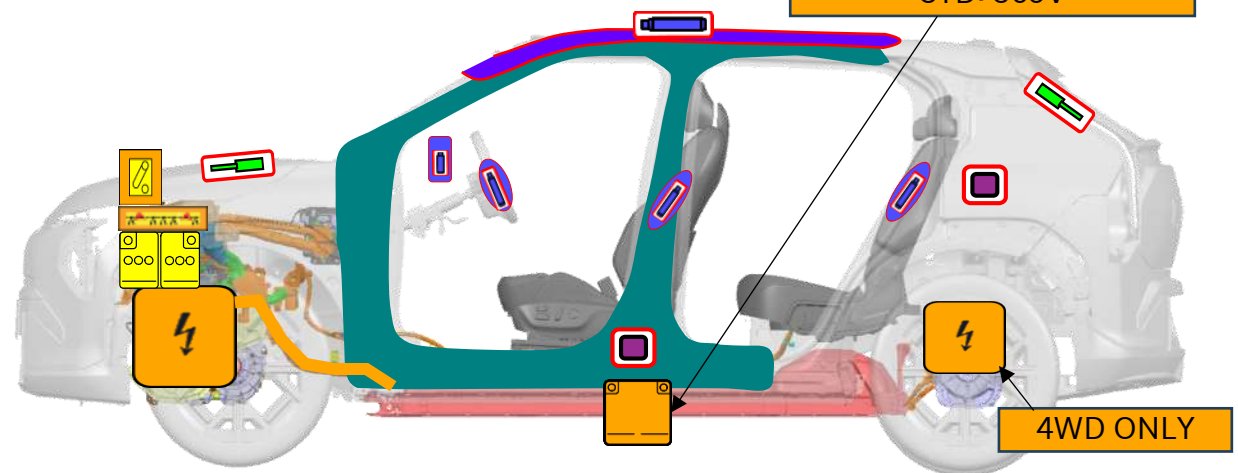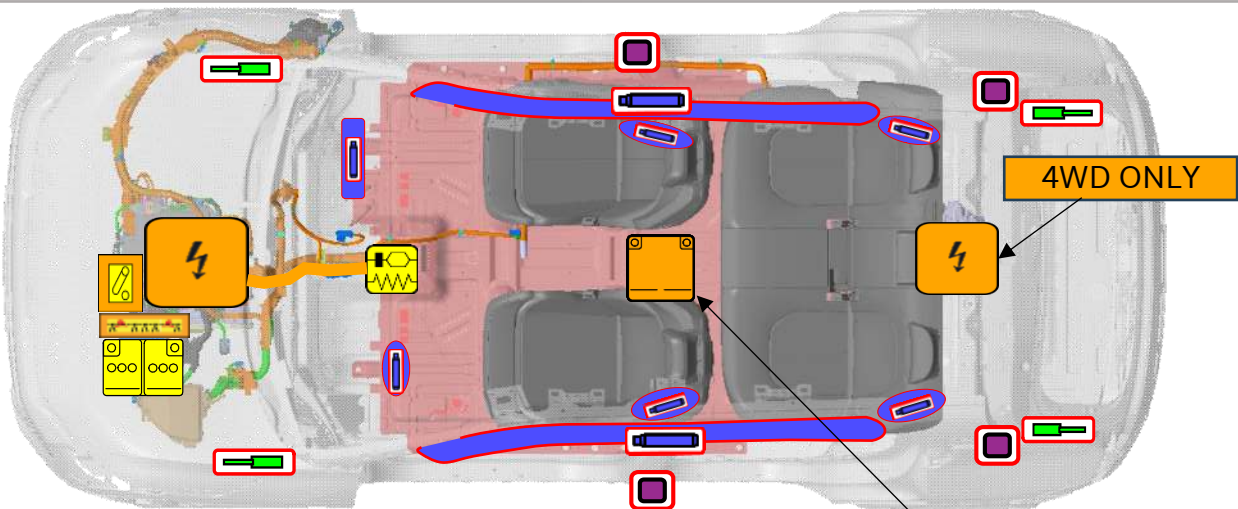

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery low-voltage		Gas strut / Preloaded spring		Level 3 (High strength zone)		Disconnect High voltage device
	Battery pack, high-voltage		High voltage power cable		High voltage component		Cable cut

1. Identification / recognition

Purpose


The ERG (Emergency Response Guide) offers guidance to emergency responders and towing company personnel on the proper way to handle various situations, including emergencies, involving the EV3. The emergency response procedures for this vehicle are similar to the those for vehicles without high-voltage system, and additional information is included for handling high-voltage system.

Description of the Vehicle

EV3 operates using batteries and electrical motors. Vehicles that are not EVs use internal combustion engine and fuel such as gasoline, but EVs use electricity stored in the high-voltage battery to power the motors. Stated otherwise, they do not require gasoline fuel and do not release exhaust fumes. When decelerating or driving downhill, regenerative braking works to charge the high-voltage battery. This minimizes energy loss and increases mileage. When the battery is low, normal, fast, or emergency charging is available.

Dimensions

Items		mm
I	Overall length	4,300
w	Overall width	1,850
h	Overall height	1,560

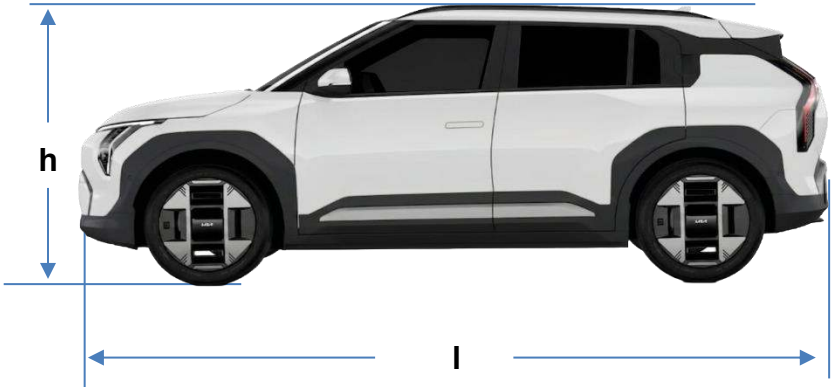

1. Identification / recognition

Description

When handling the EV3, the safest identification method is to assume that the vehicle contains a high-voltage system.


The EV3 can be identified by using the identification information listed below.



Charging door



Charging inlet

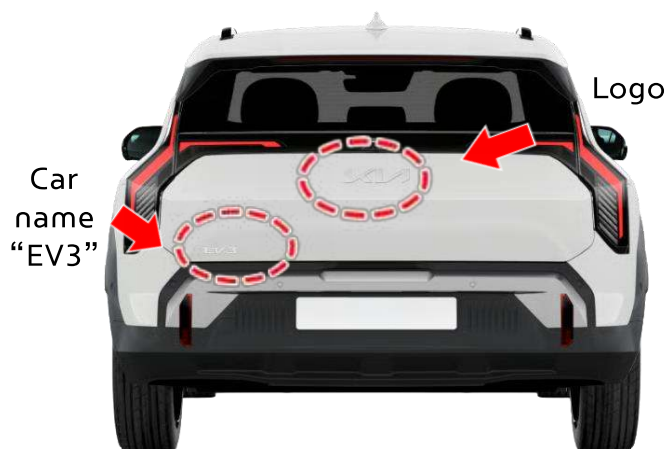

Logo

Car
name
"EV3"

1. Identification / recognition


Vehicle Identification Number (VIN)

You can identify the vehicle as an electric vehicle by checking the 8th character of the Vehicle Identification Number (VIN).

As shown in the illustration, the VIN is punched into the floor underneath the passenger seat, and is also displayed on the vehicle's exterior windshield.

For example, "A" or "B" or "C" or "D" of the VIN's 8th letter indicates that the vehicle is an electric vehicle.


XXXXXXXX**A(B,C,D)**XXXXXXXXXX

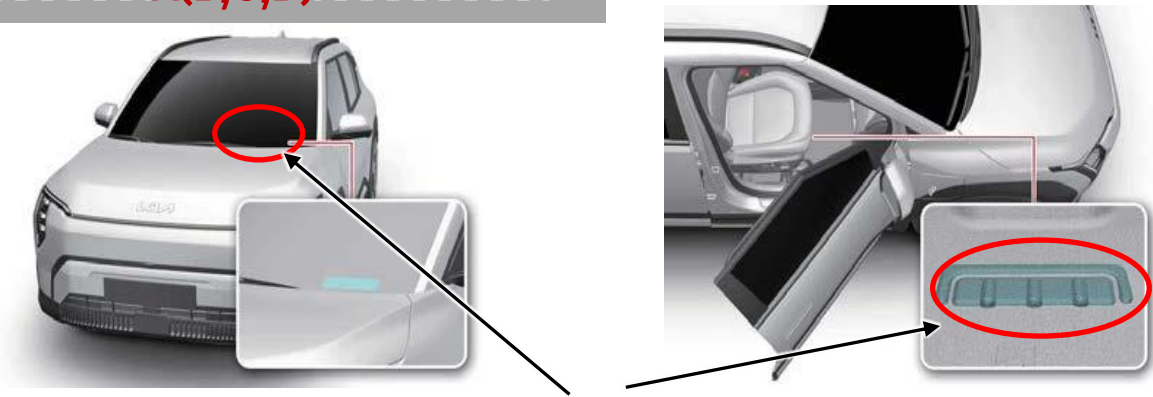

Vehicle Identification Number (VIN)

High voltage cable and battery configuration

The high-voltage battery (Li-ion pack, 60 V or higher) is installed under the vehicle floor (exterior), and the high-voltage wiring harness is colored orange.

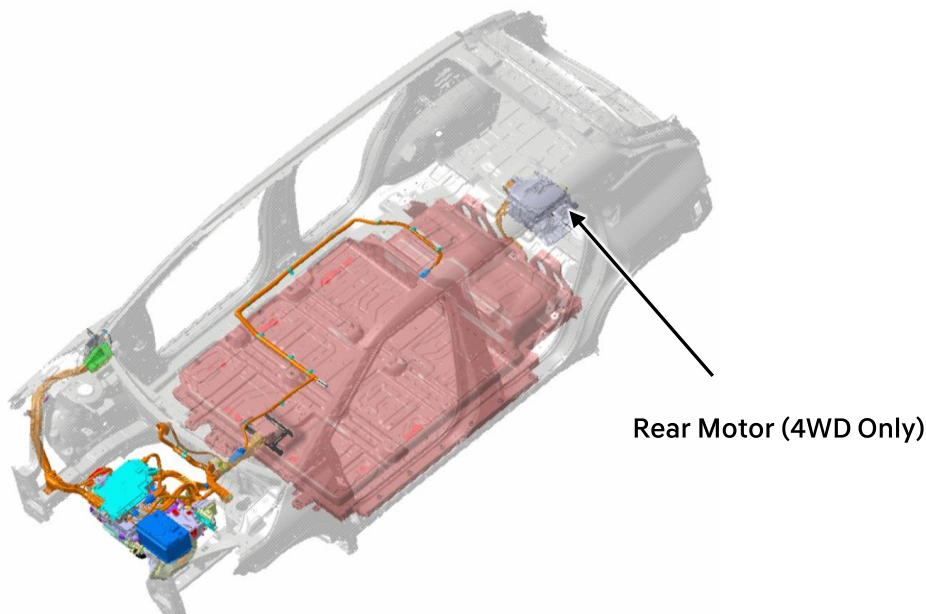

2. Immobilization / stabilization / lifting

⚠ WARNING Immobilization



The next step is to immobilize the vehicle. The failure to do so could result in accidental movement that can endanger rescue responders or civilians. When the EV3 is damaged in a crash, the vehicle may appear to be shut off, even when it is not, due to a lack of virtual engine sounds.

When in “READY” mode, the vehicle can move silently by only using the electric motor. Rescue responders should approach the vehicle from the sides and stay away from the front or rear as they are potential paths for vehicle movement. Be sure to immobilize the vehicle in the following manner.



Pull the EPB switch located on the left side of the steering wheel.



While depressing the brake pedal, press the side parking button to engage Park mode.



Press the EV button to turn off the vehicle.





Chock the wheels.

2. Immobilization / stabilization / lifting


⚠ WARNING Vehicle Lift ⚠

Use the standard support area () of the vehicle's undercarriage at all times as shown in the picture.

Do not support high voltage cable areas and other non-supporting areas.

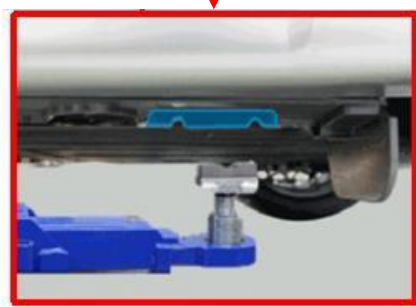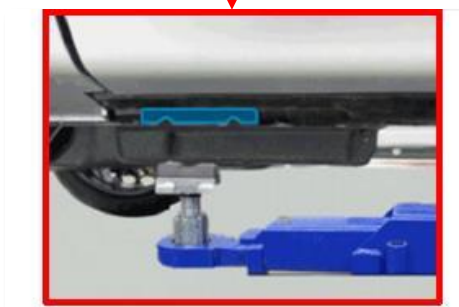

※ Actual images of the vehicle may differ from those shown.

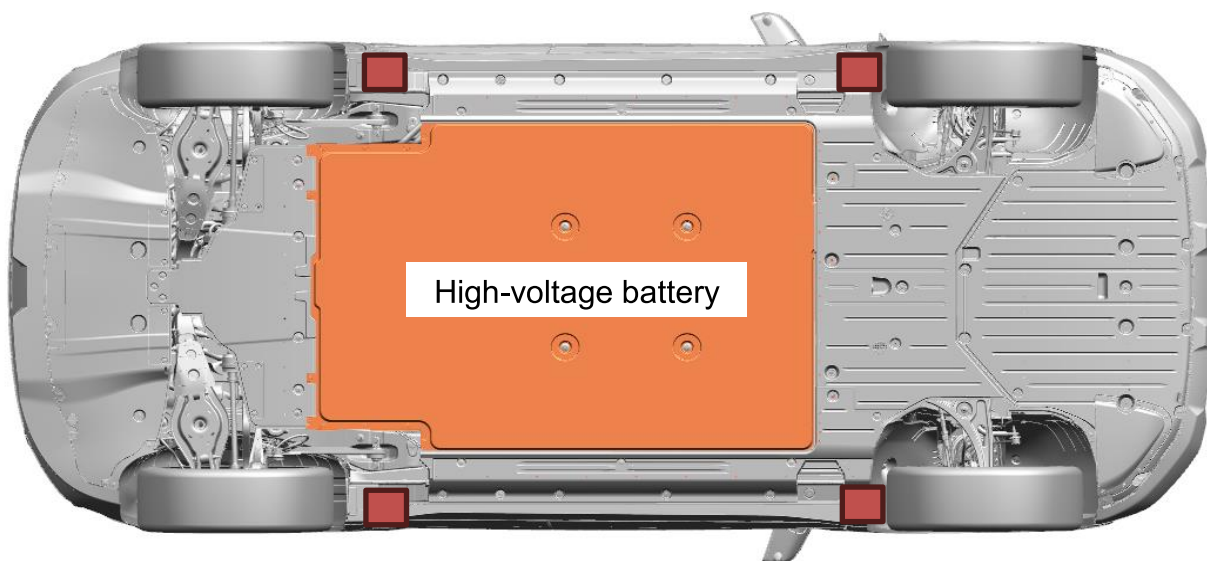



※ Do not use the high-voltage battery as a lifting or support point for the vehicle.

3. Disable direct hazards / safety regulations

Disabling the System

The final step in the initial response process, after immobilizing the vehicle to prevent movements, is to disable the vehicle. Disabling the high-voltage system is available through the following process.

Charging status / Smart Key System / EV Button / Battery, Low-Voltage

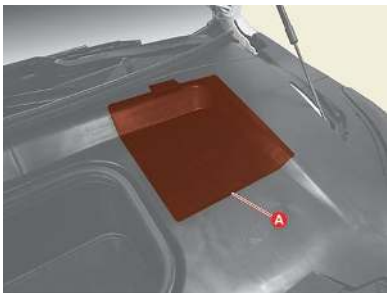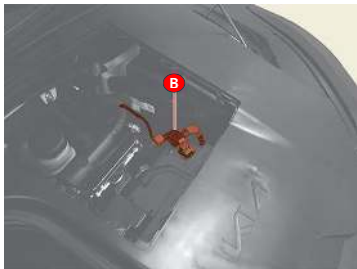Charging status	※ If the vehicle is charging, make sure to disconnect the charging cable from the charging device.
 EV button	※ Check for the drivable lamp on the instrument panel. When the lamp is ON, the vehicle is ON. a) When the lamp is OFF, the vehicle is OFF. Do not press the start button as the vehicle will be turned ON and can move. b) To disable the system, press the P (Park) or move the shift lever to the P (Park), then press the Start button to turn the vehicle OFF.
 Smart Key	Until disconnecting the low-voltage battery, remove the smart key at least 2 meters (7 feet) away from the vehicle to prevent accidental restart.
 	1) Open the hood and remove the service cover (A). 2) Disconnect the battery (12 V) negative (-) terminal (B).


NOTICE

Before disconnecting the low-voltage battery, lower the windows, unlock the doors, and open the liftgate if necessary.

Disconnecting the battery, low-voltage disables the window and door power control.

3. Disable direct hazards / safety regulations

Disabling High Voltage System

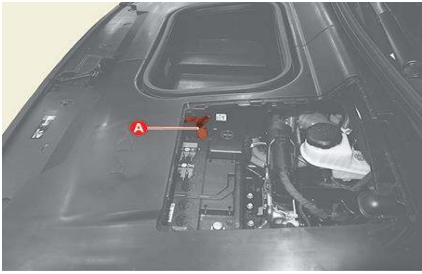

※ Open the hood, locate the PE room, and remove the service cover near the 12V battery.
After removing the cover, locate the interlock connector near the 12V battery.



※ Disconnect the service interlock connector shown below.

- ①: Identify the service interlock connector label attached to the wire.
- ②: Disconnect the high voltage service interlock connector.



Service Interlock Connector

⚠ WARNING

If you are unable to perform the above measures, the high-voltage system may not be shut off and there is the possibility of sudden activation of the airbag system.

⚠ DANGER Warning for High Voltage! ⚠ ⚡

- Before engaging in any emergency response procedures on the vehicle, shut off the high-voltage system. Wait for 5-10 minutes after shutting off to discharge the high-voltage capacitors sufficiently.
- Exposed cables or wires may be visible from the inside or outside of the vehicle. To avoid serious injuries or death from electric shock, do not touch the cables or wires until the high-voltage system is shut off.
- Failure to follow these procedures properly will lead to serious injuries or death from electric shock.

⚠ DANGER Warning for Explosion! ⚠ ⚡


- Airbag system components may deploy unexpectedly. Do not cut airbag components.
- Airbag components may be energized or activated even after shutting off or disabling 12 V electrical system. Before starting work, disconnect the battery negative (-) cables and wait for at least 3 minutes.
- Failure to follow these procedures properly will lead to serious injuries or death from explosion.

4. Access to the occupants

⚠ WARNING




Since the EV3 is equipped with high-voltage components, responders should follow the procedures for identification and deactivation/stabilization, and exercise special care when rescuing occupants from the vehicle.

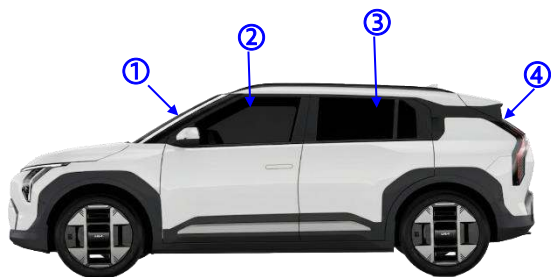


GLASS

- ①: Laminated
- ②,③: Tempered/Laminated (Opt)
- ③: Tempered
- ④: Tempered

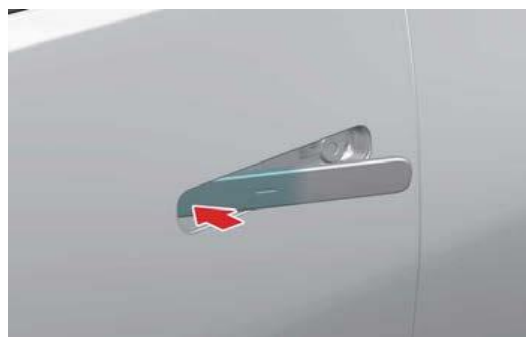

Manual door handle deployment procedure

1. Press the front part of the handle to extend it.
2. Pull the extended handle to open the door.
(※ For electric type outside door handles, the handles automatically pop out when the air bags deploy. However, they may not pop out due to damage caused by the collision.)

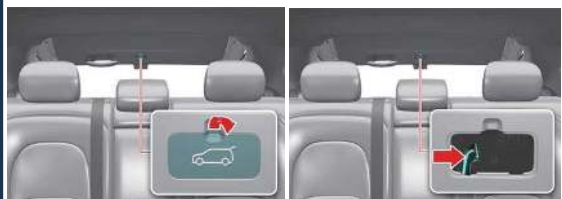


Emergency liftgate safety release

1. Remove the cover at the bottom of the liftgate.
2. Slide the latch in the direction of the arrow to unlock the liftgate.
3. Push the liftgate to open.



Steering column adjustment


1. To change the steering wheel angle, pull down the lock release lever (1).
2. Adjust the steering wheel to the desired distance forward or back (3) and angle (2).

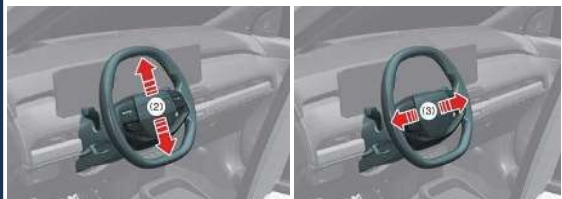

4. Access to the occupants

Seat adjustment

: Driver/Passenger

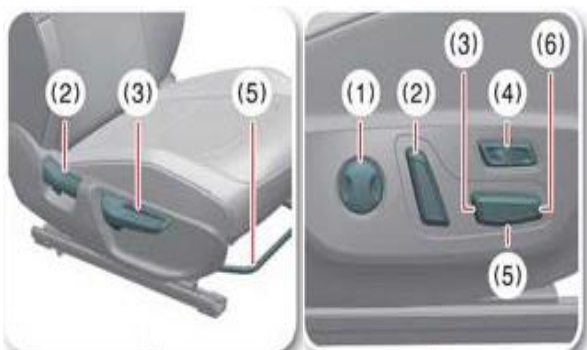

〈Manual seat〉: Using Lever


- (2) Seatback angle
- (3) Seat cushion height
- (5) Forward and backward

〈Power seat〉: Using Switch

- (1) Lumbar support
- (2) Seatback angle
- (3) Seat cushion height
- (4) Relaxation comfort seat
- (5) Forward and backward
- (6) Seat cushion tilt

When engaging in rescue operations on the EV3, it is recommended that responders follow the standard operation procedures of their department.

When cutting the vehicle body, be aware the areas marked in blue and purple in the diagrams below cannot be cut or broken with standard tools.

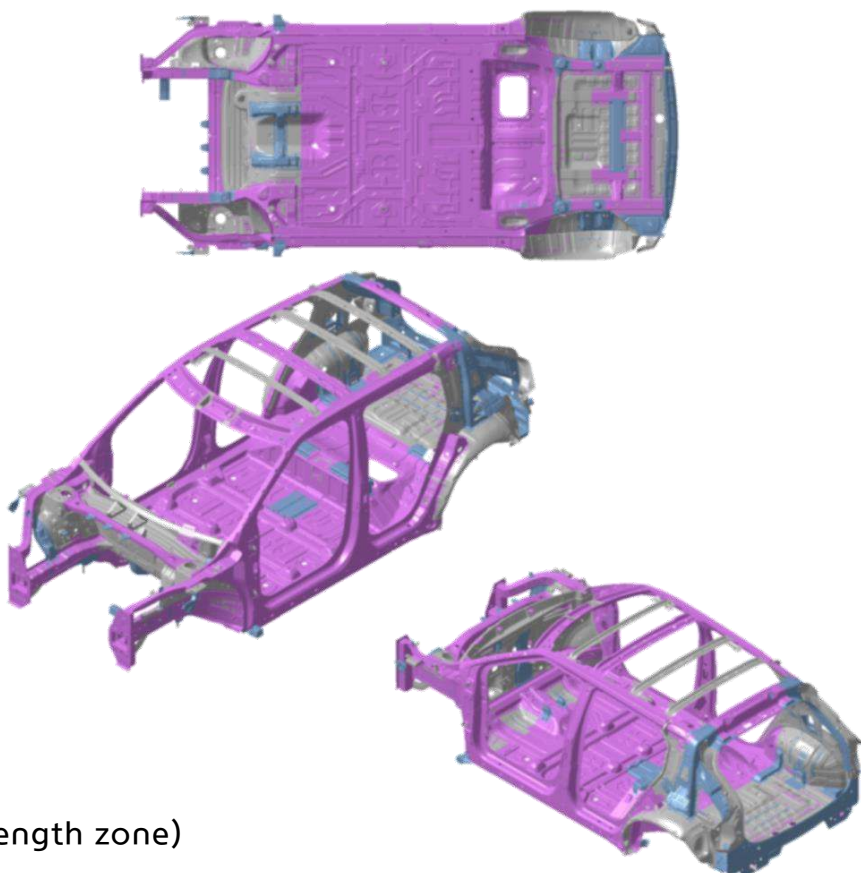

- Level 1
- Level 2
- Level 3 (High strength zone)


5. Stored energy / Liquids / Gases / Solids

 WARNING

Warning for High Voltage!


- Never cut or disconnect the high-voltage orange cabling until the high-voltage system is cut off by removing the safety plug.
- Exposed cables or wires may appear from the vehicle’s inside or outside. To avoid serious injuries or death from electric shock, do not touch the cables or wires until the high-voltage system is shut off.
- Failure to follow these instructions will lead to serious injuries or death by electric shock.

Configuration

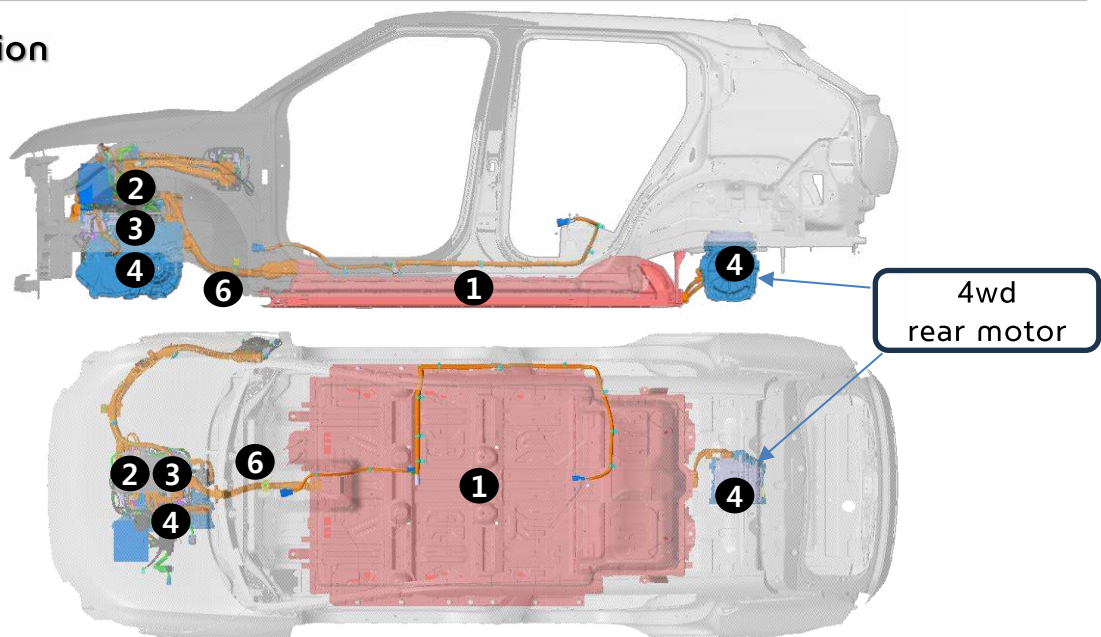

1	High-voltage Battery		Supplies electric energy to the motor and PE parts in the discharge mode Stores electric energy through the charger or regenerative braking in the charge mode
2	High-voltage Junction Block		Supplies current from the high-voltage battery to the inverter, LDC and others
3	ICCU (OBC+LDC)		ICCU (Integrated Charging Control Unit) OBC (On-Board Charger): High-voltage battery slow charging (AC → DC) LDC (Low Voltage DC - DC Converter) : Low-voltage battery charging by converting high voltage into low voltage V2LC (Vehicle to Load Converter) ※ Optional item: External power supply (DC → AC)
4	Operation System	Motor	Rotates the motor and generates torque if current flows in the coil
		EV TM (Reduction gear)	Increases electric motor torque and transmits it to the wheels
		Inverter	DC → AC (from high-voltage battery to electric motor) AC → DC (charging through regenerative braking)
5	High-voltage cable		High-voltage cables are colored orange in accordance with SAE regulations

5. Stored energy / Liquids / Gases / Solids

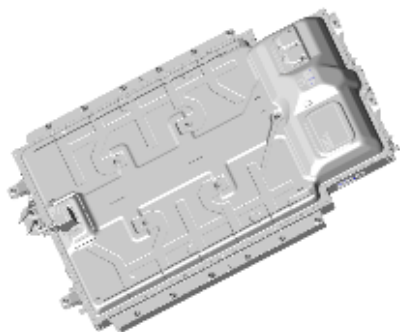


High-voltage battery

Lithium-ion high-voltage battery is under the EV3's floor, outside the vehicle. It stores electric energy and supplies it to the electric motor. (Long range type: 343V, standard type: 369V for this vehicle model)




※ Warning label
: Top of the battery

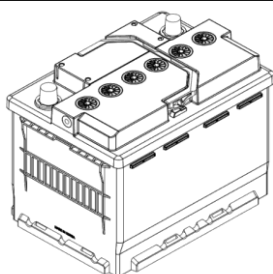

12V battery

12V battery is on the left side of the motor room and supplies power to electric systems, such as a radio, headlamps, and windows.

Orange High-voltage Power Cable

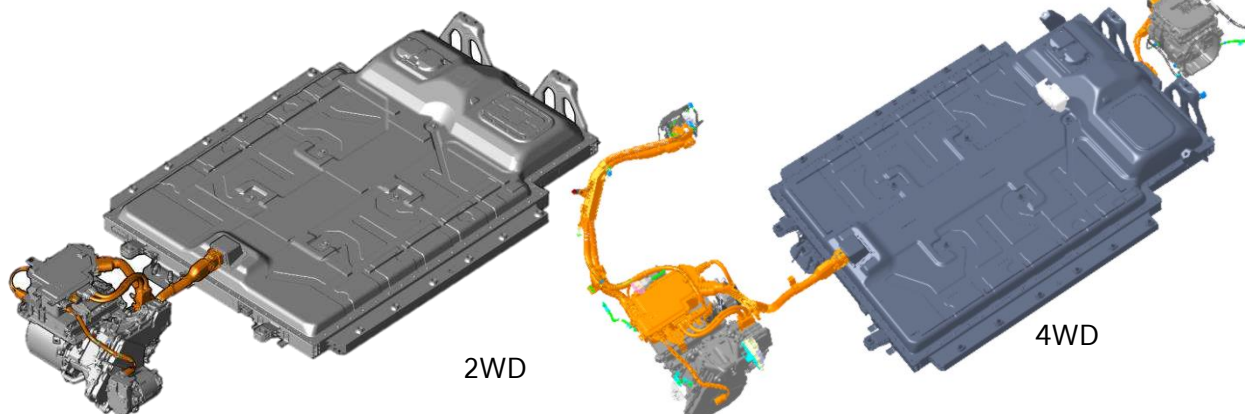

High-voltage Power Cables are orange by SAE standard. The cables pass through the bottom of the vehicle and connect the high-voltage battery with high-voltage components such as ICCU, motors, OBC, or AC compressor. A vehicle with high-voltage systems can be identified through orange high-voltage power cables that can be seen in the motor room and on the bottom.

Flammable Materials

Plastics
Electrolytes
Resins
Magnesium
Gases or other combustible fluid

6. In case of fire

WARNING

6.1 Fire characteristics and precaution of EV



EV fires are different from ICE fires, so special care is needed when extinguishing them. Because EVs use a high-voltage battery pack, EVs can be more dangerous when fires occur and there is a risk of explosion and recurrent fire. Below are the main precautions for EV fires.

- **High-voltage system**

EVs use high-voltage battery systems, so cut off the high-voltage systems before approaching the fire scene. Identify the high-voltage battery, battery, wires, and electric components, and wear insulated gloves and boots when approaching to avoid the risk of electric shock.

- **Risk of battery fire**

The lithium-ion battery in an EV can explode at high temperature if a fire occurs. This can cause the fire to spread. The lithium-ion battery releases gas due to electrolyte decomposition when exposed to temperature above 300 °F (148 °C) for a long time. If there is an ignition source, as a flame or spark, in the gas, it may cause a fire.

- **Use a large amount of water**

When extinguishing an EV fire, it is important to use a large amount of water to lower the temperature of the high-voltage battery cells. The amount of water for extinguishing an EV fire may be much greater than for a normal vehicle fire. Extinguishers other than water (e.g. CO₂ extinguisher, dry powder extinguisher, etc.) are not effective in an EV fire, so they are not used to EV fires.

- **Set a safe zone**

Restrict public access around an EV on fire and set a safe zone around areas with a risk of explosion. In the event of a fire, flooding, or collision involving a high-voltage battery, always store the vehicle in an open space at least 15 meters away from inflammables.

- **Prevent fire recurrence**

Even if a high-voltage battery fire appears to be extinguished, recurrence or delayed ignition can occur. Use a thermal-infrared camera to ensure that the high-voltage battery is completely cooled before leaving the fire scene. Inform follow-up responders of possibility of fire recurrence. Even if the fires are extinguished, stand by at the scene for a certain amount of time and monitor the situation to prevent fire recurrence.

- **Caution against toxic gases**

Burning batteries can release toxic gases, including hydrogen fluoride, carbon monoxide, and carbon dioxide. Wear full protective gear and use a full-front self-contained breathing apparatus (SCBA) while extinguishing a fire because this can cause a serious risk to respiratory system and health.

6. In case of fire

WARNING

6.2 Equipment required before extinguishing a fire

1) Personal Protective Equipment (PPE)

- Chemical and high-temperature protective clothing: Wear gear to protect against chemicals and high temperature.
- Insulated gloves and boots: Wear insulated equipment to protect against high-voltage electrical hazards.
- Safety helmet and goggles: Wear helmet and goggles to protect against falling objects and smoke.
- Respiratory protection equipment (e.g. SCBA, air respirator): Wear respiratory protection equipment to protect against inhalation of toxic gases and smoke.

WARNING

Warning for irritant substance!



- There are stimulants and sensitizers for high-voltage battery. Wear personal protective equipment (PPE) and self-contained breathing apparatus (SCBA) to avoid contact with stimulants and sensitizers.
- The electrolyte is an eye irritant. If it comes into contact with eyes, rinse the eyes **thoroughly** with water.
- The electrolyte is a skin irritant. If it comes into contact with skin, wash the contact part thoroughly with soapy water.
- Electrolyte or fumes **can stimulate** the eyes or skin if exposed to vapor in the air. In this case, rinse the contact part with water and seek medical treatment immediately.
- If smoke is inhaled, it can irritate the respiratory system and cause acute intoxication. Move to a place with fresh air and wash the mouth with water. And then, seek medical treatment immediately.

2) Hybrid Vehicle Fire Extinguishment Equipment

- Smothering extinguishing fire blanket, portable submersion tank: Prepare dedicated equipment for efficient extinguishing of hybrid vehicle fires.
- Thermal infrared camera: Prepare equipment for monitoring the temperature of the battery and the fire area.
- Cutting tools (e.g. cutting machine, electrical circuit breaker): Prepare tools for power cutoff and rescue.

6. In case of fire

WARNING 6.3 Extinguishing electric vehicle fire

Control the scene and restrict public access around the scene by setting a danger zone. In case of a high-voltage battery fire of electric vehicle, there is a risk of additional explosion. Conduct fire extinguishing from a sufficient distance. First, use a large amount of water to prevent initial spread, and then use a portable submersion tank to extinguish the fire.

- **Release a large amount of water**

A high-voltage fire of EV is highly likely to reignite, so it is important to use a large amount of water to extinguish the fire. Use a high-pressure hose to spray a large amount of water directly onto battery pack, especially the area where the flames are rising. Water can penetrate into the battery pack, effectively reducing the heat. Water must be sprayed continuously until the battery is cooled completely. This could take a number of minutes up to several hours. A large amount of water is needed to extinguish the fire.

- **Use the immersion method**

The fire can be extinguished more effectively by first extinguishing the vehicle fire, then moving the vehicle to a safe location and using a container or tank filled with water. Leave the battery submerged for about 72 hours or more. Depending on the type and size of the immersion tank, a large amount of water may be required.

WARNING 6.4 Considerations during fire extinguishment

- **Caution of handling high-voltage battery**

During the fire extinguishing, be careful to avoid physically touching or impacting the battery pack. This can increase the risk of electric shock and explosion. If there is an opening in the battery due to impact or damage, spraying water on the area is helpful to extinguish the fire effectively. However, never attempt to force a hole in the battery to inject water.

- **Caution against electric shock**

While spraying water on an EV high-voltage battery, high voltage can cause electric shock, so responders should wear safety equipment and avoid direct contact as much as possible.

- **Avoid using extinguishing substance other than water**

Inert extinguishing substance such as CO₂, dry powder, or foam extinguisher, are not effective to extinguish an EV high-voltage battery fire and may actually worsen the fire. Water is the most effective way to extinguish the fire.

6. In case of fire

⚠ WARNING 6.5 Prevention of fire recurrence

EV fires are different from other vehicle fires in that they have a high risk of reignition even after the fire is extinguished due to the EV high-voltage battery's characteristics. Therefore, after extinguishing an EV fire, take follow-up measures to avoid reignition and ensure that it is completely extinguished.

- **Use of thermal infrared camera**



A thermal infrared camera can measure the temperature of the battery cells and surrounding area in a non-contact manner and it is useful for detecting internal heat invisible to the naked eye. Conduct repeated thermal infrared inspections of the entire vehicle and high-voltage pack to ensure that temperatures remain stable. When the fire is completely extinguished, the temperatures in all areas measured by the thermal infrared camera should be uniform and stable.

- **General criteria for complete extinguishing**

Use an immersion tank to submerge the battery for approximately 72 hours or more and measure the battery temperature using a thermal infrared camera. If there is no temperature change for more than 1 hour, reignition is unlikely. If it is difficult to use a thermal infrared camera, check that there is no reignition for at least 2 hours after submersion.

⚠ WARNING 6.6 Check and Clean up after extinguishing the fire

- **Check the stability of the high-voltage battery status**

After extinguishing the fire, responders must thoroughly check the stability of the battery pack to ensure that the fire is completely extinguished, and check that the battery status is safe. If necessary, have the vehicle inspected by the manufacturer or a specialist.

- **Move to a safe area**

Move the vehicle to a safe area after extinguishing the fire to prevent additional danger.

6. In case of fire

WARNING

6.7 How to respond to chemical exposure



If electrolyte fumes are inhaled or electrolyte comes into contact with the skin, seek medical treatment immediately even if the symptoms seem mild.

1) When electrolyte comes into contact with skin

- **Immediately wash with water**

If electrolyte comes into contact with skin, immediately wash thoroughly with clean water for at least 15 minutes because chemicals can penetrate the skin and cause burns.

- **Emergency treatment and visit a medical institution**

If serious irritation or burns occur on the skin, immediately seek emergency medical assistance.

2) When electrolyte gets into eyes

- **Immediately wash with water**

If electrolyte gets into eyes, immediately remove contact lenses, open the eyes completely, and wash thoroughly with clean water for at least 15 minutes.

- **Emergency treatment and visit a medical institution**

If serious irritation or burns on the eyes, seek immediate medical attention.

3) When fumes are inhaled

- **Exposure to fresh air**

Electrolyte fumes (when inhaled) may cause respiratory irritation or acute intoxication. Get out of the fire scene and breathe a fresh air, and then wash the mouth with water. Consult with a doctor immediately.

- **Check respiratory symptoms**

As respiratory symptoms, such as cough, dyspnea, or chest pain, may occur, ask for medical assistance as soon as symptoms appear. When oxygen deficit or inhalation of severe toxic gases is suspected, oxygen supply may be required through oxygen mask according to doctor's instruction.

7. In case of submersion

7.1 Submerged or Partially Submerged Vehicles

Some emergency responders may have to handle a submerged vehicle. A submerged EV3 does not have high-voltage system in the body. If the vehicle is not damaged, it is safe to contact the vehicle whether in water or on the land. If the vehicle is completely or partially submerged, take the vehicle out of the water before disabling it. Drain the water from the vehicle. Disable the vehicle by using the method described above.

WARNING



- If the high-voltage components are exposed by severe damage, understand guidelines for high-voltage systems fully and wear appropriate insulated personal protective equipment.
- Failure to follow these instructions can lead to serious injuries or death by electric shock.

8. Towing / transportation / storage



8.1 Towing and Transportation

If emergency towing is necessary, it is recommended to use an authorized Kia service center or a specialized towing service.

The preferred method to tow this vehicle is flatbed towing, where the vehicle is fully lifted and loaded onto a tow truck.

If flatbed towing is not possible, put the front or rear wheels on a jig and tow the vehicle using a dolly, ensuring that the other wheels do not touch the ground.

Do not tow the vehicle with the driving wheels in contacted with the ground.

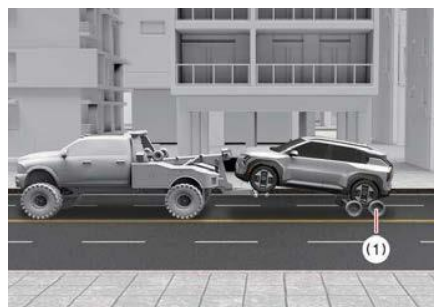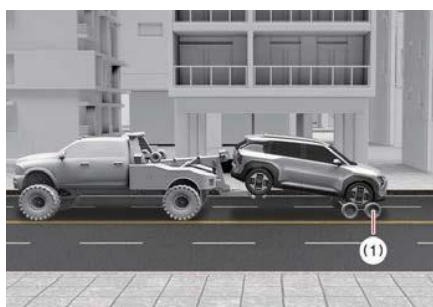

(1) Dollies



⚠ CAUTION

- If the correct towing method is not used, the vehicle may be damaged or additional accidents may occur.
- Using sling-type equipment for towing is not a correct method for this vehicle.
- Always use a wheel lift or flatbed equipment to prevent damage to the vehicle.
- For the vehicle equipped with side airbags, always turn off the engine before towing. If the vehicle is tilted with engine ON, it is detected as rollover and side airbags are deployed.

⚠ CAUTION

- The vehicle should not be towed with the drive wheels in the case of 2WD, and the front/rear wheels in the case of AWD on the ground. (Electricity generated from the vehicle's motor can cause damage to the motor components or fire.)


8. Towing / transportation / storage

8.2 Storage of damaged vehicle with the damaged battery

- Completely remove any water from the vehicle and store the vehicle after disconnecting the 12V battery (-) connector.
- Remove any water from the battery or vehicle and disconnect the high-voltage battery cutoff switch.
- Put the vehicle on an open place away from other structures, vehicles and buildings.
- Carefully monitor the vehicle until the battery discharge procedure is completed.
- If the battery can be removed from the vehicle by moving the vehicle to a lift, remove the battery and conduct the discharge procedure.
- If the battery cannot be removed, prepare a tank and fill the tank with water until the battery is fully submerged.

Tank condition: 1% saltwater solution

- Maintain the water level sufficient to fully submerge the battery for at least 40 hours.
- Afterward, tilt the battery and drain the water from a position where water flows out easily.

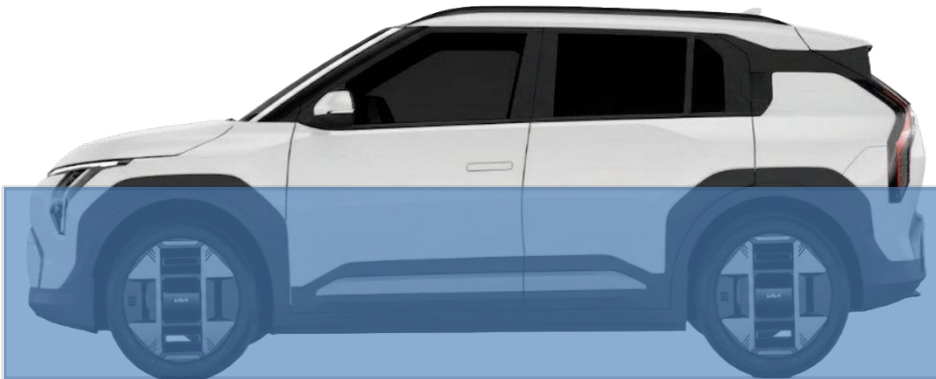

Battery discharging

8. Towing / transportation / storage


8.3 Damaged Battery Storage

- The battery should be discharged for safe storage.
- If the battery can be removed from the vehicle, discharge it using salt water.
- Prepare a tank filled with 1% saltwater solution.
- Immerse the battery in the saltwater solution for approximately 40 hours.
- Take out the battery from the tank and dry it.

⚠ WARNING




- Extinguish all smoke, spark, flame around the vehicle.
- Electrolyte solution is a skin irritant.
- Do not touch or step on the spilled electrolyte.
- If electrolyte leak occurs, wear appropriate solvent resistant PPE and use soil, sand, or a dry cloth to clean up the spilled electrolyte. Be sure to adequately ventilate the area.

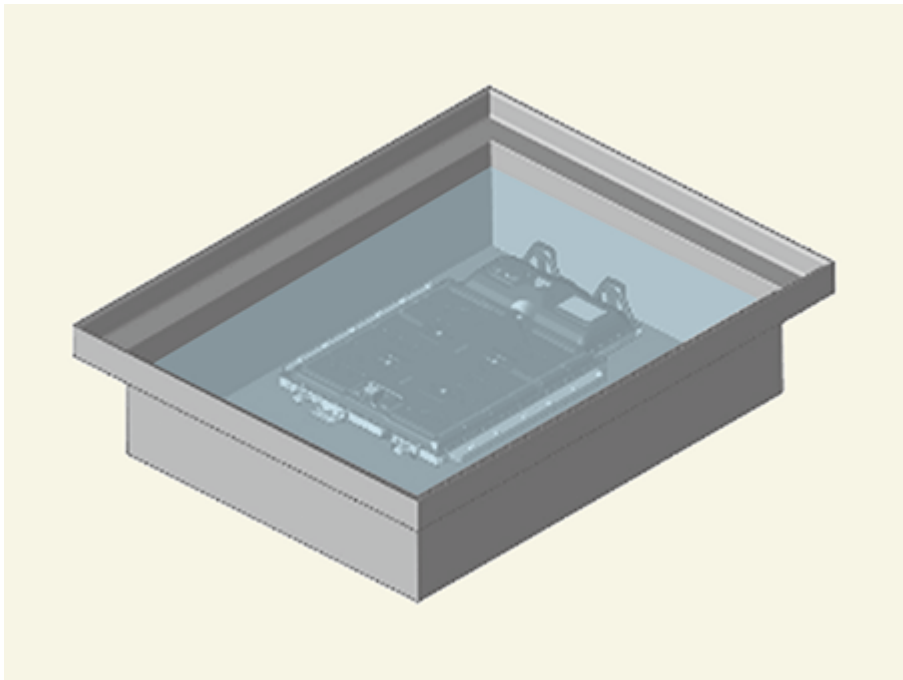

9. Important additional information

⚠ WARNING 9.1 Emergency Starting – Jump starting

1. Park the vehicle in the place close enough to connect the jump cable, and ensure that the cables do not touch the vehicle.
2. Do not approach any moving parts in the motor room.
3. Turn off all electrical systems, such as a radio, headlamps and air conditioner, and then park the vehicle.

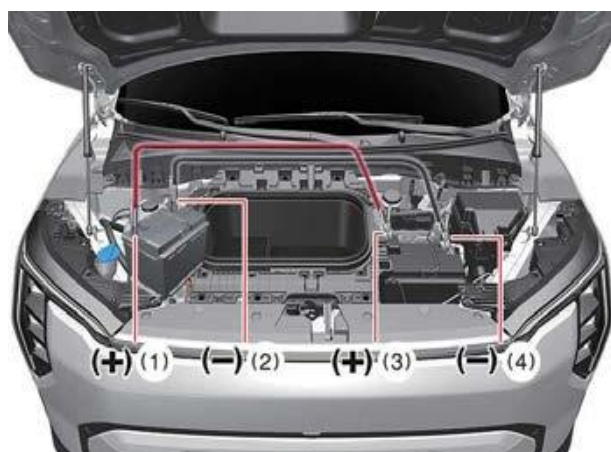

- (1) (+) terminal of the booster battery
- (2) (-) terminal of the booster battery
- (3) (+) terminal of the discharged battery
- (4) (-) terminal of the discharged battery

4. Connect one end of a jumper cable to the positive terminal of the discharged battery (3).
 5. Connect the other end of that jumper cable to the positive terminal of the booster battery (1).
 6. Connect one end of the other jumper cable to the negative terminal of the booster battery (2).
 7. Connect the other end of that jumper cable to a ground: a solid, stationary, metallic point away from the battery (4).
- Do not allow the jumper cables to contact anything except the correct battery terminals or the correct ground. Do not lean over the battery when connecting the jumper cables.
8. If you have connected the jumper cables with another vehicle, start the vehicle containing the booster battery first.
 9. Start the vehicle containing the discharged battery.
 10. If the vehicle containing the discharged battery starts, disconnect the end of the jumper cable from the negative terminal of the booster battery (2). Then disconnect the other jumper cable from the positive terminal of the booster battery (1) and the discharged battery (3).
- If it is not obvious why your battery was discharged, have your vehicle inspected by an authorized Kia dealer.

9. Important additional information

CAUTION




- Never jump-start the vehicle using the high-voltage battery.
- When turning on the vehicle, do not let cables come into contact with moving parts and keep them away from moving parts.
- Do not allow the jumper cables to contact any objects other than the correct battery terminals or correct grounding points.
- Do not lean on the battery while the jumper cable is connected.
- Correctly install the battery cover in the front trunk. Otherwise, related parts may be damaged, and noise or malfunction may occur.

9. Important additional information

9.2 Airbag system (SRS: Supplemental Restraint System)

EV3 is equipped with five types of airbags (8 locations) as shown in the image below. Before conducting rescue procedures, ensure that the vehicle is powered off and the 12V battery connector is disconnected to prevent airbags deployment.

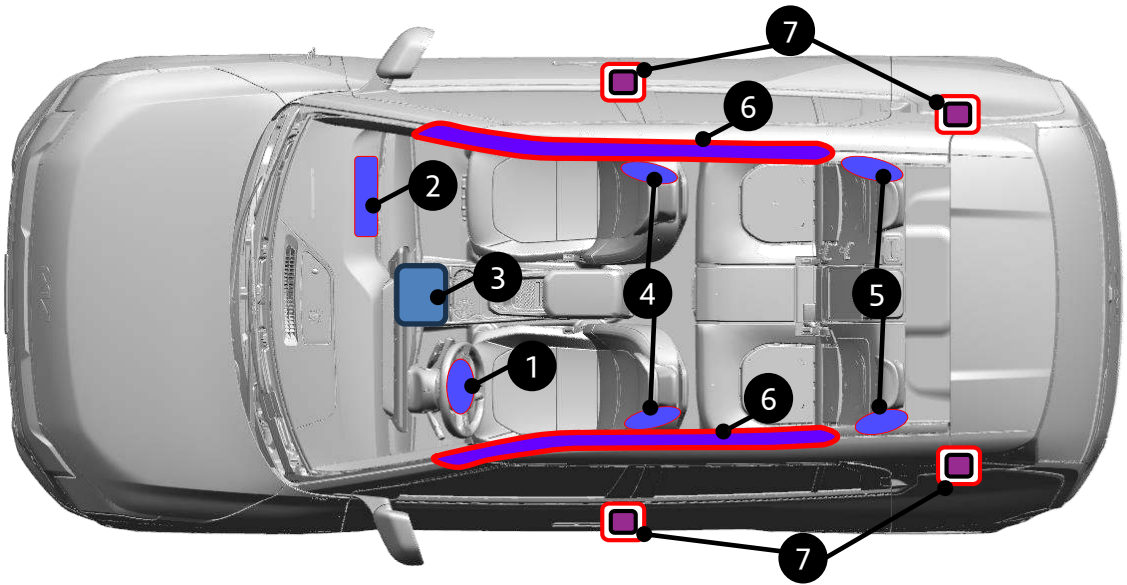

- | | |
|--|---|
| 1. Driver's front air bag | 5. Second-row side air bag (left, right) |
| 2. Passenger's front air bag | 6. Curtain air bag (left, right) |
| 3. SRSCM (Supplemental Restraint System Control module) | 7. Seat belt pre-tensioner (BPT, 4 locations) |
| 4. First-row side air bag (driver's and front passenger's seats) | |

⚠ WARNING



- Do not cut airbag components.
- Airbag components work for 3 minutes after cutting off or releasing electric system because power remains. Disconnect the battery negative (-) cable and wait for at least 3 minutes before starting work.

Failure to follow these instructions will lead to serious injuries or death due to accidental operation of airbag components.

9. Important additional information


9.3 Seat Belt Pre-tensioner

⚠ CAUTION ⚠

EV3 has seat belt pre-tensioners for the driver seat, front passenger seat, and left and right second-row seats.

If the seat belt pre-tensioners activate during a collision, noise may be heard and smoke-like dust may be seen in the vehicle.

This is a normal operating condition and is not hazardous. The seat belt pre-tensioners may become hot during operation and may require several minutes to cool down afterward.

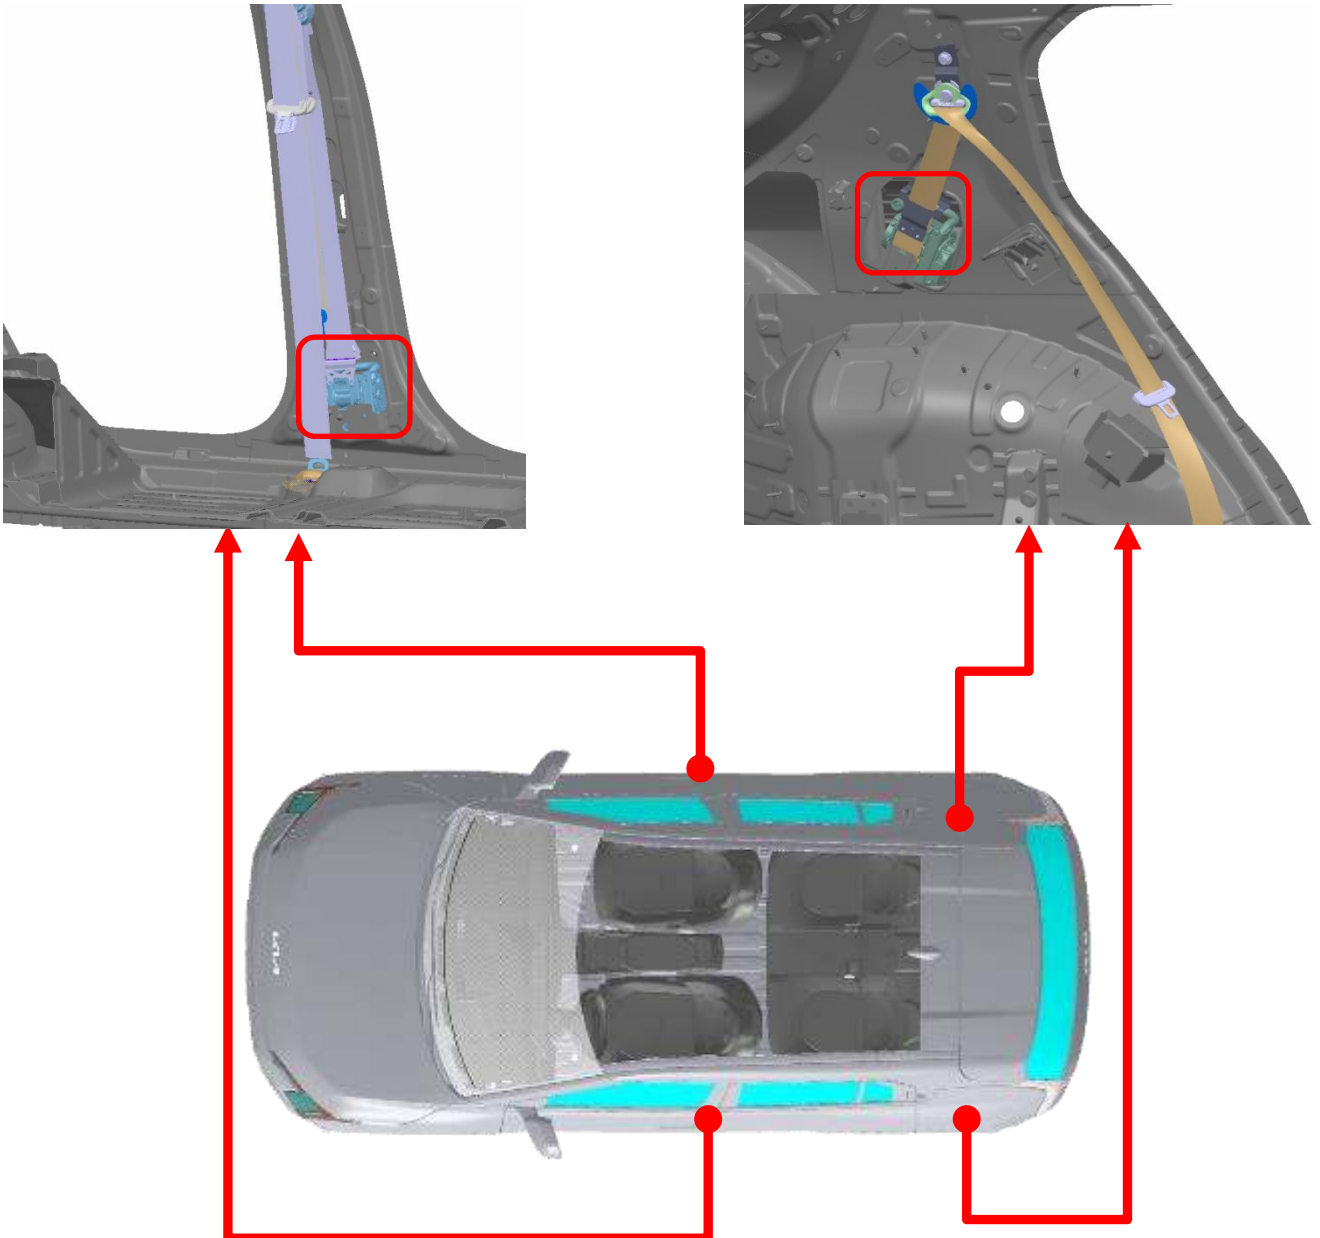

10. Explanation of pictograms used

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery low-voltage		Gas strut / Preloaded spring		Level 3 (High strength zone)		Battery pack, high-voltage
	High voltage power cable		High voltage component		Use thermal Infrared camera		Disconnect high voltage Device
	EV Vehicle		Air-conditioning component		Use water to extinguish the fire		General warning sign
	Warning, Electricity		Environmental hazard		Explosive		Acute toxicity
	Corrosives		Hood		Trunk		Flammable
	Hazardous to human health						