





Note: The illustration shows the maximum possible range of equipment.

	Airbag		Airbag inflator/ stored gas inflator		Seat belt pretensioner		SRS control unit		Gas strut/ preloaded spring
	High strength zone		Battery, low voltage		Ultracapacitor, low voltage		Battery pack, high voltage		High voltage power cable
	Disconnect high voltage device		Fuse box disabling high voltage		High voltage ultra-capacitor		Low voltage device that disconnects high voltage		High voltage component

1. Identification / recognition

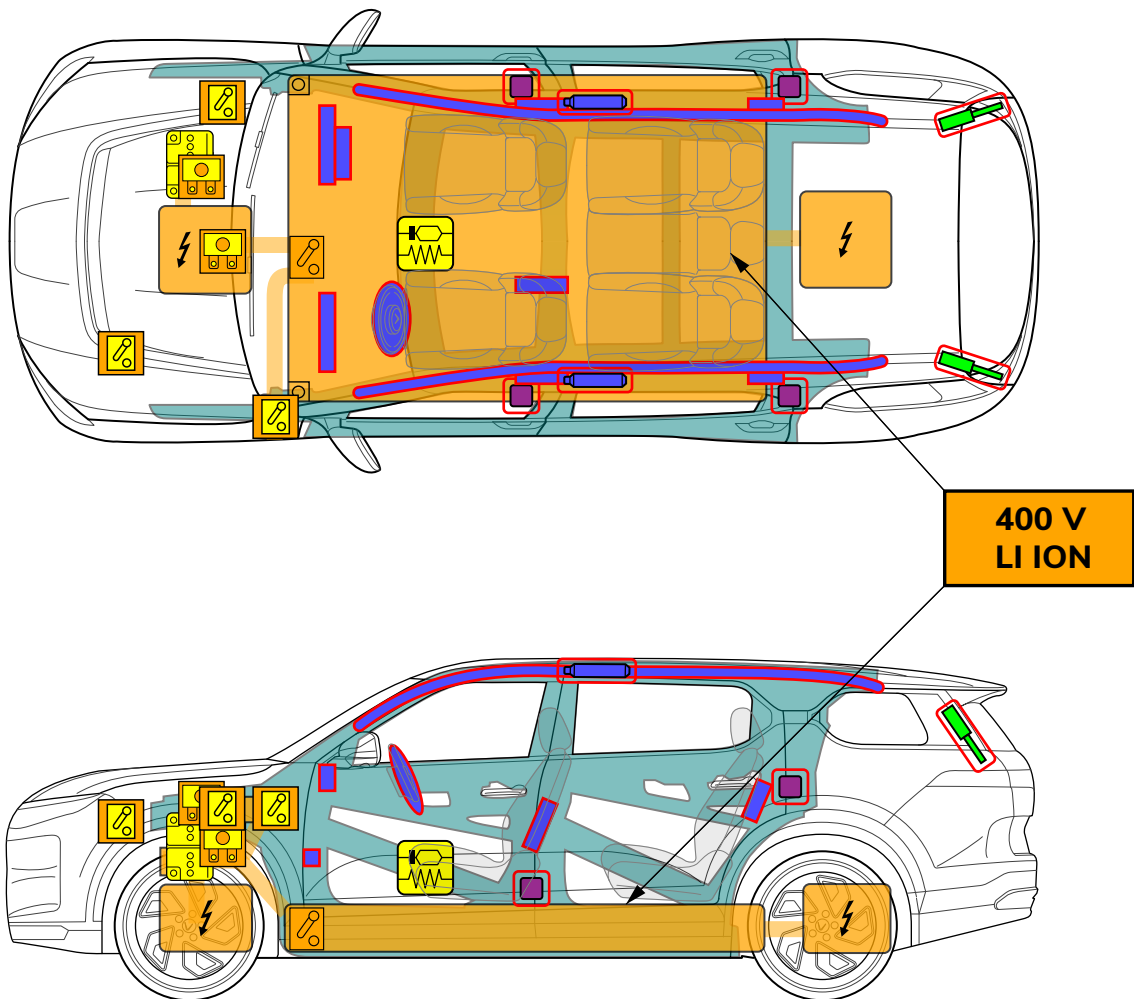

WARNING Lack of engine noise does not mean vehicle is off: silent movement or instant restart capability exists until vehicle is fully shut down. Wear appropriate PPE.

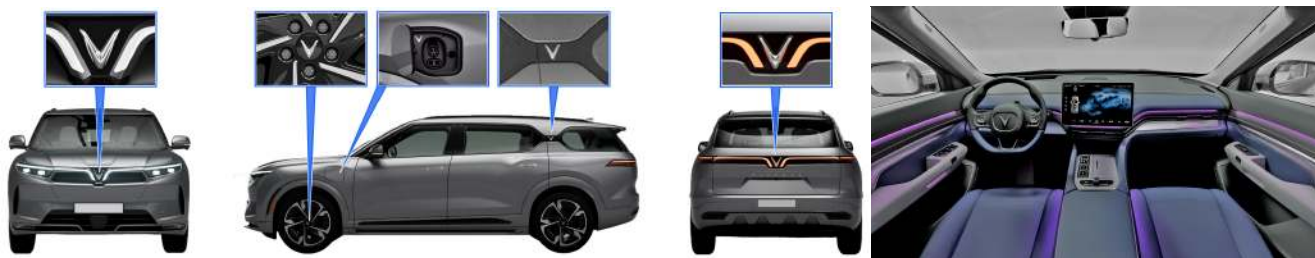

2. Immobilization / stabilisation / lifting

Immobilization


Engage electric parking brake



Chock wheels





Lifting points

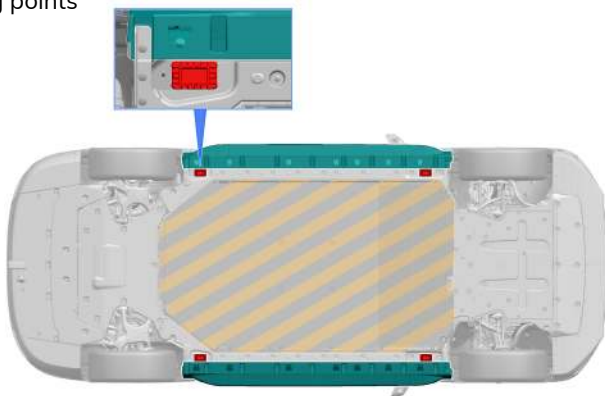

- Lifting points
- Stabilization area, if the vehicle is lying on its side
- High-voltage battery

3. Disable direct hazards / safety regulations

Main disabling method: Mechanical Service Disconnect (MSD) in the charge port

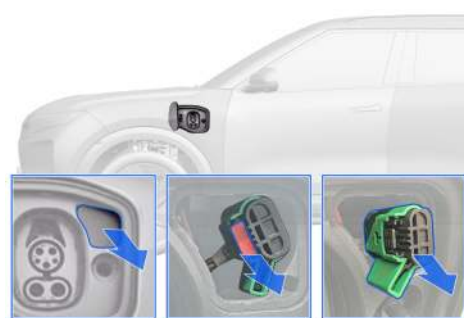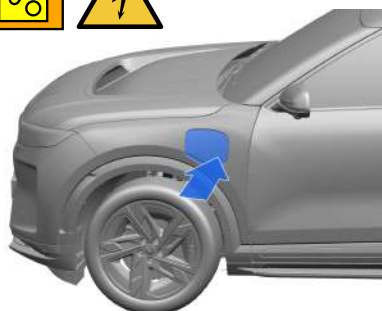

3. Disable direct hazards / safety regulations


Alternative disabling method: Double cut the first responder cut loop



WARNING Be aware that not every high voltage component is labelled. Always wear the appropriate PPE. Do not attempt to open the high voltage battery.

4. Access to the occupants


Opening doors from the outside

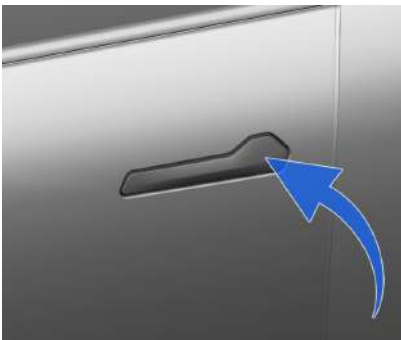



Opening the hood without power



Opening doors from the inside
with power / without power

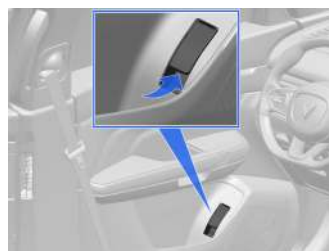

Opening the tailgate
with power outside / without power inside

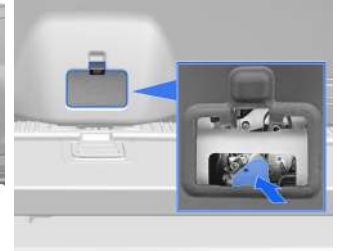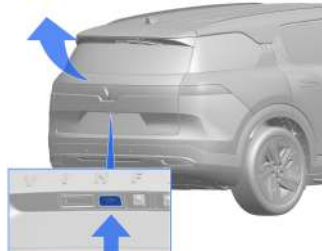

5. Stored energy / liquids / gases / solids

		12 V
		400 V



WARNING When coolant leaks from the battery pack, it can become unstable with risk of a thermal runaway. Check battery pack temperature with IR camera (thermal imaging).



6. In case of fire



Use large amount of water!



WARNING Risk of battery re-ignition! Always wear the appropriate PPE.





7. In case of submersion

Treat a submerged vehicle like any other submerged vehicle. Remove the vehicle from the water and continue with normal high voltage disabling (see chapter 3), allow water to drain out of the vehicle. Wear the appropriate PPE. Vehicles submerged in salt water should be handled with a greater potential risk of a HV battery fire.

8. Towing / transportation / storage



WARNING Risk of battery re-ignition! Vehicle involved in an accident, store at a safe distance from other vehicles and structures.

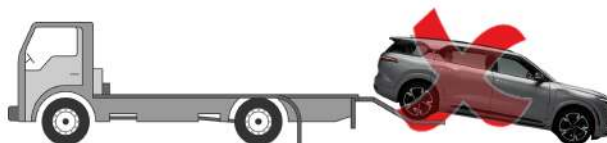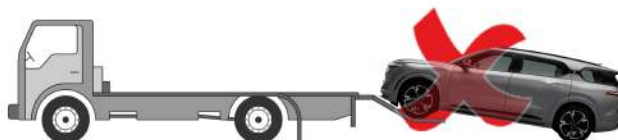

Use a towing truck with flatbed.
No towing with rotating traction wheels!

9. Important additional information

First Responders and Second Responders with emergencies, call VinFast Assistance Hotline.

First responder information can be found at <https://vinfastauto.com>

First responders and training officers who have questions, contact info.fr@vinfastauto.com

10. Explanation of pictograms used

	General warning		Corrosive
	High voltage		Toxic
	Cable cut		Extinguish with water
	Explosive		General mandatory action
	Health hazard		IR camera
	Flammable		