




CHEVROLET EQUINOX EV

5 Door Hatchback

2024 -

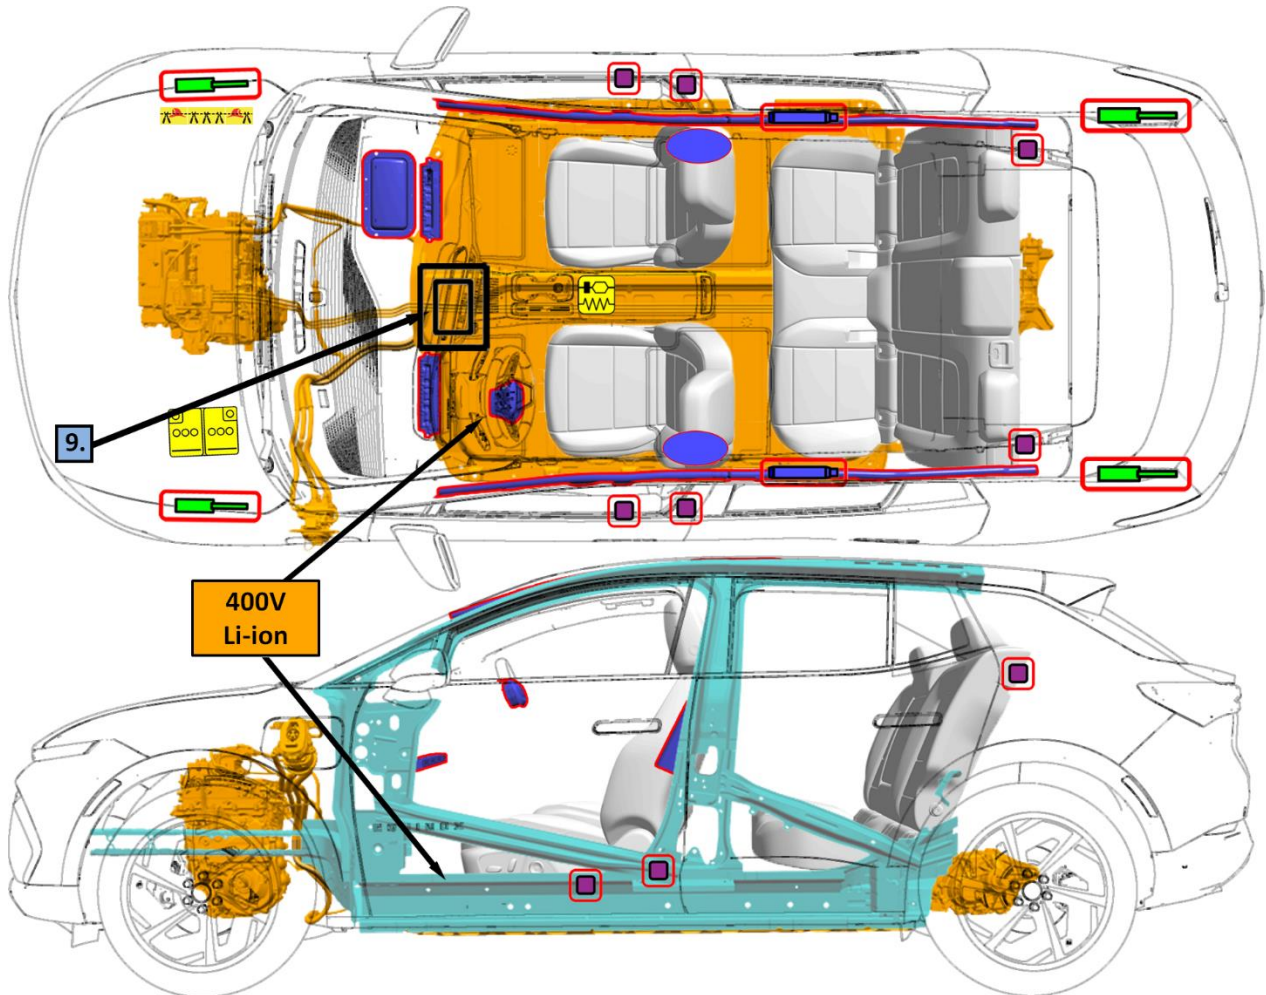

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Gas strut/ Preloaded spring
	High strength zone		Zone requiring special attention		Battery low voltage		High voltage battery pack		High voltage power cable component
	Cable Cut Location								

DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES.

Identification Number

3GN-23105

Version Number

1

Page Number

Page 1 of 4

1. Identification / recognition



Lack of engine noise does not mean vehicle is off: vehicle movement capability exists until vehicle is fully shut down. Always wear appropriate PPE.

Emblems and Badging




First Responder Information Label



2. Immobilization / stabilization / lifting

IMMOBILIZE VEHICLE:


1. Block the wheels.
2. Press the Electric Parking Brake (EPB) switch momentarily. The red parking brake status light will flash and then stay on once the EPB is fully applied.
3. Press the button at the end of the shift lever to shift to P (Park).

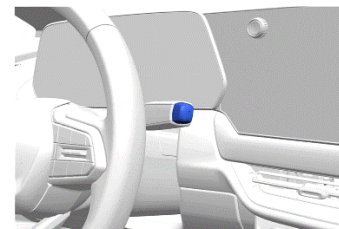

LIFTING POINTS:



There are features on the body of the vehicle, for use as primary lifting points.
Do NOT lift the vehicle from any locations on the high voltage battery.

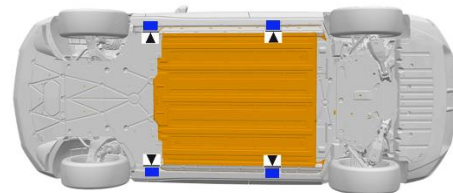

3. Disable direct hazards / safety regulations





The vehicle is equipped with a battery management system with internal fault detection. In the event of a “Battery Danger Detected” notification, **DO NOT cut or disable the low voltage system, unless you need to disable the airbags for occupant extrication.**

MAIN METHOD:

1. Power the vehicle off:
 - When the drive cycle is complete and the vehicle is shifted to P (Park), the vehicle will turn off when a driver exit is detected.
 - The vehicle can be turned off by pressing the “Vehicle Off” symbol  on the infotainment display. If a collision is detected an additional emergency vehicle off icon will appear on the display and can be pressed to turn the vehicle off.
2. Open the hood. Pull the release handle two times successively.
3. Consider any manipulations of power devices in the vehicle (steering wheel, power seats, windows, etc.) **prior to** cutting the Low Voltage loop.
4. Double cut the low voltage cables on both sides of the yellow tape. Ensure that the cuts are clean and that there is no risk of loose wires touching.
5. Remove the cut section of cable from the vehicle.

This cut will disable the airbags and high voltage system.

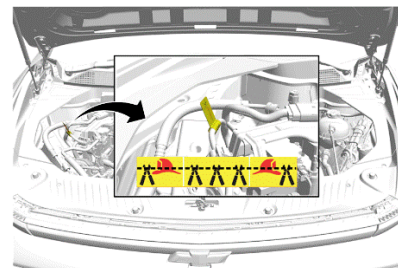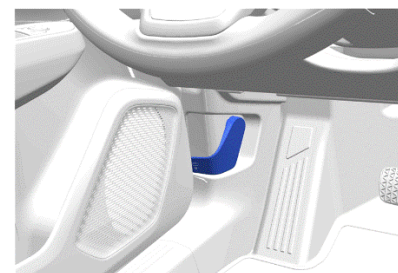

After disabling the low voltage power, wait at least 10 seconds to allow any un-deployed airbag reserve energy to dissipate and wait at least 1 minute to allow high voltage energy to discharge.

VEHICLE AT CHARGE STATION:

If able, terminate charging by removing the charge handle from the vehicle. If enabled, the vehicle's anti-theft alarm may activate.

The common charge handle is shown; The DC Fast Charge handle is moderately larger and may require additional effort to disconnect.



4. Access to the occupants


Refer to the front page for illustrations of high strength zones and specific safety related component locations.




The windshield is made of Laminated Glass.



The front and rear door windows, rear quarter windows, liftgate window and sunroof are made of Tempered Glass.

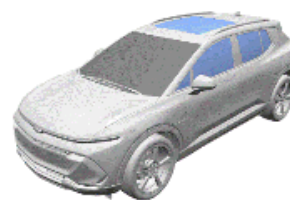


Outside Door Release

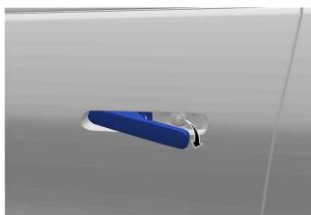


Inside Door Release

If the doors remain locked, pull **twice** on the inside door handle to gain access to the occupant at each seating location.

NOTE: An alternative method for rear passenger access may be necessary if the rear door child safety locks are engaged.

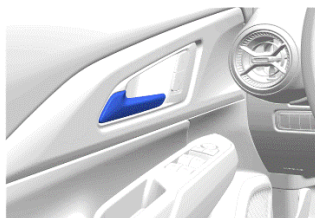

Steering Column Tilt and Telescoping Control

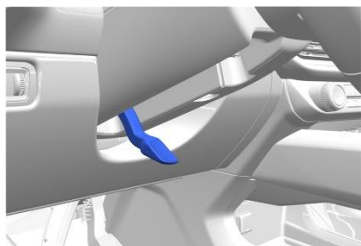

Seat Controls



5. Stored energy / liquids / gases / solids



12V
Lead Acid



400V
Li-ion



Damage to the battery pack can cause instability, and possibly a risk for a fire. Check the battery pack temperature using a thermal imaging camera.

6. In case of fire



A battery on fire will not explode.



Always wear Self-Contained Breathing Apparatus (SCBA).

Use copious amounts of water to cool the battery and to extinguish a fire.



Potential for Battery Re-Ignition.

7. In case of submersion

The high voltage battery is isolated from the vehicle chassis. If the vehicle is immersed in water, you will not be electrocuted by touching the vehicle.


After the vehicle was removed from the water, do the following:

1. Allow the vehicle to dry out.
2. Perform the high voltage disabling procedure in Section 3.


8. Towing / transportation / storage

Carefully open the cover in the fascia by using the small notch that conceals the tow eye socket.

Install the tow eye into the socket and turn it until it is fully tightened. When the tow eye is removed, reinstall the cover with the notch in the original position.

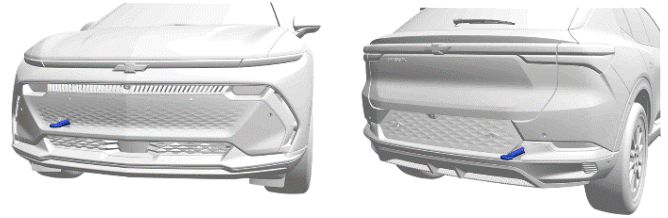

General Motors recommends a flatbed carrier or tow dollies to transport a disabled vehicle.

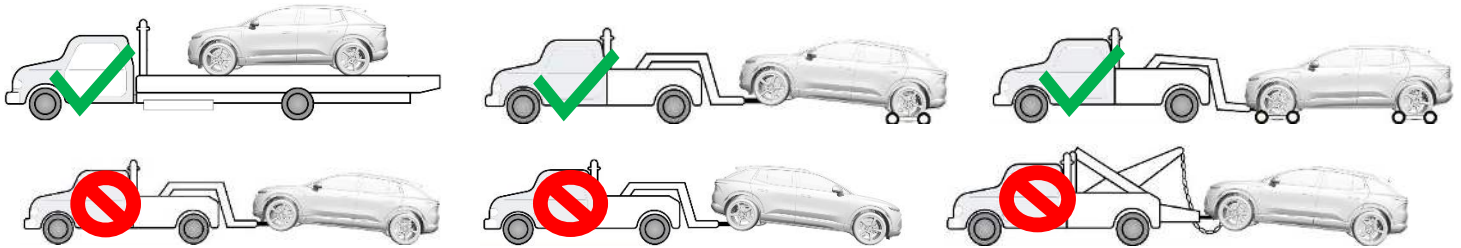

Moving the vehicle with the drive wheels on the ground will generate unwanted energy. Limit the movement of the vehicle to the distance required to prepare the vehicle for towing.

Store the vehicle a safe distance/separated from other vehicles.



Potential for continued hazards (rekindling/re-gassing/etc) if a damaged vehicle battery is jostled during recovery, including the towing and storage process.

9. Important additional information

This vehicle is supported by OnStar, where available.

This vehicle does NOT have a power button. The vehicle will turn off when shifted to P (Park) and a driver exit is detected. The “Vehicle Off”  or “Emergency Vehicle Off” symbols will appear on the Infotainment Display and can be used to turn the vehicle off.

10. Explanation of pictograms used

	Electric Vehicle		General warning sign		Warning, Electricity
	Battery Technology		Lifting Points		Thermal Imaging Camera
	Flammable		Toxic		Corrosive
	Injury Risk		Use Water		Cable Cut Location