



Peterbilt 579EV
Kenworth T680E

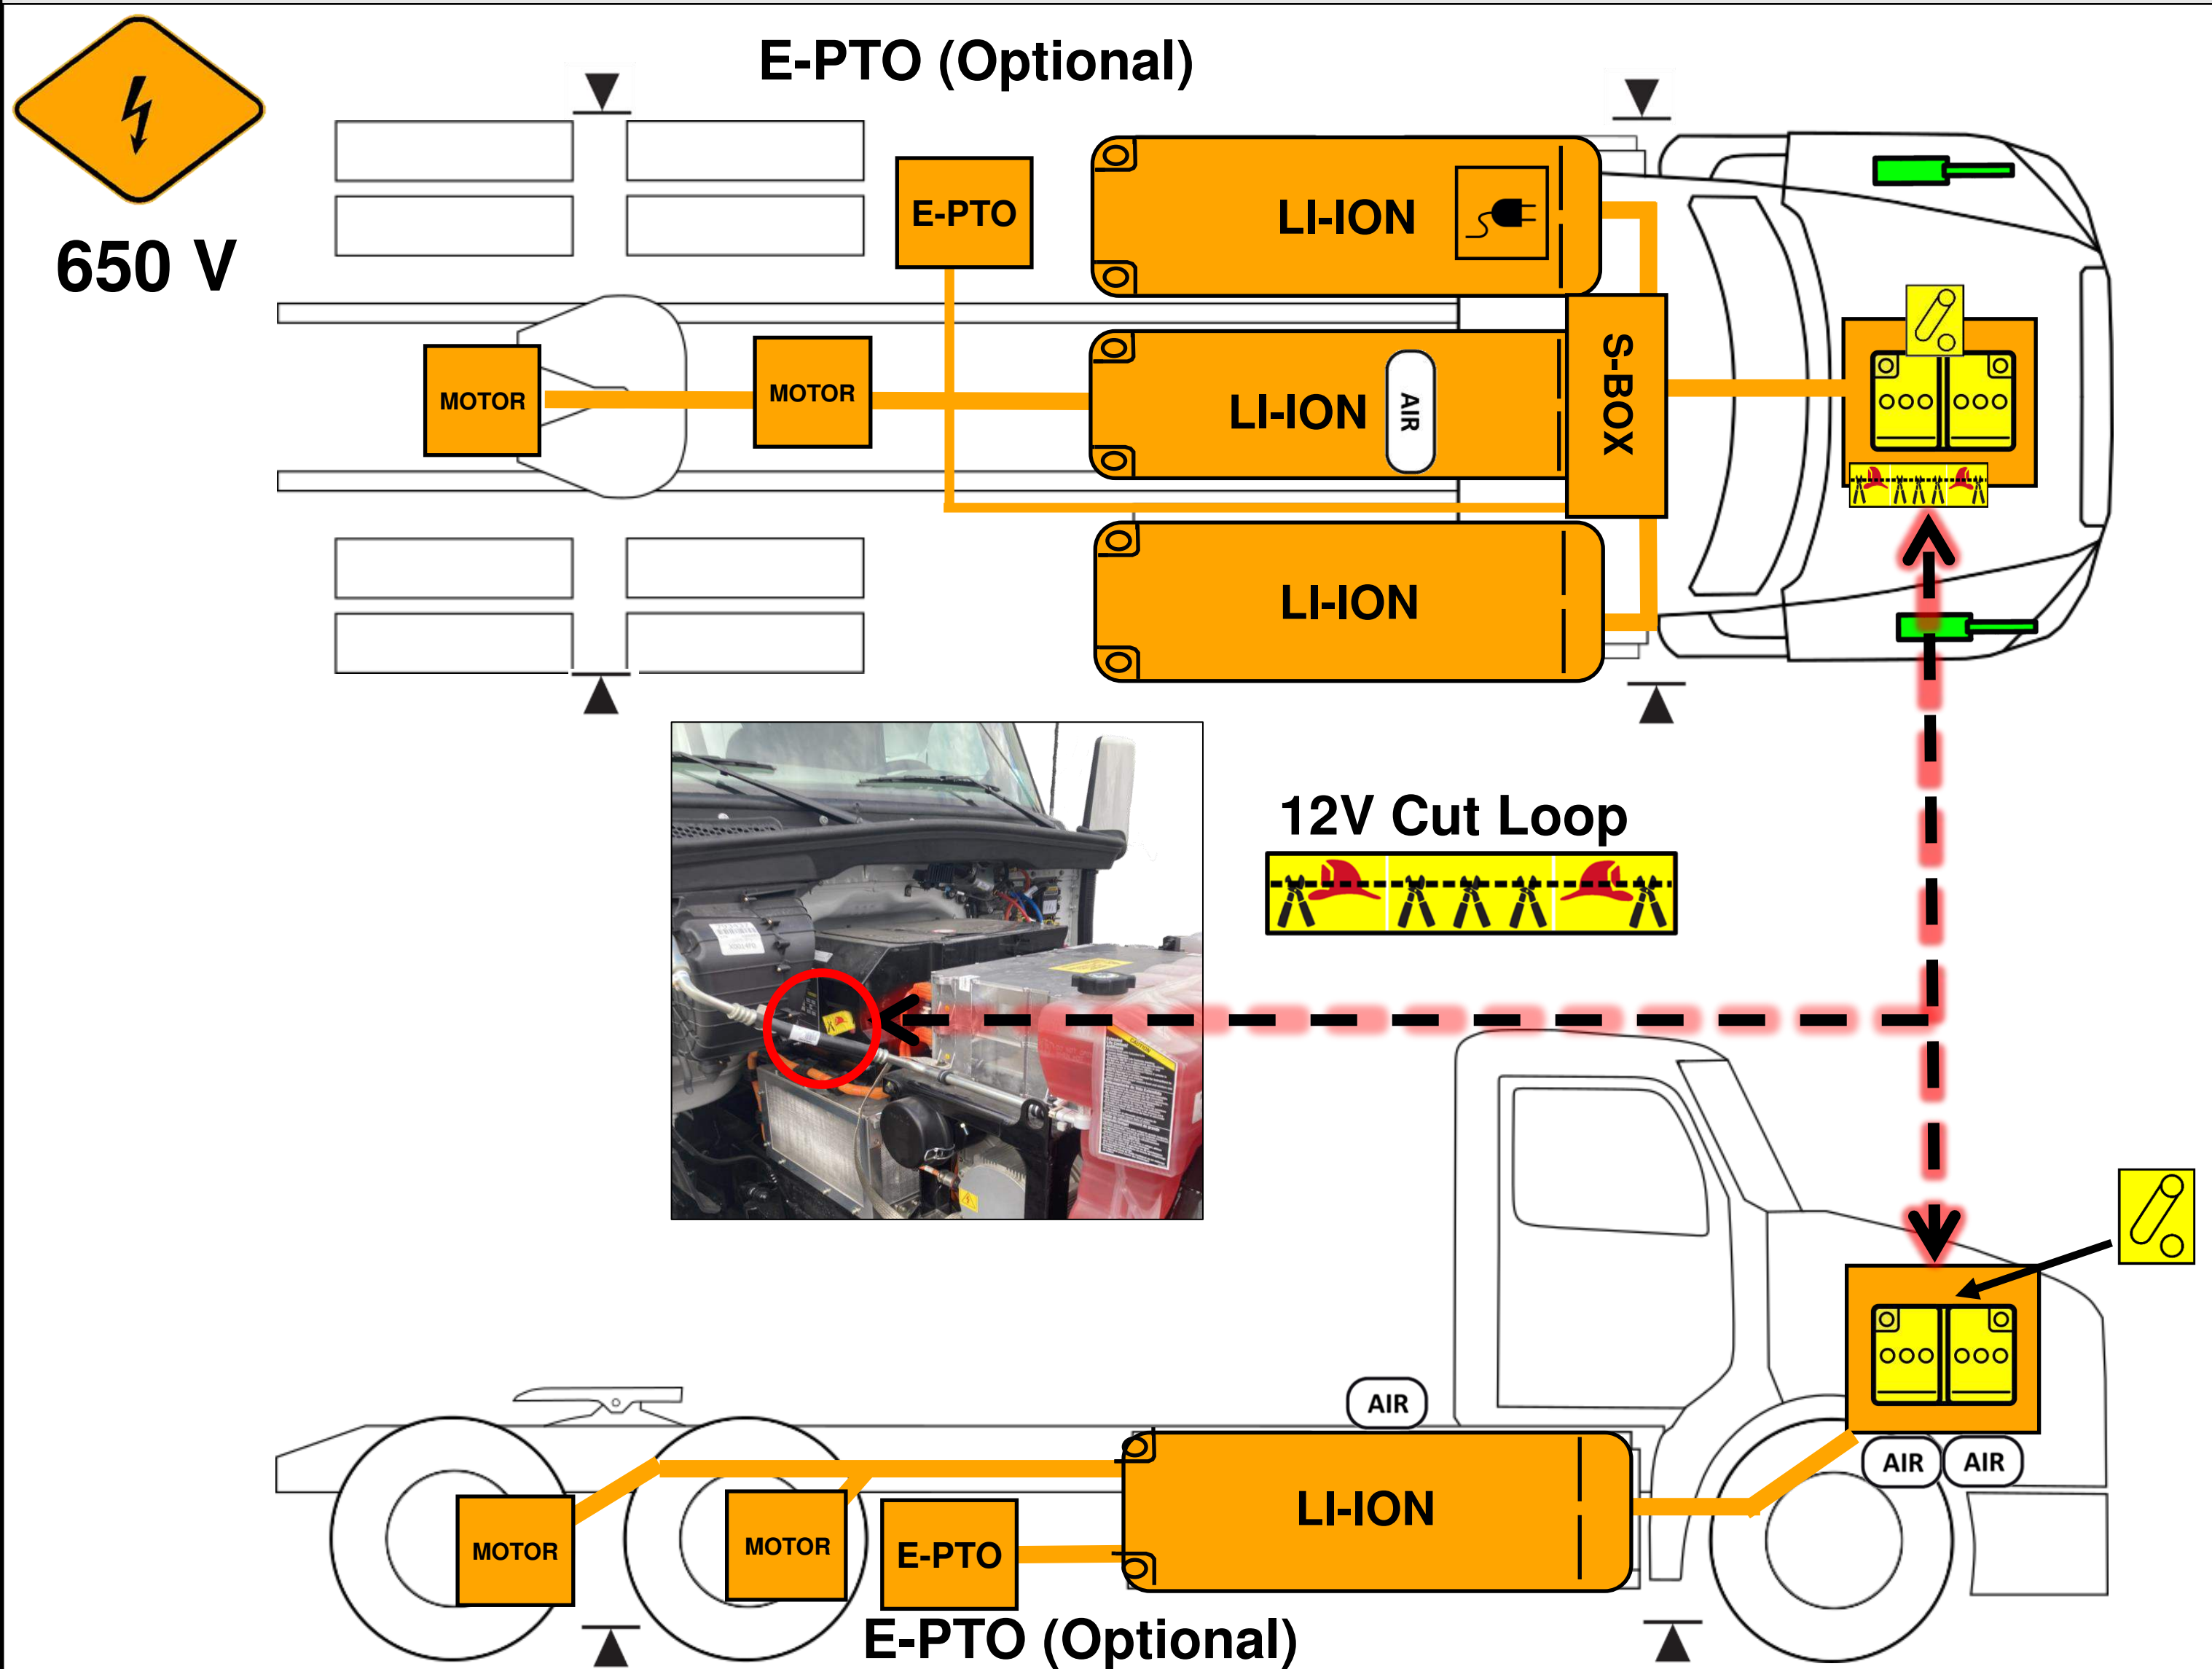
Model Year: 2022 – Current
Release Date: 9/17/2024
Part Number: Y53-6174-1B1





BEV badge are on all battery electric trucks on both sides of the cab.



Extrication Diagram



Warning: Check for labels identifying any additional High Voltage components added by body builders.

 High Voltage Li-Ion Battery Pack	 High Voltage Cables	 12V Disconnect	 Gas Strut	
 Charger Inlet (Forward or Rear)	 High Voltage Region	 Low Voltage Battery	 Lift Point	 Compressed Air Tank

1. Identification / Recognition



Warning: Always wear full fire fighter PPE (turnout gear), including a positive pressure self-contained breathing apparatus, when approaching this vehicle.



Battery electric truck badge on both sides of the hood

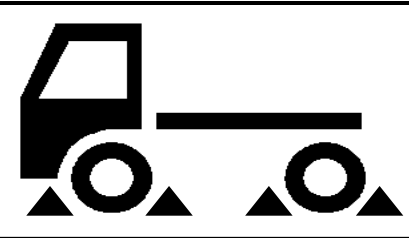
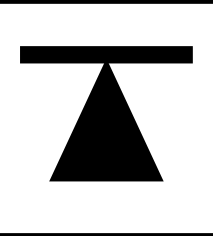
2. Immobilization / Stabilization / Lifting



Warning: Keep all lift equipment at least 12 inches (30 cm) from all high voltage components.



Warning: Vehicle noise may be reduced in some operation modes. Failure to shutdown the truck before immobilization could result in death, severe injury, or property damage.
Complete Section 3 steps if possible before immobilization.

	Blocking Wheels	Block all wheels
	Lifting Truck (with Jack)	Only use the lift points identified in the extrication diagram with this icon for jacks
	Rotating Truck	Wrap chains around both axles to rotate the truck to an upright stable position

3. Disable Direct Hazards / Safety Regulations



Warning: Assume all high voltage components are always energized. Do not cut any High Voltage components, including high voltage orange cables.

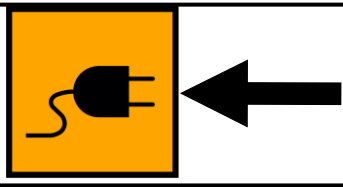
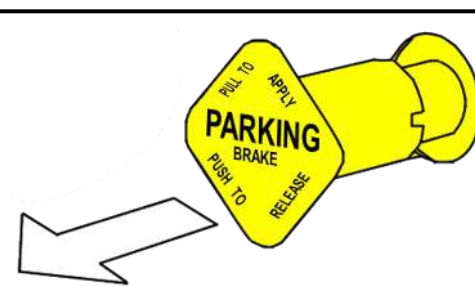
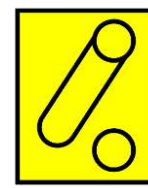


Warning: Cables between the high voltage battery and the S-box remain energized even after the vehicle disable steps (including the 2-minute wait) are completed.

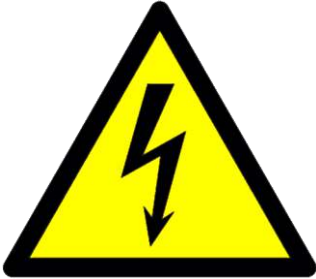


Warning: Call the PACCAR Customer Center for guidance 24/7 before proceeding if any high voltage part damage could have occurred.

Peterbilt Phone #: 1-800-473-8372 Kenworth Phone #: 1-800-592-7747

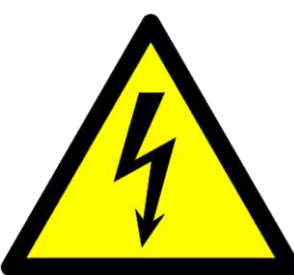
	Step 1: Unplug the Charger Cable or Remove Power from the Charger
	Step 2: Remove the Key from Ignition
	Step 3: Engage park brake Step 4: Unlatch hood and tilt hood forward
	Step 5: (Primary Step): Turn 12V Disconnect Counterclockwise to OFF Position
	(Alternate Step): Cut a 5-inch (13 cm) segment (2 cuts) from the black cut loop (identified in the Extrication Diagram)
	Step 6: Wait 2 Minutes for High Voltage Capacitors to Discharge

5. Stored Energy / Liquids / Gases / Solids

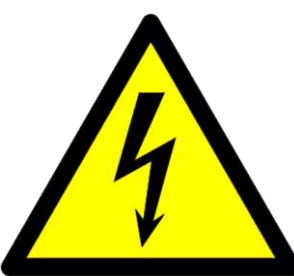
	 High Voltage (650 V)	 Corrosives	 Flammable	 Health Hazards
---	---	---	--	---

6. Fire

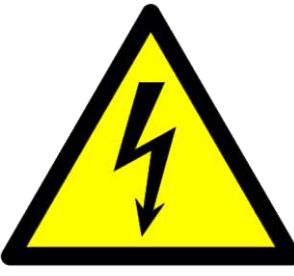
- **Warning:** Always wear full fire fighter PPE (turnout gear), including a positive pressure self-contained breathing apparatus.
- **Warning:** Treat fires involving charging stations as energized fires until power to the charger can be shut down.

 Use Water to Extinguish Li-ion Fires	 Do Not Use Wet Foam
 Hazardous to Human Health: - May cause an allergic skin reaction - Do not breathe dust, fumes, gas, mist, vapors, or spray	 Flammable Components
 Explosion Hazard: - Explosive gas could accumulate. - Move truck outside building after extinguishing fire	 Corrosives: Causes skin burns and eye damage
 High Voltage (650 V): CAT III (1000 V) rated gloves required for exposed HV parts	 Check Li-ion Battery Pack for Fires with Thermal Infrared Camera (TIC or IR Gun)

7. Water Submersion

- 
 - If High Voltage part damage exists (hissing, crackling, bubbles, exposed cables, etc.), call the PACCAR Customer Center for guidance (**1-800-473-8372**)
 - If no High Voltage part damage exists; remove the truck from the water; let the water drain; follow Section 3 (Disable Direct Hazards); and do not attempt to drive

8. Towing / Transportation / Storage

- 
 - Follow Section 3 (Disable Direct Hazards).
 - Use Lift Points in Section 2: Immobilization and the Extrication Diagram.
 - Put the transmission in neutral to avoid damaging the eAxles.
- Towing Method**

If high voltage components were damaged or submerged, transport the truck with all wheels on a trailer. Do not attempt to drive.

If high voltage components were **NOT** damaged or submerged, use the cage bolts and remove the axle shafts to tow (propulsion motor not spinning).

(Emergency) If the truck must be moved soon **AND** no high voltage damage exists, it can be moved at less than 25 mph for no more than 5 minutes.

 - Store outdoors, 50 feet away from other equipment/structures, and routinely check the battery pack for high temperatures with a Thermal Imaging Camera (TIC or IR Gun).
- 