



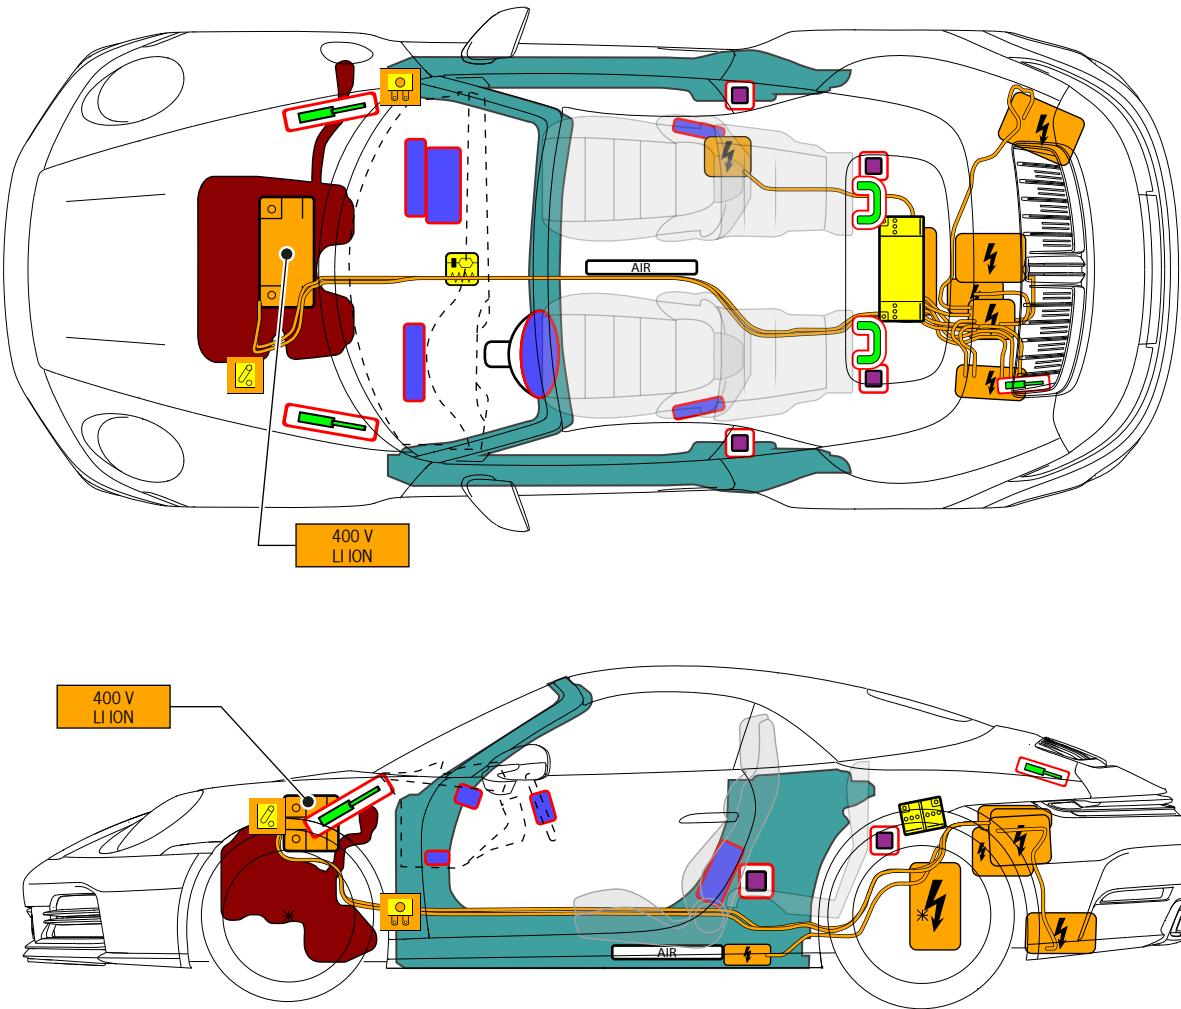

PORSCHE

Porsche AG, 911
2 door, 4 seater
Convertible THEV, as from model year 2025

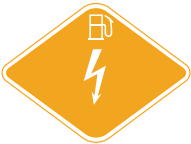

Note: The maximum possible equipment is shown.

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone				
	Battery low voltage				Fuel tank				
	High-voltage battery		High-voltage power cable		Low voltage device that disconnects high voltage		Fuse box disabling high voltage		
	Air tank		Fuel tank content gasoline/ethanol		High voltage component				




Porsche AG, 911

2 door, 4 seater

PORSCHE Convertible THEV, as from model year 2025

1. Identification / recognition

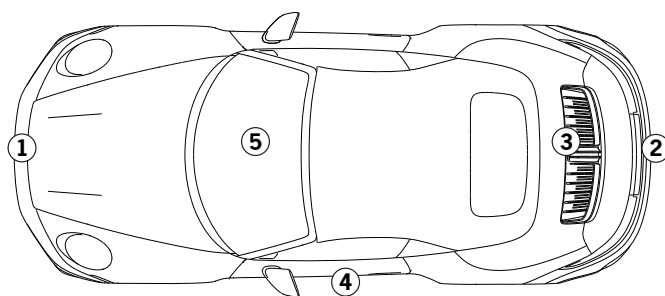

Equipment-dependent



Equipment-dependent



Equipment-dependent



Equipment-dependent



Equipment-dependent


2. Immobilization / stabilisation / lifting

Immobilizing the vehicle

Actuate electric parking brake





Lifting points

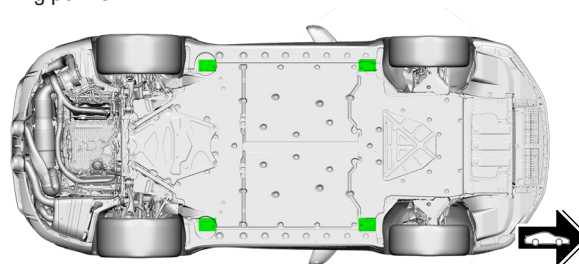

Suitable lifting points

Switching off ignition

Press "Start-Stop" button on the instrument panel

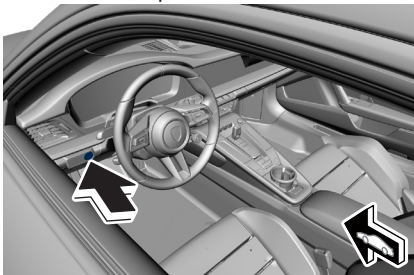




3. Disable direct hazards / safety regulations

The high-voltage system is automatically disabled in the event of accidents in which the airbag is triggered.
The high-voltage system is de-energised approx. 20 seconds after the disabling.

Disabling high-voltage system




Option 1: from the engine compartment

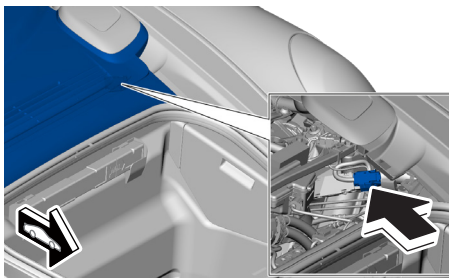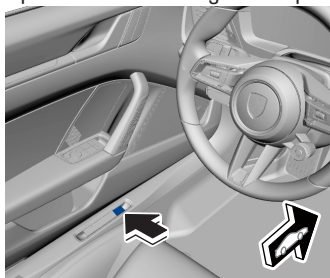






PORSCHE

Porsche AG, 911
2 door, 4 seater
Convertible THEV, as from model year 2025




Option 2: from the front passenger footwell

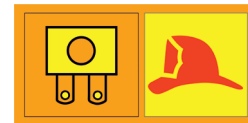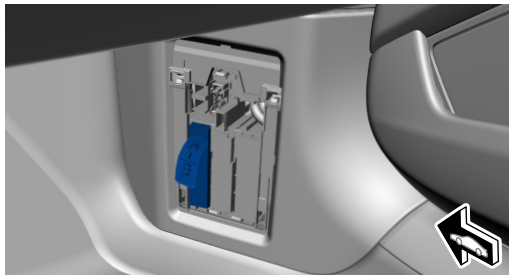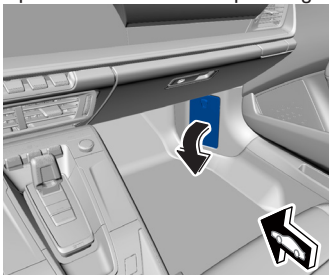


Do not touch, cut or open high-voltage components and high-voltage battery!
Wear appropriate protective equipment!

Disconnecting 12-volt battery


From the back seat

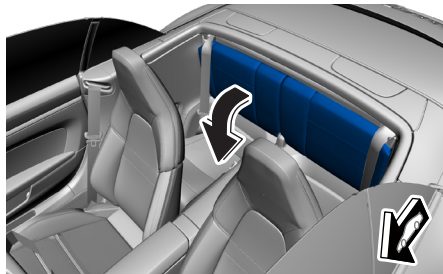

Disconnect the negative terminal of the battery

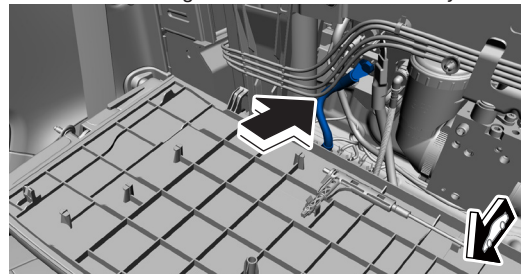

4. Access to the occupants

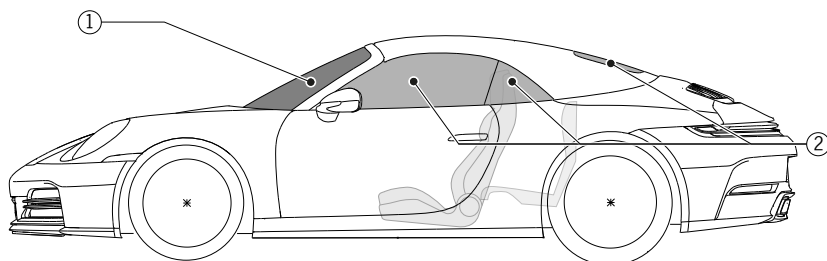

Glass types

- ① Laminated safety glass
- ② Equipment-dependent: Single-pane safety glass or laminated safety glass

5. Stored energy / liquids / gases / solids



Gasoline
max. 84 l



LI ION
400 V



12 V LiFePO



If coolant is leaking from the battery cooling system, there is the risk of a thermal reaction in the high-voltage battery.
Monitor high-voltage battery temperature.





Porsche AG, 911
2 door, 4 seater
Convertible THEV, as from model year 2025

PORSCHE

6. In case of fire




Lithium-ion batteries may self-ignite or re-ignite after the fire has been extinguished!
Wear appropriate protective equipment!



7. In case of submersion

After recovering the vehicle from the water, disable the high-voltage system (see section 3) and allow the water to drain. Wear appropriate protective equipment!

8. Towing / transportation / storage



Do not tow a vehicle involved in an accident on its drive axles.



9. Important additional information

You can find further information on assistance in the event of an accident and recovery of vehicles with high-voltage systems at:
<https://www.vda.de/de/themen/automobilindustrie/standards-und-normung/retten-und-bergen>



10. Explanation of pictograms used

 Hybrid Electric Vehicle on fuel of liquid group 2	 General warning sign	 Warning, Electricity	 Flammable	 Explosive	 Corrosives	 Hazardous to the human health	 Environmental hazard
 Bonnet	 Boot	 Remove smart key	 Use thermal Infrared camera	 Dangerous voltage	 Use water to extinguish the fire		



PORSCHE

Porsche AG, 911
2 door, 4 seater
Coupe THEV, as from model year 2025

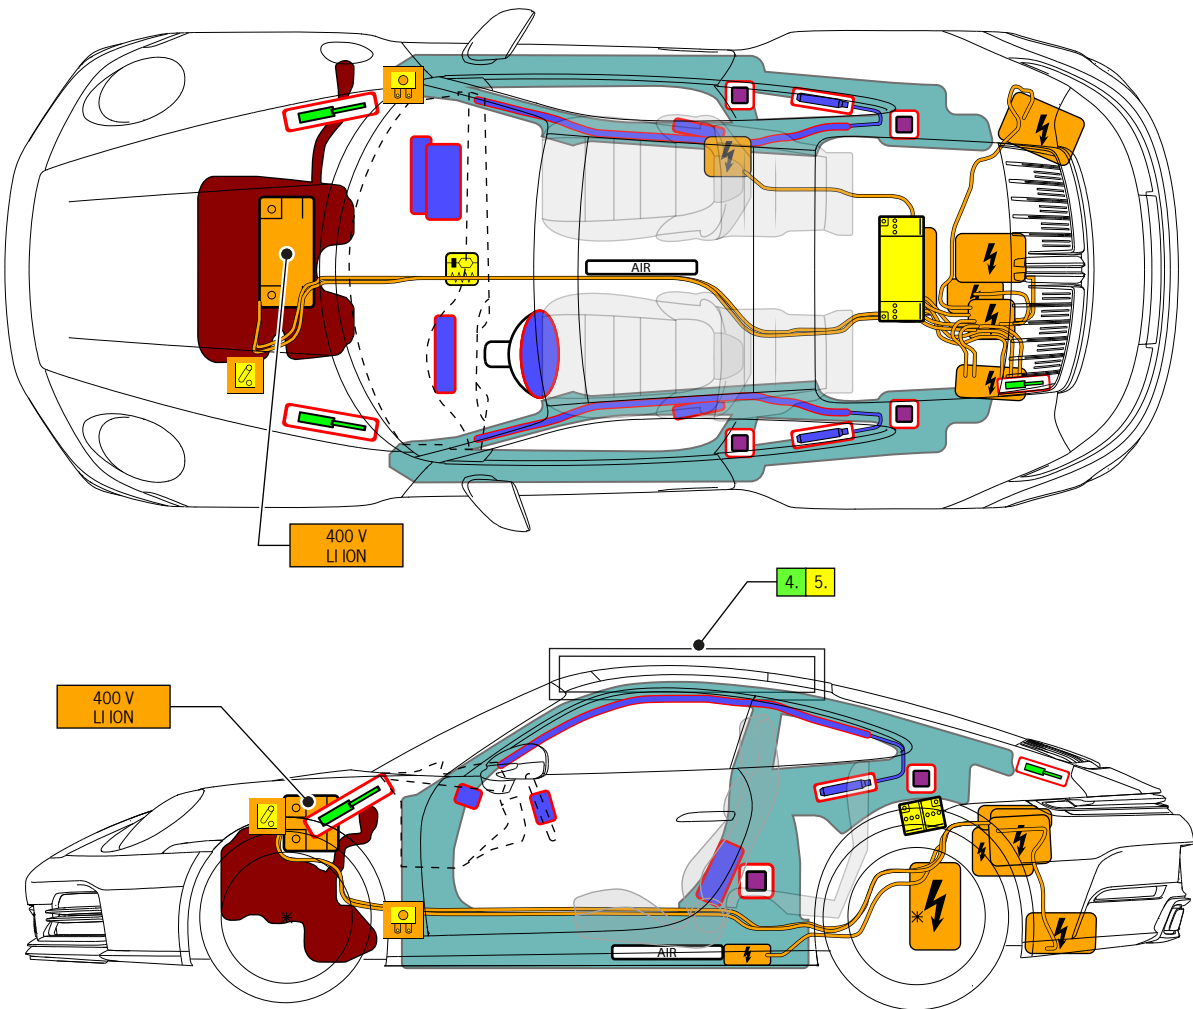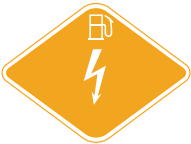

Note: The maximum possible equipment is shown.

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		
			Gas strut / Preloaded spring		High strength zone				
	Battery low voltage				Fuel tank				
	High-voltage battery		High-voltage power cable		Low voltage device that disconnects high voltage		Fuse box disabling high voltage		
	Air tank		Fuel tank content gasoline/ethanol		High voltage component				




Porsche AG, 911

2 door, 4 seater

Coupe THEV, as from model year 2025

PORSCHE

1. Identification / recognition

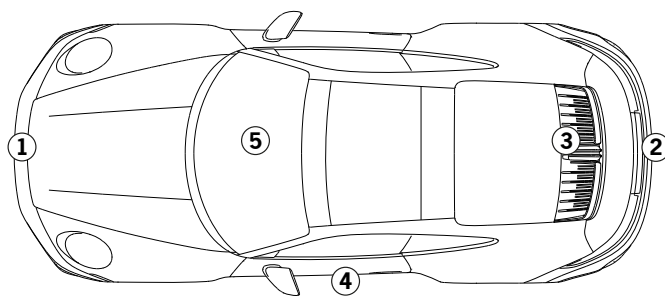

Equipment-dependent



Equipment-dependent



Equipment-dependent



Equipment-dependent




Equipment-dependent


2. Immobilization / stabilisation / lifting

Immobilizing the vehicle

Actuate electric parking brake

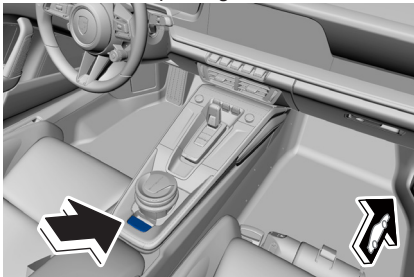



Lifting points

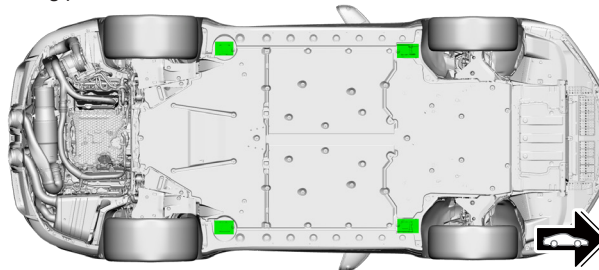

 Suitable lifting points

Switching off ignition

Press "Start-Stop" button on the instrument panel

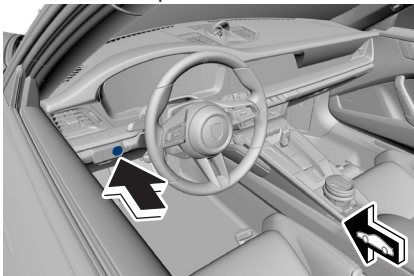




3. Disable direct hazards / safety regulations

The high-voltage system is automatically disabled in the event of accidents in which the airbag is triggered.
The high-voltage system is de-energised approx. 20 seconds after the disabling.

Disabling high-voltage system




Option 1: from the engine compartment

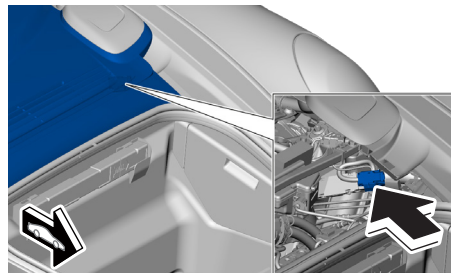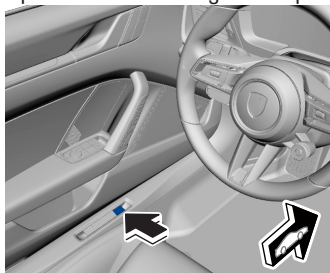






PORSCHE

Porsche AG, 911 2 door, 4 seater Coupe THEV, as from model year 2025




Option 2: from the front passenger footwell

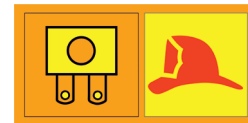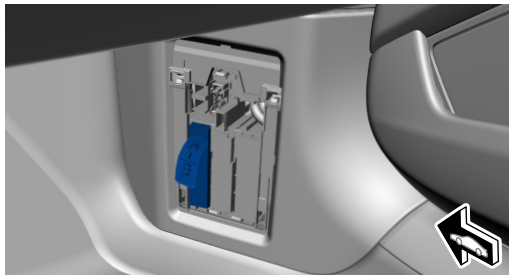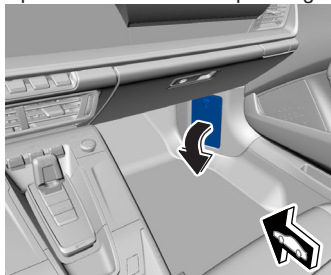


Do not touch, cut or open high-voltage components and high-voltage battery!
Wear appropriate protective equipment!

Disconnecting 12-volt battery


From the back seat

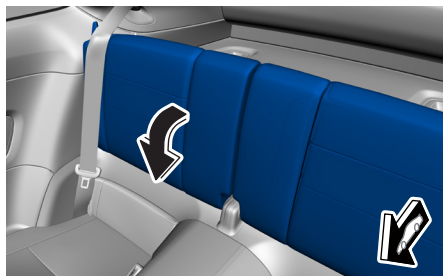

Disconnect the negative terminal of the battery

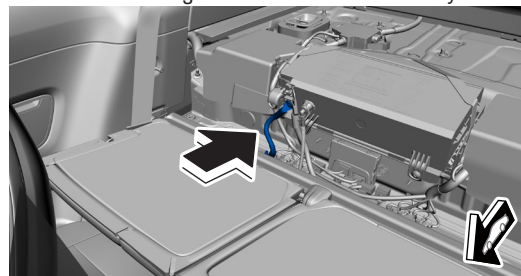

4. Access to the occupants

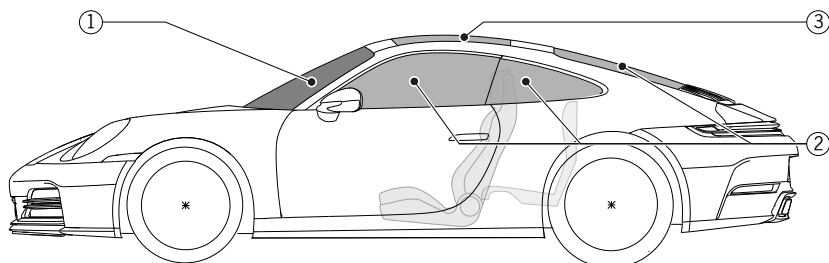

Glass types

- ① Laminated safety glass
- ② Equipment-dependent: Single-pane safety glass or laminated safety glass
- ③ Equipment-dependent: Single-pane safety glass



The car roof (depending on the equipment) is made of carbon fibre.

5. Stored energy / liquids / gases / solids



Gasoline
max. 84 l



LI ION
400 V



12 V LiFePO



PORSCHE

Porsche AG, 911
2 door, 4 seater
Coupe THEV, as from model year 2025



Roof (equipment-dependent)



If coolant is leaking from the battery cooling system, there is the risk of a thermal reaction in the high-voltage battery.
Monitor high-voltage battery temperature.



6. In case of fire




Lithium-ion batteries may self-ignite or re-ignite after the fire has been extinguished!
Wear appropriate protective equipment!



7. In case of submersion

After recovering the vehicle from the water, disable the high-voltage system (see section 3) and allow the water to drain. Wear appropriate protective equipment!

8. Towing / transportation / storage



Do not tow a vehicle involved in an accident on its drive axles.



9. Important additional information

You can find further information on assistance in the event of an accident and recovery of vehicles with high-voltage systems at:
<https://www.vda.de/de/themen/automobilindustrie/standards-und-normung/retten-und-bergen>



10. Explanation of pictograms used

 Hybrid Electric Vehicle on fuel of liquid group 2	 General warning sign	 Warning, Electricity	 Flammable	 Explosive	 Corrosives	 Hazardous to the human health	 Environmental hazard
 Bonnet	 Carbon structure	 Remove smart key	 Use thermal Infrared camera	 Dangerous voltage	 Use water to extinguish the fire		



PORSCHE

Porsche AG, 911
2 door, 4 seater
Targa THEV, as from model year 2025

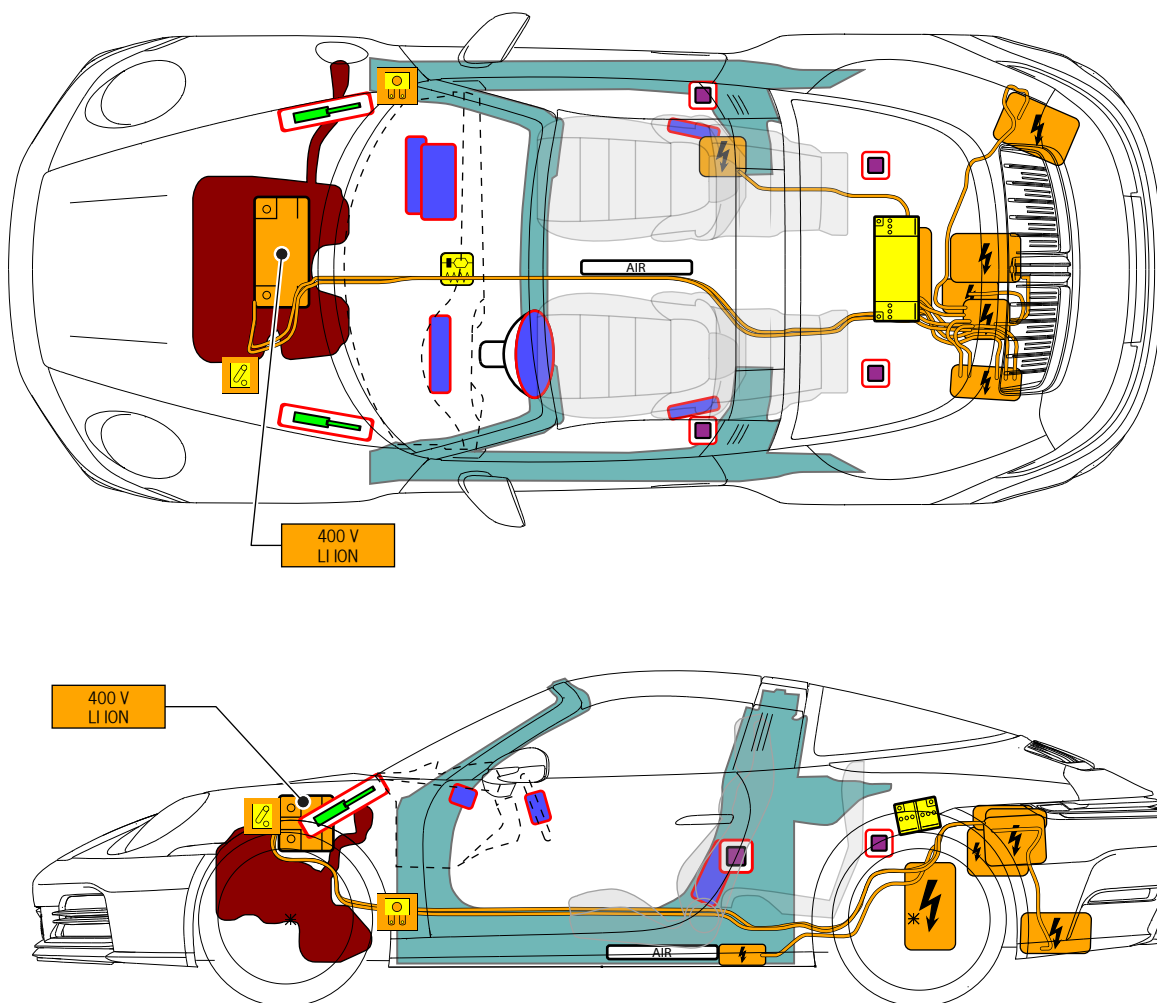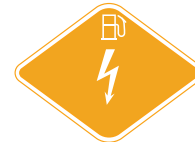

Note: The maximum possible equipment is shown.

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		
			Gas strut / Preloaded spring		High strength zone				
	Battery low voltage				Fuel tank				
	High-voltage battery		High-voltage power cable		Low voltage device that disconnects high voltage		Fuse box disabling high voltage		
	Air tank		Fuel tank content gasoline/ethanol		High voltage component				




Porsche AG, 911

2 door, 4 seater

Targa THEV, as from model year 2025

PORSCHE

1. Identification / recognition

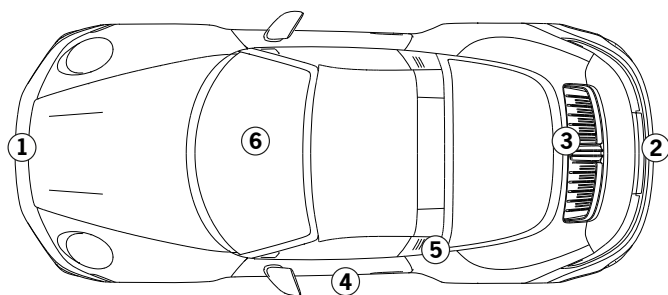

Equipment-dependent



Equipment-dependent



Equipment-dependent



Equipment-dependent



Equipment-dependent



Equipment-dependent


2. Immobilization / stabilisation / lifting

Immobilizing the vehicle

Actuate electric parking brake





Lifting points

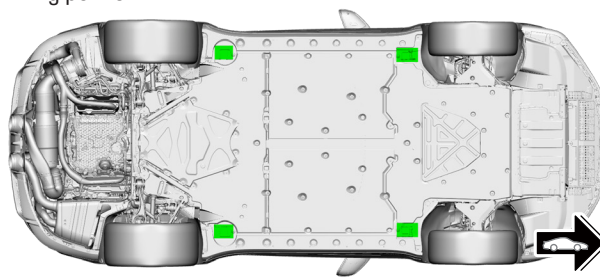

 Suitable lifting points

Switching off ignition

Press "Start-Stop" button on the instrument panel

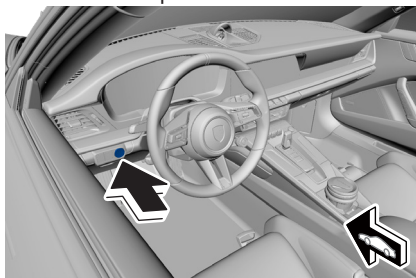




3. Disable direct hazards / safety regulations

The high-voltage system is automatically disabled in the event of accidents in which the airbag is triggered.
The high-voltage system is de-energised approx. 20 seconds after the disabling.

Disabling high-voltage system




Option 1: from the engine compartment

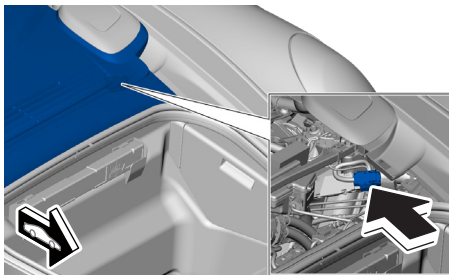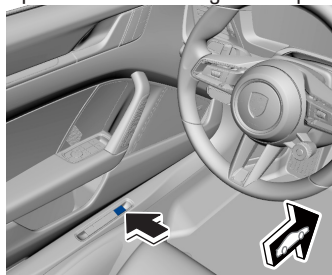






PORSCHE

Porsche AG, 911
2 door, 4 seater
Targa THEV, as from model year 2025




Option 2: from the front passenger footwell

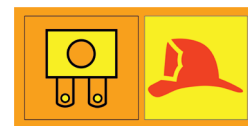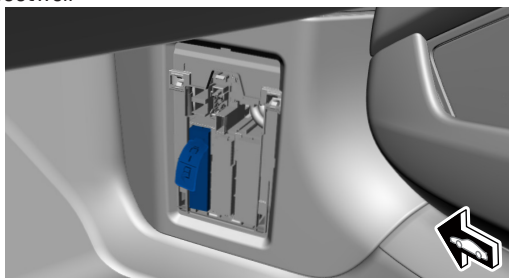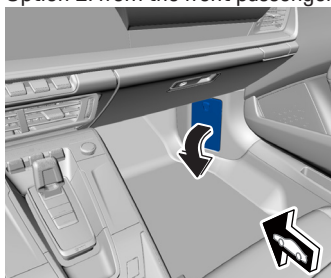


Do not touch, cut or open high-voltage components and high-voltage battery!
Wear appropriate protective equipment!

Disconnecting 12-volt battery


From the back seat

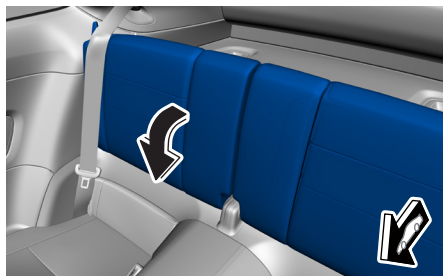

Disconnect the negative terminal of the battery

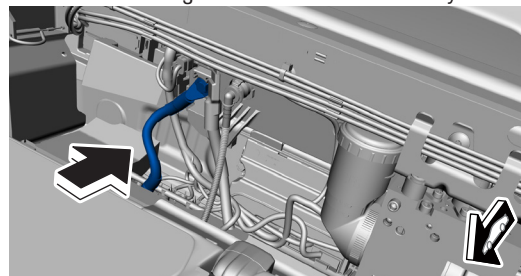

4. Access to the occupants

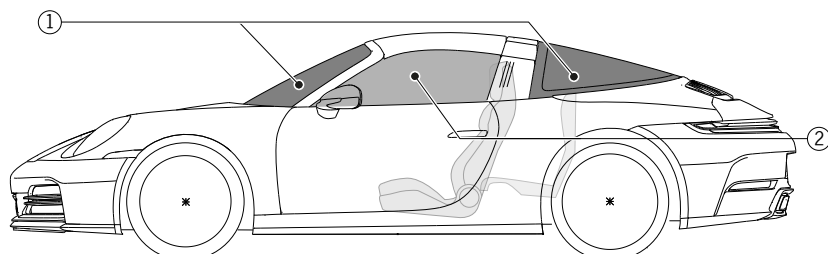


Glass types

- ① Laminated safety glass
- ② Equipment-dependent: Single-pane safety glass or laminated safety glass


5. Stored energy / liquids / gases / solids



Gasoline
max. 63 l




LI ION
400 V



12 V LiFePO



If coolant is leaking from the battery cooling system, there is the risk of a thermal reaction in the high-voltage battery.
Monitor high-voltage battery temperature.





Porsche AG, 911
2 door, 4 seater
Targa THEV, as from model year 2025

PORSCHE

6. In case of fire




Lithium-ion batteries may self-ignite or re-ignite after the fire has been extinguished!
Wear appropriate protective equipment!



7. In case of submersion

After recovering the vehicle from the water, disable the high-voltage system (see section 3) and allow the water to drain. Wear appropriate protective equipment!

8. Towing / transportation / storage



Do not tow a vehicle involved in an accident on its drive axles.



9. Important additional information

You can find further information on assistance in the event of an accident and recovery of vehicles with high-voltage systems at:
<https://www.vda.de/de/themen/automobilindustrie/standards-und-normung/retten-und-bergen>

10. Explanation of pictograms used



Hybrid Electric
Vehicle on fuel of
liquid group 2



General warning
sign



Warning,
Electricity



Flammable



Explosive



Corrosives




Hazardous to the
human health



Environmental
hazard



Bonnet



Remove
smart key



Use thermal
Infrared camera



Dangerous
voltage



Use water to
extinguish the fire