




Porsche AG, Panamera S Hybrid (970) Coupé from Model Year 2011


PORSCHE

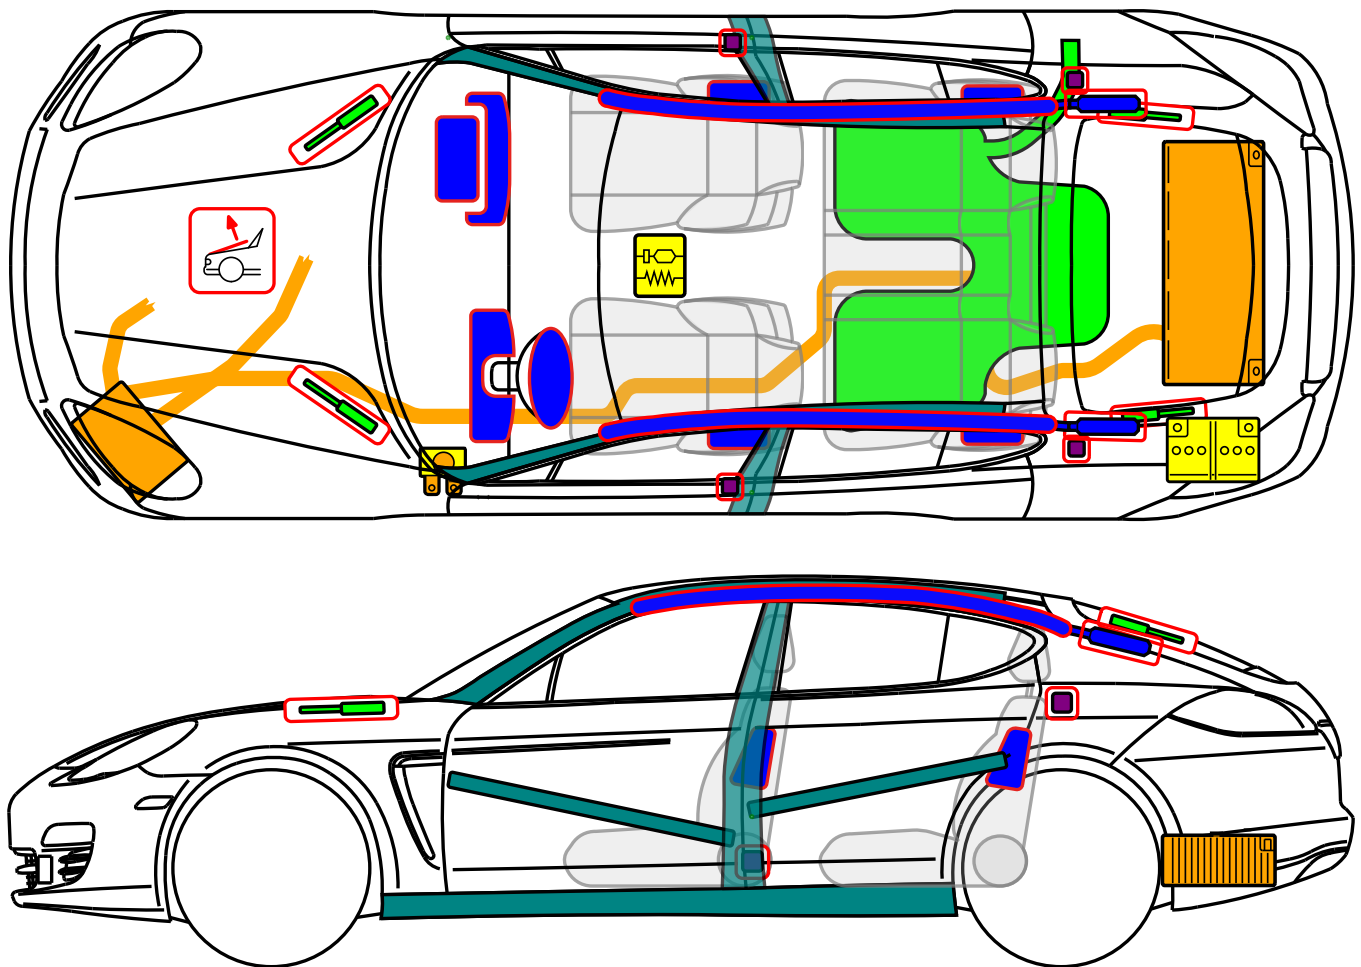


	Airbag		Body reinforcement		SRS-Control unit		High voltage battery
	Gas generator		Gas strut		12-volt Battery		High voltage cable / component
	Seat belt pretensioner		Pedestrian protection system		Fuse box		High voltage cut-off
	Fuel tank		Roll-over protection		Condenser		

Vehicle identification and marking


Panamera S Hybrid identification features

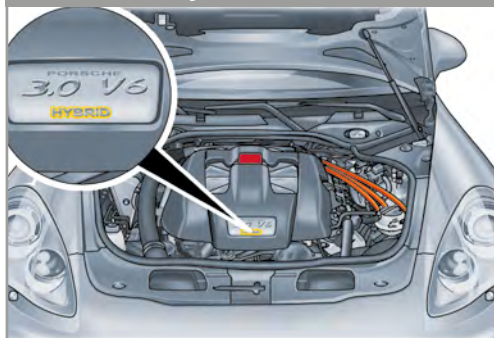

“Hybrid” logo on the engine cover

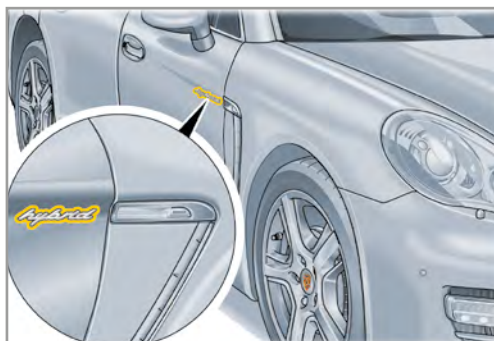

“Hybrid” logo on the right- and left-hand doors

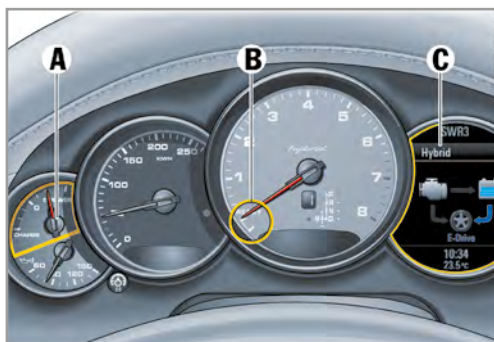

On the **instrument cluster**

A = E-Power meter,
B = READY indicator,
C = energy flow in the multifunction display

Marking of the hybrid components



All high-voltage components are clearly marked with warning labels.



Warning on the lockable plastic cover in the engine compartment.

All high-voltage cables have orange insulation.

Safety information about the hybrid system

Undamaged plugs, cables and sockets in the on-board high-voltage system are safe to touch.

DANGER

Risk of serious or fatal injury from electric shock if handled incorrectly!

If high-voltage components are not handled correctly, there is a risk of fatal injury.

- Do not touch high-voltage components that are in operation.
- Do not damage the orange high-voltage cables in the on-board high-voltage system.
- There may still be voltage in the high-voltage battery even after the on-board high-voltage system has been switched off. The high-voltage battery must not be damaged or opened.

Switching off the passive safety system and high-voltage system

WARNING

The electric motor is silent when stationary!

You cannot always tell from the operating noise whether the car is ready to start because the electric motor is silent when stationary.

- The vehicle may be ready to start even when no engine noises can be heard.
- The combustion engine may start automatically when the transmission is in “P” or “N” depending on the level of charge of the high-voltage battery.

NOTE

In the event of an accident where the airbags and seat belt pre-tensioners are activated

The high-voltage system switches off automatically in accidents where the airbags and seat belt pre-tensioners are activated.

NOTE

In the event of an accident where the airbags and seat belt pre-tensioners are not activated

The following steps should be taken to make sure that the **high-voltage system** is switched off. Depending on accessibility, the **deactivation method** should be **selected in the order stated below**:


1. Switch ignition key to "OFF".
or:
2. Remove fuse number 46 from the fuse box on the front left-hand side.
or:
3. Disconnect (negative terminal) the 12-volt battery in the luggage compartment. With this method, ensure that no jumper cables are connected to the vehicle.

Other deactivation methods as described in the manual (e.g. pulling out the service plug) may only be performed by appropriately qualified personnel.

To ensure that the **passive safety systems** (airbags and seat belt pre-tensioners) are deactivated, the 12-volt battery in the luggage compartment should be disconnected.

Switching off the ignition


The method of switching off the high-voltage system described below applies to both vehicles with a conventional key and those with Porsche Entry & Drive.

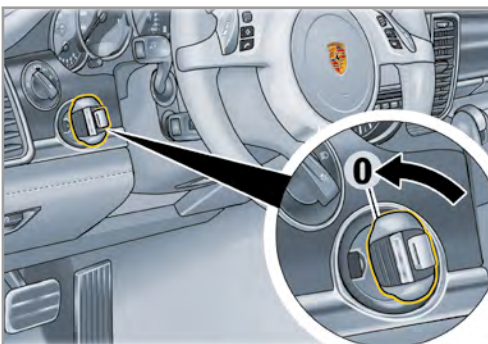

1. Turn the ignition key to "OFF" (0 position).

- ➔ There is no voltage in the high-voltage system approx. 20 seconds after it has been switched off.
- ➔ The passive safety systems, such as airbags and seat belt pre-tensioners, are still supplied with voltage from the on-board 12-volt battery.


Removing fuse number 46 from the fuse box on the left-hand side of the dashboard

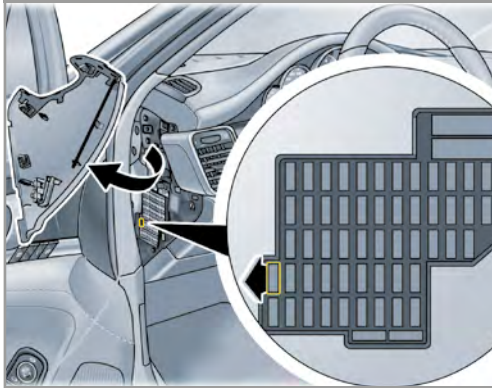

1. Open the lid of the fuse box on the left-hand side of the dashboard.
2. Pull out fuse number **46**.

- There is no voltage in the high-voltage system approx. 20 seconds after it has been switched off.
- The passive safety systems, such as airbags and seat belt pre-tensioners, are still supplied with voltage from the on-board 12-volt battery.

Disconnecting the 12-volt battery

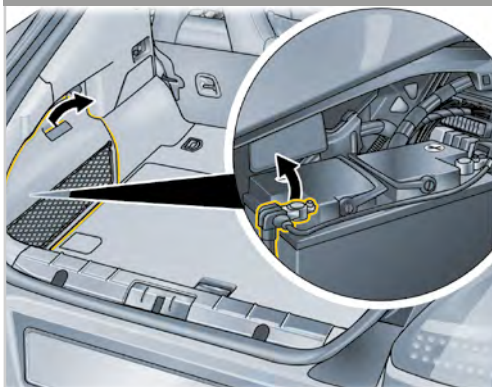

1. Ensure that no jumper cables are connected to the vehicle.
2. Remove the cover of the 12-volt battery on the rear left-hand side of the luggage compartment.
3. Disconnect the negative cable of the 12-volt battery and secure it to prevent accidental contact.

- There is no voltage in the high-voltage system approx. 20 seconds after it has been switched off.
- The passive safety systems (airbags and seat belt pre-tensioners) are deactivated.

Other accident situations

Vehicle in water

There is no risk that the car body will be live. Once the vehicle has been recovered:

1. Allow the water to run out of the interior.
2. Begin switching off the high-voltage system.

Vehicle fire

Suitable extinguishing agent:

water (H₂O)

Battery fire

Suitable extinguishing agent for a battery fire:

dry sand, carbon dioxide (CO₂)

WARNING

Battery modules explode when hot!

The battery modules might explode if the high-voltage battery becomes too hot.

→ Keep to the required safety distances when fighting the fire.