




BLUE BIRD®

EMERGENCY RESPONSE GUIDE


Blue Bird All-American Electric Bus 2019 to 2025



The 12/24V converter box is mounted inside the rear compartment on the driver's side. Unplug the connector on the face of the box to break the connection.

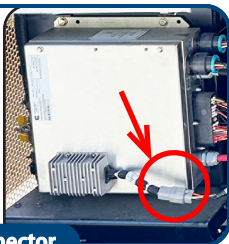

12/24 Volt Converter Connector

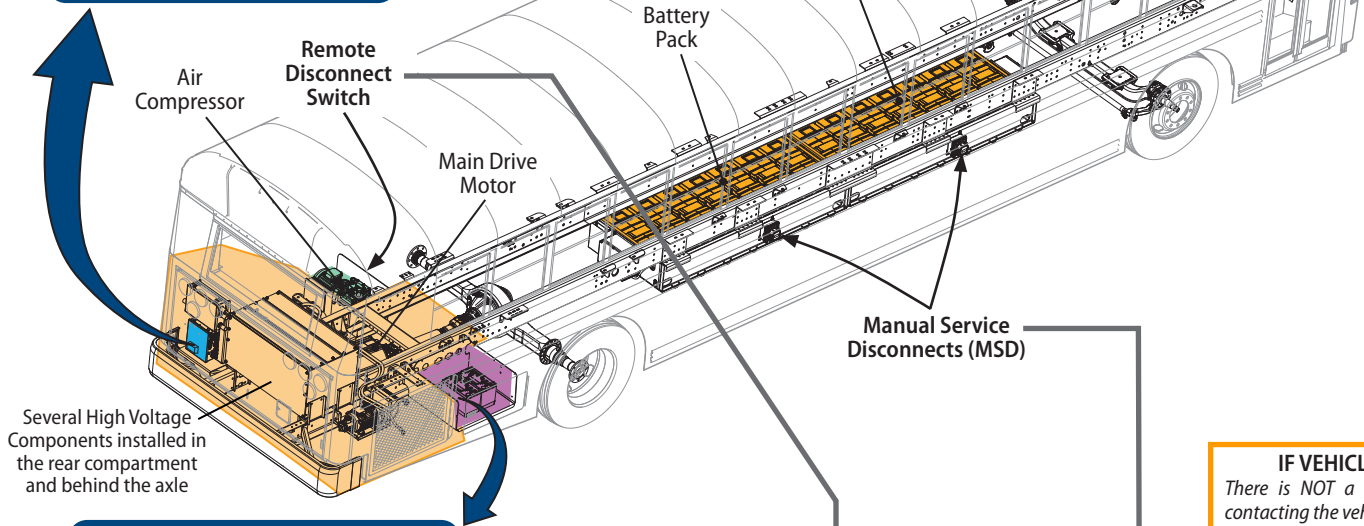

Several High Voltage Components installed in the rear compartment and behind the axle

12 Volt Battery Disconnect Switch

The 12 Volt disconnect switch is mounted on the rear wall of the 12 Volt battery compartment which is located on the curbside of the bus behind the rear axle. The disconnect switch will be one of the types shown below:

Dial Knob in Chrome or Red

- OR -

Module with Yellow Knob

- OR -

Remote Disconnect Switch

A lighted Remote Disconnect Switch may be mounted on the front side of the air compressor box behind the rear axle on the streetside of the bus.


If ON side is lit, slide cover up to expose the OFF side of switch and push to turn off 12V disconnect.



Rotate knob to the OFF position.



Rotate knob to the LOCK OFF position. Center of knob should pop up when 12V is disconnected.

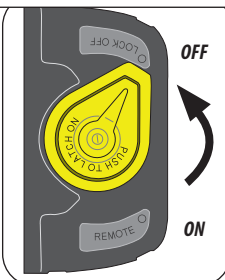

SHUTDOWN PROCEDURE

1. Chock wheels, then apply the parking brake.
2. Shutdown procedure Methods in preferred order:

METHOD A: Ignition key is accessible

Turn OFF ignition and remove key.

Turn OFF 12 Volt battery disconnect switch in battery box.

METHOD B: Ignition key not accessible

Turn OFF 12 Volt battery disconnect switch in battery box. DISCONNECT 12/24 Volt converter connector in the rear compartment.

METHOD C: On buses with accessible MSDs

If Methods A & B are not possible and the bus is not submerged in water, remove the MSD switches while wearing NFPA-70E, 110E-rated non-conductive, Class 0 rubber gloves as shown below.

**During emergencies where the only feasible way to disable the high voltage is by removing both MSDs, emergency responders should forego the standard service procedure of waiting 10 minutes for the system to depower and immediately begin rescue procedures.*

IF VEHICLE IS SUBMERGED:

There is NOT a risk of electric shock from contacting the vehicle's body or frame in or out of the water. Perform the system shutdown procedure and continue with standard first responder procedures.

VEHICLE FIRE:

IMPORTANT NOTE: Use copious amounts of water to control a lithium battery fire. Perform the system shutdown procedure and continue with standard first responder procedures.


Removing the MSDs

If the bus is equipped with accessible MSDs, they can be found mounted on the high voltage battery boxes on the curb side of the bus under the skirt.

NOTE: Wear NFPA-70E, 110E-rated non-conductive, class 0 rubber gloves when handling the MSDs.


Step 1

Depress here.

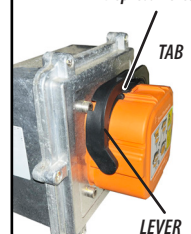

Step 2

Rotate lever 45 degrees.

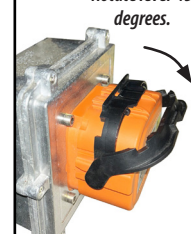

Step 3

Depress here

Continue rotating lever until it is horizontal.



Step 4

Pull off to remove and stow in a safe location.



