

Rescue sheet [111771310 - V2 - 26 October 2023]

Below is the machine's Rescue sheet, also called Rescue card.

The rescue sheet can also be downloaded in digital format from the Manufacturer's website; this can be printed out and kept available for rescue personnel at the workplace.

WARNING

Fire hazard!

In case of battery damage, there is a risk of undetected flames. Place the damaged vehicle or battery under surveillance in a dedicated safe location to prevent the ignition or re-ignition of a fire.

Failure to comply could result in death or serious injury.

W1705A

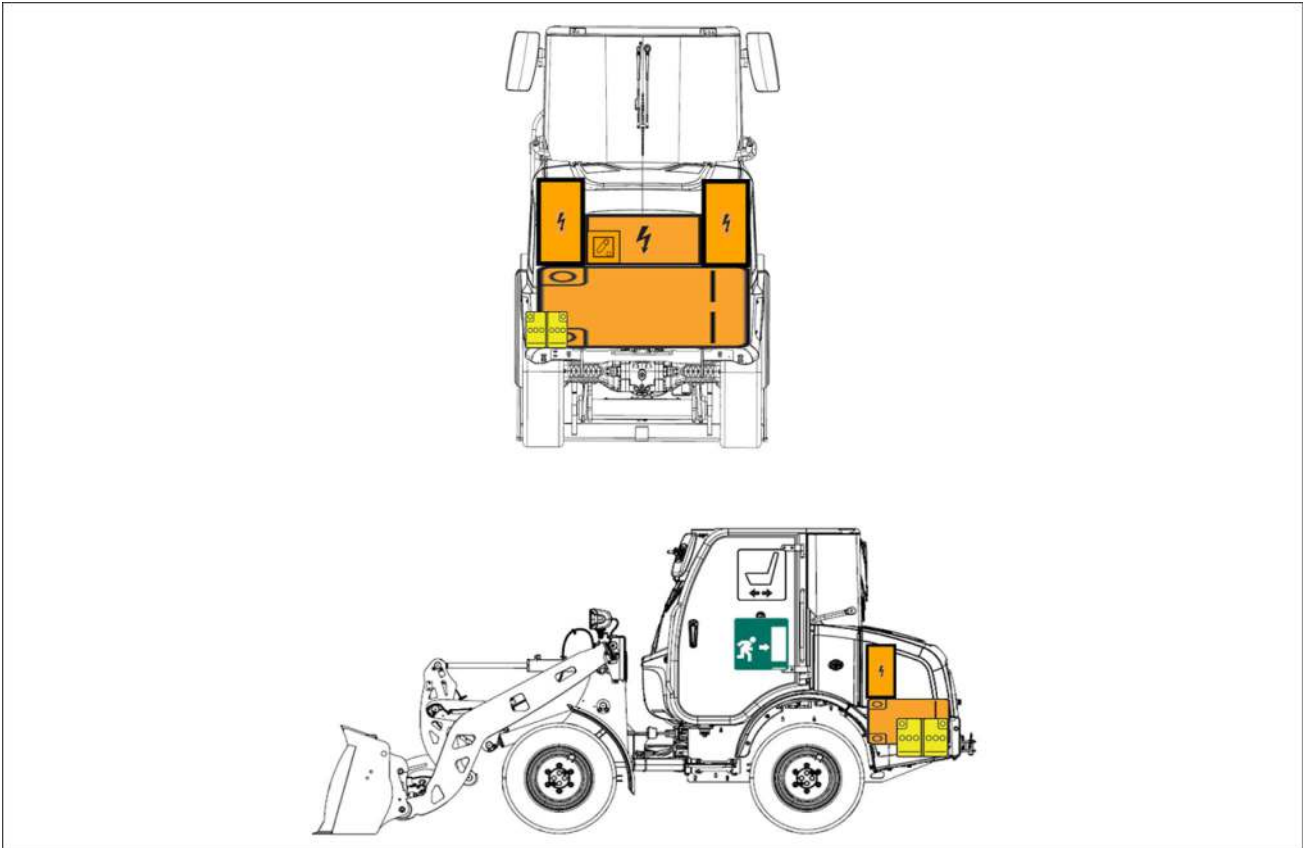
WARNING

Fire hazard!



If the vehicle is submerged completely, the high-voltage battery can generate flammable hydrogen gas. When sea water enters the battery compartment, the battery can generate a large amount of flammable hydrogen gas quickly by rapid electrolysis due to salinity. A fire could result.

Failure to comply could result in death or serious injury.


W1706A



LEIL23CWL1044FA 1


	Low voltage battery		Low voltage switch that disconnects the high voltage		High voltage component
	High voltage battery		Longitudinal seat adjustment		Emergency exit
	High voltage switch that disconnects the high voltage				

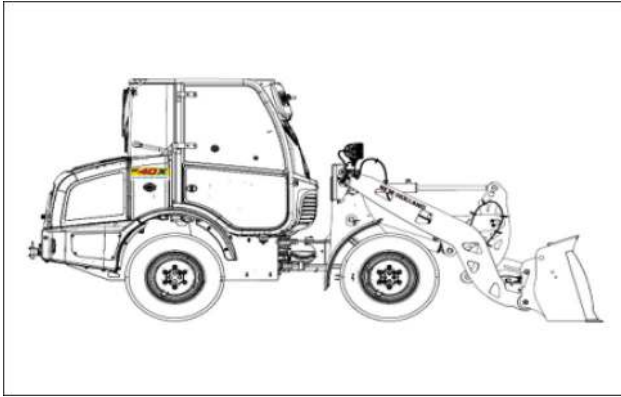1 – Identification/recognition



LEIL23CWL1047AA 2

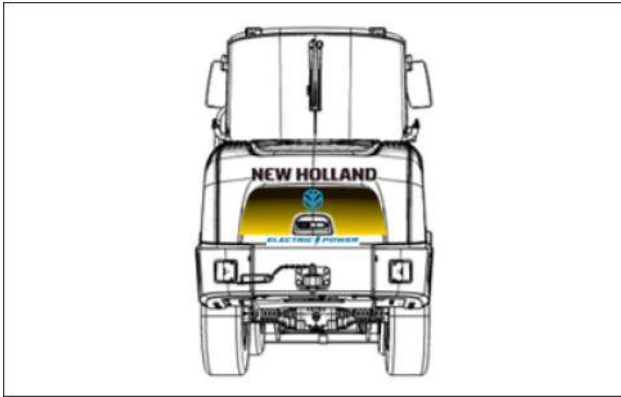
W40X
Side frame screen printing (right side)



LEIL23CWL1048AA 3


W40X
Rear frame screen printing

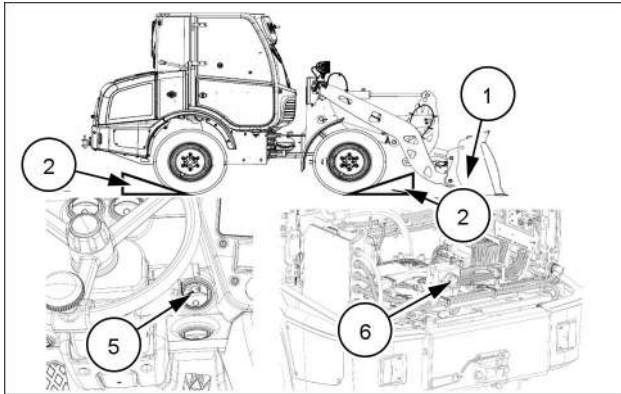2 – Immobilization/stabilization/lifting



LEIL23CWL1033A 4

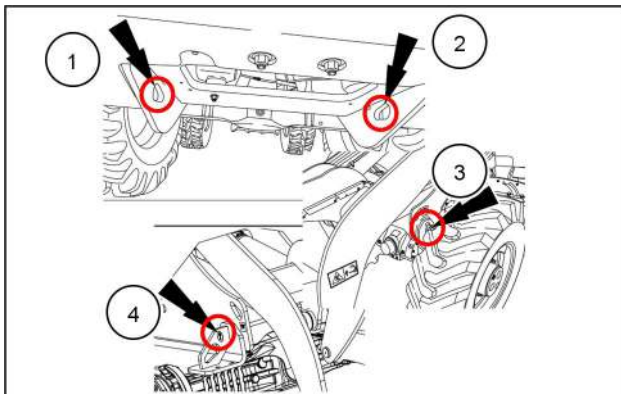
- Lower the bucket to the ground **(1)**.
- Choke the wheels **(2)**.
- Put the vehicle in neutral gear N.
- Engage the park brake.
- Turn the key anti-clockwise **(5)**.
- Turn the manual service disconnect anti-clockwise **(6)**.



LEIL23CWL1034A 5




- Lifting points **(1)** and **(2)** are located on the bottom rear part of the chassis, while lifting points **(3)** and **(4)** are located on the front side.

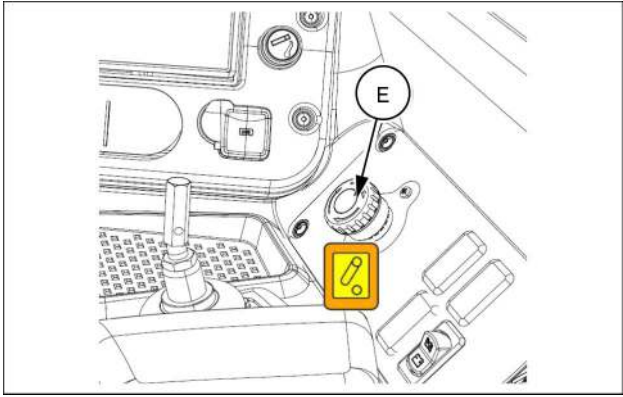3 – Deactivation of direct danger/safety rules

 LEIL23CWL1036A 6	In case of danger, press the emergency stop button (E) and turn the key anti-clockwise. Only for properly informed personnel, turn the Manual Service Disconnect anti-clockwise (see section 2, item 6).
---	--


NOTE: the emergency stop button will NOT completely deactivate the High Voltage circuit.

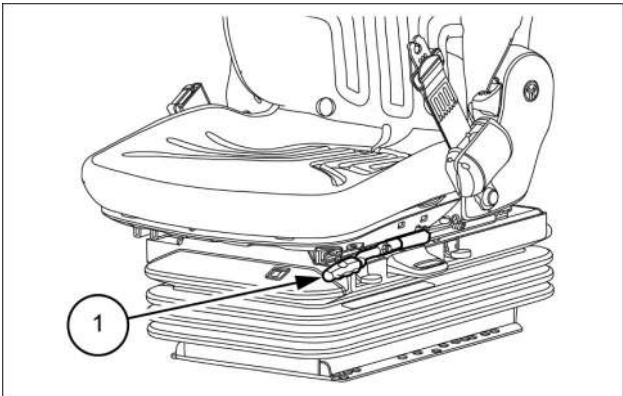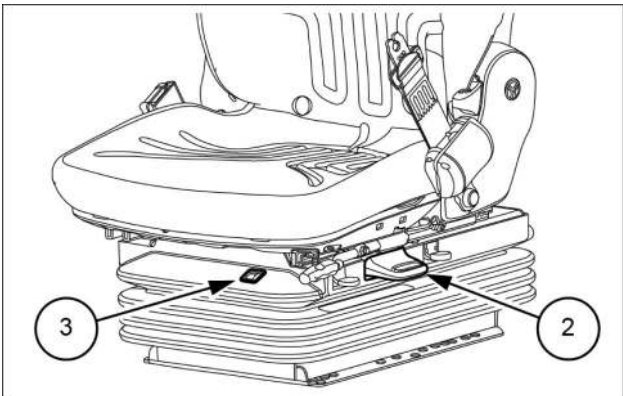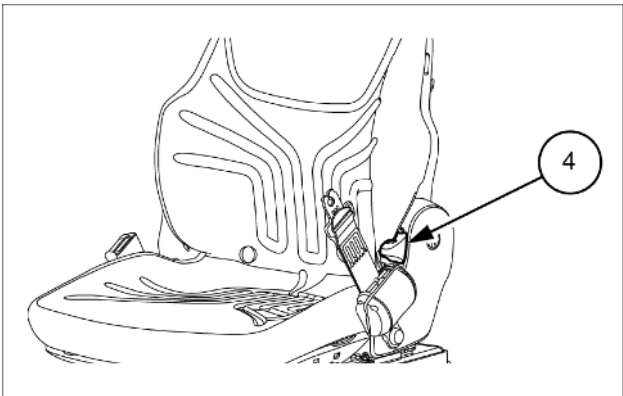4 – Occupant access

 LEIL23CWL1037A 7	Fore-and-aft adjustment (1)
 LEIL23CWL1038A 8	Height and weight adjustment (2) Height and weight indicator (3)
 LEIL23CWL1039A 9	Backrest adjustment (4)

5 – Storage of energy/fluids/gases/solids

Battery Li-ion - LiFePO4		Hydraulic oil	
Rated voltage	96 V DC	Type	HV 46
Rated energy	24.96 kWh	Quantity	67 L (18 US gal)

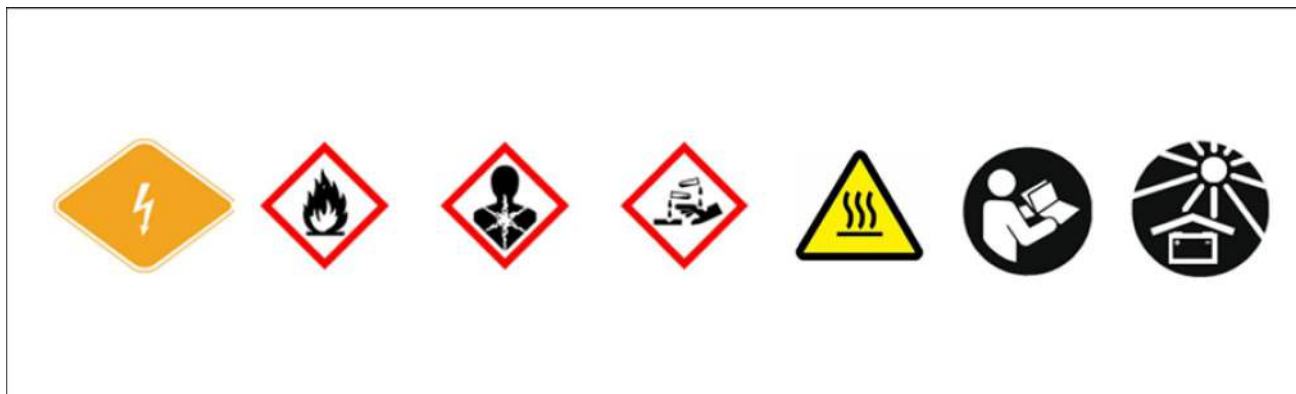

LEIL23CWL1029EA 10

ATTENTION: All high voltage cables have an orange coating: **DO NOT TOUCH.**

6 – In the event of a fire

WARNING: in the event of battery damage, there is a risk of an undetected flame. In this case, it is necessary to place the damaged vehicle or battery under surveillance in a safe and dedicated location to prevent the ignition or re-ignition of a fire. A lithium-ion battery may only be extinguished by a trained and specially equipped fire-fighting specialist (e.g., fire brigade).

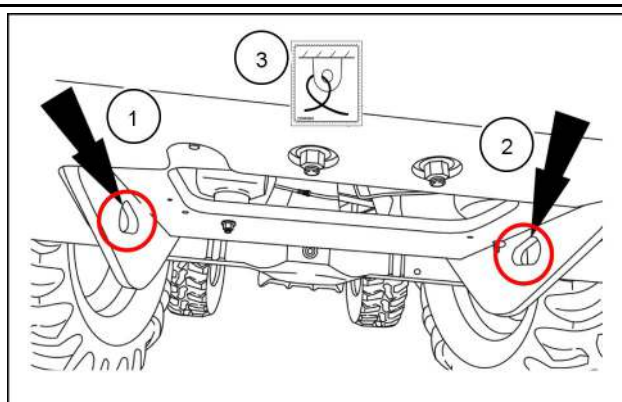
7 – In the event of submersion

If the vehicle is submerged or partially submerged, pull the vehicle out of the water. Then deactivate the high voltage system.

ATTENTION: If the vehicle is completely submerged, the high voltage battery can generate flammable hydrogen gas.

When sea water enters, a large amount of hydrogen gas can be generated by rapid electrolysis due to salinity, which can cause fire and hydrogen gas.

ATTENTION: Do not touch the electrical parts. Risk of severe injuries and electric shock.

8 – Towing/transport/storage

LEIL23CWL1040AA 11

- When towing, the operator **MUST NOT** be near the towing rod or rope.
- Connect a towing device to the dedicated tow hooks **(1)** and **(2)** of the undercarriage. The hooks are indicated by the dedicated labels **(3)**.
- **DO NOT** use other anchorage points (e.g. boom, bucket or any accessory installed).
- The machine must be towed only at the low speed of approximately **2 km/h (1.24 mph)** and over a maximum distance of **1 km (0.6 miles)**.

NOTICE: Do not cut, break or touch the high voltage components or cables.

9 – Important additional information

Not available

10 – Explanation of pictograms used

	Electric vehicle		Dangerous for human health		Flammable
	Corrosive		Hot surfaces: battery cells can generate very high short-circuit currents, causing them to become hot.		Protect the battery from solar radiation or other forms of heat radiation.
	Warning: generic danger		Warning: high voltage electricity		Observe the operating instructions