

AN6000 Series

Optical Line Terminal Equipment

MIB User Manual

Version: 01

Code:

FiberHome Telecommunication Technologies Co., Ltd.

April 2021

Copyright © FiberHome Telecommunication Technologies Co., Ltd. All rights reserved.

No part of this document (including the electronic version) may be reproduced or transmitted in any form or by any means without prior written permission from FiberHome.

Trademarks and Permissions

 and other FiberHome trademarks are trademarks of FiberHome Telecommunication Technologies Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

General Disclaimer

All or part of the products, services and features described in this document may not be within your purchase scope or usage scope. In case of inconsistency, the contract shall prevail.

The information in this document may contain predictive statements. Actual results may differ materially from those expressed or implied in predictive statements due to numerous factors. Therefore, such information is provided for reference purpose only and constitutes neither an offer nor an acceptance.

Information in this document is subject to change without notice due to upgrade or other needs.

FiberHome Telecommunication Technologies Co., Ltd.

Address: No.6, Gaoxinsilu, High-Tech Development Zone, Wuhan, Hubei Province, P. R. China

Postcode: 430205

Website: <http://www.fiberhome.com>

Tel: +86 800-8800787; +86 400-8890787

Preface

This document introduces MIB files for the AN6000 series optical line terminal equipment, so that readers can have a general idea about MIB definitions for the equipment.

Intended readers for this document are R&D personnel and project maintenance personnel for a third-party network management system

Symbol Conventions

Symbol	Meaning	Description
	Note	Important features or operation guide.
	Caution	Possible injury to persons or systems, or cause traffic interruption or loss.
	Warning	May cause severe bodily injuries.

Version Information

Version	Description
01	Initial version.

Contents

1	General Instructions	1
1.1	Compound Indexes of IfIndex.....	1
1.2	Compound Indexes of Common Objects	1
1.3	Instructions on Specifying Indexes for Creating Objects	3
2	Basic OLT Information.....	4
2.1	Device Information	4
2.2	Subrack Information.....	5
2.3	Slot Information.....	6
2.4	Service Card Information	7
2.5	Core Switch Card Information	7
2.6	Uplink Port Information	8
2.7	PON Port Information.....	11
2.8	Optical Power Measurement on PON Ports.....	13
2.8.1	Optical Power Measurement on PON Ports (Batch Operation)...	13
2.8.2	Real-time Optical Power Measurement on PON Ports	15
2.9	Distance Between an ONU and a PON Port	16
2.10	Power Status Information	17
2.11	Fan Status Information.....	17
2.12	Viewing Loopback Information Based on Slots	17
2.13	Virtual System Heartbeat Table (Real-time)	18
2.14	OLT MAC Address Table.....	18
2.15	Querying OLTs by Count of VLAN MAC Addresses	19
2.16	Querying MAC Address Tables by VLAN.....	19
3	Basic ONU Information.....	21
3.1	ONU Information.....	21
3.2	Local Management Interface Configuration for an ONU	28
3.3	Configuration of the WEB Management Account	30

3.4	Limit on the Number of an ONU's MAC Addresses.....	31
3.5	Control Commands for an ONU	31
3.6	Public Configurations for an ONU.....	32
3.7	Query / Statistics of ONUs Based on Types (Supporting snmpget Only) ...	32
3.8	Information About an ONU's Uplink Ports.....	33
3.9	Optical Power of an ONU's Uplink Ports (Batch Measurement)	34
3.10	Real-time Optical Power of an ONU	35
3.11	Information About an ONU's LAN Ports.....	37
3.12	Information About POTS Ports	38
3.13	Information About Unauthorized ONUs	39
3.14	Real-time Query of the ONU MAC Address Table Based on ONUs	39
3.15	Real-time Query of FE Port MAC Address Tables Based on ONUs' FE Ports.....	40
3.16	Real-time Status Table for ONUs' LAN Ports	40
3.17	ONU LAN Port Status Table (walk Supported).....	41
3.18	Time and Reason for an ONU Going Online / Offline.....	43
3.19	CATV Information	45
4	Traffic Measurement	46
4.1	Device Traffic Measurement Switch	46
4.2	Port Traffic Measurement.....	47
4.3	Extended Port Traffic Measurement.....	50
4.4	Traffic Measurement on an ONU's PON Ports.....	50
4.5	Traffic Measurement on an ONU's Ports	55
4.6	Multicast Traffic Measurement.....	60
4.7	Traffic Measurement on an OLT's Local End Ports	62
4.8	Querying Multicast Downstream Speed.....	68
4.9	PON Channels	69
4.10	Real-time Traffic Measurement on PON Channels	70
4.11	Real-time Traffic Measurement on Uplink Ports	71
4.12	Traffic Record	72
4.12.1	Record of Traffic on PON Channels.....	72

4.12.2	Record of Traffic on an OLT's Ports.....	73
5	System Configuration Management	74
5.1	PON Port Authentication Mode.....	75
5.2	Card Authorization.....	76
5.3	ONU Physical Authentication White List.....	76
5.4	ONU Logical Authentication White List.....	77
5.5	Querying the ONU Physical Authentication White List (Supporting snmpget Only).....	78
5.6	Querying the ONU Logical Authentication White List (Supporting snmpget Only).....	80
5.7	Local VLAN Configuration.....	81
5.8	OLT Uplink Port Trunk.....	82
5.8.1	Trunk Status (Supporting snmpwalk Only)	85
5.8.2	Ports in Trunk Status (Supporting snmpwalk Only).....	85
5.8.3	Minimum Number of Ports in a Trunk Group.....	86
5.9	ONU Management VLAN Configuration	86
5.10	Enabling Ports on Devices.....	87
5.11	Saving Current Configuration to the Flash	88
5.12	SNMP Community.....	89
5.13	SNMP Trap Information.....	89
5.14	SNMP Extension Community	92
5.15	Adding VLAN to Ports	92
5.16	OLT Management VLAN.....	94
5.17	ONU Physical Password Authentication White List	95
5.18	Querying the ONU Physical Password White List (Supporting snmpget Only).....	96
5.19	Specifying Packet Suppression on an Uplink Port.....	97
5.20	Authorizing All Cards.....	97
5.21	Configuring Priority	98
5.22	OLT Slice Configuration	98
5.22.1	OLT Slice Configuration	98

5.22.2	Configuration of OLT Slice Object Information.....	99
5.22.3	Slice Resource Information Configuration	101
5.22.4	Slice Object Information	102
5.22.5	Association Between the OLT Entity and Slices.....	105
5.22.6	Management IP Address.....	105
5.23	Configuring Device Users	106
5.24	ONU Capability Set Profile Table.....	108
5.25	Querying Unique ONU White Lists in a PON	111
5.25.1	Physical Password White List Query Table	112
5.25.2	Logical SN White List Query Table	113
6	Data Service Configuration Function	114
6.1	Rate Control on PON Ports of ONUs	114
6.2	ONU Port Attribute Profile and Binding of the Profile.....	114
6.3	ONU Port Bandwidth Profile and Binding of the Profile (Applicable to FTTH / FTTB).....	115
6.4	GPON Service Bandwidth Allocation	117
6.5	Configuring Data Services.....	118
6.6	Binding QinQ Domain Profiles	120
6.7	Binding QinQ Domain Profiles to PON Ports.....	121
6.8	Rate Control for an ONU's QinQ Domain	122
6.9	Creating a QinQ Domain.....	124
6.10	Configuring Remote Management of ONUs.....	129
6.11	Configuring ONU VEIP Management Channels	130
6.12	Configuring the ONU VEIP Data Service.....	132
6.13	CATV Switch	134
6.14	Replacing an ONU's Logical SN	134
6.15	ONU PON Port Bandwidth Profile and Binding of the Profile (Applicable to FTTH / FTTB).....	135
6.16	Optical Power Threshold Profile for an ONU PON Port and Binding of the Profile	137
6.17	Configuring Optical Power Thresholds for OLT PON Ports.....	140
6.18	GPON Service Bandwidth Profile and Binding of the Profile.....	141

6.19	Querying the WAN Connection Bandwidth Profile for an ONU	144
6.20	Default QinQ Domain Configuration for an ONU	144
6.21	Service Model Profile	146
6.22	WAN Connection Readback	147
6.23	Replacing the Physical Identifier of an ONU	153
6.24	Line Identifier Switch	154
6.25	Configuring the IPv6 WAN Connection Service	155
6.26	Querying WAN Connection Bandwidth Profile for ONUs at All Levels ..	165
6.27	Collecting ONU Network Side Information	167
6.28	ONU Weak Optical Power Detection	169
7	Voice Service Configuration Function	170
7.1	Configuring Users on Voice Ports	170
7.2	Softswitch Platform Parameter Configuration Profile	171
7.3	Basic Voice Configuration for an ONU	173
7.4	Softswitch Platform Intercommunication Parameter Profile	174
7.5	SIP DigitMap	175
7.6	ONU Voice Registration Status	175
7.7	Querying Current VoIP Service on an ONU	177
7.8	Querying MGs for ONUs	177
8	Alarms	180
8.1	Equipment Alarm Reporting Format	180
8.2	Querying Current Alarms	181
8.3	Querying Historical Alarms	182
9	LLDP Function	184
9.1	Information About the LLDP Local System	184
9.2	Information About the LLDP Remote System (Supporting snmpwalk Only)	186
9.3	Basic LLDP Configurations	189
10	Multicast Information Function	192
10.1	Multicast Stream Information (Supporting snmpwalk Only)	192

10.2	Multicast VLAN Information (Supporting snmpwalk Only)	192
10.3	Multicast Settings and Status	193
10.4	Multicast VLAN Translation.....	193
10.5	Online Multicast Group Information	194
10.5.1	Basic Group Information.....	194
10.5.2	Group Location Information List.....	196
10.5.3	Mappings Between Multicast Groups and Users	197
10.5.4	List of Multicast Users.....	197
10.5.5	Multicast Groups That a Multicast User Belongs to.....	199
10.6	ADAMO Multicast Statistics	199
10.6.1	Multicast Group Information	200
10.6.2	Querying Multicast Downlink Traffic.....	201
10.6.3	Aggregated IGMP Statistics.....	202
10.6.4	Resetting Aggregated IGMP Statistics.....	209
10.6.5	IGMP Snooping Statistics	210
10.6.6	Checking IGMP Configuration	216
11	NTP Function	217
11.1	Configuring Time Calibration Method.....	218
11.2	Basic Configurations of NTP Client.....	219
12	System Maintenance	221
12.1	Upgrading Cards in a Batch Manner	221
12.2	Upgrading an ONU Automatically.....	222
12.3	Importing and Exporting Configuration Data	226
13	Appendix	227
13.1	Port Types.....	227
13.2	Card Type Codes.....	228
13.2.1	Card Types Supported by the AN6000-17.....	228
13.2.2	Card Types Supported by the AN6000-7	232
13.2.3	Card Types for the AN6000-15	235
13.2.4	Card Types Supported by the AN6000-2	239
13.2.5	Card Types Supported by the AN6001-G16	242
13.3	ONU Types	243
13.4	Logical Uplink Ports of the Equipment.....	248

13.5	Logical Trunk Numbers of the Equipment	249
-------------	--	-----

1 General Instructions

This chapter describes compound indexes of IfIndex and common objects, and instructions on specifying indexes for creating objects for the optical line terminal equipment.

1.1 Compound Indexes of IfIndex

Local Objects

Bit Range	Length (Bit)	Definition	Value Range	Remark
32	1	Sign bit	0	-
31-29	3	Index type	000 (local object)	Seven index types are available. Different index types can use same definitions for bits 1 to 28 as described below, or use varied definitions as needed.
28-24	5	Object type	00000 (uplink port) 00001 (PON port)	-
23-18	6	Slot number (slot)	1-63	-
17-10	8	PON port number	1-255	-
9-1	9	Reserved	-	-

Port index formula: $(\text{IndexType}) \times 268435456 + (\text{ObjectType}) \times 8388608 + (\text{slot}) \times 131072 + (\text{port}) \times 512$

1.2 Compound Indexes of Common Objects

Rules for Signed Indexes (Index Formula for Common Objects)

Bit Range	Length (Bit)	Definition	Value Range	Remark
32	1	Sign bit	0	-
31-26	6	Slot number (slot)	1-63	-
25-20	6	PON port number (PON)	1-63	-

Bit Range	Length (Bit)	Definition	Value Range	Remark
19-9	11	ONU number (ONU)	1-2047	-
8-1	8	Port number (port)	1-255	-

An object subordinate to a port is expressed by a secondary index.

Formula for signed indexes: $(\text{slot}) \times 2^{25} + (\text{PON}) \times 2^{19} + (\text{ONU}) \times 2^8 + \text{port}$

Index Type	Formula	Example	Calculation
Compound index of an OLT's PON port	$\text{objectIndex} = \text{SLOT} \times 33554432 + \text{PON} \times 524288$	PON 11/1	$\text{objectIndex} = 11 \times 33554432 + 1 \times 524288 = 3696230406$
Compound index of an ONU	$\text{objectIndex} = \text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256$	ONU 11/1/2	$\text{objectIndex} = 11 \times 33554432 + 1 \times 524288 + 2 \times 256 = 369623552$
Compound index of an ONU's port	$\text{objectIndex} = \text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256 + \text{PORT}$	ONU 11/1/2 LAN 3	$\text{objectIndex} = 11 \times 33554432 + 1 \times 524288 + 2 \times 256 + 3 = 369623555$

Reversely parsing the compound index of a common object:

```

SLOT = (ifIndex >> 25) & 0x3f
PON/UPLINK = (ifIndex >> 19) & 0x3f
ONU = (ifIndex >> 8) & 0x7ff
PORT = (ifIndex) & 0xff
For example:
ifIndex = 68683520
SLOT = (68683520 >> 25) & 0x3f = 2
PON = (68683520 >> 19) & 0x3f = 3
ONU = (68683520 >> 8) & 0x7ff = 7
PORT = (68683520) & 0xff = 0

```

1.3 Instructions on Specifying Indexes for Creating Objects

It is advised to access the leaf node **Get free index** via the network management system (NMS) for creating an object such as a profile or a VLAN. The equipment will return an available index for the new object, which the NMS will use to create the object. When several NMSs create objects at the same time, they are likely to use the same index for creating different objects since the indexes available to them are same. In this case, object creation will fail, and the NMSs need to refresh the indexes and try creating the objects again.

An NMS managing object indexes can directly deliver an index to the object being created.

2 Basic OLT Information

This chapter introduces OIDs and related information of the nodes under the basic OLT information module.

2.1 Device Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.2.1.1.1	sysDescr	OCTET STRING	Read-only	System description	Device name; maximum length: 64 bytes
1.3.6.1.2.1.1.2	sysObjectID	Object Identifier	Read-only	ObjectID	AN6000-17: 1.3.6.1.4.1.5875.- 800.1001.15 AN6001-G16: 1.3.6.1.4.1.5875.- 800.1001.16 AN6000-VS: 1.3.6.1.4.1.5875.- 800.1001.19 AN6000-7: 1.3.6.1.4.1.5875.- 800.1001.22 AN6000-15: 1.3.6.1.4.1.5875.- 800.1001.23 AN6000-2: 1.3.6.1.4.1.5875.- 800.1001.24
1.3.6.1.2.1.1.3	sysUpTime	Timeticks	Read-only	System running time	Unit: centisecond
1.3.6.1.2.1.1.5	sysName	OCTET STRING	Read-write	System Name	Device alias; maximum length: 64 bytes
1.3.6.1.2.1.1.6	sysLocation	OCTET STRING	Read-write	System location	Maximum length: 100 bytes
1.3.6.1.4.1.5875.800.3- .9.4.1	sysIp	IP Address	Read-only	System IP address	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3-.9.4.20	sysGateway	IP Address	Read-only	System gateway address	-
1.3.6.1.4.1.5875.800.3-.9.4.2	sysMac	String	Read-only	MAC address	-
1.3.6.1.4.1.5875.800.3-.9.4.3	sysSoftVersion	String	Read-only	Software version	-
1.3.6.1.4.1.5875.800.3-.9.4.4	sysHardVersion	String	Read-only	Hardware version	-
1.3.6.1.4.1.5875.800.3-.9.4.5	sysTemperature	Int	Read-only	Device temperature	-
1.3.6.1.4.1.5875.800.3-.9.4.6	sysAuthOnuNum	Int	Read-only	Quantity of authorized ONUs in the system	-
1.3.6.1.4.1.5875.800.3-.9.4.23	fhOltSysMacUsage	Int	Read-only	OLT's MAC address usage	Unit: 0.01%
1.3.6.1.4.1.5875.800.3-.9.4.22	fhOltSysTime	DateAndTime	Read-write	System time	Maximum length: eight bytes. Time zone is not supported currently.
1.3.6.1.4.1.5875.800.3-.9.4.24	fhOltSysRatedPower	Integer32	Read-only	Rated overall power consumption	Unit: W
1.3.6.1.4.1.5875.800.3-.9.4.25	fhOltSysEquipmentPower	Integer32	Read-only	Overall power consumption	Unit: 0.01 W

2.2 Subrack Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.9.1.1.1.1	frameIndex	Int	Read-only	Subrack index	Fixed at 1
1.3.6.1.4.1.5875.800.-3.9.1.1.1.2	frameType	Int	Read-only	Subrack type	15: AN6000-17 16: AN6001-G16 17: AN6000-7 18: AN6000-15

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.9.1.1.1.3	frameName	OCTET STRING	Read-only	Subrack name	-
1.3.6.1.4.1.5875.800.-3.9.1.1.1.4	slotNumOf-Frame	Int	Read-only	Total number of slots	-

2.3 Slot Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.9.5.1.1.1	slotInfoIndex	Int	Read-only	Slot number (index)	Index
1.3.6.1.4.1.5875.8-00.3.9.5.1.1.2	occupiedStatus	Int	Read-only	Card status	1: present 0: absent
1.3.6.1.4.1.5875.8-00.3.9.5.1.1.3	authCardType	Int	Read-only	Authorized card type	Refer to Card Type Codes .
1.3.6.1.4.1.5875.8-00.3.9.5.1.1.4	occupiedCardType	Int	Read-only	Actual card type	Refer to Card Type Codes . 0: line card not detected
1.3.6.1.4.1.5875.8-00.3.9.5.1.1.13	fhOltCardPower	Integer32	Read-only	Power consumption	Unit: 0.01 W (only present cards counted)
1.3.6.1.4.1.5875.8-00.3.9.5.1.1.14	fhOltCardWork-Status	Integer32	Read-only	Card working status	(Only present cards counted). Valid values include 0: N/A 1: normal communication 2: communication error

2.4 Service Card Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.1-01.1.1.1	slotIndex	Int	Read-only	Index of the slot housing the card	-
1.3.6.1.4.1.5875.800.3.9-2.1.1.2	cardType	Int	Read-only	Card type	Refer to Card Type Codes .
1.3.6.1.4.1.5875.800.3.9-2.1.1.5	cardStatus	Int	Read-only	Card communication status	1: normal 0: communication interrupted
1.3.6.1.4.1.5875.800.3.9-2.1.1.6	cardNumOfPorts	Int	Read-only	Number of ports on the card	-
1.3.6.1.4.1.5875.800.3.9-2.1.1.7	cardAvailable-Ports	Int	Read-only	Number of active ports on the card	-
1.3.6.1.4.1.5875.800.3.9-2.1.1.3	cardHardware-Version	OCTET STRING	Read-only	Hardware version	-
1.3.6.1.4.1.5875.800.3.9-2.1.1.4	cardSoftwareVersion	OCTET STRING	Read-only	Software version	-
1.3.6.1.4.1.5875.800.3.9-2.1.1.8	cardCpuUtil	Int	Read-only	CPU usage	Returned value divided by 100
1.3.6.1.4.1.5875.800.3.9-2.1.1.9	cardMemUtil	Int	Read-only	Memory usage	Returned value divided by 100
1.3.6.1.4.1.5875.800.3.9-2.1.1.10	cardTemperature	Int	Read-only	Temperature	Returned value divided by 100 (only applicable to maple line cards) Unit: °C

2.5 Core Switch Card Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.101.7.1.1	mgrCardSlotNo	Int	Not-accessible	Slot housing the core switch card	-
1.3.6.1.4.1.5875.8-00.3.9.8.1.1.1	mgrCardType	Int	Read-only	Card type	Refer to Card Type Codes .

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.9.8.1.1.4	mgrCardWorkStatus	Int	Read-only	Card communication status	1: normal 0: communication interrupted
1.3.6.1.4.1.5875.8-00.3.9.8.1.1.2	mgrCardHardwareVersion	OCTET STRING	Read-only	Hardware version	-
1.3.6.1.4.1.5875.8-00.3.9.8.1.1.3	mgrCardSoftwareVersion	OCTET STRING	Read-only	Software version	-
1.3.6.1.4.1.5875.8-00.3.9.8.1.1.5	mgrCardCpuUtil	Int	Read-only	CPU usage	Returned value divided by 100
1.3.6.1.4.1.5875.8-00.3.9.8.1.1.6	mgrCardMemUtil	Int	Read-only	Memory usage	Returned value divided by 100

2.6 Uplink Port Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5-875.800.3.1-01.3.1.1	uplinkIndex	Int	Read-only	Uplink port number (index)	Refer to Compound Indexes of Common Objects . $\text{objectIndex} = \text{SLOT} \times 33554432 + \text{Port} \times 524288$
1.3.6.1.4.1.5-875.800.3.9-3.5.1.2	uplinkName	OCTET STRING	Read-only	Port name	-
1.3.6.1.4.1.5-875.800.3.9-3.5.1.3	uplinkDesc	OCTET STRING	Read-write	Port description	1 to 80 bytes
1.3.6.1.4.1.5-875.800.3.9-3.5.1.1	uplinkType	Int	Read-only	Port type	6: ethernetCsmacd For all Ethernet-like interfaces, regardless of speed, as per RFC 3635
1.3.6.1.4.1.5-875.800.3.9-3.5.1.4	uplinkEnable-Status	Int	Read-only	Port enable/disable status	1: enable 0: disable
1.3.6.1.4.1.5-875.800.3.9-3.5.1.5	uplinkSpeed	Int	Read-only	Port rate	0: 10 Mbps 1: 100 Mbps 2: 1000 Mbps 3: 10000 Mbps 4: 100000 Mbps

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5-875.800.3.9.-3.5.1.7	oltUplinkTxOpticalPower	Int	Read-only	Tx optical power	Returned value divided by 100 (unit: dBm)
1.3.6.1.4.1.5-875.800.3.9.-3.5.1.8	oltUplinkRxOpticalPower	Int	Read-only	Rx optical power	Returned value divided by 100 (unit: dBm)
1.3.6.1.4.1.5-875.800.3.9.-3.5.1.9	oltUplinkOpticalTemperature	Int	Read-only	Temperature	Returned value divided by 100 (unit: °C)
1.3.6.1.4.1.5-875.800.3.9.-3.5.1.10	oltUplinkOpticalVltage	Int	Read-only	Power supply voltage	Returned value divided by 100 (unit: V)
1.3.6.1.4.1.5-875.800.3.9.-3.5.1.11	oltUplinkOpticalCurrent	Int	Read-only	Bias current	Returned value divided by 100 (unit: mA)
1.3.6.1.4.1.5-875.800.3.9.-3.5.1.12	oltUplinkOpticalModuleType	Int	Read-only	Optical module type	List of optical module types

OID	Node Name	Data Type	Access Authority	Meaning	Specifications	
					1: unknown 2: classbplus 3: classeplus 4: classb 5: px20 6: px20plus 7: pr30 8: pr20 9: prx30 10: prx20 11: invalid 12: absent 13: classeplusplus 14: sfp 15: sfpplus 16: xfp 17: sfp/sfpplus 18: n1 19: n2a 20: n2b 21: e1 22: e2a 23: e2b 24: prx40 25: pr40	26: 1000BASE-SX 27: 1000BASE-LX 28: 1000BASE-EX 29: 1000BASE-ZX1 30: 1000BASE-ZX2 31: 10GBASE-SR/SW 32: 10GBASE-LR/LW 33: 10GBASE-ER/ EW 34: 10GBASE-ZR/ ZW 35: Class B+/Class C+ 36: N1/N2a/E1/E2a 37: N2b/E2b 38: N1/N2/E1 39: D1 40: D2 41: D1+ 42: N2a/C+ 43: N2 44: 100GBASE-LR4 45: 100GBASE-ER4 46: 100GBASE-SR4 47: Class D
1.3.6.1.4.1.5-875.800.3.9.-3.5.1.13	oltUplinkVendorName	OCTET STRING	Read-only	Vendor name	16 bytes	
1.3.6.1.4.1.5-875.800.3.9.-3.5.1.14	oltUplinkVendorPn	OCTET STRING	Read-only	Vendor's product number	16 bytes	
1.3.6.1.4.1.5-875.800.3.9.-3.5.1.15	oltUplinkVendorSn	OCTET STRING	Read-only	Vendor's serial number	16 bytes	
1.3.6.1.4.1.5-875.800.3.9.-3.5.1.16	oltUplink-DownwardAssociationSn	OCTET STRING	Read-only	Downward association SN	16 bytes	

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5-875.800.3.9.-3.5.1.17	oltUplinkInfoOpticalModuleTransmissionDistance	Integer32	Read-only	Transmission distance of the optical module	Range: 0-65535 Unit: km
1.3.6.1.4.1.5-875.800.3.9.-3.5.1.18	uplinkPortMibTxWavelength	Integer32	Read-only	Tx wavelength	TX wavelength (unit: nm)
1.3.6.1.4.1.5-875.800.3.9.-3.5.1.19	uplinkPortMibRxWavelength	Integer32	Read-only	Rx wavelength	RX wavelength (unit: nm)

2.7 PON Port Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5-875.800.3.10-1.6.1.1	ponIndex	Int	Read-only	PON port index	Refer to Compound Indexes of Common Objects . $\text{objectIndex} = \text{SLOT} \times 33554432 + \text{PON} \times 524288$
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.2	oltPonName	OCTET STRING	Read-only	Port name	-
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.3	oltPonDesc	OCTET STRING	Read-write	Port description	1 to 80 bytes
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.1	oltPonType	Int	Read-only	Port type	1: PON 250: GPON
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.4	oltPonEnableStatus	Int	Read-only	Port enable/disable status	1: enable 0: disable
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.5	oltPonOnlineStatus	Int	Read-only	Port online/offline status	1: online. The port is connected to an authorized ONU, and the ONU is online. 0: offline
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.6	oltPonSpeed	Int	Read-only	Port downstream rate	Unit: Mbit/s

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.12	oltPonAuthOnuNum	Int	Read-only	Number of authorized ONUs connected to the PON port	-
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.13	oltPonUpStreamSpeed	Int	Read-only	Port upstream rate	Unit: Mbit/s
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.15	oltPonOpticalModuleType	Int	Read-only	Optical module type	List of optical module types
					1: unknown 2: classbplus 3: classcplus 4: classb 5: px20 6: px20plus 7: pr30 8: pr20 9: prx30 10: prx20 11: invalid 12: absent 13: classcplusplus 14: sfp 15: sfpplus 16: xfp 17: sfp/sfpplus 18: n1 19: n2a 20: n2b 21: e1 22: e2a 23: e2b 24: prx40 25: pr40 26: 1000BASE-SX 27: 1000BASE-LX 28: 1000BASE-EX 29: 1000BASE-ZX1 30: 1000BASE-ZX2 31: 10GBASE-SR/SW 32: 10GBASE-LR/LW 33: 10GBASE-ER/EW 34: 10GBASE-ZR/ZW 35: Class B+/Class C+ 36: N1/N2a/E1/E2a 37: N2b/E2b 38: N1/N2/E1 39: D1 40: D2 41: D1+ 42: N2a/C+ 43: N2 44: 100GBASE-LR4 45: 100GBASE-ER4 46: 100GBASE-SR4 47: Class D
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.16	oltPonVendorName	OCTET STRING	Read-only	Vendor name	16 bytes
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.17	oltPonVendorPn	OCTET STRING	Read-only	Vendor's product number	16 bytes

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.18	oltPonVendorSn	OCTET STRING	Read-only	Vendor's serial number	16 bytes
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.19	oltPonDownwardAssociationSn	OCTET STRING	Read-only	Downward association SN	16 bytes
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.22	fhOltPonInfoOnlineOnuNum	Int	Read-only	Number of online ONUs	-
1.3.6.1.4.1.5-875.800.3.9.-3.4.1.23	fhOltPonInfoOfflineOnuNum	Int	Read-only	Number of offline ONUs	-

2.8 Optical Power Measurement on PON Ports

This section introduces OIDs and related information of the nodes under the module of optical power measurement on PON ports.

2.8.1 Optical Power Measurement on PON Ports (Batch Operation)



Note:

This function is applicable to scenarios requiring batch measurement of optical power.

Enable traffic measurement before implementing the batch measurement:

```
Admin(config)# mib stats enable
Admin(config)# show mib stats switch
```

Optical Power Measurement on PON Ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-101.6.1.1	ponIndex	Int	Read-only	PON port index	Refer to Compound Indexes of Common Objects . objectIndex = SLOT × 33554432 + PON × 524288
1.3.6.1.4.1.5875.800.3.-9.3.4.1.8	oltPonTxOptical-Power	Int	Read-only	Tx optical power of the OLT	Returned value divided by 100 (unit: dBm)
1.3.6.1.4.1.5875.800.3.-9.3.4.1.11	oltPonOpticalTemperature	Int	Read-only	Temperature	Returned value divided by 100 (unit: °C)
1.3.6.1.4.1.5875.800.3.-9.3.4.1.9	oltPonOpticalVltage	Int	Read-only	Power supply voltage	Returned value divided by 100 (unit: V)
1.3.6.1.4.1.5875.800.3.-9.3.4.1.10	oltPonOpticalCurrent	Int	Read-only	Bias current	Returned value divided by 100 (unit: mA)
1.3.6.1.4.1.5875.800.3.-9.3.4.1.20	oltPonXgOpticalCurrent	Int	Read-only	10G bias current	Returned value divided by 100 (unit: mA)
1.3.6.1.4.1.5875.800.3.-9.3.4.1.21	oltPonXgTxOptical-Power	Int	Read-only	Tx optical power of a 10G OLT	Returned value divided by 100 (unit: dBm)

Switch for Optical Power Measurement on PON Ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-101.8.1.1	oltPonOpticalStatisticsSlotNo	Int	Not-accessible	Slot number (index)	-
1.3.6.1.4.1.5875.800.3.-9.3.6.1.1	oltPonOpticalStatisticsSwitch	Int	Read-write	Switch for optical power measurement	1: enable

Rx Optical Power of PON Ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-101.9.1.1	oltPonRxOpticalPowerPonIndex	Int	Not-accessible	PON port index	-
1.3.6.1.4.1.5875.800.3.-101.9.1.2	oltPonRxOpticalPowerOnuIndex	Int	Not-accessible	ONU number (index)	-
1.3.6.1.4.1.5875.800.3.-9.3.7.1.2	oltPonRxOpticalPower	Int	Read-only	Rx optical power on the OLT's PON port	Returned value divided by 100 (unit: dBm)

2.8.2 Real-time Optical Power Measurement on PON Ports



Note:

This function disallows batch operation or successive operations for several objects. That is, only independent operation for a single object is allowed. Besides that, only the snmpget operation is supported.

Real-time Optical Power Measurement on PON Ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-9.3.8.1.1	oltPonInfoRealtimePonIndex	Int	Read-only	PON port index	Refer to Compound Indexes of Common Objects . objectIndex = SLOT × 33554432 + PON × 524288
1.3.6.1.4.1.5875.800.3.-9.3.8.1.2	oltPonTxOpticalPowerRealtime	Int	Read-only	Tx optical power of the OLT	Returned value divided by 100 (unit: dBm)
1.3.6.1.4.1.5875.800.3.-9.3.8.1.3	oltPonOpticalTemperatureRealtime	Int	Read-only	Temperature	Returned value divided by 100 (unit: °C)
1.3.6.1.4.1.5875.800.3.-9.3.8.1.4	oltPonOpticalVltageRealtime	Int	Read-only	Power supply voltage	Returned value divided by 100 (unit: V)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-9.3.8.1.5	oltPonOpticalCurrentRealtime	Int	Read-only	Bias current	Returned value divided by 100 (unit: mA)
1.3.6.1.4.1.5875.800.3.-9.3.8.1.6	oltPonXgOpticalCurrentRealtime	Int	Read-only	10G bias current	Returned value divided by 100 (unit: mA)
1.3.6.1.4.1.5875.800.3.-9.3.8.1.7	oltPonXgTxOpticalPowerRealtime	Int	Read-only	Tx optical power of a 10G OLT	Returned value divided by 100 (unit: dBm)

Real-time Rx Optical Power Measurement on PON Ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-101.10.1.1	oltPonRxOpticalPowerRealtimePonIndex	Int	Not-accessible	PON port index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.-101.10.1.2	oltPonRxOpticalPowerRealtimeOnuIndex	Int	Not-accessible	ONU number (index)	1-128
1.3.6.1.4.1.5875.800.3.-9.3.9.1.2	oltPonRxOpticalPowerRealtime	Int	Read-only	Rx optical power on the OLT's PON port	Returned value divided by 100 (unit: dBm)

2.9 Distance Between an ONU and a PON Port

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-101.11.1.1	onuOnlineIndex	Int	Not-accessible	ONU index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.-9.6.1.1.1	length	Int	Read-only	Distance	The distance can be displayed only when the ONU is online; otherwise, 0 will be returned.

2.10 Power Status Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-60.1.1.1	powerIndex	Int	Read-only	Power interface	Index
1.3.6.1.4.1.5875.800.3.-60.1.1.2	powerAlarmStatus	Int	Read-only	Power status	1: normal 3: power failure

2.11 Fan Status Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-101.12.1.1	fanSlotIndex	Int	Not-accessible	Fan slot	Index
1.3.6.1.4.1.5875.800.3.-60.2.1.1	fanAlarmStatus	Int	Read-only	Fan status	1: The fan is functioning properly. 2: The fan stops running.

2.12 Viewing Loopback Information Based on Slots

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.9-10.1.1.1	loopbackInfoBasedOn-SlotIndex	Int	Read-only	Number (index)	Index, natural number
1.3.6.1.4.1.5875.800.3.9-10.1.1.2	loopbackInfoBasedOn-SlotSlotNo	Int	Read-only	Slot number	Slot number
1.3.6.1.4.1.5875.800.3.9-10.1.1.3	loopbackInfoBasedOn-SlotPortNo	Int	Read-only	Port number	Port number
1.3.6.1.4.1.5875.800.3.9-10.1.1.4	loopbackInfoBasedOn-SlotMac	String	Read-only	MAC address information	-
1.3.6.1.4.1.5875.800.3.9-10.1.1.5	loopbackInfoBasedOn-SlotVlanID	Int	Read-only	VLAN ID	-
1.3.6.1.4.1.5875.800.3.9-10.1.1.6	loopbackInfoBasedOn-SlotTime	String	Read-only	Time	-

2.13 Virtual System Heartbeat Table (Real-time)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.9.13.4.1.1	virtualSystemHeartBeatIndex	Int	Read-only	Index of the virtual system	Index: 0-7 The value 0 denotes an entity, and the values 1 to 7 denote slices.
1.3.6.1.4.1.5875.800.3.9.13.4.1.2	virtualSystemHeartBeatStatus	Int	Read-only	Status of the virtual system	0: offline 1: online

2.14 OLT MAC Address Table

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.9.14.2.1.1	fhOltMacAddrIfQueryIfType	Integer32	Read-only	Interface type index	0: physical port 1: Trunk group
1.3.6.1.4.1.5875.800.3.9.14.2.1.2	fhOltMacAddrIfQuerySlotId	Integer32	Read-only	Slot number (index)	For a physical port, this field denotes the physical slot number. For a Trunk group, this field denotes the Trunk group ID.
1.3.6.1.4.1.5875.800.3.9.14.2.1.3	fhOltMacAddrIfQueryPortId	Integer32	Read-only	Port number (index)	For a Trunk group or a port on the switch chip of a core switch card, this field takes the value 0.
1.3.6.1.4.1.5875.800.3.9.14.2.1.4	fhOltMacAddrIfQueryPageId	Integer32	Read-only	Page number (index)	Natural number
1.3.6.1.4.1.5875.800.3.9.14.2.1.5	fhOltMacAddrIfQueryMacList	OCTET STRING	Read-only	MAC address string	Every eight bytes stand for a MAC address unit (6 bytes for MAC address and 2 bytes for VLAN ID)
1.3.6.1.4.1.5875.800.3.9.14.1.1	fhOltMacAddrSysMacNumber	Integer32	Read-only	Number of MAC addresses	Scalar node

2.15 Querying OLTs by Count of VLAN MAC Addresses

**Note:**

The "get" operation is supported but "walk" is not.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.9.14.3.1.1.1	fhOltMacAddrQueryCountByVlanIdx	Integer32	Read-only	Index, VLAN ID	-
1.3.6.1.4.1.5875.-800.3.9.14.3.1.1.2	fhOltMacAddrQueryCountByVlanCount	Integer32	Read-only	Number of MAC addresses	-

2.16 Querying MAC Address Tables by VLAN

You can read the MAC address table of an upstream port, a trunk group or a port on the switch chip of a core switch card.

**Note:**

- ◆ The "snmpwalk" operation can refresh cache based on a specified VLAN ID.
- ◆ The "snmpget" operation can only obtain last cached data.
- ◆ The "getbulk" and "bulkwalk" operations will return errors due to excessive data volume, and hence are not supported here.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.587-5.800.3.9.14.4.-1.1	fhOltMacAddrVlanQueryVid	Integer32	Read-only	VLAN ID (index)	VLANs whose MAC addresses are not learned are excluded.
1.3.6.1.4.1.587-5.800.3.9.14.4.-1.2	fhOltMacAddrVlanQueryPageId	Integer32	Read-only	Page number (index)	Natural sequence number starting from 1
1.3.6.1.4.1.587-5.800.3.9.14.4.-1.6	fhOltMacAddrVlanQueryMacList	OCTET STRING	Read-only	MAC address collection	Every 10 bytes represent one MAC address (6 bytes for a MAC address + 1 reserved byte + 1 byte for interface type + 1 byte for slot number + 1 byte for port number).
					Interface type: ◆ 0: physical port ◆ 1: Trunk group
					Slot number: ◆ For a physical port, this field denotes the physical slot number. ◆ For a Trunk group, this field denotes the Trunk group ID.
					Port number: For a Trunk group or a port on the switch chip of a core switch card, this field takes the value 0.

3 Basic ONU Information

This chapter introduces OIDs and related information of the nodes under the basic ONU information module.

3.1 ONU Information

ONU Information (1)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.101.2.1.1	onuIndex	Int	Read-only	ONU index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.8-00.3.10.1.1.2	authOnuListSlot	Int	Read-only	Slot number	-
1.3.6.1.4.1.5875.8-00.3.10.1.1.3	authOnuListPon	Int	Read-only	PON No.	-
1.3.6.1.4.1.5875.8-00.3.10.1.1.4	authOnuListOnuid	Int	Read-only	ONU No.	-
1.3.6.1.4.1.5875.8-00.3.10.1.1.11	onuStatus	Int	Read-only	ONU status	0: ONU fiber break 1: online 2: power failure 3: offline 4: fiber break on an OLT's PON port 6: fiber break on a secondary PON port
1.3.6.1.4.1.5875.8-00.3.10.1.1.5	authOnuListOnu-Type	Int	Read-only	ONU type	Refer to ONU Types .
1.3.6.1.4.1.5875.8-00.3.10.1.1.7	authOnuListName	String	Read-write	System name	1 to 128 bytes
1.3.6.1.4.1.5875.8-00.3.10.1.1.10	authOnuListMac	String	Read-only	MAC address of the ONU	Readable hexadecimal string with 12 characters
1.3.6.1.4.1.5875.8-00.3.10.1.1.8	authOnuListSn-Loid	String	Read-only	Logical authentication identifier (LOID) of the ONU	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.10.1.1.9	authOnuListSnPwd	String	Read-only	LOID password of the ONU	-
1.3.6.1.4.1.5875.8-00.3.10.1.1.12	authOnuSoftware-Version	String	Read-only	ONU software version	CPU software version, inapplicable to ONUs without a CPU and HG devices
1.3.6.1.4.1.5875.8-00.3.10.1.1.13	authOnuHardware-Version	String	Read-only	ONU hardware version	-
1.3.6.1.4.1.5875.8-00.3.10.1.1.14	authOnuFirmware-Version	String	Read-only	ONU firmware version	-
1.3.6.1.4.1.5875.8-00.3.10.1.1.15	authOnuListOnuReboot	Int	Read-write	ONU remote reboot	Control command 1: reboot 0: normal (for query only)
1.3.6.1.4.1.5875.8-00.3.10.1.1.16	authOnuCpuUsage	Int	Read-only	CPU usage	Returned value divided by 100
1.3.6.1.4.1.5875.8-00.3.10.1.1.17	authOnuMemoryUsage	Int	Read-only	Memory usage	Returned value divided by 100
1.3.6.1.4.1.5875.8-00.3.10.1.1.18	authOnuWebSwitch	Int	Read-write	ONU configuration switch	0: disable 1: enable Default value: 0 When it is set to enabled, the ONU will neglect the global configuration of its local management interface. When it is set to disabled, the ONU will take the global configuration of its local management interface.
1.3.6.1.4.1.5875.8-00.3.10.1.1.19	authOnuWebPort	Int	Read-write	Web port	Value range: 80, 1024-65535 (Global configuration of the ONU's local management interface)
1.3.6.1.4.1.5875.8-00.3.10.1.1.20	authOnuWebAdmin	String	Read-write	Username of the Web administrator	16 bytes

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.10.1.1.21	authOnuWebAdminPassword	String	Read-write	Password of the Web administrator	32 bytes
1.3.6.1.4.1.5875.8-00.3.10.1.1.22	authOnuOpticalSwitch	Int	Read-write	ONU optical module switch	Control command 1: disable 0: enable (shutdown)
1.3.6.1.4.1.5875.8-00.3.10.1.1.23	authOnuWebServerSwitch	Int	Read-write	Web network-side switch	1: enable 0: disable Default value: 0 (Global configuration of the ONU's local management interface)
1.3.6.1.4.1.5875.8-00.3.10.1.1.24	authOnuTelnetServerSwitch	Int	Read-write	Telnet network-side switch	0: disable 1: enable Default value: 0 (Global configuration of the ONU's local management interface)
1.3.6.1.4.1.5875.8-00.3.10.1.1.25	authOnuWebUNISwitch	Int	Read-write	Web user-side switch	0: disable 1: enable Default value: 1 (Global configuration of the ONU's local management interface)
1.3.6.1.4.1.5875.8-00.3.10.1.1.26	authOnuTelnetUNISwitch	Int	Read-write	Telnet user-side switch	0: disable 1: enable (Global configuration of the ONU's local management interface)
1.3.6.1.4.1.5875.8-00.3.10.1.1.27	authOnuConsoleSwitch	Int	Read-write	ONU serial port switch	0: disable 1: enable Default value: 1 (Global configuration of the ONU's local management interface)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.10.1.1.28	authOnuMacNumberLimit	Int	Read-write	Limit on the number of MAC addresses	Number of MAC addresses for ONUs' PON ports: 0-16000. The value 0 denotes no limit. Notes: This configuration should be used with the node 1.3.6.1.4.1.5875.800.3-10.1.1.29 to take effect.
1.3.6.1.4.1.5875.8-00.3.10.1.1.29	authOnuMacNumberLimitApply	Int	Read-write	Whether to apply authOnuMacNumberLimit	Applies to the entire ONU 1: apply
1.3.6.1.4.1.5875.8-00.3.10.1.1.30	authOnuLastUp	String	Read-only	ONU LASTUP	-
1.3.6.1.4.1.5875.8-00.3.10.1.1.31	authOnuLastDown	String	Read-only	ONU LASTDOWN	-
1.3.6.1.4.1.5875.8-00.3.10.1.1.32	authOnuRegKey	String	Read-only	ONU REGKEY	-
1.3.6.1.4.1.5875.8-00.3.10.1.1.35	authOnuRegKeyPassword	String	Read-only	ONU REGKEYPW	-
1.3.6.1.4.1.5875.8-00.3.10.1.1.33	authOnuRegType	Int	Read-only	ONU REGTYPE	1: physical ID 2: logical ID 4: password
1.3.6.1.4.1.5875.8-00.3.10.1.1.34	authOnuPassword	String	Read-only	Password	-
1.3.6.1.4.1.5875.8-00.3.10.1.1.36	authOnuVendorId	String	Read-only	Vendor ID	4 bytes
1.3.6.1.4.1.5875.8-00.3.10.1.1.37	authOnuRealType	String	Read-only	Device model	0 to 20 bytes
1.3.6.1.4.1.5875.8-00.3.10.1.1.50	authOnuPortIsolation	Int	Read-write	Port isolation	0: Disable 1: Enable
1.3.6.1.4.1.5875.8-00.3.10.1.1.100	fhOltAuthOnuInfoDeauth	Int	Read-write	Deauthorization	1: deauthorize

ONU Capability Set Profile Information (1)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.10.1.1.38	fhOltAuthOnuInfoIsCSPProfileType	Read-only	Integer32	Whether it is a capability set profile	0: No 1: Yes
1.3.6.1.4.1.5875.8-00.3.10.1.1.39	fhOltAuthOnuInfoTypeName	Read-only	OCTET STRING	ONU type name. Both profile type and non-profile type are supported.	-

ONU Information (Compound Indexes)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.10.3.1.1	fhOnuInfoPonIndex	Integer32	Read-only	PON port index	SLOT × 33554432 + PON × 524288
1.3.6.1.4.1.5875.8-00.3.10.3.1.2	fhOnuInfoOnuIndex	Integer32	Read-only	ONU number (index)	-
1.3.6.1.4.1.5875.8-00.3.10.3.1.11	fhOnuInfoStatus	Integer32	Read-only	ONU status	0: ONU fiber break 1: online 2: power failure 3: offline 4: fiber break on an OLT's PON port
1.3.6.1.4.1.5875.8-00.3.10.3.1.51	fhOnuInfoEnable	Integer32	Read-write	ONU enable status	0: disable 1: enable

ONU Information (2)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.81.1.1.2	onuBasicInformationSlot	Integer32	Read-only	Slot number	Index
1.3.6.1.4.1.5875.8-00.3.81.1.1.3	onuBasicInformationPon	Integer32	Read-only	PON port number	Index
1.3.6.1.4.1.5875.8-00.3.81.1.1.4	onuBasicInformationOnuid	Integer32	Read-only	ONU number	Index
1.3.6.1.4.1.5875.8-00.3.81.1.1.5	onuBasicInformationOnuType	Integer32	Read-only	ONU type	Refer to ONU Types .

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.81.1.1.7	onuBasicInformationName	OCTET STRING	Read-write	System name	1 to 128 bytes
1.3.6.1.4.1.5875.8-00.3.81.1.1.10	onuBasicInformationMac	Octet String	Read-only	MAC address of the ONU	Readable hexadecimal string with 12 characters
1.3.6.1.4.1.5875.8-00.3.81.1.1.11	onuBasicInformationStatus	Integer32	Read-only	ONU status	0: ONU fiber break 1: online 2: power failure 3: offline 4: fiber break on an OLT's PON port 6: fiber break on a secondary PON port
1.3.6.1.4.1.5875.8-00.3.81.1.1.12	onuBasicInformationSoftwareVersion	OCTET STRING	Read-only	ONU software version	CPU software version, inapplicable to ONUs without a CPU and HG devices Maximum length: 20 bytes
1.3.6.1.4.1.5875.8-00.3.81.1.1.13	onuBasicInformationHardwareVersion	OCTET STRING	Read-only	ONU hardware version	Maximum length: 20 bytes
1.3.6.1.4.1.5875.8-00.3.81.1.1.14	onuBasicInformationFirmwareVersion	OCTET STRING	Read-only	ONU firmware version	Maximum length: 20 bytes
1.3.6.1.4.1.5875.8-00.3.81.1.1.36	onuBasicInformationOnuVendorId	OCTET STRING	Read-only	Vendor ID	4 bytes
1.3.6.1.4.1.5875.8-00.3.81.1.1.37	onuBasicInformationRealType	OCTET STRING	Read-only	Device model	0 to 20 bytes
1.3.6.1.4.1.5875.8-00.3.81.1.1.16	onuBasicInformationCpuUsage	Integer32	Read-only	CPU usage	Returned value divided by 100
1.3.6.1.4.1.5875.8-00.3.81.1.1.17	onuBasicInformationMemoryUsage	Integer32	Read-only	Memory usage	Returned value divided by 100
1.3.6.1.4.1.5875.8-00.3.81.1.1.8	onuBasicInformationSnLoid	OCTET STRING	Read-only	Logical authentication identifier (LOID) of the ONU	Maximum length: 24 bytes
1.3.6.1.4.1.5875.8-00.3.81.1.1.9	onuBasicInformationSnPwd	OCTET STRING	Read-only	LOID password of the ONU	Maximum length: 12 bytes

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.81.1.1.30	onuBasicInformationLastUp	OCTET STRING	Read-only	ONU LASTUP	Maximum length: 20 bytes
1.3.6.1.4.1.5875.8-00.3.81.1.1.31	onuBasicInformationLastDown	OCTET STRING	Read-only	ONU LASTDOWN	Maximum length: 20 bytes
1.3.6.1.4.1.5875.8-00.3.81.1.1.32	onuBasicInformationRegKey	OCTET STRING	Read-only	ONU REGKEY	Maximum length: 36 bytes
1.3.6.1.4.1.5875.8-00.3.81.1.1.33	onuBasicInformationRegType	Integer32	Read-only	ONU REGTYPE	1: physical ID 2: logical ID 4: password
1.3.6.1.4.1.5875.8-00.3.81.1.1.34	onuBasicInformationPassword	OCTET STRING	Read-only	Physical password	Maximum length: 10 bytes
1.3.6.1.4.1.5875.8-00.3.81.1.1.35	onuBasicInformationRegKeyPassword	OCTET STRING	Read-only	ONU REGKEYPW	Maximum length: 12 bytes
1.3.6.1.4.1.5875.8-00.3.81.1.1.52	fhOltOnuBasicInfoSecondarySplitterID	Integer32	Read-write	Secondary splitter ID	Range: 0-16. The value 0 denotes "Not Configured".
1.3.6.1.4.1.5875.8-00.3.81.1.1.100	fhOltOnuBasicInfoDeauth	Integer32	Read-write	Deauthorization	1: deauthorize

ONU Capability Set Profile Information (2)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.81.1.1.38	fhOltOnuBasicInfoIsCSPProfileType	Integer32	Read-only	Whether it is a capability set profile	0: No 1: Yes
1.3.6.1.4.1.5875.8-00.3.81.1.1.39	fhOltOnuBasicInfoTypeName	OCTET STRING	Read-only	ONU type name. Both profile type and non-profile type are supported.	-

3.2 Local Management Interface Configuration for an ONU

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.81.2.1.1	onuLocalManageInterfaceSlot	Integer32	Read-only	Slot number	Index: 1-8, 11-18
1.3.6.1.4.1.5875.80-0.3.81.2.1.2	onuLocalManageInterfacePon	Integer32	Read-only	PON port number	Index: 1-16
1.3.6.1.4.1.5875.80-0.3.81.2.1.3	onuLocalManageInterfaceOnuid	Integer32	Read-only	ONU number	Index: 1-128
1.3.6.1.4.1.5875.80-0.3.81.2.1.4	onuLocalManageInterfaceConfigSwitch	INTEGER	Read-write	ONU configuration switch	0: Disable 1: Enable Default: 0 When Enable is selected, the ONU will neglect the global configuration of the local management interface for it. When Disable is selected, the ONU will use the global configuration of the local management interface for it.
1.3.6.1.4.1.5875.80-0.3.81.2.1.5	onuLocalManageInterfaceWebPort	INTEGER	Read-write	WEB port	Range: 80, 1024-65535 (Global configuration of the local management interface for the ONU)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.81.2.1.6	onuLocalManageInterfaceWebServerSwitch	INTEGER	Read-write	WEB network-side switch	1: enable 0: disable Default: 0 (Global configuration of the local management interface for the ONU)
1.3.6.1.4.1.5875.80-0.3.81.2.1.7	onuLocalManageInterfaceTelnetServerSwitch	INTEGER	Read-write	Telnet network-side switch	0: Disable 1: Enable Default: 0 (Global configuration of the local management interface for the ONU)
1.3.6.1.4.1.5875.80-0.3.81.2.1.8	onuLocalManageInterfaceWebUNISwitch	INTEGER	Read-write	WEB user-side switch	0: Disable 1: Enable Default: 1 (Global configuration of the local management interface for the ONU)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.81.2.1.9	onuLocalManageInterfaceTelnetUNISwitch	INTEGER	Read-write	Telnet user-side switch	0: Disable 1: Enable Default: 0 (Global configuration of the local management interface for the ONU)
1.3.6.1.4.1.5875.80-0.3.81.2.1.10	onuLocalManageInterfaceConsoleSwitch	INTEGER	Read-write	ONU serial port switch	0: Disable 1: Enable Default: 1 (Global configuration of the local management interface for the ONU)

3.3 Configuration of the WEB Management Account

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.81.5.1.1	onuWebManagementSlot	Integer32	Read-only	Slot number	Index
1.3.6.1.4.1.5875.80-0.3.81.5.1.2	onuWebManagementPon	Integer32	Read-only	PON port number	Index
1.3.6.1.4.1.5875.80-0.3.81.5.1.3	onuWebManagementOnuid	Integer32	Read-only	ONU number	Index
1.3.6.1.4.1.5875.80-0.3.81.5.1.4	onuWebManagementWebAdmin	OCTET STRING	read_only	Username of the WEB administrator	Maximum length: 16 bytes
1.3.6.1.4.1.5875.80-0.3.81.5.1.5	onuWebManagementWebAdminPassword	OCTET STRING	Read-write	Password of the WEB administrator	Maximum length: 32 bytes

3.4 Limit on the Number of an ONU's MAC Addresses

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.81.3.1.1	onuMacLimitSlot	Integer32	Read-only	Slot number	Index
1.3.6.1.4.1.5875.80-0.3.81.3.1.2	onuMacLimitPon	Integer32	Read-only	PON port number	Index
1.3.6.1.4.1.5875.80-0.3.81.3.1.3	onuMacLimitOnuid	Integer32	Read-only	ONU number	Index
1.3.6.1.4.1.5875.80-0.3.81.3.1.4	onuMacLimit	Integer32	Read-write	Limit on the number of MAC addresses	Number of MAC addresses for ONU's PON ports Range: 0-16000. The value 0 denotes no limit.

3.5 Control Commands for an ONU

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.81.4.1.1	onuControlCommandSlot	Integer32	Read-only	Slot number	Index
1.3.6.1.4.1.5875.80-0.3.81.4.1.2	onuControlCommandPon	Integer32	Read-only	PON port number	Index
1.3.6.1.4.1.5875.80-0.3.81.4.1.3	onuControlCommandOnuid	Integer32	Read-only	ONU number	Index
1.3.6.1.4.1.5875.80-0.3.81.4.1.4	onuControlCommandReboot	INTEGER	Read-write	ONU remote reboot	Control command ◆ 1: reboot ◆ 0: normal (for query only)
1.3.6.1.4.1.5875.80-0.3.81.4.1.5	onuShutdown	INTEGER	Read-write	ONU optical module switch	Control command ◆ 1: enable ◆ 0: shut down The returned value is meaningless.

3.6 Public Configurations for an ONU

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-.3.81.6.1.1	onuPublicConfigurationSlot	Integer32	Read-only	Slot number	Index
1.3.6.1.4.1.5875.800-.3.81.6.1.2	onuPublicConfigurationPon	Integer32	Read-only	PON port number	Index
1.3.6.1.4.1.5875.800-.3.81.6.1.3	onuPublicConfigurationOnuid	Integer32	Read-only	ONU number	Index
1.3.6.1.4.1.5875.800-.3.81.6.1.4	onuPortIsolation	INTEGER	Read-write	Port isolation	0: Disable 1: Enable

3.7 Query / Statistics of ONUs Based on Types (Supporting snmpget Only)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-.3.81.20.1.1.1	fhOltTpQryOnu-Type	Integer32	Read-only	ONU type code (index). Both profile type and non-profile type are supported.	-
1.3.6.1.4.1.5875.800-.3.81.20.1.1.2	fhOltTpQryOnuIsCSPProfile-Type	INTEGER	Read-only	Whether it is the capability set profile type	0: No 1: Yes
1.3.6.1.4.1.5875.800-.3.81.20.1.1.3	fhOltTpQryOnu-TypeName	OCTET STRING	Read-only	ONU type name. Both profile type and non-profile type are supported.	-
1.3.6.1.4.1.5875.800-.3.81.20.1.1.4	fhOltTpQryOnu-SumAuth	Integer32	Read-only	Counting authorized ONUs of a specified type	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-.3.81.20.2.1.1	fhOltTpNQryO-nuTypeName	OCTET STRING	Read-only	ONU type name (index). Both profile type and non-profile type are supported.	The value contains 1 to 32 characters including numerals, letters and "-". Capital letters should be used. The index is expressed as length + ASCII code of the name . For example, the index for CS-1 is 4.67.83.45.49 .
1.3.6.1.4.1.5875.800-.3.81.20.2.1.2	fhOltTpNQryO-nuIsCSPProfile-Type	INTEGER	Read-only	Whether it is the capability set profile type	0: No 1: Yes
1.3.6.1.4.1.5875.800-.3.81.20.2.1.3	fhOltTpNQryO-nuType	Integer32	Read-only	ONU type code (index). Both profile type and non-profile type are supported.	-
1.3.6.1.4.1.5875.800-.3.81.20.2.1.4	fhOltTpNQryO-nuSumAuth	Integer32	Read-only	Counting authorized ONUs of a specified type	-

3.8 Information About an ONU's Uplink Ports



Caution:

The ONU must be online.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-101.11.1.1	onuOnlineIndex	Int	Not-accessible	ONU number (index)	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.-9.3.3.1.2	onuPonName	String	Read-only	Port name	-
1.3.6.1.4.1.5875.800.3.-9.3.3.1.3	onuPonDesc	String	Read-only	Port description	-
1.3.6.1.4.1.5875.800.3.-9.3.3.1.1	onuPonType	Int	Read-only	Port type	263: 1G PON port of an EPON ONU 712: 1G PON port of a GPON ONU 807: 10G/10G PON port of a 10G EPON ONU 808: 1G/10G PON port of a 10G EPON ONU 813: 2.5G/10G PON port of an XG-PON ONU
1.3.6.1.4.1.5875.800.3.-9.3.3.1.4	onuPonEnable-Status	Int	Read-only	Port enable/disable status	1: enable 0: disable
1.3.6.1.4.1.5875.800.3.-9.3.3.1.5	onuPonSpeed	Int	Read-only	Port downstream rate	Unit: Mbit/s
1.3.6.1.4.1.5875.800.3.-9.3.3.1.12	onuPonUp-streamSpeed	Int	Read-only	Port upstream rate	Unit: Mbit/s

3.9 Optical Power of an ONU's Uplink Ports (Batch Measurement)



Note:

Enable traffic measurement before using the batch measurement function.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-101.11.1.1	onuOnlineIndex	Int	Not-accessible	ONU number (index)	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.-9.3.3.1.7	onuPonRxOpticalPower	Int	Read-only	Tx optical power of the ONU	Returned value divided by 100 (unit: dBm)
1.3.6.1.4.1.5875.800.3.-9.3.3.1.6	onuPonTxOpticalPower	Int	Read-only	Rx optical power of the ONU	Returned value divided by 100 (unit: dBm)
1.3.6.1.4.1.5875.800.3.-9.3.3.1.10	onuPonOpticalVltage	Int	Read-only	Temperature	Returned value divided by 100 (unit: °C)
1.3.6.1.4.1.5875.800.3.-9.3.3.1.8	onuPonOpticalTemperature	Int	Read-only	Power supply voltage	Returned value divided by 100 (unit: V)
1.3.6.1.4.1.5875.800.3.-9.3.3.1.9	onuPonOpticalCurrent	Int	Read-only	Bias current	Returned value divided by 100 (unit: mA)

3.10 Real-time Optical Power of an ONU

ONU Real-time Optical Power Information Table



Caution:

This function disallows batch operation or successive operations for several objects. That is, only independent operation for a single object is allowed. Besides that, only the snmpget operation is supported.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-9.3.10.1.1	onuPonInfoReal-timeIndex	Int	Read-only	ONU number (index)	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.-9.3.10.1.2	onuPonTxOpticalPowerReal-time	Int	Read-only	Tx optical power of the ONU	Returned value divided by 100 (unit: dBm)
1.3.6.1.4.1.5875.800.3.-9.3.10.1.3	onuPonRxOpticalPowerReal-time	Int	Read-only	Rx optical power of the ONU	Returned value divided by 100 (unit: dBm)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3-9.3.10.1.4	onuPonOptical-Temperature-Realtime	Int	Read-only	Temperature	Returned value divided by 100 (unit: °C)
1.3.6.1.4.1.5875.800.3-9.3.10.1.5	onuPonOpticalVltageRealtime	Int	Read-only	Power supply voltage	Returned value divided by 100 (unit: V)
1.3.6.1.4.1.5875.800.3-9.3.10.1.6	onuPonOptical-CurrentRealtime	Int	Read-only	Bias current	Returned value divided by 100 (unit: mA)

Real-time Optical Module Parameters of an ONU



Caution:

This function disallows batch operation or successive operations for several objects. That is, only independent operation for a single object is allowed. Besides that, only the snmpget operation is supported.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3-9.3.20.1.1	fhOnuPonRTInfoPonIndex	Integer32	Read-only	PON port index	$\text{SLOT} \times 33554432 + \text{PON} \times 524288$
1.3.6.1.4.1.5875.800.3-9.3.20.1.2	fhOnuPonRTInfoOnuIndex	Integer32	Read-only	ONU number (index)	Traversing online ONUs only
1.3.6.1.4.1.5875.800.3-9.3.20.1.6	fhOnuPonRTInfoOptRxPow	Integer32	Read-only	Rx optical power	Returned value divided by 100 (unit: dBm)
1.3.6.1.4.1.5875.800.3-9.3.20.1.20	fhOnuPonRTInfoOptPeerRx-Pow	Integer32	Read-only	Rx optical power of the peer (OLT's PON port)	Returned value divided by 100 (unit: dBm)

3.11 Information About an ONU's LAN Ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.101.5.1.1	portIndex	Int	Read-only	LAN port index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.8-00.3.9.3.1.1.6	portName	String	Read-only	Port name	-
1.3.6.1.4.1.5875.8-00.3.9.3.1.1.2	portType	Int	Read-only	Port type	2: FE 3: GE
1.3.6.1.4.1.5875.8-00.3.9.3.1.1.3	portEnableStatus	Int	Read-only	Port enable/ disable status	1: enable 0: disable
1.3.6.1.4.1.5875.8-00.3.9.3.1.1.8	portMode	Int	Read-only	Port mode	1: full duplex 0: half duplex
1.3.6.1.4.1.5875.8-00.3.9.3.1.1.4	portOnlineStatus	Int	Read-only	Port online/ offline status	1: online 0: offline
1.3.6.1.4.1.5875.8-00.3.9.3.1.1.5	portSpeed	Int	Read-only	Port rate	Unit: Mbit/s ◆ 10M ◆ 100M ◆ 1000M
1.3.6.1.4.1.5875.8-00.3.9.3.1.1.11	portDefaultVlan	Integer32	Read-only	PVID	Default VLAN ID of the port (default: 4088)
1.3.6.1.4.1.5875.8-00.3.9.3.1.1.12	portAutoneg	Int	Read-only	Enabling / disabling auto- negotiation	1: enable 0: disable
1.3.6.1.4.1.5875.8-00.3.9.3.1.1.13	portMacNumber-Limit	Int	Read-write	Limit on the number of MAC addresses	Range: 0-16000. The value 0 denotes no limit. Note: The configuration takes effect through the node 1.3.6.1.4.1.5875.800.3.10.-1.1.29.

3.12 Information About POTS Ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-101.4.1.1	potsIndex	Int	Read-only	POTS port index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.-9.3.2.1.2	potsName	String	Read-only	Port name	-
1.3.6.1.4.1.5875.800.3.-9.3.2.1.3	potsDesc	String	Read-only	Port description	-
1.3.6.1.4.1.5875.800.3.-9.3.2.1.1	potsType	Int	Read-only	Port type	5: FXS
1.3.6.1.4.1.5875.800.3.-9.3.2.1.4	potsEnableStatus	Int	Read-only	Port enable/disable status	1: enable 0: disable
1.3.6.1.4.1.5875.800.3.-9.3.2.1.5	potsIdleStatus	Int	Read-only	Port operating status	0: The port is inactive. (inactive) 1: The port is being registered. (reging) 2: The port is idle. (idle) 3: The port is off-hook. (off hook) 4: The port is dialing. (dialing) 5: The port is ringing. (ring) 6: The port is receiving a ring back tone. (ring back) 7: The port is being connected. (connecting) 8: The port is connected. (connected) 9: The port is on-hook. (on hook) 10: The port is disconnected. (disconnecting) 11: The port is busy. (busy) 12: Registration of the port failed. (reg fail)

3.13 Information About Unauthorized ONUs

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-11.1.1.1	unauthOnuListOnuIndex	Integer32	Read-only	Temporary ID (index) of the ONU	-
1.3.6.1.4.1.5875.800.3.-11.1.1.2	unauthOnuListSlot	Integer32	Read-only	Slot number	-
1.3.6.1.4.1.5875.800.3.-11.1.1.3	unauthOnuListPon	Integer32	Read-only	PON port number	-
1.3.6.1.4.1.5875.800.3.-11.1.1.4	unauthOnuListOnuType	Integer32	Read-only	ONU type	Refer to ONU Types .
1.3.6.1.4.1.5875.800.3.-11.1.1.5	unauthOnuListSnLoid	OCTET STRING	Read-only	Logical SN	0 to 4 characters
1.3.6.1.4.1.5875.800.3.-11.1.1.6	unauthOnuListPwd	OCTET STRING	Read-only	Logical SN password	0 to 12 characters
1.3.6.1.4.1.5875.800.3.-11.1.1.7	unauthOnuListMac	OCTET STRING	Read-only	Physical SN	0 to 12 characters
1.3.6.1.4.1.5875.800.3.-11.1.1.8	unauthOnuListVendorId	OCTET STRING	Read-only	Vendor ID	4 bytes
1.3.6.1.4.1.5875.800.3.-11.1.1.9	unauthOnuListRealType	OCTET STRING	Read-only	Physical device type	0 to 20 bytes

3.14 Real-time Query of the ONU MAC Address Table Based on ONUs

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-101.13.1.1	onuMacAddress-RealtimeOnuIndex	Int	Read-only	ONU index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.-9.13.1.1.1	onuMacAddress-RealtimePkgIndex	Int	Read-only	Packet index	Fixed at 1
1.3.6.1.4.1.5875.800.3.-9.13.1.1.2	onuMacAddress-RealtimeMacList	OctetString	Read-only	ONU MAC address table	Every eight bytes stand for a MAC+VID pair, with the first six bytes denoting the MAC address, and the last two bytes the VLAN ID.

3.15 Real-time Query of FE Port MAC Address Tables Based on ONUs' FE Ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.101.14.1.1	uniMacAddress-RealtimeFeIndex	Int	Not-accessible	ONU FE index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.-800.3.9.13.2.1.1	uniMacAddress-RealtimePkgIndex	Int	Read-only	Packet index	Default: 1
1.3.6.1.4.1.5875.-800.3.9.13.2.1.2	uniMacAddress-RealtimeMacList	OctetString	Read-only	FE MAC address table	Every eight bytes stand for a MAC+VID pair, with the first six bytes denoting the MAC address, and the last two bytes the VLAN ID.

3.16 Real-time Status Table for ONUs' LAN Ports



Note:

The walk operation is not supported. The get operation for only a single object is supported. When the card or ONU is offline, the message “no such instance” will be returned.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.101.14.1.1	uniMacAddress-RealtimeFeIndex	Integer32	Not-accessible	Compound index of an ONU's LAN port	$\text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256 + \text{PORT}$
1.3.6.1.4.1.5875.800.-3.9.13.3.1.1	fhOltLanStatusR-TLinkState	Integer32	Read-only	Connection status	0: unconnected 1: connected
1.3.6.1.4.1.5875.800.-3.9.13.3.1.5	fhOltLanStatusR-TRate	Integer32	Read-only	Negotiated rate	Mbps

3.17 ONU LAN Port Status Table (walk Supported)



Note:

Only online ONUs are supported.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.9.17.1.1.1	onuLanStatusOLT-PonIndex	Integer32	Read-only	Index of an OLT's PON port	SLOT × 33554432 + PON × 524288
1.3.6.1.4.1.5875.8-00.3.9.17.1.1.2	onuLanStatusOnu-NoIndex	Integer32	Read-only	ONU index	1-128
1.3.6.1.4.1.5875.8-00.3.9.17.1.1.3	onuLanStatusOnu-PortIndex	Integer32	Read-only	Index of an ONU's LAN port	-
1.3.6.1.4.1.5875.8-00.3.9.17.1.1.6	onuLanStatus-LinkState	Integer32	Read-only	Connection status	0: unconnected 1: connected
1.3.6.1.4.1.5875.8-00.3.9.17.1.1.7	onuLanStatus-FlowCtrl	Integer32	Read-only	Flow control status	0: disable 1: enable If the ONU's LAN port is unconnected , this value is invalid.
1.3.6.1.4.1.5875.8-00.3.9.17.1.1.8	onuLanStatusPhyState	Integer32	Read-only	Physical status	0: disable 1: enable If the ONU's LAN port is unconnected , this value is invalid.
1.3.6.1.4.1.5875.8-00.3.9.17.1.1.9	onuLanStatusAutoNeg	Integer32	Read-only	Auto negotiation status	0: disable 1: enable If the ONU's LAN port is unconnected , this value is invalid.
1.3.6.1.4.1.5875.8-00.3.9.17.1.1.10	onuLanStatusRate	Integer32	Read-only	Negotiated rate	Unit: Mbps If the ONU's LAN port is unconnected , this value is invalid.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.9.17.1.1.11	onuLanStatusDuplex	Integer32	Read-only	Duplex mode	0: half duplex 1: full duplex If the ONU's LAN port is unconnected , this value is invalid.
1.3.6.1.4.1.5875.8-00.3.9.17.1.1.12	onuLanStatus-LoopbackState	Integer32	Read-only	Loopback status	0: normal 1: loopback If the ONU's LAN port is unconnected , this value is invalid.

3.18 Time and Reason for an ONU Going Online / Offline

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.58-75.800.3.10.2.-1.1	upTimeDown-TimeCauseOnuIndex	Int	Read-only	ONU index	Refer to Compound Indexes of Common Objects . $\text{ifIndex} = \text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256$ SLOT range: 1-8, 11-18 PON range: 1-16 ONU range: 1-128
1.3.6.1.4.1.58-75.800.3.10.2.-1.2	upTimeDown-TimeCause	OCTET STRING	Read-only	Time and reason for an ONU going online / offline	Each ONU has 10 information entries, which are separated by semicolons, with no more than 460 bytes in total. If actually an ONU uses less than 10 entries, fill the missing entries like this: enter 0000-00-00 00:00:00 for

[illegible]

3.19 CATV Information

**Note:**

Only the snmpget operation is supported to get the information. That is, the snmpwalk operation is not supported.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.9.15.1.1.1	onuCatvInformationIndex	Integer32	Read-only	ONU index	$\text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256$
1.3.6.1.4.1.5875.800.-3.9.15.1.1.4	onuCatvInformationRxOptPower	Integer32	Read-only	Rx optical power of CATV	Unit: 0.01 dBm

4 Traffic Measurement

This chapter introduces OIDs and related information of the nodes under the traffic measurement module.

4.1 Device Traffic Measurement Switch

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.8.2	ftthIsPerformanceSupport	Int	Read-only	Whether traffic measurement is supported	1: supported 0: unsupported
1.3.6.1.4.1.5875.800.-3.8.3	ftthPerformanceEnableFor5516	Int	Read-write	Traffic measurement switch	1: enable 0: disable

Command line


◆ Main switch

```
Admin(config)# mib stats enable
Admin(config)# show mib stats switch
```

◆ Subswitch

```
port traffic-stats switch {[traffic|opt|rtt] [enable|disable] <interval>
<delay_interval> }*3
Admin(config)# port traffic-stats switch traffic enable 5 0
Admin(config)# show port traffic-stats switch
```

GUI of the network management system

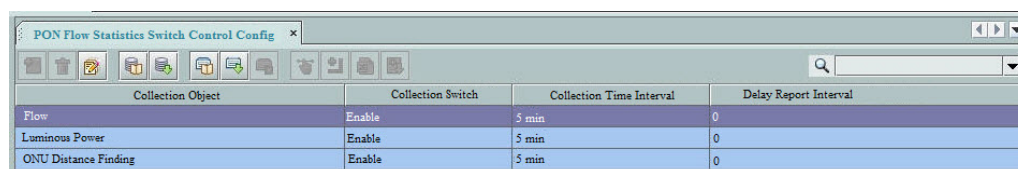

Collection Object	Collection Switch	Collection Time Interval	Delay Report Interval
Flow	Enable	5 min	0
Luminous Power	Enable	5 min	0
ONU Distance Finding	Enable	5 min	0

4.2 Port Traffic Measurement



Note:

Generally, this function is applied to traffic measurement on OLT ports.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.2.1.2.2.1.1	ifIndex	Int	Read-only	Logical index of the port	Refer to Compound Indexes of IfIndex . Index formula for a local-end port: $(\text{IndexType}) \times 268435456 + (\text{ObjectType}) \times 8388608 + (\text{slot}) \times 131072 + (\text{port}) \times 512$
1.3.6.1.2.1.2.2.1.2	ifDescr	String	Read-only	Port description	-
1.3.6.1.2.1.2.2.1.3	ifType	Int	Read-only	Port type	other (1): PON port ethernetCsmacd (6): for all Ethernet-like interfaces, regardless of speed, as per RFC 3635 250: GPON port
1.3.6.1.2.1.2.2.1.4	ifMtu	Int	Read-only	IfMtu	-
1.3.6.1.2.1.2.2.1.5	ifSpeed	Int	Read-only	Port rate	The value 4294967295 means the measured port rate crosses the upper limit of the value range for this node. It is advised to use a 64-byte value to represent the port rate. Unit: bps
1.3.6.1.2.1.2.2.1.7	ifAdminStatus	Int	Read-only	Port management status	1: up 2: down
1.3.6.1.2.1.2.2.1.8	ifOperStatus	Int	Read-only	Port operation status	1: enable 2: disable
1.3.6.1.2.1.2.2.1.10	ifInOctets	Int	Read-only	Number of incoming bytes	-
1.3.6.1.2.1.2.2.1.11	ifInUcastPkts	Int	Read-only	Number of incoming unicast packets	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.2.1.2.2.1.12	ifInNUcastPkts	Int	Read-only	Number of incoming non-unicast packets	-
1.3.6.1.2.1.2.2.1.13	ifInDiscards	Int	Read-only	Number of incoming lost packets	-
1.3.6.1.2.1.2.2.1.14	ifInErrors	Int	Read-only	Number of incoming error packets	Frames with CRC errors
1.3.6.1.2.1.2.2.1.15	ifInUnknown-Protos	Int	Read-only	Number of incoming unknown packets	The value 0 is not supported currently.
1.3.6.1.2.1.2.2.1.16	ifOutOctets	Int	Read-only	Number of outgoing bytes	-
1.3.6.1.2.1.2.2.1.17	ifOutUcastPkts	Int	Read-only	Number of outgoing unicast packets	-
1.3.6.1.2.1.2.2.1.18	ifOutNU-castPkts	Int	Read-only	Number of outgoing non-unicast packets	-
1.3.6.1.2.1.2.2.1.19	ifOutDiscards	Int	Read-only	Number of outgoing lost packets	-
1.3.6.1.2.1.2.2.1.20	ifOutErrors	Int	Read-only	Number of outgoing error packets	Frames with CRC errors
1.3.6.1.2.1.31.1.1.1.2	ifInMulti-castPkts	Int	Read-only	Number of incoming multicast packets	-
1.3.6.1.2.1.31.1.1.1.3	ifInBroad-castPkts	Int	Read-only	Number of incoming broadcast packets	-
1.3.6.1.2.1.31.1.1.1.4	ifOutMulti-castPkts	Int	Read-only	Number of outgoing multicast packets	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.2.1.31.1.1.1.5	ifOutBroad-castPkts	Int	Read-only	Number of outgoing broadcast packets	-
1.3.6.1.2.1.31.1.1.1.6	ifHCInOctets	Counter64	Read-only	Number of incoming bytes (64-bit)	-
1.3.6.1.2.1.31.1.1.1.7	ifHCInU-castPkts	Counter64	Read-only	Number of incoming unicast packets (64-bit)	-
1.3.6.1.2.1.31.1.1.1.8	ifHCInMulti-castPkts	Counter64	Read-only	Number of incoming multicast packets (64-bit)	-
1.3.6.1.2.1.31.1.1.1.9	ifHCInBroad-castPkts	Counter64	Read-only	Number of incoming broadcast packets (64-bit)	-
1.3.6.1.2.1.31.1.1.1.-10	ifHCOctets	Counter64	Read-only	Number of outgoing bytes (64-bit)	-
1.3.6.1.2.1.31.1.1.1.-11	ifHCOU-castPkts	Counter64	Read-only	Number of outgoing unicast packets (64-bit)	-
1.3.6.1.2.1.31.1.1.1.-12	ifHCOOutMulti-castPkts	Counter64	Read-only	Number of outgoing multicast packets (64-bit)	-
1.3.6.1.2.1.31.1.1.1.-13	ifHCOOutBroad-castPkts	Counter64	Read-only	Number of outgoing broadcast packets (64-bit)	-
1.3.6.1.2.1.31.1.1.1.-15	ifHighSpeed	Counter64	Read-only	Port rate (64-bit)	Unit: Mbps

4.3 Extended Port Traffic Measurement



Note:

Generally this function is used for traffic measurement on OLT ports.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.2.1.2.2.1.1	ifIndex	Int	Read-only	Logical index of the port	Refer to Compound Indexes of IfIndex . Index formula for a local-end port: $(\text{IndexType}) \times 268435456 + (\text{ObjectType}) \times 8388608 + (\text{slot}) \times 131072 + (\text{port}) \times 512$
1.3.6.1.4.1.5875.80-0.3.54.1.1.2	mibInflows-BIP	Int	Read-only	BIP8 for incoming flow	-
1.3.6.1.4.1.5875.80-0.3.54.1.1.3	mibOut-flowsBIP	Int	Read-only	BIP8 for outgoing flow	-

4.4 Traffic Measurement on an ONU's PON Ports

```
Diagnose> show onu-port mib-perform data slot <slotno> pon <ponno>
onu <onuno> port <portno>
kira(config-if-pon-1/16/1)# show onu statistics <ONU ID>real-time traffic
```

Currently, traffic measurement on ONUs' PON ports is inapplicable to HGU ONUs due to incompatible chip schemes.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.101-2.1.1	onuIndex	Int	Read-only	ONU number (index)	Refer to Compound Indexes of Common Objects . $\text{objectIndex} = \text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256$
1.3.6.1.4.1.5875.800.3.54-3.1.2	ifDescr	String	Read-only	Port description	-
1.3.6.1.4.1.5875.800.3.54-3.1.3	ifType	Int	Read-only	Port type	Refer to Port Types .
1.3.6.1.4.1.5875.800.3.54-3.1.4	ifMtu	Int	Read-only	IfMtu	-
1.3.6.1.4.1.5875.800.3.54-3.1.5	ifSpeed	Int	Read-only	Port rate	The value 4294967295 means the measured port rate crosses the upper limit of the value range for this node. It is advisable to use a 64-byte value to represent the port rate. Unit: bps
1.3.6.1.4.1.5875.800.3.54-3.1.7	ifAdminStatus	Int	Read-only	Port management status	1: up 2: down
1.3.6.1.4.1.5875.800.3.54-3.1.8	ifOperStatus	Int	Read-only	Port operation status	1: enable 2: disable
1.3.6.1.4.1.5875.800.3.54-3.1.10	ifInOctets	Int	Read-only	Number of incoming bytes	-
1.3.6.1.4.1.5875.800.3.54-3.1.11	ifInUcastPkts	Int	Read-only	Number of incoming unicast packets	-
1.3.6.1.4.1.5875.800.3.54-3.1.12	ifInNUcastPkts	Int	Read-only	Number of incoming non-unicast packets	-
1.3.6.1.4.1.5875.800.3.54-3.1.13	ifInDiscards	Int	Read-only	Number of incoming lost packets	-
1.3.6.1.4.1.5875.800.3.54-3.1.14	ifInErrors	Int	Read-only	Number of incoming error packets	Frames with CRC errors
1.3.6.1.4.1.5875.800.3.54-3.1.15	ifInUnknown-Protos	Int	Read-only	Number of incoming unknown packets	The value 0 is not supported currently.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.54.-3.1.16	ifOutOctets	Int	Read-only	Number of outgoing bytes	-
1.3.6.1.4.1.5875.800.3.54.-3.1.17	ifOutUcastPkts	Int	Read-only	Number of outgoing unicast packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.18	ifOutNU-castPkts	Int	Read-only	Number of outgoing non-unicast packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.19	ifOutDiscards	Int	Read-only	Number of outgoing lost packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.20	ifOutErrors	Int	Read-only	Number of outgoing error packets	Frames with CRC errors
1.3.6.1.4.1.5875.800.3.54.-3.1.21	inflowsBIP	Int	Read-only	BIP8 for incoming flow	Only applicable to GPON (bit errors)
1.3.6.1.4.1.5875.800.3.54.-3.1.22	outflowsBIP	Int	Read-only	BIP8 for outgoing flow	Only applicable to GPON (bit errors)
1.3.6.1.4.1.5875.800.3.54.-3.1.32	ifOutMulti-castPkts	Int	Read-only	Number of incoming multicast packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.33	ifInBroad-castPkts	Int	Read-only	Number of incoming broadcast packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.34	ifInMulti-castPkts	Int	Read-only	Number of outgoing multicast packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.35	ifOutBroad-castPkts	Int	Read-only	Number of outgoing broadcast packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.36	ifHCInOctets	Counter64	Read-only	Number of incoming bytes (64-bit)	-
1.3.6.1.4.1.5875.800.3.54.-3.1.37	ifHCInU-castPkts	Counter64	Read-only	Number of incoming unicast packets (64-bit)	-
1.3.6.1.4.1.5875.800.3.54.-3.1.38	ifHCInMulti-castPkts	Counter64	Read-only	Number of incoming multicast packets (64-bit)	-
1.3.6.1.4.1.5875.800.3.54.-3.1.39	ifHCInBroad-castPkts	Counter64	Read-only	Number of incoming broadcast packets (64-bit)	-
1.3.6.1.4.1.5875.800.3.54.-3.1.40	ifHCOctets	Counter64	Read-only	Number of outgoing bytes (64-bit)	-
1.3.6.1.4.1.5875.800.3.54.-3.1.41	ifHCOU-castPkts	Counter64	Read-only	Number of outgoing unicast packets (64-bit)	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.54.-3.1.42	ifHCOutMulti-castPkts	Counter64	Read-only	Number of outgoing multicast packets (64-bit)	-
1.3.6.1.4.1.5875.800.3.54.-3.1.43	ifHCOut-BroadcastPkts	Counter64	Read-only	Number of outgoing broadcast packets (64-bit)	-
1.3.6.1.4.1.5875.800.3.54.-3.1.45	ifHighSpeed	Counter64	Read-only	Port rate (64-bit)	-
1.3.6.1.4.1.5875.800.3.54.-3.1.50	ferfRecvGood-PackageOctets	Counter64	Read-only	Count of bytes in received good packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.51	ferfRecvDis-cardedPacka-geOctets	Counter64	Read-only	Count of bytes in received discarded packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.52	ferfRecvError-PackageOctets	Counter64	Read-only	Count of bytes in received error packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.53	ferfSendGood-PackageOctets	Counter64	Read-only	Count of bytes in transmitted good packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.54	ferfSendDis-cardedPacka-geOctets	Counter64	Read-only	Count of bytes in transmitted discarded packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.55	ferfSendError-PackageOctets	Counter64	Read-only	Count of bytes in transmitted error packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.56	ferfRecv64Oc-tetsLenPkts	Counter64	Read-only	Count of received 64-byte packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.57	ferfRecv65-to127Octet-sLenPkts	Counter64	Read-only	Count of received packets of 65 to 127 bytes	-
1.3.6.1.4.1.5875.800.3.54.-3.1.58	ferfRecv128-to255Octet-sLenPkts	Counter64	Read-only	Count of received packets of 128 to 255 bytes	-
1.3.6.1.4.1.5875.800.3.54.-3.1.59	ferfRecv256-to511Octet-sLenPkts	Counter64	Read-only	Count of received packets of 256 to 511 bytes	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.54.-3.1.60	ferfRecv512-to1023OctetsLenPkts	Counter64	Read-only	Count of received packets of 512 to 1023 bytes	-
1.3.6.1.4.1.5875.800.3.54.-3.1.61	ferfRecv1024-to1518OctetsLenPkts	Counter64	Read-only	Count of received packets of 1024 to 1518 bytes	-
1.3.6.1.4.1.5875.800.3.54.-3.1.62	ferfLossSignalSeconds	Counter64	Read-only	Seconds with loss of signals	-
1.3.6.1.4.1.5875.800.3.54.-3.1.63	ferfErroredSeconds	Counter64	Read-only	Errored seconds	-
1.3.6.1.4.1.5875.800.3.54.-3.1.64	ferfSeverelyErroredSeconds	Counter64	Read-only	Severely errored seconds	-
1.3.6.1.4.1.5875.800.3.54.-3.1.65	ferfUnavailableSeconds	Counter64	Read-only	Unavailable seconds	-
1.3.6.1.4.1.5875.800.3.54.-3.1.66	ferfDetectMonitorDiscardPacketNumber	Counter64	Read-only	Count of detected "monitor discarding packet" events	-
1.3.6.1.4.1.5875.800.3.54.-3.1.67	ferfRecvPauseFlowControlFrames	Counter64	Read-only	Count of received PAUSE (flow control) frames	-
1.3.6.1.4.1.5875.800.3.54.-3.1.68	ferfSendPauseFlowControlFrames	Counter64	Read-only	Count of transmitted PAUSE (flow control) frames	-
1.3.6.1.4.1.5875.800.3.54.-3.1.69	ferfChecksumErrors	Counter64	Read-only	Count of checksum errors	-
1.3.6.1.4.1.5875.800.3.54.-3.1.70	ferfFcsFrameCheckErrors	Counter64	Read-only	Count of FCS frame check errors	-
1.3.6.1.4.1.5875.800.3.54.-3.1.71	ferfExcessiveCollisionStatistics	Counter64	Read-only	Count of excessive collisions	-
1.3.6.1.4.1.5875.800.3.54.-3.1.72	ferfSingleCollisionSendOkFrames	Counter64	Read-only	Count of frames correctly sent after a single collision	-
1.3.6.1.4.1.5875.800.3.54.-3.1.73	ferfMultipleCollisionsSendOkFrames	Counter64	Read-only	Count of frames correctly sent after several collisions	-
1.3.6.1.4.1.5875.800.3.54.-3.1.74	ferfPortInFlow	Counter64	Read-only	Incoming flow on the port	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.54.-3.1.75	ferfPortOnu-Flow	Counter64	Read-only	Outgoing flow on the port	-
1.3.6.1.4.1.5875.800.3.54.-3.1.76	lineCodeError	Counter64	Read-only	Line code error	Bit errors, only applicable to EPON
1.3.6.1.4.1.5875.800.3.54.-3.1.77	onuPonIn-Speed	Counter64	Read-only	Speed of incoming flow on the port (downlink)	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.800.3.54.-3.1.78	onuPonOut-Speed	Counter64	Read-only	Speed of outgoing flow on the port (uplink)	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.800.3.54.-3.1.79	fhOnuPonTraf-fInBwUtil	Integer32	Read-only	Bandwidth utilization for incoming traffic	Unit: 0.01%
1.3.6.1.4.1.5875.800.3.54.-3.1.80	fhOnuPonTraf-fOutBwUtil	Integer32	Read-only	Bandwidth utilization for outgoing traffic	Unit: 0.01%
1.3.6.1.4.1.5875.800.3.54.-3.1.89	fhOnuPonTraf-fInPkts	Counter64	Read-only	Count of incoming packets	-
1.3.6.1.4.1.5875.800.3.54.-3.1.90	fhOnuPonTraf-fOutPkts	Counter64	Read-only	Count of outgoing packets	-

4.5 Traffic Measurement on an ONU's Ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.101.5.1.1	onuIndex	Int	Read-only	FE port index	Refer to Compound Indexes of Common Objects . objectIndex = SLOT × 33554432 + PON × 524288 + ONU × 256 + PORT
1.3.6.1.4.1.5875.-800.3.54.5.1.2	ifDescr	String	Read-only	Port description	-
1.3.6.1.4.1.5875.-800.3.54.5.1.3	ifType	Int	Read-only	Port type	regular1822 (2): FE port hdh1822 (3): GE port
1.3.6.1.4.1.5875.-800.3.54.5.1.4	ifMtu	Int	Read-only	IfMtu	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.- 800.3.54.5.1.5	ifSpeed	Int	Read-only	Port rate	The value 4294967295 means the measured port rate crosses the upper limit of the value range for this node. It is advisable to use a 64-byte value to represent the port rate. Unit: bps
1.3.6.1.4.1.5875.- 800.3.54.5.1.7	ifAdminStatus	Int	Read-only	Port management status	1: up 2: down
1.3.6.1.4.1.5875.- 800.3.54.5.1.8	ifOperStatus	Int	Read-only	Port operation status	1: enable 2: disable
1.3.6.1.4.1.5875.- 800.3.54.5.1.10	ifInOctets	Int	Read-only	Number of incoming bytes	-
1.3.6.1.4.1.5875.- 800.3.54.5.1.11	ifInUcastPkts	Int	Read-only	Number of incoming unicast packets	-
1.3.6.1.4.1.5875.- 800.3.54.5.1.12	ifInNUcastPkts	Int	Read-only	Number of incoming non-unicast packets	-
1.3.6.1.4.1.5875.- 800.3.54.5.1.13	ifInDiscards	Int	Read-only	Number of incoming lost packets	-
1.3.6.1.4.1.5875.- 800.3.54.5.1.14	ifInErrors	Int	Read-only	Number of incoming error packets	Frames with CRC errors
1.3.6.1.4.1.5875.- 800.3.54.5.1.15	ifInUnknown- Protos	Int	Read-only	Number of incoming unknown packets	The value 0 is not supported currently.
1.3.6.1.4.1.5875.- 800.3.54.5.1.16	ifOutOctets	Int	Read-only	Number of outgoing bytes	-
1.3.6.1.4.1.5875.- 800.3.54.5.1.17	ifOutUcastPkts	Int	Read-only	Number of outgoing unicast packets	-
1.3.6.1.4.1.5875.- 800.3.54.5.1.18	ifOutNU- castPkts	Int	Read-only	Number of outgoing non-unicast packets	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.54.5.1.19	ifOutDiscards	Int	Read-only	Number of outgoing lost packets	-
1.3.6.1.4.1.5875.-800.3.54.5.1.20	ifOutErrors	Int	Read-only	Number of outgoing error packets	Frames with CRC errors
1.3.6.1.4.1.5875.-800.3.54.5.1.21	inflowsBIP	Int	Read-only	BIP8 for incoming flow	-
1.3.6.1.4.1.5875.-800.3.54.5.1.22	outflowsBIP	Int	Read-only	BIP8 for outgoing flow	-
1.3.6.1.4.1.5875.-800.3.54.5.1.32	ifOutMulti-castPkts	Int	Read-only	Number of incoming multicast packets	-
1.3.6.1.4.1.5875.-800.3.54.5.1.33	ifInBroad-castPkts	Int	Read-only	Number of incoming broadcast packets	-
1.3.6.1.4.1.5875.-800.3.54.5.1.34	ifInMulti-castPkts	Int	Read-only	Number of outgoing multicast packets	-
1.3.6.1.4.1.5875.-800.3.54.5.1.35	ifOutBroad-castPkts	Int	Read-only	Number of outgoing broadcast packets	-
1.3.6.1.4.1.5875.-800.3.54.5.1.36	ifHCInOctets	Counter64	Read-only	Number of incoming bytes (64-bit)	-
1.3.6.1.4.1.5875.-800.3.54.5.1.37	ifHCInU-castPkts	Counter64	Read-only	Number of incoming unicast packets (64-bit)	-
1.3.6.1.4.1.5875.-800.3.54.5.1.38	ifHCInMulti-castPkts	Counter64	Read-only	Number of incoming multicast packets (64-bit)	-
1.3.6.1.4.1.5875.-800.3.54.5.1.39	ifHCInBroad-castPkts	Counter64	Read-only	Number of incoming broadcast packets (64-bit)	-
1.3.6.1.4.1.5875.-800.3.54.5.1.40	ifHCOctets	Counter64	Read-only	Number of outgoing bytes (64-bit)	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.54.5.1.41	ifHCOUtU-castPkts	Counter64	Read-only	Number of outgoing unicast packets (64-bit)	-
1.3.6.1.4.1.5875.-800.3.54.5.1.42	ifHCOUtMulti-castPkts	Counter64	Read-only	Number of outgoing multicast packets (64-bit)	-
1.3.6.1.4.1.5875.-800.3.54.5.1.43	ifHCOUtBroad-castPkts	Counter64	Read-only	Number of outgoing broadcast packets (64-bit)	-
1.3.6.1.4.1.5875.-800.3.54.5.1.45	ifHighSpeed	Counter64	Read-only	Port rate (64-bit)	-
1.3.6.1.4.1.5875.-800.3.54.5.1.50	ferfRecvGood-PackageOctets	Counter64	Read-only	Count of bytes in received good packets	-
1.3.6.1.4.1.5875.-800.3.54.5.1.51	ferfRecvDiscardedPackageOctets	Counter64	Read-only	Count of bytes in received discarded packets	-
1.3.6.1.4.1.5875.-800.3.54.5.1.52	ferfRecvError-PackageOctets	Counter64	Read-only	Count of bytes in received error packets	-
1.3.6.1.4.1.5875.-800.3.54.5.1.53	ferfSendGood-PackageOctets	Counter64	Read-only	Count of bytes in transmitted good packets	-
1.3.6.1.4.1.5875.-800.3.54.5.1.54	ferfSendDiscardedPackageOctets	Counter64	Read-only	Count of bytes in transmitted discarded packets	-
1.3.6.1.4.1.5875.-800.3.54.5.1.55	ferfSendError-PackageOctets	Counter64	Read-only	Count of bytes in transmitted error packets	-
1.3.6.1.4.1.5875.-800.3.54.5.1.56	ferfRecv64OctetsLenPkts	Counter64	Read-only	Count of received 64-byte packets	-
1.3.6.1.4.1.5875.-800.3.54.5.1.57	ferfRecv65-to127OctetsLenPkts	Counter64	Read-only	Count of received packets of 65 to 127 bytes	-
1.3.6.1.4.1.5875.-800.3.54.5.1.58	ferfRecv128-to255OctetsLenPkts	Counter64	Read-only	Count of received packets of 128 to 255 bytes	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.54.5.1.59	ferfRecv256-to511OctetsLenPkts	Counter64	Read-only	Count of received packets of 256 to 511 bytes	-
1.3.6.1.4.1.5875.-800.3.54.5.1.60	ferfRecv512-to1023OctetsLenPkts	Counter64	Read-only	Count of received packets of 512 to 1023 bytes	-
1.3.6.1.4.1.5875.-800.3.54.5.1.61	ferfRecv1024-to1518OctetsLenPkts	Counter64	Read-only	Count of received packets of 1024 to 1518 bytes	-
1.3.6.1.4.1.5875.-800.3.54.5.1.62	ferfLossSignal-Seconds	Counter64	Read-only	Seconds with loss of signals	-
1.3.6.1.4.1.5875.-800.3.54.5.1.63	ferfErroredSeconds	Counter64	Read-only	Errored seconds	-
1.3.6.1.4.1.5875.-800.3.54.5.1.64	ferfSeverelyErroredSeconds	Counter64	Read-only	Severely errored seconds	-
1.3.6.1.4.1.5875.-800.3.54.5.1.65	ferfUnavailableSeconds	Counter64	Read-only	Unavailable seconds	-
1.3.6.1.4.1.5875.-800.3.54.5.1.66	ferfDetectMonitorDiscardPacketNumber	Counter64	Read-only	Count of detected “monitor discarding packet” events	-
1.3.6.1.4.1.5875.-800.3.54.5.1.67	ferfRecvPause-FlowControl-Frames	Counter64	Read-only	Count of received PAUSE (flow control) frames	-
1.3.6.1.4.1.5875.-800.3.54.5.1.68	ferfSendPause-FlowControl-Frames	Counter64	Read-only	Count of transmitted PAUSE (flow control) frames	-
1.3.6.1.4.1.5875.-800.3.54.5.1.69	ferfChecksumErrors	Counter64	Read-only	Count of checksum errors	-
1.3.6.1.4.1.5875.-800.3.54.5.1.70	ferfFcsFrame-CheckErrors	Counter64	Read-only	Count of FCS frame check errors	-
1.3.6.1.4.1.5875.-800.3.54.5.1.71	ferfExcessive-CollisionStatistics	Counter64	Read-only	Count of excessive collisions	-
1.3.6.1.4.1.5875.-800.3.54.5.1.72	ferfSingleCollisionSendOk-Frames	Counter64	Read-only	Count of frames properly sent after a single collision	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.54.5.1.73	ferfMultipleCollisionsSendOk-Frames	Counter64	Read-only	Count of frames properly sent after several collisions	-
1.3.6.1.4.1.5875.-800.3.54.5.1.74	ferfPortInFlow	Counter64	Read-only	Incoming flow on the port	-
1.3.6.1.4.1.5875.-800.3.54.5.1.75	ferfPortOnu-Flow	Counter64	Read-only	Outgoing flow on the port	-
1.3.6.1.4.1.5875.-800.3.54.5.1.77	fhOnuLanTraf-fInSpeed	Counter64	Read-only	Speed of incoming flow on the port (uplink)	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.-800.3.54.5.1.78	fhOnuLanTraf-fOutSpeed	Counter64	Read-only	Speed of outgoing flow on the port (downlink)	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.-800.3.54.5.1.79	fhOnuLanTraf-fInBwUtil	Integer32	Read-only	Bandwidth utilization for incoming traffic	Unit: 0.01%
1.3.6.1.4.1.5875.-800.3.54.5.1.80	fhOnuLanTraf-fOutBwUtil	Integer32	Read-only	Bandwidth utilization for outgoing traffic	Unit: 0.01%
1.3.6.1.4.1.5875.-800.3.54.5.1.89	fhOnuLanTraf-fInPkts	Counter64	Read-only	Count of incoming packets	-
1.3.6.1.4.1.5875.-800.3.54.5.1.90	fhOnuLanTraf-fOutPkts	Counter64	Read-only	Count of outgoing packets	-

4.6 Multicast Traffic Measurement



Note:

Multicast traffic measurement can be enabled only by configuring multicast services on LAN ports.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.54.6.1	igmpIptvServiceNum	Int	Read-only	Count of IPTV VLAN traffic	Count of ONU LAN ports configured with multicast services based on the configuration on an OLT
1.3.6.1.4.1.5875.-800.3.54.6.2	igmpIptvServiceandPortUpNum	Int	Read-only	Count of online IPTV VLAN traffic (in UP status)	Count of ONU LAN ports configured with multicast services in UP status under an OLT Polling line cards is required for the counting. To relieve the pressure on the equipment, the counting is controlled by a switch and is disabled by default. The parameter “interval” means the interval for polling, with the unit of minute. It is advised to set the interval to 30 minutes. For temporary tests, the interval can be shortened, e. g., to 5 minutes. Command line: Admin(config)# iptv statistics enable interval 30
1.3.6.1.4.1.5875.-800.3.54.6.3	igmpIptvServiceandJoinIgmpNum	Int	Read-only	Count of subscribers of the multicast VLAN traffic	Count of ONU LAN ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
					actually carrying multicast traffic under an OLT Polling line cards is required for the counting. To relieve the pressure on the equipment, the counting is controlled by a switch and is disabled by default. The parameter “interval” means the interval for polling, with the unit of minute. It is advised to set the interval to 30 minutes. For temporary tests, the interval can be shortened, e. g., to 5 minutes. Command line: Admin(config)# iptv statistics enable interval 30

4.7 Traffic Measurement on an OLT's Local End Ports

Diagnose>show card-port mib-perform data slot <slotno> pon <ponno> Traffic can only be measured on PON ports, instead of uplink ports.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.54.7.1.1	ifCardPonIndex	Int	Read-only	PON port index	Refer to Compound Indexes of IfIndex . Index formula for a local-end port: $(\text{IndexType}) \times 268435456 + (\text{ObjectType}) \times 8388608 + (\text{slot}) \times 131072 + (\text{port}) \times 512$ ObjectType = 0 (uplink port) ObjectType = 1 (PON port)
1.3.6.1.4.1.5875.80-0.3.54.7.1.2	cardifDescr	String	Read-only	Port description	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.3	cardifType	Int	Read-only	Port Type	other (1): PON port ethernetCsmacd (6): for all Ethernet-like interfaces, regardless of speed, as per RFC 3635 250: GPON
1.3.6.1.4.1.5875.80-0.3.54.7.1.4	cardifMtu	Int	Read-only	IfMtu	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.5	cardifSpeed	Int	Read-only	Port rate	The value 4294967295 means the measured port rate crosses the upper limit of the value range for this node. It is advisable to use a 64-byte value to represent the port rate. Unit: bps
1.3.6.1.4.1.5875.80-0.3.54.7.1.7	cardifAdminStatus	Int	Read-only	Port management status	1: up 2: down
1.3.6.1.4.1.5875.80-0.3.54.7.1.8	cardifOperStatus	Int	Read-only	Port operation status	1: enable 2: disable
1.3.6.1.4.1.5875.80-0.3.54.7.1.10	cardifInOctets	Int	Read-only	Number of incoming bytes	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.11	cardifInUcastPkts	Int	Read-only	Number of incoming unicast packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.12	cardifInNUcastPkts	Int	Read-only	Number of incoming non-unicast packets	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.54.7.1.13	cardifInDiscards	Int	Read-only	Number of incoming lost packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.14	cardifInErrors	Int	Read-only	Number of incoming error packets	Frames with CRC errors
1.3.6.1.4.1.5875.80-0.3.54.7.1.15	cardifInUnknownProtos	Int	Read-only	Number of incoming unknown packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.16	cardifOutOctets	Int	Read-only	Number of outgoing bytes	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.17	cardifOutUcastPkts	Int	Read-only	Number of outgoing unicast packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.18	cardifOutNUcastPkts	Int	Read-only	Number of outgoing non-unicast packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.19	cardifOutDiscards	Int	Read-only	Number of outgoing lost packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.20	cardifOutErrors	Int	Read-only	Number of outgoing error packets	Frames with CRC errors
1.3.6.1.4.1.5875.80-0.3.54.7.1.21	cardinflowsBIP	Int	Read-only	BIP8 for incoming flow	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.22	cardoutflowsBIP	Int	Read-only	BIP8 for outgoing flow	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.32	cardifOutMulticastPkts	Int	Read-only	Number of incoming multicast packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.33	cardifInBroadcastPkts	Int	Read-only	Number of incoming broadcast packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.34	cardifInMulticastPkts	Int	Read-only	Number of outgoing multicast packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.35	cardifOutBroadcastPkts	Int	Read-only	Number of outgoing broadcast packets	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.54.7.1.36	cardifHCInOctets	Counter64	Read-only	Number of incoming bytes (64-bit)	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.37	cardifHCInU-castPkts	Counter64	Read-only	Number of incoming unicast packets (64-bit)	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.38	cardifHCInMulti-castPkts	Counter64	Read-only	Number of incoming multicast packets (64-bit)	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.39	cardifHCInBroad-castPkts	Counter64	Read-only	Number of incoming broadcast packets (64-bit)	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.40	cardifHCOctets	Counter64	Read-only	Number of outgoing bytes (64-bit)	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.41	cardifHCOU-castPkts	Counter64	Read-only	Number of outgoing unicast packets (64-bit)	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.42	cardifHCOU-castPkts	Counter64	Read-only	Number of outgoing multicast packets (64-bit)	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.43	cardifHCOU-castPkts	Counter64	Read-only	Number of outgoing broadcast packets (64-bit)	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.45	cardifHighSpeed	Counter64	Read-only	Port rate (64-bit)	GPOA: 2500 Mbps (2.5G) EX8A: 11000 Mbps (11G) GM8A: 12500 Mbps (12.5G) GX8A: 10000 Mbps (10G) EPOA: 1250 Mbps (1.25G)
1.3.6.1.4.1.5875.80-0.3.54.7.1.50	cardferfRecv-GoodPackageOctets	Counter64	Read-only	Count of bytes in received good packets	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.54.7.1.51	cardferfRecvDiscardedPackageOctets	Counter64	Read-only	Count of bytes in received discarded packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.52	cardferfRecvErrorPackageOctets	Counter64	Read-only	Count of bytes in received error packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.53	cardferfSendGoodPackageOctets	Counter64	Read-only	Count of bytes in transmitted good packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.54	cardferfSendDiscardedPackageOctets	Counter64	Read-only	Count of bytes in transmitted discarded packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.55	cardferfSendErrorPackageOctets	Counter64	Read-only	Count of bytes in transmitted error packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.56	cardferfRecv64OctetsLenPkts	Counter64	Read-only	Count of received 64-byte packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.57	cardferfRecv65-to127OctetsLenPkts	Counter64	Read-only	Count of received packets of 65 to 127 bytes	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.58	cardferfRecv128-to255OctetsLenPkts	Counter64	Read-only	Count of received packets of 128 to 255 bytes	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.59	cardferfRecv256-to511OctetsLenPkts	Counter64	Read-only	Count of received packets of 256 to 511 bytes	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.60	cardferfRecv512-to1023OctetsLenPkts	Counter64	Read-only	Count of received packets of 512 to 1023 bytes	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.61	cardferfRecv1024-to1518OctetsLenPkts	Counter64	Read-only	Count of received packets of 1024 to 1518 bytes	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.54.7.1.62	cardferfLoss-SignalSeconds	Counter64	Read-only	Seconds with loss of signals	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.63	cardferfErrored-Seconds	Counter64	Read-only	Errored seconds	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.64	cardferfSeverelyErroredSeconds	Counter64	Read-only	Severely errored seconds	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.65	cardferfUnavailableSeconds	Counter64	Read-only	Unavailable seconds	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.66	cardferfDetect-MonitorDiscard-PacketNumber	Counter64	Read-only	Count of detected “monitor discarding packet” events	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.67	cardferfRecvPauseFlowControl-Frames	Counter64	Read-only	Count of received PAUSE (flow control) frames	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.68	cardferfSendPauseFlowControl-Frames	Counter64	Read-only	Count of transmitted PAUSE (flow control) frames	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.69	cardferfChecksumErrors	Counter64	Read-only	Count of checksum errors	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.70	cardferfFcsFrameCheckErrors	Counter64	Read-only	Count of FCS frame check errors	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.71	cardferfExcessiveCollisionStatistics	Counter64	Read-only	Count of excessive collisions	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.72	cardferfSingleCollisionSendOk-Frames	Counter64	Read-only	Count of frames correctly sent after a single collision	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.73	cardferfMultipleCollisionsSendOkFrames	Counter64	Read-only	Count of frames correctly sent after several collisions	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.74	cardferfPortIn-Flow	Counter64	Read-only	Incoming flow on the port	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.54.7.1.75	cardferfPortOnu-Flow	Counter64	Read-only	Outgoing flow on the port	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.77	fhOltPortTraffIn-Speed	Counter64	Read-only	Speed of incoming flow on the port	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.80-0.3.54.7.1.78	fhOltPortTraffOutSpeed	Counter64	Read-only	Speed of outgoing flow on the port	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.80-0.3.54.7.1.79	fhOltPortTraffInBwUtil	Integer32	Read-only	Bandwidth utilization for incoming traffic	Unit: 0.01% For example, 10000 means 100%.
1.3.6.1.4.1.5875.80-0.3.54.7.1.80	fhOltPortTraffOutBwUtil	Integer32	Read-only	Bandwidth utilization for outgoing traffic	Unit: 0.01% For example, 10000 means 100%.
1.3.6.1.4.1.5875.80-0.3.54.7.1.87	fhOltPortTraffInRemainBwReal	Counter64	Read-only	Real-time remaining bandwidth for incoming traffic	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.80-0.3.54.7.1.88	fhOltPortTraffOutRemainBwReal	Counter64	Read-only	Real-time remaining bandwidth for outgoing traffic	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.80-0.3.54.7.1.89	fhOltPortTraffInPkts	Counter64	Read-only	Count of incoming packets	-
1.3.6.1.4.1.5875.80-0.3.54.7.1.90	fhOltPortTraffOutPkts	Counter64	Read-only	Count of outgoing packets	-

4.8 Querying Multicast Downstream Speed

Querying the Multicast Downstream Speed Through the snmpget Operation

Admin(config-igmp)# show igmp flow-statistic program 225.1.1.1 vlan 2000

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.54.6.4.1.1	igmpVlanSpeed-GetVlanIndex	Int	Read-only	Multicast VLAN	Index
1.3.6.1.4.1.5875.80-0.3.54.6.4.1.2	igmpVlanSpeedGetIPModeIndex	Int	Read-only	IP address mode	Index 1: IPv4 2: IPv6
1.3.6.1.4.1.5875.80-0.3.54.6.4.1.3	igmpVlanSpeedGetIPAddrIndex	String	Read-only	IP address	Index IPv4 address: 4 bytes IPv6 address: 16 bytes
1.3.6.1.4.1.5875.80-0.3.54.6.4.1.4	igmpVlanSpeedGetDownstreamSpeed	Int	Read-only	Downstream speed	Unit: Mbit/s

Querying the Multicast Downstream Speed Through the snmpwalk Operation

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.54.6.5.1.1	igmpVlanSpeed-WalkIndex	Int	Read-only	Number	Serial number (index)
1.3.6.1.4.1.5875.80-0.3.54.6.5.1.2	igmpVlanSpeed-WalkVlan	Int	Read-only	Multicast VLAN	-
1.3.6.1.4.1.5875.80-0.3.54.6.5.1.3	igmpVlanSpeed-WalkIPMode	Int	Read-only	IP address mode	1: IPv4 2: IPv6
1.3.6.1.4.1.5875.80-0.3.54.6.5.1.4	igmpVlanSpeed-WalkIPAddr	String	Read-only	IP address	IPv4 address: 4 bytes IPv6 address: 16 bytes
1.3.6.1.4.1.5875.80-0.3.54.6.5.1.5	igmpVlanSpeed-WalkDownstream-Speed	Int	Read-only	Downstream speed	Unit: Mbit/s

4.9 PON Channels

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.54.12.1.1	ponPortMibPerformObjectIndex	Integer32	Read-only	PON port index	Index = SLOT × 33554432 + PON × 524288
1.3.6.1.4.1.5875.800.-3.54.12.1.3	ponPortMibPerformChannelIndex	Integer32	Read-only	Channel (index)	1: 1G channel 2: 10G channel
1.3.6.1.4.1.5875.800.-3.54.12.1.4	ponPortMibPerformIfDescr	OCTET STRING	Read-only	Port description	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.54.12.1.36	ponPortMibPerformIfHCInOctets	Counter64	Read-only	Number of incoming bytes (64-bit)	-
1.3.6.1.4.1.5875.800.-3.54.12.1.40	ponPortMibPerformIfHCOctets	Counter64	Read-only	Number of outgoing bytes (64-bit)	-
1.3.6.1.4.1.5875.800.-3.54.12.1.77	ponPortMibPerformnodeInSpeed	Counter64	Read-only	Speed of incoming flow on the port	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.800.-3.54.12.1.78	ponPortMibPerformnodeOutSpeed	Counter64	Read-only	Speed of outgoing flow on the port	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.800.-3.54.12.1.79	ponPortMibChannelTXOpticalPower	Integer32	Read-only	Tx optical power	Returned value divided by 100 (unit: dBm)
1.3.6.1.4.1.5875.800.-3.54.12.1.82	ponPortMibChannelBiasCurrent	Integer32	Read-only	Bias current	Returned value divided by 100 (unit: mA)
1.3.6.1.4.1.5875.800.-3.54.12.1.83	ponPortMibChannelNumberOfONU	Integer32	Read-only	Number of ONUs (subscribers)	Count of online and offline subscribers

4.10 Real-time Traffic Measurement on PON Channels



Caution:

To use the walk operation of this node, you need to upgrade all the line cards in the subrack to the required versions first. Otherwise, you are not allowed to use this function.

Before the traffic measurement, you need to enable it by using the command line below:

```
system special-control index 62 value 1
show system special-control
```

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-54.14.1.1	ponPortMibRealPerformObjectIndex	Integer32	Read-only	PON port index	Index = SLOT × 33554432 + PON × 524288
1.3.6.1.4.1.5875.800.3.-54.14.1.3	ponPortMibRealPerformChannelIndex	Integer32	Read-only	Channel (index)	1: 1G channel 2: 10G channel
1.3.6.1.4.1.5875.800.3.-54.14.1.4	ponPortMibRealPerformIfDescr	OCTET STRING	Read-only	Port description	-
1.3.6.1.4.1.5875.800.3.-54.14.1.20	ponPortMibRealPerformInErrors	Counter64	Read-only	Number of incoming error packets	-
1.3.6.1.4.1.5875.800.3.-54.14.1.36	ponPortMibRealPerformIfHCInOctets	Counter64	Read-only	Number of incoming bytes (64-bit)	-
1.3.6.1.4.1.5875.800.3.-54.14.1.40	ponPortMibRealPerformIfHCOctets	Counter64	Read-only	Number of outgoing bytes (64-bit)	-

4.11 Real-time Traffic Measurement on Uplink Ports



Note:

Before the traffic measurement, you need to enable it by using the command line below:

```
system special-control index 62 value 1
show system special-control
```

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-54.15.1.1	uplinkPortMibRealPerformObjectIndex	Integer32	Read-only	Uplink port index	Index = SLOT × 33554432 + PORT × 524288
1.3.6.1.4.1.5875.800.3.-54.15.1.4	uplinkPortMibRealPerformIfDescr	OCTET STRING	Read-only	Port description	-
1.3.6.1.4.1.5875.800.3.-54.15.1.20	uplinkPortMibRealPerformInErrors	Counter64	Read-only	Number of incoming error packets	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-54.15.1.36	uplinkPortMibRealPer-formIfHCInOctets	Counter64	Read-only	Number of incoming bytes (64-bit)	-
1.3.6.1.4.1.5875.800.3.-54.15.1.40	uplinkPortMibRealPer-formIfHCOutOctets	Counter64	Read-only	Number of outgoing bytes (64-bit)	-

4.12 Traffic Record

This section introduces OIDs and related information of the nodes under the traffic record module.

4.12.1 Record of Traffic on PON Channels

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.54.20.2.1.1	fhOltPonChTraffRec-PortId	Integer32	Read-only	Compound index of a PON port	SLOT × 33554432 + PON × 524288
1.3.6.1.4.1.5875.800.-3.54.20.2.1.2	fhOltPonChTraffRec-ChId	Integer32	Read-only	Channel ID (index)	1: 1G channel 2: 10G channel
1.3.6.1.4.1.5875.800.-3.54.20.2.1.10	fhOltPonChTraffRecInMaxSpeed	Counter64	Read-only	Maximum speed of the incoming traffic	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.800.-3.54.20.2.1.11	fhOltPonChTraffRecOutMaxSpeed	Counter64	Read-only	Maximum speed of outgoing traffic	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.800.-3.54.20.2.1.50	fhOltPonChTraffRecReset	INTEGER	Read-write	Resetting traffic record	1: reset

4.12.2 Record of Traffic on an OLT's Ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.54.20.3.1.1	fhOltUplinkTrafficRecPortId	Integer32	Read-only	Compound index of a PON port / an uplink port	$\text{SLOT} \times 33554432 + \text{PORT} \times 524288$
1.3.6.1.4.1.5875.800.-3.54.20.3.1.10	fhOltUplinkTrafficRecInMaxSpeed	Counter64	Read-only	Maximum speed of the incoming traffic	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.800.-3.54.20.3.1.11	fhOltUplinkTrafficRecOutMaxSpeed	Counter64	Read-only	Maximum speed of outgoing traffic	Unit: 0.01 Mbps
1.3.6.1.4.1.5875.800.-3.54.20.3.1.50	fhOltUplinkTrafficRecReset	INTEGER	Read-write	Resetting traffic record	1: reset

5 **System Configuration Management**

This chapter introduces OIDs and related information of the nodes under the system configuration management module.

5.1 PON Port Authentication Mode

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.14.1.1.1	ponAuthModeIndex	Int	Read-only	PON port index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.8-00.3.14.1.1.2	authMode	Int	Read-write	Authentication mode	0: physical ID authorization 1: physical ID + physical password authentication 2: physical password authentication 3: logical ID + logical password authentication 4: physical ID / logical ID (with password) hybrid authentication 5: no authentication 6: logical ID authentication (without password) 7: physical ID / logical ID (without password) hybrid authentication 9: physical ID / physical password hybrid authentication

5.2 Card Authorization

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.15.1.1.1	cardWarrentSlotIndex	Int	Read-only	Slot number (index)	-
1.3.6.1.4.1.5875.8-00.3.15.1.1.2	warrentCardType	Int	Read-write	Card type	Refer to Card Type Codes .

5.3 ONU Physical Authentication White List



Note:

It is recommended to use this function only for creating the white list. For collection operations, you can use the ONU information table.

About the index: When a white list is being created, the index 0xffffffff is delivered to it. After it is created, the actual ID will be assigned to it.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.1.4.1.1	macListId	Int	Read-only	Physical ID (white list ID)	-
1.3.6.1.4.1.5875.-800.3.1.4.1.2	slotNoForMacList	Int	Read-write	Slot number	-
1.3.6.1.4.1.5875.-800.3.1.4.1.3	ponNoForMacList	Int	Read-write	PON port number	-
1.3.6.1.4.1.5875.-800.3.1.4.1.4	onuNoForMacList	Int	Read-write	ONU number	The value 65535 means that the ONU number will not be specified; instead, the OLT will assign the ONU ID automatically.
1.3.6.1.4.1.5875.-800.3.1.4.1.5	onuTypeForMacList	Int	Read-write	ONU type	Refer to ONU Types .

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.- 800.3.1.4.1.6	macForMacList	OCTET STRING	Read-write	MAC address	Maximum length: 12 bytes For a MAC address, characters 0 to 9 and a to f are supported. For a physical SN, the first four bytes are an ASCII character string, and the last eight bytes can be characters 0 to 9 and a to f. If it cannot be decided whether a MAC address or a physical SN is used, the first four bytes need not be checked, and the last eight bytes can be characters 0 to 9 and a to f.
1.3.6.1.4.1.5875.- 800.3.1.4.1.7	passwordForMacList	OCTET STRING	Read-write	Password	Maximum length: 10 bytes. Enter "" if no password is used.
1.3.6.1.4.1.5875.- 800.3.1.4.1.8	actionForMacList	Int	Read-write	Operation	4: create 6: delete 7: modify

5.4 ONU Logical Authentication White List



Note:

It is recommended to use this function only for creating the white list. For collection operations, you can use the ONU information table.

When a white list is being created, the index 0xffffffff is delivered to it. After it is created, the actual ID will be assigned to it.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80- 0.3.1.5.1.1	snListId	Int	Read-only	SN white list ID	-
1.3.6.1.4.1.5875.80- 0.3.1.5.1.2	slotNoForSnList	Int	Read-write	Slot number	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.1.5.1.3	ponNoForSnList	Int	Read-write	PON port number	-
1.3.6.1.4.1.5875.80-0.3.1.5.1.4	onuNoForSnList	Int	Read-write	ONU number	-
1.3.6.1.4.1.5875.80-0.3.1.5.1.5	onuTypeForSn-List	Int	Read-write	ONU type	Refer to ONU Types .
1.3.6.1.4.1.5875.80-0.3.1.5.1.6	snForSnList	OCTET STRING	Read-write	SN	Maximum length: 24 bytes
1.3.6.1.4.1.5875.80-0.3.1.5.1.7	passwordForSn-List	OCTET STRING	Read-write	Password	Maximum length: 12 bytes. Enter "" if no password is used.
1.3.6.1.4.1.5875.80-0.3.1.5.1.8	actionForSnList	Int	Read-write	Operation	4: create 6: delete 7: modify

5.5 Querying the ONU Physical Authentication White List (Supporting snmpget Only)



Note:

The MAC address of the EPON ONU is 54 4b 71 00 1e a8, and the entered OID is 84.75.113.0.30.168. The hexadecimal digits 0x54 are converted into the decimal digits 84, and so on.

The MAC address of the GPON ONU is FTTH00000001, 12 characters in total, and the entered OID is 70.84.84.72.48.48.48.48.48.49. The character F corresponds to the ASCII code 70, and so on.

Querying MAC Addresses

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.21.1.1.1	onuMacString	OCTET STRING	Read-only	MAC address (index)	-
1.3.6.1.4.1.5875.8-00.3.21.1.1.2	onuAuthID	Int	Read-only	ONU number	-
1.3.6.1.4.1.5875.8-00.3.21.1.1.3	onuWhiteListID	Int	Read-only	Physical white list ID	-
1.3.6.1.4.1.5875.8-00.3.21.1.1.4	onuMacSlot	Int	Read-only	Slot number	-
1.3.6.1.4.1.5875.8-00.3.21.1.1.5	onuMacPon	Int	Read-only	PON port number	-

ONU Type Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.21.1.1.6	fhOltOnuPhyWhiteQryIsCSProfileType	Integer32	Read-only	Whether it is the capability set profile type	0: No 1: Yes
1.3.6.1.4.1.5875.8-00.3.21.1.1.7	fhOltOnuPhyWhiteQryType	Integer32	Read-only	ONU type code. Both profile type and non-profile type are supported.	-
1.3.6.1.4.1.5875.8-00.3.21.1.1.8	fhOltOnuPhyWhiteQryTypeName	OCTET STRING	Read-only	ONU type name. Both profile type and non-profile type are supported.	-

5.6 Querying the ONU Logical Authentication White List (Supporting snmpget Only)



Note:

The SN of the ONU is 00000000000000000000, nineteen 0s in total.

Then the OID to be entered is

48.48.48.48.48.48.48.48.48.48.48.48.48.48.48.48.48. The character 0 in the ONU SN is converted to the decimal digits 48 in the OID, so are the other characters.

Querying SNs

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.22.1.1.1	onuSNString	OCTET STRING	Read-only	SN (index)	-
1.3.6.1.4.1.5875.8-00.3.22.1.1.2	onuSNAuthID	Int	Read-only	ONU number	-
1.3.6.1.4.1.5875.8-00.3.22.1.1.3	onuSNWhiteListID	Int	Read-only	ID of the logical white list	-
1.3.6.1.4.1.5875.8-00.3.22.1.1.4	onuSNSlot	Int	Read-only	Slot number	-
1.3.6.1.4.1.5875.8-00.3.22.1.1.5	onuSNPon	Int	Read-only	PON port number	-

ONU Type Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.22.1.1.6	fhOltOnuLogicWhiteQryIsCSProfile-Type	Integer32	Read-only	Whether it is the capability set profile type	0: No 1: Yes
1.3.6.1.4.1.5875.-800.3.22.1.1.7	fhOltOnuLogicWhiteQryType	Integer32	Read-only	ONU type code. Both profile type and non-profile type are supported.	-
1.3.6.1.4.1.5875.-800.3.22.1.1.8	fhOltOnuLogicWhiteQryTypeName	OCTET STRING	Read-only	ONU type name. Both profile type and non-profile type are supported.	-

5.7 Local VLAN Configuration



Note:

Local VLAN configurations are applied to both data services and voice services.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.16.1.1.1	vlanConfigId	Int	Read-only	VLAN configuration ID (index)	-
1.3.6.1.4.1.5875.80-0.3.16.1.1.2	serviceName	OCTET STRING	Read-write	Service Name	Maximum length: 23 bytes. Numerals, letters and underscore are supported.
1.3.6.1.4.1.5875.80-0.3.16.1.1.3	beginVlanId	Int	Read-write	Outer starting VLAN ID	-
1.3.6.1.4.1.5875.80-0.3.16.1.1.4	endVlanId	Int	Read-write	Outer ending VLAN ID	-
1.3.6.1.4.1.5875.80-0.3.16.1.1.5	upLinkPort	Int	Read-write	Uplink port number or Trunk group number (reserved)	Enter 0.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.16.1.1.6	tagStatus	Int	Read-write	Tag attribute (reserved)	Enter 0.
1.3.6.1.4.1.5875.80-0.3.16.1.1.7	globalVlanAction	Int	Read-write	Operation	4: create 6: delete 7: modify
1.3.6.1.4.1.5875.80-0.3.16.2	nextGlobalVlanId	Int	Read-only	Available VLAN configuration ID	Leaf node

5.8 OLT Uplink Port Trunk

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.18.4.1.1.1	fhOltTrunkCfg-GroupId	Integer32	Read-only	Trunk group number	Index (1-16)
1.3.6.1.4.1.5875.800.-3.18.4.1.1.2	fhOltTrunkCfg-MasterPort	Integer32	Read-create	Master port of the Trunk group	Compound index of the object = SLOT × 33554432 + PON × 524288

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.- 3.18.4.1.1.3	fhOltTrunkCfg- MemberPort	OCTET STRING	Read-create	Member port of the Trunk group	A hexadecimal string, with every four bytes, in network byte orders, representing the compound index of a member port. The calculation formula is like this: $\text{compound index of a port} = \text{SLOT} \times 33554432 + \text{PORT} \times 524288$ Example: The expression 0x12 0x08 0x00 0x00 0x26 0x08 0x00 0x00 represents two member ports. The expression 0x12 0x08 0x00 0x00 is converted to the host SN 302514176, denoting port 9/1 ($9 \times 33554432 + 1 \times 524288 = 302514176$). The expression 0x26 0x08 0x00 0x00 is converted to the host SN 638058496, denoting port 19/1 ($19 \times 33554432 + 1 \times 524288 = 638058496$). This node can be modified separately.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.18.1.1.4	fhOltTrunkCfg-WorkMode	INTEGER	Read-create	Mode	0: Manual Trunking 1: Static LACP Default: 1 If the Trunk group is not bound with any ports, its working mode can be modified separately; otherwise, the modification is not allowed.
1.3.6.1.4.1.5875.800.-3.18.4.1.1.20	fhOltTrunkCfgAction	INTEGER	Read-create	Operation	4: create 6: delete
1.3.6.1.4.1.5875.800.-3.18.2	nextTrunkConfigId	Int	Read-only	Available link group ID	Leaf node
1.3.6.1.4.1.5875.800.-3.18.4.2.1.2	fhOltTrunkIfLoadBalModel	INTEGER	Read-write	Load balancing configuration for a Trunk group	1: based on source MAC address (SA MAC) 2: based on destination MAC address (DA MAC) 3: based on source and destination MAC addresses (SA and DA MAC) 4: based on source IP address (SA IP) 5: based on destination IP addresses (DA IP) 6: based on source and destination IP addresses (SA and DA IP)
1.3.6.1.4.1.5875.800.-3.18.4.2.1.3	fhOltTrunkIfLacpMaxMemberCount	Integer32	Read-write	Maximum number of member ports	0-20

5.8.1 Trunk Status (Supporting snmpwalk Only)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-18.5.1.1.1	fhOltAggregation-StatusGroupId	Integer32	Read-only	Trunk group number	Index (1-16)
1.3.6.1.4.1.5875.800.3.-18.5.1.1.2	fhOltAggregation-StatusSystemPriority	Integer32	Read-only	System priority	0-65534
1.3.6.1.4.1.5875.800.3.-18.5.1.1.3	fhOltAggregation-StatusSystemID	OCTET STRING	Read-only	System ID	-
1.3.6.1.4.1.5875.800.3.-18.5.1.1.4	fhOltAggregation-StatusMode	Integer32	Read-only	Trunk mode	0: Manual Trunking 1: Static LACP

5.8.2 Ports in Trunk Status (Supporting snmpwalk Only)



Note:

A dual-upstream application involves active and standby upstream links. If the active upstream link has ports less than the minimum number of ports required for a Trunk group, the service will be switched to the standby upstream link.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.18.5.2.1.1	fhOltAggregationStatusPortGroupId	Integer32	Read-only	Trunk group number	Index: 1-16
1.3.6.1.4.1.5875.800.-3.18.5.2.1.2	fhOltAggregationStatusPortSlotNo	Integer32	Read-only	Uplink slot number	Index 2
1.3.6.1.4.1.5875.800.-3.18.5.2.1.3	fhOltAggregationStatusPortPortNo	Integer32	Read-only	Uplink port number	Index 3

5.8.3 Minimum Number of Ports in a Trunk Group

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.18.6.1	fhOltMinTrunkActivateNumber	Integer32	Read-write	Minimum number of active ports in a Trunk group	Leaf node Range: 0-12. The value 0 means that this function is not supported.

5.9 ONU Management VLAN Configuration



Note:

It is applicable to the AN5006-20, AN5006-15, AN5006-16, and FTTB ONUs.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.1-01.15.1.1	onuManageVlanOnuIndex	Int	Read-only	ONU index	Index. Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.1-7.1.1.1	manageVlanIndex	Int	Read-only	Management VLAN index	Index
1.3.6.1.4.1.5875.800.3.1-7.1.1.2	onuMac	String	Read-only	Physical authentication identifier (MAC)	-
1.3.6.1.4.1.5875.800.3.1-7.1.1.4	manageVlanName	OCTET STRING	Read-only	Management VLAN name	Maximum length: 16 bytes. Numerals, letters and underscore are supported.
1.3.6.1.4.1.5875.800.3.1-7.1.1.5	portNo	Int	Read-only	Port number	-
1.3.6.1.4.1.5875.800.3.1-7.1.1.6	tagStatus1	Int	Read-only	Tag attribute	-
1.3.6.1.4.1.5875.800.3.1-7.1.1.7	manageSvlan	Int	Read-only	Management SVLAN	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.1-7.1.1.8	manageSvlanCos	Int	Read-only	Management SVLAN priority	-
1.3.6.1.4.1.5875.800.3.1-7.1.1.9	manageCvlan	Int	Read-only	Management CVLAN	-
1.3.6.1.4.1.5875.800.3.1-7.1.1.10	manageCvlan-Cos	Int	Read-only	Management CVLAN priority	-
1.3.6.1.4.1.5875.800.3.1-7.1.1.11	onuIp	IP ADDRESS	Read-only	IP address	-
1.3.6.1.4.1.5875.800.3.1-7.1.1.12	onuMask	IP ADDRESS	Read-only	Mask	-
1.3.6.1.4.1.5875.800.3.1-7.1.1.13	onuGateway	IP ADDRESS	Read-only	Gateway	-
1.3.6.1.4.1.5875.800.3.1-7.1.1.14	onuManageVlanAction	Int	Read-only	Operation	-

5.10 Enabling Ports on Devices

PON Ports of an OLT

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.101.16.1.1	oltPonAuthPonIndex	Int	Read-only	PON port index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.8-00.3.2.3.1.1	oltPonEnable	Int	Read-write	Port enable/disable status	1: enable 0: disable

Data Ports of an ONU

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.101.5.1.1	portIndex	Int	Read-only	Data port index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.8-00.3.2.2.1.2	dataPortEnable	Int	Read-write	Port enable/disable status	1: enable 0: disable The ONU needs to be online.

Voice Ports of an ONU

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.101.4.1.1	potsIndex	Int	Read-only	Voice port index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.8-00.3.2.1.1.2	potsPortEnable	Int	Read-write	Port enable/disable status (activating voice ports of the ONU)	1: enable 0: disable

5.11 Saving Current Configuration to the Flash

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.20.1	save2Flash	Int	Read-write	Flash operation	Leaf node with the index 0 1: writing the configuration data to the Flash

5.12 SNMP Community

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.23.4.1.1	snmpCommunityIndex	Int	Read-only	Community index	-
1.3.6.1.4.1.5875.800-3.23.4.1.2	snmpCommunity	OCTET STRING	Read-only	SNMP community	Maximum length: 256 bytes
1.3.6.1.4.1.5875.800-3.23.4.1.3	snmpCommunity-Permission	Int	Read-only	SNMP community permission	1: ro (read-only) 2: rw (read-write)

5.13 SNMP Trap Information

About the index: When an SNMP Trap information table is being created, the index 0xffffffff is delivered to it. After it is created, the actual ID will be assigned to it.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.23.5.1.1	snmpTrapv6Index	Integer32	Not-accessible	Index of the Trap table	Index: 1-10
1.3.6.1.4.1.5875.8-00.3.23.5.1.2	snmpTrapIpv6	OCTET STRING	Read-create	Address of the SNMP peer, receiver of the SNMP Trap message	-
1.3.6.1.4.1.5875.8-00.3.23.5.1.3	snmpTrapv6Port	Integer32	Read-create	Number of the port sending the SNMP Trap message	Range: 0-65535; default: 162
1.3.6.1.4.1.5875.8-00.3.23.5.1.4	snmpTrapv6Version	INTEGER	Read-create	SNMP version information	1: v1 2: v2c 3: v3
1.3.6.1.4.1.5875.8-00.3.23.5.1.6	snmpTrapv6Community	OCTET STRING	Read-create	Security name	Maximum length: 32 bytes

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.23.5.1.7	snmpTrapv6Security	Integer32	Read-create	Security level	0: compatible with SNMPv1 and SNMPv2C 1: noauth (no authorization and no encryption) 2: authentication (authentication without encryption) 3: privacy (authorization and encryption)
1.3.6.1.4.1.5875.8-00.3.23.5.1.20	snmpTrapv6Action	INTEGER	Read-create	Operation	4: set 6: delete 7: modify

Retrieving Trap Table Indexes According to IP Addresses (for Deletion or Modification Operations)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.23.9.1.1	fhOltSnmptTrap-TargetFindIP	OCTET STRING	Not-accessible	Target IP address	The IP address is expressed like this: length of the ASCII code converted from the IP address + ASCII code converted from the IP address For example, the IPv4 address 10.170.160.123 is converted into 14.49.48.46.49.55.4-8.46.49.54.48.46.49-.50.51. The IPv6 address 2002::1 is converted into 7.50.48.48.50.58.58-.49.
1.3.6.1.4.1.5875.8-00.3.23.9.1.2	fhOltSnmptTrap-TargetFindIndex	Integer32	Read-only	Index of the Trap table	1-10

Modifying Trap Report Format

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.23.5.1.1	snmpTrapv6Index	Integer32	Not-accessible	Index of the Trap table	Index: 1-10
1.3.6.1.4.1.5875.8-00.3.23.5.1.5	snmpTrapReportv6Version	OCTET STRING	Read-create	Trap report version	0: privFormat 1: stdFormat

5.14 SNMP Extension Community

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-.3.23.6.1.1	snmpExCommunityIndex	Int	Read-only	Community index	1-10
1.3.6.1.4.1.5875.800-.3.23.6.1.2	snmpExCommunity	String	Read-only	SNMP community	Maximum length: 256 bytes
1.3.6.1.4.1.5875.800-.3.23.6.1.3	snmpExCommunityPermission	Int	Read-only	SNMP community permission	1: ro (read-only) 2: rw (read-write)

5.15 Adding VLAN to Ports

Adding VLAN to Ports (1)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-.3.16.3.1.1	vlanId	Int	Read-only	VLAN configuration ID (index)	-
1.3.6.1.4.1.5875.800-.3.16.3.1.2	upLinkPortNo	Int	Read-only	Uplink port or Trunk group number (index)	Refer to Logical Uplink Ports of the Equipment .
1.3.6.1.4.1.5875.800-.3.16.3.1.3	vlanType	Int	Read-only	VLAN type	0: common VLAN 1: management VLAN
1.3.6.1.4.1.5875.800-.3.16.3.1.4	vlanTag	Int	Read-write	Tag attribute	0: untag 1: tag
1.3.6.1.4.1.5875.800-.3.16.3.1.5	globalVlanAttachAction	Int	Read-write	Operation	4: create 6: delete

Adding VLAN to Ports (2)

The command “Admin(config)# mib-vlan allslot-getting switch [enable|disable]” can be used to control whether to display all the slots. The slots are not displayed by default.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.82.7.1.1	fhOltVSVlanInterfaceCfgVSID	Integer32	Read-only	Virtual slice ID	Index: 0-7
1.3.6.1.4.1.5875.8-00.3.82.7.1.2	fhOltVSVlanInterfaceCfgVlanId	Integer32	Read-only	VLAN ID	Index: 1-4095
1.3.6.1.4.1.5875.8-00.3.82.7.1.3	fhOltVSVlanInterfaceCfgPortType	Integer32	Read-only	Port type	Index 0: common port 1: Trunk group ID 2: all slots
1.3.6.1.4.1.5875.8-00.3.82.7.1.4	fhOltVSVlanInterfaceCfgSlotNo	Integer32	Read-only	Slot number	Index When the port type is 0, the value range is 1 to 19. When the port type is 1, the value denotes Trunk ID in the range of 1 to 16. When the port type is 2, the value is 0.
1.3.6.1.4.1.5875.8-00.3.82.7.1.5	fhOltVlanInterfaceCfgPortNo	Integer32	Read-only	Port number	Index When the port type is 0, the value range is 1 to 48. When the port type is 1 or 2, the value is 0.
1.3.6.1.4.1.5875.8-00.3.82.7.1.6	fhOltVlanInterfaceCfgPortAttribute	INTEGER	Read-create	Tag attribute	0: untag 1: tag
1.3.6.1.4.1.5875.8-00.3.82.7.1.20	fhOltVlanInterfaceCfgAction	INTEGER	Read-create	Operation	4: create 6: delete
1.3.6.1.4.1.5875.8-00.3.82.7.1.21	fhOltVlanInterfaceCfgVlanType	Integer32	Read-only	VLAN type	0: common VLAN 1: management VLAN

5.16 OLT Management VLAN

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.23.7.1.1	manageIpv4Index	Int	Read-only	Management VLAN index	-
1.3.6.1.4.1.5875.8-00.3.23.7.1.2	manageIpVlan-Name	String	Read-only	Management VLAN name	-
1.3.6.1.4.1.5875.8-00.3.23.7.1.3	manageIpvlanID	Int	Read-only	VLAN ID	-
1.3.6.1.4.1.5875.8-00.3.23.7.1.4	manageIpv4	ipAddress	Read-only	Management IP address (IPv4)	-
1.3.6.1.4.1.5875.8-00.3.23.7.1.5	manageIpv4Mask	Int	Read-only	Mask	-
1.3.6.1.4.1.5875.8-00.3.23.7.1.6	manageIpv4Gate-Way	ipAddress	Read-only	Gateway (IPv4 address)	-
1.3.6.1.4.1.5875.8-00.3.23.7.1.8	manageMacAddr	String	Read-only	MAC address	-
1.3.6.1.4.1.5875.8-00.3.23.7.1.9	manageVlanType	Int	Read-only	Management VLAN type	0: single-tagged management VLAN (802.1Q manage VLAN) 1: dual-tagged management VLAN (QinQ manage VLAN)
1.3.6.1.4.1.5875.8-00.3.23.7.1.10	iNnerVlanID	Int	Read-only	Inner VLAN ID	-

5.17 ONU Physical Password Authentication White List

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.1.6.1.1	phyPasswordWhiteListID	Integer32	Read-only	White list ID (index)	When being created, a white list uses the ID 4294967295 by default. After the list is created, the device will automatically assign an ID to it. The actual white list ID will be used during the “get / delete” operation.
1.3.6.1.4.1.5875.80-0.3.1.6.1.2	slotPhyPasswordWhiteList	Integer32	Read-write	Slot number	The value 65535 means unspecified.
1.3.6.1.4.1.5875.80-0.3.1.6.1.3	ponPhyPasswordWhiteList	Integer32	Read-write	PON port number	The value 65535 means unspecified.
1.3.6.1.4.1.5875.80-0.3.1.6.1.4	onuPhyPasswordWhiteList	Integer32	Read-write	Authorization number	The value 65535 means unspecified.
1.3.6.1.4.1.5875.80-0.3.1.6.1.5	onuPhyPasswordWhiteListType	Integer32	Read-write	ONU type	The value 65535 means unspecified.
1.3.6.1.4.1.5875.80-0.3.1.6.1.7	phyPasswordWhiteList	OCTET STRING	Read-write	Physical password	Maximum length: 10 bytes
1.3.6.1.4.1.5875.80-0.3.1.6.1.20	actionPhyPasswordWhiteList	Integer32	Read-write	Operation	4: create 6: delete

5.18 Querying the ONU Physical Password White List (Supporting snmpget Only)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.56.1.1.1	passwdIndex	OCTET STRING	Read-only	Index, physical password	The index is expressed as ASCII code of the physical password . For example, the index for aaa is 97.97.97 .
1.3.6.1.4.1.5875.80-0.3.56.1.1.2	onuIdForWhiteList	Integer32	Read-only	Authorization number	-
1.3.6.1.4.1.5875.80-0.3.56.1.1.3	passwdIdForWhiteList	Integer32	Read-only	White list ID	-
1.3.6.1.4.1.5875.80-0.3.56.1.1.4	slotForWhiteList	Integer32	Read-only	Slot number	-
1.3.6.1.4.1.5875.80-0.3.56.1.1.5	ponForWhiteList	Integer32	Read-only	PON port number	-
1.3.6.1.4.1.5875.80-0.3.56.1.1.6	fhOltOnuPwdWhiteQryIsCSProfileType	Integer32	Read-only	Whether it is the capability set profile type	0: No 1: Yes
1.3.6.1.4.1.5875.80-0.3.56.1.1.7	fhOltOnuPwdWhiteQryType	Integer32	Read-only	ONU type code. Both profile type and non-profile type are supported.	-
1.3.6.1.4.1.5875.80-0.3.56.1.1.8	fhOltOnuPwdWhiteQryTypeName	OCTET STRING	Read-only	ONU type name. Both profile type and non-profile type are supported.	-

5.19 Specifying Packet Suppression on an Uplink Port

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.16.5.1.1	uplinkPortPacketRate-ControlPortIndex	Int	Read-only	Uplink port number (index)	0: all ports on the switch chips of the core switch cards Refer to Logical Uplink Ports of the Equipment .
1.3.6.1.4.1.5875.8-00.3.16.5.1.2	uplinkPortPacketRate-ControlGBSwitch	Int	Read-write	Switch for broadcast packets	0: disable 1: enable
1.3.6.1.4.1.5875.8-00.3.16.5.1.3	uplinkPortPacketRate-ControlGBRateLimit	Int	Read-write	Rate control for broadcast packets	Unit: packets/second
1.3.6.1.4.1.5875.8-00.3.16.5.1.4	uplinkPortPacketRate-ControlDBSwitch	Int	Read-write	Switch for multicast packets	0: disable 1: enable
1.3.6.1.4.1.5875.8-00.3.16.5.1.5	uplinkPortPacketRate-ControlDBRateLimit	Int	Read-write	Rate control for multicast packets	Unit: packets/second
1.3.6.1.4.1.5875.8-00.3.16.5.1.6	uplinkPortPacketRate-ControlUnknowSwitch	Int	Read-write	Switch for unknown packets	0: disable 1: enable
1.3.6.1.4.1.5875.8-00.3.16.5.1.7	uplinkPortPacketRate-ControlUnknowRateLimit	Int	Read-write	Rate control for unknown packets	Unit: packets/second
1.3.6.1.4.1.5875.8-00.3.16.5.1.20	uplinkPortPacketRate-ControlAction	Int	Read-write	Operation	7: modify

5.20 Authorizing All Cards

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.15.2	setAllCardAuth	Int	Read-write	Card authorization	Leaf node 1: authorizing all cards

5.21 Configuring Priority

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.65.1	oltPriorityMode	Int	Read-write	Priority mode	Leaf node 1: strict priority (SP)

5.22 OLT Slice Configuration

This section introduces OIDs and related information of the nodes under the OLT slice configuration module.

5.22.1 OLT Slice Configuration

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.82.1.1.1	fhOltVSId	Integer32	Read-only	Virtual slice ID	Index: 1-7
1.3.6.1.4.1.5875.80-0.3.82.1.1.2	fhOltVSName	OCTET STRING	Read-create	Slice name	Maximum length: 32 bytes. Numerals, letters, underscore and hyphen are supported.
1.3.6.1.4.1.5875.80-0.3.82.1.1.20	fhOltVSCfgAction	INTEGER	Read-create	Operation	4: create 6: delete 7: modify

5.22.2 Configuration of OLT Slice Object Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.82.2.1.1	fhOltVSOBJECTCfgVSId	Integer32	Read-only	Virtual slice ID	Index Range: 1-7
1.3.6.1.4.1.5875.8-00.3.82.2.1.2	fhOltVSOBJECTCfgSlotNo	Integer32	Read-only	Slot number of the slice object	Index: 1-19 Slot number for the service card, uplink card, or core switch card with uplink ports
1.3.6.1.4.1.5875.8-00.3.82.2.1.3	fhOltVSOBJECTCfgPortNo	Integer32	Read-only	Port number of the slice object	Index: 1-48, 65535 When the object is a slot, the value is 0xFFFF. When the object is a PON port or an uplink port on a line card, the value is the port number.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.82.2.1.4	fhOltVSOBJECTCf-gONUStartNo	Integer32	Read-only	Starting ONU number	Index: 1-256, 65535 When the object is a PON port or an uplink port on a line card, or a slot, the value is 0xFFFF. For an ONU, it is the starting value of the ONU authorization number range. Range: 1-256. It needs to be checked that the value of ONU_Start is no larger than that of ONU_End. If a single ONU is specified, the ONU_End takes the value 65535.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.82.2.1.5	fhOltVObjectCfgONUEndNo	Integer32	Read-only	Ending ONU number	Index: 1-256, 65535 When the object is a PON port or an uplink port on a line card, or a slot, the value is 0xFFFF. For an ONU, it is the ending value of the ONU authorization number range. Range: 1-256. It needs to be checked that the value of ONU_Start is no larger than that of ONU_End. If a single ONU is specified, the ONU_End takes the value 65535.
1.3.6.1.4.1.5875.8-00.3.82.2.1.20	fhOltVObjectCfgAction	Integer	Read-create	Operation	4: create 6: delete

5.22.3 Slice Resource Information Configuration

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.82.3.1.1	fhOltVSCfgId	Integer32	Read-only	Virtual slice ID	Index: 1-7
1.3.6.1.4.1.5875.800-3.82.3.1.2	fhOltVSCfgMax-TerminalUser-Num	Integer	Read-write	Maximum CLI accounts	0-10 Default: 10 CLI accounts of all virtual systems amount to 32 maximally.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.82.3.1.3	fhOltVSCfgMax-ServiceVlanNum	Integer32	Read-write	Maximum number of service VLANs	0-4000 Default: 4000
1.3.6.1.4.1.5875.800-3.82.3.1.4	fhOltVSCfgMax-DynamicMACAddress	Integer32	Read-write	Maximum number of dynamic MAC addresses	0-1024000 Default: 32000 Maximum number of all virtual systems amount to 1024000 maximally.
1.3.6.1.4.1.5875.800-3.82.3.1.5	fhOltVSCfgMax-MulticastGroup-Num	Integer32	Read-write	Maximum number of multicast groups	0-512000 Default: 3000
1.3.6.1.4.1.5875.800-3.82.3.1.6	fhOltVSCfgAlarmReportMode	Integer	Read-write	Alarm reporting mode	0: reporting the alarm to an OLT entity 1: not reporting the alarm to an OLT entity Default: 0
1.3.6.1.4.1.5875.800-3.82.3.1.7	fhVSCfgDescription	OCTET STRING	Read-write	Slice description	Maximum length: 256 bytes

5.22.4 Slice Object Information

This section introduces OIDs and related information of the nodes under the slice object information module.

5.22.4.1 Uplink Port Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.82.4.1.1.1	fhOLTVSUpLink-PortSlotIndex	Integer32	Read-only	Slot number of the uplink port	Index: 1-19
1.3.6.1.4.1.5875.800.3.82.4.1.1.2	fhOLTVSUpLink-PortNoIndex	Integer32	Read-only	Uplink port number	Index: 1-48

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.82.4.1.1.3	fhOLTVSUpLink-PortSharingMode	Integer32	Read-write	Sharing mode	0: not shared 1: shared
1.3.6.1.4.1.5875.8-00.3.82.4.1.1.4	fhOLTVSUpLink-PortVSIIdList	OCTET STRING	Read-only	List of virtual slice IDs	If the uplink port belongs to VSs, e.g., VS1, VS3 and VS7, the values “1, 3, 7” are returned.
1.3.6.1.4.1.5875.8-00.3.82.4.1.1.5	fhOltVSUpLink-PortSharingModeStatus	Integer32	Read-only	Sharing mode	0: not shared 1: shared

5.22.4.2 Information About an OLT's PON Ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.82.4.2.1.1	fhOltVSPONPort-SlotIndex	Integer32	Read-only	Slot number of the PON port	Index AN6000-17: 1-8, 11-18
1.3.6.1.4.1.5875.8-00.3.82.4.2.1.2	fhOltVSPONPort-NoIndex	Integer32	Read-only	PON port number	Index AN6000-17: 1-8
1.3.6.1.4.1.5875.8-00.3.82.4.2.1.3	fhOltVSPONPort-SharingMode	Integer32	Read-write	Sharing mode	0: not shared 1: shared
1.3.6.1.4.1.5875.8-00.3.82.4.2.1.4	fhOltVSPON-PortVSIIdList	OCTET STRING	Read-only	List of virtual slice IDs	If the PON port belongs to VSs, e.g., VS1, VS3 and VS7, the values “1, 3, 7” are returned.
1.3.6.1.4.1.5875.8-00.3.82.4.2.1.5	fhOltVSPONPort-SharingModeStatus	Integer32	Read-only	Sharing mode	0: not shared 1: shared

5.22.4.3 Card Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.82.4.3.1.1	fhOltVSSlotNoIndex	Integer32	Read-only	Slot number of the service card	Index AN6000-17: 1-8
1.3.6.1.4.1.5875.8-00.3.82.4.3.1.2	fhOltVSSlotSharingMode	Integer32	Read-write	Sharing mode	0: not shared 1: shared
1.3.6.1.4.1.5875.8-00.3.82.4.3.1.4	fhOltVSSlotVSIList	OCTET STRING	Read-only	List of virtual slice IDs	If the PON port belongs to VSs, e.g., VS1, VS3 and VS7, the values "1, 3, 7" are returned.
1.3.6.1.4.1.5875.8-00.3.82.4.3.1.5	fhOltVSSlotSharingModeStatus	Integer32	Read-only	Sharing mode	0: not shared 1: shared

5.22.4.4 Trunk Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.82.4.4.1.1	fhOltVSTrunkGroupIndex	Integer32	Read-only	Trunk group number	Index: 1-16
1.3.6.1.4.1.5875.800.-3.82.4.4.1.2	fhOltVSTrunkSharingMode	Integer32	Read-write	Sharing mode	0: not shared 1: shared
1.3.6.1.4.1.5875.800.-3.82.4.4.1.4	fhOltVSTrunkVSIList	OCTET STRING	Read-only	List of virtual slice IDs	If the PON port belongs to VSs, e.g., VS1, VS3 and VS7, the values "1, 3, 7" are returned.
1.3.6.1.4.1.5875.800.-3.82.4.4.1.5	fhOltVSTrunkSharingModeStatus	Integer32	Read-only	Sharing mode	0: not shared 1: shared

5.22.5 Association Between the OLT Entity and Slices



Note:

It is required that the OLT entity can “walk” though all the slices and itself (VS0), and a slice can walk to the OLT entity and itself. For example, VS1 can walk to VS0 and VS1.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.82.5.1.1	fhOltVSRelationId	Integer32	Read-only	Virtual slice ID	Index: 0-7
1.3.6.1.4.1.5875.8-00.3.82.5.1.2	fhOltVSRelation-MACVSID	OCTET STRING	Read-only	Unique ID for the OLT entity and slice in the network	MAC+VSID character string Example: Host OLT: “00:15:14:a1:1a:5b” Slice 1: “00:15:14:a1:1a:5b:1” Slice 5: “00:15:14:a1:1a:5b:5”

5.22.6 Management IP Address

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.82.6.1.1	fhOltVSInetAddressCfgId	Integer32	Read-only	Virtual slice ID	Index: 0-7
1.3.6.1.4.1.5875.80-0.3.82.6.1.2	fhOltVSInetAddressName	OCTET STRING	Read-only	Management VLAN name	Index; maximum length: 30 bytes Letters, numerals and underscore are supported. Default: manage
1.3.6.1.4.1.5875.80-0.3.82.6.1.3	fhOltVSInetAddressType	Integer32	Read-create	Type of the management IP address	0: IPv4 1: IPv6
1.3.6.1.4.1.5875.80-0.3.82.6.1.4	fhOltVSInetAddress	OCTET STRING	Read-create	Management IP address	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.82.6.1.5	fhOltVSIInetAddressCfgVLANID	Integer32	Read-create	Management VLAN ID	1-4085
1.3.6.1.4.1.5875.80-0.3.82.6.1.6	fhOltVSIInetAddressPrefixLength	Integer32	Read-create	Mask length	For an IPv4 address, the value range is 4 to 32. For an IPv6 address, the value range is 8 to 128.
1.3.6.1.4.1.5875.80-0.3.82.6.1.20	fhOltVSIInetAddressCfgAction	Integer	Read-create	Operation	4: create 6: delete

5.23 Configuring Device Users

User Management Table

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.9.16.1.1.1	fhOltSysUserAdminName	OCTET STRING	Read-create	Username (index)	-
1.3.6.1.4.1.5875.8-00.3.9.16.1.1.2	fhOltSysUserAdminPaw	OCTET STRING	Read-create	User password	The password is entered in plain text, and returned in cipher text.
1.3.6.1.4.1.5875.8-00.3.9.16.1.1.20	fhOltSysUserAdminAction	Integer32	Read-create	Operation	4: create 6: delete

User Configuration Table

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.9.16.2.1.1	fhOltSysUserName	OCTET STRING	Read-only	Username (index)	-
1.3.6.1.4.1.5875.-800.3.9.16.2.1.2	fhOltSysUserState	Integer32	Read-write	Enable/Disable	0: Disable 1: Enable

User Password Configuration Table

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.9.16.3.1.1	fhOltSysUser-KeyChgName	OCTET STRING	Read-only	Username (index)	-
1.3.6.1.4.1.5875.8-00.3.9.16.3.1.2	fhOltSysUser-KeyChgOldPsw	OCTET STRING	Read-write	Old login password	Enter the old password in plain text. The information returned is meaningless.
1.3.6.1.4.1.5875.8-00.3.9.16.3.1.3	fhOltSysUser-KeyChgNewPsw	OCTET STRING	Read-write	New login password	The new password is entered in plain text, and returned in cipher text.
1.3.6.1.4.1.5875.8-00.3.9.16.3.1.20	fhOltSysUser-KeyChgAction	Integer32	Read-write	Operation	7: modify

User Role Configuration Table

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.9.16.4.1.1	fhOltSysUserRoleChgName	OCTET STRING	Read-only	Username (index)	-
1.3.6.1.4.1.5875.8-00.3.9.16.4.1.2	fhOltSysUserRoleChgType	Integer32	Read-write	Role type	0: Normal 1: Admin
1.3.6.1.4.1.5875.8-00.3.9.16.4.1.3	fhOltSysUserRoleChgEnPsw	OCTET STRING	Read-write	New “enable” password	The new password is entered in plain text, and returned in cipher text. When the role type is set to Normal, nothing needs to be entered here.
1.3.6.1.4.1.5875.8-00.3.9.16.4.1.20	fhOltSysUserRoleChgAction	Integer32	Read-write	Operation	7: modify

5.24 ONU Capability Set Profile Table

Profile Configuration Table

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.1.10.1.1.1	fhOltOnuCapaProfileCfgName	OCTET STRING	Read-only	Profile name (index)	The value contains 1 to 32 characters including numerals, letters and "-". It is case insensitive. For example, "cs-1" and "CS-1" are considered as the same profile name. It is recommended to use capital letters. The index is expressed as "length + ASCII code of the name". For example, the index for CS-1 is 4.67.83.45.49.
1.3.6.1.4.1.5875.-800.3.1.10.1.1.3	fhOltOnuCapaProfileCfgPONType	Integer32	Read-create	PON port type	263: 1G EPON 807: 10G EPON 10G/10G 808: 10G EPON 1G/10G 712: 1G GPON 813: 10 GPON 2.5G/10G 650: 10GPON 10G/10G 824: GPON/XGPON/XGS PON AUTO (matching with the ONU type automatically)
1.3.6.1.4.1.5875.-800.3.1.10.1.1.4	fhOltOnuCapaProfileCfgONUCAPA	Integer32	Read-create	ONU type	0: SFU 1: HGU 2: Box MDU 3: Card MDU 4: DPU
1.3.6.1.4.1.5875.-800.3.1.10.1.1.5	fhOltOnuCapaProfileCfgIndependentElements	Integer32	Read-create	Independent NE or not	0: No 1: Yes Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.6	fhOltOnuCapaProfileCfgProtectMode	Integer32	Read-create	Protection mode	0: None 1: Type C 2: Type D Default: 0

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.1.10.1.1.7	fhOltOnuCapaProfileCfg1GLan-Number	Integer32	Read-create	Number of 100M/1000M LAN ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.8	fhOltOnuCapaProfileCfg10GLan-Number	Integer32	Read-create	Number of 10G LAN ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.9	fhOltOnuCapaProfileCfgPOTSNumber	Integer32	Read-create	Number of POTS ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.10	fhOltOnuCapaProfileCfgE1Number	Integer32	Read-create	Number of E1 ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.11	fhOltOnuCapaProfileCfgCATV-Number	Integer32	Read-create	Number of CATV ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.12	fhOltOnuCapaProfileCfgUSBNumber	Integer32	Read-create	Number of USB ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.13	fhOltOnuCapaProfileCfgWIFINumber	Integer32	Read-create	Number of WIFI frequency bands	0-2 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.14	fhOltOnuCapaProfileCfgCOMNumber	Integer32	Read-create	Number of COM ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.15	fhOltOnuCapaProfileCfgGFAST-Number	Integer32	Read-create	Number of G_FAST ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.16	fhOltOnuCapaProfileCfgLANPower	Integer32	Read-create	Feeding capability of LAN ports	0: Unsupported 1: Reverse feed 2: Positive feed Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.17	fhOltOnuCapaProfileCfgPOTSPower	Integer32	Read-create	Feeding capability of POTS ports	0: Unsupported 1: Reverse feed Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.18	fhOltOnuCapaProfileCfgTime1588-Number	Integer32	Read-create	Number of time_1588 ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.19	fhOltOnuCapaProfileCfgADSL-Number	Integer32	Read-create	Number of ADSL ports	0-65535 Default: 0

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.1.10.1.1.20	fhOltOnuCapaProfileCfgADSL-POTSNumber	Integer32	Read-create	Number of ADSL_POTS ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.21	fhOltOnuCapaProfileCfgVDSL-Number	Integer32	Read-create	Number of VDSL ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.22	fhOltOnuCapaProfileCfgVDSL-POTSNumber	Integer32	Read-create	Number of VDSL_POTS ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.23	fhOltOnuCapaProfileCfgSHDSL-Number	Integer32	Read-create	Number of SHDSL ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.24	fhOltOnuCapaProfileCfgEoCNumber	Integer32	Read-create	Number of EoC ports	0-65535 Default: 0
1.3.6.1.4.1.5875.-800.3.1.10.1.1.25	fhOltOnuCapaProfileCfgONUEquipmentID	OCTET STRING	Read-create	ONU model number	0 to 20 characters
1.3.6.1.4.1.5875.-800.3.1.10.1.1.50	fhOltOnuCapaProfileCfgCfgAction	Integer32	Read-create	Operation	4: create 6: delete

Profile Information Table

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.1.10.2.1.1	fhOltOnuCapaProfileName	OCTET STRING	Read-only	Profile name (index)	The value contains 1 to 32 characters including numerals, letters and "-". It is case insensitive. For example, "cs-1" and "CS-1" are considered as the same profile name. It is recommended to use capital letters. The index is expressed as "length + ASCII code of the name". For example, the index for CS-1 is 4.67.83.45.49.
1.3.6.1.4.1.5875.-800.3.1.10.2.1.2	fhOltOnuCapaProfileOnuType	Integer32	Read-only	Type code	-
1.3.6.1.4.1.5875.-800.3.1.10.2.1.3	fhOltOnuCapaProfileMD5	OCTET STRING	Read-only	MD5 code	16-byte Hex string

5.25 Querying Unique ONU White Lists in a PON

This section introduces OIDs and related information of the nodes related to unique ONU white lists in a PON.

5.25.1 Physical Password White List Query Table

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.56.12.1.1	fhOltOnuNew-PhyPwdWhiteQry-PhyPwdIdx	OCTET STRING	Read-only	Index, physical password	The index is expressed as “length + ASCII code of the name”. For example, the index for “aaa” is “3.97.97.97”.
1.3.6.1.4.1.5875.80-0.3.56.12.1.2	fhOltOnuNew-PhyPwdWhiteQry-SlotIdx	Integer32	Read-only	Slot number (index)	This field can be neglected in globally unique configuration mode.
1.3.6.1.4.1.5875.80-0.3.56.12.1.3	fhOltOnuNew-PhyPwdWhiteQry-PonIdx	Integer32	Read-only	PON port number (index)	This field can be neglected in globally unique configuration mode.
1.3.6.1.4.1.5875.80-0.3.56.12.1.10	fhOltOnuNew-PhyPwdWhiteQry-WhiteId	Integer32	Read-only	White list ID	-
1.3.6.1.4.1.5875.80-0.3.56.12.1.11	fhOltOnuNew-PhyPwdWhiteQry-AuthId	Integer32	Read-only	Authorization number	-
1.3.6.1.4.1.5875.80-0.3.56.12.1.12	fhOltOnuNew-PhyPwdWhiteQry-Type	Integer32	Read-only	ONU type code. Both profile type and non-profile type are supported.	-

5.25.2 Logical SN White List Query Table

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.56.13.1.1	fhOltOnuNewLogicSnWhiteQry-PhyPwdIdx	OCTET STRING	Read-only	Logical SN (index)	The index is expressed as “length + ASCII code of the name”. For example, the index for “aaa” is “3.97.97.97”.
1.3.6.1.4.1.5875.800-3.56.13.1.2	fhOltOnuNewLogicSnWhiteQry-SlotIdx	Integer32	Read-only	Slot number (index)	This field can be neglected in globally unique configuration mode.
1.3.6.1.4.1.5875.800-3.56.13.1.3	fhOltOnuNewLogicSnWhiteQry-PonIdx	Integer32	Read-only	PON port number (index)	This field can be neglected in globally unique configuration mode.
1.3.6.1.4.1.5875.800-3.56.13.1.10	fhOltOnuNewLogicSnWhiteQry-WhiteId	Integer32	Read-only	White list ID	-
1.3.6.1.4.1.5875.800-3.56.13.1.11	fhOltOnuNewLogicSnWhiteQryAuthId	Integer32	Read-only	Authorization number	-
1.3.6.1.4.1.5875.800-3.56.13.1.12	fhOltOnuNewLogicSnWhiteQry-Type	Integer32	Read-only	ONU type code. Both profile type and non-profile type are supported.	-

6 Data Service Configuration Function

This section introduces OIDs and related information of the nodes under the data service configuration function module.

6.1 Rate Control on PON Ports of ONUs

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.101.2.1.1	onuIndex	Int	Read-only	ONU index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800-3.19.1.1.1	upBandwidth	Int	Read-write	Upstream bandwidth	Unit: kbps
1.3.6.1.4.1.5875.800-3.19.1.1.2	dnBandwidth	Int	Read-write	Downstream bandwidth	Unit: kbps
1.3.6.1.4.1.5875.800-3.19.1.1.3	upAssureBandwidth	Int	Read-write	Upstream assured bandwidth (reserved)	Enter 0 or the default value for modifications. Unit: kbps
1.3.6.1.4.1.5875.800-3.19.1.1.4	upFixedBandwidth	Int	Read-write	Upstream fixed bandwidth (reserved)	Enter 0 or the default value for modifications. Unit: kbps
1.3.6.1.4.1.5875.800-3.19.1.1.5	onuPonCfgActon	Int	Read-write	Operation	7: modify

6.2 ONU Port Attribute Profile and Binding of the Profile

Port Attribute Profile

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.3.3.1.1	portAttributeProfileId	Int	Read-only	Profile ID (index)	-
1.3.6.1.4.1.5875.800.3.3.3.1.2	portAttributeProfileName	String	Read-write	Profile name	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.3.3.1.3	autoNegotiation	Int	Read-write	Auto-negotiation	1: enable 0: disable
1.3.6.1.4.1.5875.8-00.3.3.3.1.4	speed	Int	Read-write	Rate	0: 10M 1: 100M 2: 1000M
1.3.6.1.4.1.5875.8-00.3.3.3.1.5	duplex	Int	Read-write	Duplex	1: enable 0: disable
1.3.6.1.4.1.5875.8-00.3.3.3.1.6	flowControl	Int	Read-write	Flow control	1: enable 0: disable
1.3.6.1.4.1.5875.8-00.3.3.3.1.10	portAttributeProfileAction	Int	Read-write	Operation	4: create 6: delete 7: modify
1.3.6.1.4.1.5875.8-00.3.3.10.2	getNextPortAttributeProfileId	Int	Read-only	Getting a valid profile ID	Leaf node

Binding the Port Attribute Profile

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.101.5.1.1	portIndex	Int	Read-only	Port index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.8-00.3.3.4.1.1	attachPortAttributeProfileName	String	Read-write	Binding the profile name	-
1.3.6.1.4.1.5875.8-00.3.3.4.1.2	setDefaultPortAttributeProfileAction	Int	Read-write	Unbinding the profile	0: Unbind

6.3 ONU Port Bandwidth Profile and Binding of the Profile (Applicable to FTTH / FTTB)

Port Bandwidth Profile

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.3.1.1.1	bandwidthProfileId	Int	Read-only	Profile ID (index)	-
1.3.6.1.4.1.5875.8-00.3.3.1.1.2	bandwidthProfileName	String	Read-write	Profile name	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.3.1.1.3	upMinRate	Int	Read-write	Minimum assured bandwidth for upstream services	Unit: kbps Rate limit for upstream services : 0-1000000
1.3.6.1.4.1.5875.8-00.3.3.1.1.4	upMaxRate	Int	Read-write	Maximum bandwidth for upstream services	Unit: kbps 256-1000000
1.3.6.1.4.1.5875.8-00.3.3.1.1.5	downMinRate	Int	Read-write	Minimum assured bandwidth for downstream services	Unit: kbps Rate limit for downstream services : 0-1000000
1.3.6.1.4.1.5875.8-00.3.3.1.1.6	downMaxRate	Int	Read-write	Maximum bandwidth for downstream services	Unit: kbps 0 to 1000000
1.3.6.1.4.1.5875.8-00.3.3.1.1.7	fixedRate	Int	Read-write	Fixed bandwidth allocated to upstream services	Unit: kbps 0 to 1000000
1.3.6.1.4.1.5875.8-00.3.3.1.1.12	bandwidthProfileAction	Int	Read-write	Operation	4: create 6: delete 7: modify
1.3.6.1.4.1.5875.8-00.3.3.10.1	getNextBandwidthProfileId	Int	Read-only	Getting a valid profile ID	Leaf node

Binding the Port Bandwidth Profile (1)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.3.2.1.1	fitbIfIndex	Int	Read-only	Port index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.-800.3.3.2.1.2	attachBandwidthProfileId	Int	Read-write	Binding the profile ID	The value 65535 means unbinding.
1.3.6.1.4.1.5875.-800.3.3.2.1.4	attachBandwidthProfileName	String	Read-write	Binding the profile name	-
1.3.6.1.4.1.5875.-800.3.3.2.1.5	unAttatchPortAttributeProfileAction	Int	Read-write	Unbinding the profile	0: Unbind

Binding the Port Bandwidth Profile (2)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.3.8.1.1	attachBandwidth-ProfileBySingle-SlotIndex	Int	Read-only	Slot number (index)	1-8, 11-18
1.3.6.1.4.1.5875.8-00.3.3.8.1.2	attachBandwidth-ProfileBySinglePonIndex	Int	Read-only	PON port number (index)	1-16
1.3.6.1.4.1.5875.8-00.3.3.8.1.3	attachBandwidth-ProfileBySingle-OnuIndex	Int	Read-only	ONU authorization number (index)	1-128
1.3.6.1.4.1.5875.8-00.3.3.8.1.4	attachPortBandwidthProfileBySinglePortnode	Int	Read-only	Port number (index)	1-24
1.3.6.1.4.1.5875.8-00.3.3.8.1.5	attachBandwidth-ProfileIdBySingle	Int	Read-write	Binding the profile ID	-
1.3.6.1.4.1.5875.8-00.3.3.8.1.6	attachBandwidth-ProfileNameBySingle	OCTET STRING	Read-write	Binding the profile name	-
1.3.6.1.4.1.5875.8-00.3.3.8.1.7	unAttatchPortAttributeProfileBySingleAction	Int	Read-write	Unbinding the profile	0: Unbind

6.4 GPON Service Bandwidth Allocation

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.101.17.1.1	gponServiceBandwidthCfgOnuIndex	Integer32	Not-accessible	ONU index	$\text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256$
1.3.6.1.4.1.5875.8-00.3.50.1.1.1.1	gponServiceType	Integer32	Not-accessible	Service type index	1: IPTV 2: Broadband Internet access 3: voice 4: TDM 5: integrated service
1.3.6.1.4.1.5875.8-00.3.50.1.1.1.2	gponFixedBandwidth	Integer32	Read-create	Fixed bandwidth	Unit: Byte/s

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.50.1.1.1.3	gponAssureBand-width	Integer32	Read-create	Assured bandwidth	Unit: Byte/s
1.3.6.1.4.1.5875.8-00.3.50.1.1.1.4	gponMaxBand-width	Integer32	Read-create	Maximum bandwidth	Unit: Byte/s
1.3.6.1.4.1.5875.8-00.3.50.1.1.1.10	gponBand-widthCfgAction	Integer32	Read-create	Operation	4: create 6: delete 7: modify

6.5 Configuring Data Services

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.101.18.1.1	fePortServiceIndex	Int	Not-accessible	Number (index) of the logical port	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.-3.5.1.1.1	serviceId	String	Read-only	Service ID (index)	1-16
1.3.6.1.4.1.5875.800.-3.5.1.1.2	serviceType	Int	Read-write	Service type (unicast / multicast)	0: unicast 1: multicast
1.3.6.1.4.1.5875.800.-3.5.1.1.3	cvlanMode	Int	Read-write	CVLAN mode	1: TAG 3: Transparent transmission
1.3.6.1.4.1.5875.800.-3.5.1.1.4	cvlan	Int	Read-write	CVLAN ID	1-4085, 65535
1.3.6.1.4.1.5875.800.-3.5.1.1.5	cvlanCos	Int	Read-write	Intra-PON CVLAN priority or CoS	0-7, 255
1.3.6.1.4.1.5875.800.-3.5.1.1.6	tvlan	Int	Read-write	Translated VLAN ID	1-4085 65535: translation disabled
1.3.6.1.4.1.5875.800.-3.5.1.1.7	tvlanCos	Int	Read-write	Translated intra-PON VLAN priority or CoS	0-7, 255
1.3.6.1.4.1.5875.800.-3.5.1.1.8	svlan	Int	Read-write	SVLAN ID	1-4085 65535: QinQ disabled

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.5.1.1.9	svlanCos	Int	Read-write	Intra-PON SVLAN priority or CoS	0-7, 255
1.3.6.1.4.1.5875.800.-3.5.1.1.10	upMinBand-Width	Int	Read-write	Minimum upstream bandwidth	0-1000000 Invalid for GPON ONUs
1.3.6.1.4.1.5875.800.-3.5.1.1.11	upManBand-Width	Int	Read-write	Maximum upstream bandwidth	256-1000000 -1: no rate control
1.3.6.1.4.1.5875.800.-3.5.1.1.12	dnBandWidth	Int	Read-write	Downstream bandwidth	0-1000000 -1: no rate control
1.3.6.1.4.1.5875.800.-3.5.1.1.15	serviceVlan-Name	OCTET STRING	Read-write	VLAN name	Length: ≤ 30
1.3.6.1.4.1.5875.800.-3.5.1.1.16	qinqProfileName	OCTET STRING	Read-write	QinQ profile name	Length: ≤ 16. This value is meaningless when QinQ is disabled.
1.3.6.1.4.1.5875.800.-3.5.1.1.17	upBandwidth-Profile	OCTET STRING	Read-write	Upstream bandwidth profile	Maximum length: 20 bytes
1.3.6.1.4.1.5875.800.-3.5.1.1.18	downBand-widthProfile	OCTET STRING	Read-write	Down bandwidth profile	Maximum length: 20 bytes
1.3.6.1.4.1.5875.800.-3.5.1.1.20	feServiceCfgAction	Int	Read-write	Operation	4: create 6: delete 7: modify

Configuring Data Services (2)

Get the next available service index for the LAN port.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.101.5.1.1	portIndex	Int	Read-only	Number (index) of the logical port	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.-3.5.2.1.1	nextServiceId	Int	Read-only	Getting the next index	-

Application of the service configuration

Apply the service configuration after completing it; otherwise, the service will not take effect.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.2.1.2.2.1.1	ifIndex	Int	Read-only	Compound index of the ONU	Refer to Compound Indexes of Common Objects . ONU indexes are used; meanwhile, indexes for logical ports in an early stage are supported as well.
1.3.6.1.4.1.5875.800-3.5.3.1.1	feServiceCfgApplyCommand	Int	Read-write	Service application	1: Apply

6.6 Binding QinQ Domain Profiles



Note:

An ONU can be bound with multiple QinQ domain profiles.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.10-1.2.1.1	onuIndex	Int	Read-only	ONU index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.7.3-1.1	attachQinqProfileName	String	Read-write	Name of the QinQ domain profile	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.7.3-.1.2	qinqAttchAction	Int	Read-write	Binding / unbinding operation	1: Bind 0: Unbind
1.3.6.1.4.1.5875.800.3.7.3-.1.3	getOnuQinqProfileName	Hex-String	Read-only	Getting the names of the profiles bound to the ONU	Every 16 bytes denote a profile name.

6.7 Binding QinQ Domain Profiles to PON Ports



Note:

A PON port can be bound with multiple QinQ domain profiles.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.10-1.16.1.1	oltPonAuthPonIndex	Int	Not-accessible	PON port index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.7.1-0.1.1	attchQinqToPonProfileName	String	Read-write	Name of the QinQ domain profile	-
1.3.6.1.4.1.5875.800.3.7.1-0.1.2	qinqAttchToPonAction	Int	Read-write	Binding / unbinding operation	1: Bind 0: Unbind
1.3.6.1.4.1.5875.800.3.7.1-0.1.3	getPonQinqProfileName	Hex-String	Read-only	Getting the names of the profiles bound to the PON port	Every 16 bytes denote a profile name.

6.8 Rate Control for an ONU's QinQ Domain

Rate Control for an ONU's QinQ Domain

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.10-1.19.1.1	qinqBand-WidthCfgOnuIndex	Int	Read-only	ONU index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.7.4-1.1	onuQinqProfile-Name	String	Read-only	QinQ domain name	The name is expressed as an index in the format "length + ASCII codes". For example, if a profile name is abc, its index is 3.97.98.99.
1.3.6.1.4.1.5875.800.3.7.4-1.2	qinqServiceId	Int	Read-only	Service ID of the QinQ profile	Index
1.3.6.1.4.1.5875.800.3.7.4-1.3	usMinBand-width	Int	Read-write	Minimum upstream bandwidth	Unit: kps The value -1 means no rate control.
1.3.6.1.4.1.5875.800.3.7.4-1.4	usMaxBand-width	Int	Read-write	Maximum upstream bandwidth	Unit: kps The value -1 means no rate control.
1.3.6.1.4.1.5875.800.3.7.4-1.5	usBurstBand-width	Int	Read-write	Upstream burst bandwidth	Unit: kps The value -1 means no rate control.
1.3.6.1.4.1.5875.800.3.7.4-1.6	dsMinBand-width	Int	Read-write	Minimum downstream bandwidth	Unit: kps The value -1 means no rate control.
1.3.6.1.4.1.5875.800.3.7.4-1.7	dsMaxBand-width	Int	Read-write	Maximum downstream bandwidth	Unit: kps The value -1 means no rate control.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.7.4- .1.8	dsBurstBand- width	Int	Read-write	Downstream burst bandwidth	Unit: kps The value -1 means no rate control.
1.3.6.1.4.1.5875.800.3.7.4- .1.20	qinqBand- widthCfgAction	Int	Read-write	Operation	7: configure

Application of the Qinq Domain Rate Control



Note:

The configuration of the Qinq domain rate control needs to be applied to take effect.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.10- 1.2.1.1	onuIndex	Int	Read-only	ONU number (index)	Refer to Compound Indexes of Common Objects.
1.3.6.1.4.1.5875.800.3.7.5- .1.1	qinqBand- widthCfgApply	Int	Read-write	Application of the Qinq rate control	1: Apply

6.9 Creating a QinQ Domain

Creating a Primary QinQ Domain Profile

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.7.7.1.1	qinqDomainName	String	Read-only	QinQ domain name	The name is used as an index in the format "length + ASCII codes". For example, if a profile name is abc, its index is 3.97.98.99.
1.3.6.1.4.1.5875.80-0.3.7.7.1.4	qinqDomainAction	Int	Read-write	Operation	4: create 6: delete (If the current domain has only one secondary domain, use this node to delete the domain.)
1.3.6.1.4.1.5875.80-0.3.7.7.1.5	qinqDomainServiceNum	Int	Read-only	Number of QinQ domain services	Number of services in the QinQ domain
1.3.6.1.4.1.5875.80-0.3.7.7.1.6	nextQinqDomainServiceId	Int	Read-only	Getting an available service ID in the domain	After an ID is obtained, the service is created in the domain.

Creating a Secondary QinQ Domain Profile (Creating Domain Services)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.101.20.1.1	qinqDomainServiceQinQIndex	String	Not-accessible	QinQ domain name	The name is used as an index in the format "length + ASCII codes".
1.3.6.1.4.1.5875.80-0.3.7.8.1.1	qinqDomainServiceId	Int	Read-only	Service ID	Unique in the QinQ domain to identify the service
1.3.6.1.4.1.5875.80-0.3.7.8.1.2	qinqDomainServiceType	Int	Read-write	Service type	0: independent 1: shared
1.3.6.1.4.1.5875.80-0.3.7.8.1.4	qinqDomainLayer1OldVlan	Int	Read-write	Original Layer 1 VLAN	Range: 0-4085, or 0xffff
1.3.6.1.4.1.5875.80-0.3.7.8.1.5	qinqDomainLayer1OldVlanCos	Int	Read-write	CoS for the original Layer 1 VLAN	Range: 0-7

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.7.8.1.6	qinqDomain-Layer1VlanAction	Int	Read-write	Action on Layer 1 VLAN tag	1: Add 2: Translate 3: Transparently transmit
1.3.6.1.4.1.5875.80-0.3.7.8.1.7	qinqDomain-Layer1VlanCos	Int	Read-write	Layer 1 VLAN priority	Range: 0-7, or 0xff (null)
1.3.6.1.4.1.5875.80-0.3.7.8.1.8	qinqDomain-Layer1Tpid	Int	Read-write	TPID of Layer 1 VLAN	Default: 0x8100
1.3.6.1.4.1.5875.80-0.3.7.8.1.9	qinqDomain-Layer1NewVlan	Int	Read-write	Layer 1 new VLAN ID	Range: 1-4085, or 0xffff (null)
1.3.6.1.4.1.5875.80-0.3.7.8.1.10	qinqDomain-Layer2OldVlan	Int	Read-write	Original Layer 2 VLAN	Range: 0-4085, or 0xffff
1.3.6.1.4.1.5875.80-0.3.7.8.1.11	qinqDomain-Layer2OldVlan-Cos	Int	Read-write	CoS for the original Layer 2 VLAN	Range: 0-7
1.3.6.1.4.1.5875.80-0.3.7.8.1.12	qinqDomain-Layer2VlanAction	Int	Read-write	Action on Layer 2 VLAN tag	1: Add 2: Translate 3: Transparently transmit
1.3.6.1.4.1.5875.80-0.3.7.8.1.13	qinqDomain-Layer2VlanCos	Int	Read-write	Layer 2 VLAN priority	Range: 0-7, or 0xff (null)
1.3.6.1.4.1.5875.80-0.3.7.8.1.14	qinqDomain-Layer2Tpid	Int	Read-write	TPID of Layer 2 VLAN	Default: 0x8100
1.3.6.1.4.1.5875.80-0.3.7.8.1.15	qinqDomain-Layer2NewVlan	Int	Read-write	Layer 2 new VLAN ID	Range: 1-4085, or 0xffff (null)
1.3.6.1.4.1.5875.80-0.3.7.8.1.30	qinqDomainUpRuleType	Int	Read-write	Upstream rule type	Default: 1 Refer to Table 6-1 for details about the parameter values.
1.3.6.1.4.1.5875.80-0.3.7.8.1.31	qinqDomainUpRuleValue	String	Read-write	Upstream rule value	Default: 00 00 00 00 00 02 00 00 Refer to Table 6-1 for details about the parameter values.
1.3.6.1.4.1.5875.80-0.3.7.8.1.32	qinqDomainUpRuleOperation	Int	Read-write	Upstream operator	Default: 5 Refer to Table 6-1 for details about the parameter values.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.7.8.1.33	qinqDomainDn-RuleType	Int	Read-write	Downstream rule type	Default: 2 Refer to Table 6-1 for details about the parameter values.
1.3.6.1.4.1.5875.80-0.3.7.8.1.34	qinqDomainDn-RuleValue	String	Read-write	Downstream rule value	Default: 00 00 00 00 00 01 00 00 Refer to Table 6-1 for details about the parameter values.
1.3.6.1.4.1.5875.80-0.3.7.8.1.35	qinqDomainDn-RuleOperation	Int	Read-write	Downstream operator	Default: 5 Refer to Table 6-1 for details about the parameter values.
1.3.6.1.4.1.5875.80-0.3.7.8.1.100	qinqDomainServiceAction	Int	Read-write	Operation	4: create 6: delete (If the current domain has only one secondary domain, use the node 1.3.6.1.4.1.5875.800.3.7.-7.1.4 to delete the domain.)

QinQ Service Domain with Multiple Rules

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.7.9.1.1	qinqDomainServiceRuleQinqDomainIndex	String	Read-only	QinQ domain name	The name is used as an index in the format "length + ASCII codes".
1.3.6.1.4.1.5875.80-0.3.7.9.1.2	qinqDomainServiceRuleServiceIDIndex	Int	Read-only	Service ID	Unique in the QinQ domain to identify the service
1.3.6.1.4.1.5875.80-0.3.7.9.1.3	qinqDomainServiceRuleIndex	Int	Read-only	Rule index	-
1.3.6.1.4.1.5875.80-0.3.7.9.1.4	qinqDomainServiceUpRuleType	Int	Read-write	Upstream rule type	-
1.3.6.1.4.1.5875.80-0.3.7.9.1.5	qinqDomainServiceUpRuleValue	String	Read-write	Upstream rule value	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.7.9.1.6	qinqDomainServiceUpRuleOperation	Int	Read-write	Upstream operator	-
1.3.6.1.4.1.5875.80-0.3.7.9.1.7	qinqDomainServiceDnRuleType	Int	Read-write	Downstream rule type	-
1.3.6.1.4.1.5875.80-0.3.7.9.1.8	qinqDomainServiceDnRuleValue	String	Read-write	Downstream rule value	-
1.3.6.1.4.1.5875.80-0.3.7.9.1.9	qinqDomainServiceDnRuleOperation	Int	Read-write	Downstream operator	-
1.3.6.1.4.1.5875.80-0.3.7.8.1.36	getNextQinqDomainServiceRuleID	Int	Read-only	Getting an available rule index for the service	Getting an available rule index for the service
1.3.6.1.4.1.5875.80-0.3.7.9.1.20	qinqDomainServiceRuleAction	Int	Read-write	Operation	4: create 6: delete 7: modify

Parameter Description

Table 6-1 Parameter Description

Parameter	Description
Rule type	1: destination MAC address 2: source MAC address 3: Ethernet type 4: VLAN4 5: VLAN3 6: VLAN2 7: VLAN1 8: service type 10: time-to-live 11: protocol type 12: source IP address 14: destination IP address 16: Layer 4 source port number 17: Layer 4 sink port number 18: CoS4 19: CoS3 20: CoS2 21: CoS1
Rule value	1: DA (six bytes) 2: SA (six bytes) 3: ethtype (2 bytes, 0 to 0xffff) 4: VLAN4 (2 bytes, 0-4085) 5: VLAN3 (2 bytes, 0-4085) 6: VLAN2 (2 bytes, 0-4085) 7: VLAN1 (2 bytes, 0-4085) 8: TOS (1 byte, 0 to 0xff) 10: TTL (1 byte, 0 to 0xff) 11: protocol type (1 byte, 0 to 0xff) 12: sip (4 bytes) 14: dip (4 bytes) 16: L4srcport (2 bytes, 0 to 0xffff) 17: L4dstport (2 bytes, 0 to 0xffff) 18: CoS4 (1 byte, 0-7) 19: CoS3 (1 byte, 0-7) 20: CoS2 (1 byte, 0-7) 21: CoS1 (1 byte, 0-7)

Table 6-1 Parameter Description (Continued)

Parameter	Description
Operator	0: Never match 1: Equal (==) 2: no Equal (!=) 3: Less than or equal ($\leq$) 4: Greater than or equal ($\geq$) 5: exist (existence means match) 6: no exist (no existence means match) 7: always (always match)

6.10 Configuring Remote Management of ONUs

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.101.22.1.1	gponRmtManageCfgoNuIndex	Integer32	Not-accessible	ONU index	$\text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256$
1.3.6.1.4.1.5875.800.-3.30.1.1.1	gponRmtManageUrl	Integer32	Read-write	URL of the ACS server	It is null by default.
1.3.6.1.4.1.5875.800.-3.30.1.1.2	gponRmtManageUser	Integer32	Read-write	Username for connection to the ACS server	It is null by default.
1.3.6.1.4.1.5875.800.-3.30.1.1.3	gponRmtManagePwd	Integer32	Read-write	Password for connection to the ACS server	It is null by default.
1.3.6.1.4.1.5875.800.-3.30.1.1.5	gponRmtManageTr069Enable	OCTET STRING	Read-write	TR069 switch	0: disable 1: enable It is enabled by default.
1.3.6.1.4.1.5875.800.-3.30.1.1.4	gponRmtManageAction	Integer32	Read-write	Operation	7: modify

6.11 Configuring ONU VEIP Management Channels



Note:

The equipment supports the snmpget and snmpset operations only. That is, the snmpwalk operation is not supported.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.10-1.23.1.1	gponVEIPManagePathCfgPortIndex	Int	Not-accessible	Number (index) of the logical port	Index. Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.30-2.1.10	gponVEIPManagePathCfgPortType	Int	Read-write	Port type	4: VEIP
1.3.6.1.4.1.5875.800.3.30-2.1.11	gponVEIPManagePathCfgChannelEnable	Int	Read-write	Enabling the non-OMCI management channel	0: disable 1: enable
1.3.6.1.4.1.5875.800.3.30-2.1.12	gponVEIPManagePathCfgmode	Int	Read-write	Management model	0: TR-069 2: TR-069_VOIP (configuration shared by TR-069 and VOIP services)
1.3.6.1.4.1.5875.800.3.30-2.1.13	gponVEIPManagePathCfgManageVlanName	String	Read-write	Management VLAN name	Default: manage
1.3.6.1.4.1.5875.800.3.30-2.1.1	gponVEIPManagePathDsp	Int	Read-write	Way to obtain (D_S_P)	0: DHCP 1: Static If the value is set to 0, the following four parameters can be left blank.
1.3.6.1.4.1.5875.800.3.30-2.1.2	gponVEIPManagePathIPAddress	String	Read-write	Static IP address	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.30.-2.1.3	gponVEIPManagePathGateWay	String	Read-write	Gateway address	-
1.3.6.1.4.1.5875.800.3.30.-2.1.4	gponVEIPManagePathPrimaryDns	String	Read-write	Primary DNS	-
1.3.6.1.4.1.5875.800.3.30.-2.1.5	gponVEIPManagePathSecondaryDns	String	Read-write	Secondary DNS	-
1.3.6.1.4.1.5875.800.3.30.-2.1.14	gponVEIPManagePathCfgIPProtocol	Int	Read-write	IP protocol	1: TCP 2: UDP
1.3.6.1.4.1.5875.800.3.30.-2.1.6	gponVEIPManagePathNetworkPort	Int	Read-write	Network port number	Range: 0-65535
1.3.6.1.4.1.5875.800.3.30.-2.1.15	gponVEIPManagePathCfgToSDSCP	Int	Read-write	Priority (ToS/DSCP)	Range: 0-63
1.3.6.1.4.1.5875.800.3.30.-2.1.16	gponVEIPManagePathCfgTag	Int	Read-write	Tag attribute (Tag/Untag)	0: untag 1: tag
1.3.6.1.4.1.5875.800.3.30.-2.1.17	gponVEIPManagePathCfgSvlanTpid	Int	Read-write	Management SVLAN TPID (Manage Svlan Tpid)	Range: 1-65534, or 0xffff; default: 0x8100
1.3.6.1.4.1.5875.800.3.30.-2.1.18	gponVEIPManagePathCfgSVlanId	Int	Read-write	Management SVLAN ID (Manage Svlan Id)	Range: 1-4085, or 0xffff; default: 0xffff
1.3.6.1.4.1.5875.800.3.30.-2.1.19	gponVEIPManagePathCfgSvlanCos	Int	Read-write	Management SVLAN priority (Manage Svlan Cos)	Range: 0-7, or 0xffff; default: 0xffff
1.3.6.1.4.1.5875.800.3.30.-2.1.20	gponVEIPManagePathCfgCVlanTpid	Int	Read-write	Management CVLAN TPID (Manage CVLAN Tpid)	Range: 1-65534, or 0xffff
1.3.6.1.4.1.5875.800.3.30.-2.1.7	gponVEIPManagePathCVlan	Int	Read-write	Management CVLAN ID (Manage CVLAN Id)	Range: 1-4085, or 0xffff (null)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.30-2.1.8	gponVEIPManagePathCVlanCos	Int	Read-write	Management CVLAN priority (Manage CVLAN Cos)	Range: 0-7, or 0xffff (null)
1.3.6.1.4.1.5875.800.3.30-2.1.9	gponVEIPManagePathIpMask	Int	Read-write	Subnet mask	-
1.3.6.1.4.1.5875.800.3.30-2.1.30	gponVEIPManagePathAction	Int	Read-write	Operation	7: modify

6.12 Configuring the ONU VEIP Data Service

Configuring the ONU VEIP Data Service

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.10-1.24.1.1	gponVEIPServiceCfgPortIndex	Int	Not-accessible	Number (index) of the logical port	Port index = slot number × 33554432 + PON port number × 524288 + ONU number × 256 + port number The port number is fixed at 1.
1.3.6.1.4.1.5875.800.3.30-3.1.1	gponVEIPServiceID	Int	Not-accessible	Service SN (index)	Index; range: 1-16
1.3.6.1.4.1.5875.800.3.30-3.1.2	gponVEIPServiceTls	Int	Read-write	TLS	0: non-TLS 1: TLS A VEIP port can be configured with only one TLS entry.
1.3.6.1.4.1.5875.800.3.30-3.1.3	gponVEIPServiceCVlan	Int	Read-write	CVLAN ID	Range: 1-4085, or 0xffff (null)
1.3.6.1.4.1.5875.800.3.30-3.1.4	gponVEIPServiceCVlanCos	Int	Read-write	Intra-PON CVLAN priority	Range: 0-7, or 0xffff (null)
1.3.6.1.4.1.5875.800.3.30-3.1.5	gponVEIPServiceTVlan	Int	Read-write	Translated VLAN ID	Range: 1-4085, or 0xffff (null)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.30.-3.1.6	gponVEIPServiceTVlanCos	Int	Read-write	Translated intra-PON VLAN priority or CoS	Range: 0-7, or 0xffff (null)
1.3.6.1.4.1.5875.800.3.30.-3.1.7	gponVEIPServiceSVlan	Int	Read-write	SVLAN ID	Range: 1-4085, or 0xffff (null)
1.3.6.1.4.1.5875.800.3.30.-3.1.8	gponVEIPServiceSVlanCos	Int	Read-write	Intra-PON SVLAN priority or CoS	Range: 0-7, or 0xffff (null)
1.3.6.1.4.1.5875.800.3.30.-3.1.9	gponVEIPServiceUsBandWidth	Int	Read-write	Maximum upstream bandwidth	-
1.3.6.1.4.1.5875.800.3.30.-3.1.10	gponVEIPServiceDsBandWidth	Int	Read-write	Maximum downstream bandwidth	-
1.3.6.1.4.1.5875.800.3.30.-3.1.11	gponVEIPServiceProfileName	String	Read-write	Service model profile	Name of the service model profile
1.3.6.1.4.1.5875.800.3.30.-3.1.12	gponVEIPServiceAction	Int	Read-write	Operation	4: create 6: delete 7: modify

Getting the Next Available Service ID

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.10-1.5.1.1	portIndex	Int	Read-only	Number (index) of the logical port	Index
1.3.6.1.4.1.5875.800.3.30.-4.1.1	nextGponVEIPServiceID	Int	Read-only	Getting the next available service ID	Getting an available service ID

6.13 CATV Switch

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.10-1.29.1.1	onuCatvEnable-Index	Int	Not-accessible	ONU index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.27-1.1.1	onuCatvEnable	Int	Read-write	ONU CATV switch	0: disable 1: enable
1.3.6.1.4.1.5875.800.3.27-1.1.2	onuCatvRfOutputOffset	Int	Read-write	RF output offset	Range: -128 to 128; default: 0; unit: dB

6.14 Replacing an ONU's Logical SN

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.10-1.2.1.1	onuIndex	Int	Read-only	ONU index (logical index)	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.28-1.1.1	onuSNReplace-Slot	Int	Read-only	Slot number	-
1.3.6.1.4.1.5875.800.3.28-1.1.2	onuSNReplace-Pon	Int	Read-only	PON port number	-
1.3.6.1.4.1.5875.800.3.28-1.1.3	onuSNReplaceOnuId	Int	Read-only	ONU number	-
1.3.6.1.4.1.5875.800.3.28-1.1.4	onuSNReplaceSnLoid	String	Read-write	Original SN	Length: 1-24
1.3.6.1.4.1.5875.800.3.28-1.1.5	onuSNReplaceSnPwd	String	Read-write	Old password	Length: 0-12
1.3.6.1.4.1.5875.800.3.28-1.1.6	onuSNReplaceNewSnLoid	String	Read-write	New SN	Length: 1-24
1.3.6.1.4.1.5875.800.3.28-1.1.7	onuSNReplaceNewSnPwd	String	Read-write	New password	Length: 0-12
1.3.6.1.4.1.5875.800.3.28-1.1.8	onuSNReplaceStatus	Int	Read-write	Operation	4: replace

6.15 ONU PON Port Bandwidth Profile and Binding of the Profile (Applicable to FTTH / FTTB)

Port Bandwidth Profile

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.3.5-.1.1	ponBandwidth-ProfileId	Int	Read-only	Profile ID (index)	-
1.3.6.1.4.1.5875.800.3.3.5-.1.2	ponBandwidth-ProfileName	String	Read-write	Profile name	20 bytes
1.3.6.1.4.1.5875.800.3.3.5-.1.3	ponUpMinRate	Int	Read-write	Minimum assured bandwidth for upstream services	Range: 0-10000000; unit: kbps
1.3.6.1.4.1.5875.800.3.3.5-.1.4	ponUpMaxRate	Int	Read-write	Maximum bandwidth for upstream services	Range: 0-10000000; unit: kbps
1.3.6.1.4.1.5875.800.3.3.5-.1.5	ponDownMin-Rate	Int	Read-write	Minimum assured bandwidth for downstream services	Range: 0-10000000; unit: kbps
1.3.6.1.4.1.5875.800.3.3.5-.1.6	ponDownMax-Rate	Int	Read-write	Maximum bandwidth for downstream services	Range: 0-10000000; unit: kbps
1.3.6.1.4.1.5875.800.3.3.5-.1.7	ponFixedRate	Int	Read-write	Fixed bandwidth allocated to upstream services	Range: 0-10000000; unit: kbps
1.3.6.1.4.1.5875.800.3.3.5-.1.12	ponBandwidth-ProfileAction	Int	Read-write	Operation	4: create 6: delete
1.3.6.1.4.1.5875.800.3.3.1-0.3	getNextPon-BandwidthProfileId	Int	Read-only	Getting a valid profile ID	Leaf node

Binding the Port Bandwidth Profile (1)



Note:

A profile is bound by its ID or name.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.3.6-.1.1	onuPonIfIndex	Int	Read-only	Port index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.3.6-.1.2	attachPonBandwidthProfileId	Int	Read-write	Binding the profile ID	-
1.3.6.1.4.1.5875.800.3.3.6-.1.3	attachPonBandwidthProfileName	String	Read-write	Binding the profile name	-
1.3.6.1.4.1.5875.800.3.3.6-.1.4	unAttachPonBandwidthProfileAction	Int	Read-write	Unbinding the profile	0: Unbind

Binding the Port Bandwidth Profile (2)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.3.7-.1.1	onuPonBandwidthProfileSlotIndex	Int	Read-only	Slot number	Index
1.3.6.1.4.1.5875.800.3.3.7-.1.2	onuPonBandwidthProfilePonIndex	Int	Read-only	PON port number	Index
1.3.6.1.4.1.5875.800.3.3.7-.1.3	onuPonBandwidthProfileOnuIndex	Int	Read-only	ONU number (By default, an ONU has only one PON port; therefore, no subordinate ports are involved.)	Index
1.3.6.1.4.1.5875.800.3.3.7-.1.4	attachPonBandwidthProfileIdBySingleIndex	Int	Read-write	Binding the profile ID	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.3.7-1.5	attachPonBandwidthProfileNameBySingleIndex	OCTET STRING	Read-write	Binding the profile name	-
1.3.6.1.4.1.5875.800.3.3.7-1.6	unAttachPonBandwidthProfileActionBySingleIndex	Int	Read-write	Unbinding the profile	0: Unbind

6.16 Optical Power Threshold Profile for an ONU PON Port and Binding of the Profile

Optical Power Threshold Profile for an ONU PON Port

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.51-1.1.1	onuOpticalProfileId	Int	Read-only	Profile ID (index)	-
1.3.6.1.4.1.5875.800.3.51-1.1.2	onuOpticalProfileName	String	Read-only	Profile name	32
1.3.6.1.4.1.5875.800.3.51-1.1.3	recOptOverReport	Int	Read-only	Threshold for reporting the overhigh Rx optical power alarm	Returned value divided by 100; unit: dBm The value -32767 means that the profile is not configured with this parameter or the parameter in the profile is not to be reported.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.51.-1.1.4	recOptOver-Clear	Int	Read-only	Threshold for clearing the overhigh Rx optical power alarm	Returned value divided by 100; unit: dBm The value -32767 means that the profile is not configured with this parameter or the parameter in the profile is not to be reported.
1.3.6.1.4.1.5875.800.3.51.-1.1.5	recOptLowReport	Int	Read-only	Threshold for reporting the overflow Rx optical power alarm	Returned value divided by 100; unit: dBm
1.3.6.1.4.1.5875.800.3.51.-1.1.6	recOptLowClear	Int	Read-only	Threshold for clearing the overflow Rx optical power alarm	Returned value divided by 100; unit: dBm The value -32767 means that the profile is not configured with this parameter or the parameter in the profile is not to be reported.
1.3.6.1.4.1.5875.800.3.51.-1.1.7	sendOptOverReport	Int	Read-only	Threshold for reporting the overhigh Tx optical power alarm	Returned value divided by 100; unit: dBm The value -32767 means that the profile is not configured with this parameter or the parameter in the profile is not to be reported.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.51.- 1.1.8	sendOptiOver-Clear	Int	Read-only	Threshold for clearing the overhigh Tx optical power alarm	Returned value divided by 100; unit: dBm The value -32767 means that the profile is not configured with this parameter or the parameter in the profile is not to be reported.
1.3.6.1.4.1.5875.800.3.51.- 1.1.9	sendOptLowReport	Int	Read-only	Threshold for reporting the overflow Tx optical power alarm	Returned value divided by 100; unit: dBm The value -32767 means that the profile is not configured with this parameter or the parameter in the profile is not to be reported.
1.3.6.1.4.1.5875.800.3.51.- 1.1.10	sendOptLowClear	Int	Read-only	Threshold for clearing the overflow Tx optical power alarm	Returned value divided by 100; unit: dBm The value -32767 means that the profile is not configured with this parameter or the parameter in the profile is not to be reported.

Binding the Optical Power Threshold Profile for ONU PON Ports



Note:

A profile is bound to an ONU PON port by the ID or name of the former.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.10-1.2.1.1	onuIndex	Int	Read-only	ONU index (logical index)	Index
1.3.6.1.4.1.5875.800.3.51.-2.1.2	attachOptProfileId	Int	Read-write	Binding the profile ID	The value 0xffff means unbinding.
1.3.6.1.4.1.5875.800.3.51.-2.1.3	attachOptProfileName	String	Read-write	Binding the profile name	-
1.3.6.1.4.1.5875.800.3.51.-2.1.4	unattachOptProfile	Int	Read-write	Unbinding the profile	0: Unbind

6.17 Configuring Optical Power Thresholds for OLT PON Ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.51.3.1	oltOptRecMax-thresh	Int	Read-write	Alarm threshold for maximum Rx optical power	Range: -3200 to -100; unit: dBm. The value displayed on the NMS is the returned value divided by 100.
1.3.6.1.4.1.5875.8-00.3.51.3.2	oltOptRecMin-thresh	Int	Read-write	Alarm threshold for minimum Rx optical power	Range: -3200 to -100; unit: dBm. The value displayed on the NMS is the returned value divided by 100.
1.3.6.1.4.1.5875.8-00.3.51.3.3	oltOptSendMax-thresh	Int	Read-write	Alarm threshold for maximum Tx optical power	Range: -400 to 1000; unit: dBm. The value displayed on the NMS is the returned value divided by 100.
1.3.6.1.4.1.5875.8-00.3.51.3.4	oltOptSendMix-thresh	Int	Read-write	Alarm threshold for minimum Tx optical power	Range: -400 to 1000; unit: dBm. The value displayed on the NMS is the returned value divided by 100.

6.18 GPON Service Bandwidth Profile and Binding of the Profile

Getting the next available profile ID

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.53.-2	getNextGpon-SerBwId	Integer32	Read-only	Getting the next available profile ID	This is a scalar node, so enter the index 0 to obtain the profile ID.

GPON Service Bandwidth Profile

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.53.-1.1.1	gponSerBw-ProIndex	Integer32	Not-accessible	Profile ID (index)	Obtained by the node 1.3.6.1.4.1.5875.-800.3.53.2
1.3.6.1.4.1.5875.800.3.53.-1.1.2	gponSerBwPro-Name	OCTET STRING	Read-create	Profile name	1 to 32 characters
1.3.6.1.4.1.5875.800.3.53.-1.1.8	gponSerBw-ProAction	Integer32	Read-create	Operation	4: create / modify 6: delete

Service Type Configuration for GPON Service Bandwidth Profile

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.53.-1.1.1	gponSerBw-ProIndex	Integer32	Not-accessible	Profile ID (index)	-
1.3.6.1.4.1.5875.800.3.53.-3.1.2	gponSerBwPro-Name	Integer32	Not-accessible	Service type index	1: IPTV 2: Broadband Internet access 3: Voice 4: TDM 5: Integrated service 6: Broadband Internet access 2 (data2) 7: Broadband Internet access 3 (data3) 8: Broadband Internet access 4 (data4) 9: Serial port service (COM service) 14: Management service
1.3.6.1.4.1.5875.800.3.53.-3.1.3	fixBw	Integer32	Read-create	Fixed bandwidth	Range: 128-10000000; unit: kbps. The value will be automatically converted to an integral multiple of eight.
1.3.6.1.4.1.5875.800.3.53.-3.1.4	assureBw	Integer32	Read-create	Assured bandwidth	Range: 0, 256-10000000; unit: kbps. The value will be automatically converted to an integral multiple of eight.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.53.-3.1.5	maxBw	Integer32	Read-create	Maximum bandwidth	Range: 128-10000000; unit: kbps. The value will be automatically converted to an integral multiple of eight.
1.3.6.1.4.1.5875.800.3.53.-3.1.20	gponSerBwTypeAction	Integer32	Read-create	Operation	4: create / modify 6: delete

Binding a GPON Service Bandwidth Profile



Note:

A profile is bound to an ONU by its ID or name.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.53.-4.1.1	attachgponSerBwToONUIndex	Int	Read-only	ONU index (logical index)	Index
1.3.6.1.4.1.5875.800.3.53.-4.1.2	attachgponBwProfileId	Int	Read-write	Binding the profile ID	-
1.3.6.1.4.1.5875.800.3.53.-4.1.3	attachgponBwProfileName	String	Read-write	Binding the profile name	-
1.3.6.1.4.1.5875.800.3.53.-4.1.4	unattachgponBwProfile	Int	Read-write	Unbinding the profile	0: Unbind

6.19 Querying the WAN Connection Bandwidth Profile for an ONU

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.101.32.1.1	onuWanServiceBwProfileOnuIndex	Int	Not-accessible	ONU index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.80-0.3.55.1.1.1	onuwanIndex	Int	Read-only	ID of the WAN connection	Range: 0-8
1.3.6.1.4.1.5875.80-0.3.55.1.1.2	upBwProfileID	Int	Read-only	ID of the upstream bandwidth profile	Range: 0-1024
1.3.6.1.4.1.5875.80-0.3.55.1.1.4	downBwProfileID	String	Read-only	Name of the upstream bandwidth profile	Associated with ONU PON Port Bandwidth Profile and Binding of the Profile (Applicable to FTTH / FTTB) .
1.3.6.1.4.1.5875.80-0.3.55.1.1.5	onuWanServiceUpBwProfileProfileName	Int	Read-only	Maximum upstream bandwidth	-
1.3.6.1.4.1.5875.80-0.3.55.1.1.3	onuWanServiceUpAllowanceBw	Int	Read-only	ID of the downstream bandwidth profile	Range: 0-1024
1.3.6.1.4.1.5875.80-0.3.55.1.1.6	onuWanServiceDownBwProfileProfileName	String	Read-only	Name of the downstream bandwidth profile	-
1.3.6.1.4.1.5875.80-0.3.55.1.1.7	onuWanServiceDownAllowanceBw	Int	Read-only	Maximum downstream bandwidth	-

6.20 Default QinQ Domain Configuration for an ONU

Default QinQ Domain Configuration for an ONU

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.101.33.1.1	gponOnuDefaultQinQConfOnuIndex	Int	Not-accessible	ONU index	Index
1.3.6.1.4.1.5875.800.-3.30.5.1.1	gponOnuQinQServiceSN	Int	Read-only	Service SN (index)	Index; range: 1-16

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.30.5.1.3	gponOnu-QinQCvlanID	Int	Read-write	CVLAN ID	Range: 1-4085, or 0xffff (null)
1.3.6.1.4.1.5875.800.-3.30.5.1.4	gponOnu-QinQCvlanPriority	Int	Read-write	CVLAN priority	Range: 0-7, or 0xff (null)
1.3.6.1.4.1.5875.800.-3.30.5.1.5	gponOnuQinQ-TransVlanID	Int	Read-write	Translated VLAN ID	Range: 1-4085, or 0xffff (null)
1.3.6.1.4.1.5875.800.-3.30.5.1.6	gponOnuQinQ-TransVLAN-Priority	Int	Read-write	Translated VLAN priority	Range: 0-7, or 0xff (null)
1.3.6.1.4.1.5875.800.-3.30.5.1.7	gponOnu-QinQSvlanID	Int	Read-write	SVLAN ID	Range: 1-4085, or 0xffff (null)
1.3.6.1.4.1.5875.800.-3.30.5.1.8	gponOnu-QinQSvlanPriority	Int	Read-write	SVLAN priority	Range: 0-7, or 0xff (null)
1.3.6.1.4.1.5875.800.-3.30.5.1.12	gponOnuQinQO-operation	Int	Read-write	Operation	4: create 6: delete 7: modify

Getting the Next Available Service ID

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.101.2.1.1	onuIndex	Int	Read-only	ONU index	Index
1.3.6.1.4.1.5875.800.-3.30.6.1.1	gponGetNextServiceID	Int	Read-only	Getting the next available service ID	Range: 1-16

6.21 Service Model Profile

Service Model Profile

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.57.-1.1.1	busiModeID	Int	Read-only	Profile ID (index)	Index; range: 1-64
1.3.6.1.4.1.5875.800.3.57.-1.1.2	businessMode-Name	String	Read-write	Profile name	Maximum length: 20 bytes
1.3.6.1.4.1.5875.800.3.57.-1.1.3	businessMode-ServiceType	Int	Read-write	Service type	0: unicast 1: multicast 2: IGMP Up Protocol
1.3.6.1.4.1.5875.800.3.57.-1.1.4	businessMode-CVlanType	Int	Read-write	CVLAN mode	1: tag 3: transparent (transparent transmission)
1.3.6.1.4.1.5875.800.3.57.-1.1.5	businessMode-TranState	Int	Read-write	Translation state (enabled or disabled)	1: enable 0: disable
1.3.6.1.4.1.5875.800.3.57.-1.1.6	businessMode-QinQState	Int	Read-write	QinQ state (enabled or disabled)	1: enable 0: disable
1.3.6.1.4.1.5875.800.3.57.-1.1.10	businessMode-nodeAction	Int	Read-write	Operation	4: create 6: delete 7: modify

Getting the Next Service Model Profile ID

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.57.-2	businessMode-NextFreeIndex	Int	Read-only	Getting the next service model profile ID	Index; range: 1-64

6.22 WAN Connection Readback

WAN Connection Readback (1)

**Caution:**

Only the snmpget operation is allowed, and data of only one ONU can be collected each time.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-.3.101.2.1.1	onuIndex	Int	Read-only	ONU index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800-.3.52.1.1.1	onuPonBand-widthProfileOnuIndex	Int	Read-only	WAN connection index	Index
1.3.6.1.4.1.5875.800-.3.58.1.1.1	getWanIPv4	STRING	Read-only	Static IPv4 address for the WAN connection	Range: 0-100
1.3.6.1.4.1.5875.800-.3.58.1.1.2	getWanIPv6	STRING	Read-only	Static IPv6 address for the WAN connection	Range: 0-200
1.3.6.1.4.1.5875.800-.3.58.1.1.3	getWanMAC	STRING	Read-only	MAC address for the WAN connection	Readable hexadecimal string with 12 characters

WAN Connection Readback (2)

**Note:**

Only the snmpget operation is allowed, and data of only one ONU can be collected each time.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.58.2.1.1	generalwanServiceStatusOnuIndex	Integer32	Read-only	ONU index	SLOT × 33554432 + PON × 524288 + ONU × 256
1.3.6.1.4.1.5875.-800.3.58.2.1.2	generalwanStatusIndex	Integer32	Read-only	WAN service index	-
1.3.6.1.4.1.5875.-800.3.58.2.1.3	generalwanStatusMode	Integer32	Read-only	WAN connection mode (Wan_Mode)	◆ 0: TR069 ◆ 1: INTERNET ◆ 2: TR069_INTER-NET ◆ 3: multicast ◆ 4: VOIP ◆ 5: VOIP_INTER-NET ◆ 6: IPTV ◆ 7: RADIUS ◆ 8: RADIUS_INTER-NET ◆ 9: UNICAST_IPTV ◆ 10: MULTICAST_IPTV ◆ 100: Other
1.3.6.1.4.1.5875.-800.3.58.2.1.4	generalwanStatusConnType	Integer32	Read-only	WAN connection type (Wan_Conn_Type)	◆ 0: bridge ◆ 1: route
1.3.6.1.4.1.5875.-800.3.58.2.1.5	generalwanStatusVlanId	Integer32	Read-only	VLAN ID for the WAN connection (Wan_Vlan_Id)	Range: 1-4085, or 0xffff (null) Default: 0xffff
1.3.6.1.4.1.5875.-800.3.58.2.1.6	generalwanStatusVlanCos	Integer32	Read-only	802.1p priority for the WAN connection (Wan_Cos)	Range: 0-7, or 0xffff (null) Default: 0xffff
1.3.6.1.4.1.5875.-800.3.58.2.1.7	generalwanStatusNatEnable	Integer32	Read-only	Whether to enable NAT for the WAN connection (Wan_NAT_Enable)	◆ 0: disable ◆ 1: enable Default: 1

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.58.2.1.8	generalwanStatusDsp	Integer32	Read-only	Way to obtain an IP address for the WAN connection (Wan_D_S_P)	◆ 0: DHCP ◆ 1: static ◆ 2: PPPoE ◆ 0xffff: null
1.3.6.1.4.1.5875.-800.3.58.2.1.9	generalwanServiceStatusStack-Mode	Integer32	Read-only	Protocol stack mode for the WAN connection (Wan_Ip_Stack_Mode)	◆ 0: IPv4 ◆ 1: IPv4&IPv6 ◆ 2: IPv6 Default: 0
1.3.6.1.4.1.5875.-800.3.58.2.1.10	generalwanServiceStatusSrcType	Integer32	Read-only	Source of the IPv6 address (Wan_ipv6_src_type)	◆ 0: DHCPv6 ◆ 1: SLAAC Default: 1
1.3.6.1.4.1.5875.-800.3.58.2.1.11	generalwanServiceStatusPrefixSrc-Type	Integer32	Read-only	Source of the IPv6 address prefix (Wan_prefix_src_type)	◆ 0: delegate ◆ 1: static Default: 0
1.3.6.1.4.1.5875.-800.3.58.2.1.12	generalwanStatusIpAddress	OCTET STRING	Read-only	Static IPv4 address for the WAN connection	0-100
1.3.6.1.4.1.5875.-800.3.58.2.1.13	generalwanStatusIPSubnet	Display String	Read-only	Subnet mask for the WAN connection (Wan_Mask)	-
1.3.6.1.4.1.5875.-800.3.58.2.1.14	generalwanStatusIpGateway	Display String	Read-only	Default gateway for the WAN connection (Wan_Gateway)	-
1.3.6.1.4.1.5875.-800.3.58.2.1.15	generalwanStatus-MasterDns	Display String	Read-only	Master DNS for the WAN connection (Wan_Master_DNS)	-
1.3.6.1.4.1.5875.-800.3.58.2.1.16	generalwanStatus-SlaveDns	Display String	Read-only	Slave DNS for the WAN connection (Wan_Slave_DNS)	-
1.3.6.1.4.1.5875.-800.3.58.1.17	generalwanServiceStatusIpv6IpAddress	OCTET STRING	Read-only	Static IPv6 address for the WAN connection	0 to 200

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.58.2.1.18	generalwanServiceStatusIpv6IpSubnet	Integer32	Read-only	Length of IPv6 address prefix for the WAN connection (Wan_Ip6_Mask)	Range: 1-65535; default: 64
1.3.6.1.4.1.5875.-800.3.58.2.1.19	generalwanServiceStatusIpv6Gateway	Display String	Read-only	Default IPv6 gateway for the WAN connection (Wan_Ip6_Gateway)	-
1.3.6.1.4.1.5875.-800.3.58.2.1.20	generalwanServiceStatusIpv6MasterDns	Display String	Read-only	IPv6 master DNS for the WAN connection (Wan_Ip6_Master_DNS)	-
1.3.6.1.4.1.5875.-800.3.58.2.1.21	generalwanServiceStatusIpv6SlaveDns	Display String	Read-only	IPv6 slave DNS for the WAN connection (Wan_Ip6_Slave_DNS)	-
1.3.6.1.4.1.5875.-800.3.58.2.1.22	generalwanServiceStatusIpv6StaticPrefix	Display String	Read-only	IPv6 address prefix pool for the WAN connection (Wan_Ip6_Static_Prefix)	-
1.3.6.1.4.1.5875.-800.3.58.2.1.23	generalwanServiceStatusIpv6StaticPrefixSubnet	Integer32	Read-only	Length of IPv6 prefix pool for the WAN connection	-
1.3.6.1.4.1.5875.-800.3.58.2.1.24	generalwanStatusPPPoEProxy	Integer32	Read-only	Whether to enable PPPoE proxy for the WAN connection (Wan_PPPOE_Proxy)	◆ 0: disable ◆ 1: enable
1.3.6.1.4.1.5875.-800.3.58.2.1.25	generalwanStatusPPPoEUsername	Display String	Read-only	Username for the PPPoE connection (Wan_PPPOE_Username)	Length: 32 bytes

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.58.2.1.26	generalwanStatusPPPoEPassword	Display String	Read-only	Password for the PPPoE connection (Wan_PPPOE_Password)	Length: 32 bytes
1.3.6.1.4.1.5875.-800.3.58.2.1.27	generalwanStatusPPPoEServer	Display String	Read-only	Name of the PPPoE service (Wan_PPPOE_NAME)	Length: 32 bytes
1.3.6.1.4.1.5875.-800.3.58.2.1.28	generalwanServiceStatusAuthMode	Integer32	Read-only	PPPoE authentication mode (Wan_PPPOE_AUTHMODE)	◆ 0: AUTO ◆ 1: CHAP ◆ 2: MS-CHAP ◆ 3: PAP
1.3.6.1.4.1.5875.-800.3.58.2.1.29	generalwanStatusPPPoEMode	Integer32	Read-only	PPPoE dial-up mode (Wan_PPPOE_MODE)	◆ 0: Auto connect ◆ 1: connect when have payload
1.3.6.1.4.1.5875.-800.3.58.2.1.30	generalwanServiceStatusIdleTime	Integer32	Read-only	PPPoE idle timeout (Wan_PPPOE_IDLETIME)	0 to 2000
1.3.6.1.4.1.5875.-800.3.58.2.1.31	generalwanStatusQoSEnable	Integer32	Read-only	Whether to enable QoS for the WAN connection (Wan_QoS_Enable)	◆ 0: disable ◆ 1: enable
1.3.6.1.4.1.5875.-800.3.58.2.1.32	generalwanStatusVlanMode	Integer32	Read-only	VLAN mode	◆ 1: tag ◆ 3: transparent (transparent transmission)
1.3.6.1.4.1.5875.-800.3.58.2.1.33	generalwanStatusTranslationState	Integer32	Read-only	Translation state	◆ 1: enable ◆ 0: disable
1.3.6.1.4.1.5875.-800.3.58.2.1.34	generalwanStatusTranVlanID	Integer32	Read-only	Translated VLAN ID (Translation value)	Range: 1-4085, or 0xffff (null)
1.3.6.1.4.1.5875.-800.3.58.2.1.35	generalwanStatusTranCos	Integer32	Read-only	Translated intra-PON priority or COS (COS)	Range: 0-7, or 0xffff (null)
1.3.6.1.4.1.5875.-800.3.58.2.1.36	generalwanStatusQinqState	Integer32	Read-only	QinQ state	◆ 1: enable ◆ 0: disable

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.58.2.1.37	generalwanStatusTPID	Integer32	Read-only	Tag protocol identifier (TPID)	Range: 0 to 0xffff; recommended: 0x8100
1.3.6.1.4.1.5875.-800.3.58.2.1.38	generalwanStatusSvlanID	Integer32	Read-only	SVLAN ID	Range: 1-4085, 0xffff (null) or 0 (compatible with old network management systems)
1.3.6.1.4.1.5875.-800.3.58.2.1.39	generalwanStatusSvlanCos	Integer32	Read-only	Intra-PON priority or COS (PON COS)	Range: 0-7, or 0xffff (null)
1.3.6.1.4.1.5875.-800.3.58.2.1.40	generalwanStatusDhcpRemoteID	Display String	Read-only	DHCP remote identifier (DHCP RemoteId)	Length: 10 bytes
1.3.6.1.4.1.5875.-800.3.58.2.1.41	generalwanStatus-bindport	Integer32	Read-only	Binding port	Bit0 to bit3 denote LAN1, LAN2, LAN3 and LAN4 ports respectively. Bit4 to bit7 denote SSID1, SSID2, SSID3 and SSID4 ports for 2.4G application respectively. Bit8 to bit11 denote SSID1, SSID2, SSID3 and SSID4 ports for 5G application respectively. When a port is bound, the value for the port is 1, otherwise, it is 0. When all the bits take the value 0, none of the ports are bound.
1.3.6.1.4.1.5875.-800.3.58.2.1.42	generalwanServiceStatusType	Integer32	Read-only	Service type (TCONT)	It is 0 by default and cannot be configured. ◆ 0: NONE ◆ 1: DATA ◆ 2: IPTV ◆ 3: MANAGEMENT ◆ 4: VOIP

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.58.2.1.44	generalwanServiceStatusGemport	Integer32	Read-only	Gemport	-
1.3.6.1.4.1.5875.-800.3.58.2.1.45	generalwanServiceStatusUpnpEnable	Integer32	Read-only	Enabling / disabling UPNP	◆ 0: Disable ◆ 1: Enable

6.23 Replacing the Physical Identifier of an ONU

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.10-1.34.1.1	onuMACReplaceOnuIndex	Int	Not-accessible	ONU index (logical index)	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.3.59.-1.1.1	onuMACReplaceSlot	Int	Read-only	Slot number	-
1.3.6.1.4.1.5875.800.3.59.-1.1.2	onuMACReplacePon	Int	Read-only	PON port number	-
1.3.6.1.4.1.5875.800.3.59.-1.1.3	onuMACReplaceOnuId	Int	Read-only	ONU number	-
1.3.6.1.4.1.5875.800.3.59.-1.1.5	onuMACReplaceMACBefore	String	Read-only	Original MAC address	Length: 12 bytes. The last eight bytes should be "0 to 9" or "a to f" for a GPON ONU.
1.3.6.1.4.1.5875.800.3.59.-1.1.6	onuMACReplaceNewMACaddress	String	Read-write	New MAC address	Length: 12 bytes. The last eight bytes should be "0 to 9" or "a to f" for a GPON ONU.
1.3.6.1.4.1.5875.800.3.59.-1.1.8	onuMACReplaceStatus	Int	Read-write	Operation	4: replace 6: delete

6.24 Line Identifier Switch

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.62.-1	lineIdentifierOption82Switch	Int	Read-only	Switch for the line identifier Option82	1: Enable 0: Disable

6.25 Configuring the IPv6 WAN Connection Service



Note:

- ◆ In all cases, parameter 3 {WAN connection mode} and parameter 4 {WAN connection type} need to be configured.
 - ◆ When the WAN connection type is 0 (bridge),
 - ▶ Parameters 5 {VLAN ID}, 6 {802.1p priority}, and 41 {binding port} are required.
 - ▶ Parameters 31 {Qos enable} to 39 {intra-PON priority or CoS} are optional.
 - ▶ The other parameters are non-configurable, and need not be delivered.
 - ◆ When the WAN connection type is 1 (route), parameters 5 {VLAN ID}, 6 {802.1p priority}, 8 {way to obtain the address for the WAN connection} and 41 {binding port} are required.
 - ▶ When parameter 8 {way to obtain the address for the WAN connection} is set to DHCP, parameters 12 to 30 cannot be configured.
 - ▶ When parameter 8 {way to obtain the address for the WAN connection} is set to Static, parameters 12 to 23 are valid, while parameters 24 to 30 are invalid.
 - ▶ When parameter 8 {way to obtain the address for the WAN connection} is set to PPPoE, parameters 12 to 23 are invalid, while parameters 24 to 30 are configurable.
-

Configuring the IPv6 WAN Connection Service

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.52.3.1.1	generalwanServiceOnuIndex	Integer32	Read-only	ONU index	$\text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256$
1.3.6.1.4.1.5875.800-3.52.3.1.2	generalwanIndex	Integer32	Read-only	WAN service index	-
1.3.6.1.4.1.5875.800-3.52.3.1.3	generalwanMode	Integer32	Read-create	WAN connection mode (Wan_Mode)	0: TR069 1: INTERNET 2: TR069_INTERNET 3: multicast 4: VOIP 5: VOIP_INTERNET 6: IPTV 7: RADIUS 8: RADIUS_INTERNET 9: UNICAST_IPTV 10: MULTICAST_IPTV 100: Other
1.3.6.1.4.1.5875.800-3.52.3.1.4	generalwanConnType	Integer32	Read-create	WAN connection type (Wan_Conn_Type)	0: bridge 1: route
1.3.6.1.4.1.5875.800-3.52.3.1.5	generalwanVlanId	Integer32	Read-create	VLAN ID for the WAN connection (Wan_Vlan_Id)	Range: 1-4085, or 0xffff (null); default: 0xffff
1.3.6.1.4.1.5875.800-3.52.3.1.6	generalwanVlanCos	Integer32	Read-create	802.1p priority for the WAN connection (Wan_Cos)	Range: 0-7, or 0xffff (null); default: 0xffff
1.3.6.1.4.1.5875.800-3.52.3.1.7	generalwanNatEnable	Integer32	Read-create	Whether to enable NAT for the WAN connection (Wan_NAT_Enable)	0: disable 1: enable Default: 1
1.3.6.1.4.1.5875.800-3.52.3.1.8	generalwanDsp	Integer32	Read-create	Way to obtain the address for the WAN connection (Wan_D_S_P)	0: DHCP 1: static 2: PPPoE 0xffff: null

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.52.3.1.9	generalwanServiceStackMode	Integer32	Read-create	Protocol stack mode for the WAN connection	0: IPv4 1: IPv4&IPv6 2: IPv6 Default: 0
1.3.6.1.4.1.5875.800-3.52.3.1.10	generalwanServiceSrcType	Integer32	Read-create	Source of the IPv6 address (Wan_ipv6_src_type)	0: DHCPv6 1: SLAAC Default: 1 This field is valid, readable and writable when the way to obtain the address for the WAN connection is DHCP or PPPoE.
1.3.6.1.4.1.5875.800-3.52.3.1.11	generalwanServicePrefixSrcType	Integer32	Read-create	Source of the IPv6 address prefix (Wan_prefix_src_type)	0: delegate 1: static Default: 0 This field is displayed as Static and is read-only when the way to obtain the address for the WAN connection is set to Static, and displayed as delegate and is read-only when the aforesaid setting is DHCP or PPPoE.
1.3.6.1.4.1.5875.800-3.52.1.1.12	generalwanIpAddress	OCTET STRING	Read-create	Static IP address for the WAN connection (Wan_Ip_Address)	This field is read-only when the way to obtain the address for the WAN connection is set to PPPoE or DHCP and the protocol stack mode for the WAN connection is not set to 2. It is readable and writable when the the way to obtain the address for the WAN connection is set to Static and the protocol stack mode for the WAN connection is not set to 2.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.52.3.1.13	generalwanIP-Subnet	OCTET STRING	Read-create	Subnet mask for the WAN connection (Wan_Mask)	This field is read-only when the way to obtain the address for the WAN connection is set to PPPoE or DHCP and the protocol stack mode for the WAN connection is not set to 2. It is readable and writable when the the way to obtain the address for the WAN connection is set to Static and the protocol stack mode for the WAN connection is not set to 2.
1.3.6.1.4.1.5875.800-3.52.3.1.14	generalwanIp-Gateway	OCTET STRING	Read-create	Default gateway for the WAN connection (Wan_Gateway)	This field is read-only when the way to obtain the address for the WAN connection is set to PPPoE or DHCP and the protocol stack mode for the WAN connection is not set to 2. It is readable and writable when the the way to obtain the address for the WAN connection is set to Static and the protocol stack mode for the WAN connection is not set to 2.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.52.3.1.15	generalwan-MasterDns	OCTET STRING	Read-create	Master DNS for the WAN connection (Wan_Master_DNS)	This field is read-only when the way to obtain the address for the WAN connection is set to PPPoE or DHCP and the protocol stack mode for the WAN connection is not set to 2. It is readable and writable when the the way to obtain the address for the WAN connection is set to Static and the protocol stack mode for the WAN connection is not set to 2.
1.3.6.1.4.1.5875.800-3.52.3.1.16	generalwanSlaveDns	OCTET STRING	Read-create	Slave DNS for the WAN connection (Wan_Slave_DNS)	This field is read-only when the way to obtain the address for the WAN connection is set to PPPoE or DHCP and the protocol stack mode for the WAN connection is not set to 2. It is readable and writable when the the way to obtain the address for the WAN connection is set to Static and the protocol stack mode for the WAN connection is not set to 2.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.52.3.1.17	generalwanServiceIPv6IpAddress	OCTET STRING	Read-create	Static IPv6 address for the WAN connection (Wan_Ip6_Address)	This field is read-only when the way to obtain the address for the WAN connection is set to PPPoE or DHCP and the protocol stack mode for the WAN connection is not set to 0. It is readable and writable when the the way to obtain the address for the WAN connection is set to Static and the protocol stack mode for the WAN connection is not set to 0.
1.3.6.1.4.1.5875.800-3.52.3.1.18	generalwanServiceIPv6IpSubnet	Integer32	Read-create	Length of IPv6 address prefix for the WAN connection (Wan_Ip6_Mask)	Range: 1-128; default: 64
1.3.6.1.4.1.5875.800-3.52.3.1.19	generalwanServiceIPv6Gateway	OCTET STRING	Read-create	Default IPv6 gateway for the WAN connection (Wan_Ip6_Gateway)	This field is read-only when the way to obtain the address for the WAN connection is set to PPPoE or DHCP and the protocol stack mode for the WAN connection is not set to 0. It is readable and writable when the the way to obtain the address for the WAN connection is set to Static and the protocol stack mode for the WAN connection is not set to 0.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.52.3.1.20	generalwanServiceIpv6MasterDns	OCTET STRING	Read-create	IPv6 master DNS for the WAN connection (Wan_Ip6_Master_DNS)	This field is read-only when the way to obtain the address for the WAN connection is set to PPPoE or DHCP and the protocol stack mode for the WAN connection is not set to 0. It is readable and writable when the the way to obtain the address for the WAN connection is set to Static and the protocol stack mode for the WAN connection is not set to 0.
1.3.6.1.4.1.5875.800-3.52.3.1.21	generalwanServiceIpv6SlaveDns	OCTET STRING	Read-create	IPv6 slave DNS for the WAN connection (Wan_Ip6_Slave_DNS)	This field is read-only when the way to obtain the address for the WAN connection is set to PPPoE or DHCP and the protocol stack mode for the WAN connection is not set to 0. It is readable and writable when the the way to obtain the address for the WAN connection is set to Static and the protocol stack mode for the WAN connection is not set to 0.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.52.3.1.22	generalwanServiceIpv6Static-Prefix	OCTET STRING	Read-create	IPv6 address prefix pool for the WAN connection (Wan_Ip6_Static_Prefix)	This field is read-only when the way to obtain the address for the WAN connection is set to PPPoE or DHCP and the protocol stack mode for the WAN connection is not set to 0. It is readable and writable when the way to obtain the address for the WAN connection is set to Static and the protocol stack mode for the WAN connection is not set to 0. Example: FEC0:0:0:1::/64 2012::/64
1.3.6.1.4.1.5875.800-3.52.3.1.24	generalwanPP-PoeProxy	Integer32	Read-create	Whether to enable PPPoE proxy for the WAN connection (Wan_PPPOE_Proxy)	0: disable 1: enable This field is valid only when the way to obtain the address for WAN connection is set to PPPoE.
1.3.6.1.4.1.5875.800-3.52.3.1.25	generalwanPP-PoeUsername	OCTET STRING	Read-create	Username for the PPPoE connection (Wan_PPPOE_Username)	Length: 32 bytes This field is valid only when the way to obtain the address for WAN connection is set to PPPoE.
1.3.6.1.4.1.5875.800-3.52.3.1.26	generalwanPP-PoePassword	OCTET STRING	Read-create	Password for the PPPoE connection (Wan_PPPOE_Password)	Length: 32 bytes This field is valid only when the way to obtain the address for WAN connection is set to PPPoE.
1.3.6.1.4.1.5875.800-3.52.3.1.27	generalwanPP-PoeServer	OCTET STRING	Read-create	Name of the PPPoE service (Wan_PPPOE_NAME)	Length: 32 bytes This field is valid only when the way to obtain the address for WAN connection is set to PPPoE.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.52.3.1.28	generalwanServiceAuthMode	Integer32	Read-create	PPPoE authentication mode (Wan_PPPOE_AUTH-MODE)	0: AUTO 1: CHAP 2: MS-CHAP 3: PAP This field is valid only when the way to obtain the address for WAN connection is set to PPPoE.
1.3.6.1.4.1.5875.800-3.52.3.1.29	generalwanPP-PoeMode	Integer32	Read-create	PPPoE dial-up mode (Wan_PPPOE_-MODE)	0: Auto connect 1: connect when have payload This field is valid only when the way to obtain the address for WAN connection is set to PPPoE.
1.3.6.1.4.1.5875.800-3.52.3.1.30	generalwanServiceIdleTime	Integer32	Read-create	PPPoE idle timeout (Wan_PPPOE_I-DLETIME)	Range: 0-2000 This field is valid only when the way to obtain the address for WAN connection is set to PPPoE.
1.3.6.1.4.1.5875.800-3.52.3.1.31	generalwanQoSEnable	Integer32	Read-create	Whether to enable QoS for the WAN connection (Wan_Qos_Enable)	0: disable 1: enable
1.3.6.1.4.1.5875.800-3.52.3.1.32	generalwanVlanMode	Integer32	Read-create	VLAN mode	1: tag 3: transparent (transparent transmission)
1.3.6.1.4.1.5875.800-3.52.3.1.33	generalwan-translationstate	Integer32	Read-create	Translation state	1: enable 0: disable
1.3.6.1.4.1.5875.800-3.52.3.1.34	generalwan-TranVlanID	Integer32	Read-create	Translated VLAN ID (Translation value)	Range: 1-4085, or 0xffff (null)
1.3.6.1.4.1.5875.800-3.52.3.1.35	generalwan-TranCos	Integer32	Read-create	Translated intra-PON priority or CoS (CoS)	Range: 0-7, or 0xffff (null)
1.3.6.1.4.1.5875.800-3.52.3.1.36	generalwan-QinqState	Integer32	Read-create	Qinq state	1: enable 0: disable
1.3.6.1.4.1.5875.800-3.52.3.1.37	generalwanT-PID	Integer32	Read-create	Tag protocol identifier (TPID)	Range: 0 to 0xffff; recommended: 0x8100

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.52.3.1.38	generalwanSvlanID	Integer32	Read-create	SVLAN ID	Range: 1-4085, or 0xffff (null)
1.3.6.1.4.1.5875.800-3.52.3.1.39	generalwanSvlanCos	Integer32	Read-create	Intra-PON priority or CoS (PON CoS)	Range: 0-7, or 0xffff (null)
1.3.6.1.4.1.5875.800-3.52.3.1.40	generalwanDhcpRemoteID	OCTET STRING	Read-create	DHCP remote identifier (DHCP RemoteId)	Length: 10 bytes This field is valid only when the address type is DHCP.
1.3.6.1.4.1.5875.800-3.52.3.1.41	generalwanbindport	Integer32	Read-create	Binding port	Bit0 to Bit3 denote LAN1, LAN2, LAN3 and LAN4 ports respectively. Bit4 to Bit7 denote SSID1, SSID2, SSID3 and SSID4 ports for 2.4G application respectively. Bit8 to Bit11 denote SSID1, SSID2, SSID3 and SSID4 ports for 5G application respectively. When a port is bound, the value for the port is 1, otherwise, it is 0. When all the bits take the value 0, none of the ports are bound.
1.3.6.1.4.1.5875.800-3.52.3.1.42	generalwanServiceType	Integer32	Read-create	Service type (TCONT)	0: NONE 1: DATA 2: IPTV 3: MANAGEMENT 4: VoIP
1.3.6.1.4.1.5875.800-3.52.3.1.100	generalwanServiceAction	Integer32	Read-create	Operation	4: create 6: delete 7: modify

Getting the Next Available Service ID

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.52.-4.1.1	generaWanserviceGetFreeOnuIndex	Int	Read-only	ONU index	Index
1.3.6.1.4.1.5875.800.3.52.-4.1.2	generalgetNextFreeIndexwanIndex	Int	Read-only	Getting the next available service ID	Getting an available service ID

Applying the Configuration of the WAN Connection Service

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.52.-5.1.1	generalApplyWanServiceOnuIndex	Int	Read-only	ONU index	-
1.3.6.1.4.1.5875.800.3.52.-5.1.2	generalapplyWanAction	Int	Read-write	Applying the configuration of the WAN connection service	1: Apply

6.26 Querying WAN Connection Bandwidth Profile for ONUs at All Levels

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.55.-2.1.1	onuWanServiceBwProfileNewSlotIndex	Int	Read-only	Slot number	Index
1.3.6.1.4.1.5875.800.3.55.-2.1.2	onuWanServiceBwProfileNewPonIndex	Int	Read-only	PON port number	Index
1.3.6.1.4.1.5875.800.3.55.-2.1.3	onuWanServiceBwProfileNewOnuIndex	Int	Read-only	ONU authorization number	Index

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.55.-2.1.4	onuWanServiceBwProfile-NewWanServiceIndex	Int	Read-only	ID of the WAN connection	Range: 0-8
1.3.6.1.4.1.5875.800.3.55.-2.1.5	onuWanServiceBwProfileNewUpBwProfileId	Int	Read-only	ID of the upstream bandwidth profile	Range: 0-1024
1.3.6.1.4.1.5875.800.3.55.-2.1.6	onuWanServiceBwProfileNewUpBwProfileName	OCTET STRING	Read-only	Name of the upstream bandwidth profile	Associated with ONU PON Port Bandwidth Profile and Binding of the Profile (Applicable to FTTH / FTTB).
1.3.6.1.4.1.5875.800.3.55.-2.1.7	onuWanServiceBwProfileNewUpMaxAllowBw	Int	Read-only	Maximum upstream bandwidth	-
1.3.6.1.4.1.5875.800.3.55.-2.1.8	onuWanServiceBwProfile-NewDownBw-ProfileId	Int	Read-only	ID of the downstream bandwidth profile	Range: 0-1024
1.3.6.1.4.1.5875.800.3.55.-2.1.9	onuWanServiceBwProfile-NewDownBw-ProfileName	OCTET STRING	Read-only	Name of the downstream bandwidth profile	-
1.3.6.1.4.1.5875.800.3.55.-2.1.10	onuWanServiceBwProfile-NewDownMax-AllowBw	Int	Read-only	Maximum downstream bandwidth	-

6.27 Collecting ONU Network Side Information



Note:

Only the snmpget operation is allowed, and data of only one ONU can be collected each time.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.58.3.1.1	wanInformation-StaticOnuIndex	Integer32	Read-only	ONU index	$\text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256$
1.3.6.1.4.1.5875.-800.3.58.3.1.2	wanInformation-StaticIndex	Integer32	Read-only	WAN service index	-
1.3.6.1.4.1.5875.-800.3.58.3.1.3	wanInformation-StaticName	OCTET STRING	Read-only	WAN connection name	-
1.3.6.1.4.1.5875.-800.3.58.3.1.5	wanInformation-StaticVlanId	Integer32	Read-only	VLAN ID for the WAN connection (Wan_Vlan_Id)	Range: 1-4085, or 0xffff (null) Default: 0xffff
1.3.6.1.4.1.5875.-800.3.58.3.1.6	wanInformation-StaticVlanCos	Integer32	Read-only	802.1p priority for the WAN connection (Wan_Cos)	-
1.3.6.1.4.1.5875.-800.3.58.3.1.8	wanInformation-StaticDsp	Integer32	Read-only	Way to obtain an IP address for the WAN connection (Wan_D_S_P)	◆ 0: DHCP ◆ 1: Static ◆ 2: PPPoE ◆ 0xffff: null
1.3.6.1.4.1.5875.-800.3.58.3.1.31	wanInformation-StaticQosEnable	Integer32	Read-only	Whether to enable QoS for the WAN connection (Wan_Qos_Enable)	◆ 0: disable ◆ 1: enable
1.3.6.1.4.1.5875.-800.3.58.3.1.46	wanInformation-StaticLinkStatus	Integer32	Read-only	WAN connection status	◆ 0: DOWN ◆ 1: UP
1.3.6.1.4.1.5875.-800.3.58.3.1.9	wanInformation-StaticStackMode	Integer32	Read-only	Protocol stack mode for the WAN connection (Wan_Ip_Stack_Mode)	◆ 0: IPv4 ◆ 1: IPv4&IPv6 ◆ 2: IPv6 Default: 0

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.58.3.1.12	wanInformation-StaticIpAddress	OCTET STRING	Read-only	Static IPv4 address for the WAN connection	0-100 Mask included IP address format: X.X.X.X/X.X.X.X
1.3.6.1.4.1.5875.-800.3.58.3.1.14	wanInformation-StaticIpGateway	OCTET STRING	Read-only	Default gateway for the WAN connection (Wan_Gateway)	-
1.3.6.1.4.1.5875.-800.3.58.3.1.15	wanInformation-StaticMasterDns	OCTET STRING	Read-only	Master DNS for the WAN connection (Wan_Master_DNS)	-
1.3.6.1.4.1.5875.-800.3.58.3.1.16	wanInformation-StaticSlaveDns	OCTET STRING	Read-only	Slave DNS for the WAN connection (Wan_Slave_DNS)	-
1.3.6.1.4.1.5875.-800.3.58.1.17	wanInformation-StaticIPv6IpAddress	OCTET STRING	Read-only	Static IPv6 address for the WAN connection	IP address / prefix length of the IP address
1.3.6.1.4.1.5875.-800.3.58.3.1.19	wanInformation-StaticIPv6Gateway	OCTET STRING	Read-only	Default IPv6 gateway for the WAN connection (Wan_Ip6_Gateway)	-
1.3.6.1.4.1.5875.-800.3.58.3.1.20	wanInformation-StaticIPv6MasterDns	OCTET STRING	Read-only	IPv6 master DNS for the WAN connection (Wan_Ip6_Master_DNS)	-
1.3.6.1.4.1.5875.-800.3.58.3.1.21	wanInformation-StaticIPv6SlaveDns	OCTET STRING	Read-only	IPv6 slave DNS for the WAN connection (Wan_Ip6_Slave_DNS)	-
1.3.6.1.4.1.5875.-800.3.58.3.1.22	wanInformation-StaticIPv6StaticPrefix	OCTET STRING	Read-only	IPv6 address prefix pool for the WAN connection (Wan_Ip6_Static_Prefix)	IP address / prefix length of the IP address
1.3.6.1.4.1.5875.-800.3.58.3.1.47	wanInformation-StaticMAC	OCTET STRING	Read-only	MAC address for the WAN connection	Readable hexadecimal string with 12 characters

6.28 ONU Weak Optical Power Detection

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.51.4.1.1	fhOnuRxPower-LowDetectionObjtype	INTEGER	Read-only	Object type	Index 1: GPON 2: XGPON 3: XGS PON
1.3.6.1.4.1.5875.8-00.3.51.4.1.2	fhOnuRxPower-LowDetectionSwitch	Integer32	Read-write	Weak optical power detection switch	0: disable 1: enable
1.3.6.1.4.1.5875.8-00.3.51.4.1.3	fhOnuRxPower-LowDetectionReportThreshold	Integer32	Read-write	Weak optical power report threshold	Range: -3200 to -2000 Unit: 0.01 dBm The fhOnuRxPowerLowDetectionReportThreshold value should be smaller than the fhOnuRxPowerLowDetectionClearThreshold value. This parameter is invalid if the detection switch is disabled.
1.3.6.1.4.1.5875.8-00.3.51.4.1.4	fhOnuRxPower-LowDetectionClearThreshold	Integer32	Read-write	Weak optical power clear threshold	Range: -3200 to -2000 Unit: 0.01 dBm This parameter is invalid if the detection switch is disabled.
1.3.6.1.4.1.5875.8-00.3.51.4.1.20	fhOnuRxPower-LowDetectionAction	Integer32	Read-write	Operation	7: modify

7 Voice Service Configuration Function

This chapter introduces OIDs and related information of the nodes under the voice service configuration function module.

7.1 Configuring Users on Voice Ports

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.101.4.1.1	potsIndex	Int	Read-only	Voice port index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.-20.2.1.1.2	potsEnable	Int	Read-write	Port enabling	1: enable 0: disable
1.3.6.1.4.1.5875.800.-20.2.1.1.3	telNum	String	Read-write	Telephone number	Containing no more than 8 characters
1.3.6.1.4.1.5875.800.-20.2.1.1.4	bindingSignal-Name	String	Read-write	Signaling service name	Softswitch platform parameter profile
1.3.6.1.4.1.5875.800.-20.2.1.1.5	signalVlan	Int	Read-write	Signaling VLAN	NGPON: Range: 1-4085
1.3.6.1.4.1.5875.800.-20.2.1.1.6	svlanEnable	Int	Read-write	SVLAN enable/disable state	1: enable 2: disable
1.3.6.1.4.1.5875.800.-20.2.1.1.7	svlanId	Int	Read-write	SVLAN ID	Range: 0-4085, or 0xffff
1.3.6.1.4.1.5875.800.-20.2.1.1.8	svlanCosFor5516	Int	Read-write	Outer CoS	Range: 0-7, or 0xff
1.3.6.1.4.1.5875.800.-20.2.1.1.9	cvalnCos-For5516	Int	Read-write	Inner CoS	Range: 0-7, or 0xff
1.3.6.1.4.1.5875.800.-20.2.1.1.11	voiceDomain	String	Read-write	Endpoint domain name	-
1.3.6.1.4.1.5875.800.-20.2.1.1.12	protocolPort	Int	Read-write	ONU protocol port	Range: 1-65535
1.3.6.1.4.1.5875.800.-20.2.1.1.13	userNameSipTel-Num	String	Read-write	Endpoint user name / SIP phone number	-
1.3.6.1.4.1.5875.800.-20.2.1.1.14	sipUserName	String	Read-write	User name for SIP authentication	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-20.2.1.1.15	sipPassword	String	Read-write	User password for SIP authentication	-
1.3.6.1.4.1.5875.800.-20.2.1.1.16	bindingPotsCfg-ProfileName	String	Read-write	Name of the advanced voice port configuration profile	-
1.3.6.1.4.1.5875.800.-20.2.1.1.20	potsUserCfgAction	Int	Read-write	Operation	7: configure

7.2 Softswitch Platform Parameter Configuration Profile



Note:

The commands work on ONUs. This profile is applied to “Configuring Users on Voice Ports”.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.20.1-1.1.1	signalProfileId	Int	Read-only	ID of the Softswitch platform parameter configuration profile	-
1.3.6.1.4.1.5875.800.20.1-1.1.2	signalName	OCTET STRING	Read-write	Signaling service name (profile name)	30 bytes
1.3.6.1.4.1.5875.800.20.1-1.1.3	mgcProtocol-Type	Int	Read-write	MGC protocol type	0: MGCP 1: H.248 2: SIP
1.3.6.1.4.1.5875.800.20.1-1.1.4	mgc1Address	OCTET STRING	Read-write	MGC1 IP address or domain name / standby registrar server address	64 bytes
1.3.6.1.4.1.5875.800.20.1-1.1.5	mgc1Port	Int	Read-write	MGC1 port number / standby SIP registrar sever port number	Range: 1024-65535

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.20.1-.1.1.6	mgc2Address	OCTET STRING	Read-write	MGC2 IP address or domain name / standby proxy server address	64 bytes
1.3.6.1.4.1.5875.800.20.1-.1.1.7	mgc2Port	Int	Read-write	MGC2 port number / standby SIP proxy sever port number	Range: 1024-65535
1.3.6.1.4.1.5875.800.20.1-.1.1.8	mgc3Address	OCTET STRING	Read-write	MGC3 IP address or domain name	64 bytes
1.3.6.1.4.1.5875.800.20.1-.1.1.9	mgc3Port	Int	Read-write	MGC3 port number	Range: 1024-65535
1.3.6.1.4.1.5875.800.20.1-.1.1.10	primaryDNS	IP ADDRESS	Read-write	Primary DNS server	-
1.3.6.1.4.1.5875.800.20.1-.1.1.11	secondaryDNS	IP ADDRESS	Read-write	Secondary DNS server	-
1.3.6.1.4.1.5875.800.20.1-.1.1.12	sipRegistratio-nAddress	OCTET STRING	Read-write	SIP registrar server address	64 bytes
1.3.6.1.4.1.5875.800.20.1-.1.1.13	sipRegistration-Port	Int	Read-write	SIP registrar server port	Range: 1024-65535
1.3.6.1.4.1.5875.800.20.1-.1.1.14	sipServerAd-dress	OCTET STRING	Read-write	Address of the SIP proxy server	64 bytes
1.3.6.1.4.1.5875.800.20.1-.1.1.15	sipServerPort	Int	Read-write	SIP proxy server port	Range: 1024-65535
1.3.6.1.4.1.5875.800.20.1-.1.1.16	sipTimeOut	Int	Read-write	SIP timeout	Range: 120-86400
1.3.6.1.4.1.5875.800.20.1-.1.1.17	keepAlive	Int	Read-write	Heartbeat switch	0: Disable 1: Enable initiative 2: Enable passive
1.3.6.1.4.1.5875.800.20.1-.1.1.18	aliveInterval	Int	Read-write	Alive interval (s)	Range: 1-43200
1.3.6.1.4.1.5875.800.20.1-.1.1.19	aliveTime	Int	Read-write	Heartbeat timeout count	Range: 1-120
1.3.6.1.4.1.5875.800.20.1-.1.1.25	signalProfileAc-tion	Int	Read-write	Operation	4: create 6: delete 7: modify
1.3.6.1.4.1.5875.800.20.1-.2	nextSignalProfi-leId	Int	Read-write	Getting an available profile ID	Leaf node

7.3 Basic Voice Configuration for an ONU

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.20.3-.1.1.1	onuVoiceCfgOnuIndex	Int	Read-only	ONU index	Refer to Compound Indexes of Common Objects .
1.3.6.1.4.1.5875.800.20.3-.1.1.3	ipCfgType	Int	Read-write	IP configuration mode	0: static 1: PPPoE 2: DHCP
1.3.6.1.4.1.5875.800.20.3-.1.1.4	staticIPAddress	IP ADDRESS	Read-write	Static public network IP address for the ONU	-
1.3.6.1.4.1.5875.800.20.3-.1.1.5	staticIPMask	IP ADDRESS	Read-write	Mask of the static public network IP address for the ONU	-
1.3.6.1.4.1.5875.800.20.3-.1.1.6	staticIPGateway	IP ADDRESS	Read-write	Gateway of the static public network IP address for the ONU	-
1.3.6.1.4.1.5875.800.20.3-.1.1.7	pppoeUserName	String	Read-write	PPPoE username	-
1.3.6.1.4.1.5875.800.20.3-.1.1.8	pppoePassword	String	Read-write	PPPoE user password	-
1.3.6.1.4.1.5875.800.20.3-.1.1.9	dhcpOption60Enable	Int	Read-write	Enabling DHCP Option60	1: Enable 2: Disable
1.3.6.1.4.1.5875.800.20.3-.1.1.10	dhcpOption60Suffix	String	Read-write	Suffix of the DHCP Option60	-
1.3.6.1.4.1.5875.800.20.3-.1.1.11	bindingVoicePlatformProfileName	String	Read-write	Name of the bound softswitch platform intercommunication parameter profile	-
1.3.6.1.4.1.5875.800.20.3-.1.1.20	voiceCfgAction	Int	Read-write	Operation	7: configure

7.4 Softswitch Platform Intercommunication Parameter Profile

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.20.6-1.1.1	voicePlatform-ProfileId	Int	Read-only	Profile ID	-
1.3.6.1.4.1.5875.800.20.6-1.1.2	voicePlatform-ProfileName	OCTET STRING	Read-write	Profile name	30 bytes
1.3.6.1.4.1.5875.800.20.6-1.1.3	rtpNameFixed-Part	OCTET STRING	Read-write	Fixed part of the RTP resource name	12 bytes
1.3.6.1.4.1.5875.800.20.6-1.1.4	rtpBeginValue	Int	Read-write	Starting value of the variable part of the RTP resource name	Range: 0-65534; default: 4000
1.3.6.1.4.1.5875.800.20.6-1.1.5	rtpEndValue	Int	Read-write	Ending value of the variable part of the RTP resource name	Range: 0-65534; default: 9000
1.3.6.1.4.1.5875.800.20.6-1.1.6	rtpStepValue	Int	Read-write	Step of the variable part of the RTP resource name	Range: 1-65534; default: 1
1.3.6.1.4.1.5875.800.20.6-1.1.7	rtpNameFill	Int	Read-write	Fixed length of the RTP name	0: unfixed 1: fixed
1.3.6.1.4.1.5875.800.20.6-1.1.8	digitmapStartTimer	Int	Read-write	Digitmap start timer	Range: 1-254
1.3.6.1.4.1.5875.800.20.6-1.1.9	digitmapShortTimer	Int	Read-write	Digitmap short timer	Range: 1-254
1.3.6.1.4.1.5875.800.20.6-1.1.10	digitmapLongTimer	Int	Read-write	Digitmap long timer	Range: 1-254
1.3.6.1.4.1.5875.800.20.6-1.1.11	dialMapNotifyImmediately	Int	Read-write	Reporting immediately when perfect match with any rule is found	1: report immediately 0: report only if match
1.3.6.1.4.1.5875.800.20.6-1.1.12	vbdEnable	Int	Read-write	VBD state	1: enable 0: disable
1.3.6.1.4.1.5875.800.20.6-1.1.13	packetIntervalOut	Int	Read-write	VBD packet transmission interval	Range: 10, 20, 30, 40, 50, 60
1.3.6.1.4.1.5875.800.20.6-1.1.14	packetIntervalIn	Int	Read-write	VBD packet receiving interval	Range: 10, 20, 30, 40, 50, 60

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.20.6-1.1.15	codeType	Int	Read-write	VBD code type	0: G.711U 8: G.711A -1: no change
1.3.6.1.4.1.5875.800.20.6-1.1.16	platformProfileAction	Int	Read-write	Operation	-
1.3.6.1.4.1.5875.800.20.6-2	nextVoicePlatformProfileId	Int	Read-only	Getting an available profile ID	-

7.5 SIP DigitMap

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.20.8-1	nextVoicePlatformProfileId	String	Read-write	DigitMap	Character string for the dialing scheme

7.6 ONU Voice Registration Status



Note:

Only the snmpget operation is supported. The system can only collect the configuration data of a single ONU each time.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.20.10.1.1.1	voipChannelStatusTablesSlotNo	Integer32	Read-only	Slot number	Index
1.3.6.1.4.1.5875.80-0.20.10.1.1.2	voipChannelStatusTablePONNo	Integer32	Read-only	PON port number	Index
1.3.6.1.4.1.5875.80-0.20.10.1.1.3	voipChannelStatusTableONUNo	Integer32	Read-only	ONU number	Index
1.3.6.1.4.1.5875.80-0.20.10.1.1.4	voipChannelStatusTablePortNo	Integer32	Read-only	Port number	Index

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.20.10.1.1.5	voipChannelStatus	INTEGER	Read-only	User port status	0: being initialized 1: registered 2: in session 3: registration failed–ICMP error 4: registration failed–TCP connection failure 5: registration failed–authentication failure 6: registration failed–timeout 7: registration failed–server failure code 8: invitation failed–ICMP error 9: invitation failed –TCP connection failure 10: invitation failed–authentication failure 11: invitation failed–timeout 12: invitation failed–server failure code 13: The port is not configured. 14: configuration succeeded 15: The port is being registered. 16: The port is idle. 17: The port is off-hook. 18: The port is dialing. 19: The port is ringing. 20: The port is receiving a ring back tone. 21: The port is being connected. 22: The port is connected. 23: The port is releasing the connection. 24: Registration of the port failed. 25: The port is unactivated. 26: Others

7.7 Querying Current VoIP Service on an ONU



Note:

Only the snmpget operation is supported. The system can only collect the configuration data of a single ONU each time.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.20.1-1.1.1.1	currentVoipServerTablesSlotNo	Integer32	Read-only	Slot number	Index
1.3.6.1.4.1.5875.800.20.1-1.1.1.2	currentVoipServerTablePonNo	Integer32	Read-only	PON port number	Index
1.3.6.1.4.1.5875.800.20.1-1.1.1.3	currentVoipServerTableOnuNo	Integer32	Read-only	ONU number	Index
1.3.6.1.4.1.5875.800.20.1-1.1.1.4	currentVoipServerTablePortNo	Integer32	Read-only	Port number	Index
1.3.6.1.4.1.5875.800.20.1-1.1.1.5	currentSIPRegisterServerOrCurrentMgcIpAddress	OCTET STRING	Read-only	Current SIP registrar / current MGC IP address	-
1.3.6.1.4.1.5875.800.20.1-1.1.1.6	currentSIPRegisterServerOrCurrentMgcIpAddressPortNo	Integer32	Read-only	Current SIP registrar port number / current MGC IP address port number	-
1.3.6.1.4.1.5875.800.20.1-1.1.1.7	currentSIPProxyServer	OCTET STRING	Read-only	Current SIP proxy server	-
1.3.6.1.4.1.5875.800.20.1-1.1.1.8	currentSIPProxyServerPortNo	Integer32	Read-only	Current SIP proxy server port number	-

7.8 Querying MGs for ONUs



Note:

Only the snmpget operation is supported. The system can only collect the configuration data of a single ONU each time.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.20.1-2.1.1.1	onuMGQuery-TablesloNo	Integer32	Read-only	Slot number	Index
1.3.6.1.4.1.5875.800.20.1-2.1.1.2	onuMGQuery-TableTablepon-No	Integer32	Read-only	PON port number	Index
1.3.6.1.4.1.5875.800.20.1-2.1.1.3	onuMGQuery-TableTableonu-No	Integer32	Read-only	ONU number	Index
1.3.6.1.4.1.5875.800.20.1-2.1.1.5	onuMGID	Integer32	Read-only	MG identifier	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.6	onuMGprotocol-Type	INTEGER	Read-only	Protocol type	0: MGCP 1: MEGACO 2: SIP
1.3.6.1.4.1.5875.800.20.1-2.1.1.7	onuMGEID	OCTET STRING	Read-only	MG domain name	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.8	onuMG-FirstMGCIP	OCTET STRING	Read-only	Primary MGC address	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.9	onuMGSe- condMGCIP	OCTET STRING	Read-only	Secondary MGC address	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.10	onuMGFirstSIP- Server	OCTET STRING	Read-only	Primary SIP registrar server	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.11	onuMGSecond- SIPServer	OCTET STRING	Read-only	Secondary SIP registrar server	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.12	onuMGfirstSIP- proxyServer	OCTET STRING	Read-only	Primary SIP proxy server	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.13	onuMGSecond- SIPproxyServer	OCTET STRING	Read-only	Secondary SIP proxy server	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.14	onuMG-SignalSvlanTpid	Integer32	Read-only	Signaling service VLAN TPID	Range: 1-65534, or 0xffff
1.3.6.1.4.1.5875.800.20.1-2.1.1.15	onuMG-SignalSvlanID	Integer32	Read-only	Signaling service VLAN ID	Range: 1-4085, 4088, or 0xffff
1.3.6.1.4.1.5875.800.20.1-2.1.1.16	onuMGSvlan- Cos	Integer32	Read-only	Signaling service VLAN priority	Range: 0-7, or 0xffff
1.3.6.1.4.1.5875.800.20.1-2.1.1.17	onuMG-SignalCvlanT- pid	Integer32	Read-only	Signaling customer VLAN TPID	Range: 1-65534, or 0xffff
1.3.6.1.4.1.5875.800.20.1-2.1.1.18	onuMG-SignalCvlanID	Integer32	Read-only	Signaling customer VLAN ID	Range: 1-4085, 4088, or 0xffff

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.20.1-2.1.1.19	onuMGCvlan-Cos	Integer32	Read-only	Signaling customer VLAN priority	Range: 0-7, or 0xffff
1.3.6.1.4.1.5875.800.20.1-2.1.1.20	onuMGRTPSvlanTpid	Integer32	Read-only	Service VLAN TPID for the media stream	Range: 1-65534, or 0xffff
1.3.6.1.4.1.5875.800.20.1-2.1.1.21	onuMGRTPSvlanID	Integer32	Read-only	Service VLAN ID for the media stream	Range: 1-4085, 4088, or 0xffff
1.3.6.1.4.1.5875.800.20.1-2.1.1.22	onuMGRTPSvlanCos	Integer32	Read-only	Service VLAN priority for the media stream	Range: 0-7, or 0xffff
1.3.6.1.4.1.5875.800.20.1-2.1.1.23	onuMGRTPCvlanTpid	Integer32	Read-only	Customer VLAN TPID for the media stream	Range: 1-65534, or 0xffff
1.3.6.1.4.1.5875.800.20.1-2.1.1.24	onuMGRTPCvlanID	Integer32	Read-only	Customer VLAN ID for the media stream	Range: 1-4085, 4088, or 0xffff
1.3.6.1.4.1.5875.800.20.1-2.1.1.25	onuMGRTPCvlanCos	Integer32	Read-only	Customer VLAN priority for the media stream	Range: 0-7, or 0xffff
1.3.6.1.4.1.5875.800.20.1-2.1.1.26	onuMGIP-MODE	INTEGER	Read-only	Way to obtain an IP address	0: static 1: pppoe 2: dhcp
1.3.6.1.4.1.5875.800.20.1-2.1.1.27	onuMGSignalIP	OCTET STRING	Read-only	Signaling IP address	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.28	onuMGSignal-Mask	OCTET STRING	Read-only	Mask for the signaling IP address	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.29	onuMGSignal-Gateway	OCTET STRING	Read-only	Signaling gateway	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.30	onuMGRTPIP	OCTET STRING	Read-only	IP address of the media stream	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.31	onuMGIPMask	OCTET STRING	Read-only	Mask for the media stream	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.32	onuMGRTPGateway	OCTET STRING	Read-only	Media gateway	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.33	onuMGPPPoE-Name	OCTET STRING	Read-only	PPPoE username	-
1.3.6.1.4.1.5875.800.20.1-2.1.1.34	onuMGPPPoE-Password	OCTET STRING	Read-only	PPPoE password	-

8 Alarms

This chapter introduces OIDs and related information of the nodes under the alarm function module.

8.1 Equipment Alarm Reporting Format

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.2.1.1.3	sysUpTime	Timeticks	Read-only	Equipment running time	RFC3418 SNMPv2-MIB definitions
1.3.6.1.6.3.1.1.4.1	snmpTrapOID	Object Identifier	accessible-for-notify	Alarm / event OID	RFC3418 SNMPv2-MIB definitions
1.3.6.1.2.1.2.2.1.1	ifIndex	Integer	Read-only	Index of the alarmed object	slot number × 33554432 + PON port number × 524288 + ONU number × 256 + port number
1.3.6.1.4.1.5875.88.4.25	theSliceDomain-WhereTheAlarmObjectIsLocated	Integer	Accessible-for-notify	Virtual domain where the alarmed object is located	Range: 0-7
1.3.6.1.4.1.5875.88.4.26	theSourceSlice-DomainForAlarmGeneration	OCTET STRING	Accessible-for-notify	Source virtual domain where the alarm is generated	For example, if the alarm is shared by VS0, VS2 and VS3, the value is 0, 2, 3. Only applicable to the AN6000-17
1.3.6.1.4.1.5875.88.4.13	alarmOrEvent-Code	Integer	Accessible-for-notify	Alarm / event code	Event type
1.3.6.1.4.1.5875.88.4.6	alarmOrEvent-Status	Integer	Accessible-for-notify	Alarm / event status	0: The alarm disappears. 1: The alarm appears.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.88.4.8	oltCardType	Integer	Accessible-for-notify	OLT card type	Alarmed object and parent object type
1.3.6.1.4.1.5875.88.4.9	oltPortType	Integer	Accessible-for-notify	Type of ports on the OLT card	Alarmed object and parent object type
1.3.6.1.4.1.5875.88.4.11	onuType	Integer	Accessible-for-notify	ONU type	Alarmed object and parent object type
1.3.6.1.4.1.5875.88.4.12	onuPortType	Integer	Accessible-for-notify	Port type of an ONU	Alarmed object and parent object type
1.3.6.1.4.1.5875.88.4.16	detailedInformation	Hex-STRING	Accessible-for-notify	Details	-

8.2 Querying Current Alarms

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.60.3.1.1	currentAlarmIndex	Int	Read-only	Alarm index	Natural number
1.3.6.1.4.1.5875.800.-3.60.3.1.2	currentAlarmCode	Int	Read-only	Alarm code	Code on EMS
1.3.6.1.4.1.5875.800.-3.60.3.1.3	currentAlarmIfIndex	Int	Read-only	Index of the alarmed object	$\text{SLOT} \times 33554432 + \text{PORT} \times 524288 + \text{ONU} \times 256 + \text{ONU\PORT}$
1.3.6.1.4.1.5875.800.-3.60.3.1.4	currentAlarmStatus	Int	Read-only	Alarm status	◆ 0: alarm disappears ◆ 1: alarm appears Fixed at 1
1.3.6.1.4.1.5875.800.-3.60.3.1.5	currentAlarmStatusFlag	Int	Read-only	Alarm status flag	Fixed at 1
1.3.6.1.4.1.5875.800.-3.60.3.1.6	currentAlarmBeginTime	DateAndTime	Read-only	Alarm generation time	Standard format including time zone; size: 11 bytes
1.3.6.1.4.1.5875.800.-3.60.3.1.7	currentAlarmEndTime	DateAndTime	Read-only	Alarm end time	Fixed at null

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.- 3.60.3.1.8	currentAlarmType	Int	Read-only	Type of the alarmed object	◆ 1: card ◆ 2: card port ◆ 3: ONU ◆ 4: ONU port
1.3.6.1.4.1.5875.800.- 3.60.3.1.9	currentAlarmAdditionalText	String	Read-only	Additional alarm information	-
1.3.6.1.4.1.5875.800.- 3.60.3.1.10	currentAlarmDev-Code	Integer32	Read-only	Alarm code on equipment	-

8.3 Querying Historical Alarms

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.- 3.60.4.1.1	hisAlarmIndex	Int	Read-only	Alarm index	Natural number
1.3.6.1.4.1.5875.800.- 3.60.4.1.2	hisAlarmCode	Int	Read-only	Alarm code	Code on EMS
1.3.6.1.4.1.5875.800.- 3.60.4.1.3	hisAlarmIfIndex	Int	Read-only	Index of the alarmed object	SLOT × 33554432 + PORT × 524288 + ONU × 256 + ONUPORT
1.3.6.1.4.1.5875.800.- 3.60.4.1.4	hisAlarmStatus	Int	Read-only	Alarm status	◆ 0: alarm disappears ◆ 1: alarm appears Fixed at 0
1.3.6.1.4.1.5875.800.- 3.60.4.1.5	hisAlarmStatus-Flag	Int	Read-only	Alarm status flag	Fixed at 1
1.3.6.1.4.1.5875.800.- 3.60.4.1.6	hisAlarmBegin-Time	DateAnd-Time	Read-only	Alarm generation time	Standard format including time zone; size: 11 bytes
1.3.6.1.4.1.5875.800.- 3.60.4.1.7	hisAlarmEndTime	DateAnd-Time	Read-only	Alarm end time	Standard format including time zone; size: 11 bytes
1.3.6.1.4.1.5875.800.- 3.60.4.1.8	hisAlarmType	Int	Read-only	Type of the alarmed object	◆ 1: card ◆ 2: card port ◆ 3: ONU ◆ 4: ONU port

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.- 3.60.4.1.9	hisAlarmAdditionalText	String	Read-only	Additional alarm information	-
1.3.6.1.4.1.5875.800.- 3.60.4.1.10	isAlarmDevCode	Integer32	Read-only	Alarm code on equipment	-

9 LLDP Function

This chapter introduces OIDs and related information of the nodes under the LLDP function module.

9.1 Information About the LLDP Local System

Information About the LLDP Local System

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.61-.1.1.1	lldpLocalEnableStatus	Int	Read-only	LLDP enable/disable state	0: disable 1: enable
1.3.6.1.4.1.5875.800.3.61-.1.1.2	lldpLocalManagementAddress	String	Read-only	LLDP management IP address	40 bytes
1.3.6.1.4.1.5875.800.3.61-.1.1.3	lldpLocalChassisId	String	Read-only	Equipment ID	32 bytes
1.3.6.1.4.1.5875.800.3.61-.1.1.4	lldpLocalSysName	String	Read-only	Equipment name	64 bytes
1.3.6.1.4.1.5875.800.3.61-.1.1.5	lldpLocalSysCapSupported-number	Int	Read-only	Number of supported capability types	Range: 0-8
1.3.6.1.4.1.5875.800.3.61-.1.1.6	lldpLocalSysCapEnablednumber	Int	Read-only	Number of enabled capability types	Range: 0-8
1.3.6.1.4.1.5875.800.3.61-.1.1.7	lldpLocalLLDPUpTime	String	Read-only	LLDP up time	20 bytes
1.3.6.1.4.1.5875.800.3.61-.1.1.8	lldpLocalRemoteTablesLastChangeTime	String	Read-only	Time when remote system data was last changed	48 bytes
1.3.6.1.4.1.5875.800.3.61-.1.1.9	lldpLocalNeighborstotal	Int	Read-only	Number of remote systems (neighbors)	Range: 0-12
1.3.6.1.4.1.5875.800.3.61-.1.1.10	lldpLocalPortId-Number	Int	Read-only	Port quantity	Range: 0-12

Capability Types Supported by the LLDP Local System

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.61- .1.2.1.1.1	lldpLocalSys- CapSupporte- dIndex	Int	Read-only	Supported capability	Index; range: 0-7 0: other 1: repeater 2: bridge 3: wireless access point (wlanAccessPoint) 4: router 5: wireless device (telephone) 6: management station (docsisCableDe- vice) 7: base station (stationOnly)

Capability Types Enabled for the LLDP Local System

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.61- .1.3.1.1.1	lldpLocalSysCa- pEnabledIndex	Int	Read-only	Capability enabled	Index; range: 0-7 0: other 1: repeater 2: bridge 3: wireless access point (wlanAccessPoint) 4: router 5: wireless device (telephone) 6: management station (docsisCableDe- vice) 7: base station (stationOnly)

LLDP Local Ports



Note:

The snmpwalk operation is allowed, but the snmpget operation is disallowed.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.61-.1.4.1.1.1	lldpLocalPortInformationIndex	Integer32	Read-only	Index	Natural number, only for sorting. Range: 1-12
1.3.6.1.4.1.5875.800.3.61-.1.4.1.1.2	lldpLocalPortInformationInterfaceID	OCTET STRING	Read-only	LLDP port ID	32 bytes

9.2 Information About the LLDP Remote System (Supporting snmpwalk Only)



Note:

Only the snmpwalk operation is allowed.

Information About the LLDP Remote System

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.1	lldpNeighborIndex	Int	Read-only	Index	Index = slot number × 33554432 + port number × 524288
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.2	lldpNeighborStatusPortId	String	Read-only	ID of the local port	32 bytes
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.3	lldpNeighborManageAddress	String	Read-only	Management IP address for the neighbor	40 bytes

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.4	lldpNeighborChassisId-Subtype	Int	Read-only	Sub type of the equipment ID	0: subrack alias (ChassisComponent) 1: interface alias (interfaceAlias) 2: port / backplane alias (portComponent) 3: MAC address (macAddress) 4: network address (networkAddress) 5: interface name (interfaceName) 6: local name (local)
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.5	lldpNeighborChassisId	String	Read-only	Equipment ID	32 bytes
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.6	lldpNeighborPortIdSubtype	Int	Read-only	Sub type of the port ID	0: subrack alias (ChassisComponent) 1: interface alias (interfaceAlias) 2: port / backplane alias (portComponent) 3: MAC address (macAddress) 4: network address (networkAddress) 5: interface name (interfaceName) 6: local name (local)
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.7	lldpNeighborPortId	String	Read-only	Neighbor port ID	256 bytes
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.8	lldpNeighborPortDesc	String	Read-only	Description of the neighbor port	256 bytes
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.9	lldpNeighborSysName	String	Read-only	Equipment name	256 bytes

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.10	lldpNeighbor-SysDesc	String	Read-only	Equipment description	256 bytes
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.11	lldpNeighborExpiredtime	Int	Read-only	Neighbor (remote system) aging time	Unit: s
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.12	lldpNeighborSysCapSupportednumber	Int	Read-only	Number of supported capability types	Range: 0-8
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.13	lldpNeighborSysCapEnablednumber	Int	Read-only	Number of enabled capability types	Range: 0-8

Capability Types Supported by the LLDP Remote System

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.1	lldpNeighborIfIndex	Int	Read-only	IfIndex	Index = slot number × 33554432 + port number × 524288
1.3.6.1.4.1.5875.800.3.61-.2.1.2.1.1.1	lldpNeighborSysCapSupportedIndex	Int	Read-only	Supported capability	Index; range: 0-7 0: other 1: repeater 2: bridge 3: wireless access point (wlanAccessPoint) 4: router 5: wireless device (telephone) 6: management station (docsisCableDevice) 7: base station (stationOnly)

Capability Types Enabled for the LLDP Remote System

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.61-.2.1.1.1.1	lldpNeighborIfIndex	Int	Read-only	IfIndex	Index = slot number × 33554432 + port number × 524288
1.3.6.1.4.1.5875.800.3.61-.2.1.3.1.1.1	lldpNeighborSysCapEnabledIndex	Int	Read-only	Capability enabled	Index; range: 0-7 0: other 1: repeater 2: bridge 3: wireless access point (wlanAccessPoint) 4: router 5: wireless device (telephone) 6: management station (docsisCableDevice) 7: base station (stationOnly)

9.3 Basic LLDP Configurations

Basic LLDP Configurations

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-61.3.1	fhOltlldpSwitch	Integer32	Read-write	LLDP switch	0: disable 1: enable
1.3.6.1.4.1.5875.800.3.-61.3.2	fhOltlldpInetAddressType	Integer32	Read-create	Type of the management IP address	0: IPv4
1.3.6.1.4.1.5875.800.3.-61.3.3	fhOltlldpInetAddress	OCTET STRING	Read-create	LLDP management IP address	-

Basic LLDP Configuration Object Table



Note:

About the index: When the table is being created, the index 0xffffffff is delivered to it. After it is created, the actual ID will be assigned to it.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.61.3.10.1.1	fholtldpBasicPropertiesIndex	Integer32	Read-only	Natural index	The index is only for sorting. Range: 1-24.
1.3.6.1.4.1.5875.800-3.61.3.10.1.2	fholtldpBasicPropertiesSlotNo	Integer32	Read-write	Uplink slot number	-
1.3.6.1.4.1.5875.800-3.61.3.10.1.3	fholtldpBasicPropertiesPortNo	Integer32	Read-write	Uplink port number	-
1.3.6.1.4.1.5875.800-3.61.3.10.1.4	fholtldpBasicPropertiesMode	Integer32	Read-write	LLDP mode	0: TX and RX 1: RX 2: TX
1.3.6.1.4.1.5875.800-3.61.3.10.1.20	fholtldpBasicPropertiesAction	INTEGER	Read-write	Action	4: create 6: delete To delete a basic LLDP configuration object table, retrieve its index according to the port number, and then use the index to delete the table. 7: modify

Retrieving Indexes of Basic LLDP Configuration Object Tables According to Port Numbers

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.61-.3.11.1.1	fholtlldpBasic-Properties-SearchIndexby-SlotNo	Integer32	Read-only	Uplink slot number	Index 1
1.3.6.1.4.1.5875.800.3.61-.3.11.1.2	fholtlldpBasic-Properties-SearchIndexby-PortNo	Integer32	Read-only	Uplink port number	Index 2
1.3.6.1.4.1.5875.800.3.61-.3.11.1.3	fholtlldpBasic-Properties-SearchIndex	Integer32	Read-only	Natural index	Index; range: 0-24

10 Multicast Information Function

This chapter introduces OIDs and related information of the nodes under the multicast information function module.

10.1 Multicast Stream Information (Supporting snmpwalk Only)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-63.1.1.1.1	multicastStreamInfoIndex	Int	Read-only	Number (index)	Index; maximum length: 1024 bytes
1.3.6.1.4.1.5875.800.3.-63.1.1.1.2	multicastStreamInfoMac	String	Read-only	Group address	100 bytes
1.3.6.1.4.1.5875.800.3.-63.1.1.1.3	multicastStreamInfoVlanId	Int	Read-only	Group VLAN	Range: 0-4085

10.2 Multicast VLAN Information (Supporting snmpwalk Only)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-.3.63.2.1.1.1	multicastStreamVlanInfoVlanId	Int	Read-only	Multicast VLAN	Index; range: 0-4085

10.3 Multicast Settings and Status

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.-24.1.1	igmpMode	Int	Read-write	Multicast mode	1: controlled 2: proxy 3: snooping 4: proxy-snooping 5: disable 6: active snooping
1.3.6.1.4.1.5875.800.3.-24.1.2	igmpVlan	Int	Read-write	Multicast VLAN	Range: 1-4085, 4088
1.3.6.1.4.1.5875.800.3.-24.1.4	igmpProxyIp	Int	Read-write	Multicast protocol version	1: IGMP v1/2 2: IGMP v3

10.4 Multicast VLAN Translation

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.24.9.1.1	igmpVlanTranslateIndex	Int	Read-only	Index	Index: 1-16 AN6001-G16: 0-96 AN6000-17: 0-320
1.3.6.1.4.1.5875.80-0.3.24.9.1.2	igmpVlanTranslateUpVlanNo	Int	Read-write	Upstream VLAN ID	Range: 1-4094
1.3.6.1.4.1.5875.80-0.3.24.9.1.3	igmpVlanTranslateDownVlanNo	Int	Read-write	Downstream VLAN ID	Range: 1-4094
1.3.6.1.4.1.5875.80-0.3.24.9.1.4	igmpVlanTranslateUpVlanCos	Int	Read-write	Upstream VLAN priority	Range: 0-7
1.3.6.1.4.1.5875.80-0.3.24.9.1.5	igmpVlanTranslateDownVlanCos	Int	Read-write	Downstream VLAN priority	Range: 0-7
1.3.6.1.4.1.5875.80-0.3.24.9.1.6	igmpVlanTranslateAction	Int	Read-write	Operation	4: create 6: delete
1.3.6.1.4.1.5875.80-0.3.24.14	getNextFreeIgmpTranslateVlanNode	Int	Read-only	Getting the next available multicast VLAN index	Leaf node Range: 1-16

10.5 Online Multicast Group Information

This section introduces OIDs and information of the nodes related to online multicast groups.



Note:

Enable the group information collection by setting the switch “igmp program member-info [enable|disable]” 15 minutes ahead of the operation.

The command to modify the time for polling on line cards is “igmp program member-info time<times>”, with the unit being second (s), and the default value being 15min. The modification takes effect at the end of the previous polling time.

Check whether group information is available through **Config→igmp→show igmpv3 group**.

10.5.1 Basic Group Information

Basic Group Information

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.24.15.1.1.1.1	fhMcastGroupIndex	Integer32	Read-only	Online multicast group index	Natural index, without special meaning
1.3.6.1.4.1.5875.80-0.3.24.15.1.1.1.2	fhMcastGroupAddressType	INTEGER	Read-only	Multicast address type	1: IPv4
1.3.6.1.4.1.5875.80-0.3.24.15.1.1.1.3	fhMcastGroupAddress	OCTET STRING	Read-only	Multicast group address	Range: 224.0.1.0 to 239.255.255.255
1.3.6.1.4.1.5875.80-0.3.24.15.1.1.1.4	fhMcastGroupStatus	INTEGER	Read-only	Group status	The status information returned by this node is always active (1).
1.3.6.1.4.1.5875.80-0.3.24.15.1.1.1.5	fhMcastGroupOnlineTime	OCTET STRING	Read-only	Multicast group online time	HH:mm:ss
1.3.6.1.4.1.5875.80-0.3.24.15.1.1.1.6	fhMcastGroupMemberNo	Integer32	Read-only	Number of existing members	Number of ONU members found

Retrieving the Online Multicast Group Index According to the IP Address of the Multicast Group (Supporting snmpget Only)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.24.15.1.7.1.1	fhMcastGroupGetIndexbyIPType	INTEGER	Read-only	Multicast address type	Index 1 1: IPv4
1.3.6.1.4.1.5875.80-0.3.24.15.1.7.1.2	fhMcastGroupGetIndexbyIP	OCTET STRING	Read-only	Multicast group address	Index 2 Range: 224.0.1.0 to 239.255.255.255 Parsed into Length of the ASCII code converted from the IP address + ASCII code converted from the IP address For example, the multicast address 224.100.1.223 is converted to an ASCII code whose length is 13. The ASCII code converted from the IP address is 50.50.52.46.49.48.48.46.4-9.46.50.50.51. Then index 2 is 13.50.50.52.46.49.48.48.4-6.49.46.50.50.51.
1.3.6.1.4.1.5875.80-0.3.24.15.1.7.1.3	fhMcastGroupGetIndex	Integer32	Read-only	Online multicast group index	Natural index

Basic Group Information–VLAN Table

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.80-0.3.24.15.1.2.1.1	fhMcastGroupV-LANListIndex	Integer32	Read-only	Online multicast group index	Index 1, a natural index, without special meaning
1.3.6.1.4.1.5875.80-0.3.24.15.1.2.1.2	fhMcastGroupV-LANListVlanID	Integer32	Read-only	VLAN ID	Index 2. The group VLAN is obtained by this node. Then the uplink port (the port to which the VLAN is added) is obtained via the VLAN.

10.5.2 Group Location Information List



Note:

The location information is only applicable to OLT PON ports. It is required that the system can obtain the numbers of all the ports in the multicast group according to the specified multicast group index.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.24.15.1.3.1.1	fhMcastGroupLocationListIndex	Integer32	Read-only	Online multicast group index	Natural index, without special meaning. It is associated with the node fhMcastGroupIndex in Basic Group Information .
1.3.6.1.4.1.5875.8-00.3.24.15.1.3.1.2	fhMcastGroupLocationListItemIndex	Integer32	Read-only	Item index	Natural index, without special meaning
1.3.6.1.4.1.5875.8-00.3.24.15.1.3.1.3	fhMcastGroupLocationListSlotNo	Integer32	Read-only	Slot number	-
1.3.6.1.4.1.5875.8-00.3.24.15.1.3.1.4	fhMcastGroupLocationListPonNo	Integer32	Read-only	Port number	-

10.5.3 Mappings Between Multicast Groups and Users

**Note:**

It is required that the system can obtain indexes of all the users in the current multicast group according to the specified multicast group index.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.24.15.1.4.1.1	fhMcastGroupAndUserAssociation-TableGroupNo	Integer32	Read-only	Online multicast group index	Natural index, without special meaning. It is associated with the node fhMcastGroupIndex in Basic Group Information .
1.3.6.1.4.1.5875.800-3.24.15.1.4.1.2	fhMcastGroupAndUserAssociation-TableUserNo	Integer32	Read-only	Multicast user index	Natural index, without special meaning. It is associated with the node fhMcastUserListIndex in List of Multicast Users .

10.5.4 List of Multicast Users

**Note:**

It is required that the system can obtain indexes of all the users in the current multicast group according to the specified multicast group index.

Querying User Information by a Specified Multicast Group Index

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3-.24.15.1.5.1.1	fhMcastUserListIndex	Integer32	Read-only	Multicast user index	User index used in the multicast group
1.3.6.1.4.1.5875.800.3-.24.15.1.5.1.2	fhMcastUserListServiceFlowID	OCTET STRING	Read-only	Username	Returned compound index of the ONU
1.3.6.1.4.1.5875.800.3-.24.15.1.5.1.3	fhMcastUserListLastOrderTime	OCTET STRING	Read-only	Last time for watching a program	Last time for watching a program; maximum length: 10 bytes Format: hh:mm:ss
1.3.6.1.4.1.5875.800.3-.24.15.1.5.1.4	fhMcastUserListSlotNo	Integer32	Read-only	Member slot number	-
1.3.6.1.4.1.5875.800.3-.24.15.1.5.1.5	fhMcastUserListPonNo	Integer32	Read-only	Member PON port number	-
1.3.6.1.4.1.5875.800.3-.24.15.1.5.1.6	fhMcastUserListOnuNo	Integer32	Read-only	Member ONU number	-

Querying Multicast Indexes by User Information (Supporting snmpget Only)

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3-.24.15.1.8.1.1	fhMcastUserListInverseQuerySlotNo	Integer32	Read-only	Member slot number	Index 1
1.3.6.1.4.1.5875.800.3-.24.15.1.8.1.2	fhMcastUserListInverseQueryPonNo	Integer32	Read-only	Member PON port number	Index 2
1.3.6.1.4.1.5875.800.3-.24.15.1.8.1.3	fhMcastUserListInverseQueryOnuNo	Integer32	Read-only	Member ONU number	Index 3
1.3.6.1.4.1.5875.800.3-.24.15.1.8.1.4	fhMcastUserListInverseQueryIndex	Integer32	Read-only	Multicast user index	User index used in the multicast group

10.5.5 Multicast Groups That a Multicast User Belongs to



Note:

It is required that the system can obtain the list of all the multicast groups that a multicast user belongs to according to the user index.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800-3.24.15.1.6.1.1	fhMcastUserViewingGroupIndex	Integer32	Read-only	Multicast user index	User index used in the multicast group. It is associated with the node fhMcastUserListIndex in List of Multicast Users .
1.3.6.1.4.1.5875.800-3.24.15.1.6.1.2	fhMcastUserViewingGroupNo	Integer32	Read-only	Online multicast group index	Natural index, without special meaning. It is associated with the node fhMcastGroupIndex in Basic Group Information .
1.3.6.1.4.1.5875.800-3.24.15.1.6.1.3	fhMcastUserRunStateProgramStatus	Integer32	Read-only	User state	1: watch The group displayed is the one in which the user is watching a program.

10.6 ADAMO Multicast Statistics

This section introduces OIDs and other information of nodes under the ADAMO multicast.

10.6.1 Multicast Group Information

10.6.1.1 Querying Multicast Group Information by MVLAN



Note:

The "snmpget" operation is supported, but the "snmpwalk" operation is not.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.1.1.1-.1	fhOltTstTvChannelVlanIdx	Integer32	Read-only	Index, multicast VLAN ID	-
1.3.6.1.4.1.5875.-800.3.24.17.1.1.1-.6	fhOltTstTvActive-ChannelIpList	DisplayString	Read-only	IP address list of active channels from the client	ASCII string, separated by spaces. For example, 239.192.226.7 239.192.226.5

10.6.1.2 Querying Multicast Group Information by ONU



Note:

The "snmpget" operation is supported, but the "snmpwalk" operation is not.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.1.3.1-.1	fhOltTstTvChannelByOnuIdx	Integer32	Read-only	Compound index of an ONU	$\text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256$
800.3.24.17.1.3.1-.6	fhOltTstTvActive-ChannelByOnuIp-List	DisplayString	Read-only	IP address list of active channels from the client	ASCII string, separated by spaces. For example, 239.192.226.7 239.192.226.5

10.6.1.3 Querying Multicast Group Information by MVLAN and ONU



Note:

The "snmpget" operation is supported, but the "snmpwalk" operation is not.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.1.4.1-.1	fhOltTstTvOnu-ChannelVlanIdx	Integer32	Read-only	Index, multicast VLAN ID	-
1.3.6.1.4.1.5875.-800.3.24.17.1.4.1-.2	fhOltTstTvOnu-ChannelOnuIdx	Integer32	Read-only	Compound index of an ONU	$\text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256$
1.3.6.1.4.1.5875.-800.3.24.17.1.4.1-.6	fhOltTstTvOnuActiveChannelIpList	DisplayString	Read-only	IP address list of active channels from the client	ASCII string, separated by spaces. For example, 239.192.226.7 239.192.226.5

10.6.2 Querying Multicast Downlink Traffic



Note:

Multicast downlink traffic is queried by group IP address. The "snmpget" operation is supported, but the "snmpwalk" operation is not.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.1.2.1-.1	fhOltTstTvChannelTrafficVlanIdx	Integer32	Read-only	Index, multicast VLAN ID	-
1.3.6.1.4.1.5875.-800.3.24.17.1.2.1-.2	fhOltTstTvChannelTrafficIpTypeIdx	Integer32	Read-only	Index, type of the IP address	◆ 1: IPv4 ◆ 2: IPv6 Only IPv4 is supported temporarily.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.1.2.1-.3	fhOltTstTvChannelTrafficIpValIdx	OCTET STRING	Read-only	Index, multicast group IP address	IPv4 means this address contains four bytes. IPv6 means this address contains sixteen bytes. For example, with VLAN ID 4000 and its multicast group IP address 229.0.0.1, the complete index is 4000.1.229.0.0.1.
1.3.6.1.4.1.5875.-800.3.24.17.1.2.1-.7	fhOltTstTvChannelTrafficRxPkts5-Sec	Counter64	Read-only	Packets received for five seconds	-

10.6.3 Aggregated IGMP Statistics

10.6.3.1 Querying IGMP Statistics by MVLAN



Note:

The "snmpget" operation is supported, but the "snmpwalk" operation is not.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.1	fhOltTstTvStat-sIgmpVlanIdx	Integer32	Read-only	Index, multicast VLAN ID	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.6	fhOltTstTvStat-sIgmpTotalMsg	Counter64	Read-only	Total number of messages received from users, including IGMP messages and invalid messages	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.7	fhOltTstTvStat-sIgmpTotalIgmpMsg	Counter64	Read-only	Total number of IGMP messages, which includes join and leave requests from users (both successful and unsuccessful attempts)	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.8	fhOltTstTvStat-sIgmpTotalReq	Counter64	Read-only	Total number of join requests from users, which includes successful and unsuccessful attempts	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.9	fhOltTstTvStat-sIgmpSuccessReq	Counter64	Read-only	Total number of successful join requests from users which includes new joins (which make new connections) and re-joins (which already have connections)	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.10	fhOltTstTvStat-sIgmpUnsuccess-Req	Counter64	Read-only	Total number of unsuccessful new join requests from users. The failures could be due to the following reasons: permission bitmap failure, bitrate failure, lack of resource or invalid group address.	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.11	fhOltTstTvStat-sIgmpTotalLeaveReq	Counter64	Read-only	Total number of leave requests from users	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.13	fhOltTstTvStat-sIgmpUnknownMsg	Counter64	Read-only	Number of IGMP messages received from users	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.14	fhOltTstTvStat-sIgmpNumConnects	Counter64	Read-only	Total number of connections due to successful new IGMP join requests from users	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.15	fhOltTstTvStat-sIgmpNumDisconnects	Counter64	Read-only	Total number of disconnections to users. They can be due to GSQ or GMQ timer expiry or the triggering of fast channel changes.	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.21	fhOltTstTvStat-sIgmpPeakConnectsSec	Gauge32	Read-only	The peak number of multicast branch connections performed per second since the statistics were last cleared	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.22	fhOltTstTvStat-sIgmpPeakDisconnectionsSec	Gauge32	Read-only	The peak number of disconnections to users per second	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.23	fhOltTstTvStat-sIgmpPeakMsgSec	Gauge32	Read-only	The peak number of messages received from users per second	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.24	fhOltTstTvStat-sIgmpPeakConnectsTm	DateAndTime	Read-only	Network time when the peak number of connections occurred per second	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.25	fhOltTstTvStat-sIgmpPeakDisconnectionsTm	DateAndTime	Read-only	Network time when the peak number of disconnections occurred per second	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.26	fhOltTstTvStat-sIgmpPeakMsgTm	DateAndTime	Read-only	Network time when the peak number of messages received from users per second occurred	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.31	fhOltTstTvStat-sIgmpRxGMQ	Counter64	Read-only	Total number of general message query (GMQ) requests from the network	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.32	fhOltTstTvStat-sIgmpRxGSQ	Counter64	Read-only	Total number of group specific query (GSQ) requests from the network	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.33	fhOltTstTvStat-sIgmpRxGSSQ	Counter64	Read-only	Total number of GSSQ requests from the network	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.34	fhOltTstTvStat-sIgmpTxGMQ	Counter64	Read-only	IGMP general queries transmitted to a user	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.35	fhOltTstTvStat-sIgmpTxGSQ	Counter64	Read-only	IGMP group specific queries transmitted to a user	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.38	fhOltTstTvStat-sIgmprxV2Re-ports	Counter64	Read-only	V2 membership report received from a user	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.39	fhOltTstTvStat-sIgmprxV3Re-ports	Counter64	Read-only	V3 membership report received from a user	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.40	fhOltTstTvStat-sIgmprxV2-Leaves	Counter64	Read-only	Number of leave messages report received from a user	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.41	fhOltTstTvStat-sIgmprNum-ConGroups	Gauge32	Read-only	The number of the connected groups	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.42	fhOltTstTvStat-sIgmprNumCfgdGroups	Gauge32	Read-only	The number of the connected groups which are configured in the multicast source table	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.43	fhOltTstTvStat-sIgmprNumACfgdGroups	Gauge32	Read-only	The number of the connected groups which aren't configured in the multicast source table	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.51	fhOltTstTvStat-sIgmprOvrldApp	Counter32	Read-only	The number of seconds during which module overload protection has been applied, affecting all IGMP channels which are terminated at the IGMP module	-
1.3.6.1.4.1.5875.-800.3.24.17.2.1.1-.52	fhOltTstTvStat-sIgmprStatsInt-valTm	DateAndTime	Read-only	Network time when the module-wide statistics were last reset	-

10.6.3.2 Querying IGMP Statistics by MVLAN and ONU



Note:

The "snmpget" operation is supported, but the "snmpwalk" operation is not.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.1	fhOltTstTvOnuS-tatsIgmpVlanIdx	Integer32	Read-only	Index, multicast VLAN ID	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.2	fhOltTstTvOnuS-tatsIgmpOnuIdx	Integer32	Read-only	Compound index of an ONU	$\text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256$
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.6	fhOltTstTvOnuS-tatsIgmpTotalMsg	Counter64	Read-only	Total number of messages received from users, including IGMP messages and invalid messages	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.7	fhOltTstTvOnuS-tatsIgmpTotalIgmpMsg	Counter64	Read-only	Total number of IGMP messages, which includes join and leave requests from users (both successful and unsuccessful attempts)	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.8	fhOltTstTvOnuS-tatsIgmpTotalReq	Counter64	Read-only	Total number of join requests from users, which includes successful and unsuccessful attempts	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.9	fhOltTstTvOnuS-tatsIgmpSuccessReq	Counter64	Read-only	Total number of successful join requests from users which includes new joins (which make new connections) and re-joins (which already have connections)	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.10	fhOltTstTvOnuS-tatsIgmpUnsuccessReq	Counter64	Read-only	Total number of unsuccessful new join requests from users. The failures could be due to the following reasons: permission bitmap failure, bitrate failure, lack of resource or invalid group address.	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.11	fhOltTstTvOnuS-tatsIgmpTotalLeaveReq	Counter64	Read-only	Total number of leave requests from users	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.13	fhOltTstTvOnuS-tatsIgmpUnknownMsg	Counter64	Read-only	Number of IGMP messages received from users	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.14	fhOltTstTvOnuS-tatsIgmpNumConnects	Counter64	Read-only	Total number of connections due to successful new IGMP join requests from users	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.15	fhOltTstTvOnuS-tatsIgmpNumDisconnects	Counter64	Read-only	Total number of disconnections to users. They can be due to GSQ or GMQ timer expiry or the triggering of fast channel changes.	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.21	fhOltTstTvOnuS-tatsIgmpPeakConnectsSec	Gauge32	Read-only	The peak number of multicast branch connections performed per second since the statistics were last cleared	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.22	fhOltTstTvOnuS-tatsIgmpPeakDisconnectsSec	Gauge32	Read-only	The peak number of disconnections to users per second	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.23	fhOltTstTvOnuS-tatsIgmpPeakMsgSec	Gauge32	Read-only	The peak number of messages received from users per second	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.24	fhOltTstTvOnuS-tatsIgmpPeakConnectsTm	DateAndTime	Read-only	Network time when the peak number of connections occurred per second	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.25	fhOltTstTvOnuS-tatsIgmpPeakDisconnectsTm	DateAndTime	Read-only	Network time when the peak number of disconnections occurred per second	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.26	fhOltTstTvOnuS-tatsIgmp-PeakMsgTm	DateAndTime	Read-only	Network time when the peak number of messages received from users per second occurred	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.31	fhOltTstTvOnuS-tatsIgmpRxGMQ	Counter64	Read-only	Total number of general message query (GMQ) requests from the network	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.32	fhOltTstTvOnuS-tatsIgmpRxGSQ	Counter64	Read-only	Total number of group specific query (GSQ) requests from the network	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.33	fhOltTstTvOnuS-tatsIgmpRxGSSQ	Counter64	Read-only	Total number of GSSQ requests from the network	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.34	fhOltTstTvOnuS-tatsIgmpTxGMQ	Counter64	Read-only	IGMP general queries transmitted to a user	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.35	fhOltTstTvOnuS-tatsIgmpTxGSQ	Counter64	Read-only	IGMP group specific queries transmitted to a user	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.38	fhOltTstTvOnuS-tatsIgmpRxV2Reports	Counter64	Read-only	V2 membership report received from a user	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.39	fhOltTstTvOnuS-tatsIgmpRxV3Reports	Counter64	Read-only	V3 membership report received from a user	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.40	fhOltTstTvOnuS-tatsIgmpRxV2-Leaves	Counter64	Read-only	Number of leave messages report received from a user	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.41	fhOltTstTvOnuS-tatsIgmpNum-ConGroups	Gauge32	Read-only	The number of the connected groups	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.42	fhOltTstTvOnuS-tatsIgmp-NumCfgrdGroups	Gauge32	Read-only	The number of the connected groups which are configured in the multicast source table	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.43	fhOltTstTvOnuS-tatsIgmpNumACfgrdGroups	Gauge32	Read-only	The number of the connected groups which aren't configured in the multicast source table	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.51	fhOltTstTvOnuS-tatsIgmpOvrlldApp	Counter32	Read-only	The number of seconds during which module overload protection has been applied, affecting all IGMP channels which are terminated at the IGMP module	-
1.3.6.1.4.1.5875.-800.3.24.17.2.2.1-.52	fhOltTstTvOnuS-tatsIgmpStatsIntervalTm	DateAndTime	Read-only	Network time when the module-wide statistics were last reset	-

10.6.4 Resetting Aggregated IGMP Statistics

10.6.4.1 Resetting IGMP Statistics by MVLAN

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.3.1.1-.1	fhOltTstTvReset-StatsIgmpVlanIdx	Integer32	Read-only	Index, multicast VLAN ID	-
1.3.6.1.4.1.5875.-800.3.24.17.3.1.1-.6	fhOltTstTvReset-StatsIgmpAction	Integer32	Read-write	This operation enables the TO to reset the data added by LT (line card) referring to the IGMP protocol to a request from the TU, in order to verify the status of a client's service.	◆ 0: meaningless, for getting information only ◆ 1: reset statistics

10.6.4.2 Resetting IGMP Statistics by ONU

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.3.2.1-.1	fhOltTstTvReset-StatsIgmPByOnuIdx	Integer32	Read-only	Index, multicast VLAN ID	-
1.3.6.1.4.1.5875.-800.3.24.17.3.2.1-.6	fhOltTstTvReset-StatsIgmPByOnuAction	Integer32	Read-write	This operation enables the TO to reset the data added by LT (line card) referring to the IGMP protocol to a request from the TU, in order to verify the status of a client's service.	◆ 0: meaningless, for getting information only ◆ 1: reset statistics

10.6.5 IGMP Snooping Statistics

10.6.5.1 Querying igmpsnoop Statistics by MVLAN



Note:

The "snmpget" operation is supported, but the "snmpwalk" operation is not.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.1	fhOltTstTvStat-sIgmP SnoopVlanIdx	Integer32	Read-only	Index, multicast VLAN ID	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.6	fhOltTstTvStat-sIgmP SnoopQuerierIpAddress	IpAddress	Read-only	IP address of the IGMP querier	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.7	fhOltTstTvStat-sIgmP SnoopQuerierExpires	Integer32	Read-only	Querier inactivity timeout. Time left to restart election of a new querier. It is reset when a query is received from a querier.	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.8	fhOltTstTvStat-sIgmpSnoopQuerierUpTime	Counter32	Read-only	Up time of the current querier	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.9	fhOltTstTvStat-sIgmpSnoopQuerierVersion	Integer32	Read-only	IGMP version used (1, 2 or 3)	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.10	fhOltTstTvStat-sIgmpSnoopGeneralQueryInterval	Integer32	Read-only	Time between queries	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.11	fhOltTstTvStat-sIgmpSnoopQueryResponseInterval	Integer32	Read-only	Maximum response time to a query	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.12	fhOltTstTvStat-sIgmpSnoopRobustCount	Integer32	Read-only	Number of times packets are forwarded	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.21	fhOltTstTvStat-sIgmpSnoopRxGeneralQueries	Counter64	Read-only	General queries received from users	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.22	fhOltTstTvStat-sIgmpSnoopTxGeneralQueries	Counter64	Read-only	General queries transmitted to the network	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.23	fhOltTstTvStat-sIgmpSnoopRxGroupQueries	Counter64	Read-only	Group queries received from users	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.24	fhOltTstTvStat-sIgmpSnoopTxGroupQueries	Counter64	Read-only	Group queries transmitted to the network	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.25	fhOltTstTvStat-sIgmpSnoopRxGroupSourceQueries	Counter64	Read-only	Group-source queries received from users	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.26	fhOltTstTvStat-sIgmpSnoopTxGroupSourceQueries	Counter64	Read-only	Group-source queries transmitted to the network	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.27	fhOltTstTvStat-sIgmpSnoopRxV1Reports	Counter64	Read-only	V1 reports received from users	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.30	fhOltTstTvStat-sIgmP-SnoopTxV2Reports	Counter64	Read-only	V2 reports transmitted to the network	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.31	fhOltTstTvStat-sIgmP-SnoopRxV3Reports	Counter64	Read-only	V3 reports received from users	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.32	fhOltTstTvStat-sIgmP-SnoopTxV3Reports	Counter64	Read-only	V3 reports transmitted to the network	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.33	fhOltTstTvStat-sIgmP-SnoopRxV2Leaves	Counter64	Read-only	V2 leaves received from users	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.34	fhOltTstTvStat-sIgmP-SnoopTxV2Leaves	Counter64	Read-only	V2 leaves transmitted to the network	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.35	fhOltTstTvStat-sIgmP-SnoopR-xUnknown	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.36	fhOltTstTvStat-sIgmP-SnoopBadLengthDropped	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.37	fhOltTstTvStat-sIgmP-SnoopBadIPChecksumDropped	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.38	fhOltTstTvStat-sIgmP-SnoopBadIGMPChecksumDropped	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.39	fhOltTstTvStat-sIgmP-SnoopBadEncodingDropped	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.40	fhOltTstTvStat-sIgmP-SnoopRouterAlertDropped	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.41	fhOltTstTvStat-sIgmP-SnoopZeroSourceIPDropped	Counter64	Read-only	IGMP packets dropped	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.42	fhOltTstTvStat-sIgmpSnoop-WrongVersion-Dropped	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.1.1-.43	fhOltTstTvStat-sIgmpSnoopSend-QueryCfgDrops-Dropped	Counter64	Read-only	IGMP packets dropped	-

10.6.5.2 Querying igmpsnoop Statistics by MVLAN and ONU



Note:

The "snmpget" operation is supported, but the "snmpwalk" operation is not.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.1	fhOltTstTvOnuS-tatsIgmpSnoopV-lanIdx	Integer32	Read-only	Index, multicast VLAN ID	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.2	fhOltTstTvOnuS-tatsIgmpSnoopO-nuIdx	Integer32	Read-only	Compound index of an ONU	$\text{SLOT} \times 33554432 + \text{PON} \times 524288 + \text{ONU} \times 256$
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.6	fhOltTstTvOnuS-tatsIgmpSnoop-QuerierIpAddress	IpAddress	Read-only	IP address of the IGMP querier	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.7	fhOltTstTvOnuS-tatsIgmpSnoop-QuerierExpires	Integer32	Read-only	Querier inactivity timeout. Time left to re-start election of a new querier. It is reset when a query is received from a querier.	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.8	fhOltTstTvOnuS-tatsIgmpSnoop-QuerierUpTime	Counter32	Read-only	Up time of the current querier	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.9	fhOltTstTvOnuS-tatsIgmpSnoop-QuerierVersion	Integer32	Read-only	IGMP version used (1, 2 or 3)	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.10	fhOltTstTvOnuS-tatsIgmpSnoop-GeneralQueryInterval	Integer32	Read-only	Time between queries	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.11	fhOltTstTvOnuS-tatsIgmpSnoop-QueryResponseInterval	Integer32	Read-only	Maximum response time to a query	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.12	fhOltTstTvOnuS-tatsIgmpSnoopRobustCount	Integer32	Read-only	Number of times packets are forwarded	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.21	fhOltTstTvOnuS-tatsIgmpSnoopRx-GeneralQueries	Counter64	Read-only	General queries received from users	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.22	fhOltTstTvOnuS-tatsIgmpSnoopTx-GeneralQueries	Counter64	Read-only	General queries transmitted to the network	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.23	fhOltTstTvOnuS-tatsIgmpSnoopRx-GroupQueries	Counter64	Read-only	Group queries received from users	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.24	fhOltTstTvOnuS-tatsIgmpSnoopTx-GroupQueries	Counter64	Read-only	Group queries transmitted to the network	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.25	fhOltTstTvOnuS-tatsIgmpSnoopRx-GroupSourceQueries	Counter64	Read-only	Group-source queries received from users	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.26	fhOltTstTvOnuS-tatsIgmpSnoopTx-GroupSourceQueries	Counter64	Read-only	Group-source queries transmitted to the network	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.27	fhOltTstTvOnuS-tatsIgmpSnoopRxV1Reports	Counter64	Read-only	V1 reports received from users	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.30	fhOltTstTvOnuS-tatsIgmpSnoopTxV2Reports	Counter64	Read-only	V2 reports transmitted to the network	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.31	fhOltTstTvOnuS-tatsIgmpSnoopRxV3Reports	Counter64	Read-only	V3 reports received from users	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.32	fhOltTstTvOnuS-tatsIgmpSnoopTxV3Reports	Counter64	Read-only	V3 reports transmitted to the network	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.33	fhOltTstTvOnuS-tatsIgmpSnoopRxV2Leaves	Counter64	Read-only	V2 leaves received from users	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.34	fhOltTstTvOnuS-tatsIgmpSnoopTxV2Leaves	Counter64	Read-only	V2 leaves transmitted to the network	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.35	fhOltTstTvOnuS-tatsIgmpSnoopRxUnknown	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.36	fhOltTstTvOnuS-tatsIgmpSnoopBadLengthDropped	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.37	fhOltTstTvOnuS-tatsIgmpSnoopBadIPChecksumDropped	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.38	fhOltTstTvOnuS-tatsIgmpSnoopBadIGMPChecksumDropped	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.39	fhOltTstTvOnuS-tatsIgmpSnoopBadEncodingDropped	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.40	fhOltTstTvOnuS-tatsIgmpSnoopRouterAlertDropped	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.41	fhOltTstTvOnuS-tatsIgmpSnoopZeroSourceIPDropped	Counter64	Read-only	IGMP packets dropped	-

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.42	fhOltTstTvOnuS-tatsIgmPsnOop-WrongVersion-Dropped	Counter64	Read-only	IGMP packets dropped	-
1.3.6.1.4.1.5875.-800.3.24.17.4.2.1-.43	fhOltTstTvOnuS-tatsIgmPsnOop-SendQueryCfg-DropsDropped	Counter64	Read-only	IGMP packets dropped	-

10.6.6 Checking IGMP Configuration

10.6.6.1 Querying Multicast Configuration by MVLAN



Note:

The "snmpget" operation is supported, but the "snmpwalk" operation is not.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.24.17.5.1.1-.1	fhOltTstTvIgmPCfgVlanIdx	Integer32	Read-only	Index, multicast VLAN ID	-
1.3.6.1.4.1.5875.-800.3.24.17.5.1.1-.6	fhOltTstTvIgmPCfgText	DisplayString	Read-only	OLT IGMP / multicast configuration in plain text	ASCII text

11 NTP Function

This chapter introduces OIDs and related information of the nodes under the NTP function module.

11.1 Configuring Time Calibration Method

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.-800.3.64.1.1	timeMethod	Int	Read-write	Time calibration method	2: SNMP 3: NTP
1.3.6.1.4.1.5875.-800.3.64.1.2	timeZoneHour	Int	Read-write	System time zone in hour (Time zone hour)	1: GMT-12 International Date Line West 2: GMT-11 Midway Islands 3: GMT-10 Hawaii 4: GMT-9 Alaska 5: GMT-8 Pacific Time 6: GMT-7 Mountain Time 7: GMT-6 Central America 8: GMT-5 Eastern Time (USA and Canada) 9: GMT-4 Atlantic Time (Canada) 10: GMT-3 Greenland 11: GMT-2 Mid-Atlantic 12: GMT-1 Azores 13: GMT+1 Amsterdam, Berlin 14: GMT+2 Cairo 15: GMT+3 Moscow 16: GMT+4 Baku 17: GMT+5 Islamabad 18: GMT+6 Almaty 19: GMT+7 Bangkok Hanoi 20: GMT+8 Beijing, Chongqing, Hong Kong 21: GMT+9 Osaka, Tokyo 22: GMT+10 Guam 23: GMT+11 Magadan 24: GMT+12 Fiji 25: GMT+05:30 Madras, Kolkata, Mumbai, New Delhi 26: GMT+03:30 Tehran
1.3.6.1.4.1.5875.-800.3.64.1.3	timeZoneMin	Int	Read-write	System time zone in minute (Time zone min)	Range: 0-59

11.2 Basic Configurations of NTP Client

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.64-.2.1	autoSynchronizeServiceSwitch	Int	Read-write	Automatic synchronization with the NTP server (Auto synchronize)	0: disable 1: enable
1.3.6.1.4.1.5875.800.3.64-.2.2	broadcastSynchronize	Int	Read-write	NTP synchronization by broadcast (Broadcast synchronize)	0: disable 1: enable

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.64-.2.3	peerNTPServer-Address	String	Read-write	Address of the NTP server for active synchronization (Peer NTP Server address)	Maximum length of an address: 64 bytes. Up to eight addresses can be configured, which are separated by “.”. Note: When configuring the address of the NTP server for active synchronization, make sure “Auto synchronize” is enabled.
1.3.6.1.4.1.5875.800.3.64-.2.4	broadcastNTP-ServerAddr	String	Read-write	Address of the NTP server for passive synchronization (Broadcast NTP Server addr)	Maximum length of an address: 64 bytes. Up to 16 addresses can be configured, which are separated by “.”. Note: When configuring the address of the NTP server for passive synchronization, make sure “Broadcast synchronize” is enabled.

12 System Maintenance

This chapter introduces OIDs and related information of the nodes under the system maintenance module.

12.1 Upgrading Cards in a Batch Manner

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.80- .1.1	boardUpdServerIp	String	Read-write	IP address of the server	-
1.3.6.1.4.1.5875.800.3.80- .1.2	boardUpdFtpUser	String	Read-write	FTP username	16 bytes
1.3.6.1.4.1.5875.800.3.80- .1.3	boardUpdFtpPassword	String	Read-write	FTP password	16 bytes
1.3.6.1.4.1.5875.800.3.80- .1.4	boardUpdFileName	String	Read-write	Name of the upgrade file	20 bytes
1.3.6.1.4.1.5875.800.3.80- .1.5	boardUpdSlotList	String	Read-write	Card list	Character string, with slot numbers separated by “:”. For example, 1:3:5 denotes cards 1, 3 and 5.

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.3.80-.1.6	boardUpdAction	Int	Read-write	Upgrade action	The value 1 is delivered to trigger the upgrade. The value returned requires no concern.
1.3.6.1.4.1.5875.800.3.80-.1.7	boardUpdStatus-List	String	Read-only	Upgrade status list	Character string, with the status values separated by “:”. The upgrade status list is one-to-one mapped to the card list. For example, if cards 1, 3 and 5 are in statuses 1, 2 and 3 respectively, the value here is “1:2:3”.

12.2 Upgrading an ONU Automatically

Automatic Upgrade Configuration Table

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.101.35.1.1	onuAutoUpdCfgSlotIndex	Int	Not-accessible	Slot index	-
1.3.6.1.4.1.5875.800.-3.80.3.1.1.1	onuAutoUpdEnable	Int	Read-write	Enabling upgrade	1: enable 0: disable
1.3.6.1.4.1.5875.800.-3.80.3.1.1.2	onuAutoUpdServerIp	String	Read-write	IP address of the server	-
1.3.6.1.4.1.5875.800.-3.80.3.1.1.3	onuAutoUpdFtpUser	String	Read-write	FTP username	16 bytes
1.3.6.1.4.1.5875.800.-3.80.3.1.1.4	onuAutoUpdFtpPassword	String	Read-write	FTP password	16 bytes

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.80.3.1.1.5	onuAutoUpd-StartTime	String	Read-write	Start time of daily upgrade	In the format hh:mm:ss. The value 00:00:00 means null, that is, time is not considered.
1.3.6.1.4.1.5875.800.-3.80.3.1.1.6	onuAutoUpd-EndTime	String	Read-write	End time of daily upgrade	In the format hh:mm:ss. The value 00:00:00 means null, that is, time is not considered.
1.3.6.1.4.1.5875.800.-3.80.3.1.1.7	onuAutoUpd-Days	Int	Read-write	Upgrade duration (days)	Range: 1-365, or 0xffff (no concern to the upgrade duration)
1.3.6.1.4.1.5875.800.-3.80.3.1.1.8	onuAutoUpd-ResetMode	Int	Read-write	Restart mode	0: immediately 1: not restart 2: timing restart
1.3.6.1.4.1.5875.800.-3.80.3.1.1.9	onuAutoUpd-ResetTime	String	Read-write	Restart time	In the format hh:mm:ss. The value 00:00:00 means null, that is, time is not considered.
1.3.6.1.4.1.5875.800.-3.80.3.1.1.10	onuAutoUpd-FileList	String	Read-write	Upgrade file list	Character string, with each file named as "ONU type/file name", separated by ":", such as 765/GAPP_HG260.bin:866/GAPP_04D.bin.
1.3.6.1.4.1.5875.800.-3.80.3.1.1.20	onuAutoUpd-Action	Int	Read-write	Operation	7: modify

Automatic Upgrade Status Table

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.800.-3.101.16.1.1	oltPonAuthPonIndex	Int	Not-accessible	PON port index	PON port index
1.3.6.1.4.1.5875.800.-3.80.3.2.1.1	onuAutoUpd-StatusList	String	Read-only	Upgrade status list	Character string. Each ONU is represented by "ONU No./status"

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
					value”, separated by “:”, such as 128/1:127/1”. Status value: 1: waiting for upgrade 2: being upgraded 3: upgraded 4: upgrade failed (ONU going offline) 5: ONU unauthorized 6: mismatched file type 7: communication failure 8: failed in starting the new version 9: current version same with the target version, no need to upgrade 100: ONU CPU software being upgraded 101: ONU CPU software upgraded 102: upgrade of the ONU CPU software failed 103: ONU boot software being upgraded 104: ONU boot software upgraded 105: upgrade of ONU boot software failed 106: ONU app software being upgraded 107: ONU app software upgraded 108: upgrade of the ONU app software failed 109: ONU pers software being upgraded 110: upgrade of ONU pers software failed 111: ONU pers software upgraded 112: ONU Web software being upgraded 113: ONU Web software upgraded 114: upgrade of ONU Web software failed

12.3 Importing and Exporting Configuration Data

OID	Node Name	Data Type	Access Authority	Meaning	Specifications
1.3.6.1.4.1.5875.8-00.3.9.4.7	sysFtpServerIp	IP ADDRESS	Read-write	IP address of the FTP server	-
1.3.6.1.4.1.5875.8-00.3.9.4.8	sysFtpServerName	OCTET STRING	Read-write	FTP username	Maximum length: 16 bytes
1.3.6.1.4.1.5875.8-00.3.9.4.9	sysFtpServerPwd	OCTET STRING	Read-write	FTP password	Maximum length: 16 bytes
1.3.6.1.4.1.5875.8-00.3.9.4.10	sysFtpFilename	OCTET STRING	Read-write	File name	Maximum length: 20 bytes
1.3.6.1.4.1.5875.8-00.3.9.4.12	sysFtpAction	Int	Read-write	FTP operation	0: Export 1: Import 2: Export syslog

13 Appendix

This appendix provides information about port types, card type codes, ONU types, and equipment logical descriptions.

13.1 Port Types

Port Type Code	Port Type
734	GPON PON PORT
727	EPON PON PORT
634	SFP+
733	SFP
731	XFP
732	ETH
632	External Clock Port
633	Inner Clock Port
712	GPON ONU PON PORT
264	LAN
600	POTS
601	CATV
606	USB
761	COM
626	SSID PORT
814	XGPON
813	10G GPON PORT
263	EPON ONU PON
808	1GPON PON PORT
807	10GPON PON PORT
809	10GPON LAN PORT
631	TEST PORT
630	OTDR PORT
802	10GEPON PON PORT
636	ROF PORT
637	IFP PORT
817	C_AP PORT
815	40GPON OLT WPON
816	40GPON ONU WPON

Port Type Code	Port Type
56	VDSL PORT
823	COMBO PON port
657	CSFP port
656	XGS-COMBO PON port
645	XGS PON port
649	CFP4 (100G port on the uplink card KU1A)
658	QSFP28 (100G port of the uplink card KU1B, Quad Small Form-factor Pluggable 28)

13.2 Card Type Codes

This section introduces the card types supported by the AN6000-17, AN6000-7, AN6000-15, AN6000-2 and AN6001-G16.

13.2.1 Card Types Supported by the AN6000-17

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type Code
1	Backplane	-	-	1	Backplane of the AN6000-17	-
2	Core switch card (type A)	HSCA	9, 10	1, 2	As a control card for the equipment, the core switch card controls and manages the other cards of the equipment, aggregating data from them and enabling data switching between them. Besides that, it helps execute the management and control commands on the equipment.	389
3	8-port 10G PON control card	EX8A	1-8, 11-19	-	Provides eight 10G EPON ports.	2007

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type Code
4	8-port 10G PON control card	GX8A	1-8, 11-19	-	Provides eight XG-PON ports.	2008
5	8-port 10G PON control card	GM8A	1-8, 11-19	-	Provides eight COMBO PON ports.	2009
6	4-port 100G Ethernet uplink card	KU1A	18, 19	0-2	Provides one 100G uplink port and four 10G ports.	433
7	8-port 10G Ethernet uplink card	HU8A	18, 19	0-2	Provides eight 10G ports.	431
8	Common interface card	CIOA	26	-	Provides the FE port for connection to a network management system, RS-485 interface for connection to an external environment monitoring unit, alarm interface for outputting alarm signals to cabinet-top indicators, and dry contact interface.	639
9	Power card	PIBA	24, 25	2	Provides a 48 V power input; filters and limits the current of, detects undervoltage of, and checks availability of the input power; reports card alarms; provides alarm indicators; and reports card status (presence or absence). Note: Only applicable to the AN6000-17.	640

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type Code
10	Fan control card	FAN	23	1	Controls the fan rotation speed according to the system operation status, obtains the fan running status, and reports the fan status to the core switch card of the system.	741
11	Environment monitoring card	HCU	801	1	Helps monitor the power supply, batteries, temperature, humidity, smoke, fire, lightning, infrared detector, and door access statuses collectively for the OLT, and generates alarms via the network management system. Under normal conditions, the OLT feeds the sensors. During power failure, the built-in backup power source feeds the OLT and the sensors.	624
12	24-port 10GE P2P service card (type A)	PXNA	1-8, 11-19	-	Provides 24 10GE / GE ports.	2024
13	48-port GE P2P service card (type A)	PTGA	1-8, 11-19	-	Provides 48 GE / FE ports.	2025
14	16-port XG-PON COMBO service card (type A)	GMOA	1-8, 11-19	-	Provides 16 XG-PON COMBO ports.	2022

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type Code
15	16-port XGS-PON COMBO service card (type A)	GNOA	1-8, 11-19	-	Provides 16 XGS-PON COMBO ports.	2023
16	16-port 10G EPON service card (type A)	EXOA	1-8, 11-19	-	Provides 16 10G EPON ports.	2026
17	16-port XGS-PON service card (type A)	GSOA	1-8, 11-19	-	Provides 16 XGS-PON ports.	2021
18	16-port XG-PON service card (type A)	GXOA	1-8, 11-19	-	Provides 16 XG-PON ports.	586
19	4-port 100G Ethernet uplink card	KU1B	18, 19	0-2	Provides one 100G uplink port and four 10G ports.	439
20	16-port XG-PON service card (type A)	GPOA	1-8, 11-19	-	Provides 16 XG-PON ports.	2014
21	2-port 50G PON service card	GVHA	1-12, 18, 19	-	Provides two 50G PON ports.	2029
22	PON optical link detection and diagnosis card	ODMA	1-8, 11-19	-	Provides one interface.	571
23	TDM card	CE1B	1-12, 18, 19	-	Provides 32 ports.	605
24	TDM card	C155A	1-12, 18, 19	-	Provides two ports.	602
25	8-port GPON / XG-PON COMBO card (type B)	GM8B	1-8, 11-19	-	Provides eight GPON / XG-PON COMBO ports.	3008
26	16-port Agile-PON card (type A)	GFOA	1-8, 11-19	-	Provides 16 Agile-PON ports.	3009

13.2.2 Card Types Supported by the AN6000-7

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type code
1	Backplane	-	-	1	Backplane of the AN6000-7	-
2	Core switch card (type A)	HSCA	8, 9	1-2	As a control card for the equipment, the core switch card controls and manages the other cards of the equipment, aggregating data from them and enabling data switch between them. Besides that, it helps execute the management and control commands on the equipment.	389
3	8-port 10G PON control card	EX8A	1-7	-	Provides eight 10G EPON ports.	2007
4	8-port 10G PON control card	GX8A	1-7	-	Provides eight XG-PON ports.	2008
5	8-port 10G PON control card	GM8A	1-7	-	Provides eight COMBO PON ports.	2009
6	4-port 100G Ethernet uplink card	KU1A	6-7	0-2	Provides one 100G uplink port and four 10G ports.	433
7	8-port 10G Ethernet uplink card	HU8A	6-7	0-2	Provides eight 10G ports.	431
8	Common interface card	CIOA	26	-	Provides the FE port for connection to a network management system, RS-485 interface for connection to an external environment monitoring unit, alarm interface for outputting alarm signals to cabinet-top indicators, and dry contact interface.	639

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type code
9	Power card	PIBA	24, 25	2	Provides a 48 V power input; filters and limits the current of, detects undervoltage of, and checks availability of the input power; reports card alarms; provides alarm indicators; and reports card status (presence or absence).	640
10	Fan control card	FAN	23	1	Controls fan rotation speed according to system operation status, obtains fan running status, and reports the status to the core switch card of the system.	741
11	Environment monitoring card	HCU	801	1	Helps monitor the power supply, batteries, temperature, humidity, smoke, fire, lightning, infrared detector, and door access statuses collectively for the OLT, and generates alarms via the network management system. Under normal conditions, the OLT provides power for the sensors. During power failure, the built-in backup power source feeds the OLT and sensors.	624
12	24-port 10GE P2P service card (type A)	PXNA	1-7	-	Provides 24 10GE / GE ports.	2024
13	48-port GE P2P service card (type A)	PGTA	1-7	-	Provides 48 GE / FE ports.	2025

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type code
14	16-port XG-PON COMBO service card (type A)	GMOA	1-7	-	Provides 16 XG-PON COMBO ports.	2022
15	16-port XGS-PON COMBO service card (type A)	GNOA	1-7	-	Provides 16 XGS-PON COMBO ports.	2023
16	16-port 10G EPON service card (type A)	EXOA	1-7	-	Provides 16 10G EPON ports.	2026
17	16-port XGS-PON service card (type A)	GSOA	1-7	-	Provides 16 XGS-PON ports.	2021
18	16-port XG-PON service card (type A)	GXOA	1-7	-	Provides 16 XG-PON ports.	586
19	4-port 100G Ethernet uplink card	KU1B	6, 7	0-2	Provides one 100G uplink port and four 10G ports.	439
20	16-port XG-PON service card (type A)	GPOA	1-7	-	Provides 16 XG-PON ports.	2014
21	PON optical link detection and diagnosis card	ODMA	1-7	-	Provides one interface.	571
22	TDM card	CE1B	1-7	-	Provides 32 ports.	605
23	TDM card	C155A	1-7	-	Provides two ports.	602
24	8-port GPON / XG-PON COMBO card (type B)	GM8B	1-7	-	Provides eight GPON / XG-PON COMBO ports.	3008
25	16-port Agile-PON card (type A)	GFOA	1-7	-	Provides 16 Agile-PON ports.	3009

13.2.3 Card Types for the AN6000-15

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type code
1	Backplane	-	-	-	Backplane of the AN6000-15	-
2	Core switch card (type A)	HSCA	8, 9	1-2	As a control card for the equipment, the core switch card controls and manages the other cards of the equipment, aggregating data from them and enabling data switch between them. Besides that, it helps execute the management and control commands on the equipment.	389
3	8-port 10G PON control card	EX8A	1-7, 10-17	-	Provides eight 10G EPON ports.	2007
4	8-port 10G PON control card	GX8A	1-7, 10-17	-	Provides eight XG-PON ports.	2008
5	8-port 10G PON control card	GM8A	1-7, 10-17	-	Provides eight COMBO PON ports.	2009
6	4-port 100G Ethernet uplink card	KU1A	16, 17	0-2	Provides one 100G uplink port and four 10G ports.	433
7	8-port 10G Ethernet uplink card	HU8A	16, 17	0-2	Provides eight 10G ports.	431

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type code
8	Common interface card	CIOA	26	-	Provides the FE port for connection to a network management system, RS-485 interface for connection to an external environment monitoring unit, alarm interface for outputting alarm signals to cabinet-top indicators, and dry contact interface.	639
9	Power card	PIBA	24, 25	2	Provides a 48 V power input; filters and limits the current of, detects undervoltage of, and checks availability of the input power; reports card alarms; provides alarm indicators; and reports card status (presence or absence).	640
10	Fan control card	FAN	23	1	Controls fan rotation speed according to system operation status, obtains fan running status, and reports the status to the core switch card of the system.	741

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type code
11	Environment monitoring card	HCU	801	1	Helps monitor the power supply, batteries, temperature, humidity, smoke, fire, lightning, infrared detector, and door access statuses collectively for the OLT, and generates alarms via the network management system. Under normal conditions, the OLT provides power for the sensors. During power failure, the built-in backup power source feeds the OLT and sensors.	624
12	24-port 10GE P2P service card (type A)	PXNA	1-7, 10-17	-	Provides 24 10GE / GE ports.	2024
13	48-port GE P2P service card (type A)	PGTA	1-7, 10-17	-	Provides 48 GE / FE ports.	2025
14	16-port XG-PON COMBO service card (type A)	GMOA	1-7, 10-17	-	Provides 16 XG-PON COMBO ports.	2022
15	16-port XGS-PON COMBO service card (type A)	GNOA	1-7, 10-17	-	Provides 16 XGS-PON COMBO ports.	2023
16	16-port 10G EPON service card (type A)	EXOA	1-7, 10-17	-	Provides 16 10G EPON ports.	2026
17	16-port XGS-PON service card (type A)	GSOA	1-7, 10-17	-	Provides 16 XGS-PON ports.	2021

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type code
18	16-port XG-PON service card (type A)	GXOA	1-7, 10-17	-	Provides 16 XG-PON ports.	586
19	4-port 100G Ethernet uplink card	KU1B	16, 17	0-2	Provides one 100G uplink port and four 10G ports.	439
20	16-port XG-PON service card (type A)	GPOA	1-7, 10-17	-	Provides 16 XG-PON ports.	2014
21	PON optical link detection and diagnosis card	ODMA	1-7, 10-17	-	Provides one interface.	571
22	TDM card	CE1B	1-7, 10-17	-	Provides 32 ports.	605
23	TDM card	C155A	1-7, 10-17	-	Provides two ports.	602
24	8-port GPON / XG-PON COMBO card (type B)	GM8B	1-7, 10-17	-	Provides eight GPON / XG-PON COMBO ports.	3008
25	16-port Agile-PON card (type A)	GFOA	1-7, 10-17	-	Provides 16 Agile-PON ports.	3009

13.2.4 Card Types Supported by the AN6000-2

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type Code
1	Backplane	-	-	1	Backplane of the AN6000-2	-
2	Switch uplink card	HSUD	3, 4	1, 2	As a control card for the equipment, the switch uplink card controls and manages the other cards of the equipment, aggregating data from them and enabling data switching between them. Besides that, it helps execute the management and control commands on the equipment.	3006
3	Switch uplink card	HSUK	3, 4	1, 2	As a control card for the equipment, the switch uplink card controls and manages the other cards of the equipment, aggregating data from them and enabling data switching between them. Besides that, it helps execute the management and control commands on the equipment.	3007
4	8-port 10G PON control card	EX8A	1, 2	-	Provides eight 10G EPON ports.	2007
5	8-port 10G PON control card	GX8A	1, 2	-	Provides eight XG-PON ports.	2008

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type Code
6	8-port 10G PON control card	GM8A	1-2	-	Provides eight COMBO PON ports.	2009
7	Power card	PIDD	5, 6	2	Filters and limits the current of, detects undervoltage of, and checks availability of input power; reports card alarms; provides alarm indicators; and reports card status (presence or absence). Note: Only applicable to the AN6000-2.	660
8	Power card	PIDH	5	2	Filters and limits the current of, detects undervoltage of, and checks availability of input power; reports card alarms; provides alarm indicators; and reports card status (presence or absence). Note: Only applicable to the AN6000-2.	661
9	Fan control card	FAN	7	1	Controls the fan rotation speed according to the system operation status, obtains the fan running status, and reports the fan status to the core switch card of the system.	741

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type Code
10	Environment monitoring card	HCU	801	1	Helps monitor the power supply, batteries, temperature, humidity, smoke, fire, lightning, infrared detector, and door access statuses collectively for the OLT, and generates alarms via the network management system. Under normal conditions, the OLT feeds the sensors. During power failure, the built-in backup power source feeds the OLT and the sensors.	624
11	16-port XG-PON COMBO service card (type A)	GMOA	1, 2	-	Provides 16 XG-PON COMBO ports.	2022
12	16-port XGS-PON COMBO service card (type A)	GNOA	1, 2	-	Provides 16 XGS-PON COMBO ports.	2023
13	16-port 10G EPON service card (type A)	EXOA	1, 2	-	Provides 16 10G EPON ports.	2026
14	16-port XG-PON service card (type A)	GPOA	1, 2	-	Provides 16 XG-PON ports.	2014

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type Code
15	8-port GPON / XG-PON COMBO card (type B)	GM8B	1, 2	-	Provides eight GPON / XG-PON COMBO ports.	3008
16	16-port Agile-PON card (type A)	GFOA	1, 2	-	Provides 16 Agile-PON ports.	3009

13.2.5 Card Types Supported by the AN6001-G16

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type Code
0	Backplane	-	-	1	Backplane of the AN6001-G16	-
1	Virtual core switch card	HSCP	9	1	Serves as the control card for the equipment.	3002
2	Virtual 16-port GPON interface card	GPOP	1	1	Provides 16 GPON ports.	2013
3	Virtual 2 × 10G + 4 × 1G uplink card	HU2P	19	1	Provides two 10G uplink ports and four 1G uplink ports.	435
4	DC power card	PWRD	24, 25	2	DC power card	652
5	AC power card	PWRA	24, 25	2	Provides a 48 V power input; filters and limits the current of, detects undervoltage of, and checks availability of the input power; reports card alarms; provides alarm indicators; and reports card status (presence or absence).	651

No.	Description	Abbreviation	Slot No.	Quantity	Function	Type Code
6	Fan control card	FAN	23	1	Controls the fan rotation speed according to the system operation status, obtains the fan running status, and reports the fan status to the core switch card of the system.	741
7	Environment monitoring card	HCU	801	1	Helps monitor the power supply, batteries, temperature, humidity, smoke, fire, lightning, infrared detector, and door access statuses collectively for the OLT, and generates alarms via the network management system. Under normal conditions, the OLT feeds the sensors. During power failure, the built-in backup power source feeds the OLT and the sensors.	624

13.3 ONU Types

GPON ONUs

ONU Category	ONU Type Code	Authorized ONU Type
Old GPON ONU	348	AN5506-04-A
	340	AN5506-04-B
	752	AN5506-07-A2
	345	AN5506-07-B

ONU Category	ONU Type Code	Authorized ONU Type
	341	AN5506-06-E
SFU	785	AN5506-01-A1
	884	AN5506-04-GA
	786	AN5506-01-B1
	767	AN5506-04-A1
	768	AN5506-04-B2
	872	AN5506-02-B
	750	AN5506-04-C1
	765	AN5506-04-F1
	766	AN5506-04-G1
	866	AN5506-04-D
	874	AN5506-06-G
	876	AN5506-02-A
	878	AN5121-4GP
	879	AN5121-4G
	885	AN5506-04-CA
	895	AN5506-02-D
	896	AN5506-02-F
	892	AN5506-04-CC
	905	AN5506-04-CC-W
	919	AN5506-04-FA
	921	AN5506-04-FAT
	857	Universal GPON SFU
	931	HG6243C
	932	HG6245D
	933	HG6021C
	934	HG6543C
	935	HG6145E
	936	HG6245P
	937	HG6244C
	938	HG6249A
MDU	754	AN5506-07-A1
	755	AN5506-07-B1
	756	AN5506-09-A1
	757	AN5506-09-B1
	758	AN5506-10-A1
	759	AN5506-10-B1
	795	AN5506-09-A1K
	851	AN5506-07-A1K

ONU Category	ONU Type Code	Authorized ONU Type
	852	AN5506-10-A1K
	860	AN5506-06-EG
	877	AN5121-8GR
	762	HG260
	792	HG266
	853	HG261
	899	HG268
	941	HG-A8-C
	942	HG-E8-C
Industrial ONU	788	AN5506-04-P1
	865	AN5506-02-AKW
Independent NE (ONU)	32	AN5006-20
	56	AN5006-30
	27	AN5006-15
	69	AN5220
	886	AN5172-8GR
GPON FTDP for Indonesia	875	AN5506-01-VP
CBU	882	AN5161-CGF
DPU	900	AN5171F
	901	AN5172F
	906	AN5172-8GR-FTTH

XG-PON ONUs

ONU Category	ONU Type Code	Authorized ONU Type
XG-PON SFU	864	AN5600-01
	903	AN5640
	912	AN5642
	911	AN5646
	927	AN5646T
	928	AN5656T
	929	AN5646Q
XG-PON MDU	863	AN5231-16N
XG-PON MDU	69	AN5220
	32	AN5006-20
XG-PON MDU	56	AN5006-30
	898	AN5221-8N
	907	AN5231-24N
	908	AN5221-16N

ONU Category	ONU Type Code	Authorized ONU Type
	909	AN5221-24N
	910	AN5231-8N
	915	AN5221-8NP
	916	AN5221-16NP
	917	AN5221-24NP
	918	AN5261-CNFP-A
XGS-PON ONT	939	HG5245ST
	940	HG5245SH

EPON & 10GEPON ONUs

ONU Category	ONU Type Code	Authorized ONU Type
FTTH CTC	37	AN5006-04P2
	60	AN5161-CEF
	94	AN5006-04P3
	51	AN5006-04P4
	93	AN5006-04P4-F
	97	AN5006-04P4-FX
	88	Universal EPON SFU
	15	OTHER1
	16	OTHER2
	17	OTHER3
	18	OTHER4
	100	OTHER6
	101	OTHER7
	21	AN5006-02-A
	19	AN5006-03C
	61	AN5121-4E
	62	AN5121-4EP
	20	AN5006-04C
	22	AN5006-05C
	36	AN5006-01-A
	39	AN5006-01-B
	44	AN5200-04A
	46	AN5006-03-AK
	90	AN5006-04F1
	57	AN5006-04-E
	87	AN5006-04-CC
	64	AN5006-03B

ONU Category	ONU Type Code	Authorized ONU Type
	95	AN5006-04-D
	91	AN5006-04-CC-W
FTTB (non-CTC)	7	AN5006-06A
	8	AN5006-06B
	10	AN5006-06D
	30	AN5006-06A-A
	11	AN5006-07A
	12	AN5006-07B
	23	AN5006-09A
	24	AN5006-09B
	47	AN5006-09-AK
	25	AN5006-10
	31	AN5006-10B
	48	AN5006-07-AK
	49	AN5006-10-AK
	63	AN5121-8ER
FTTB CTC	96	AN5200-07-AK
	52	AN5200-07A
	53	AN5200-07B
	55	AN5200-09A
	54	AN5200-09B
	42	AN5200-10A
	43	AN5200-10B
	9	AN5006-06C
	28	AN5006-07C
	92	AN5006-09C
Home gateway	33	HG220
	45	HG226
MDU	27	AN5006-15
	29	AN5006-16
	32	AN5006-20
	50	AN5006-12
	56	AN5006-30
	69	AN5220
CBU	60	AN5161-CEF
SFU	65	AN5340
	67	AN5346
	68	AN5342

13.4 Logical Uplink Ports of the Equipment

System Name	Applicable Slots for Uplink Card
AN6000-17	The core switch cards in slots 9 and 10 provide four 10G uplink ports each. The AN6000-17 subrack provides 24 uplink ports, numbered 1 to 24. Ports 1 to 4 are on the core switch card in slot 9 and displayed as 9:1 to 9:4. Ports 21 to 24 are on the core switch card in slot 10 and displayed as 10:1 to 10:4. Ports 5 to 12 are displayed as 18:1 to 18:8, and ports 13 to 20 are displayed as 19:1 to 19:8. If slots 18 and 19 do not house uplink cards, uplink ports 5 to 20 are not displayed, so are the other uplink ports. Logical uplink ports 25 to 50 are reserved. Codes of ports on authorized Ethernet cards are calculated by the expression “1000 + slot No. × 100 + port No” and delivered to the equipment.
AN6000-7	The core switch cards in slots 8 and 9 provide four 10G uplink ports each. The AN6000-7 subrack provides 24 uplink ports, numbered 1 to 24. Ports 1 to 4 are on the core switch card in slot 8 and displayed as 8:1 to 8:4. Ports 21 to 24 are on the core switch card in slot 9 and displayed as 9:1 to 9:4. Ports 5 to 12 are displayed as 6:1 to 6:8, and ports 13 to 20 are displayed as 7:1 to 7:8. If slots 6 and 7 do not house uplink cards, uplink ports 5 to 20 are not displayed, so are the other uplink ports. Logical uplink ports 25 to 50 are reserved. Codes of ports on authorized Ethernet cards are calculated by the expression “1000 + slot No. × 100 + port No” and delivered to the equipment.
AN6000-15	The core switch cards in slots 8 and 9 provide four 10G uplink ports each. The AN6000-15 subrack provides 24 uplink ports, numbered 1 to 24. Ports 1 to 4 are on the core switch card in slot 8 and displayed as 8:1 to 8:4. Ports 21 to 24 are on the core switch card in slot 9 and displayed as 9:1 to 9:4. Ports 5 to 12 are displayed as 16:1 to 16:8, and ports 13 to 20 are displayed as 17:1 to 17:8. If slots 16 and 17 do not house uplink cards, uplink ports 5 to 20 are not displayed, so are the other uplink ports. Logical uplink ports 25 to 50 are reserved. Codes of ports on authorized Ethernet cards are calculated by the expression “1000 + slot No. × 100 + port No” and delivered to the equipment.

13.5 Logical Trunk Numbers of the Equipment

No.	Data Type	Logical Trunk No. of the Equipment
1	Trunk group	51-TRUNK Group 1 52-TRUNK Group 2 66-TRUNK Group 16
2	UPBAK group	71-UPBAK Group 1 72-UPBAK Group 2 73-UPBAK Group 3 74-UPBAK Group 4 75-UPBAK Group 5 76-UPBAK Group 6